



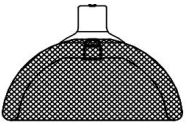




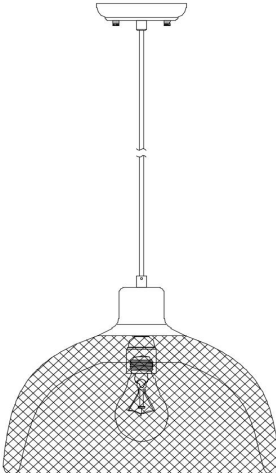





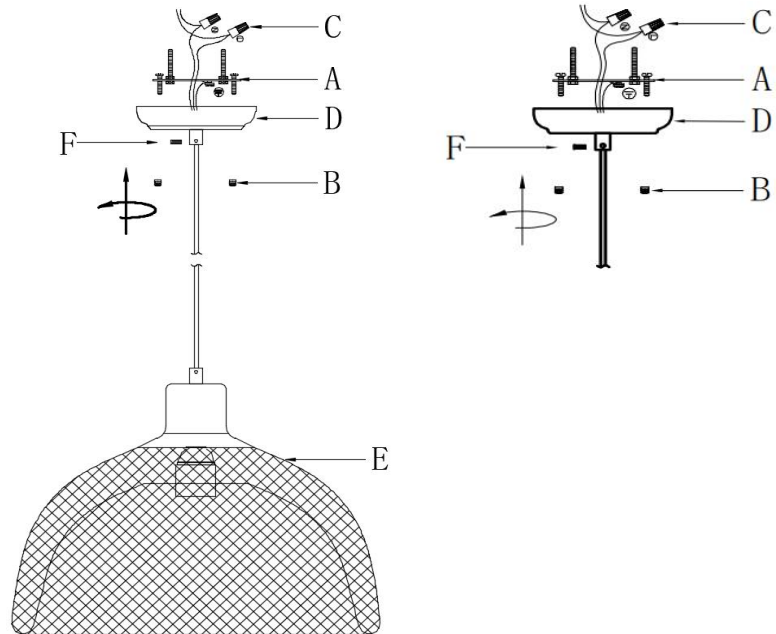
# Assembly Instructions

## Parts and Tools

<b>A</b>	Mounting Bracket		X 1	<b>Before beginning</b> 1) Check and open the numbered packaged bags. 2) Read this Assembly Instructions from beginning to end before starting to assemble. 3) Take an inventory of the required parts to ensure all are available. 4) Assemble the separated parts according to the illustration with the providing tools, chandelier comes pre-assembled, only hanging and wiring assembly needed. 5) To prevent accidental choking hazards, keep all packing materials away from small children. 6) Only tighten hardware until ALL hardware are fully engaged on their locations. Overtighten bolts will damage the bolt threads. 7) Use only factory provided hardware to assemble. Unapproved hardware can damage product or jeopardize the structural integrity of the product. 8) The use of power tool to assemble is not recommended due to high risk of over-torque, which can damage the product.  <b>WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LINCENSED ELECTRICIAN.</b>  <b>WARNING***SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.</b>  <b>*Please make sure power is shut off!*</b>
<b>B</b>	Screw		X 2	
<b>C</b>	Wire Connector		X 3	
<b>D</b>	Canopy		X 1	
<b>E</b>	Lamp Body		X 1	
<b>Z1</b>	Nut for A (Spare Parts)		X 1	
<b>Z2</b>	Nut for A (Spare Parts)		X 2	
<b>Z3</b>	Non Slip Washer for A (Spare Parts)		X 1	
<b>Z4</b>	Non Slip Washer for A (Spare Parts)		X 2	
				
<div>  <b>ASSEMBLY REQUIRES TWO PEOPLE</b> </div> <div>  <b>20 MINUTE ASSEMBLY TIME</b> </div> <div>  <b>KEEP INSTRUCTIONS FOR FUTURE USE</b> </div>				

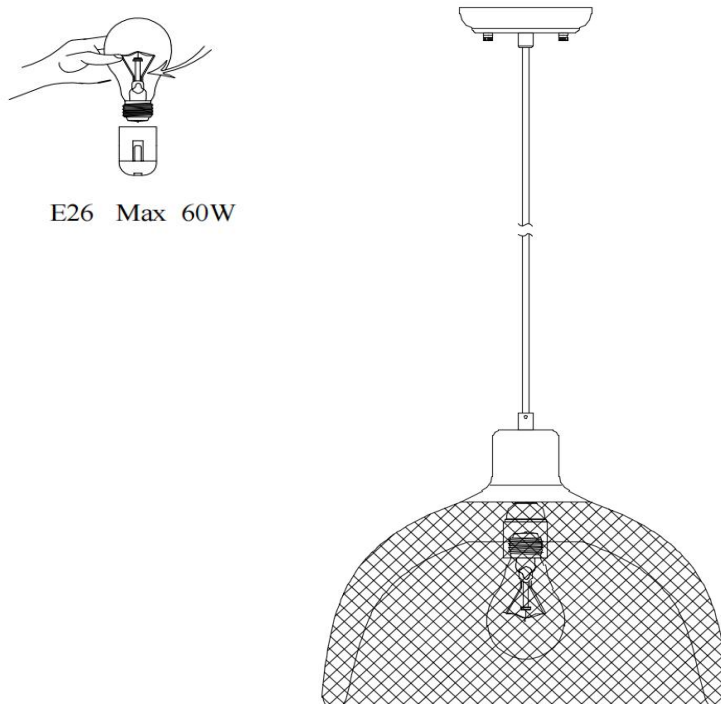
# Assembly Instructions

1



- 1) Remove the mounting bracket (A) from the canopy (D) by loosening the lock collar.
- 2) Adjust the height of cable you need by loosening the side screw (F).
- 3) ENSURE THE ELECTRICITY SUPPLY IS TURNED OFF BEFORE PROCEEDING.
- 4) Affix the mounting bracket (A) on the outlet box.
- 5) Wrap both safety cable with wire connector (C) , push the cable into the outlet box.
- 6) Attach the canopy (D) to the mounting bracket (A) and secure with screws (B) again.

2



E26 Max 60W

- 1) Install the bulb (Not Included), gently hold the bulb firmly and turn clockwise until secured.
- 2) Once the Installation is complete, turn on the power at fuse or circuit breaker.

\*\*\*Clean with a dry, soft cloth only, use no harsh abrasives or chemical agents\*\*\*