



# Renovator's Supply Corner Guards

Customer Service: 1-800-659-2211 CS@Rensup.com




**Instructions:** Insert dowel into the correct pilot hole insuring that both pieces of the corner guard sit flush against each other.

**Installation option 1 (NAILS):** Hold corner guard in place and drill four pilot holes into the corner guards (two pilots holes in each piece), making sure that the drill holes are slightly smaller than the nails being used. Nail in corner guard and set nails with nail set. Cover nails with putty and finish with paint or stain.

**Installation option 2 (GLUE):** Apply glue to the flat end of both pieces and connect by pressing together firmly. After connecting both pieces, glue along the center and install. Although Glue might be the quickest and easiest way to install corner guards, it can cause damage to the wall if removed or replaced.



**Option 1**

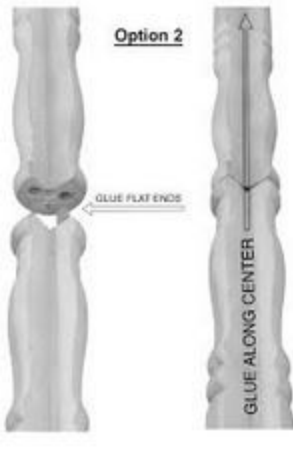

**Option 2**