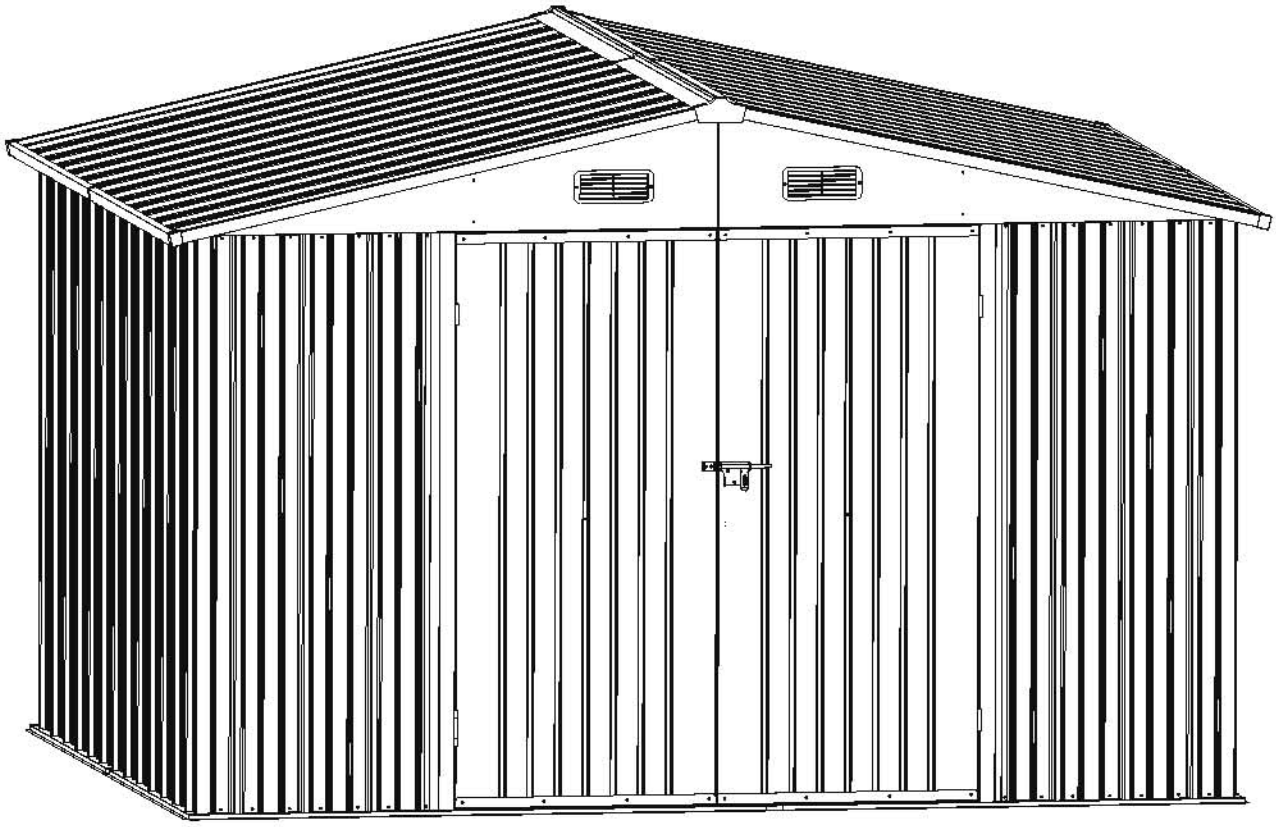
METAL GARDEN SHED 10x8FT

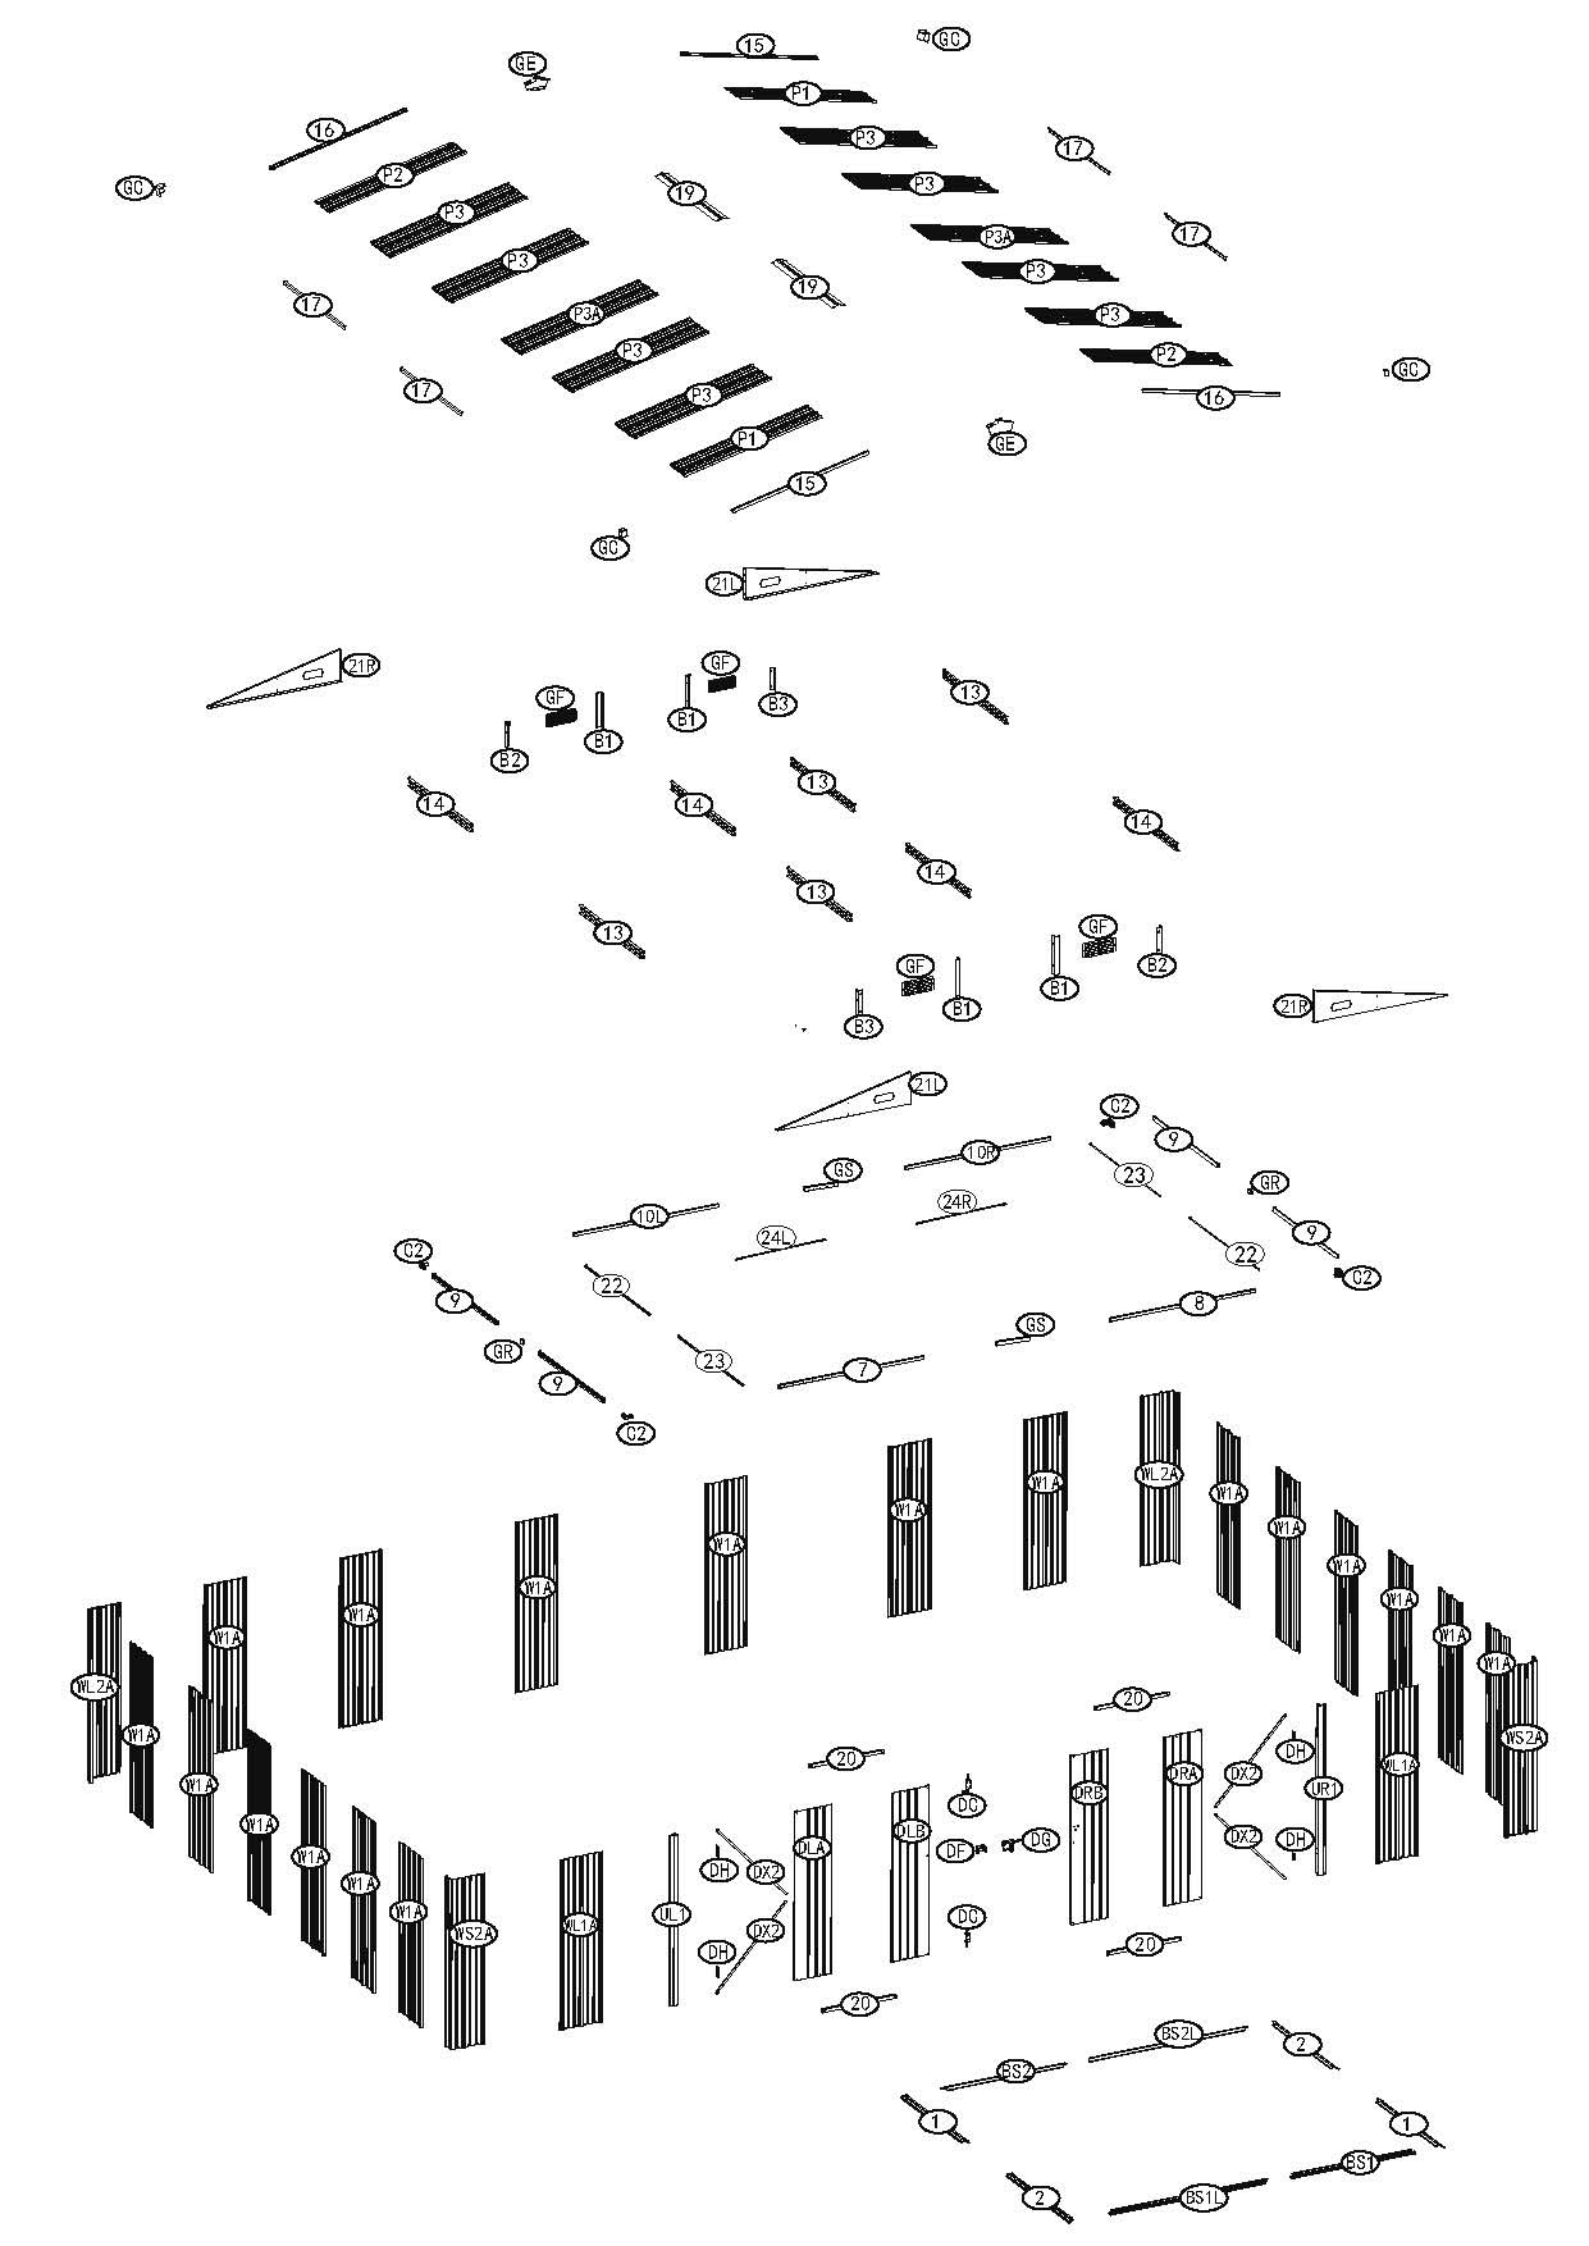
Thank you for choosing our products! If you have any questions or comments, contact us at support@acekool.vip and we'll resolve your issue ASAP!

Instructions for Assembly

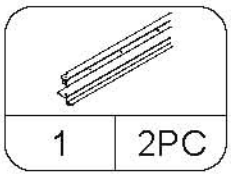


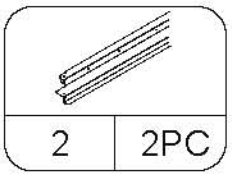
WARNING

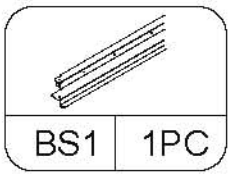
Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instrution.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.

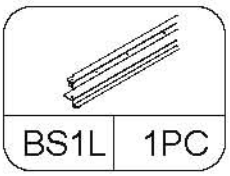

GC
GE
15
P1
16
P2
P3
17
19
P3A
GC
GE
15
21L
21R
GF
B1
B2
B3
13
14
C2
9
GS
10R
10L
24R
24L
23
GR
22
8
7
W1A
WL2A
WS2A
WL1A
UL1
20
DH
DX2
DLA
DLB
DC
DF
DG
DRB
DRA
UR1
BS2L
BS2
BS1L
BS1
1
2

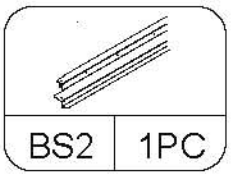
Part List

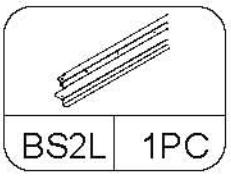

1 2PC

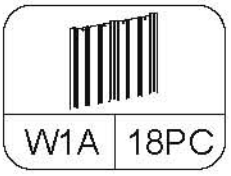

2 2PC


BS1 1PC

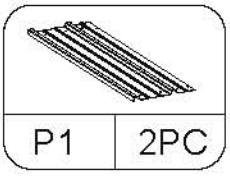

BS1L 1PC

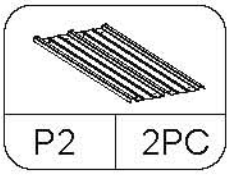

BS2 1PC

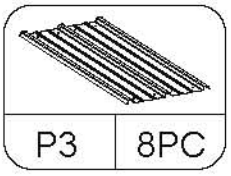

BS2L 1PC

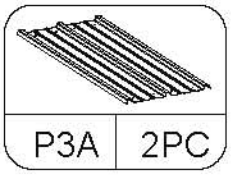

W1A 18PC

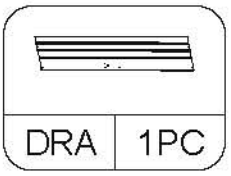

WS2A 2PC

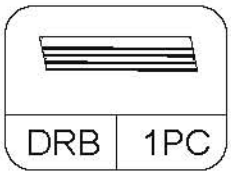

P1 2PC

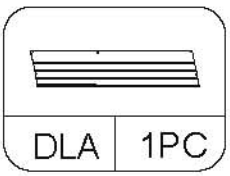

P2 2PC

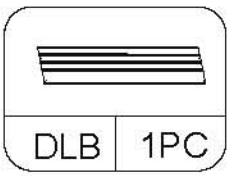

P3 8PC

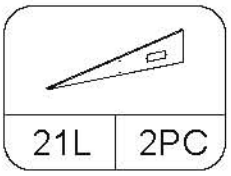

P3A 2PC

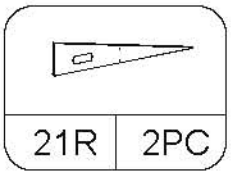

DRA 1PC

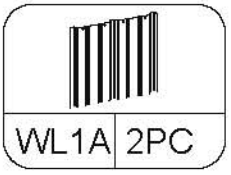

DRB 1PC


DLA 1PC

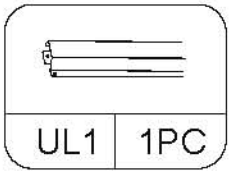

DLB 1PC

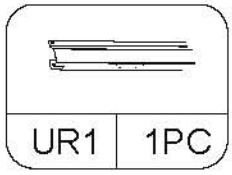

21L 2PC

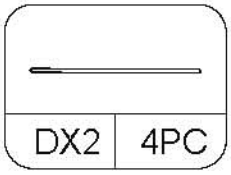

21R 2PC

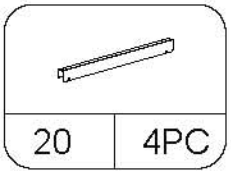

WL1A 2PC

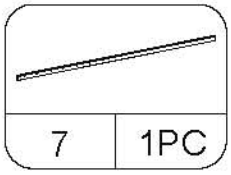

WL2A 2PC

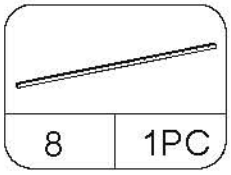

UL1 1PC

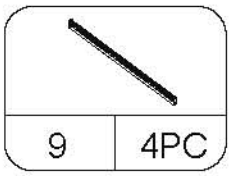

UR1 1PC

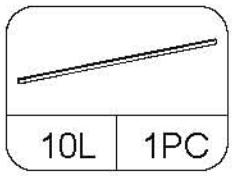

DX2 4PC

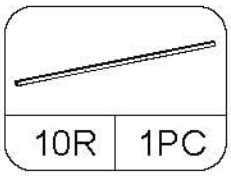

20 4PC

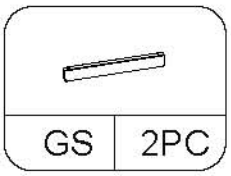

7 1PC

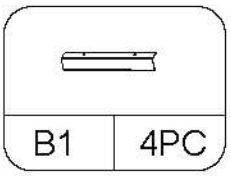

8 1PC

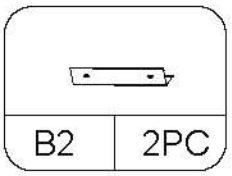

9 4PC

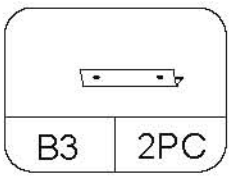

10L 1PC

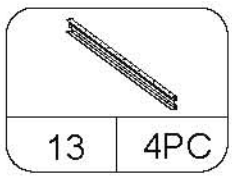

10R 1PC

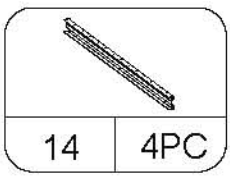

GS 2PC

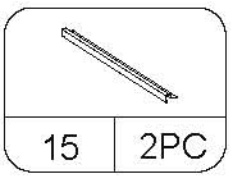

B1 4PC

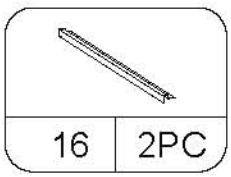

B2 2PC

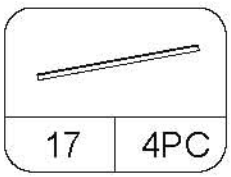

B3 2PC

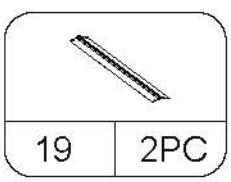

13 4PC

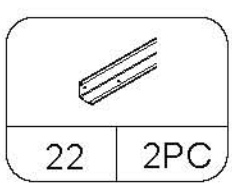

14 4PC


15 2PC


16 2PC


17 4PC


19 2PC


22 2PC

23 2PC

24L 1PC

24R 1PC

DG 1PC

DF 1PC

DC 2PC

DH 4PC

C2 4PC


GF 4PC

GR 2PC

GE 2PC

GC 4PC

Part List



F1	550



F2	60



F3	32



F4	5



S1	300

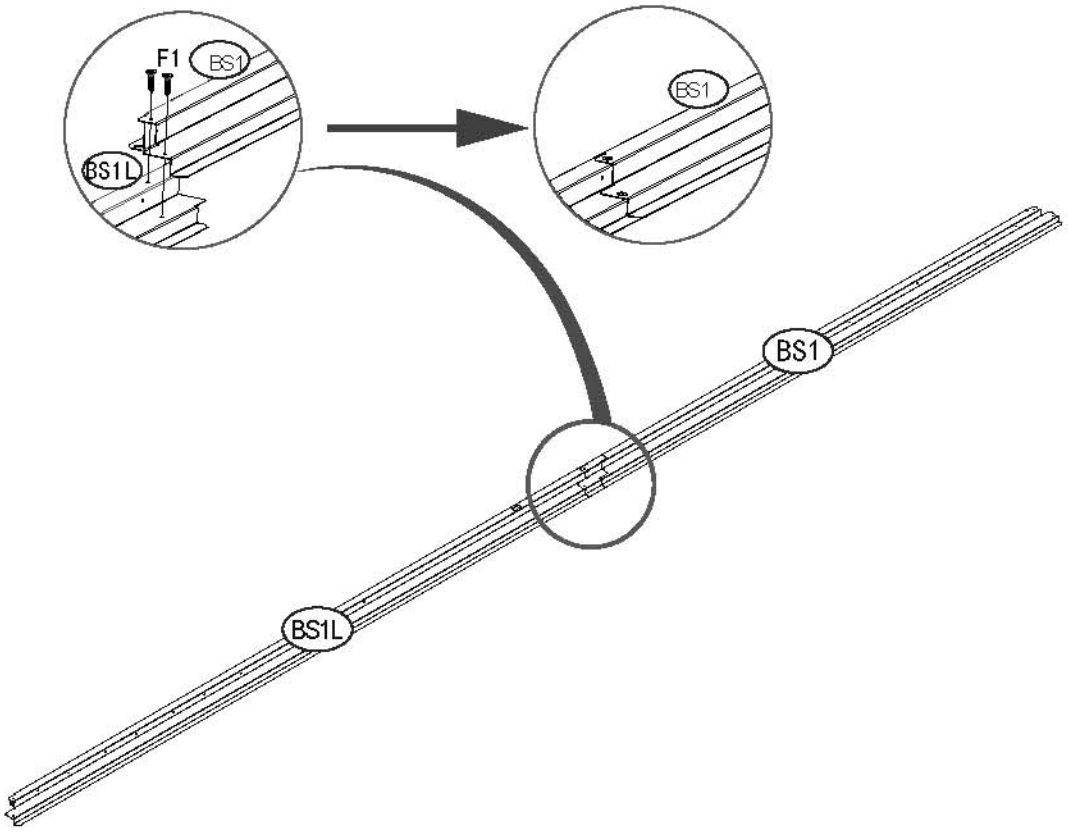


S2	514

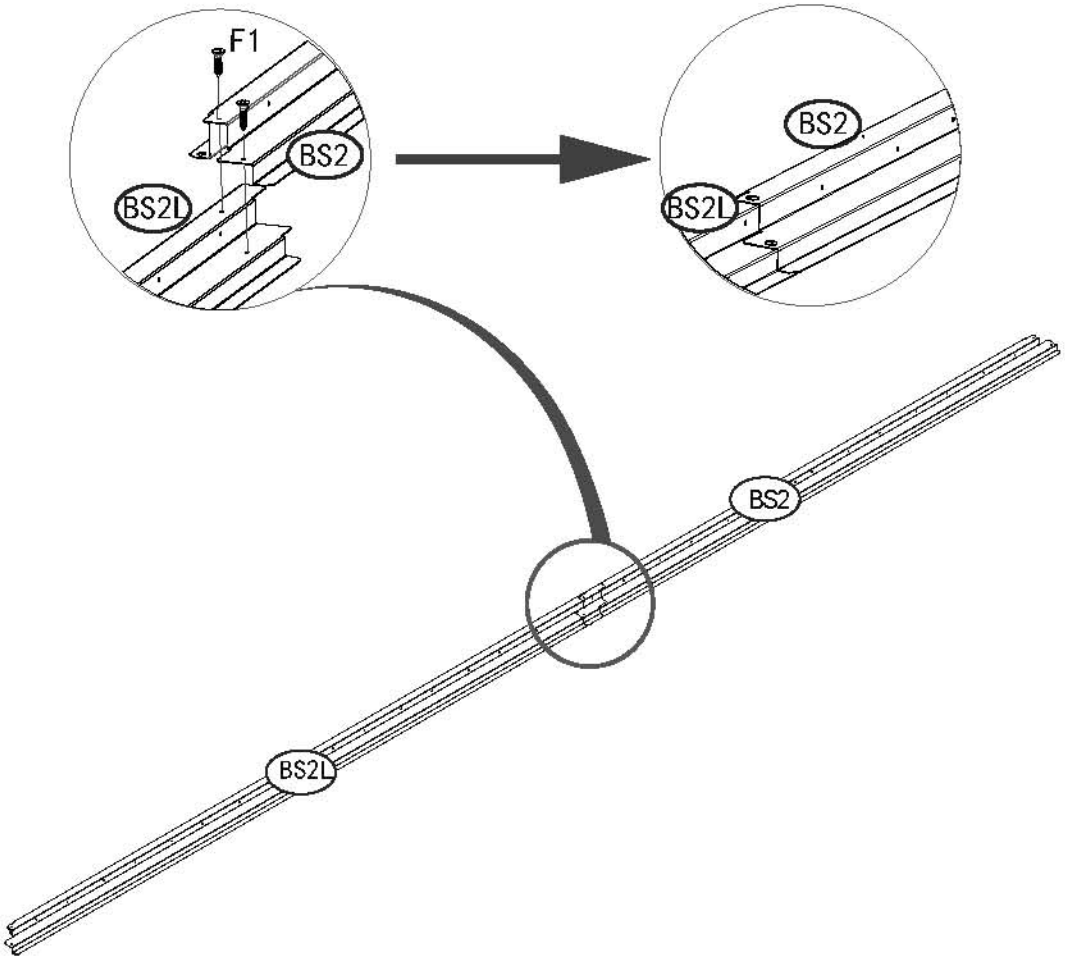


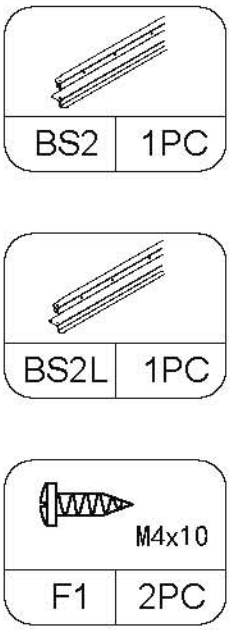
F5	4

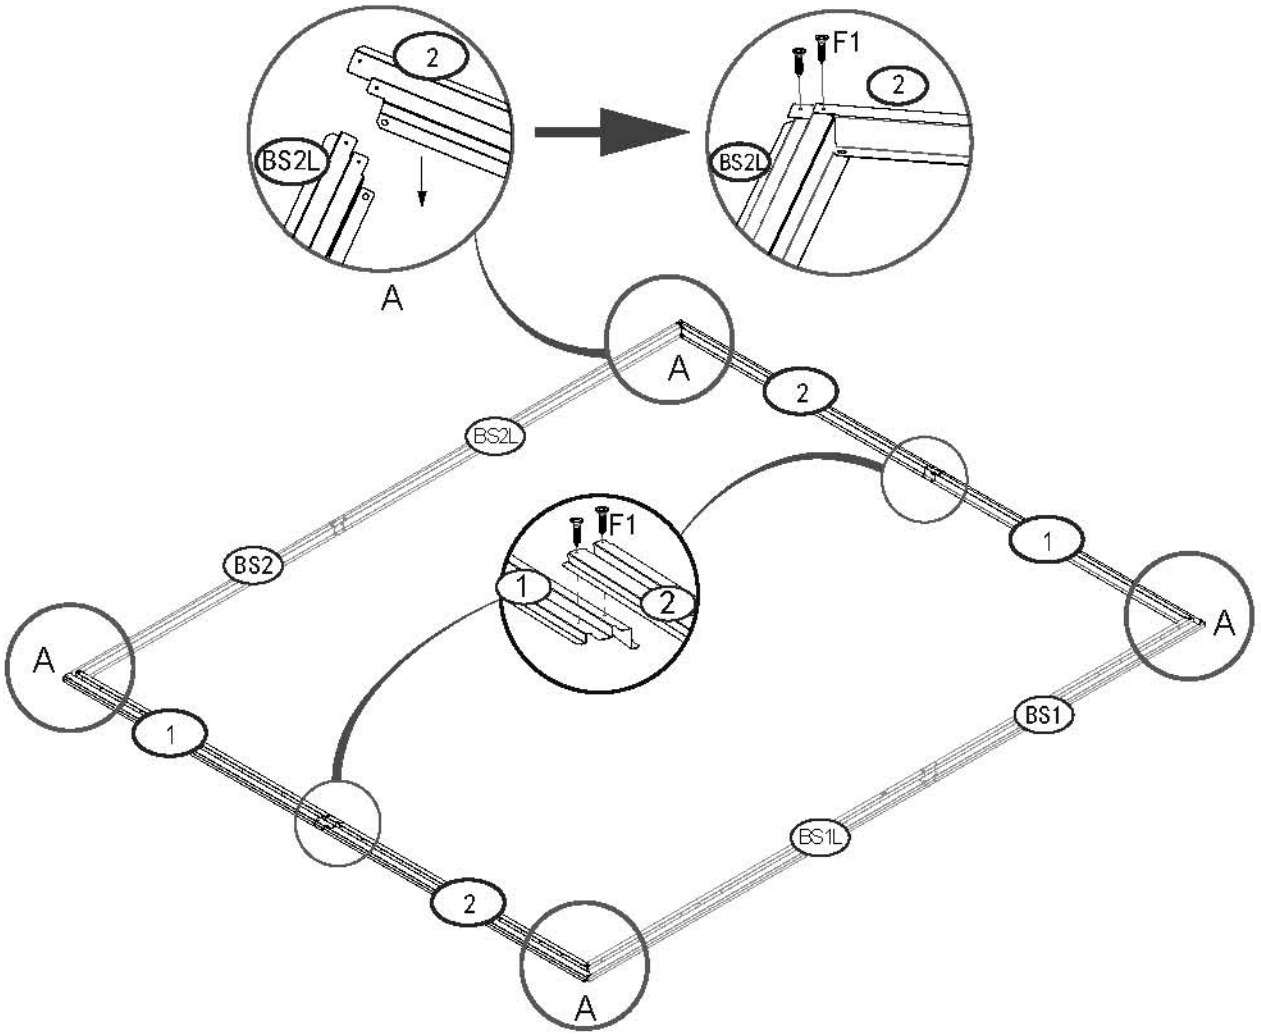
1.Assembly Of Base

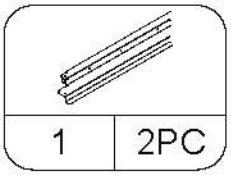




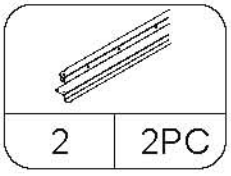




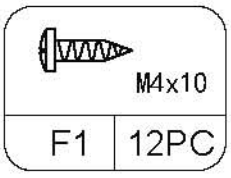




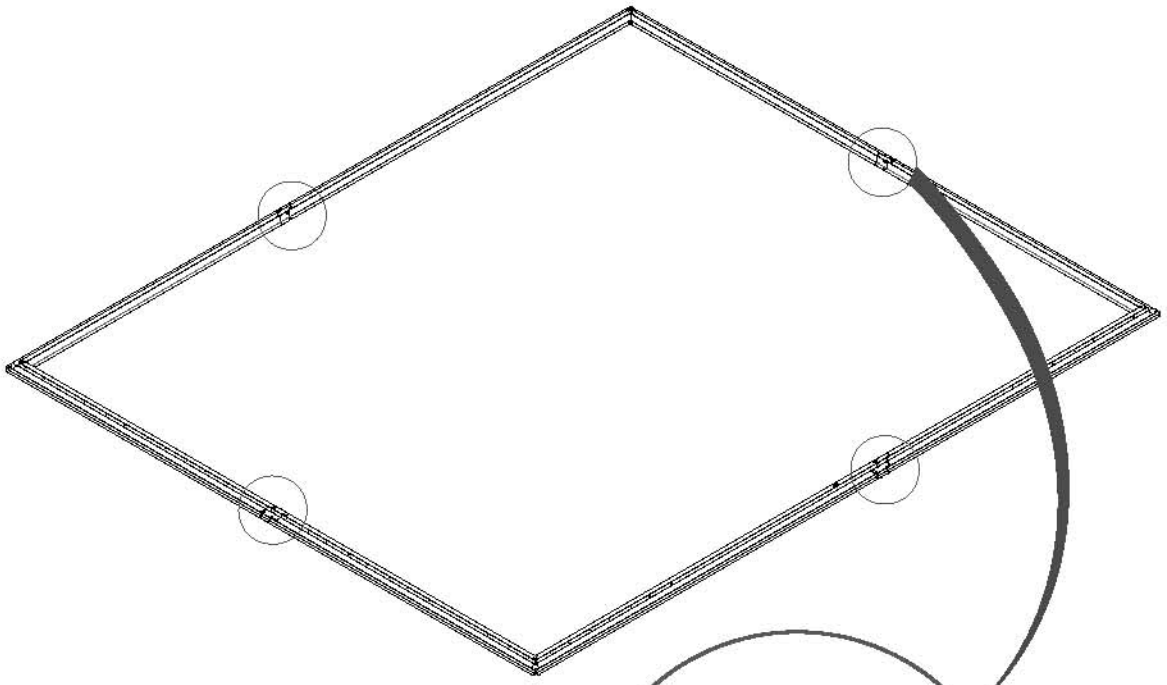
1	2PC

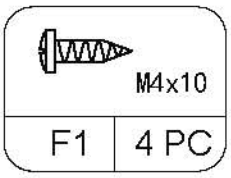


2	2PC

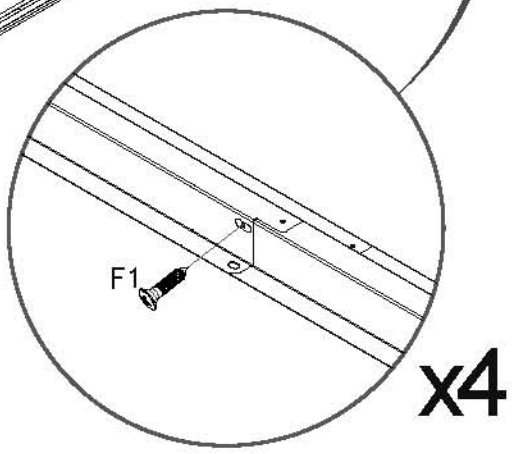


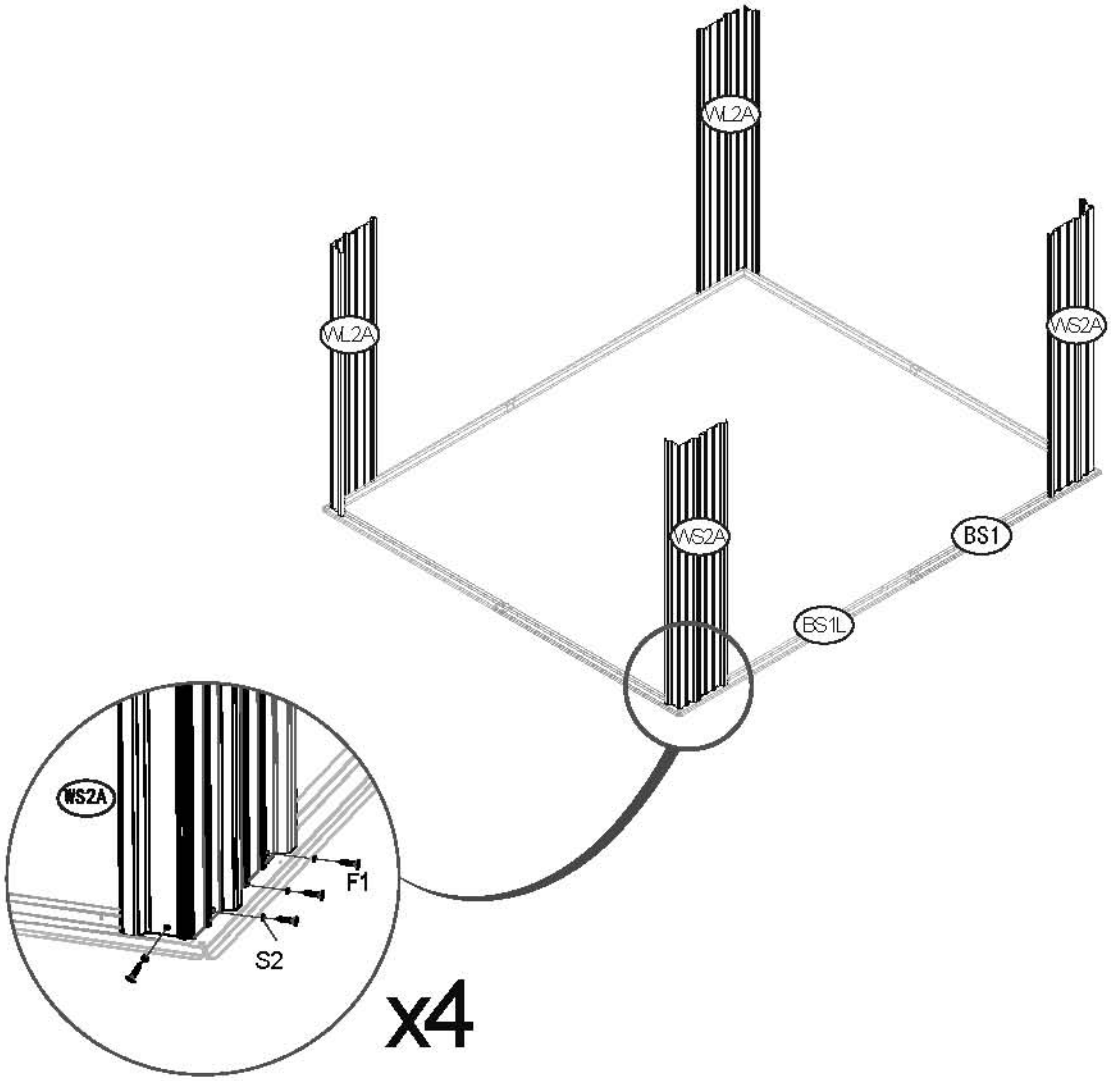
F1	12PC





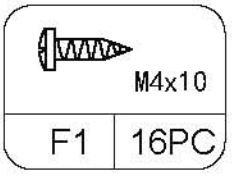
F1	4 PC

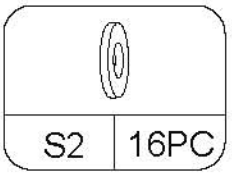


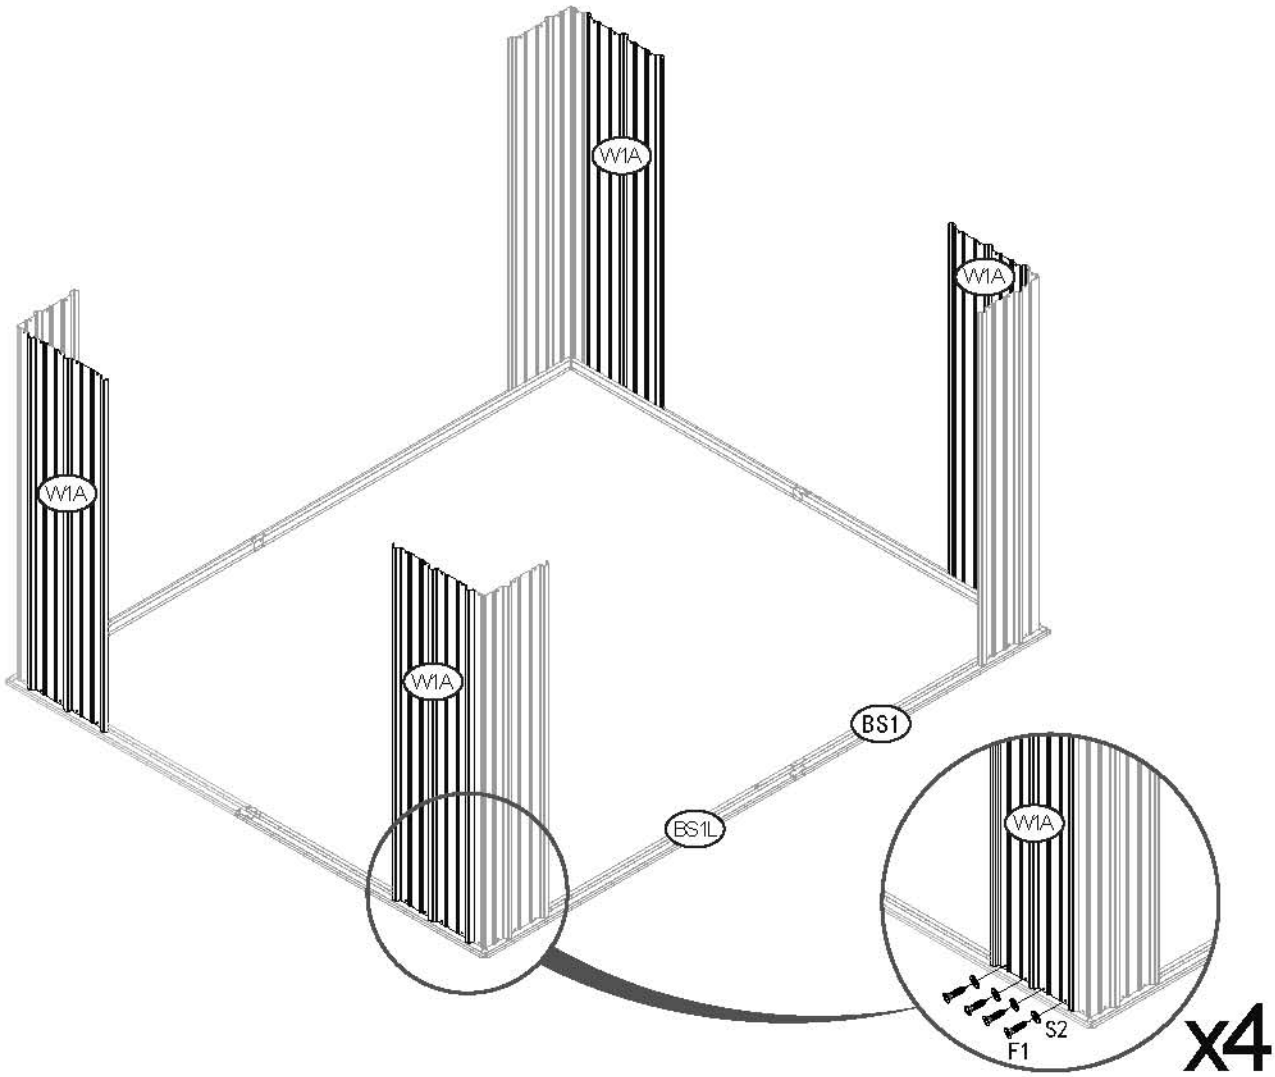

WL2A
WL2A
WS2A
WS2A
BS1
BS1L
WS2A
F1
S2
x4

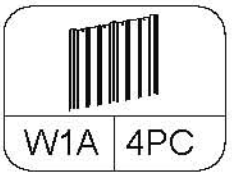

WS2A
2PC

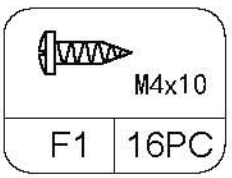

WL2A
2PC

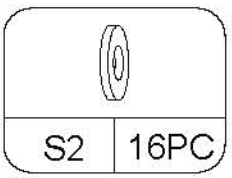

M4x10
F1
16PC

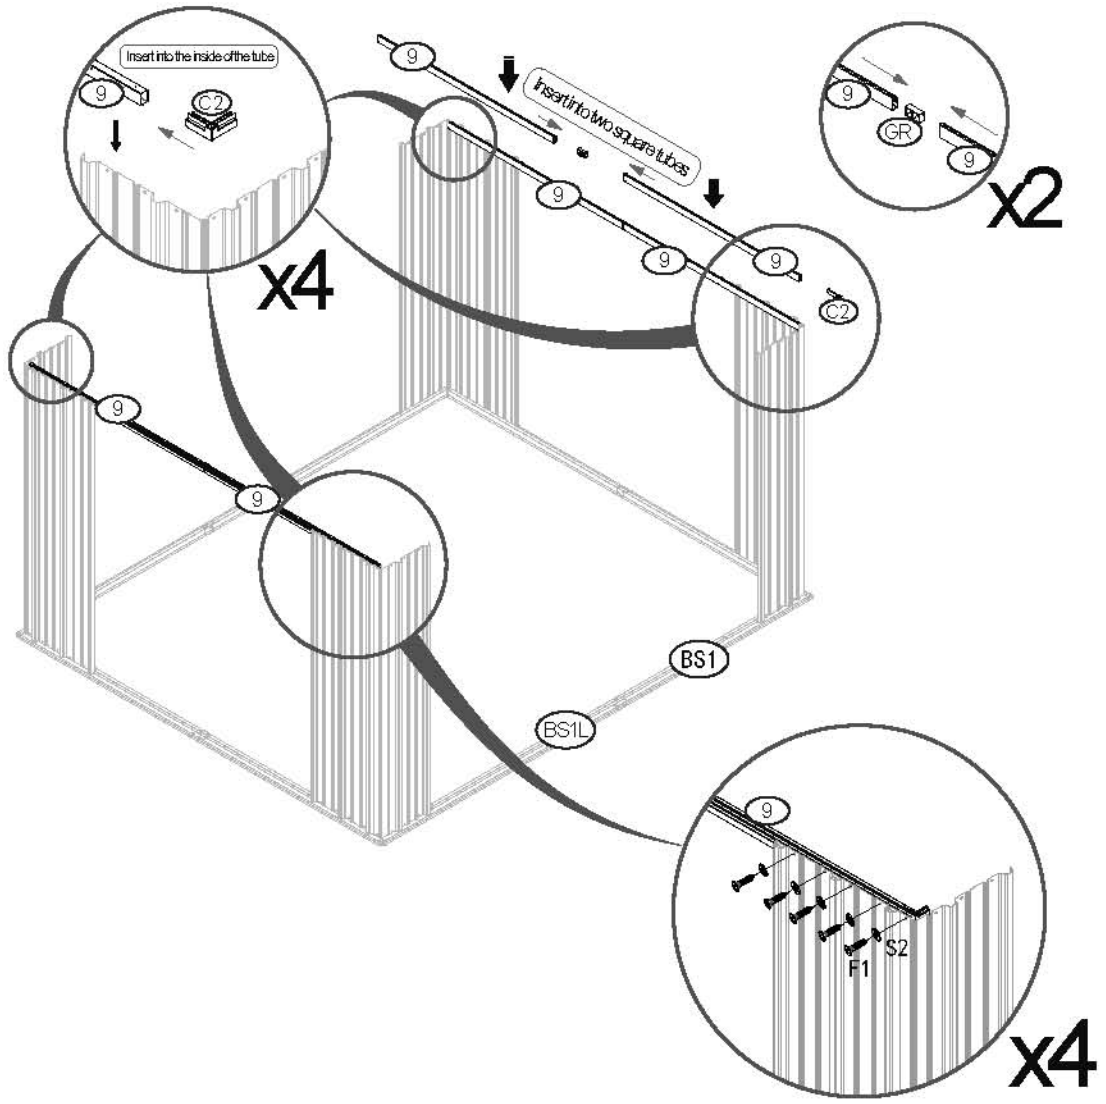

S2
16PC


W1A
W1A
W1A
W1A
BS1
BS1L
W1A
S2
F1
x4

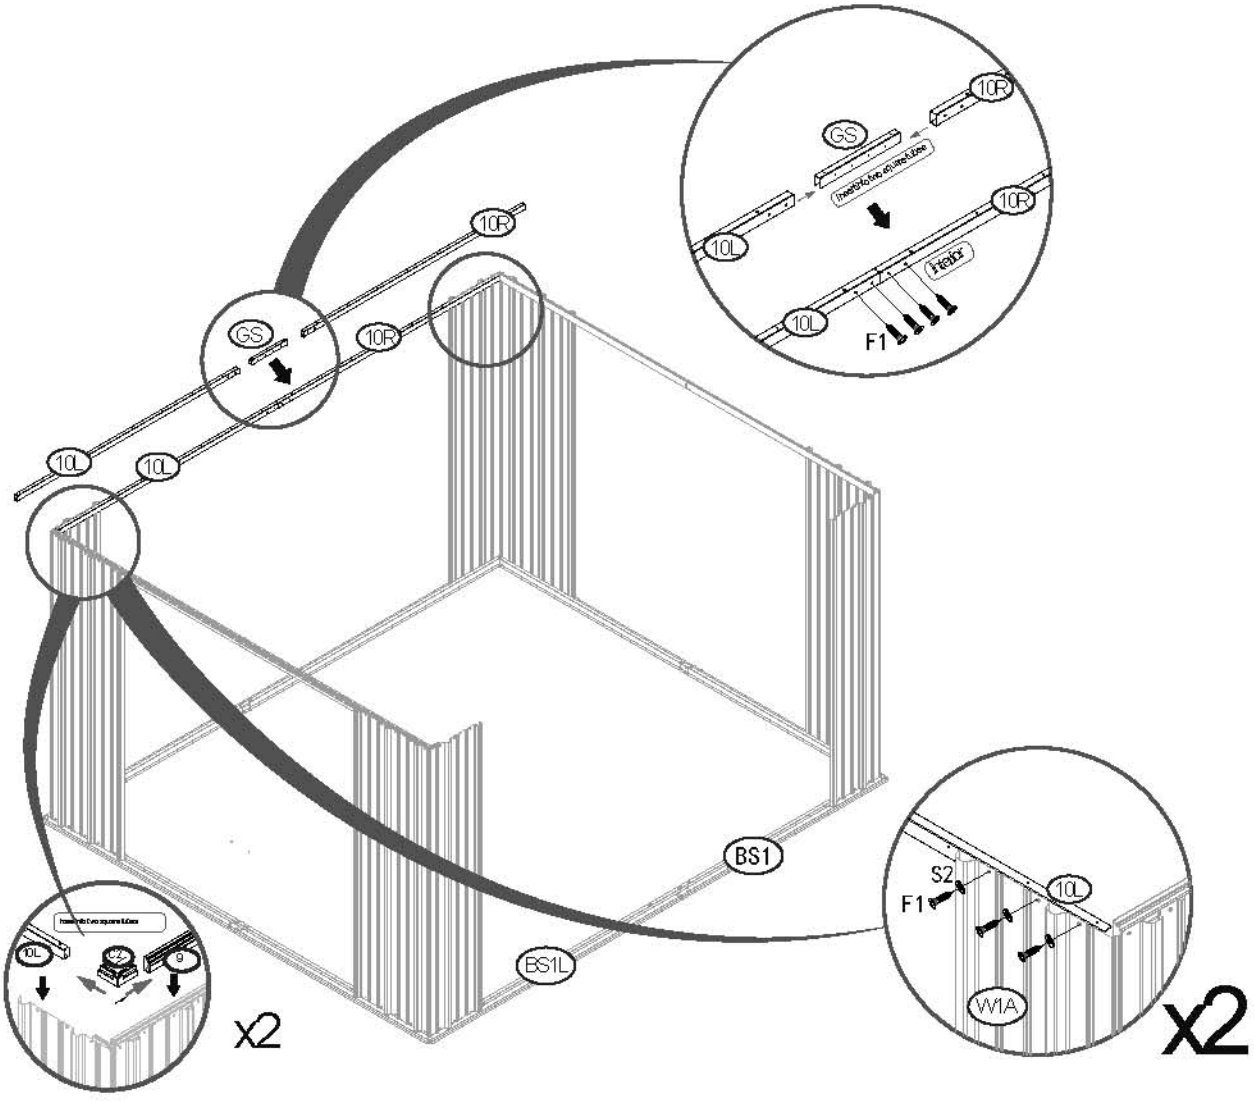

W1A
4PC


M4x10
F1
16PC

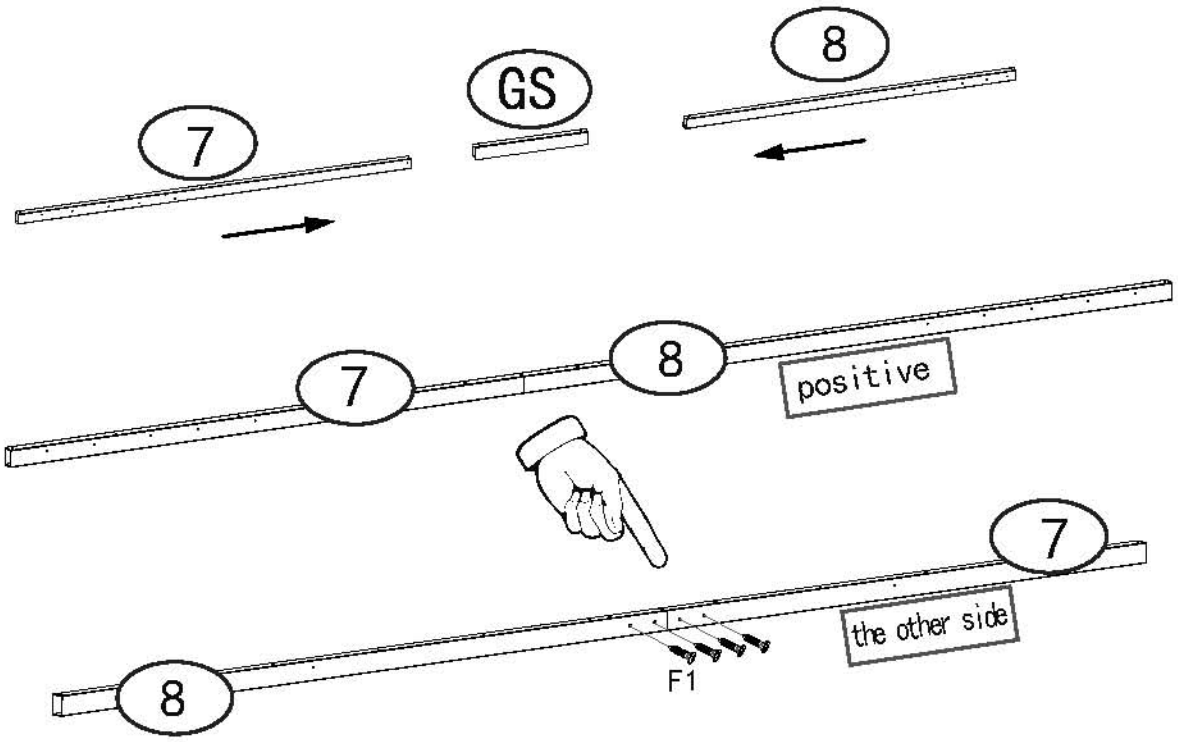

S2
16PC



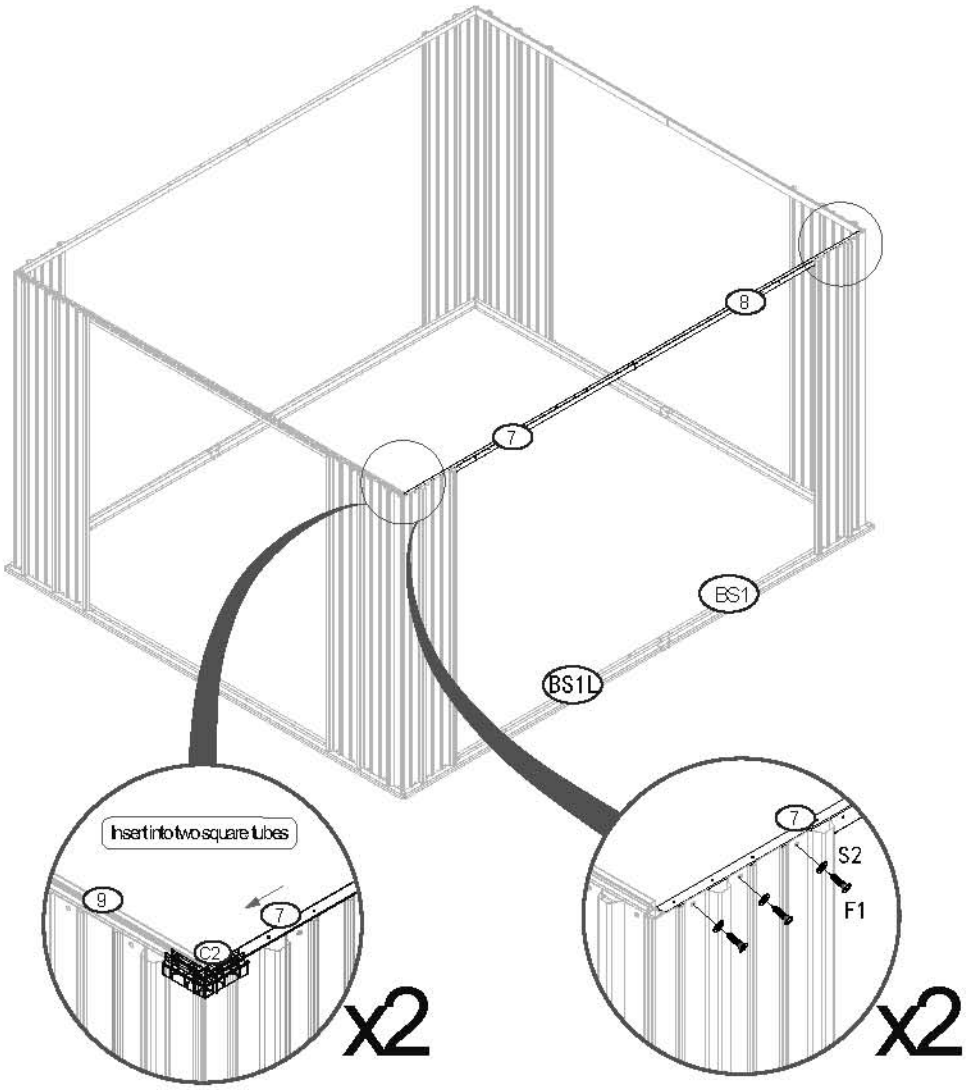
9	4PC
GR	2PC
M4x10 F1	20PC
S2	20PC
C2	4PC



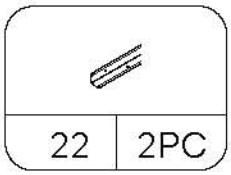
10L	1PC
10R	1PC
GS	1PC
M4x10 F1	10PC
S2	6PC



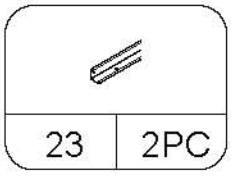
7	1PC
8	1PC
GS	1PC
M4x10 F1	4PC



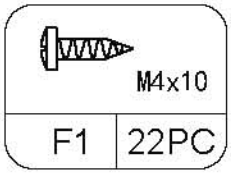
M4x10 F1	6PC
S2	6PC



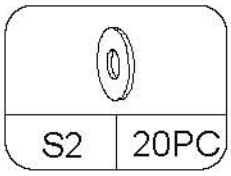
22	2PC



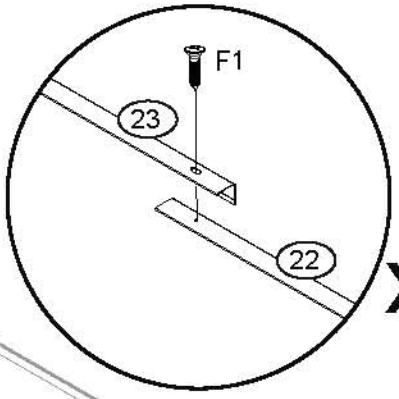
23	2PC



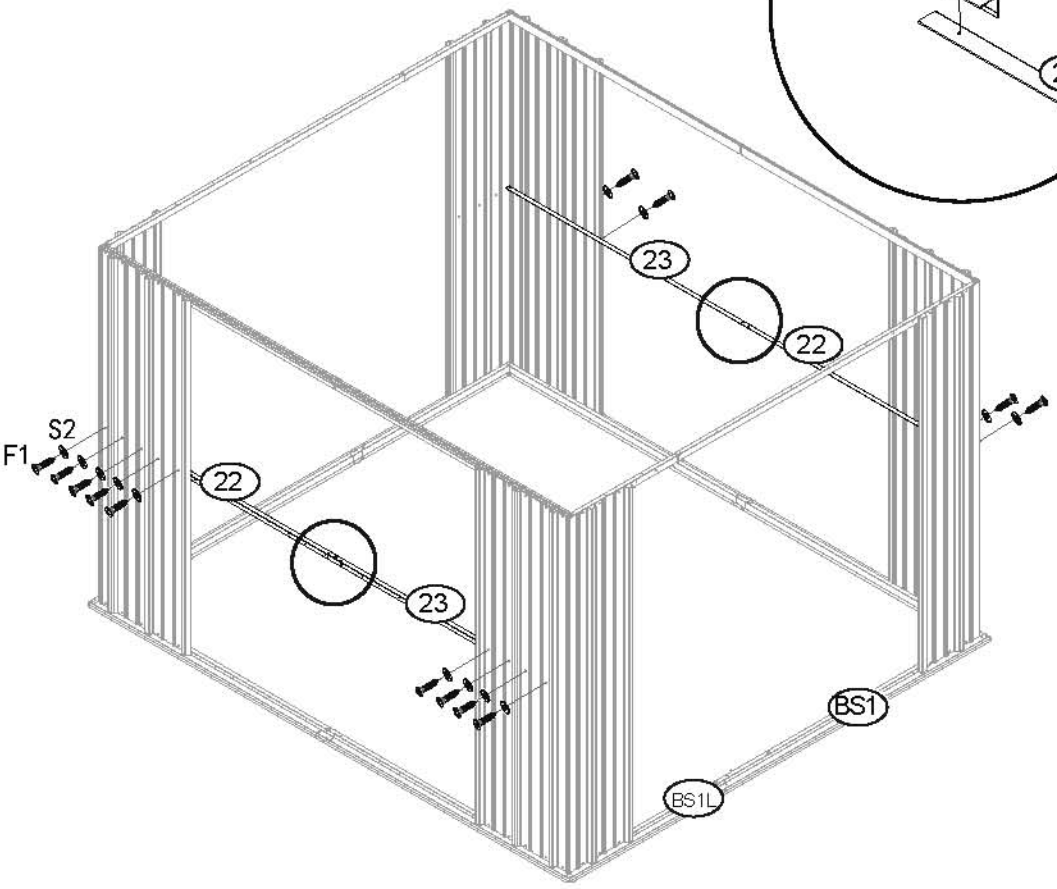
F1	22PC

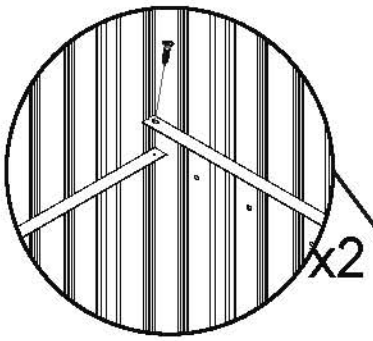


S2	20PC

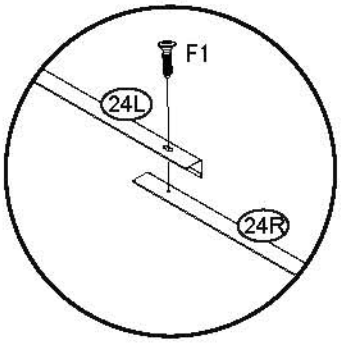


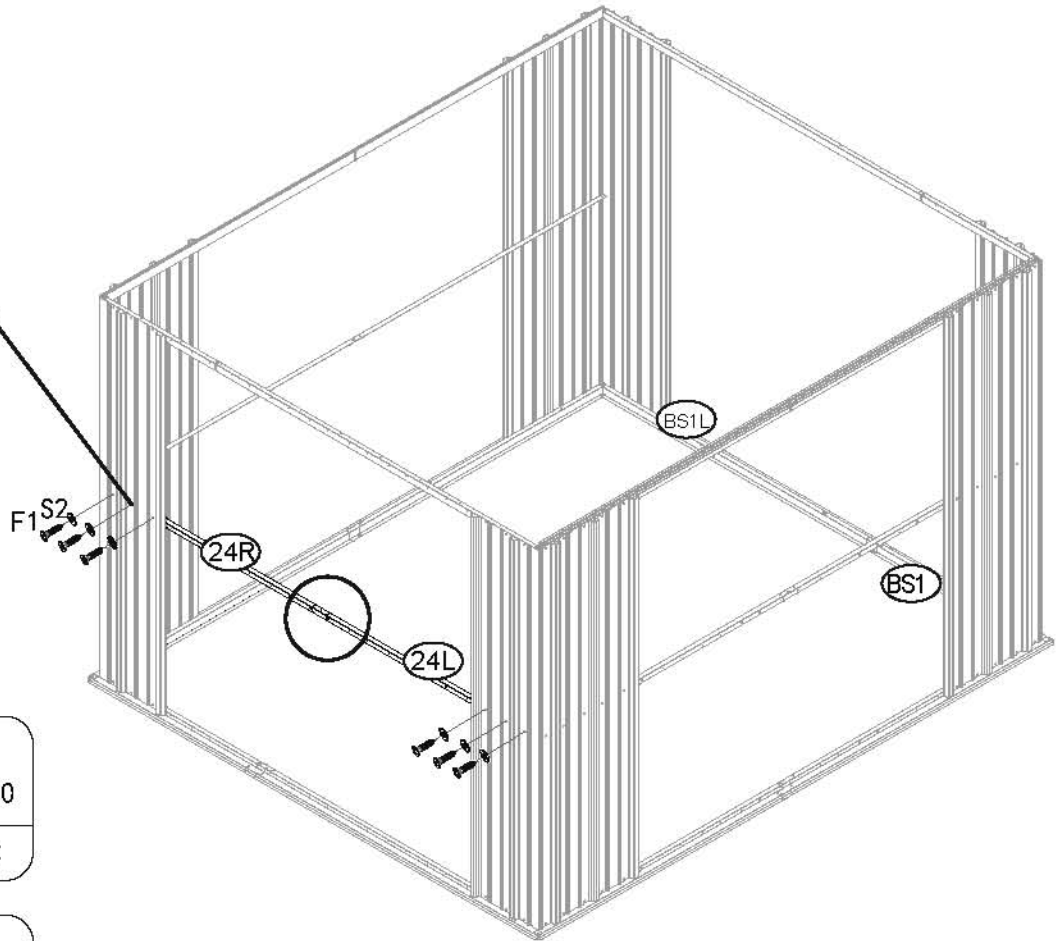
x2

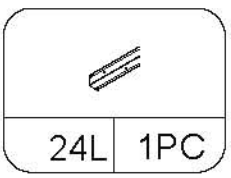




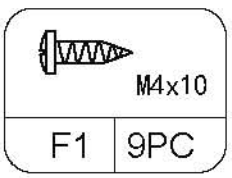
x2



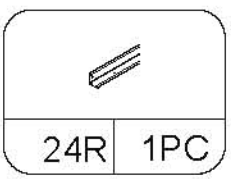




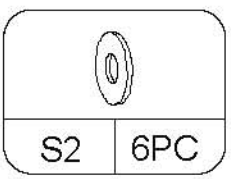
24L	1PC



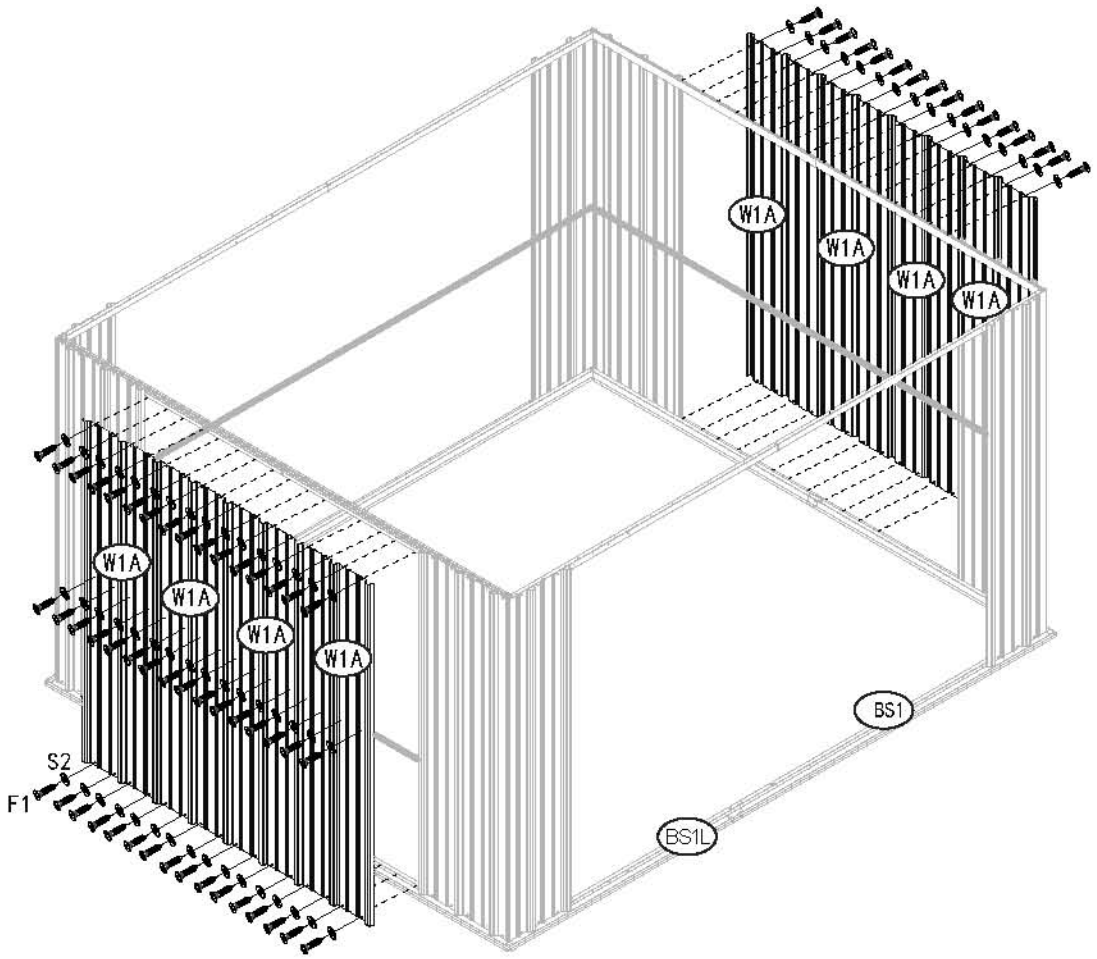
F1	9PC



24R	1PC



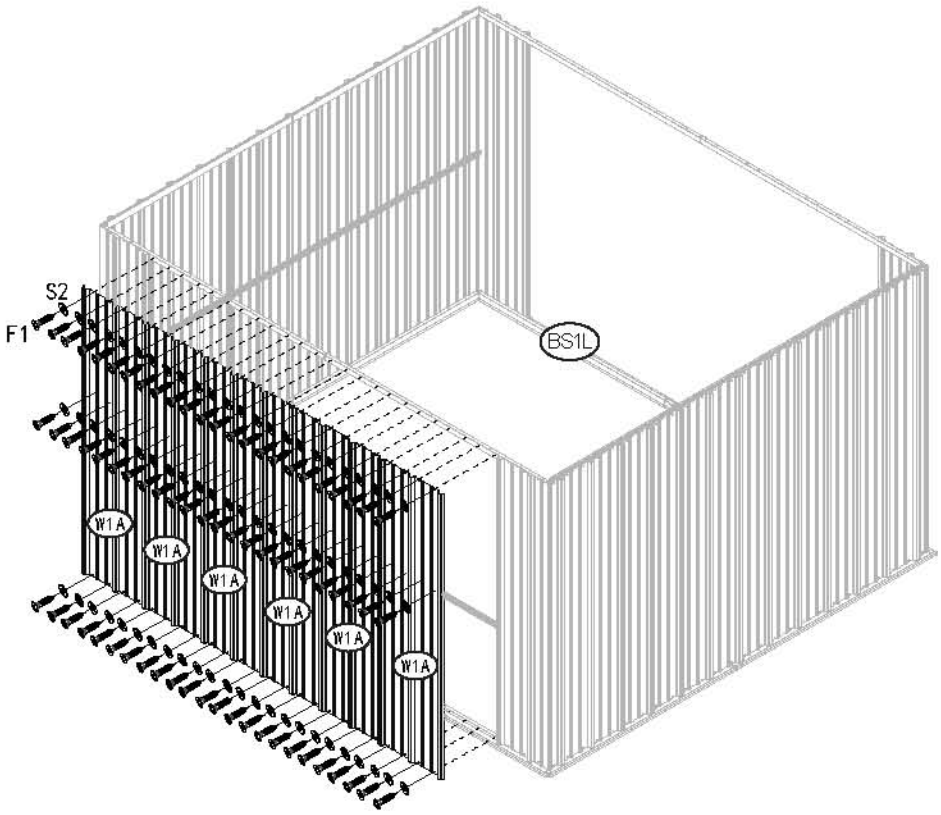
S2	6PC



W1A	8 PC

M4x10	
F1	96PC

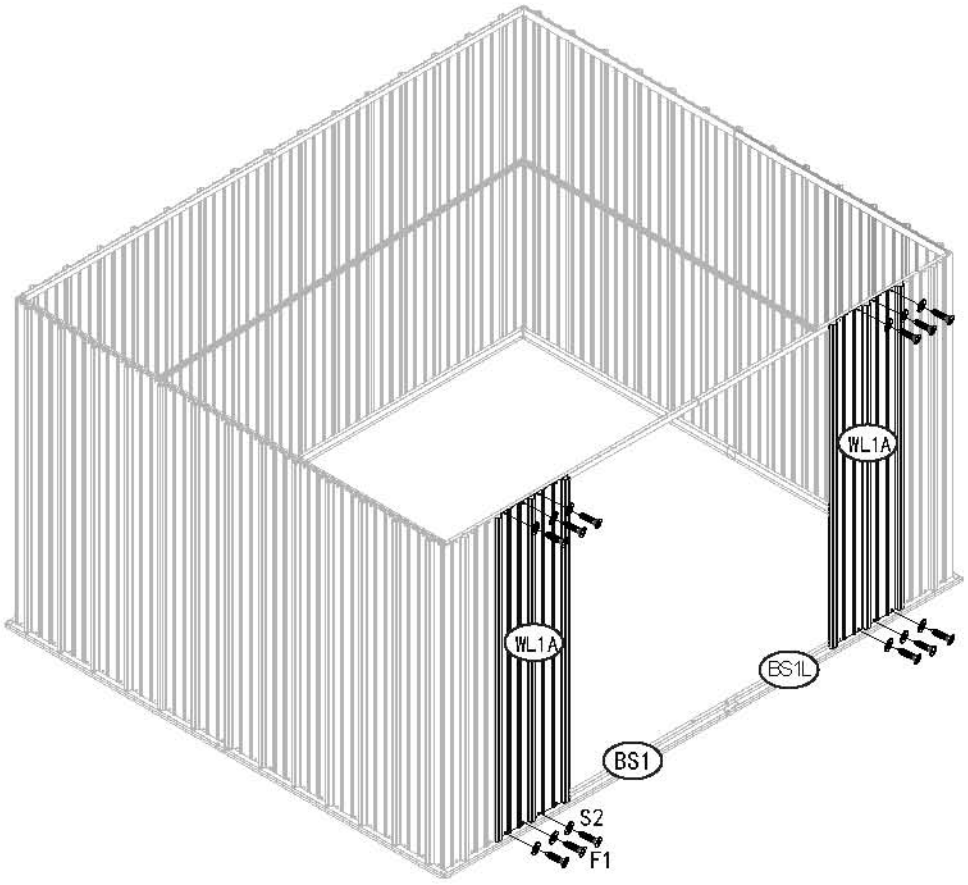
S2	96PC



W1A	6 PC

M4x10	
F1	72PC

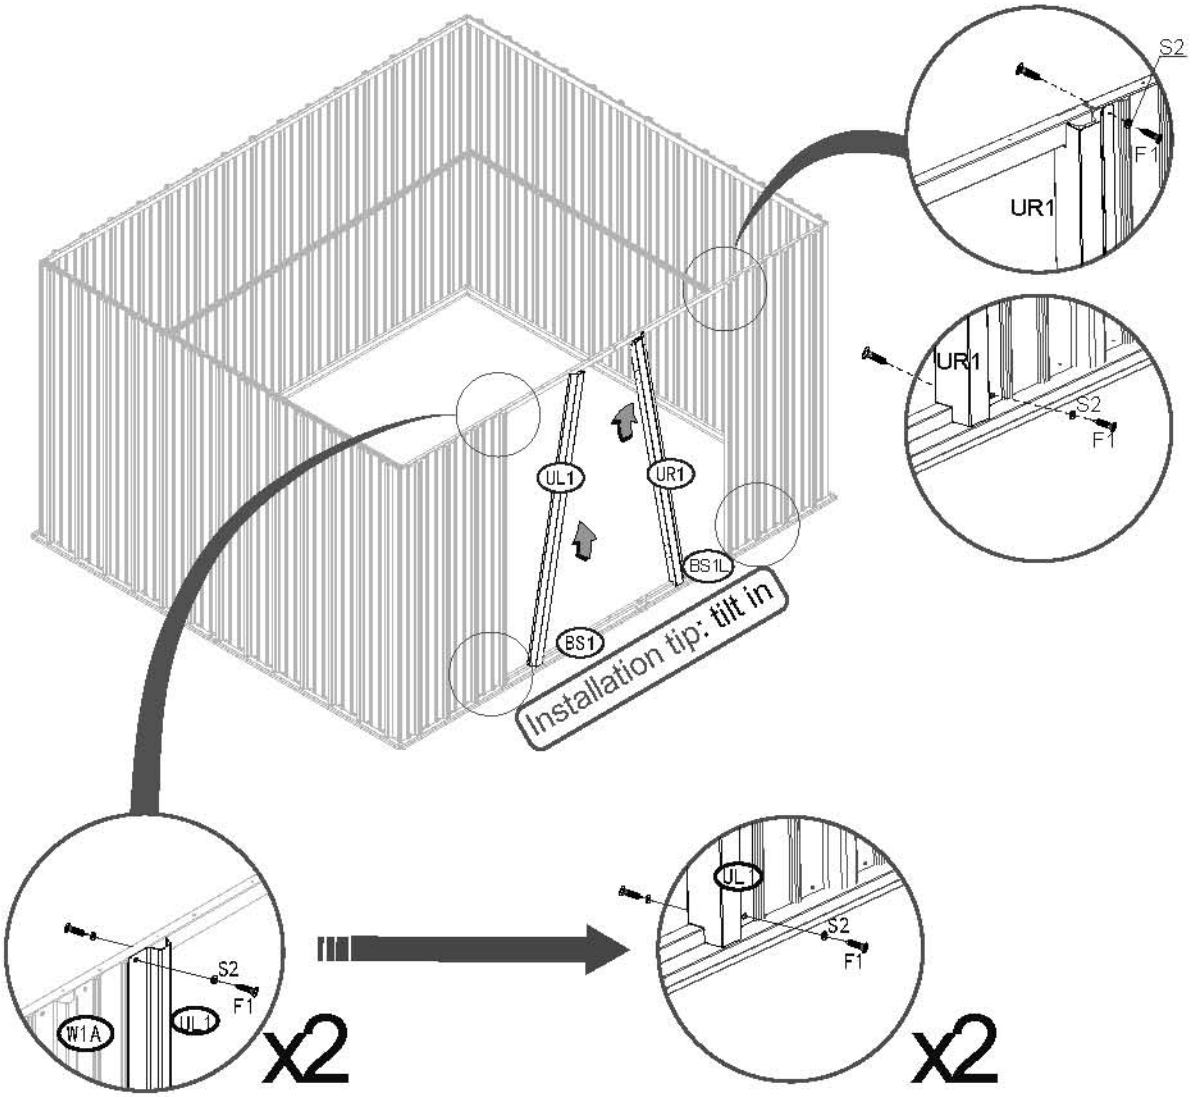
S2	72PC



WL1A	2 PC

M4x10	
F1	12PC

S2	12PC



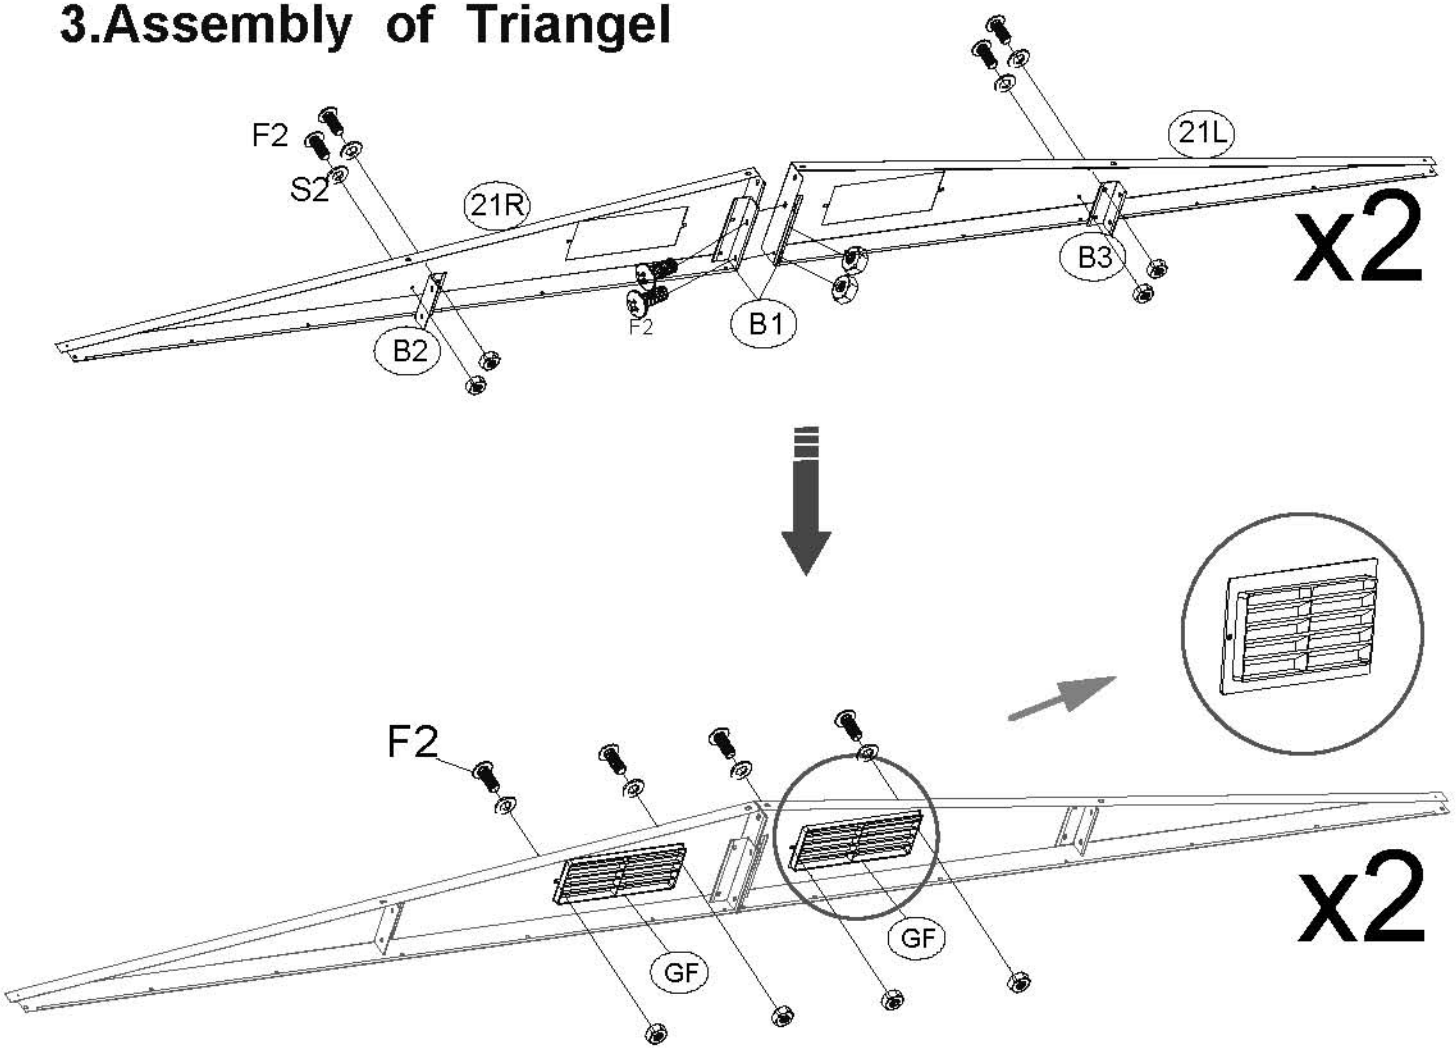
UL1	1PC

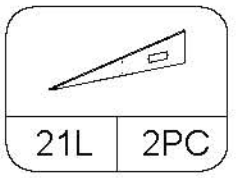
UR1	1PC

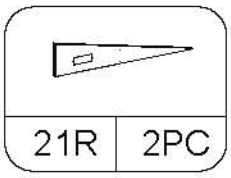
M4x10	
F1	8PC

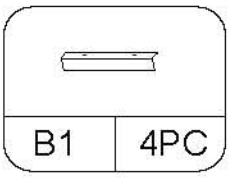
S2	8PC

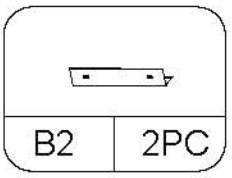
3.Assembly of Triangel

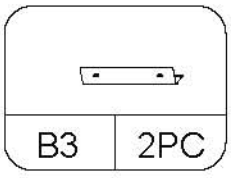


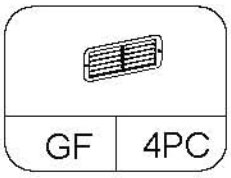

21L 2PC

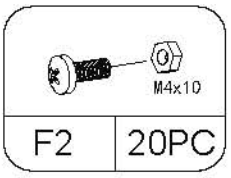

21R 2PC


B1 4PC

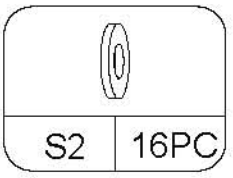

B2 2PC


B3 2PC

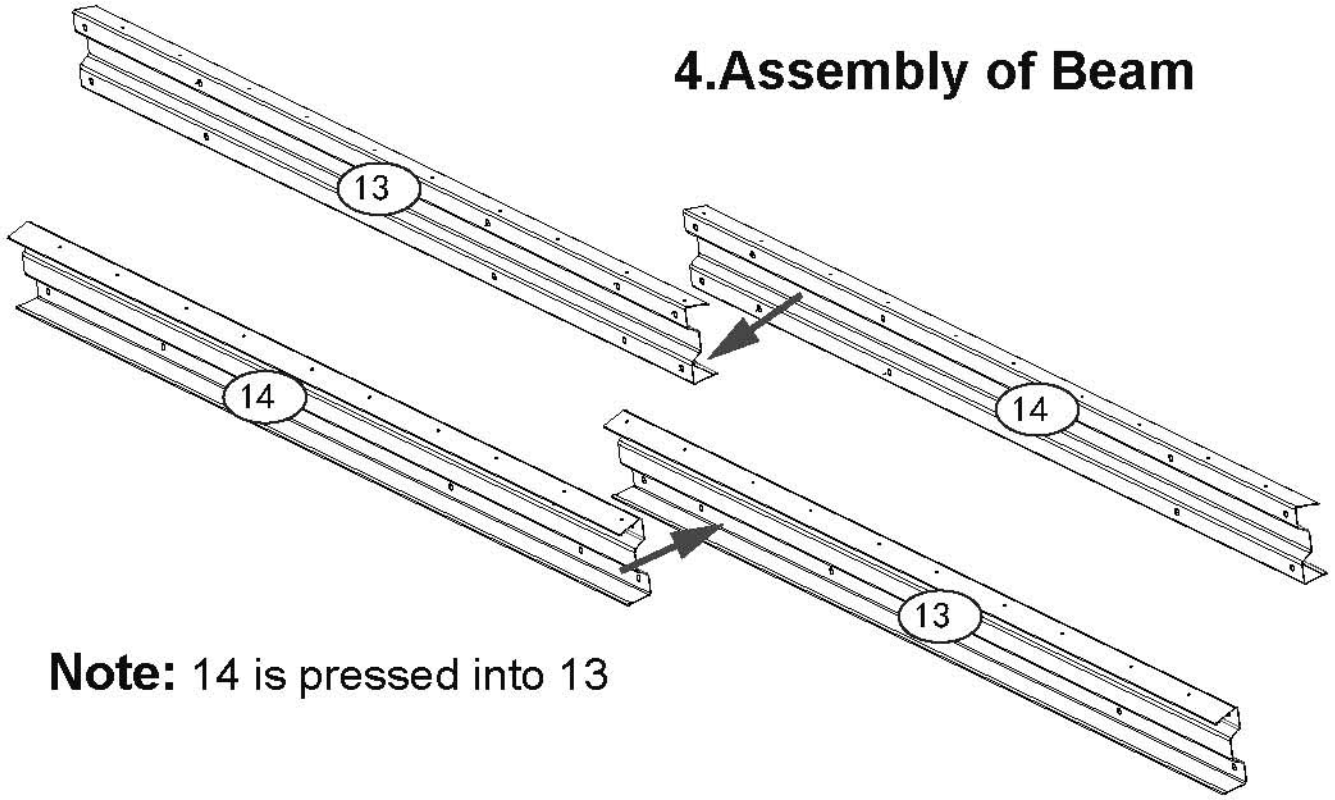

GF 4PC



F2 20PC

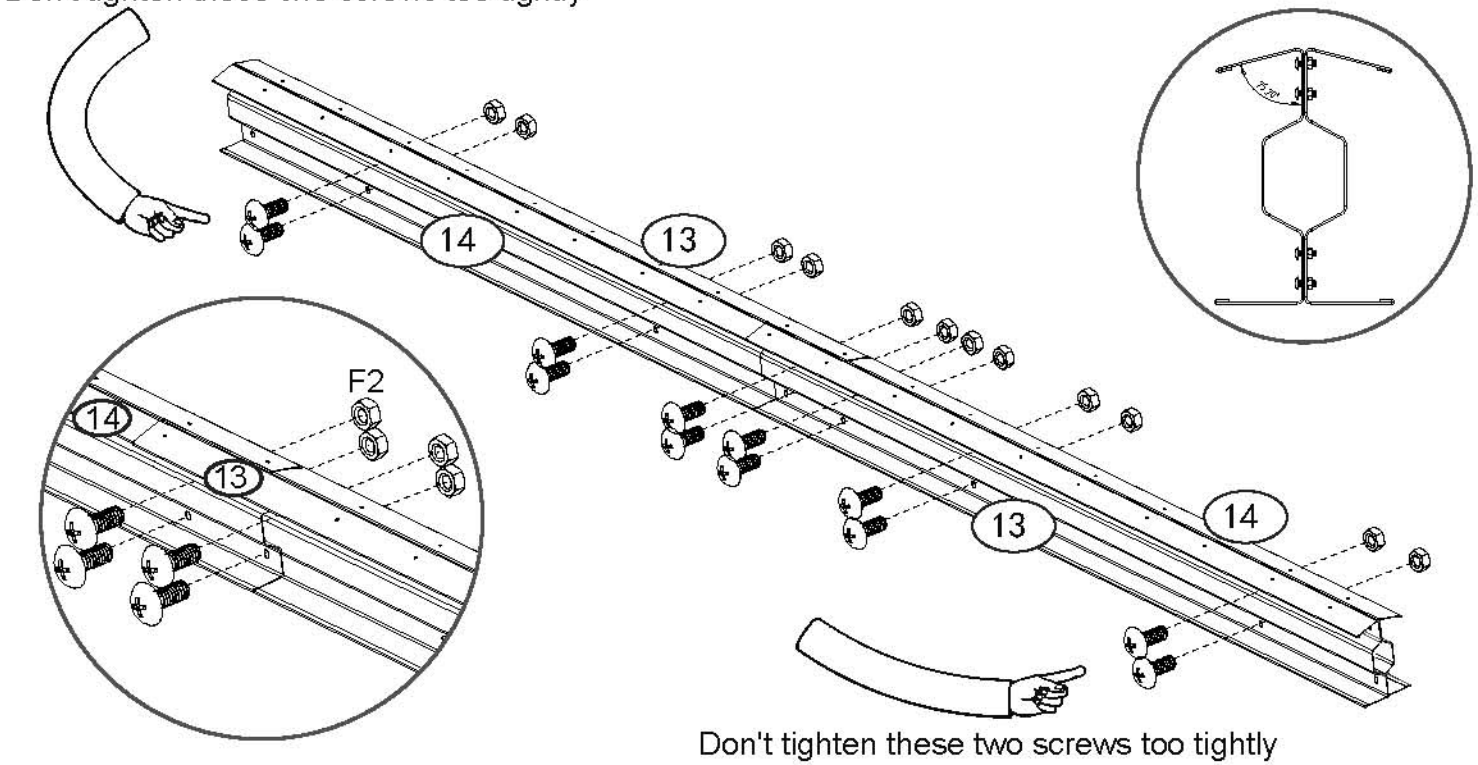

S2 16PC

4.Assembly of Beam

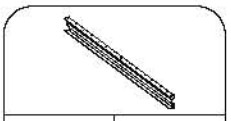


Note: 14 is pressed into 13

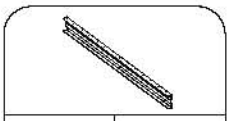
Don't tighten these two screws too tightly



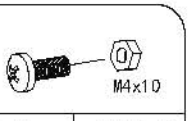
Don't tighten these two screws too tightly



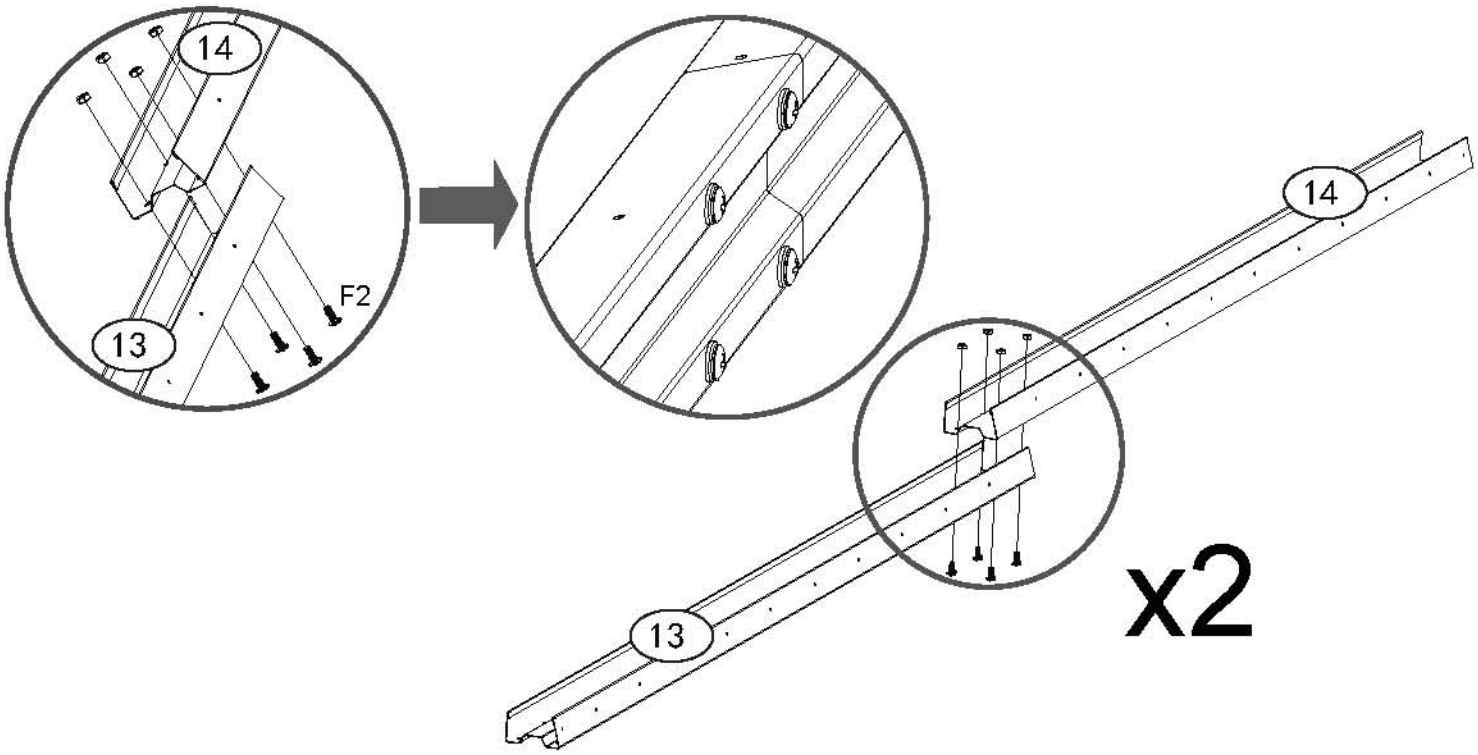
13	2PC




14	2PC




F2	12PC






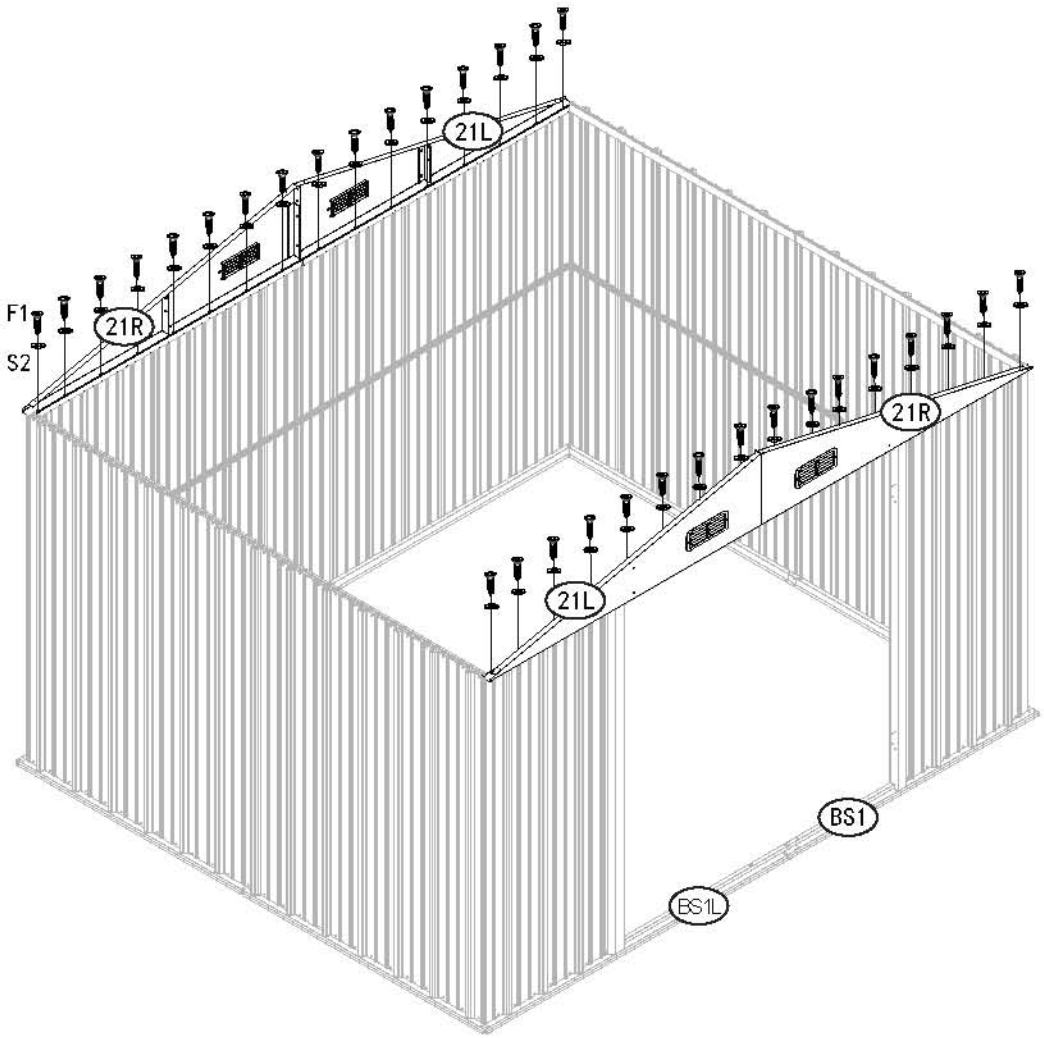
13	2PC

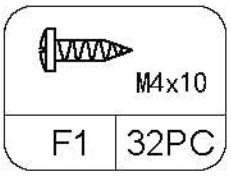


14	2PC

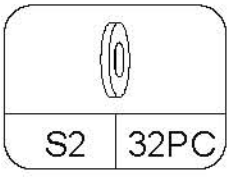


F2	8PC

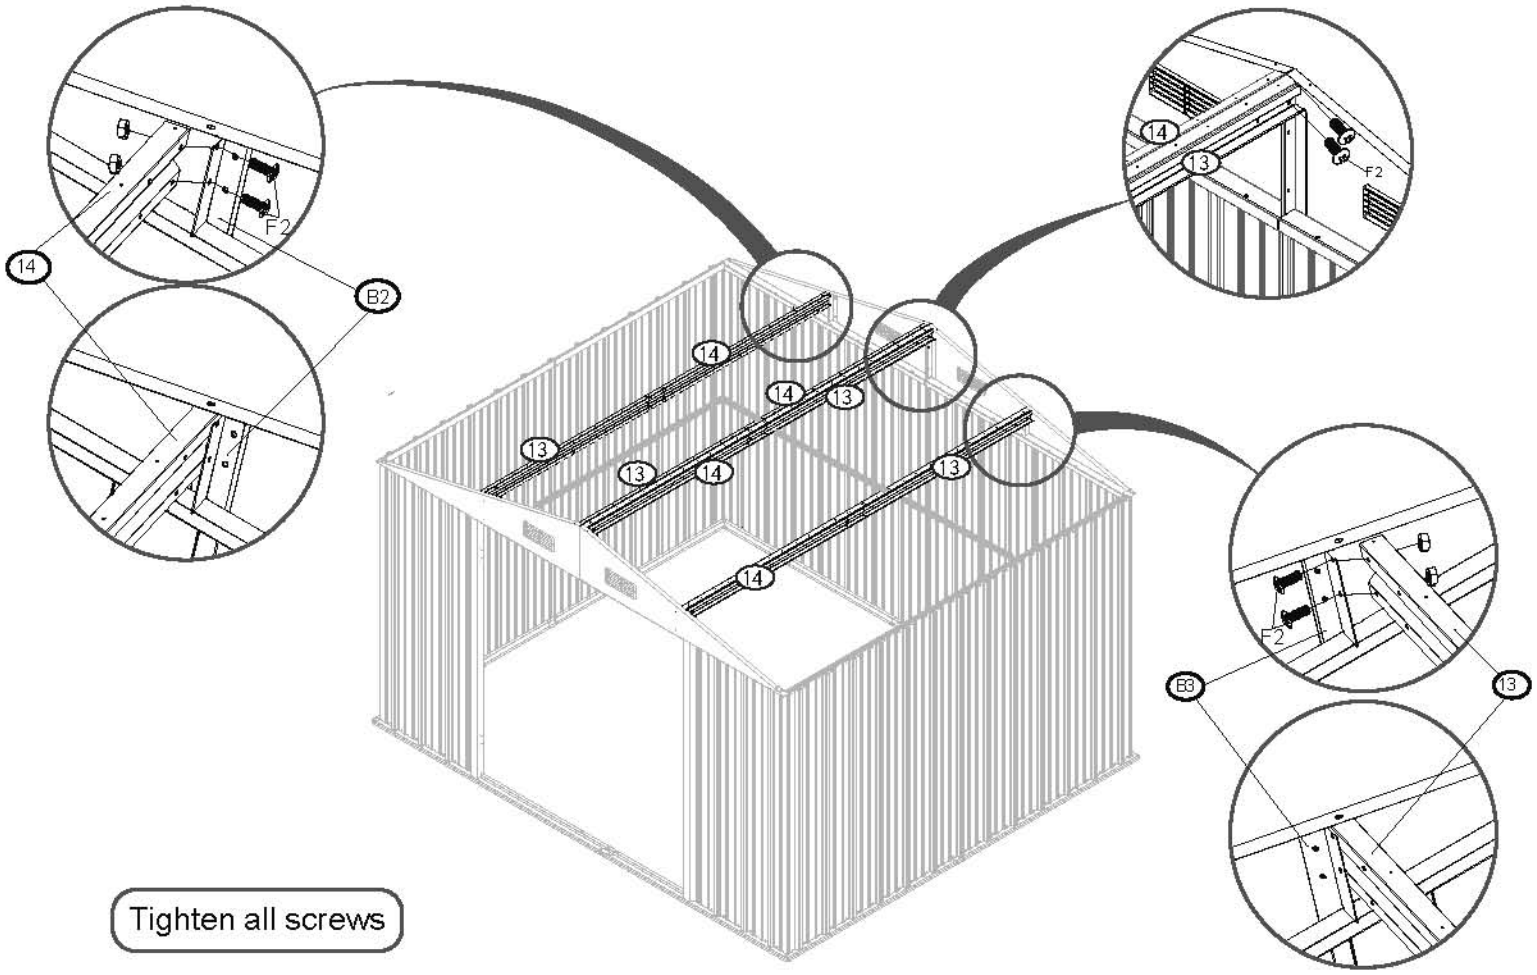


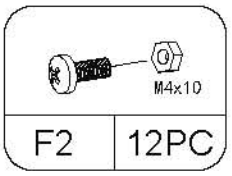


F1	32PC

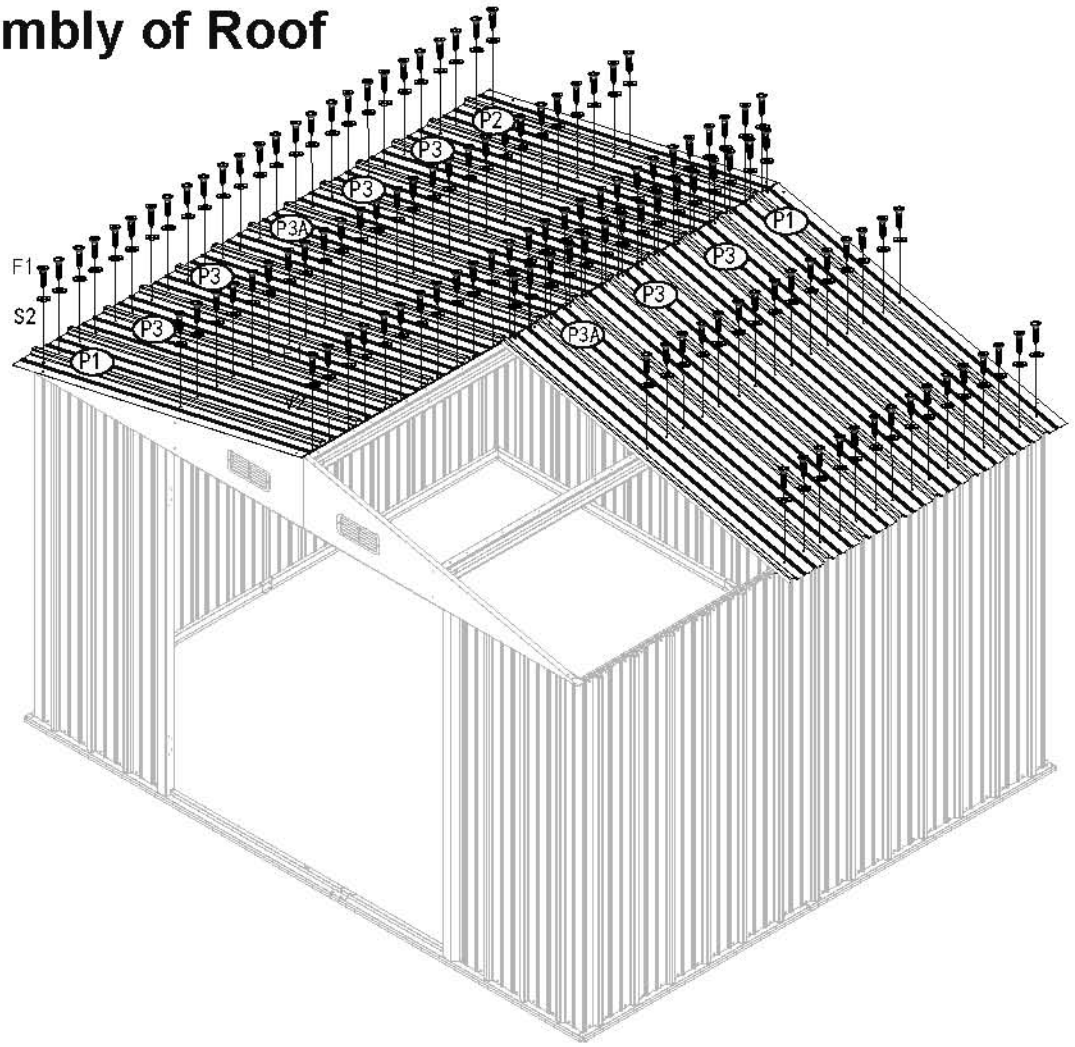



S2	32PC


14
F2
B2
14
13
F2
14
13
14
13
13
14
14
F2
B3
13
Tighten all screws



M4x10
F2
12PC

5.Assembly of Roof







P1	2PC




P2	1PC




P3	6PC



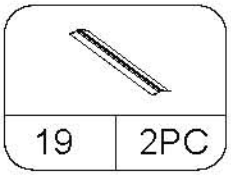
P3A	2PC



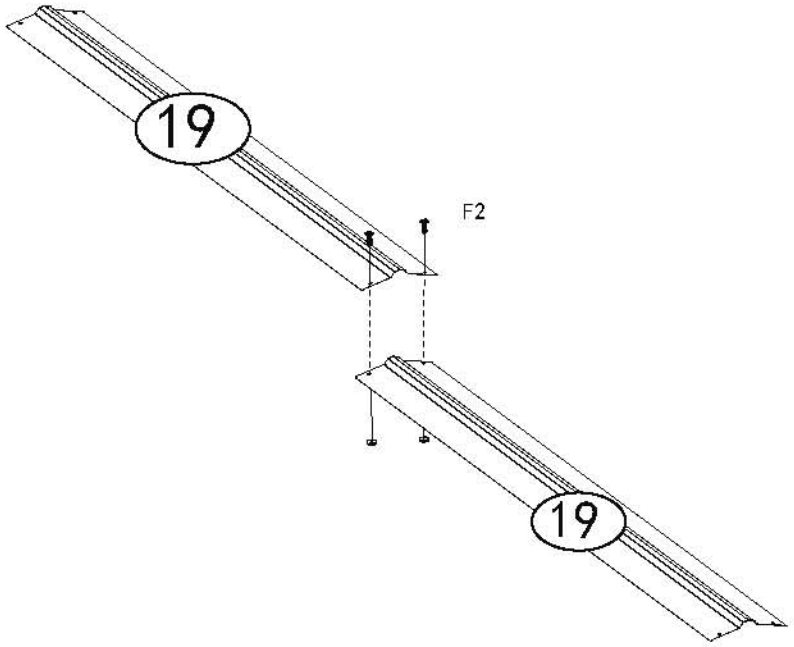
F1	123PC

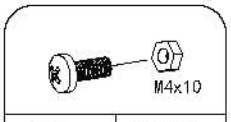


S2	123PC

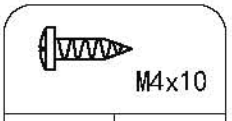


19	2PC

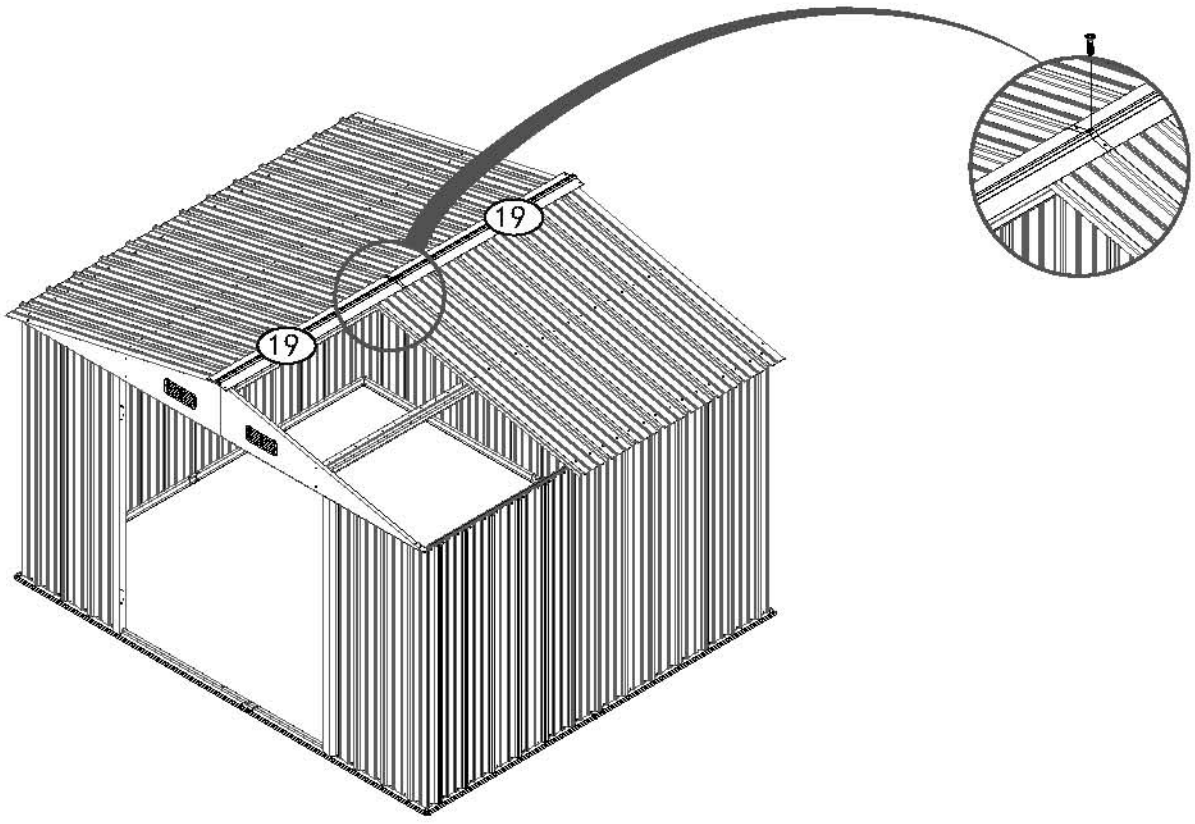




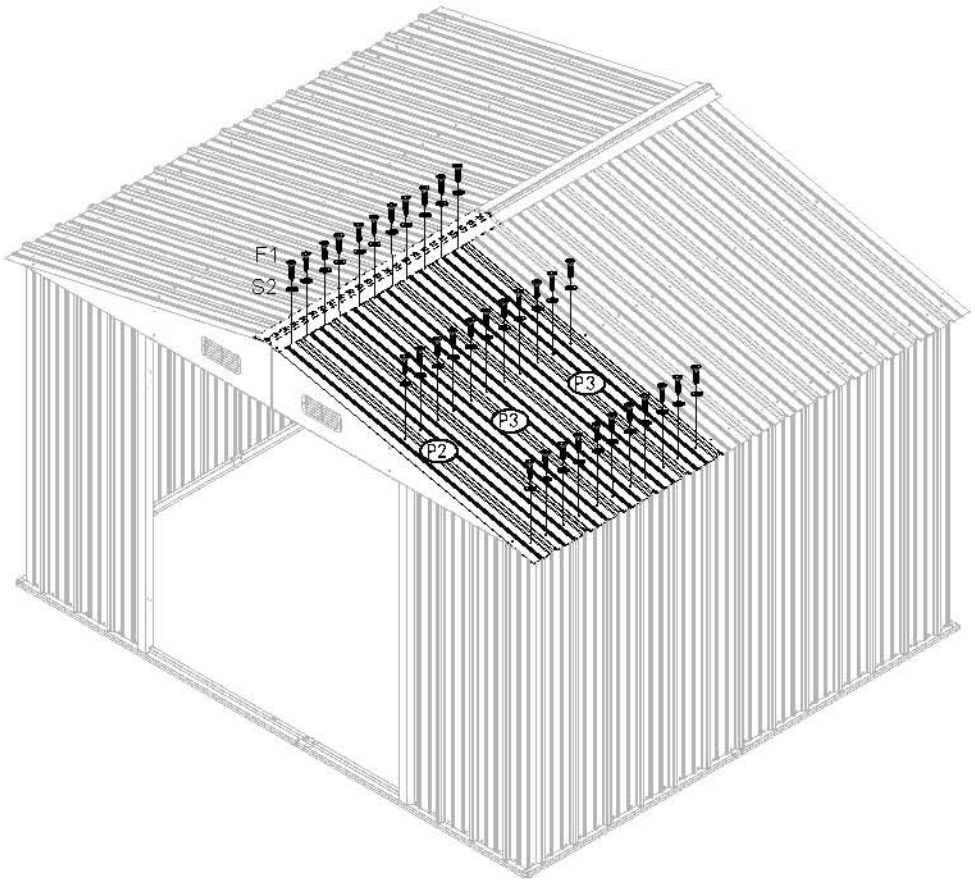
F2	2PC

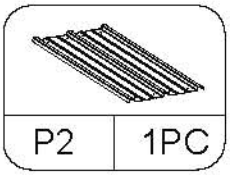


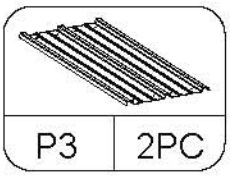
F1	1PC

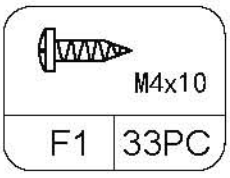


Installation tips: You need to gently lift the 19 and then screw it

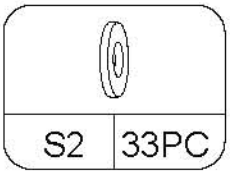


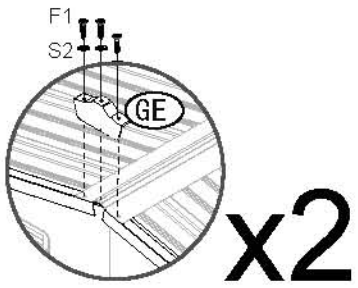

P2 1PC


P3 2PC

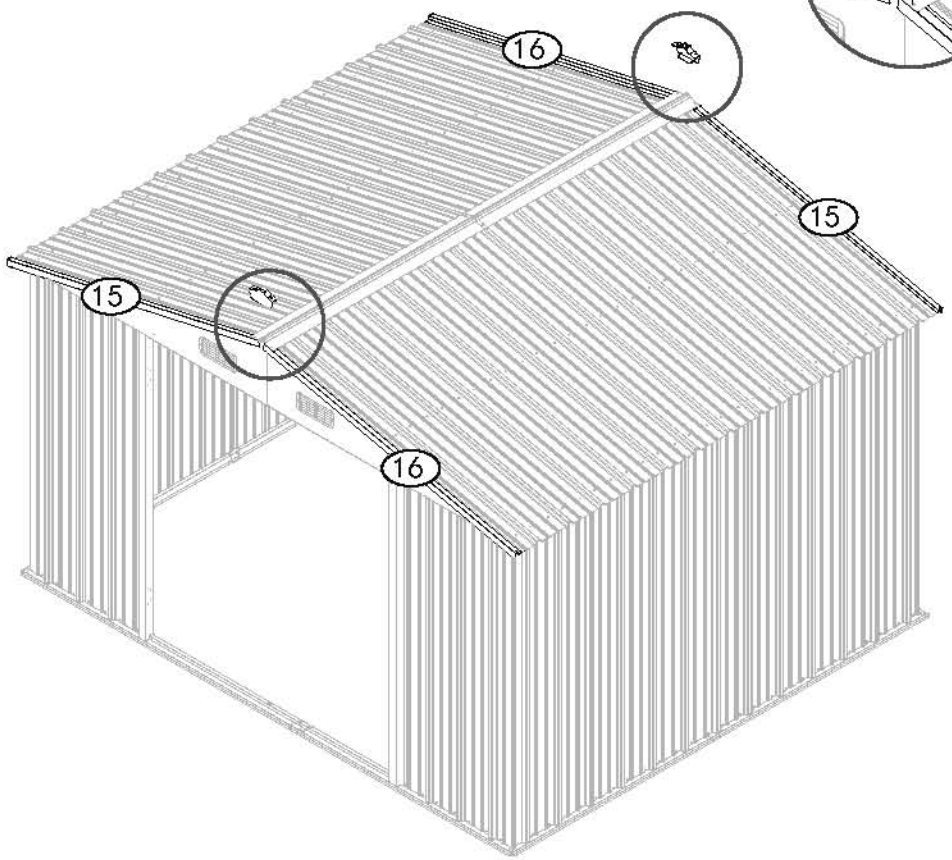


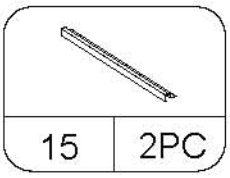
F1 33PC

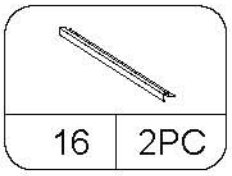

S2 33PC

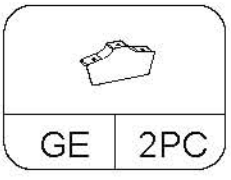


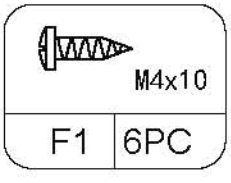
x2



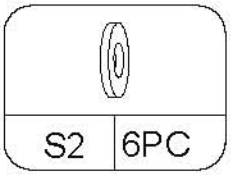

15 2PC

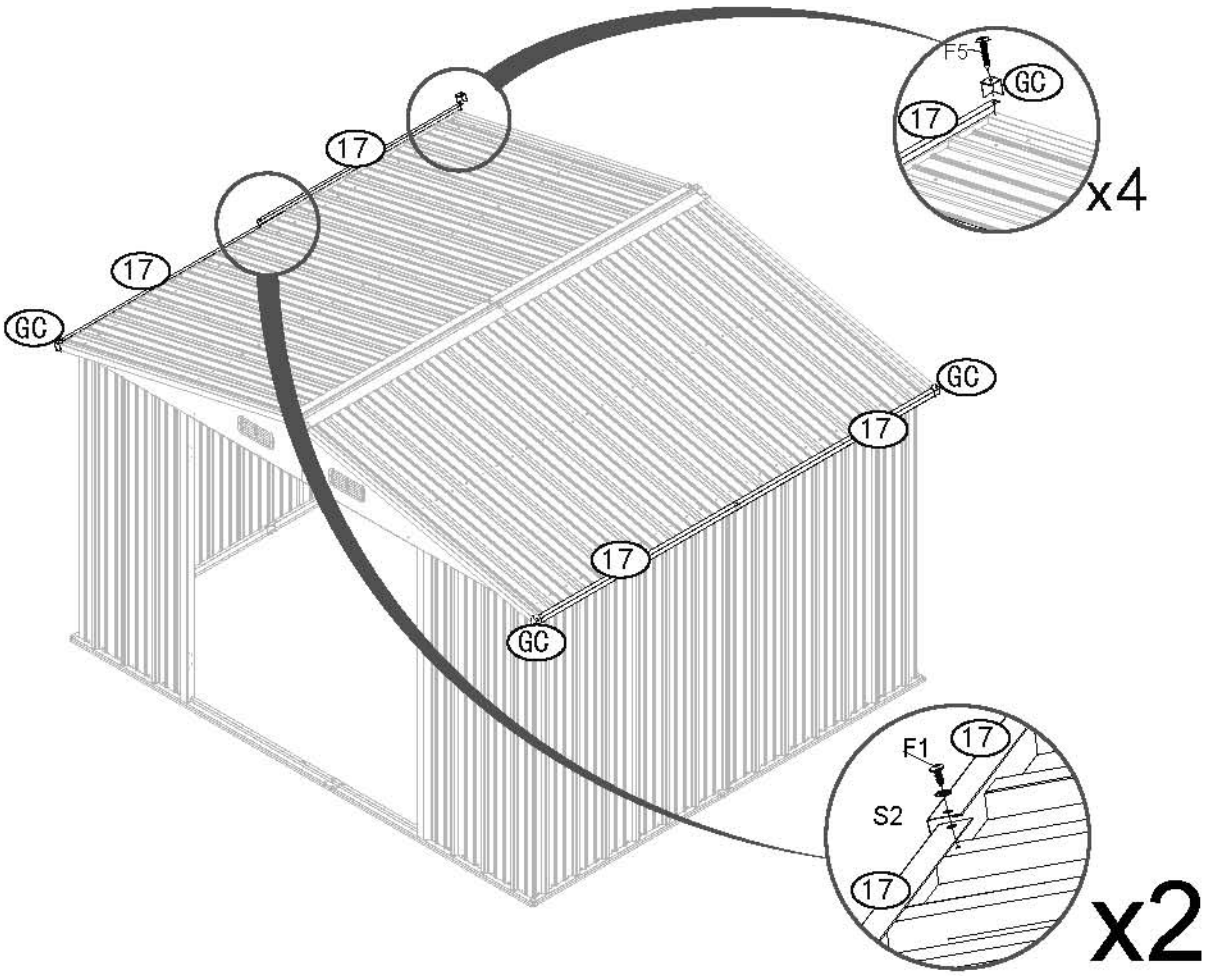

16 2PC


GE 2PC



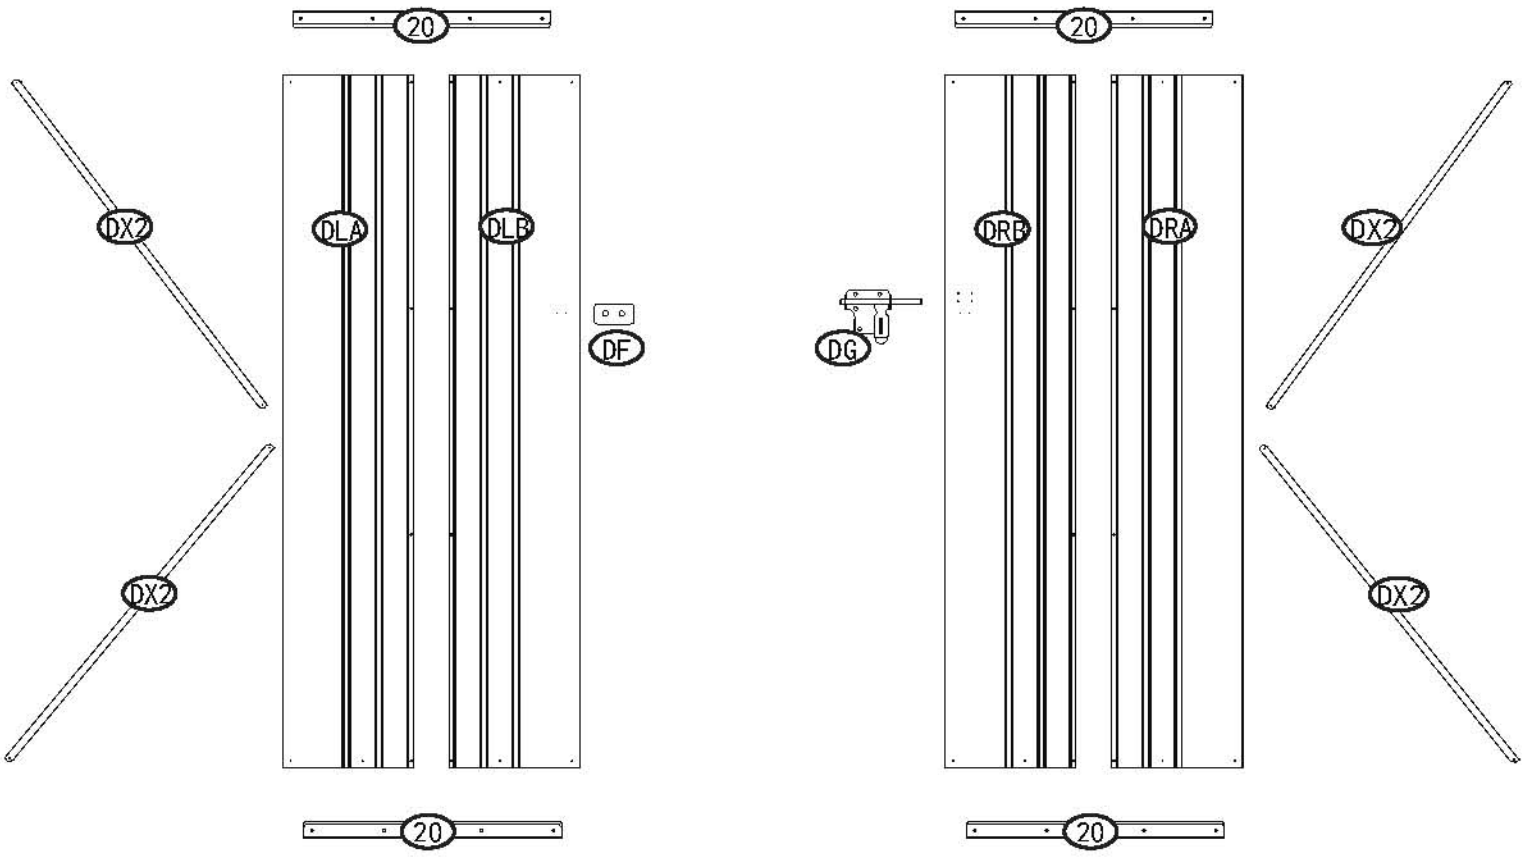
F1 6PC

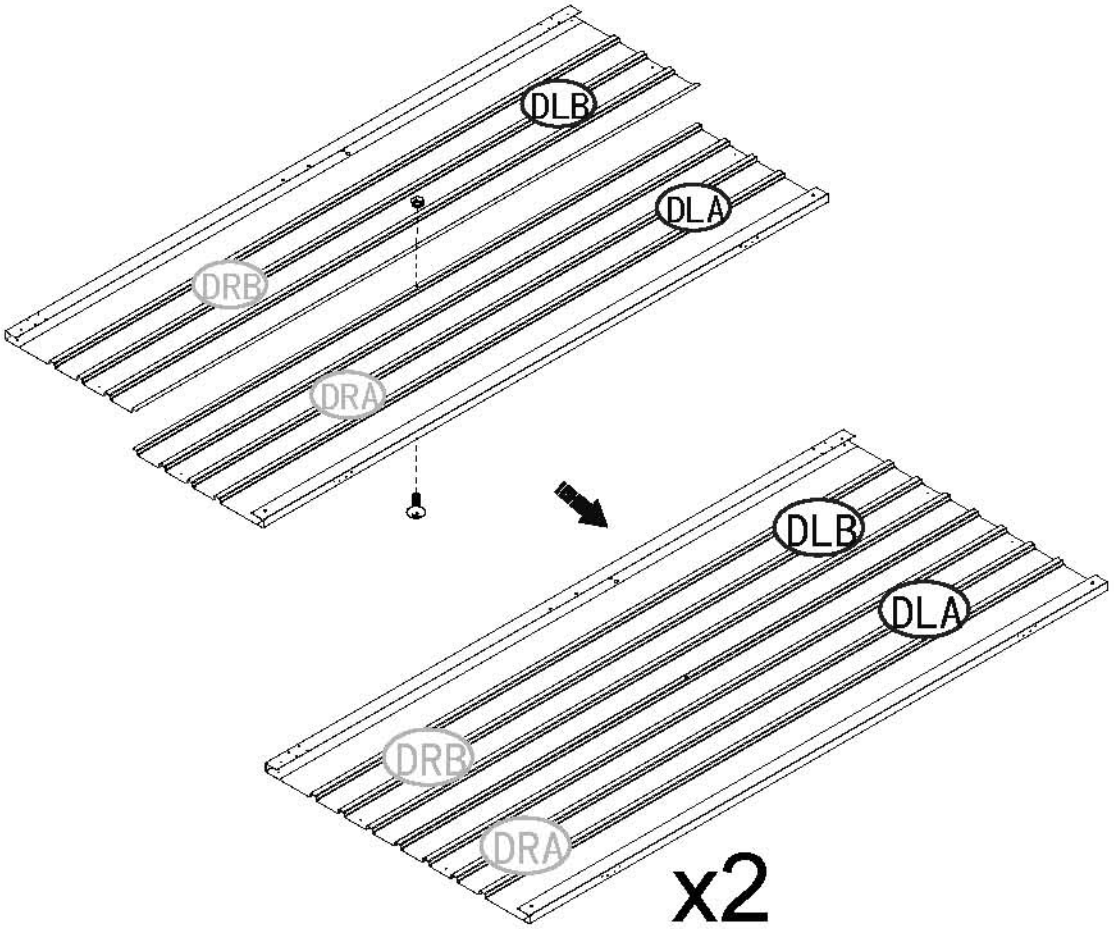

S2 6PC

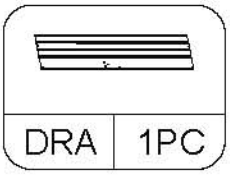


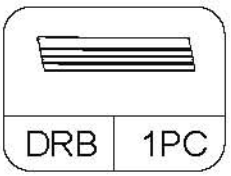
17	4PC
GC	4PC
F1	2PC
S2	2PC
F5	4PC

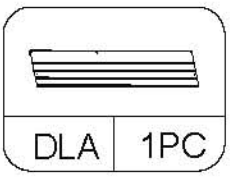
6.assembly of Door

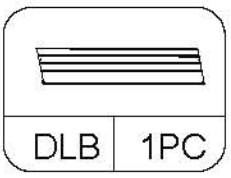


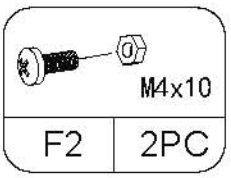

DLB
DLA
DRB
DRA
DLB
DLA
DRB
DRA
x2

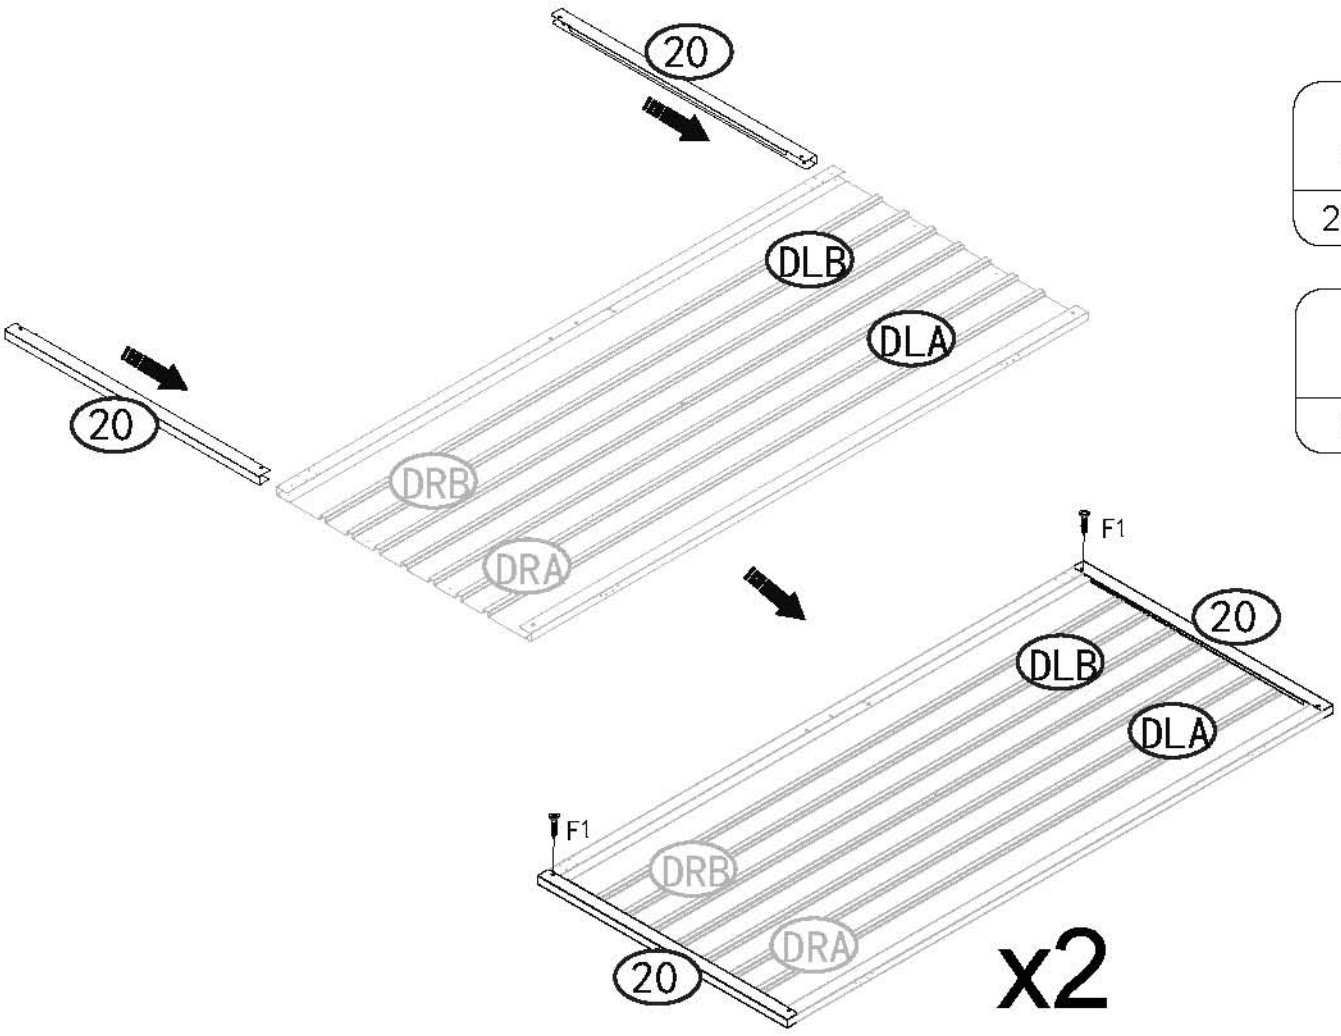

DRA
1PC

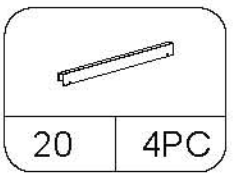

DRB
1PC

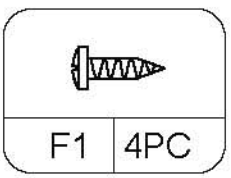

DLA
1PC

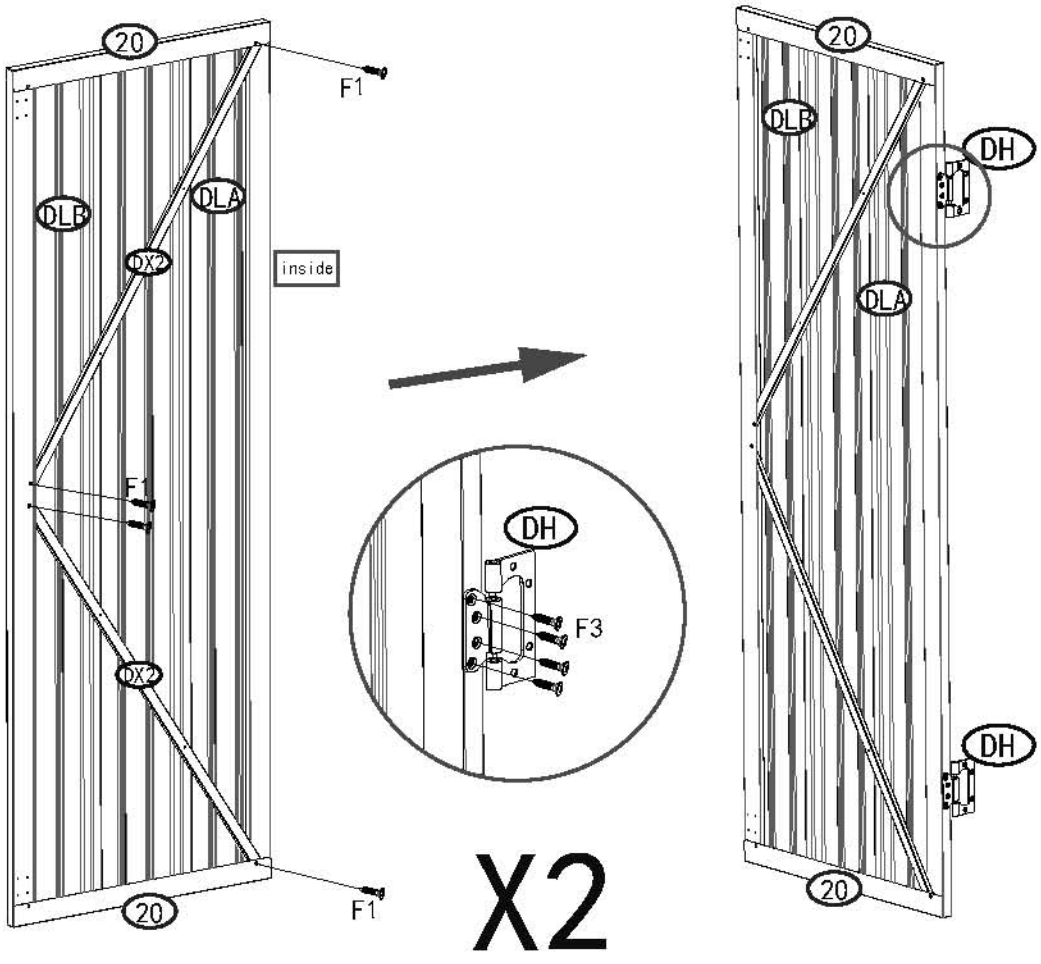

DLB
1PC


M4x10
F2
2PC


20
DLB
DLA
20
DRB
DRA
F1
20
DLB
DLA
F1
DRB
DRA
20
x2


20
4PC

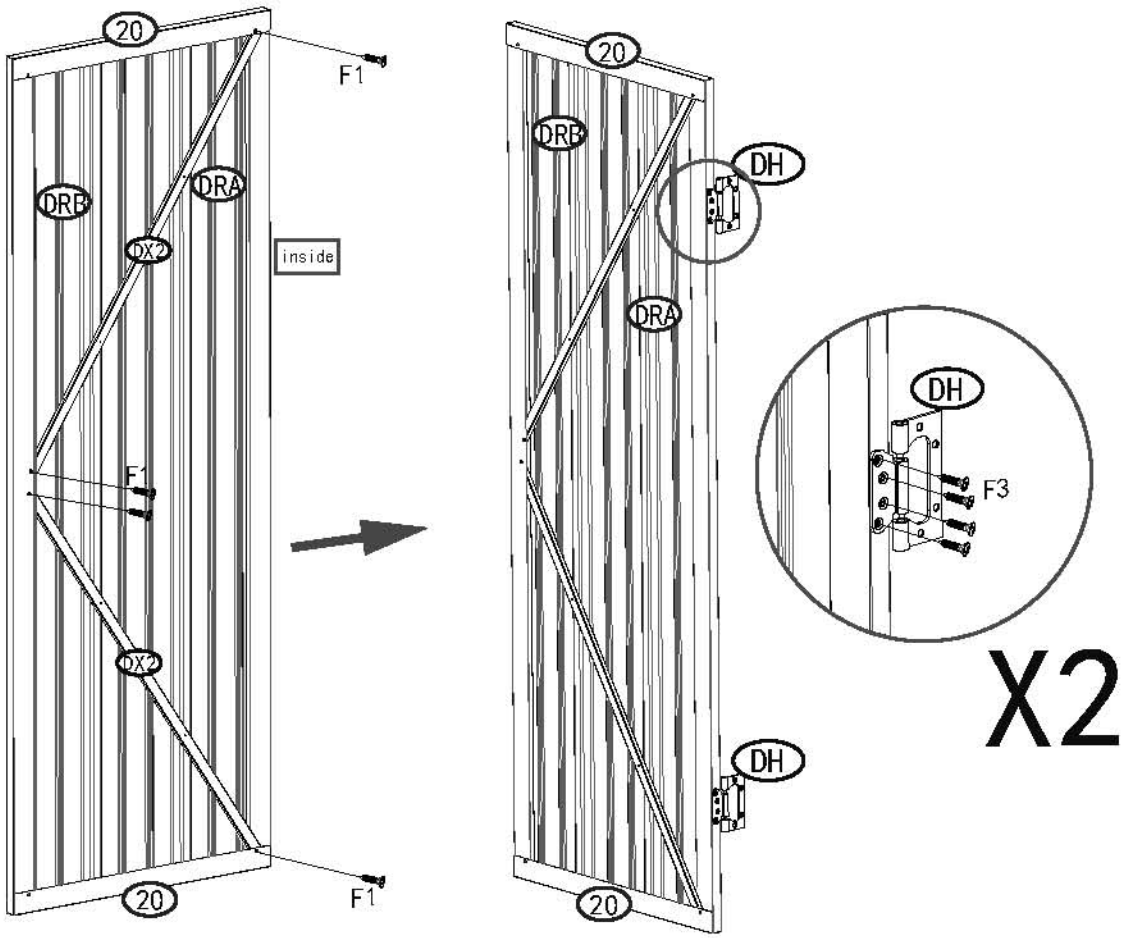

F1
4PC



DH	2 PC

M5x12	
F3	8 PC

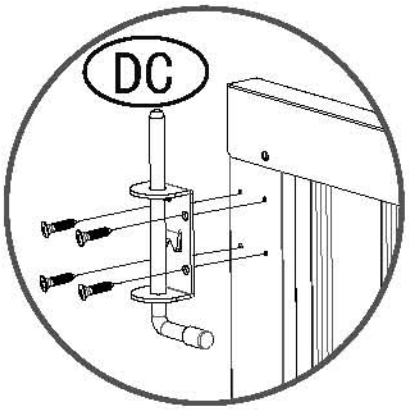
M4x10	
F1	4 PC

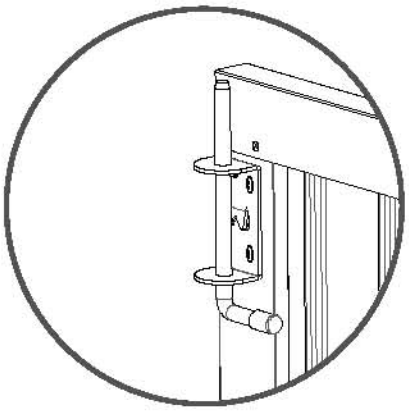


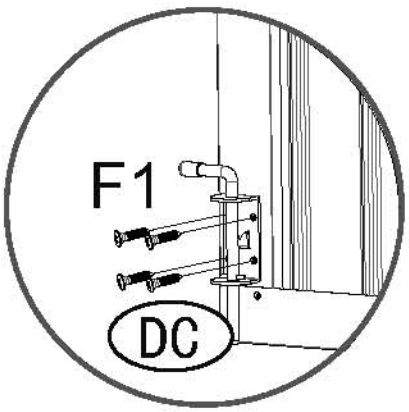
DH	2PC

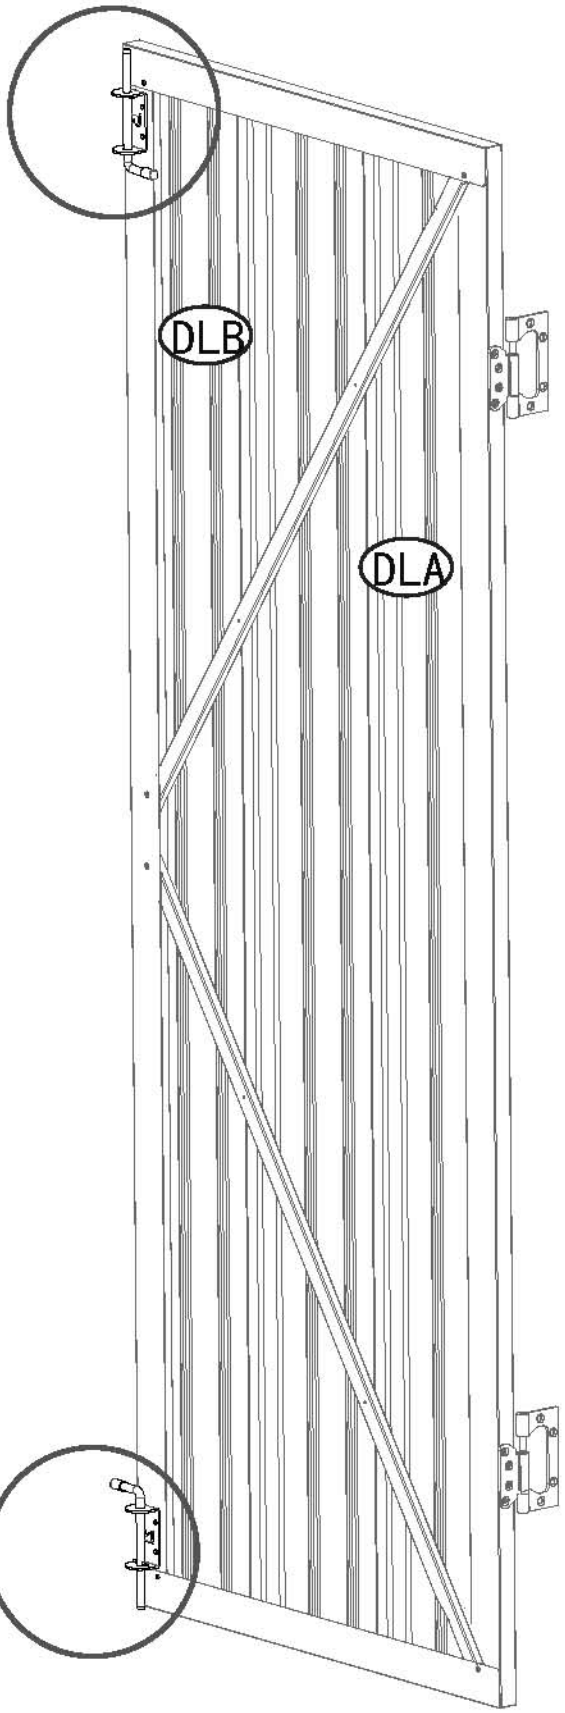
M5x12	
F3	8 PC

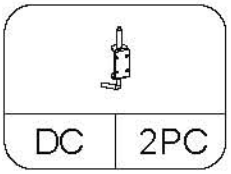
M4x10	
F1	4 PC

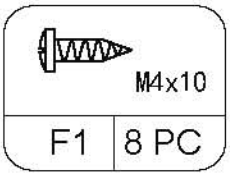

DC

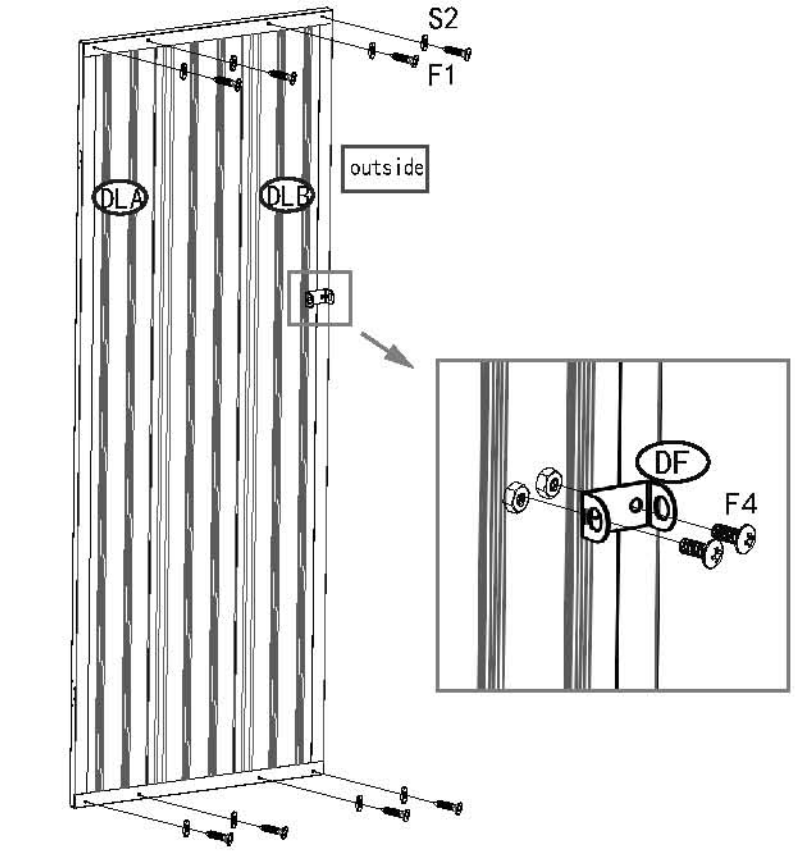


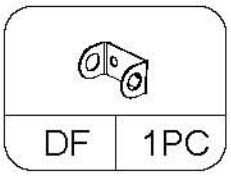

F1
DC

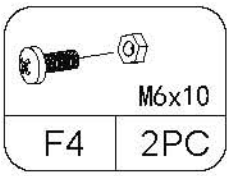

DLB
DLA

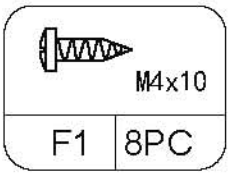

DC
2PC

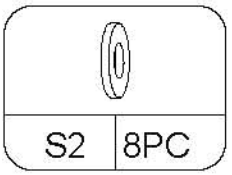

M4x10
F1
8 PC

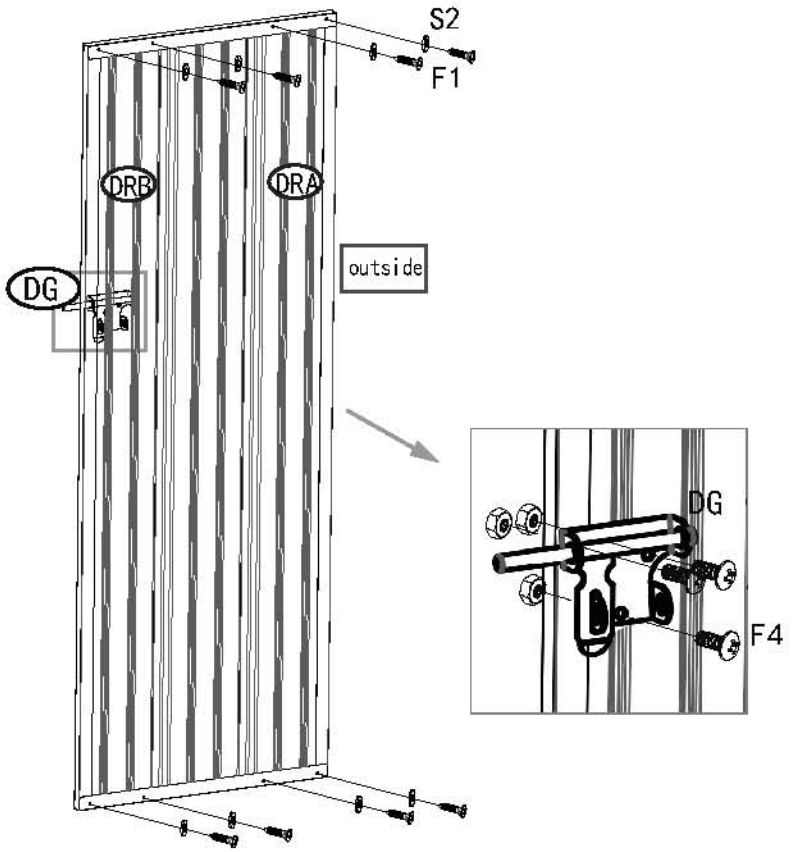

S2
F1
outside
DLA
DLB
DF
F4

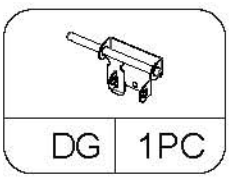

DF
1PC

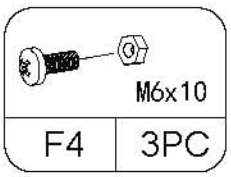

M6x10
F4
2PC

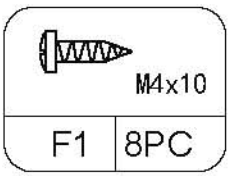

M4x10
F1
8PC

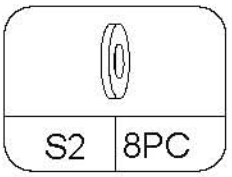

S2
8PC

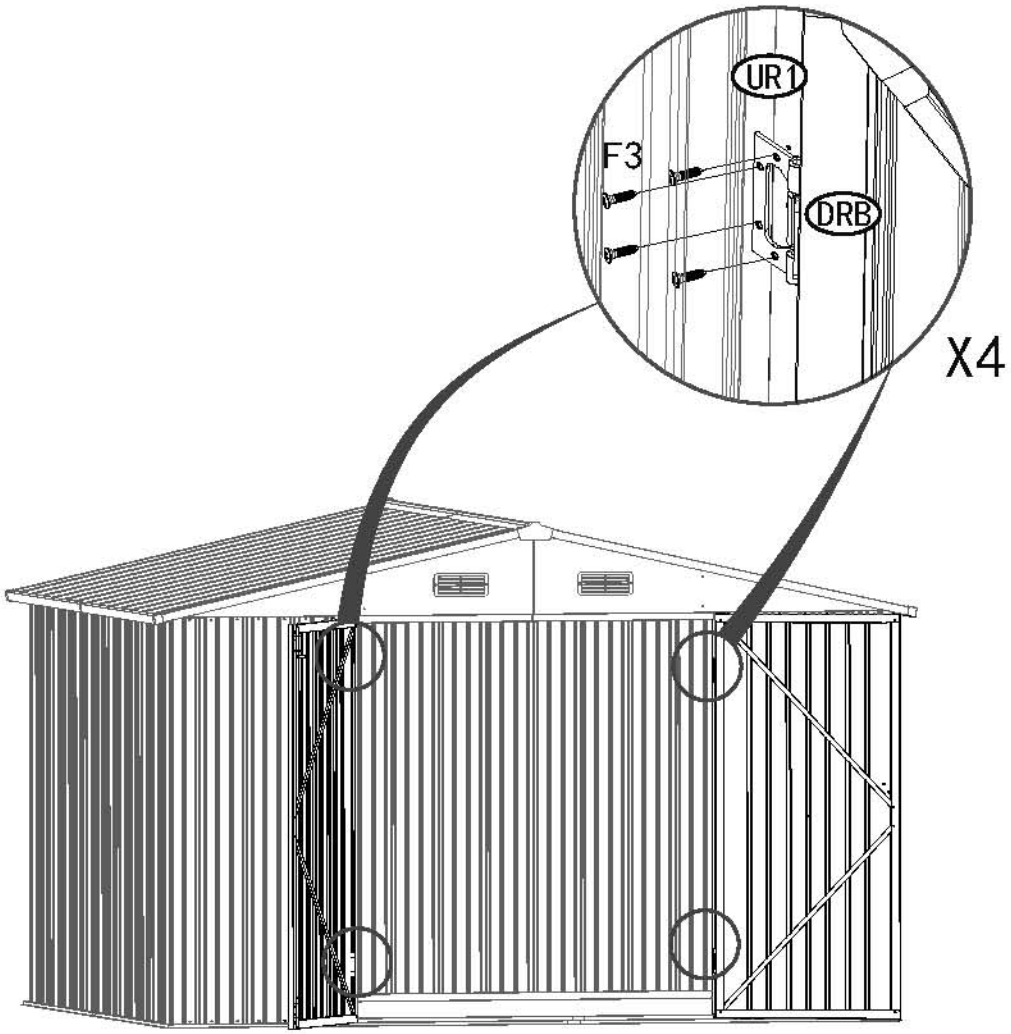

S2
F1
DRB
DRA
outside
DG
DG
F4

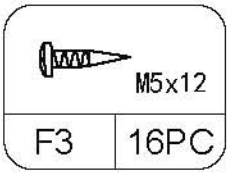

DG
1PC

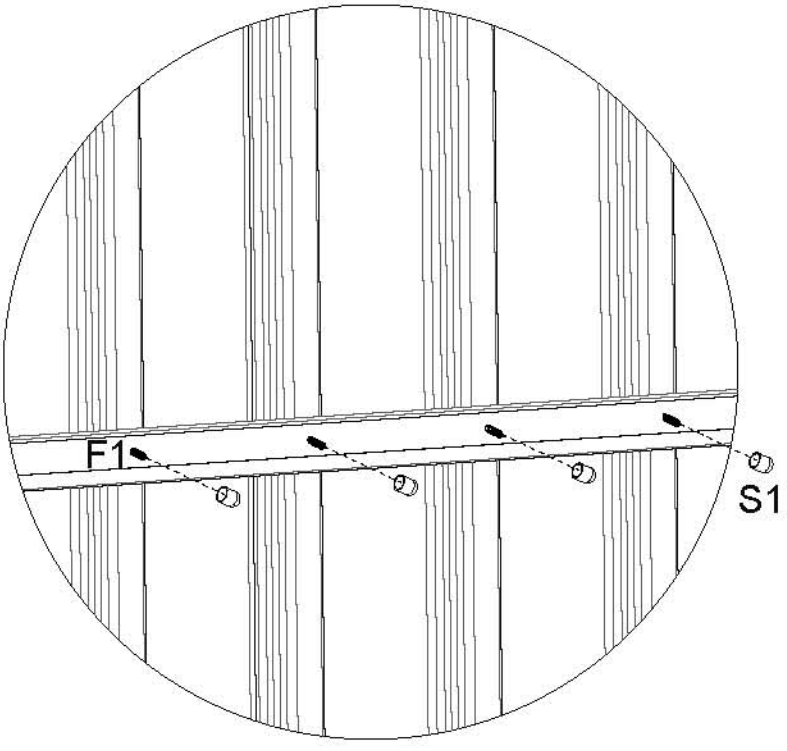

M6x10
F4
3PC

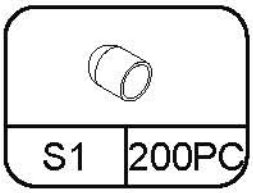

M4x10
F1
8PC


S2
8PC


UR1
F3
DRB
X4


M5x12
F3
16PC


F1
S1


S1
200PC

