

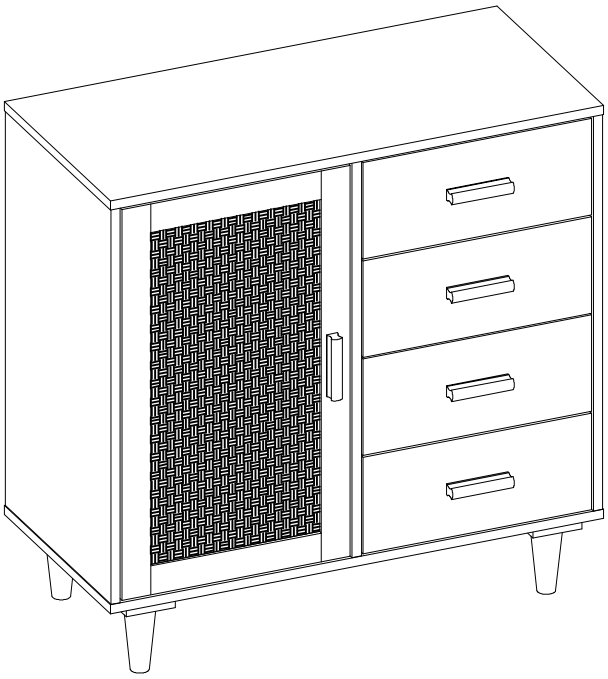




①
②
③
④
⑤
⑥
⑦
⑧
⑨
⑩
⑪
⑫
⑬
⑭
⑮
⑯

NOTE:Pull inner and outer drawer runners apart before fixing them to poanels.

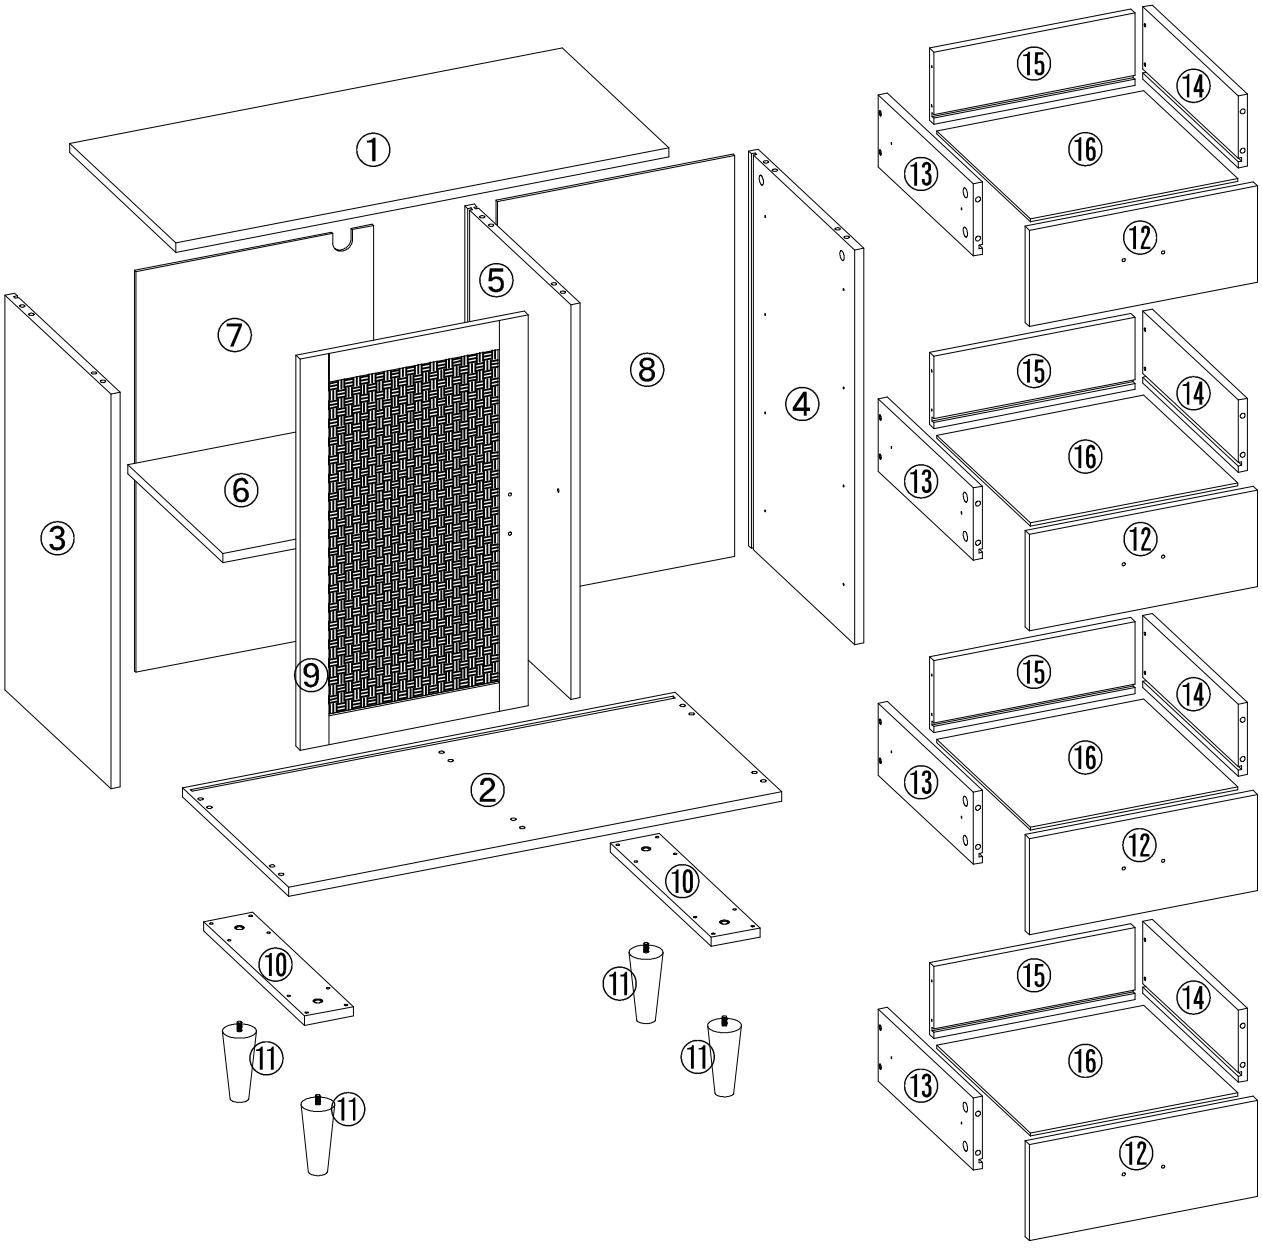


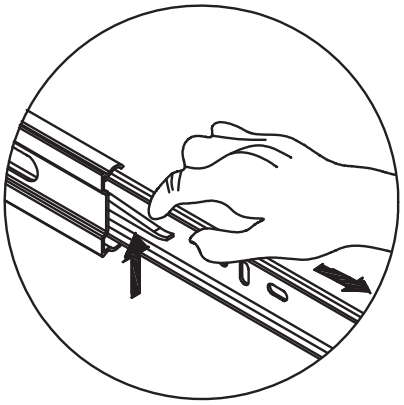


Slide drawer runners apart until the drawer lock can be seen, as shown.










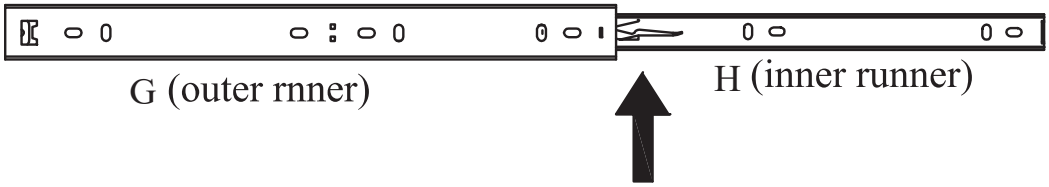


Press and hold the drawer runner lock upwards then continue to slide drawer runner apart, as shown.

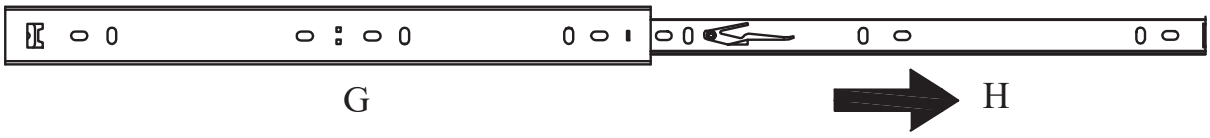


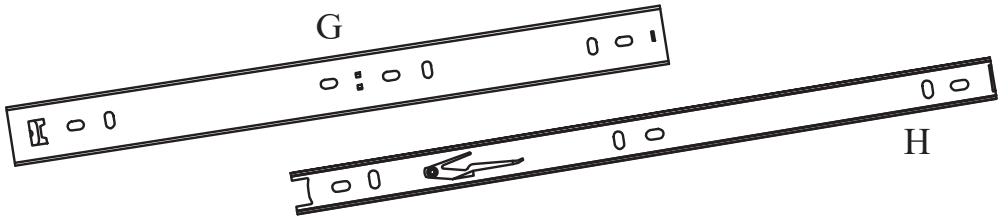


Your inner and outer drawer runners are ready to be fixed to panels.

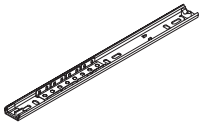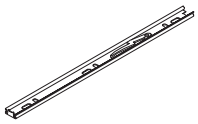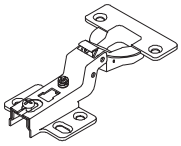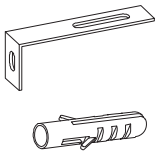A	B	C	D	E	F
				 M3.5*14mm	 M3.5*35mm
22	22	12	6	47	17
G	H	I	J	K	L
			 M4*20mm		
8	8	5	10	2	4
M	N	O	P	Q	S
 6*30mm	 M3.5*25mm				
1	16	4	1	1	6


Step1

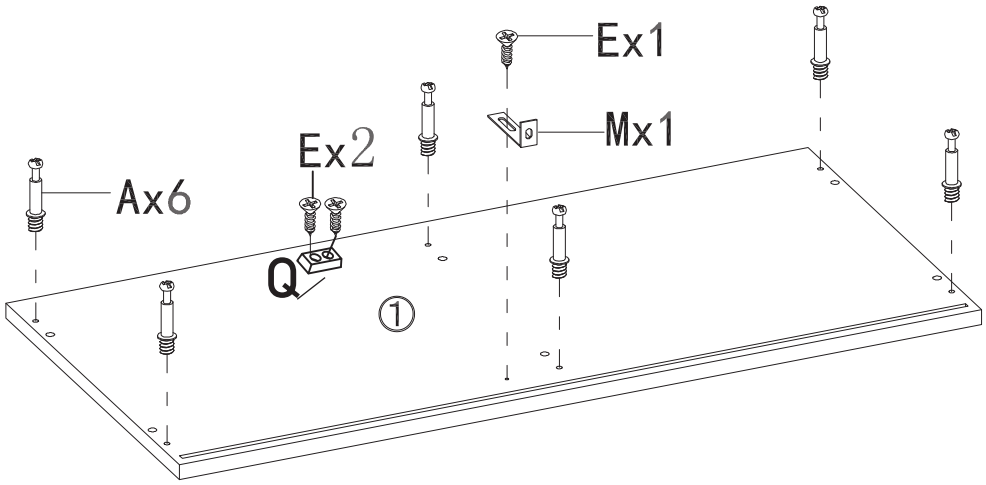


Step2

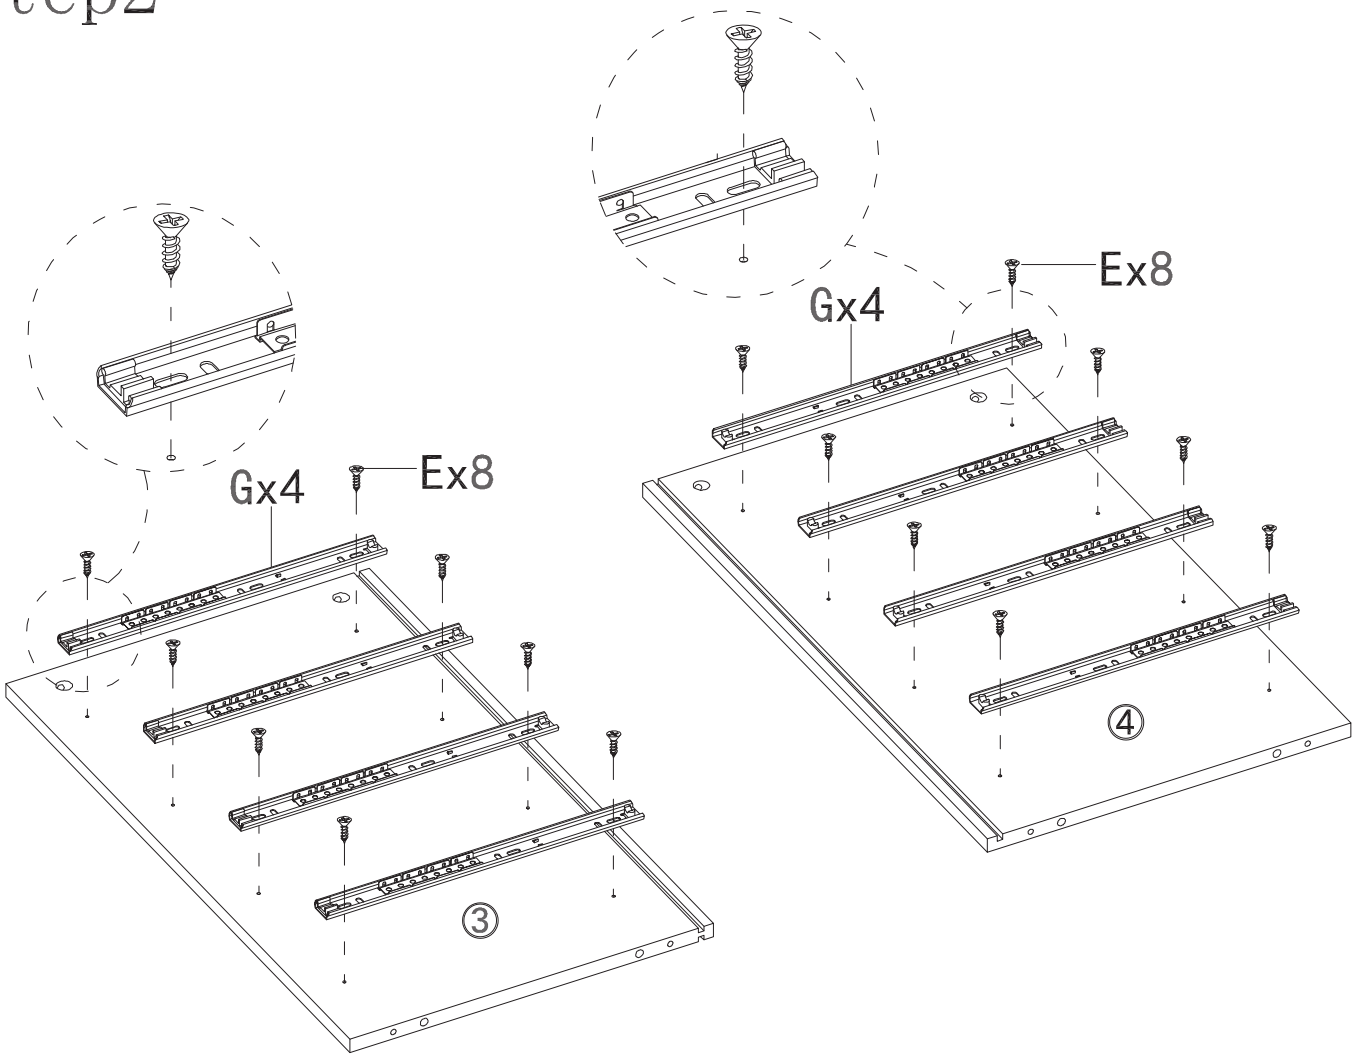


Step3

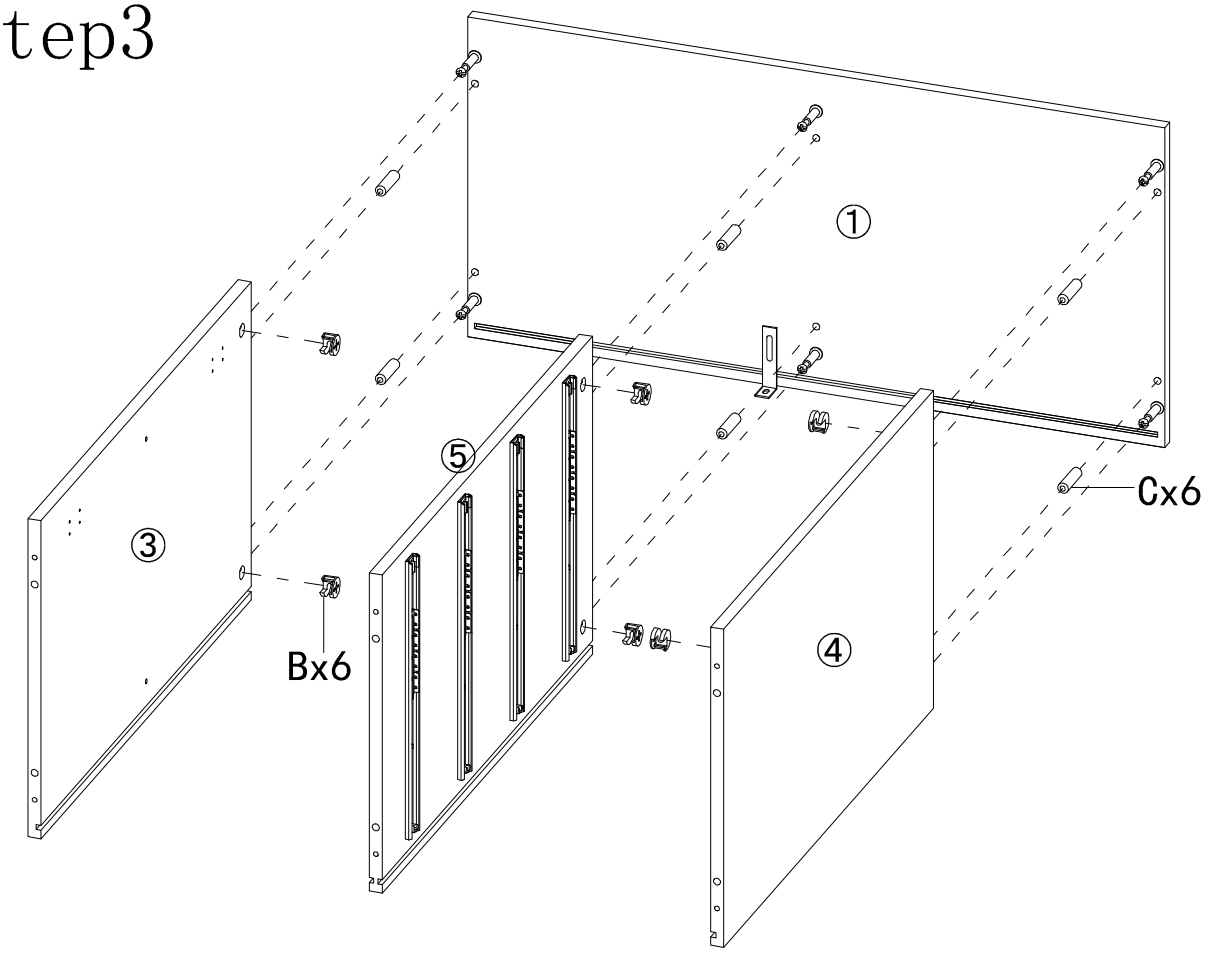


Step4

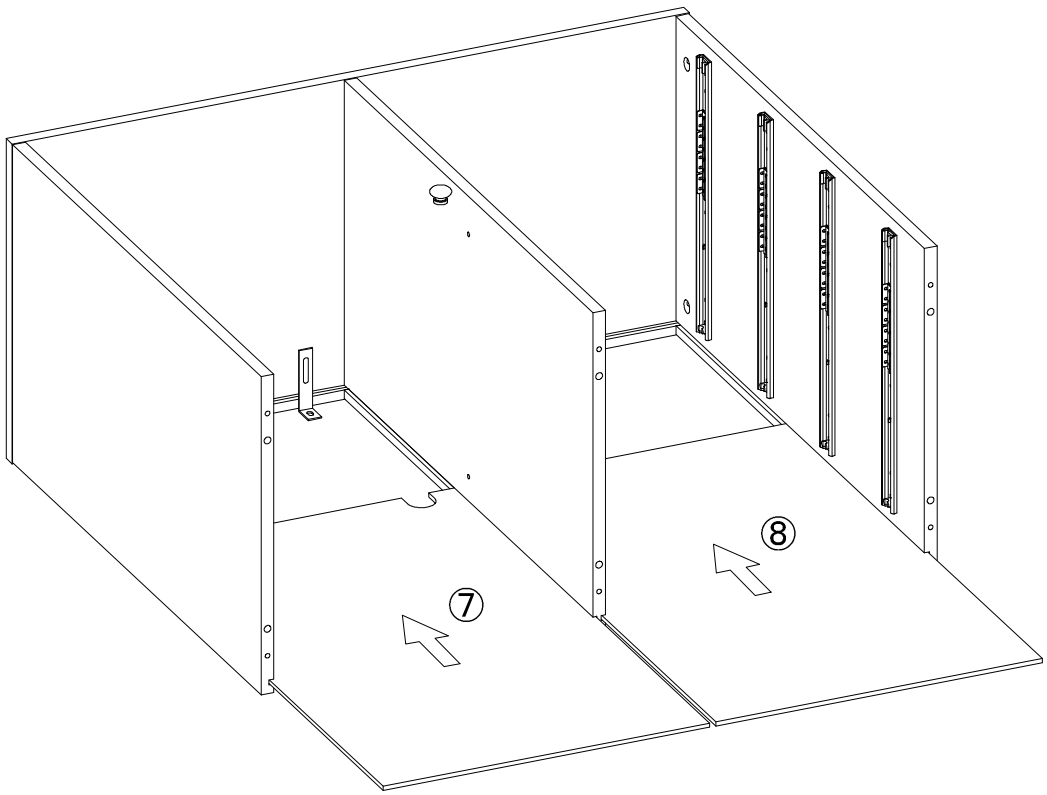


Step5

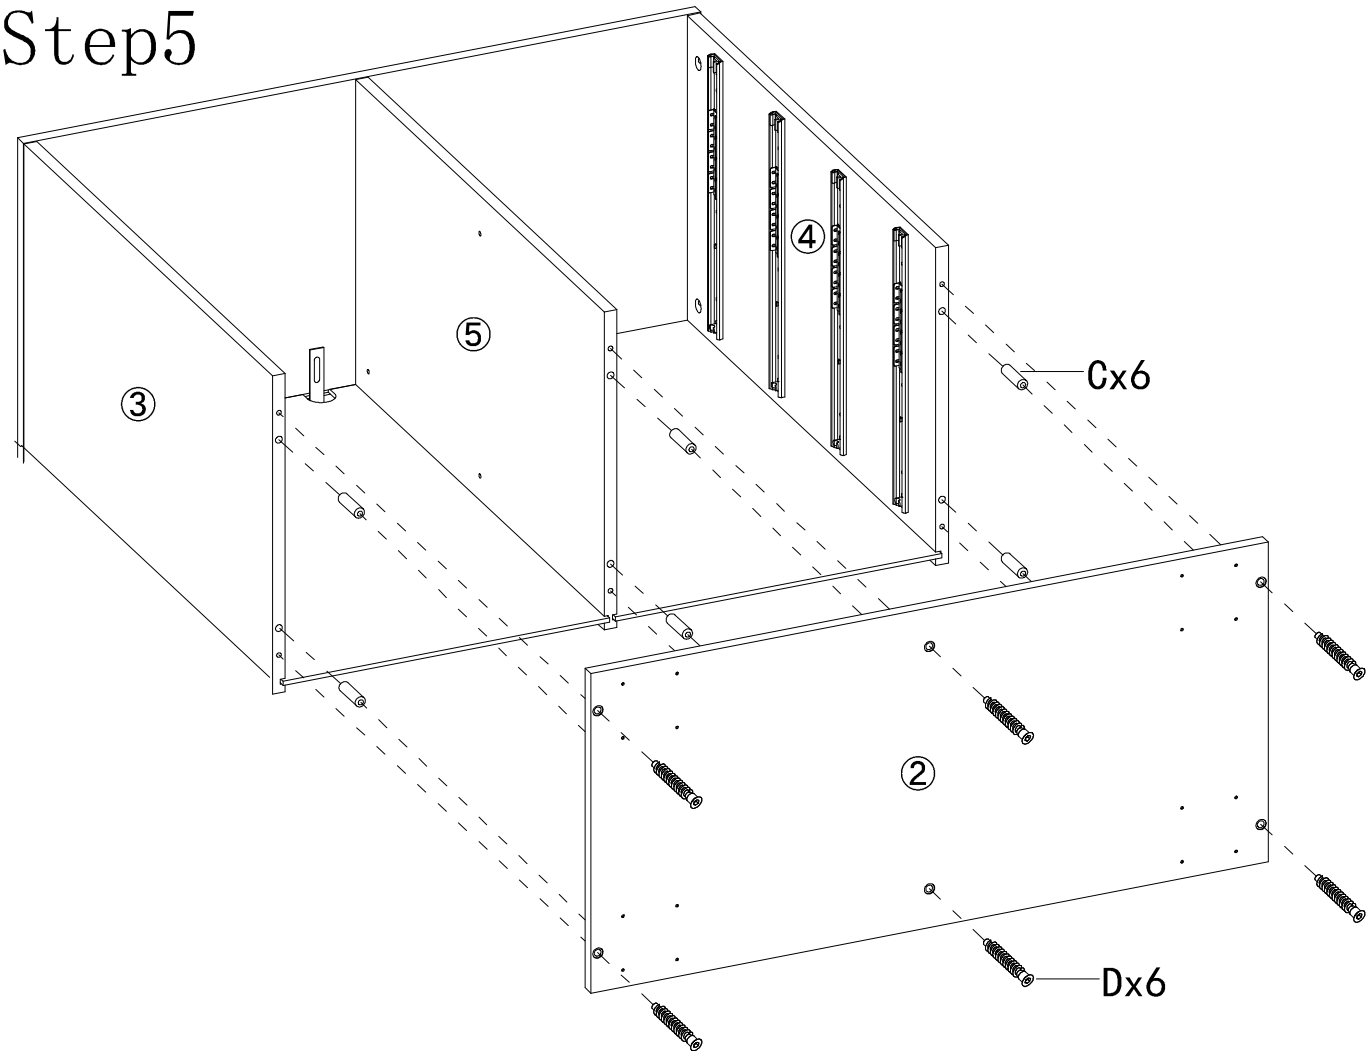


Step6

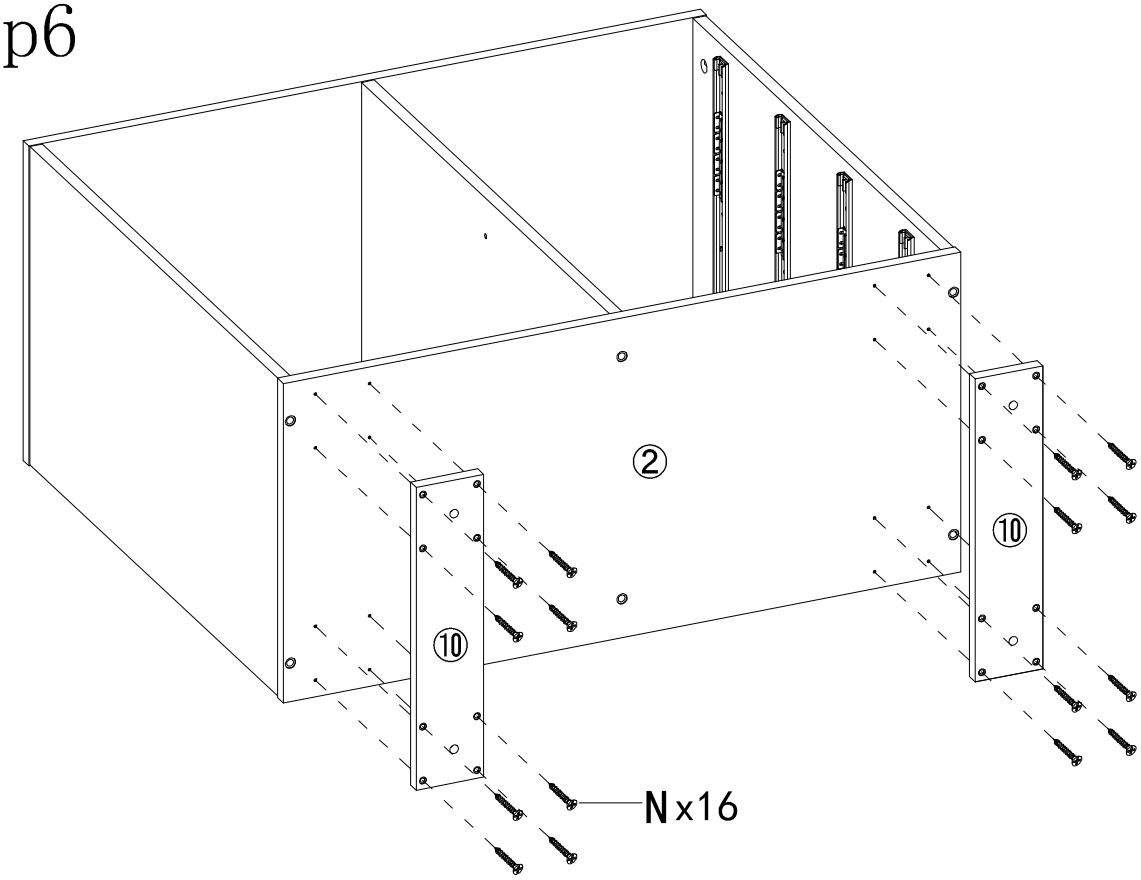


Step7

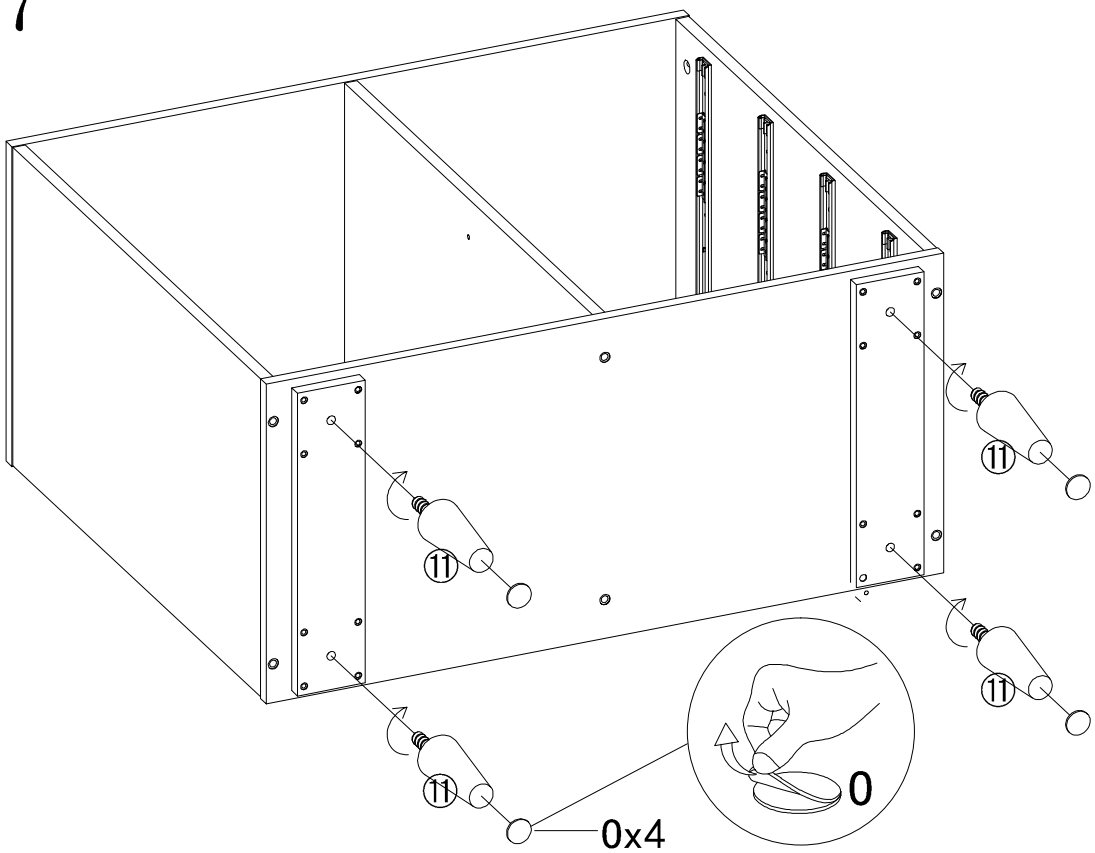

Step8

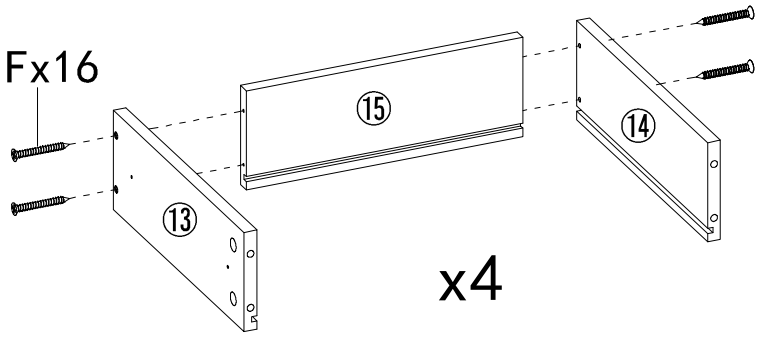


x4

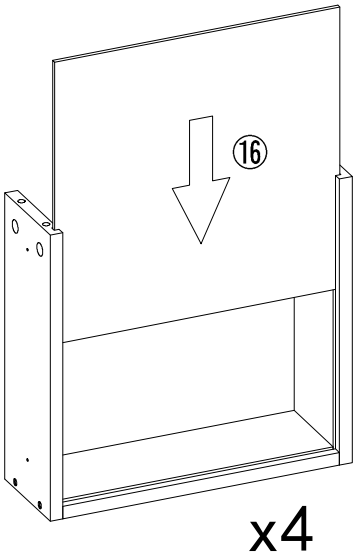


x4

Step9

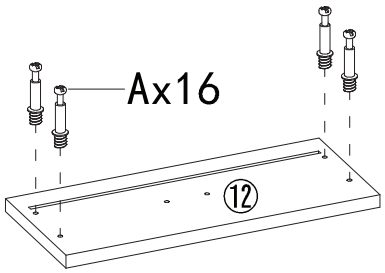


x4

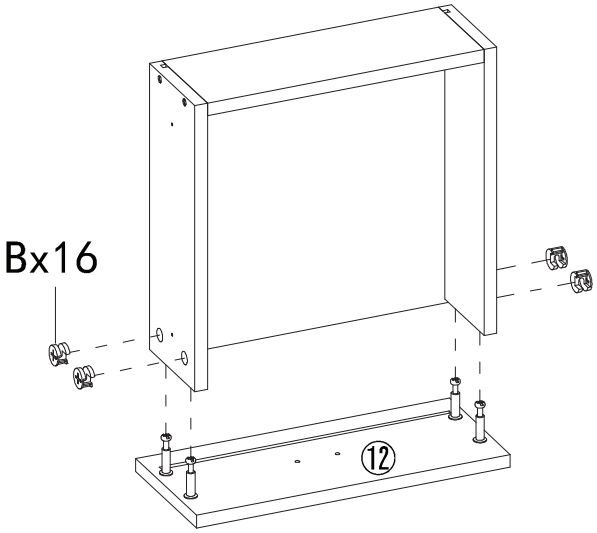


x4

Step10

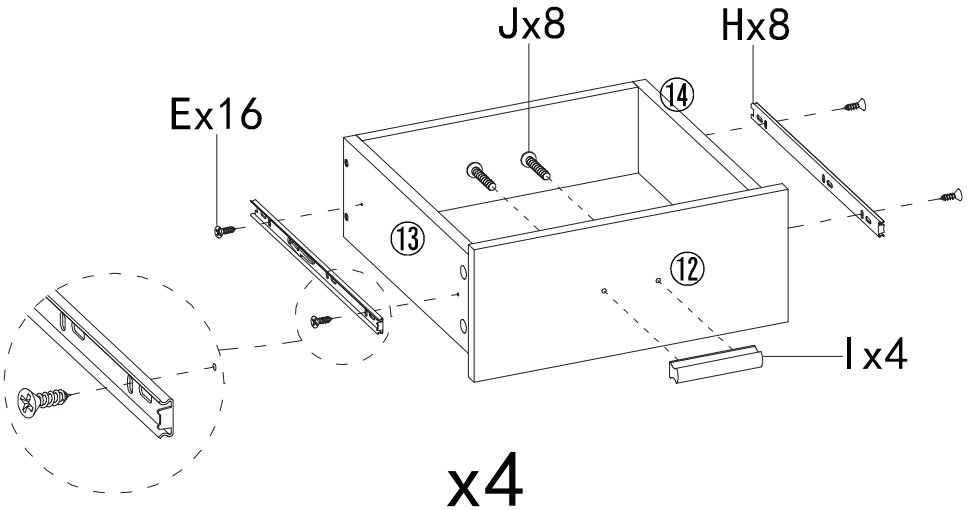


x4


Step11

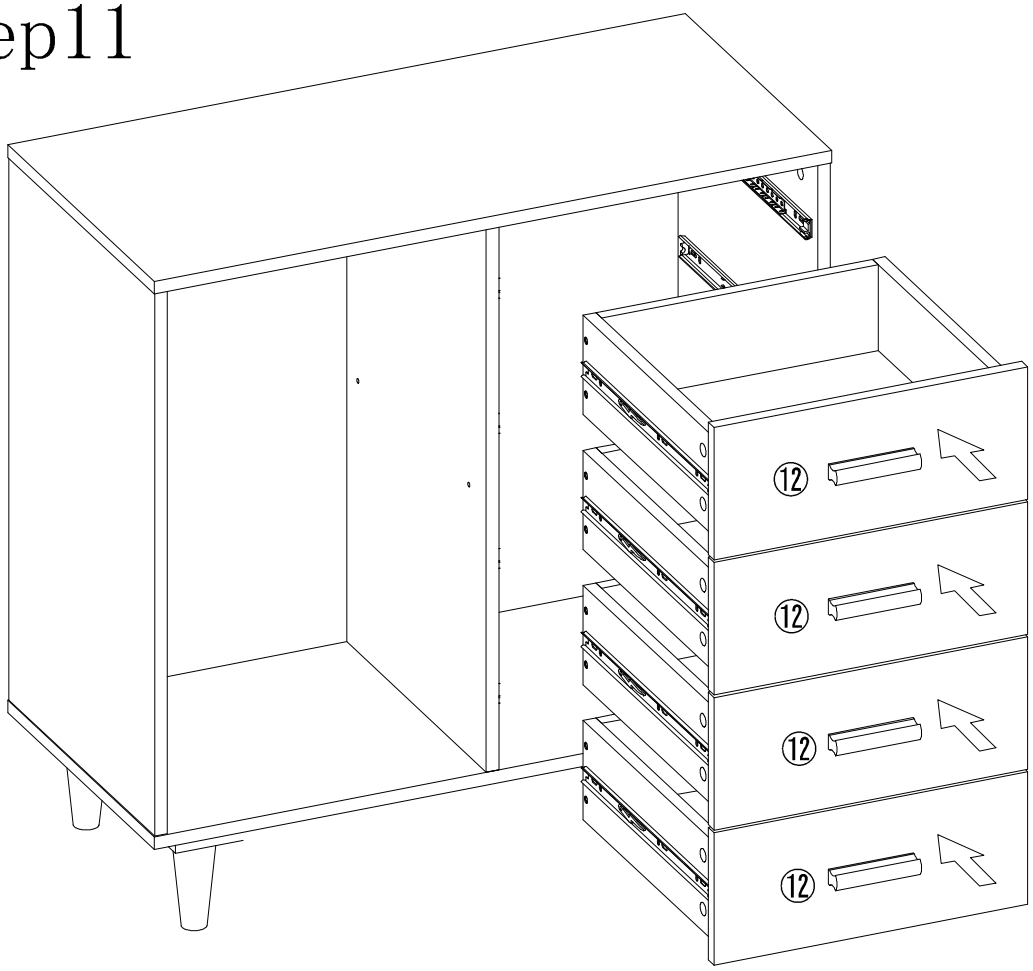


Step12

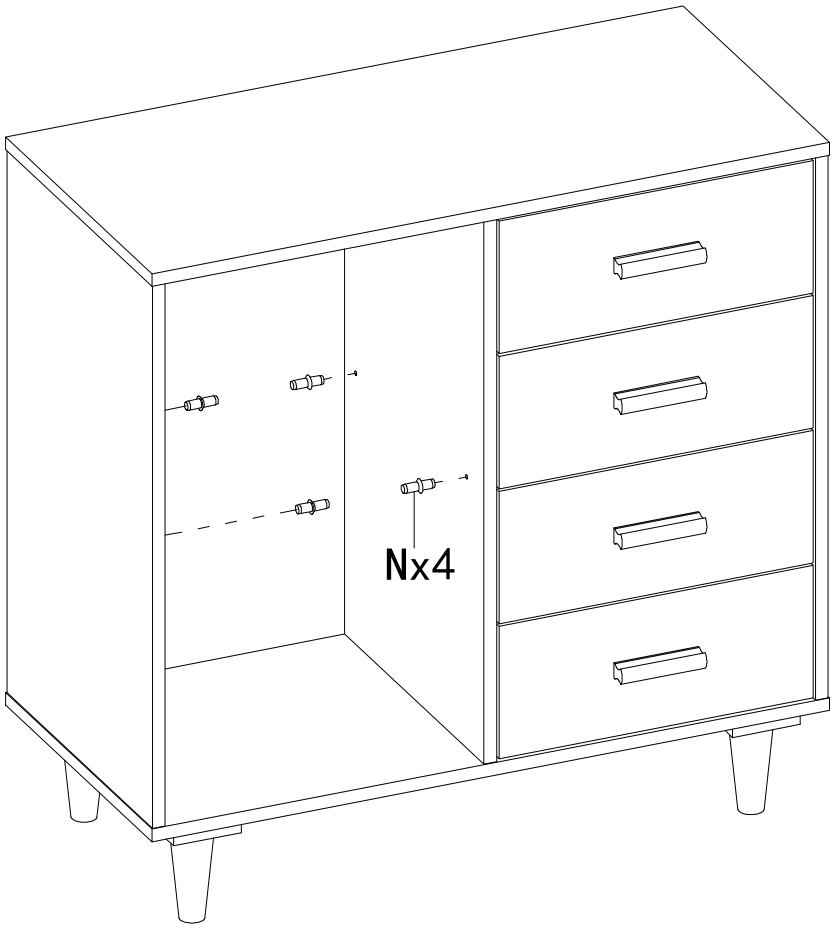


Step13

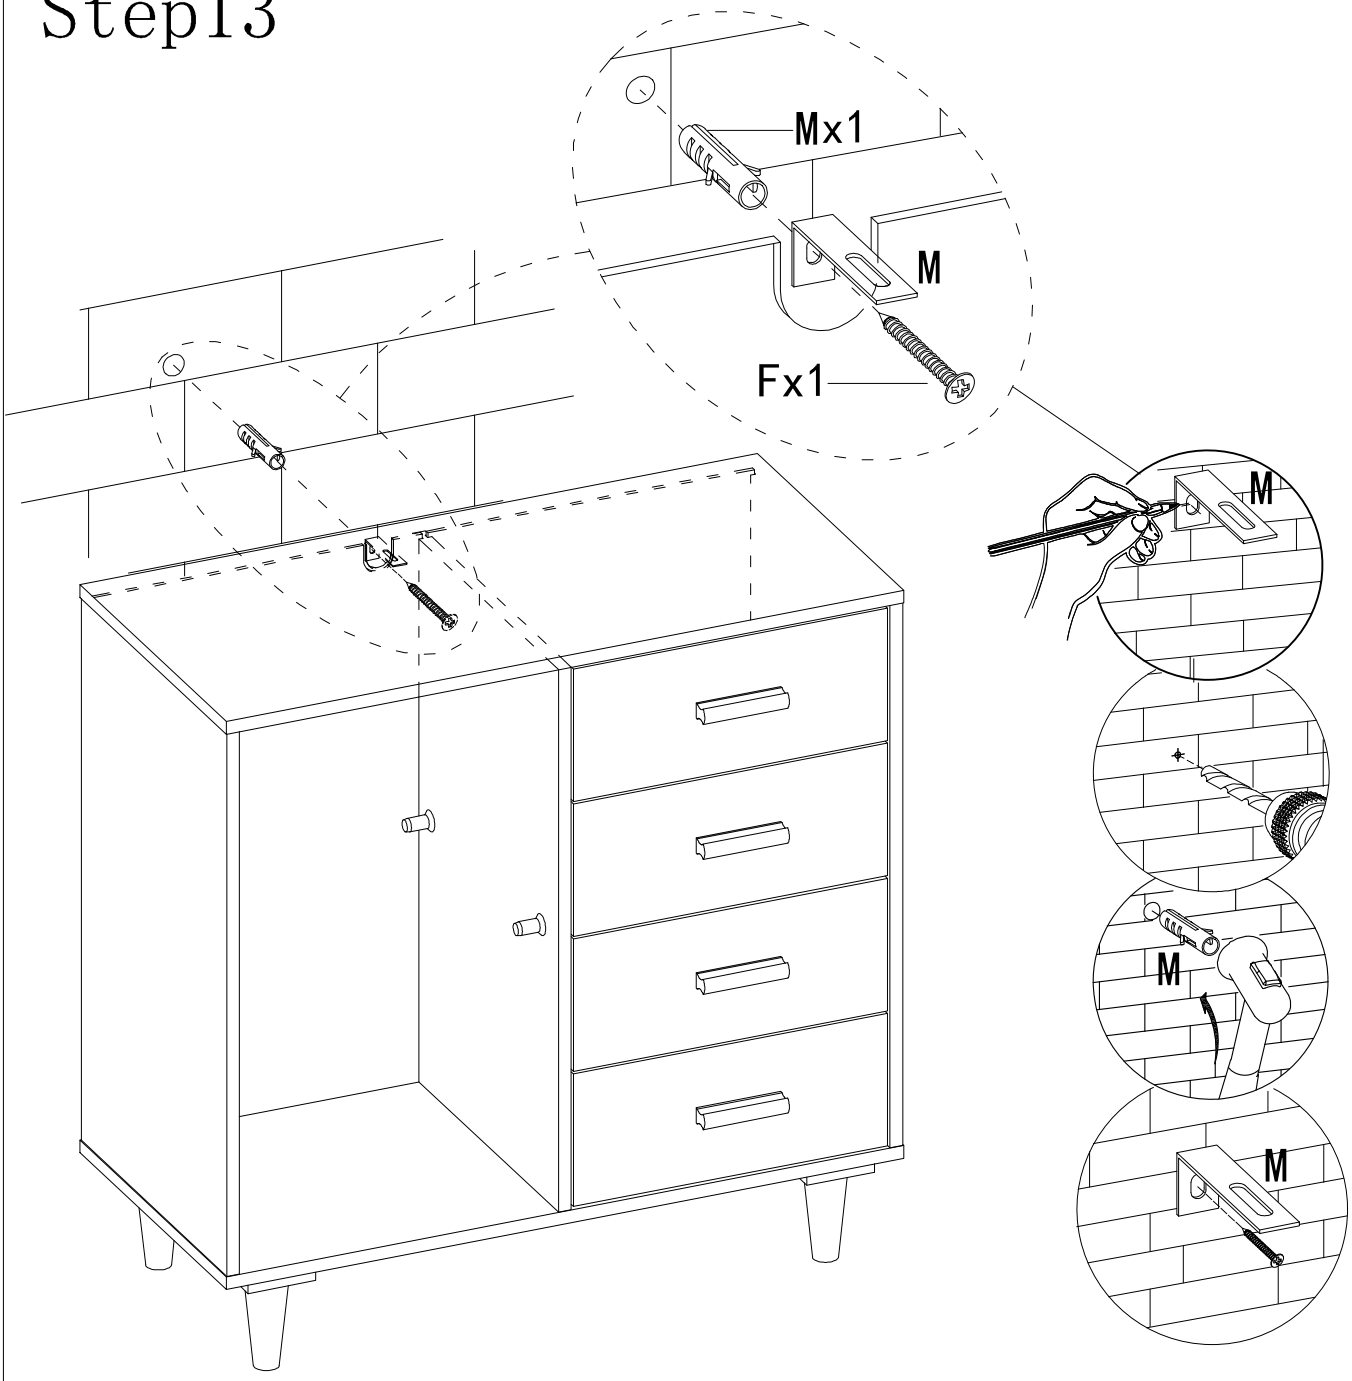


Step14

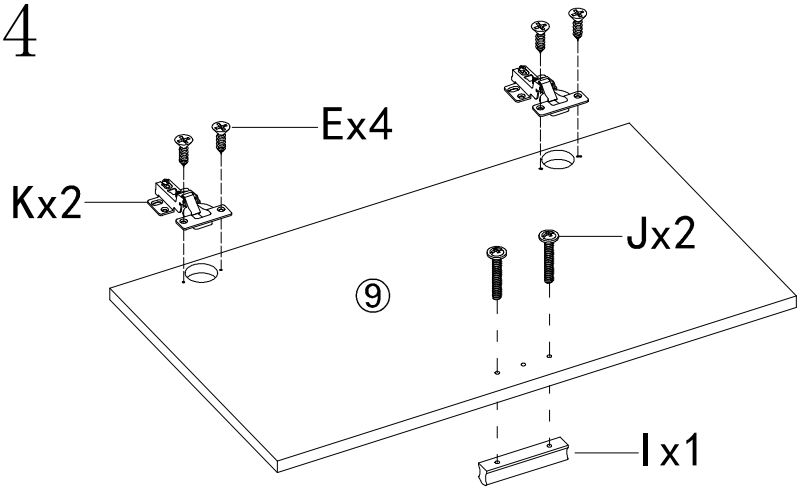

Step15

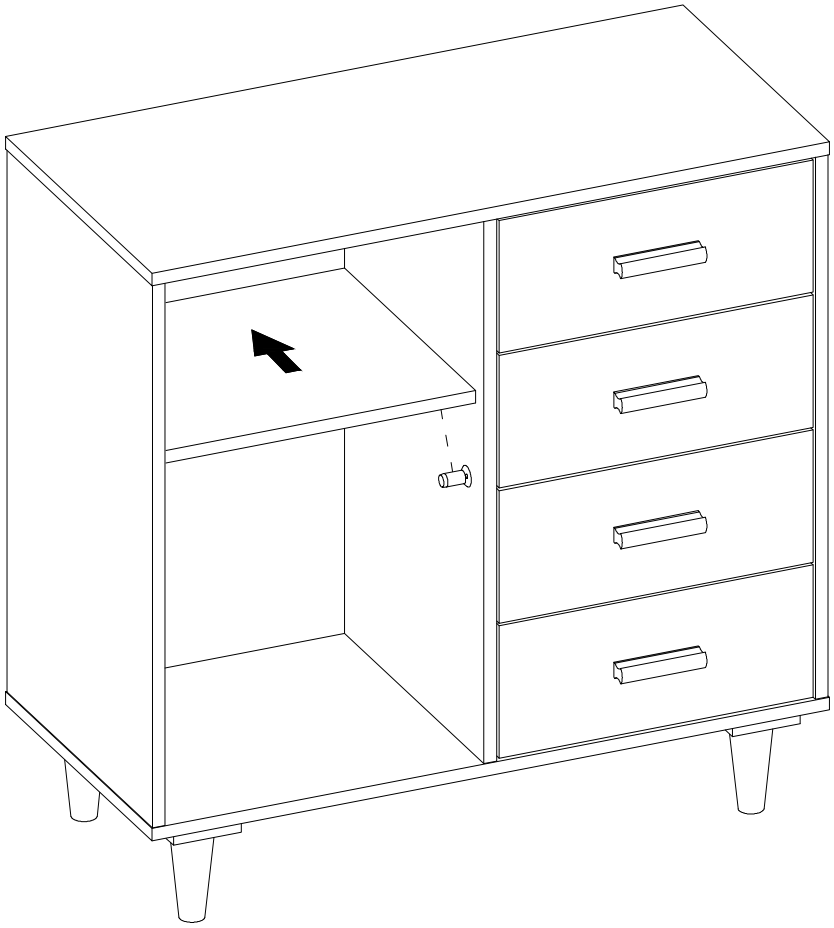

Step16

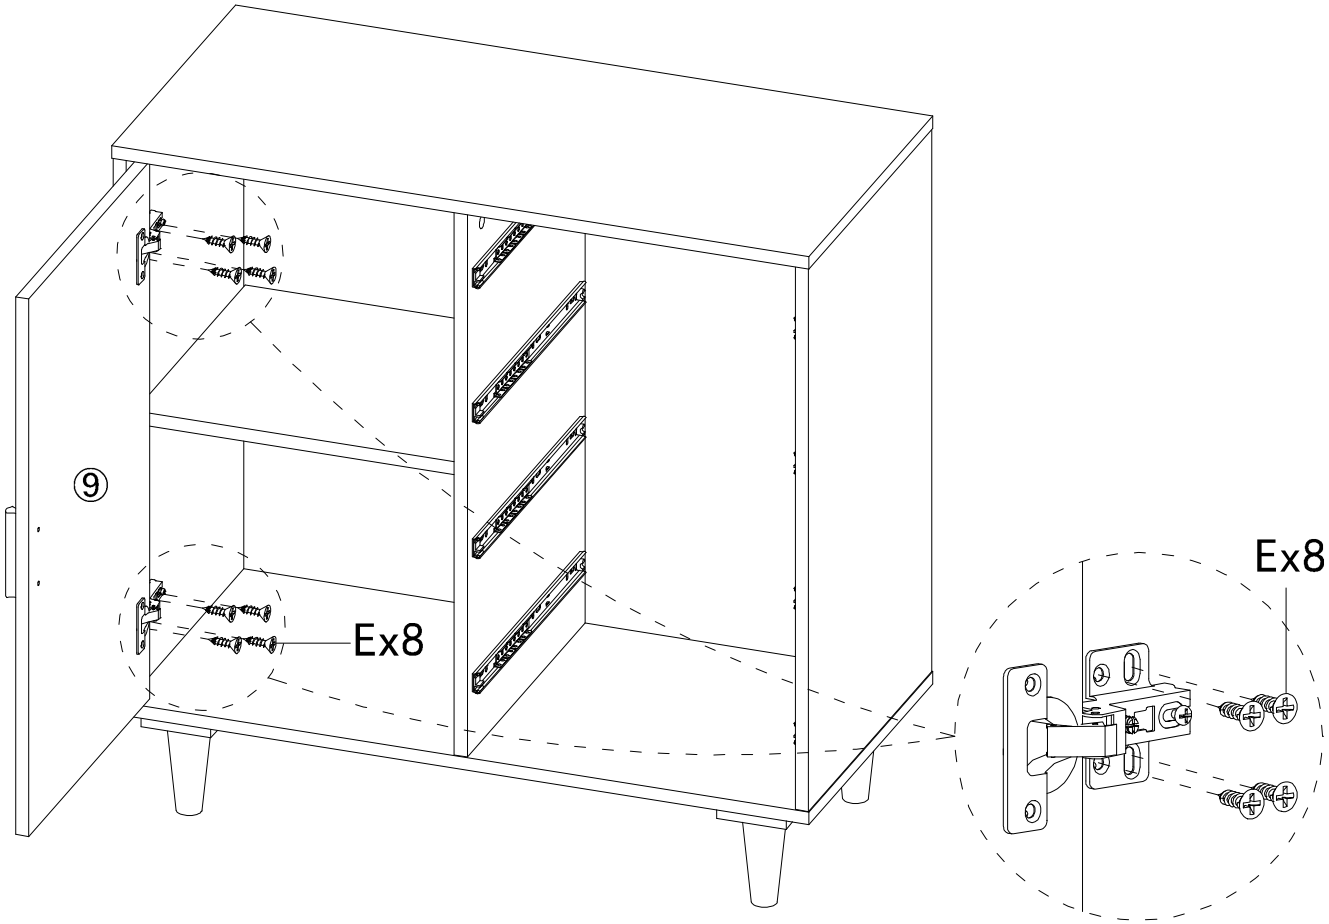

Step17

