

ASSEMBLY INSTRUCTIONS


FOLIAGE BAR CART WITH MIRROR BOTTOM AND TOP

A Side Panel - A



1pc

B Side Panel - B



1pc

C Floral Decoration




1pc

D Framed Mirror




2pcs

E Bolt
1/4" x 7/8"



8pcs

F Bolt
1/4" x 1/2"



4pcs

G Caster
1.5"



2pcs

H Caster With Brake
1.5"




2pcs

I Spring Washer
1/4"




4pcs

J Spanner
12mm




1pc

K Allen Wrench
1/4"



1pc

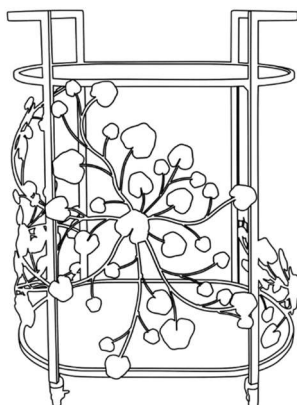


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

***** Do not tighten screws & bolts until the entire unit is completely assembled.**


1

Attach the Framed Mirror (D) to the Side Panel (A & B) using Bolt (E) with the Allen Wrench (K).

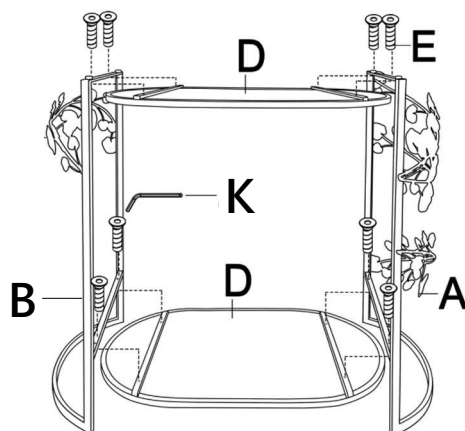


2

Attach the Caster (G) and Caster with Brake (H) to the bottom of the Side Panel (A & B) using Spring Washer (I) with the Spanner (J). The Casters can be installed in any positions for convenient use.

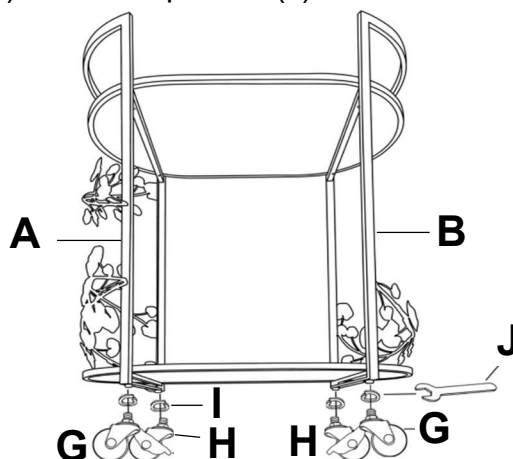

3

Attach the Floral Decoration (C) to the assembled unit using Bolt (F) with the Allen Wrench (K).

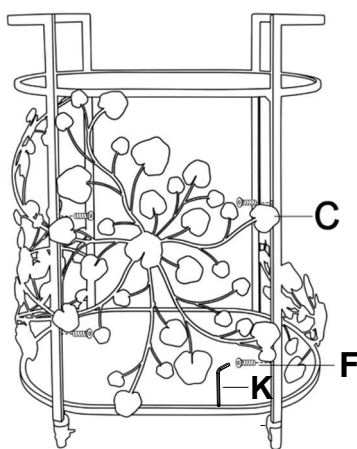

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.