

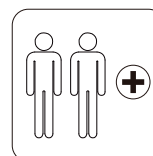
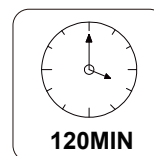
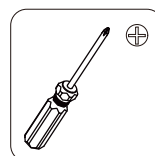
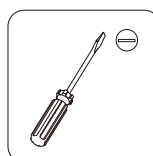



Installation & Assembly

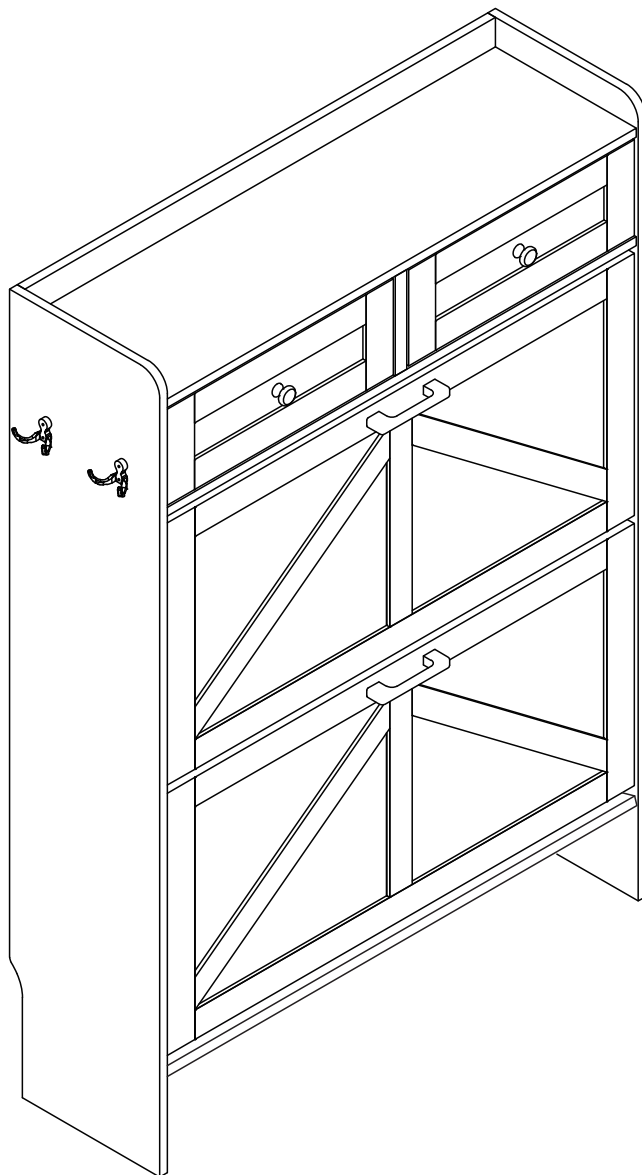


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

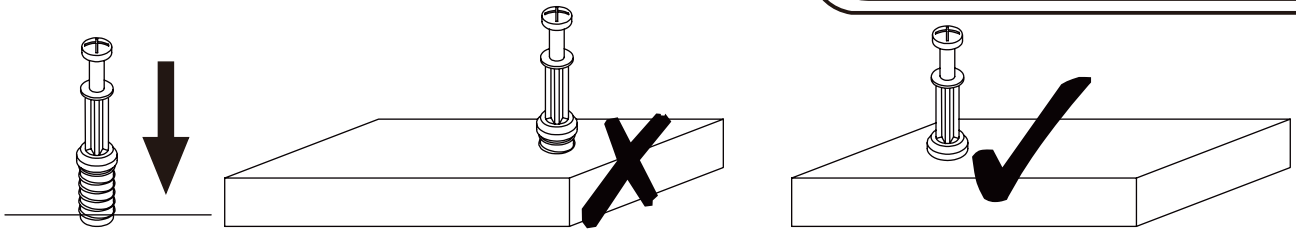


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

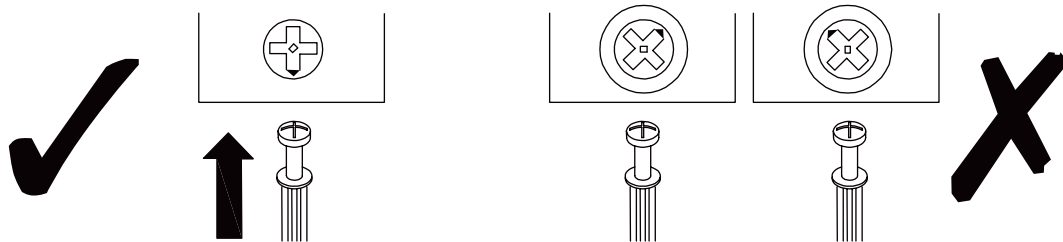










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.






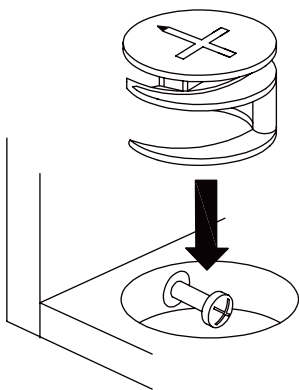





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

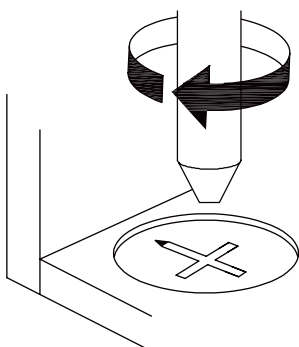


EN_Turn cam lock clockwise to tighten.

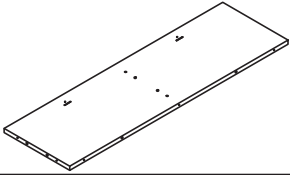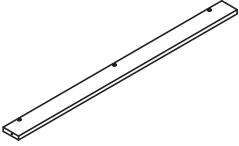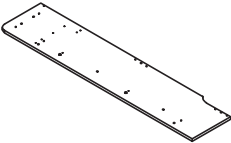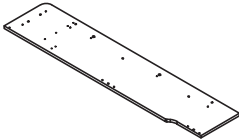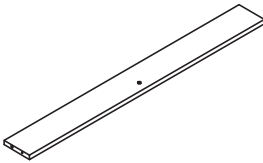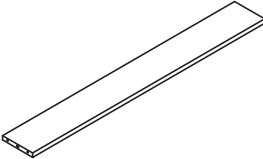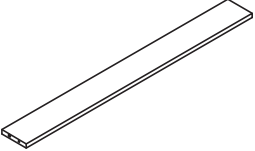NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x2	
⑧		x1	
⑨		x2	
⑩		x2	

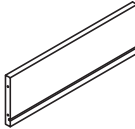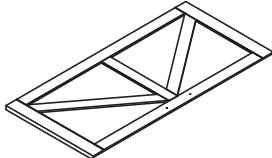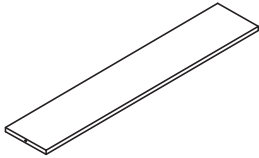
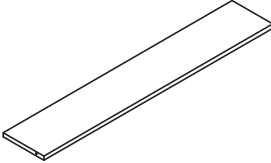
NO.	PARTS	QTY	SPARE
⑪		x2	
⑫		x2	
⑬		x2	
⑭		x2	
⑮		x2	
⑯		x4	

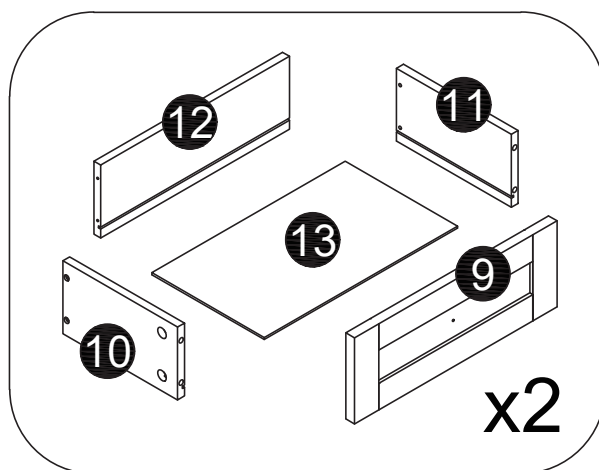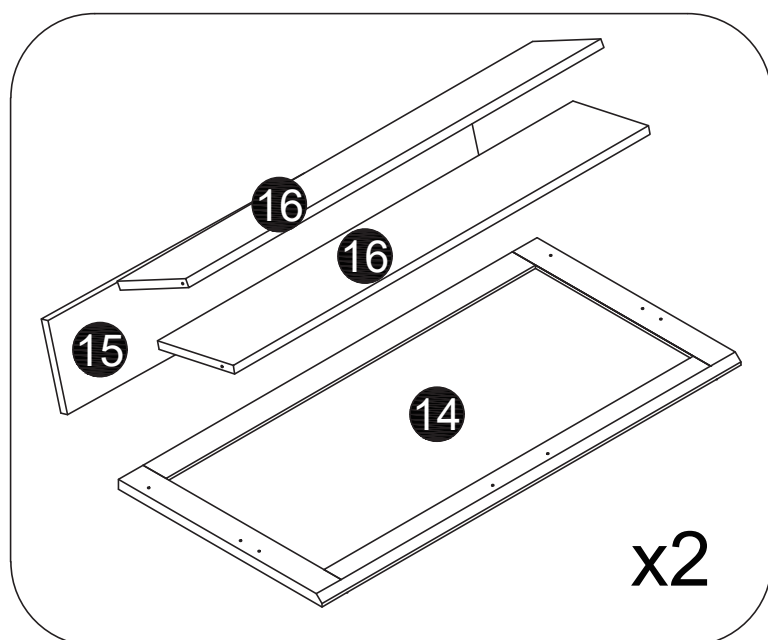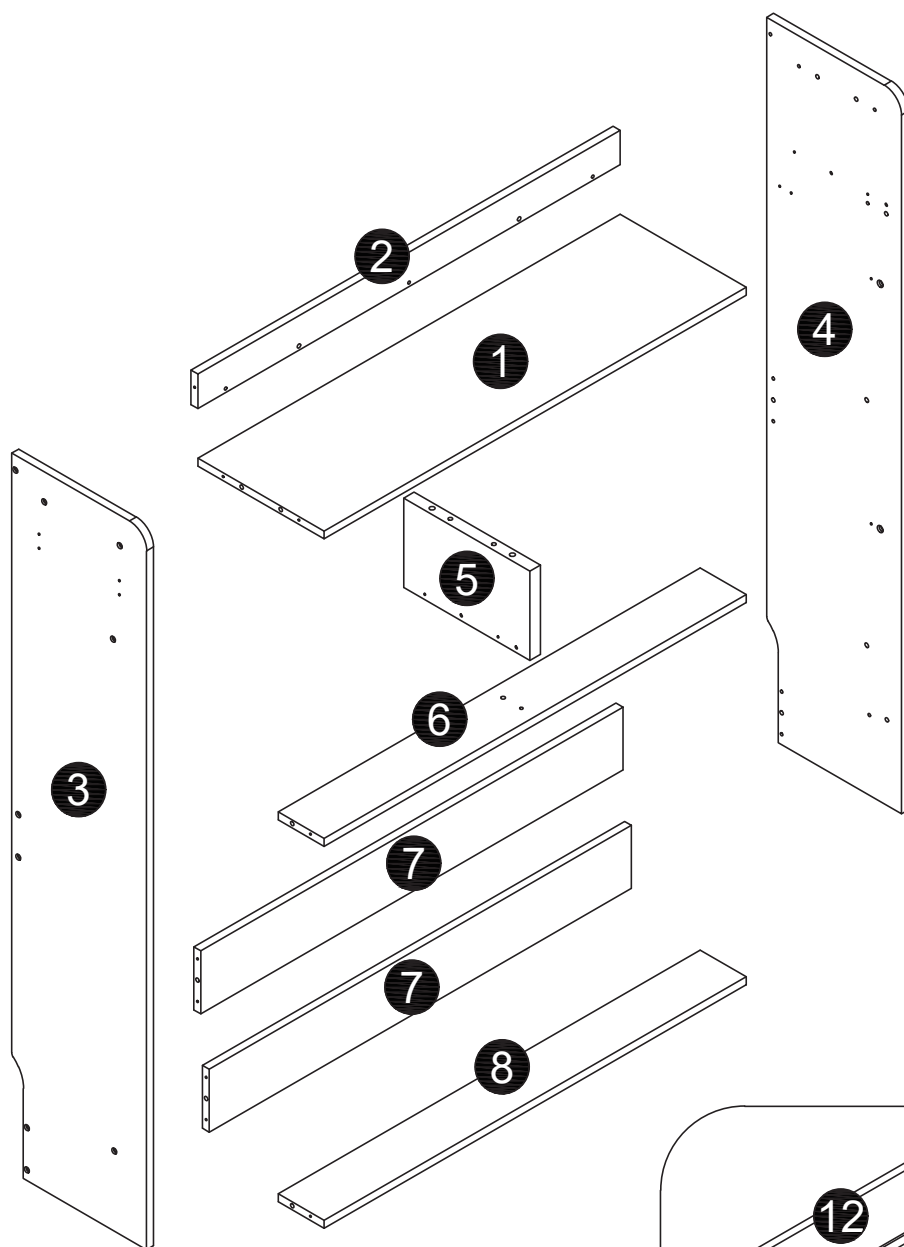



A x10 Ø6x35mm +1(spare)	B x10 Ø15x10mm +1(spare)	C x17 Ø6x30mm +1(spare)	D x30 Ø4x35mm +3(spare)	E x30 Ø3.5x12mm +2(spare)	F x2 F-1 F-2
G x2 G-1 G-2	H x4	I x8 +1(spare)	J x2 Ø4x12mm J-1 J-2	K x2 K-1 K-2	M x22 +4(spare)
N x4 N-1 +1(spare) N-2 +1(spare) N-3	O x2	L x2	R x2	P x2 P-1 P-2	
Q x1 M5					

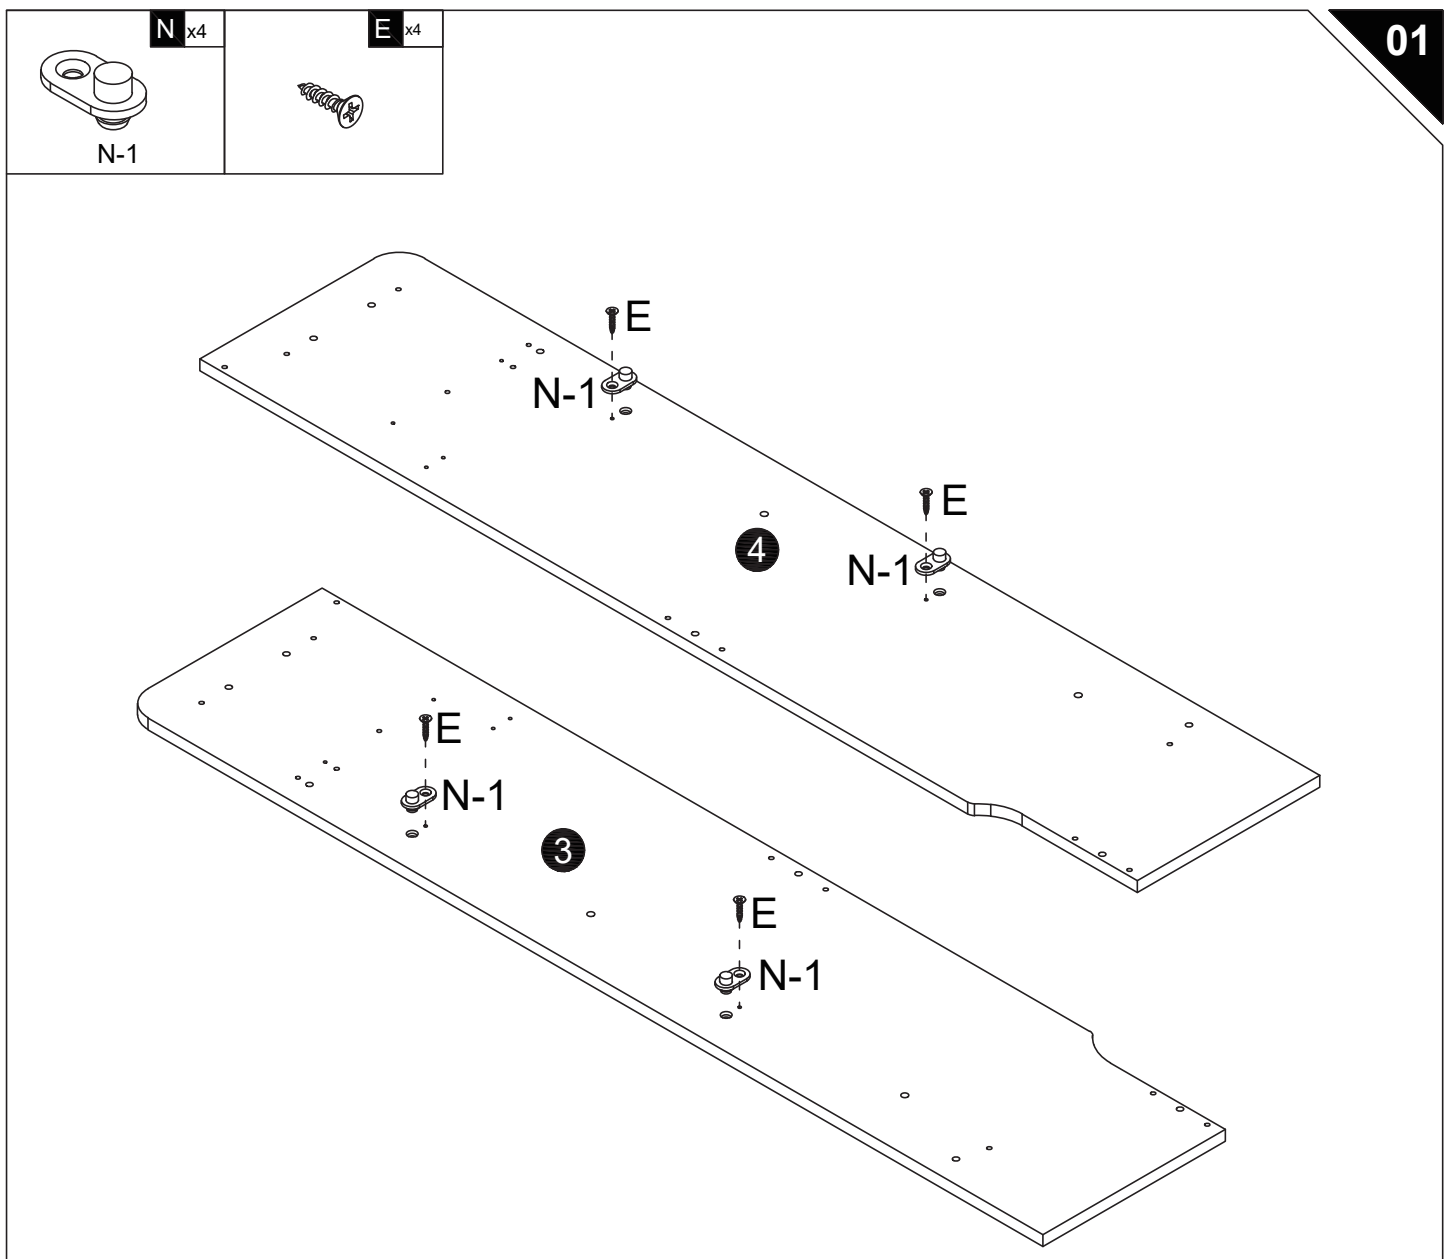

02

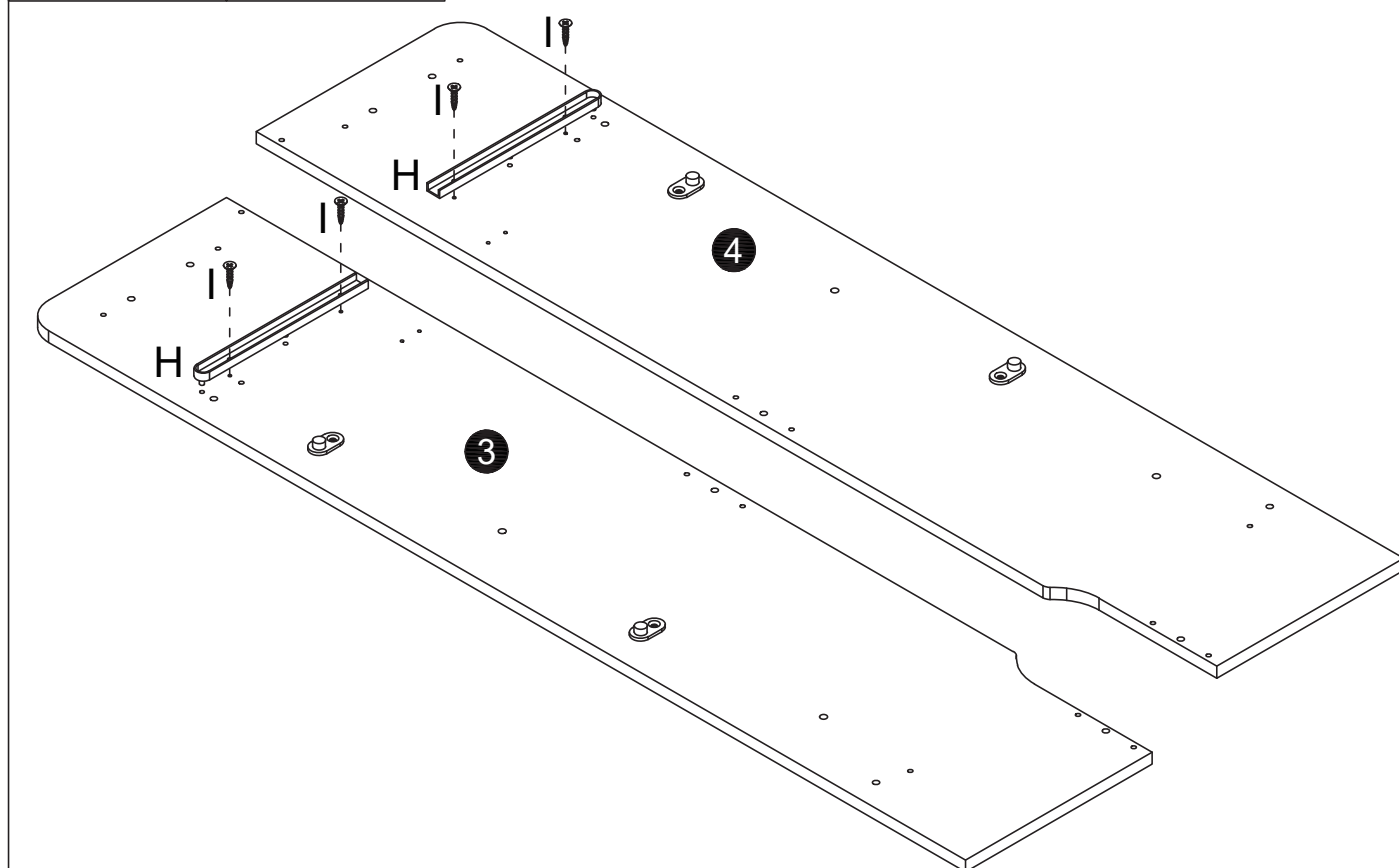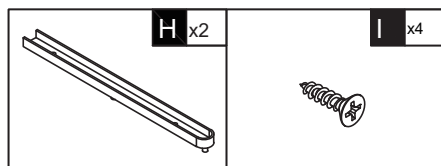


03

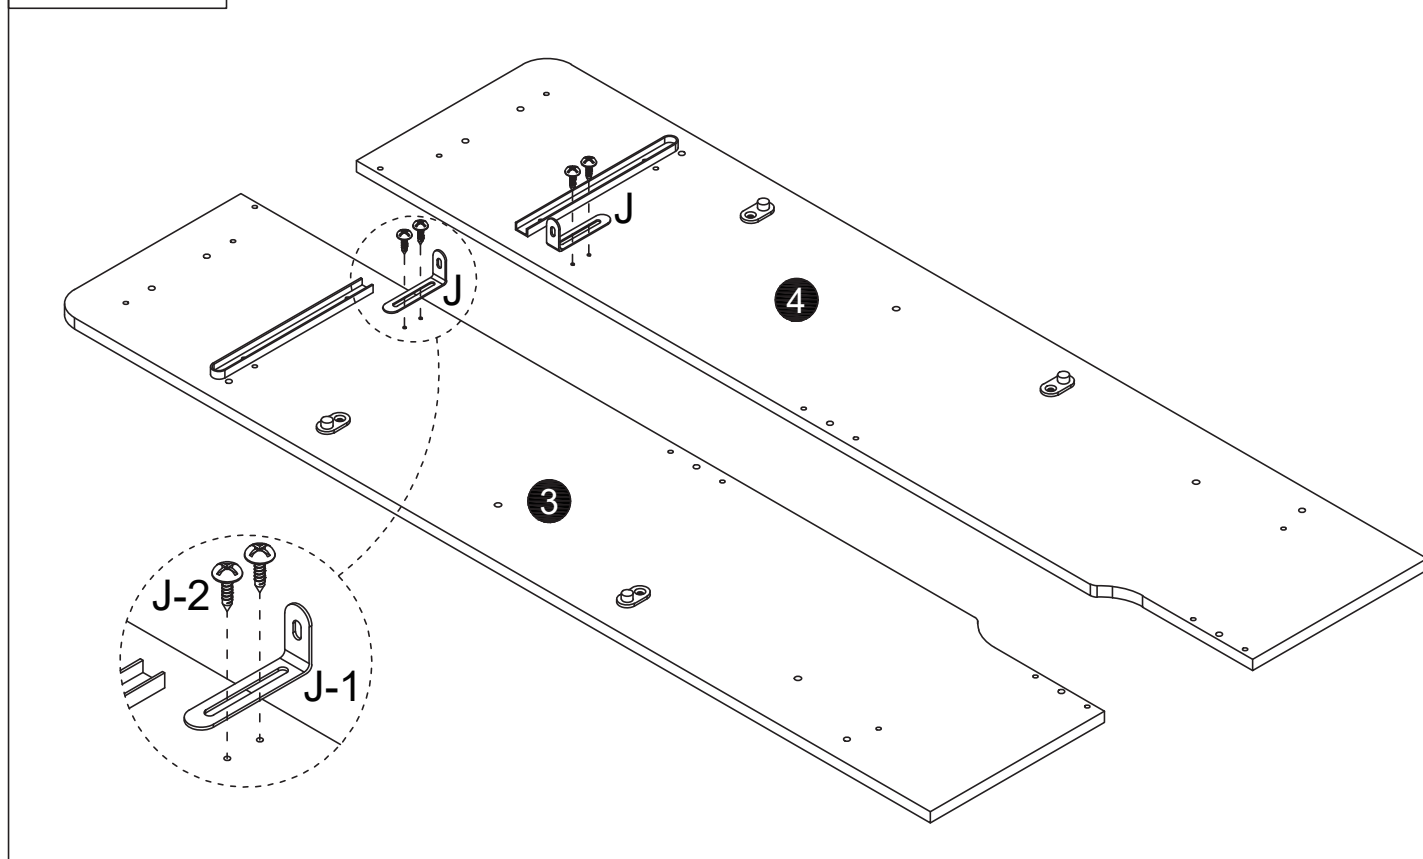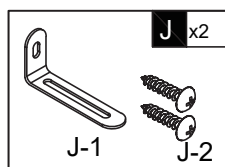

04

H x2



I x4

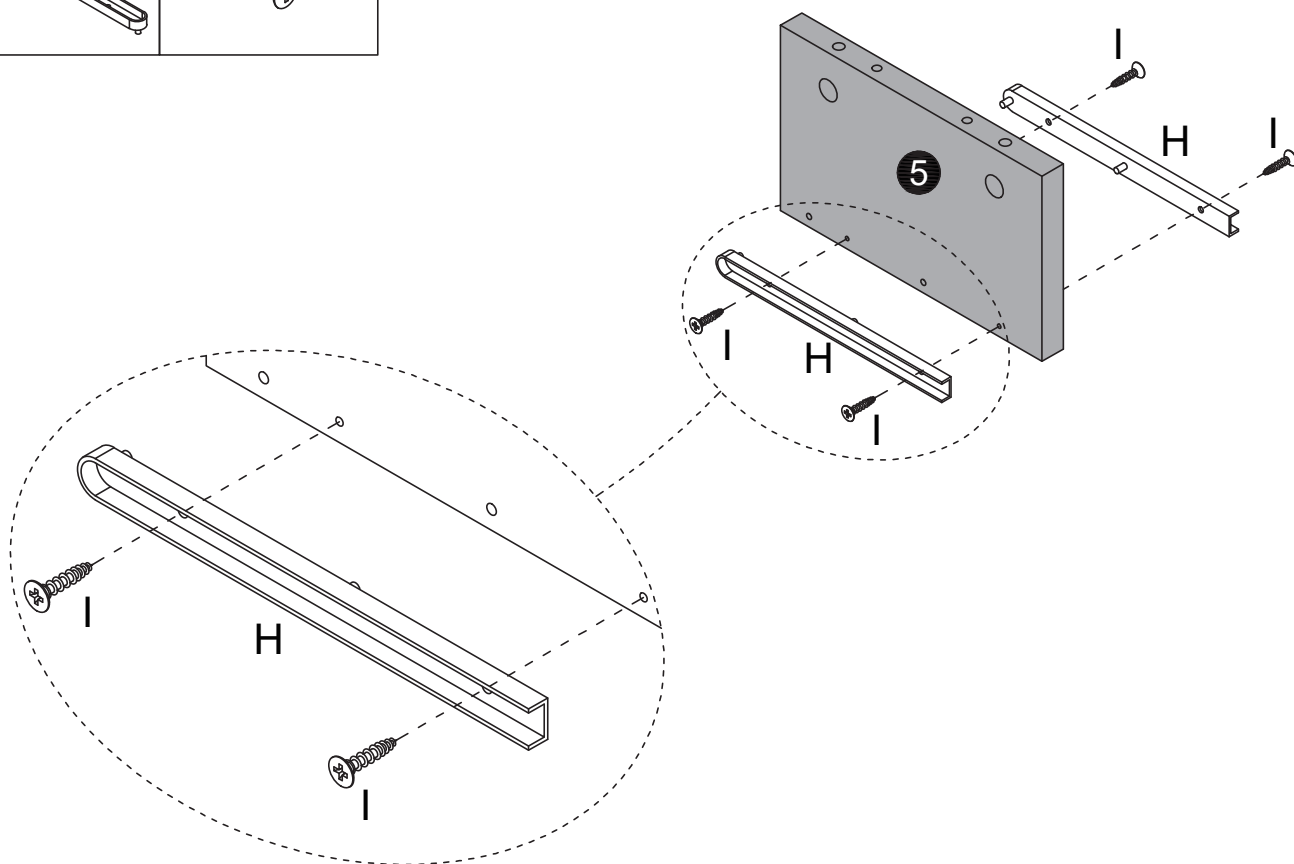

05

C x1



D x1

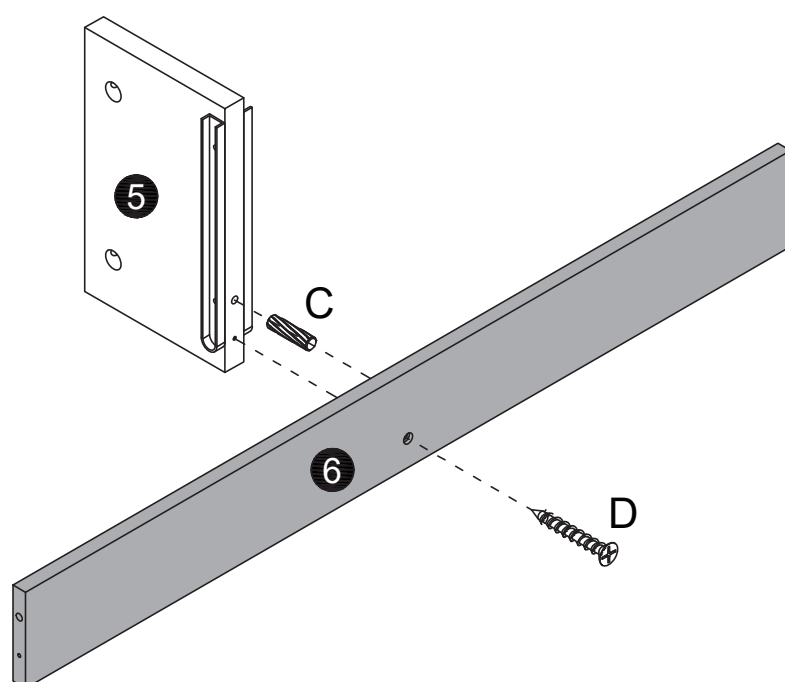

A x2


O x2

E x2

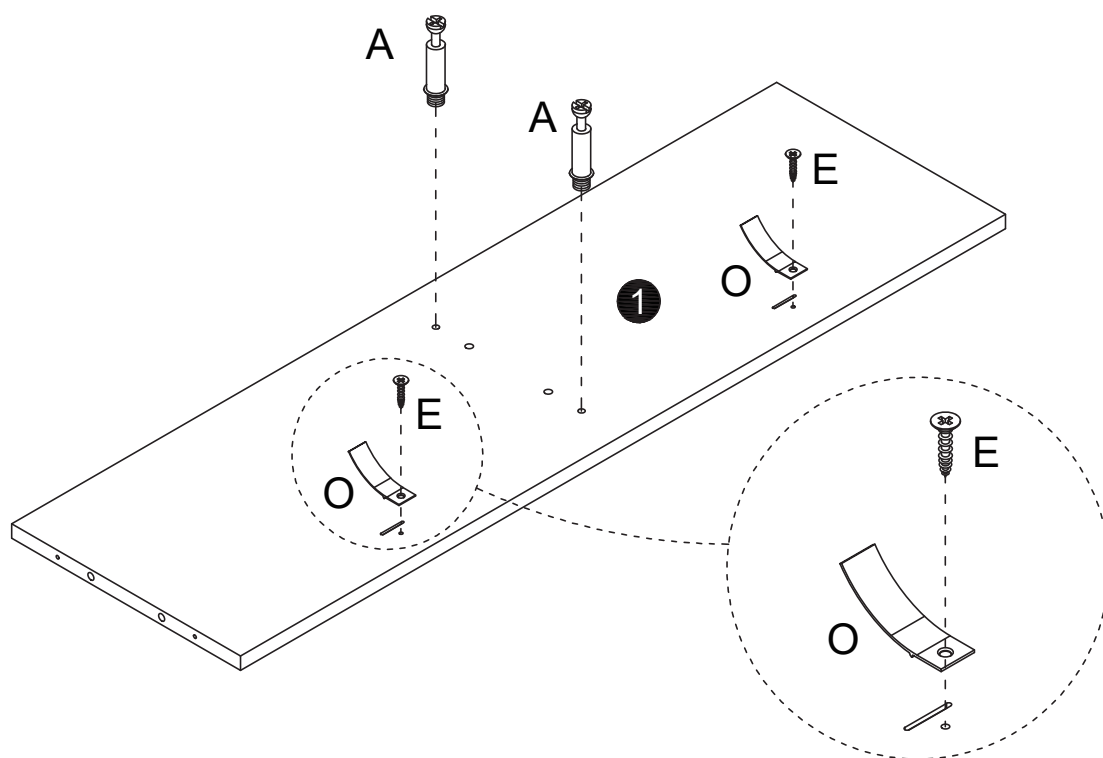



B x2

C x2

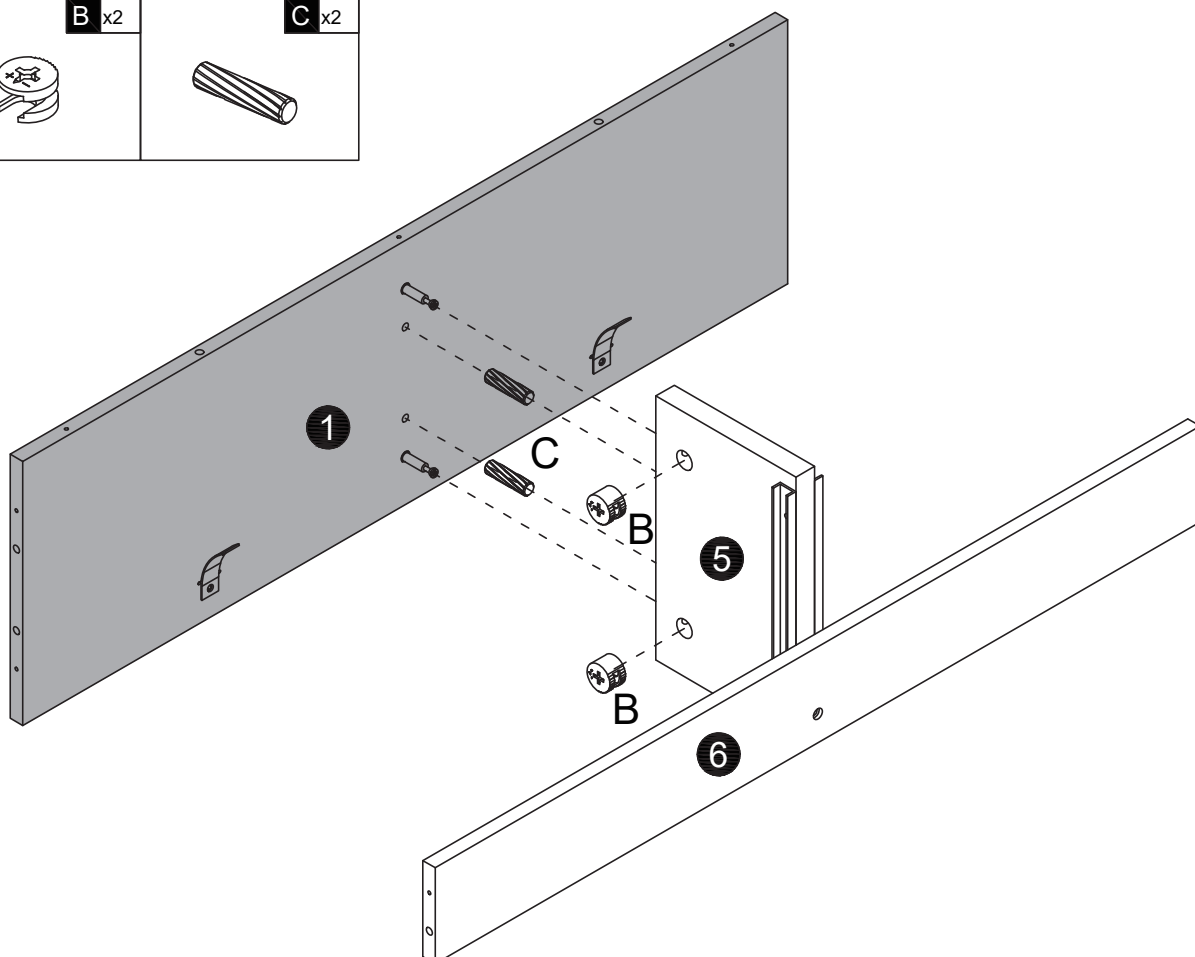



C x2



D x3

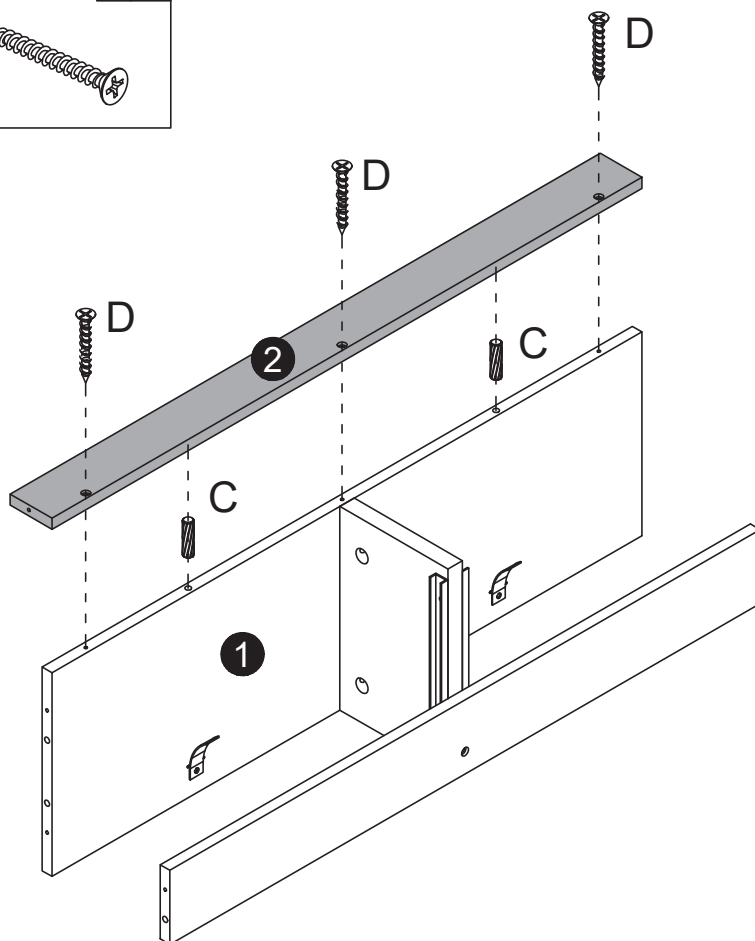





C x4

D x5

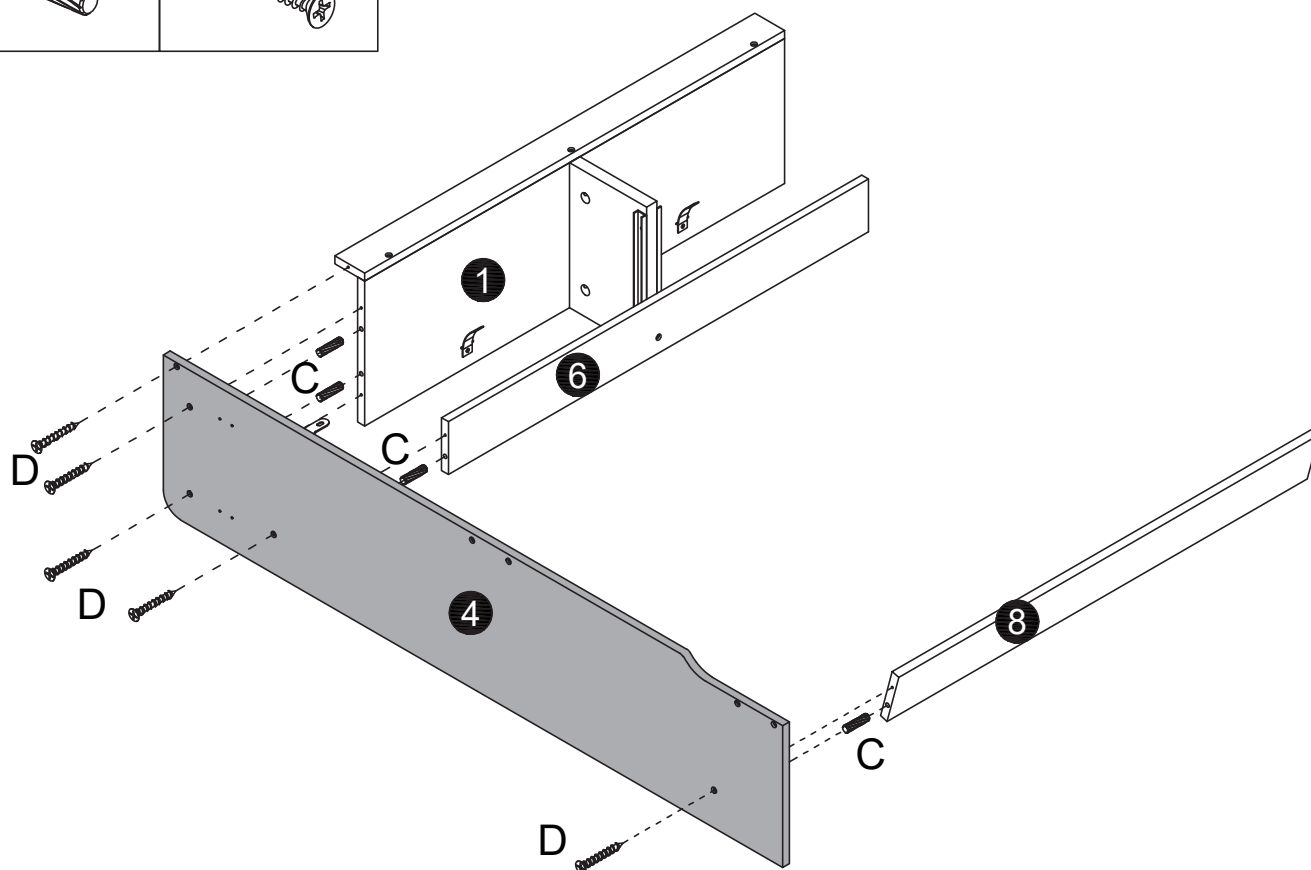

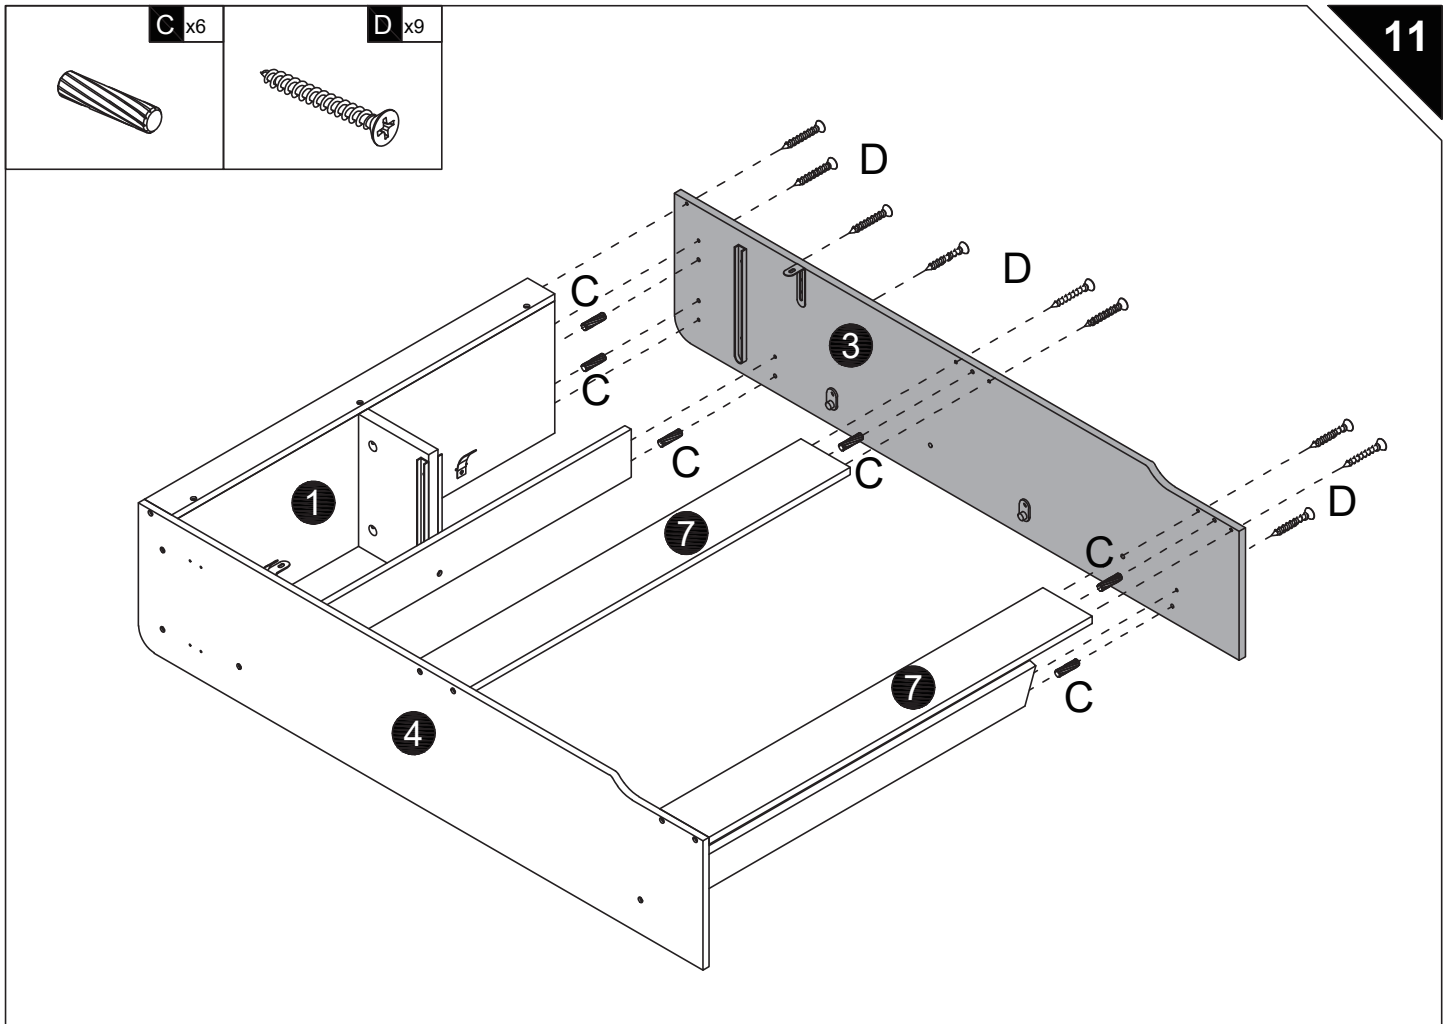
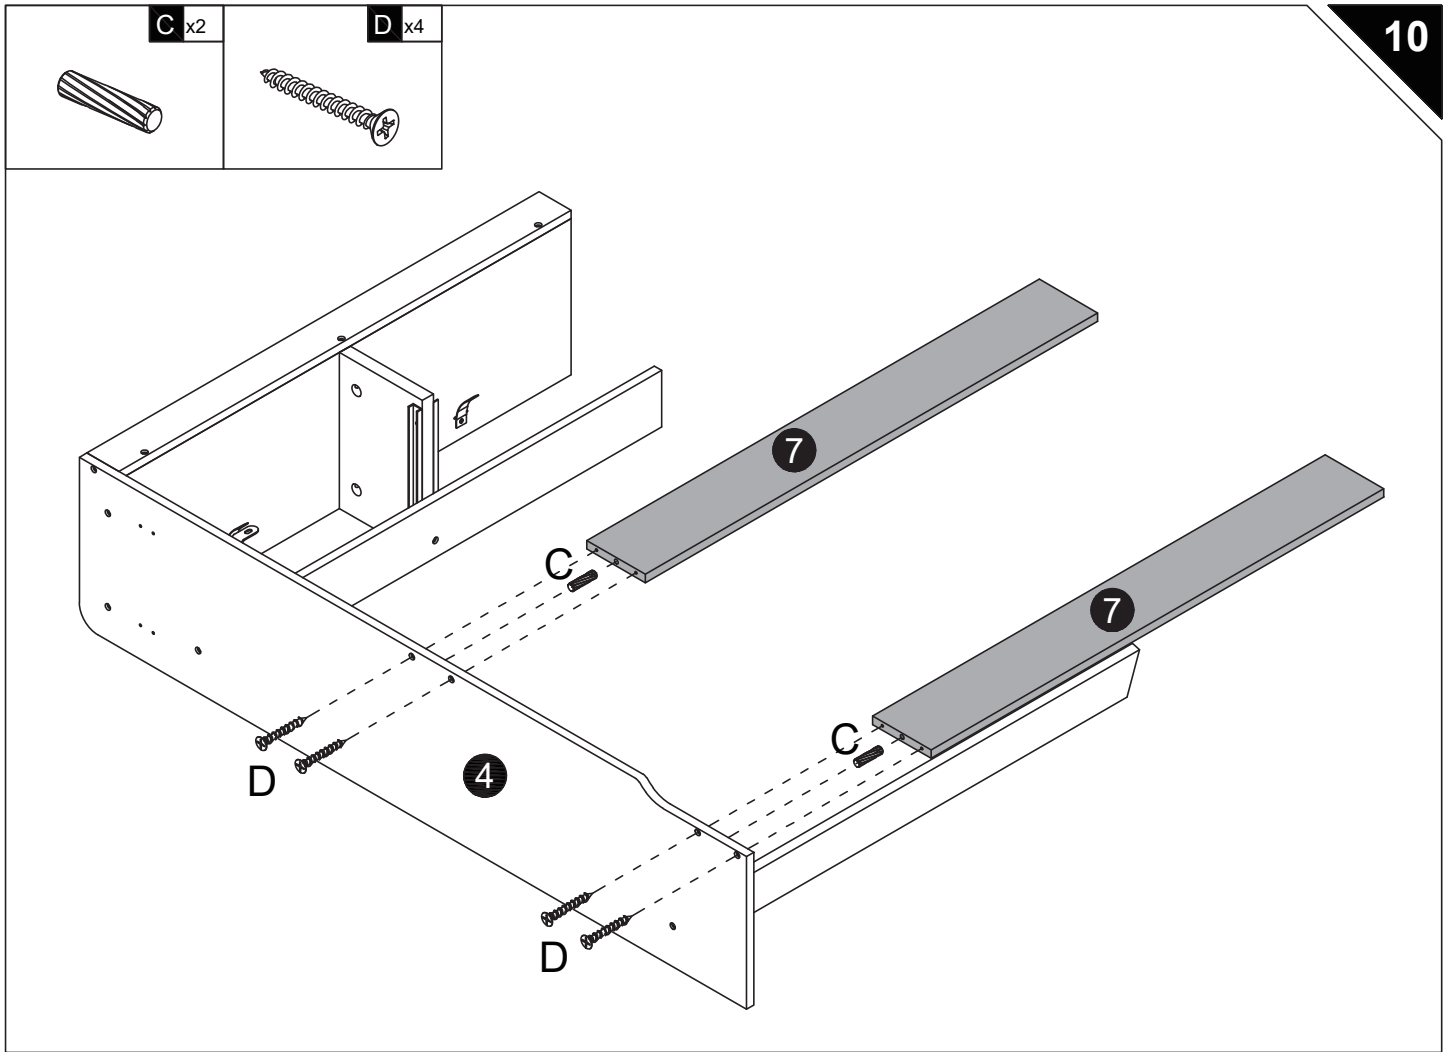


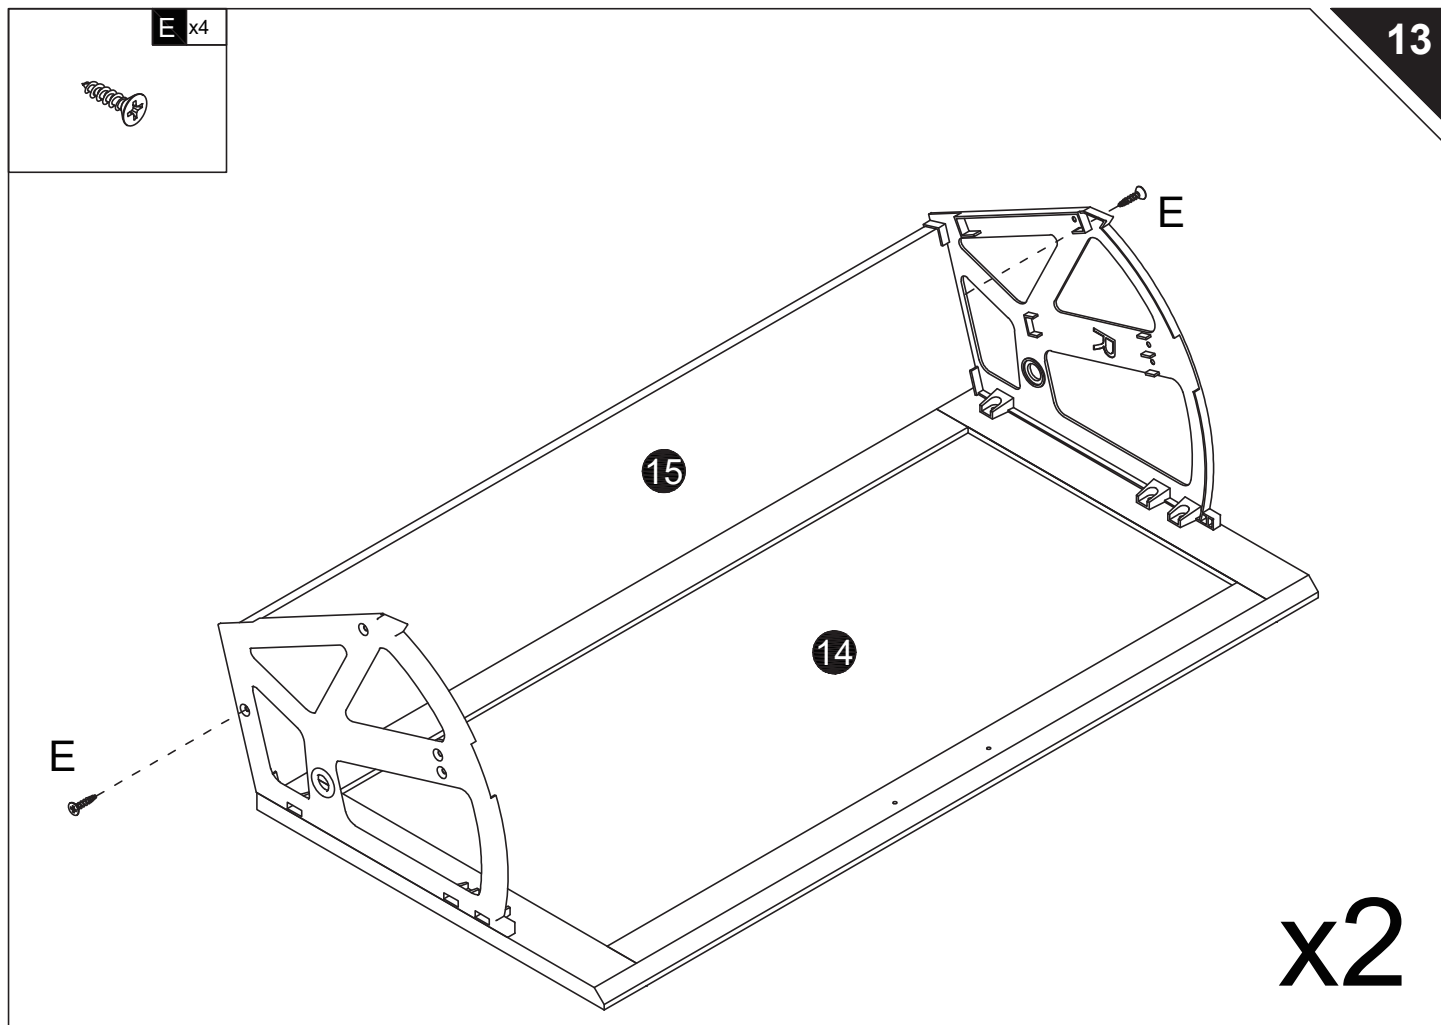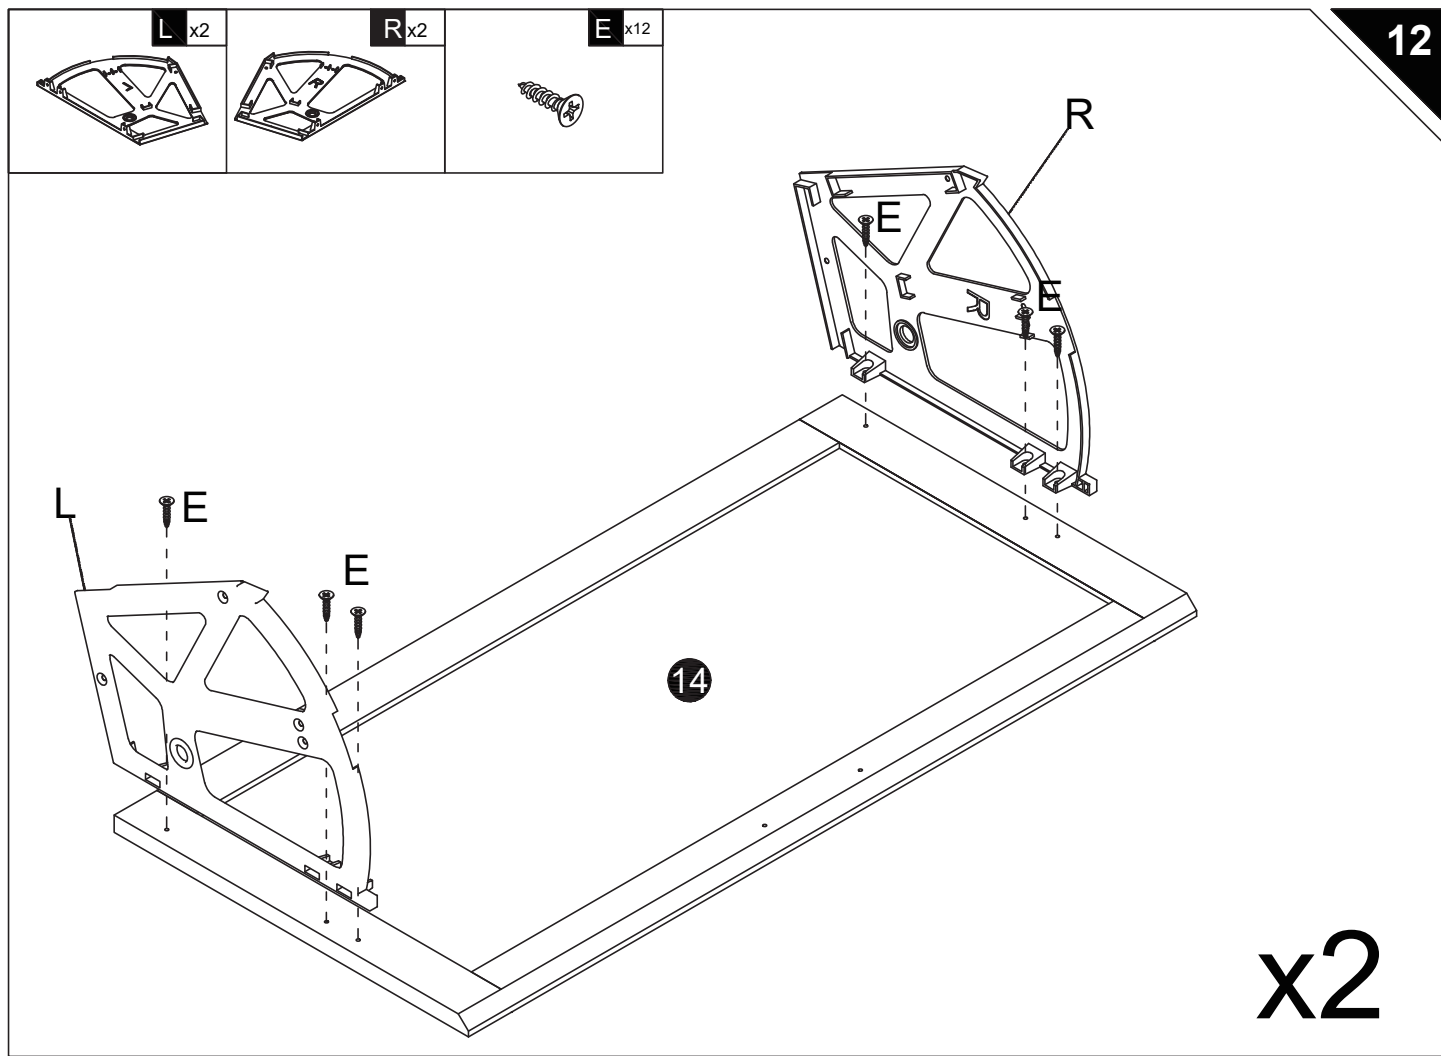

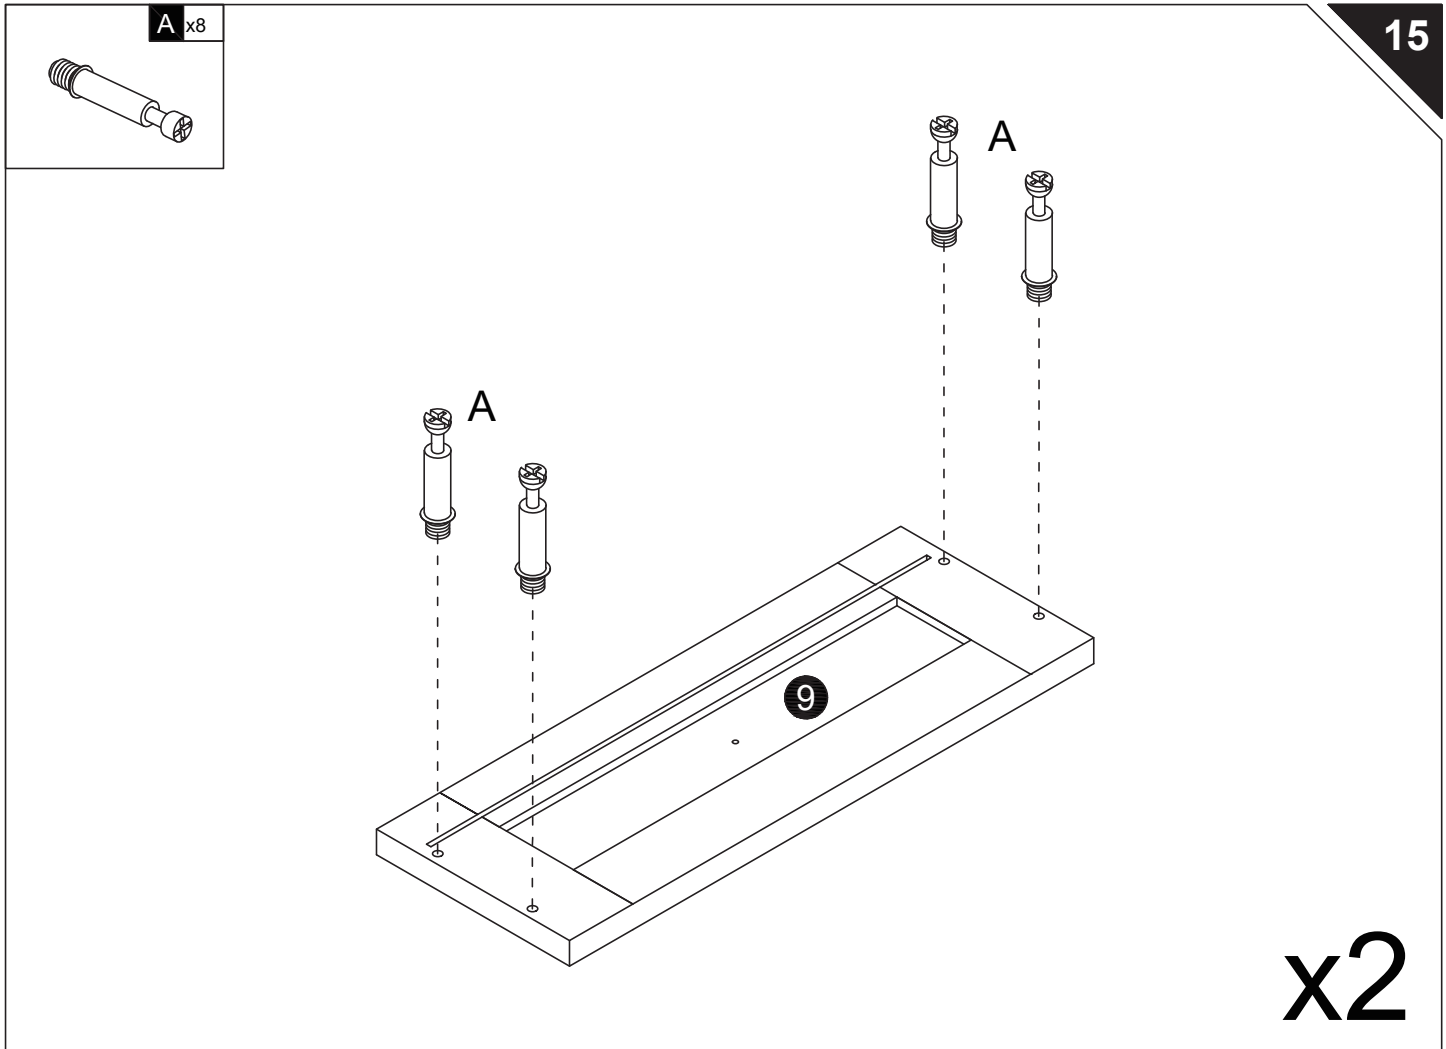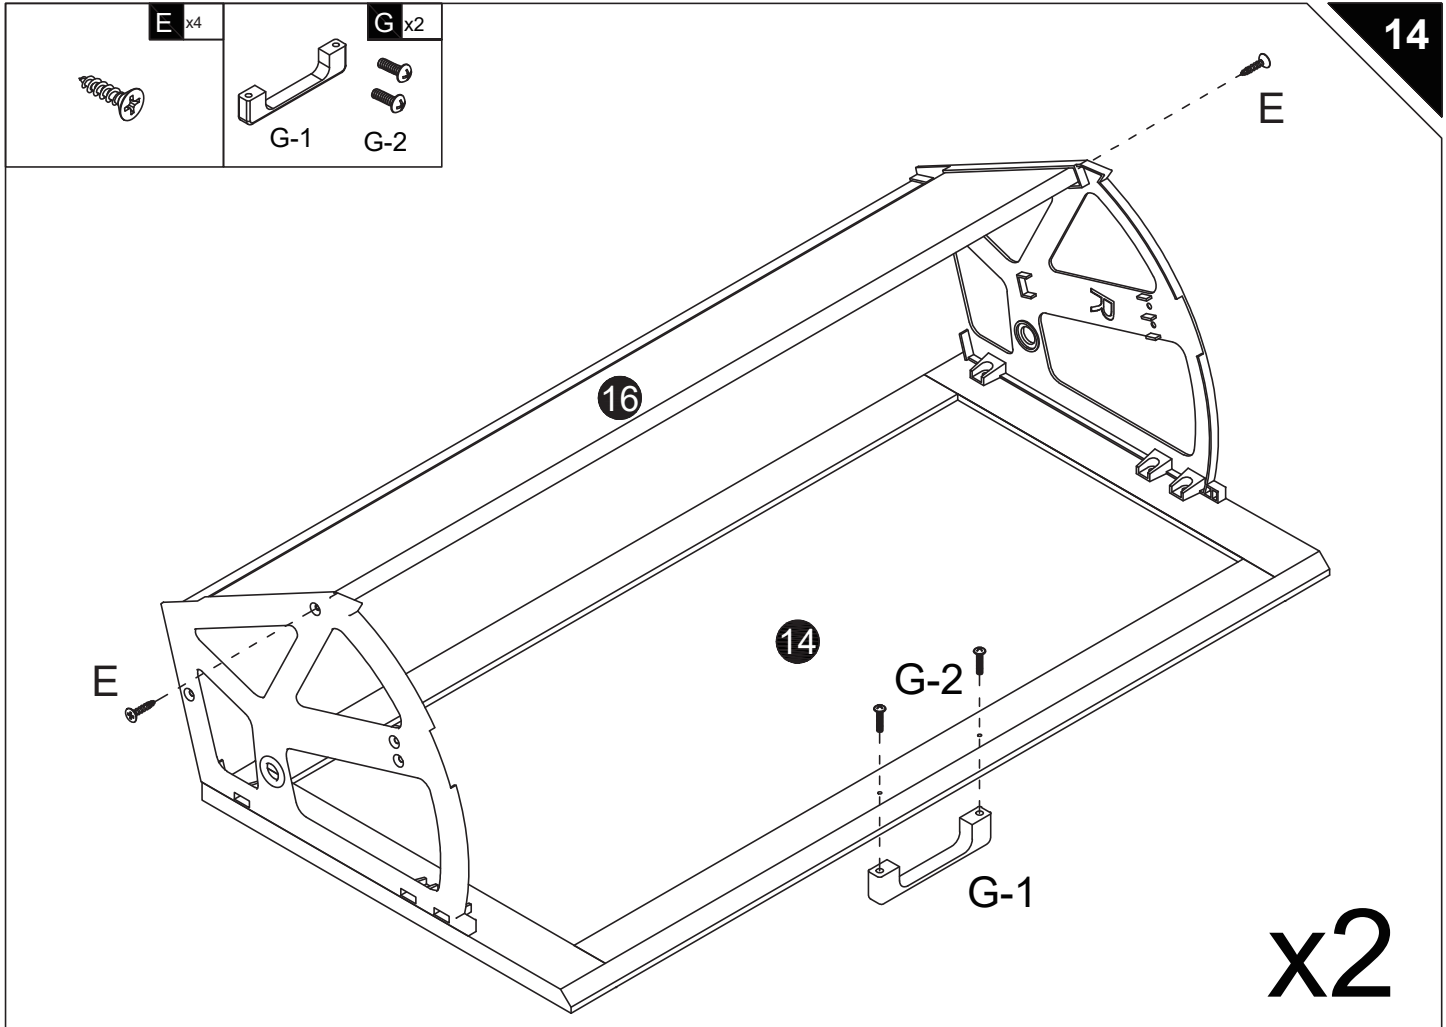


D x8

16

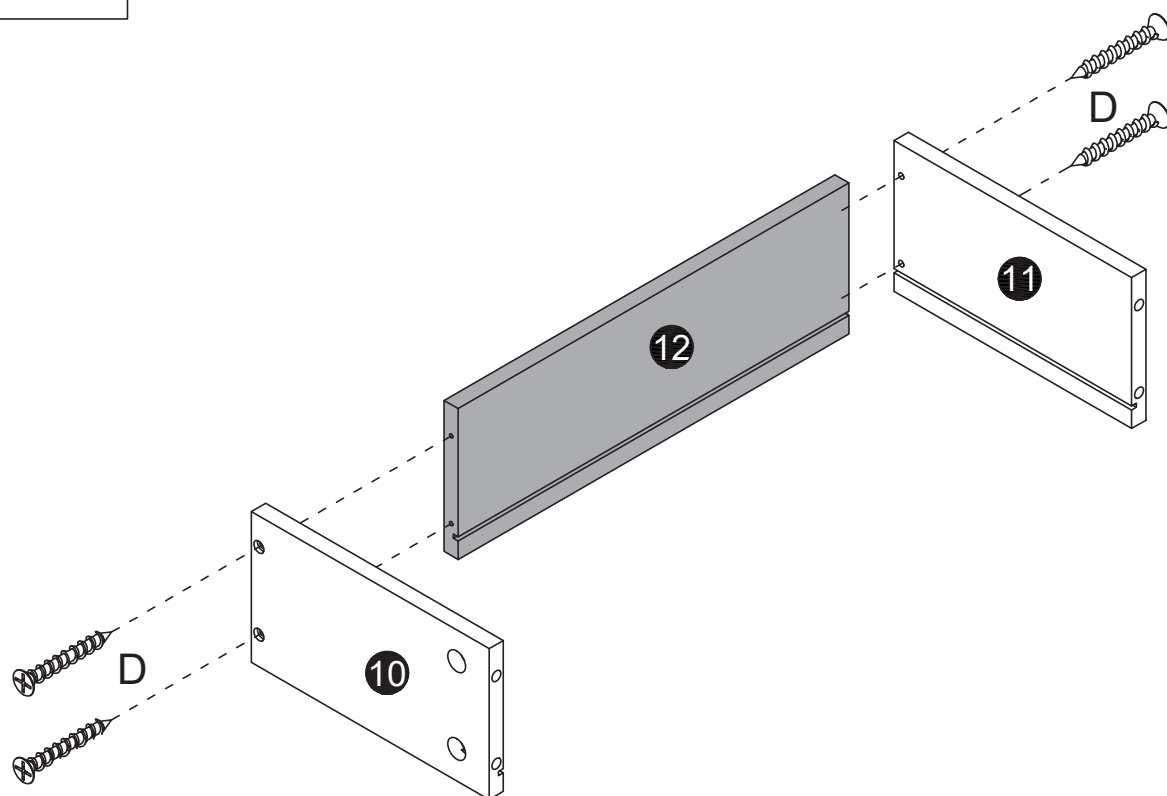

x2


17

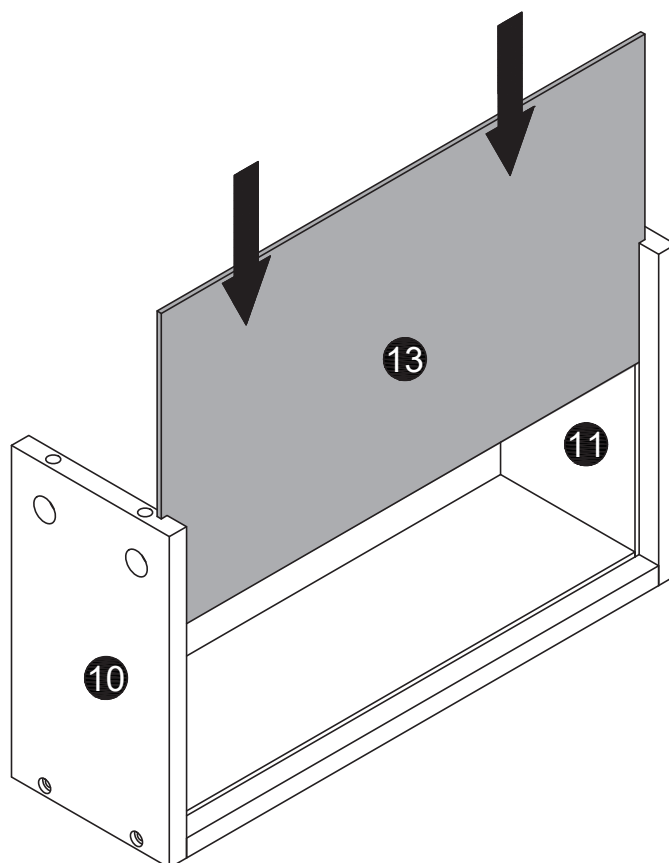

x2

B x8

18

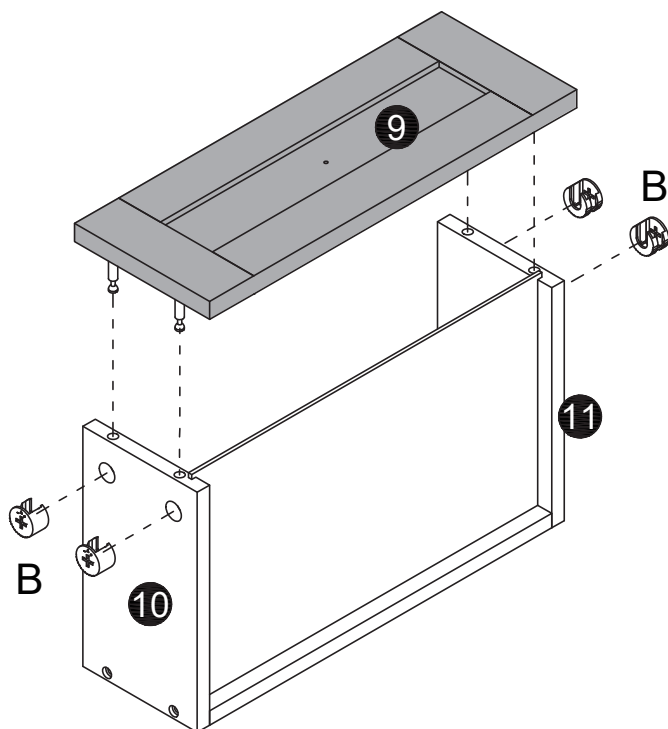

x2

F x2


19



F-1




F-2

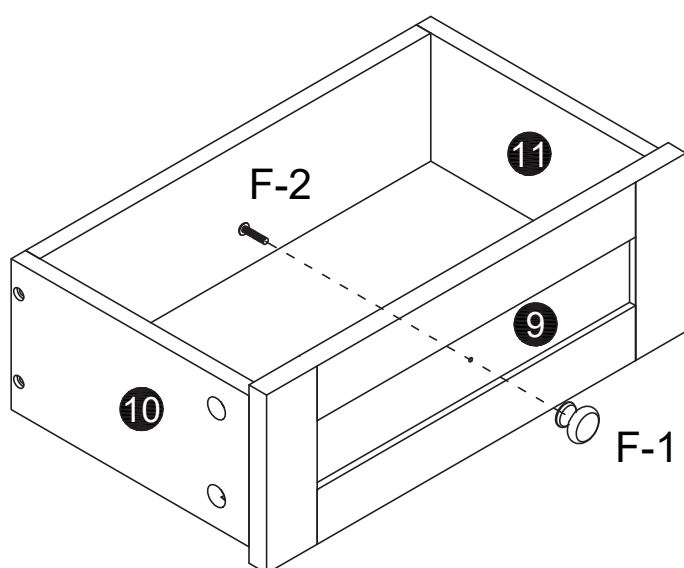

x2


K x2

M x18



K-1

K-2

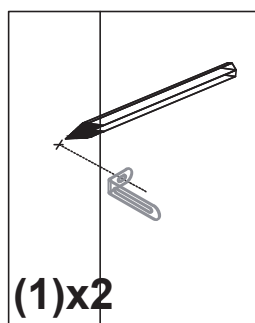

(1)x2

WALL

+
drilling hole
Ø6x30mm

(2)x2




then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

Then use a tape drill to make holes in the wall that are suitable for the product screws.


WALL

K-1

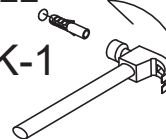

(3)x2

WALL

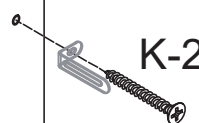


K-2

(4)x2

Then, put the expansion bolt into the hole

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

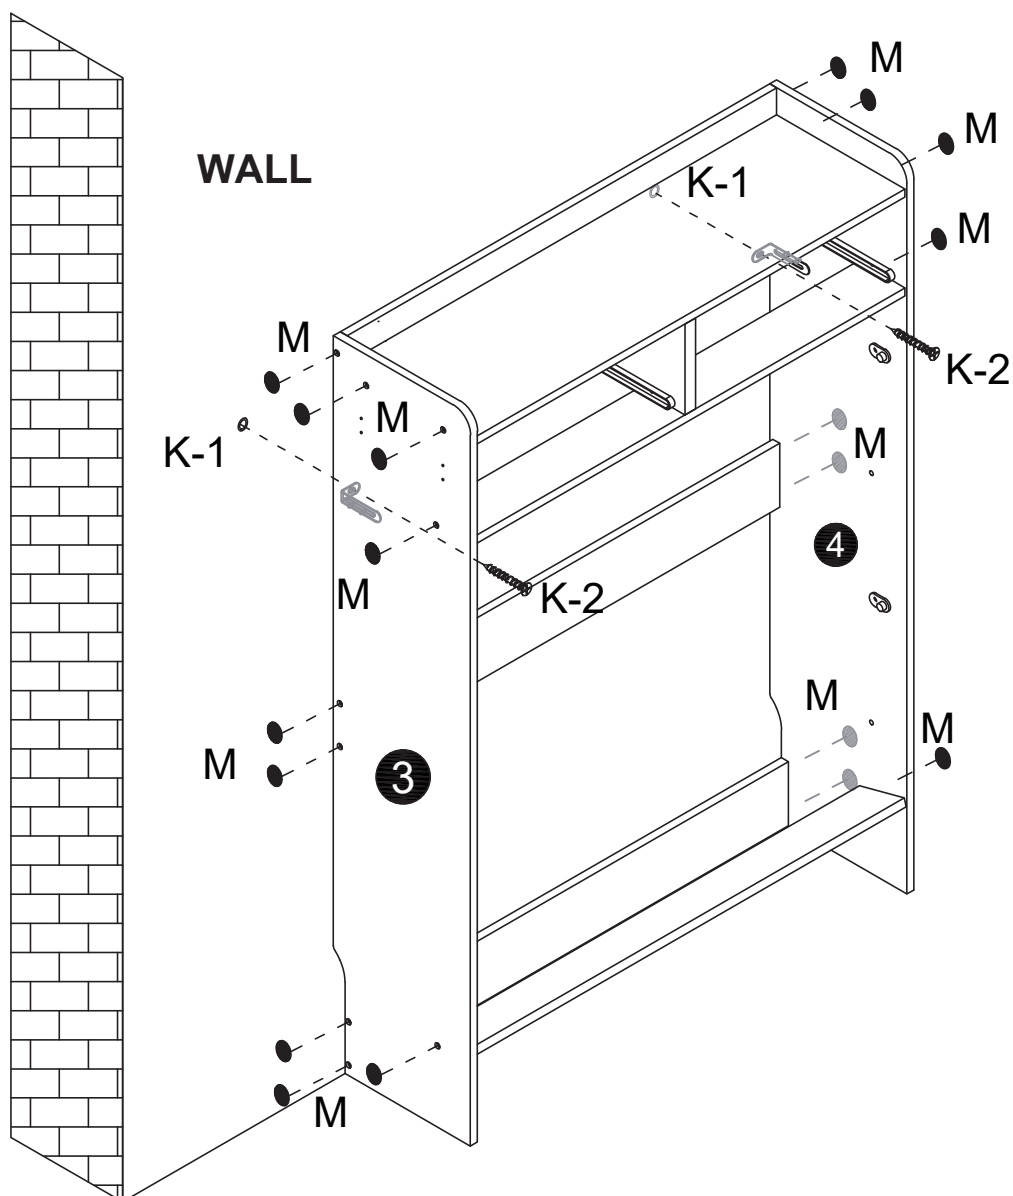




N-2



N-3


N x4



Q x1





If the installation cannot be placed in the correct position, please try operating at other inclined angles.

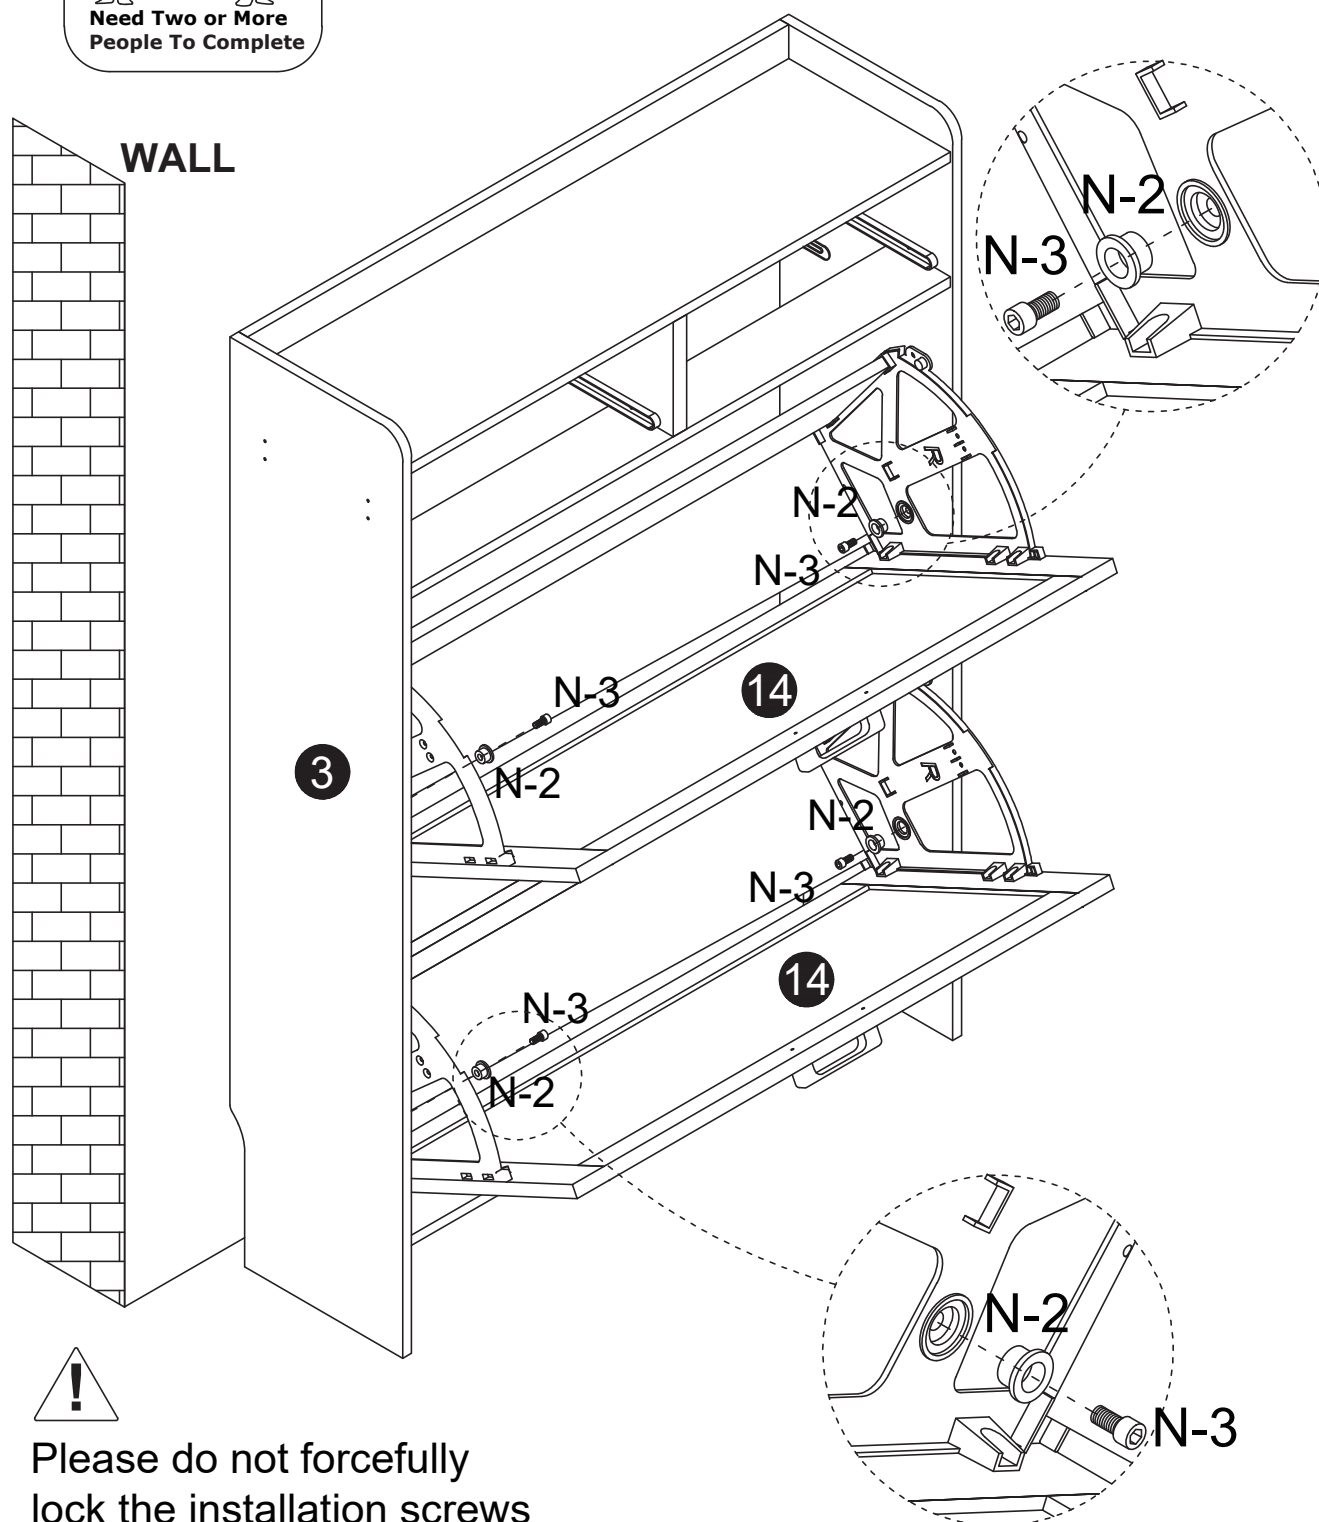


Please do not forcefully lock the installation screws to the maximum limit to avoid damaging the side panel.




WALL

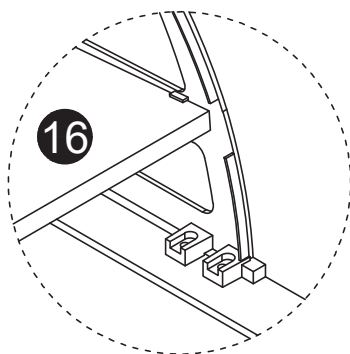
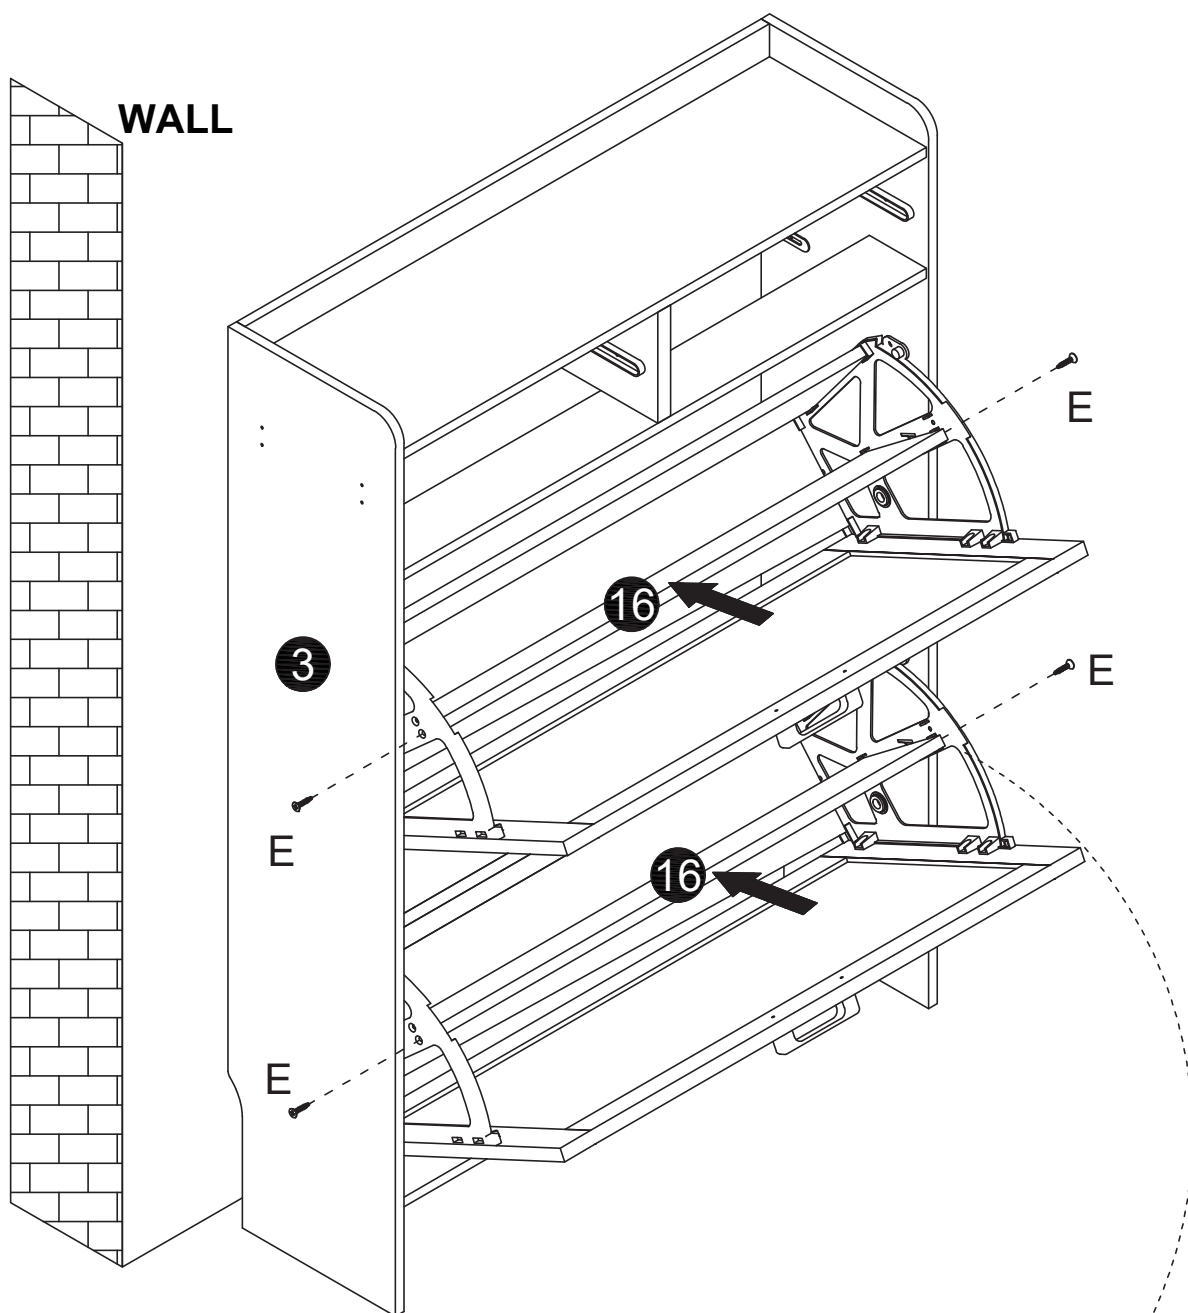


OR

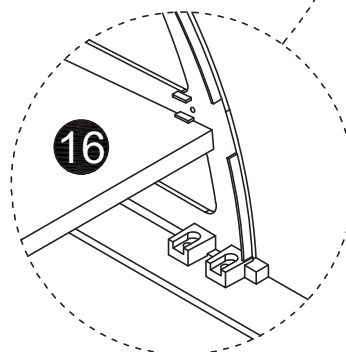


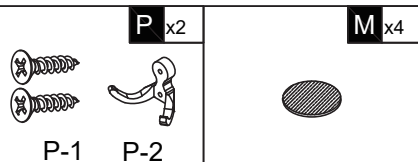



Component P can be freely installed on either panel 3 or panel 4.
The excess holes are allowed to be covered by component M.

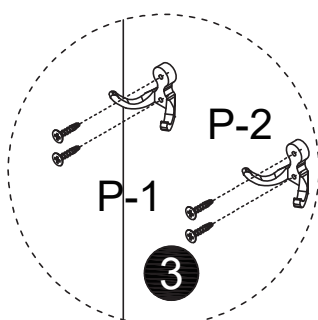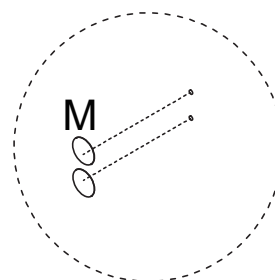

OR

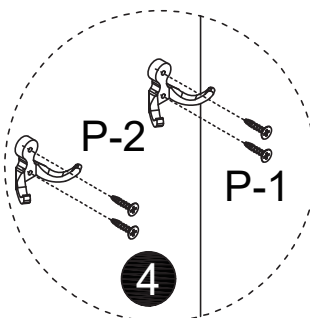

WALL

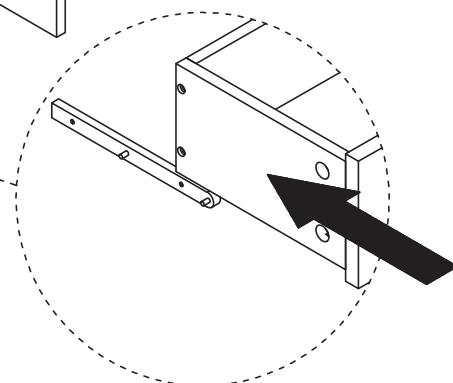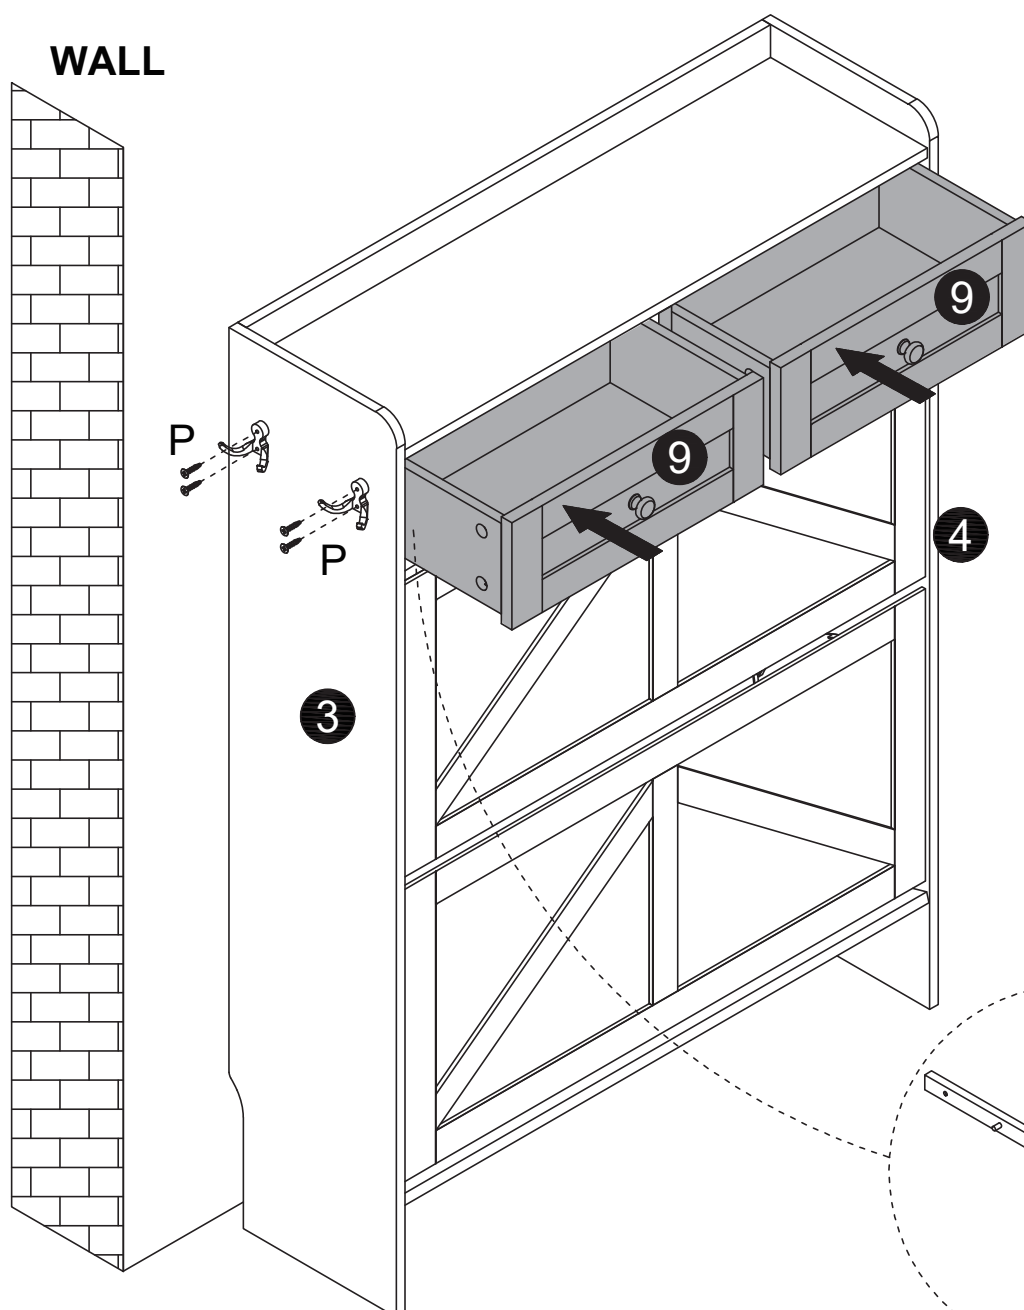

WALL

