

## NOTICE

---

\*Please make sure that you have all the listed parts and check if they are in a good condition before you assemble this item. Please refer to parts and hardware listed below for guidance.

\*This item should be assembled on a soft surface to prevent any scratch on the finish when assembling the item.

\*This item may require a periodic tightening.

\*If you are having difficulty in assembling the item, our friendly Customer Care team is always ready to help.

## PREPARATION

---

\*Before assembling the product, make sure you have all the complete parts. Compare the parts you have to the parts listed here.

\*If any part is missing or damaged, do not attempt to assemble the product.

\*The Estimated Time for Assembly: 10 minutes.

\* Tools Required for Assembly: Allen key (included), phillips screwdriver(not Included ), Drill bit 1/4" (Not Included)

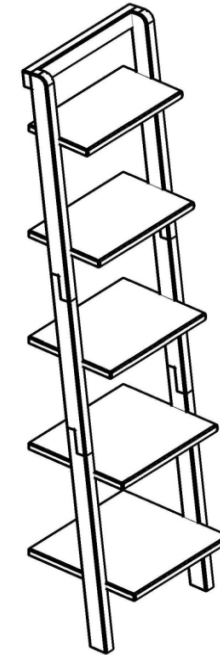
## CARE AND MAINTENANCE

---

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non-abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents, and abrasives. Cleaning should be done with a soft lint-free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

# Owner Manual

Product Dimensions : 16.9"W x 14.0"D x 76.0"H



**WARNING**













**WEIGHT CAPACITY :40 LBS PER SHELF , TOTAL WEIGHT 200 LBS MAXIMUM**

**WARNING :DO NOT STAND ON THE PRODUCT**

**WARNING : DO NOT OVER TORQUE BOLTS**


### Part List and Hardware List

| PIECE | DESCRIPTION      | PICTURE                                                                             | QUANTITY |
|-------|------------------|-------------------------------------------------------------------------------------|----------|
| A     | SHELVES A        |    | 1X       |
| B     | SHELVES B        |    | 1X       |
| C     | SHELVES C        |    | 1X       |
| D     | SHELVES D        |    | 1X       |
| E     | SHELVES E        |    | 1X       |
| F     | LEFT UPPER LEG   |    | 1X       |
| G     | LEFT MIDDLE LEG  |    | 1X       |
| H     | LEFT LOWER LEG   |   | 1X       |
| I     | RIGHT UPPER LEG  |  | 1X       |
| J     | RIGHT MIDDLE LEG |  | 1X       |
| K     | RIGHT LOWER LEG  |  | 1X       |
| L     | TOP BAR          |  | 1X       |


| PIECE | DESCRIPTION     | PICTURE                                                                               | QUANTITY |
|-------|-----------------|---------------------------------------------------------------------------------------|----------|
| HW1   | BOLT M6X35MM    |    | 20X      |
| HW2   | DOWEL Ø8 X 32   |    | 14X      |
| HW3   | L PLATE         |    | 1X       |
| HW4   | FISHER S6       |    | 1X       |
| HW5   | ALLEN KEY L.4   |    | 1X       |
| HW6   | SCREW 8X1-1/4   |    | 1X       |
| HW7   | SCREW 8 x 5/8   |    | 1X       |
| HW8   | METAL PLATE     |    | 2X       |
| HW9   | SCREW 8 x 1/2   |  | 4X       |
| HW10  | FLAT WASHER 6MM |  | 20X      |

## PREPARATION

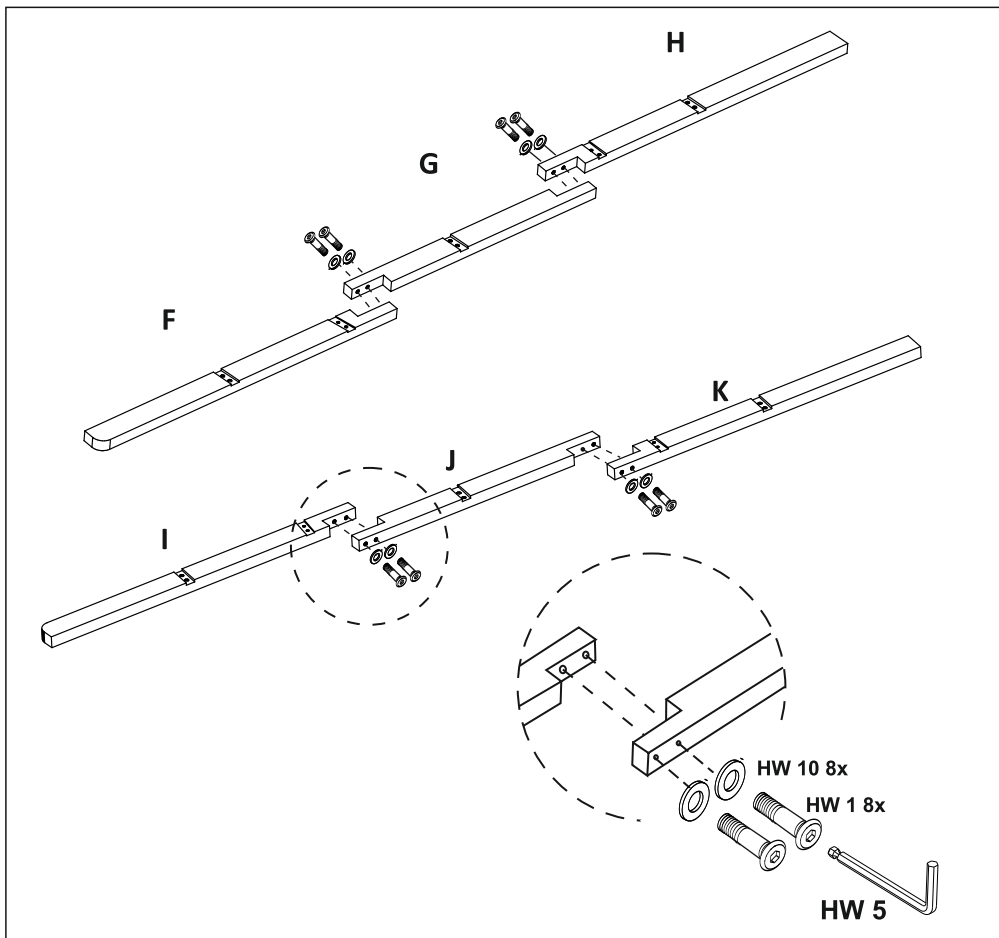
- \* Before assembling the product, make sure you have all the complete parts. Compare the parts you have to the parts listed here.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* The Estimated Time for Assembly: 10 minutes.
- \* Tools Required for Assembly : Allen key (included), phillips screwdriver(not Included ), Drill 1/4" (Not Include)



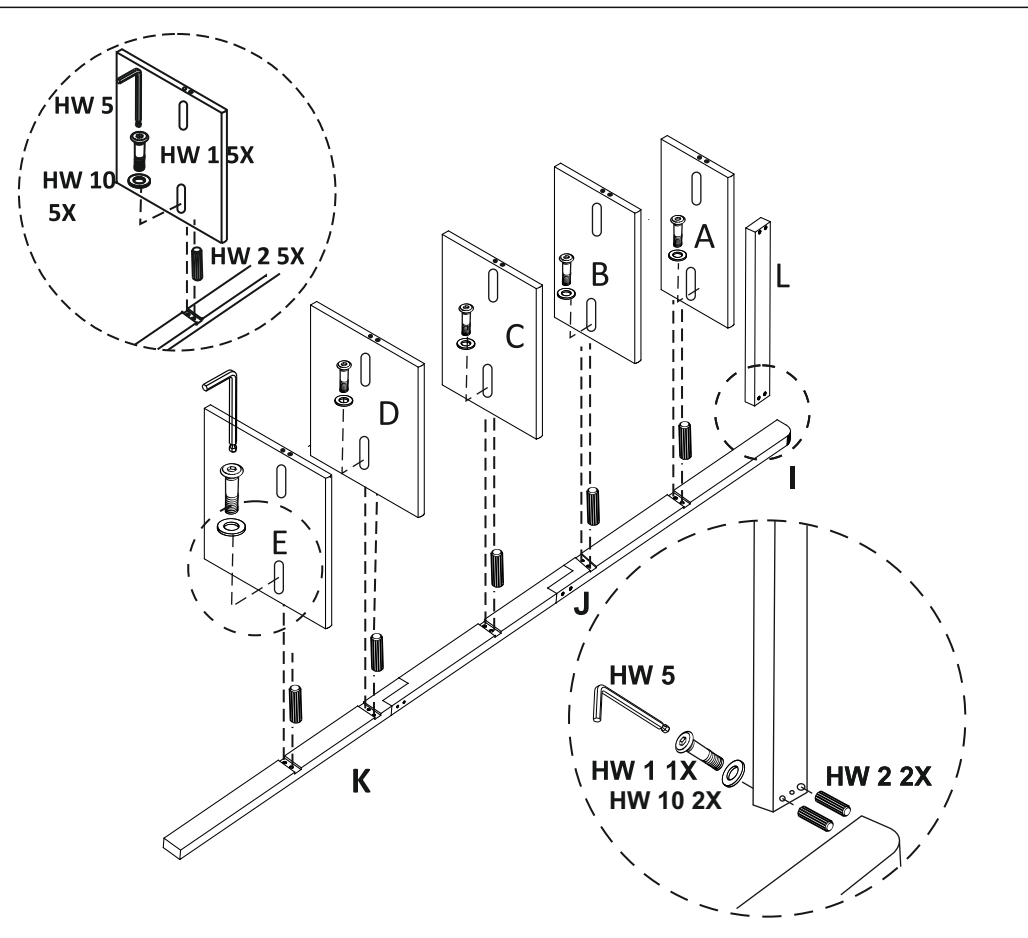**STEP 1 :** ATTACH THE LEFT LEG F/G/H USING BOLT (HW 1), FLAT WASHER (HW 10), TIGHTEN USING ALLEN KEY (HW 5). REPEAT THE STEP FOR RIGHT LEG I/J/K .




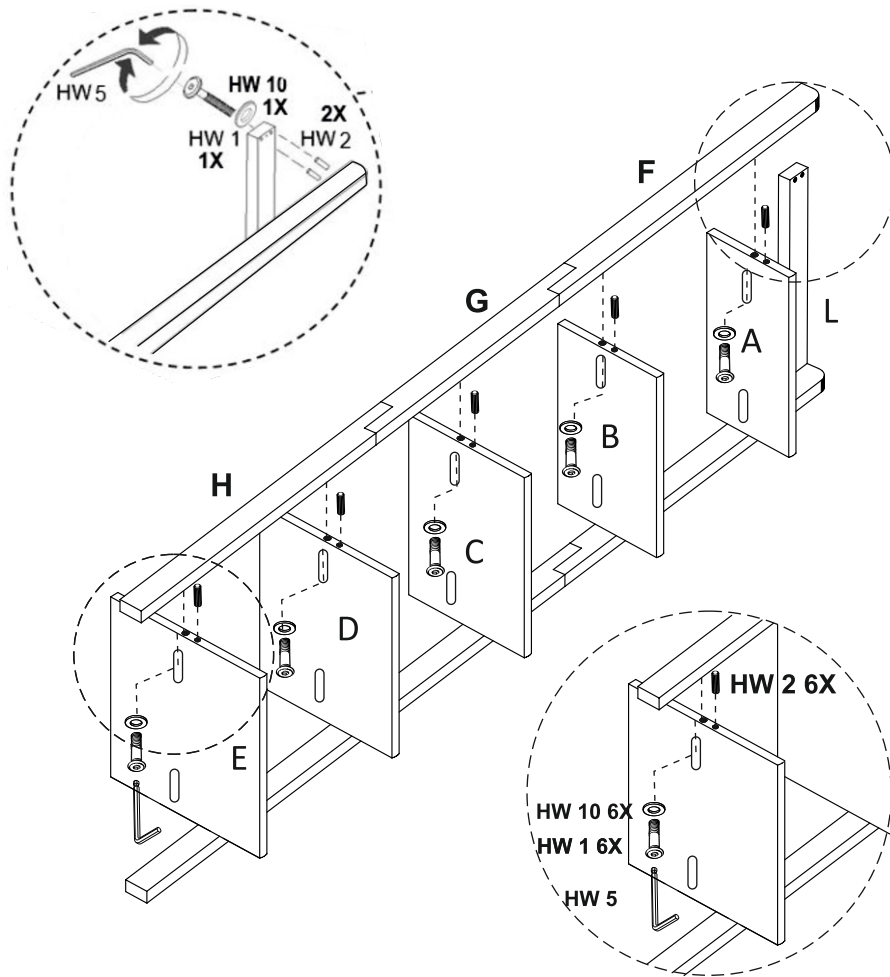**STEP 2 :** ATTACH SHELVES A/B/C/D/E , TOP BAR (L) TO THE LEFT LEG USING DOWEL (HW 2) ,BOLT (HW 1),FLAT WASHER (HW 10), TIGHTEN USING ALLEN KEY (HW 5).




**STEP 3 :** INSERT WOODEN DOWEL (HW 2), TO THE SHELVES A/B/C/D/E , TOP BAR (L) .ATTACH THE RIGHT LEG ASSEMBLY F/G/H AND SECURE WITH BOLT (HW 1) ,FLAT WASHER (HW 10), TIGHTEN USING ALLEN KEY (HW 5).

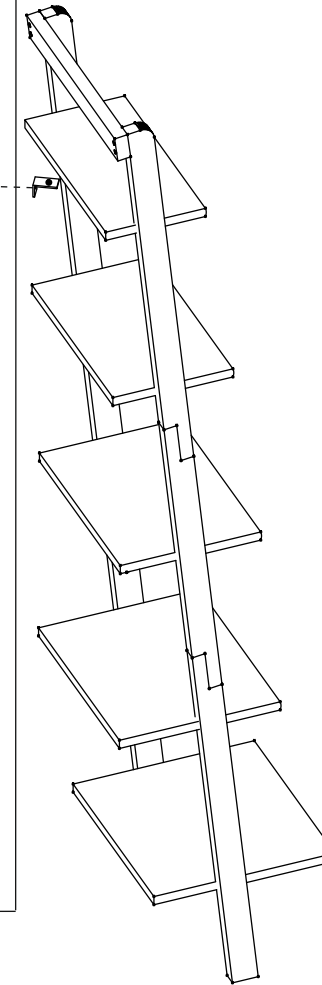
WALL



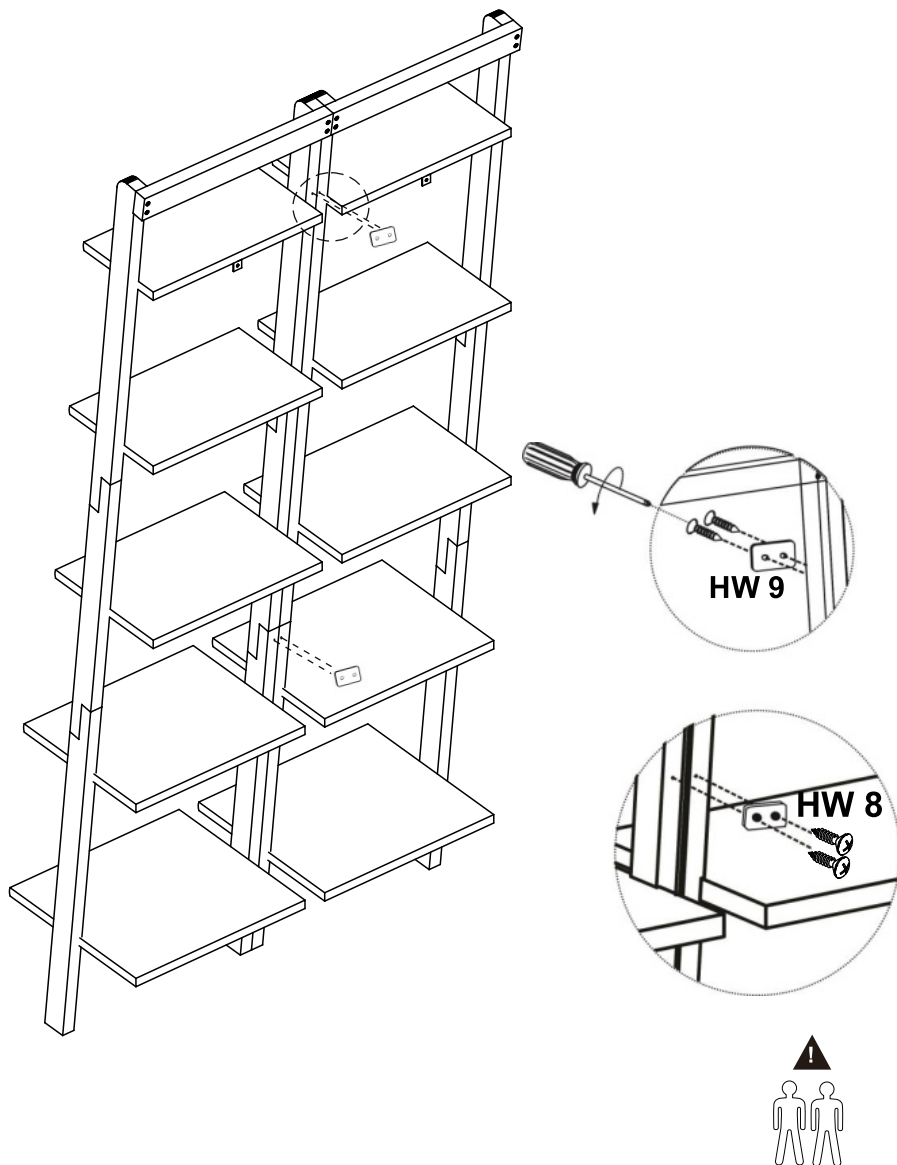**STEP 4 :** SECURING THE ETAGERE FROM TIPPING WITH ANTI TIP KIT. AFTER L PLATE (HW 3) ON SHELF A TO THE FISHER ON THE WALL WITH SCREW 8 X 5/8" (HW 7),DRILL THE WALL WITH 1/4" DRILL BIT AND INSTALL FISHER S6 (HW 4). ALIGN L PLATE (HW 3) ON SHELF A TO THE FISHER ON THE WALL USING SCREW 8X 1-1/4" (HW 6)TIGHTEN WITH PHILLIP SCREWDRIVER.



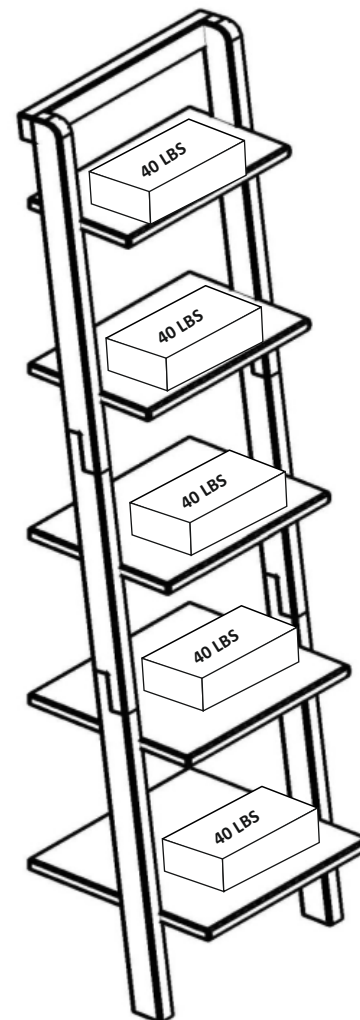**STEP 5 :** THIS IS APPLICABLE ONLY TO A PAIR OF ETAGERE.  
SKIP THIS INSTRUCTIONS IF YOU BUY A SINGLE ITEM .



**MAXIMUM WEIGHT**  
40 LBS PER SHELF , EVENLY DISTRIBUTED .  
TOTAL WEIGHT 200 LBS MAXIMUM.