


---

# ASSEMBLY INSTRUCTIONS

## STOOL

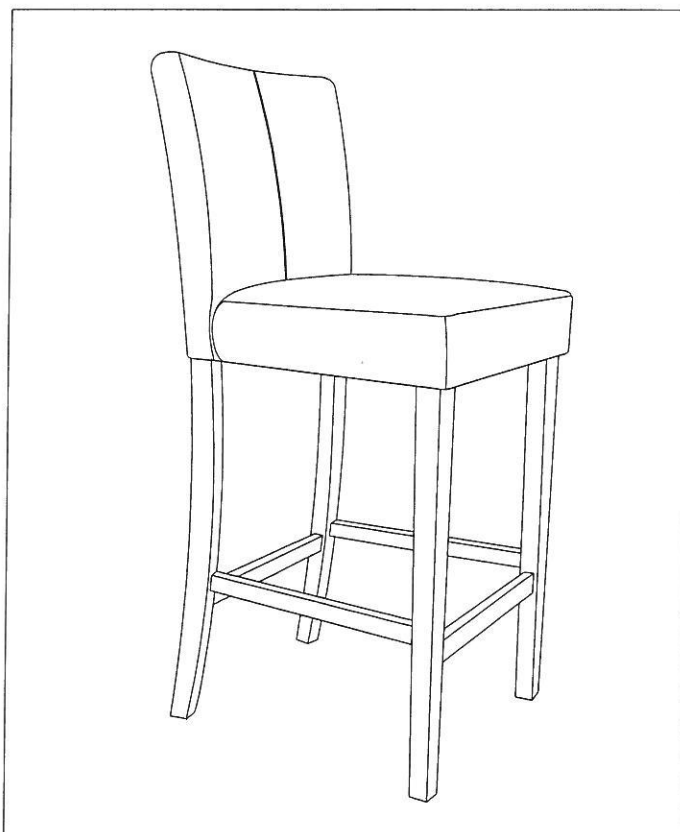


**We are here to help!**

MADE IN CHINA

---

## PARTS IDENTIFICATION



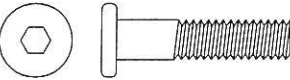


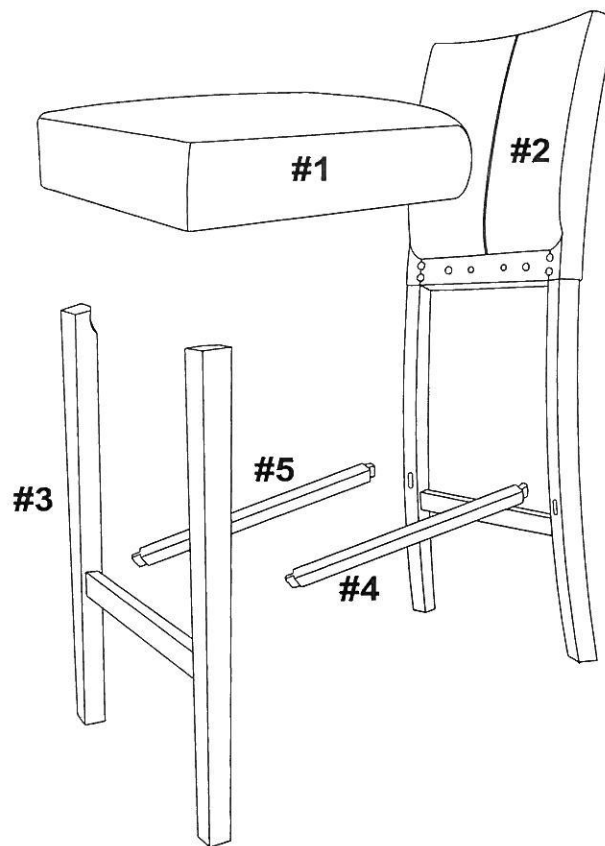
ITEM	DESCRIPTION	QTY
#1	SEAT ASSEMBLY	01
#2	BACK ASSEMBLY	01
#3	FRONT LEG ASSEMBLY	01
#4	RIGHT SIDE STRETCHER	01
#5	LEFT SIDE STRETCHER	01




For ease of identification all parts are labeled to correspond to the Step number in which the part is used.

## HARDWARE IDENTIFICATION

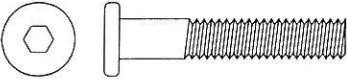
Please line up the hardware with the correct full size image to make sure you are installing the hardware correctly.

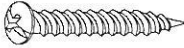ITEM	PICTURE	DESCRIPTION	QTY
A	 (Ø5/16" x 3") Not to Scale	BOLT	08
B	 Not to Scale	ALLEN KEY	01
G	 (Ø5/16" x 2") Not to Scale	BOLT FOR BACK RAIL	02
D	 (Ø5/16") Not to Scale	SPRING WASHER	10
E	 (Ø5/16") Not to Scale	FLAT WASHER	10
H	 (Ø5 x 45mm) Not to Scale	SCREW	04

STEP 1.


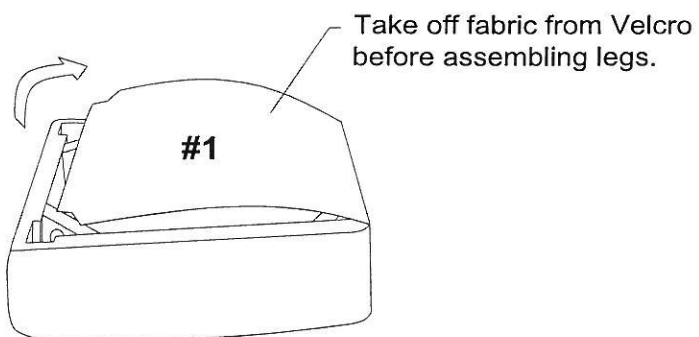


STEP 2.

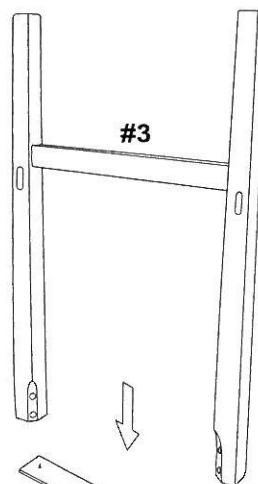

Remove the shipping cleat from end of front leg assembly #3.


STEP 3.

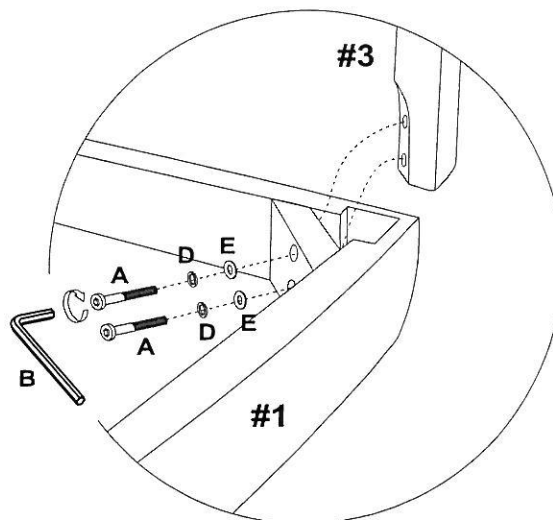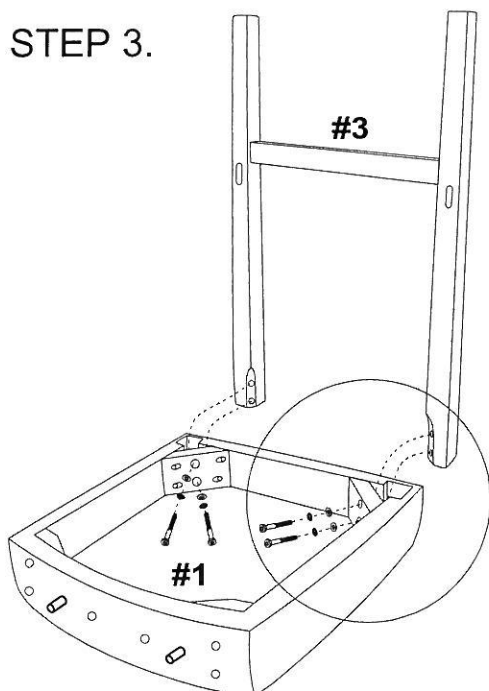


IMPORTANT:

1. DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ALL BOLTS ARE COMPLETELY LINED UP AND INSERTED INTO HOLES / NUTS.
2. DO NOT OVER TIGHTEN SCREWS AND BOLTS TO AVOID STRIPPING.


# STEP 4.

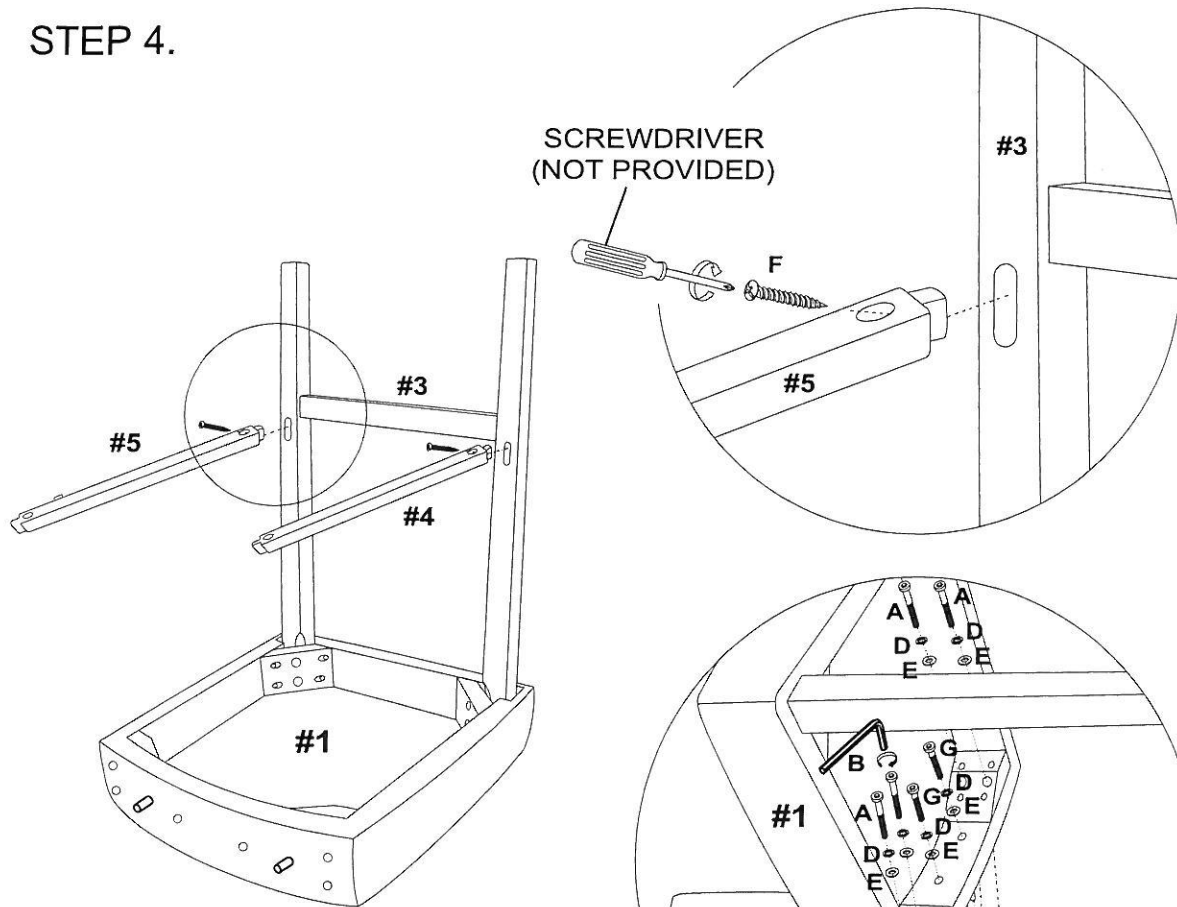


# STEP 5.

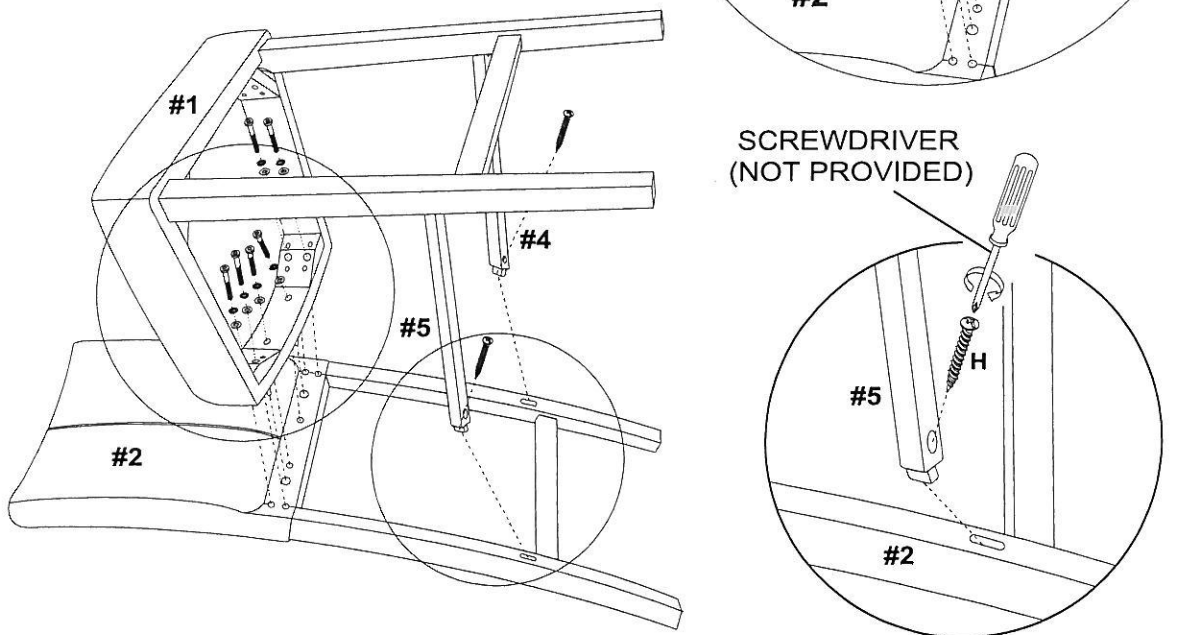

STEP 6.

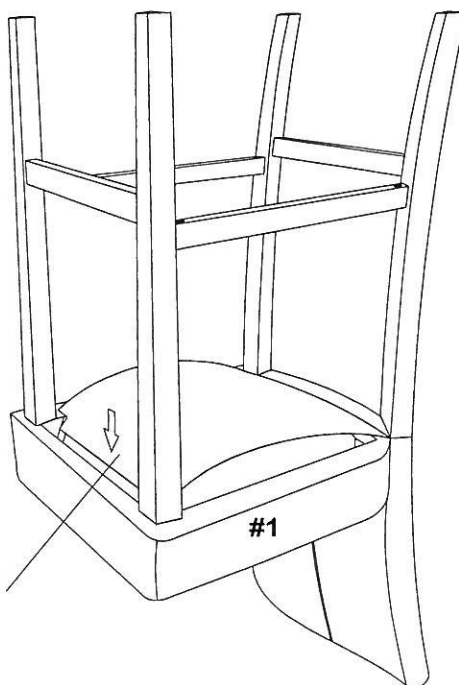

Re-attach fabric with Velcro once legs are fully assembled.

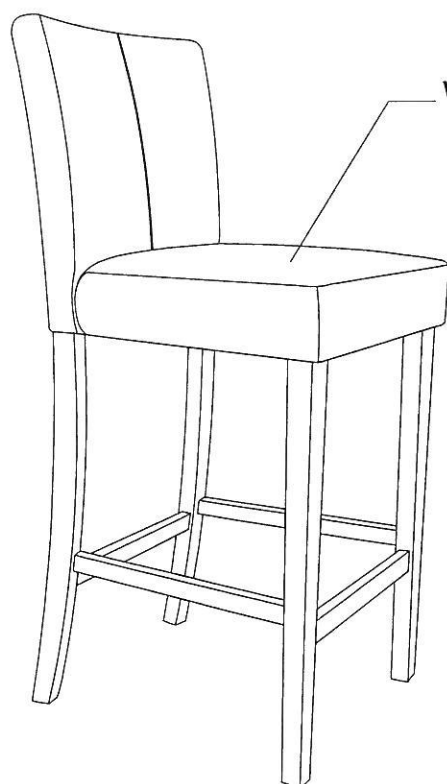

Weight Limit 250 LBS

## **WARRANTY**

### **WHAT IS COVERED**

### **WHAT IS NOT COVERED**