




STEP1

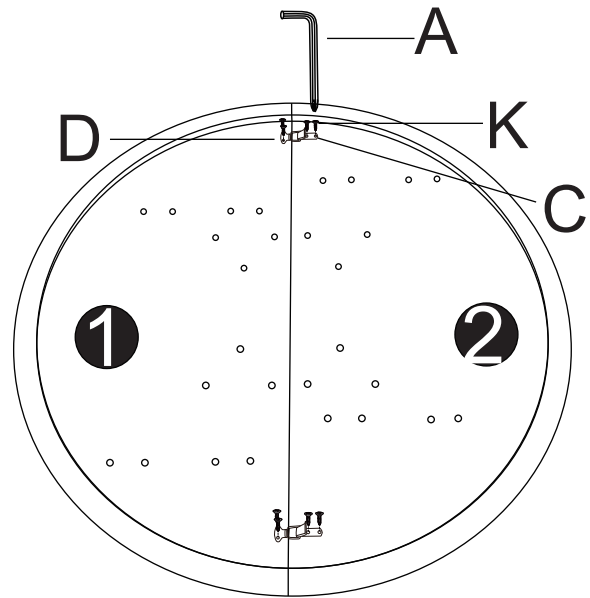

STEP2

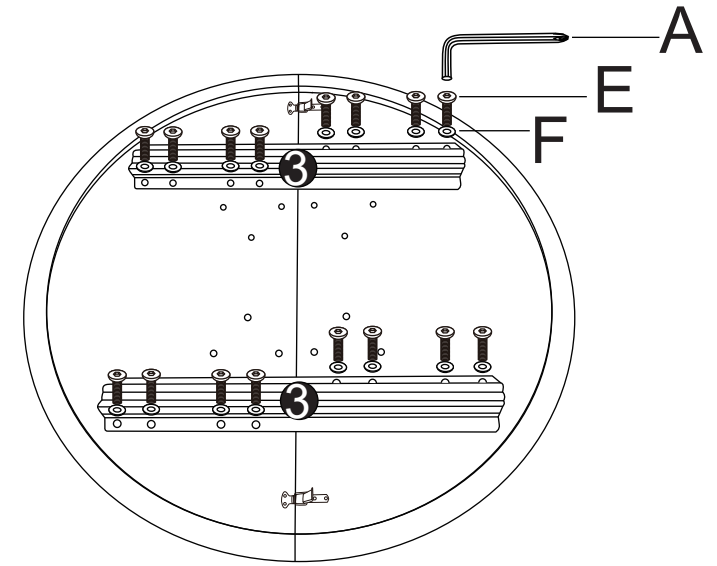


STEP3

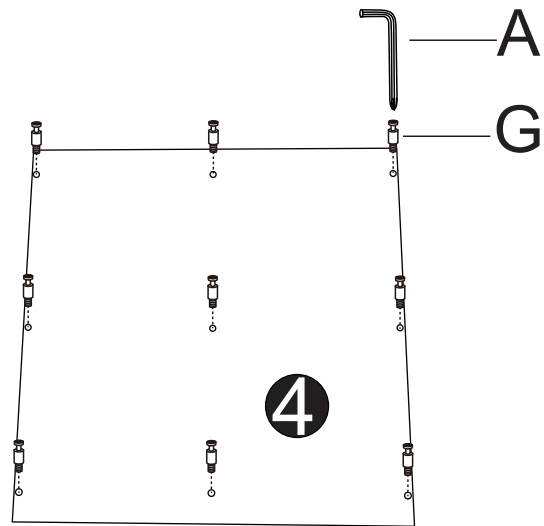

x2


STEP4

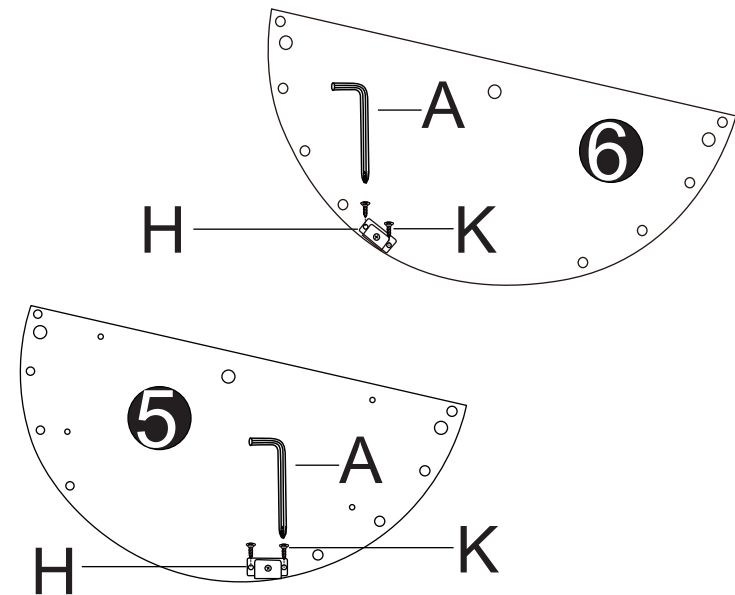

x2


STEP5

x2

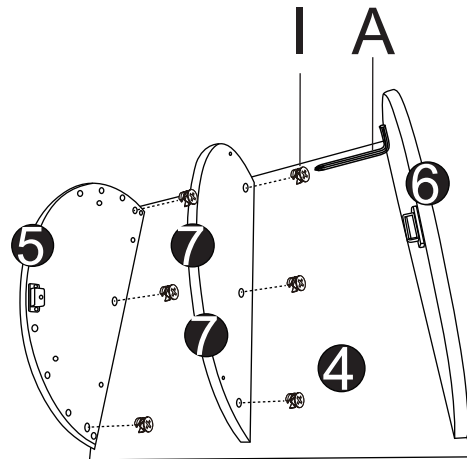


STEP6

x2

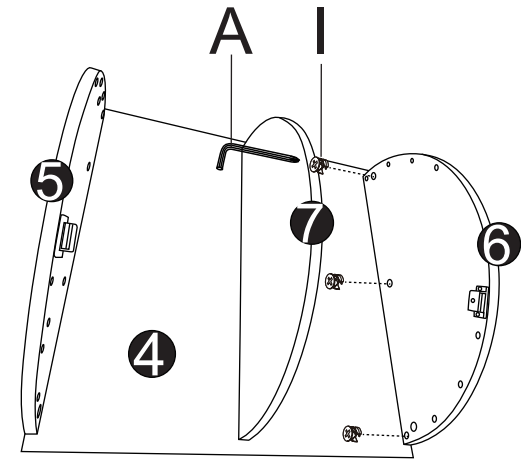


STEP7

x2

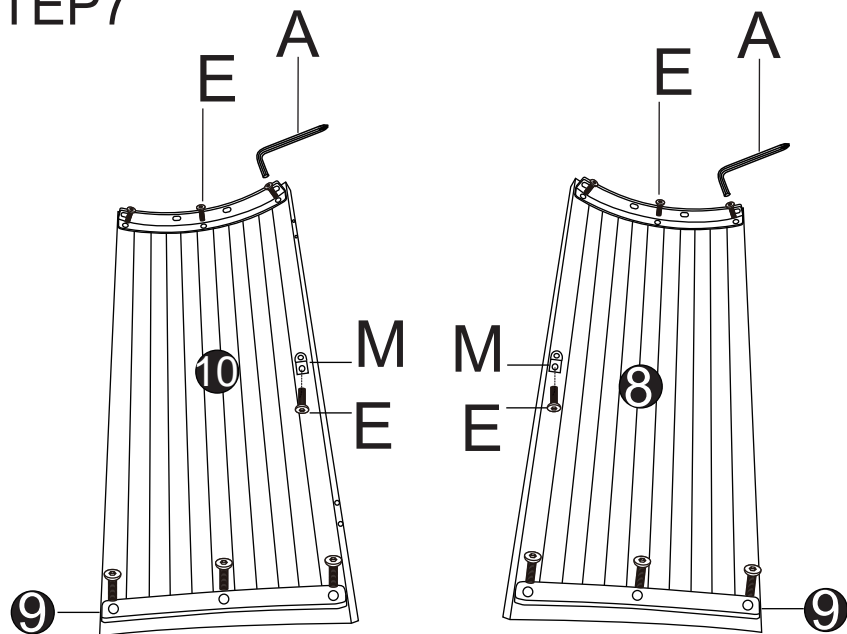


STEP8

x2

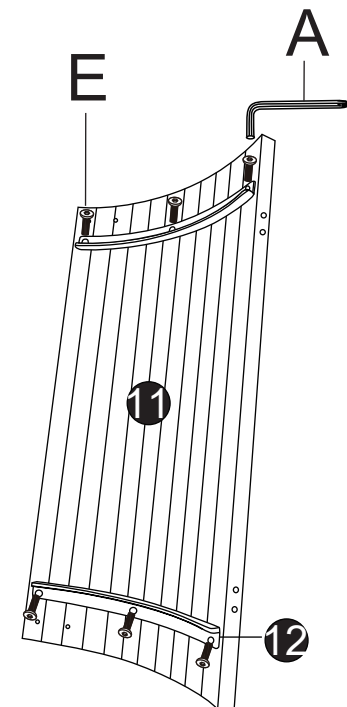


STEP9

x2

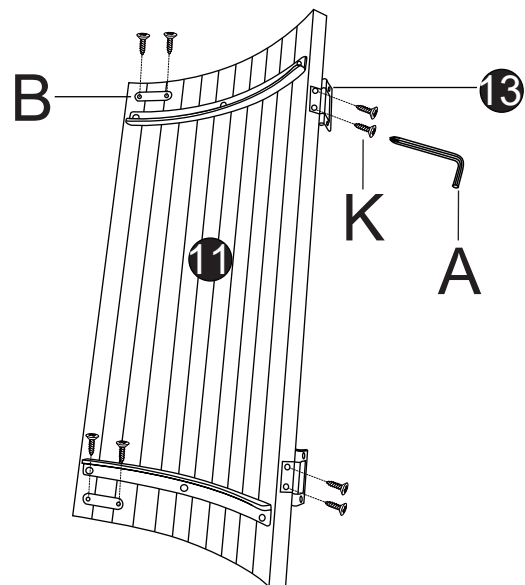




STEP10

x2

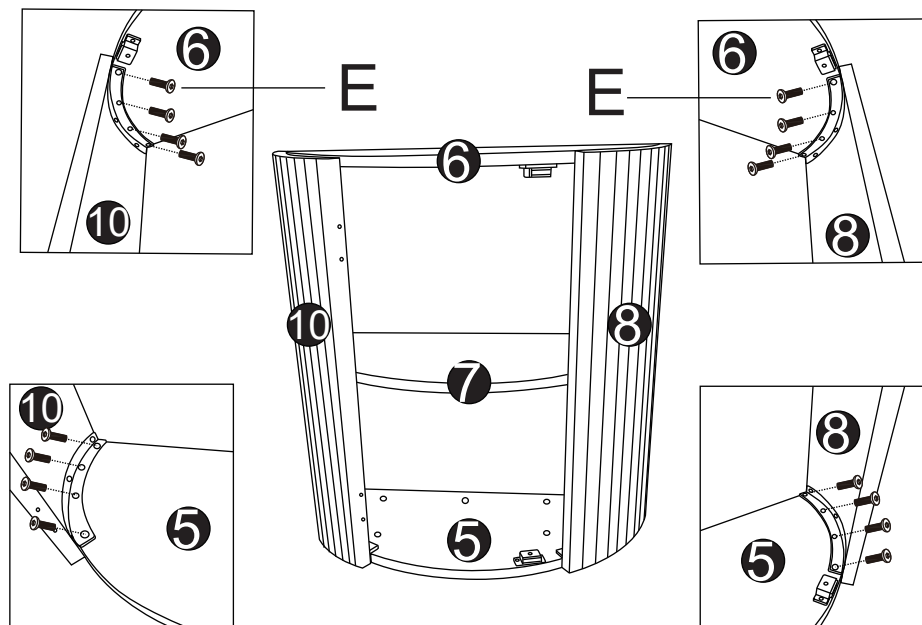

STEP11


x2

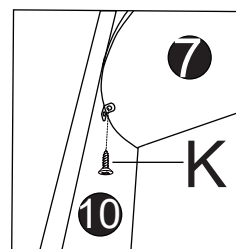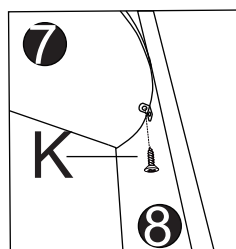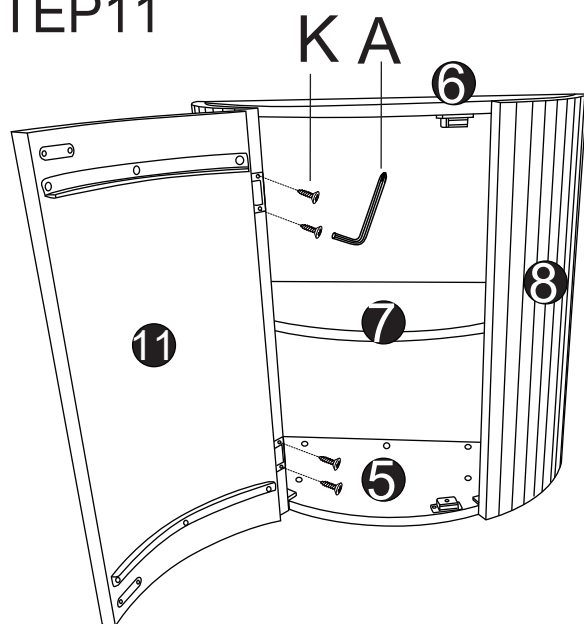

Please pay attention: Must keep the top edge of the door to be same level of side boards.


STEP12

x2

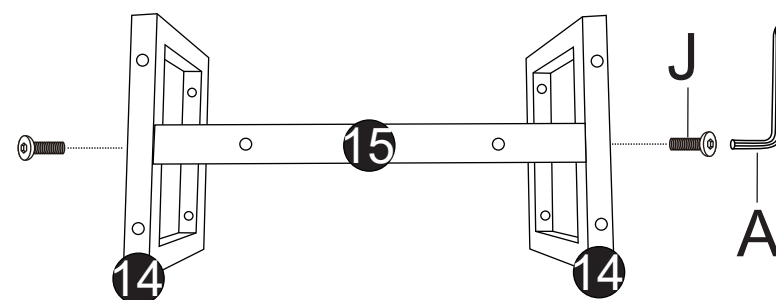


STEP13

x2

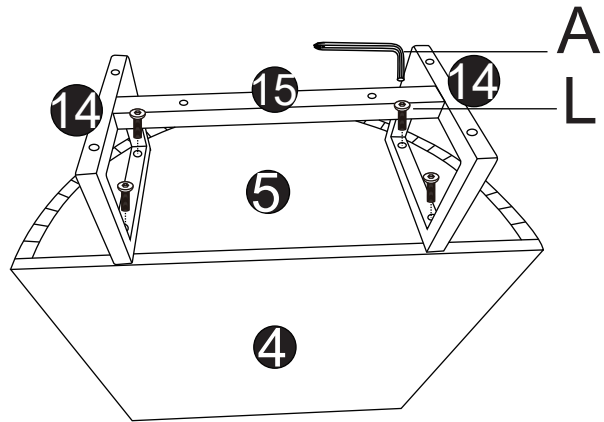


STEP14


x2

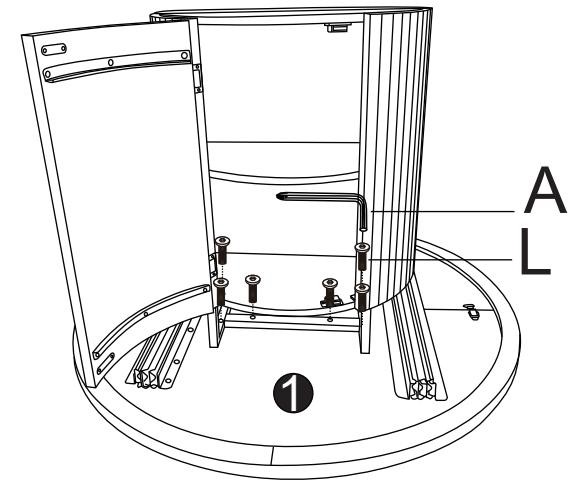


STEP15

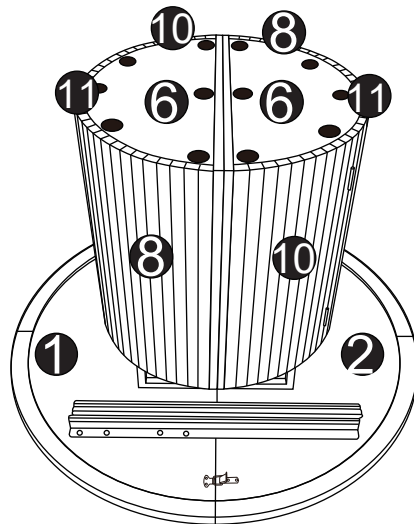

STEP16

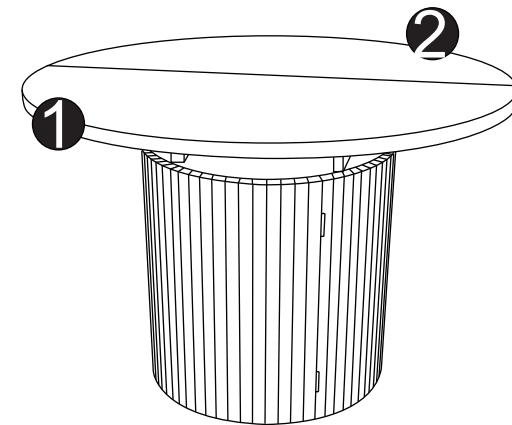


STEP17

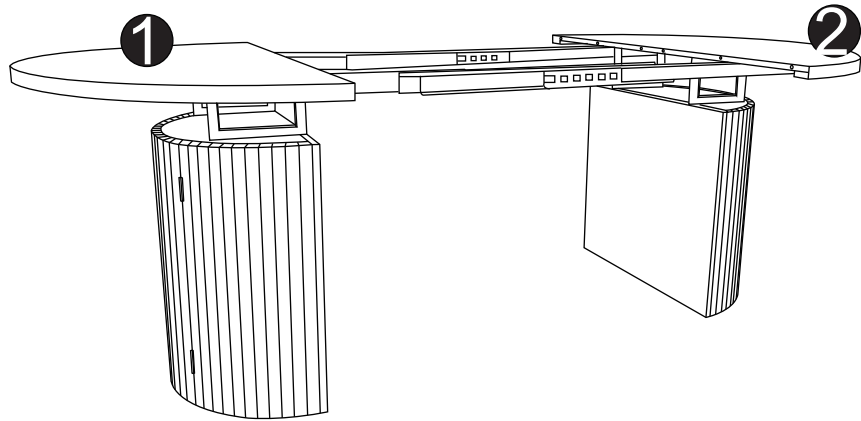

















STEP18

x3

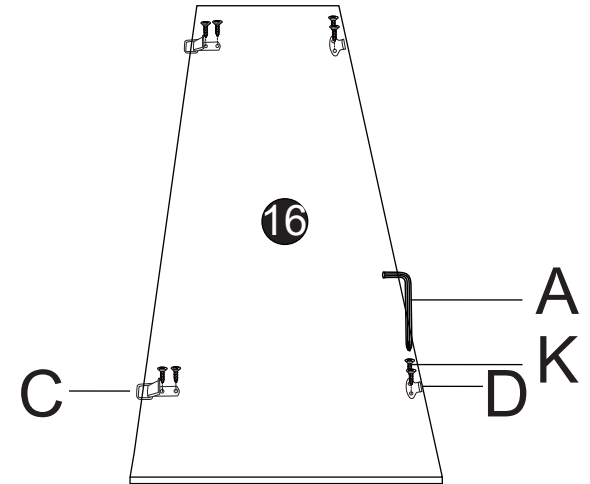

STEP19

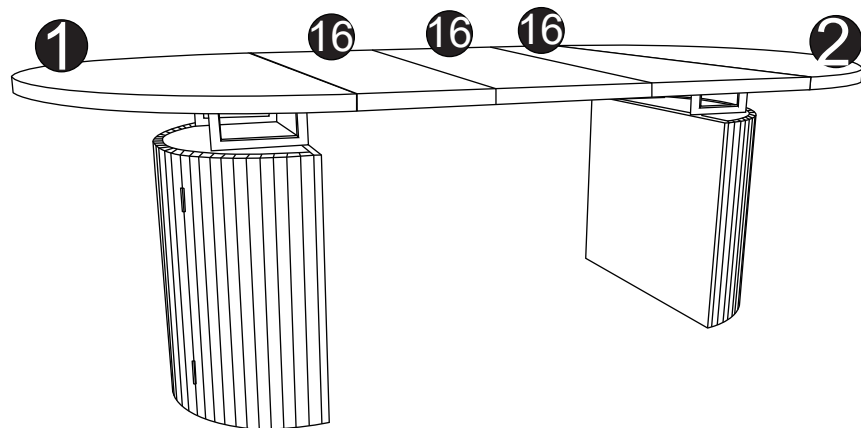

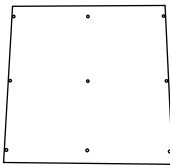1  x1	2  x1	3  x2	4  x2	5  x2	6  x2	7  x2
8  x2	9  x8	10  x2	11  x2	12  x4	13  x4	14  x4
15  x2	16  x3	A  x1	B  x4	C  x8	D  x8	E  M6x13mm x88
F  M6x16mm x16	G  x18	H  x4	I  x18	J  M6x40mm x4	K  M3x12mm x68	L  M6x30mm x20
M  x4						