




List of accessories (using transparent door models as an example)

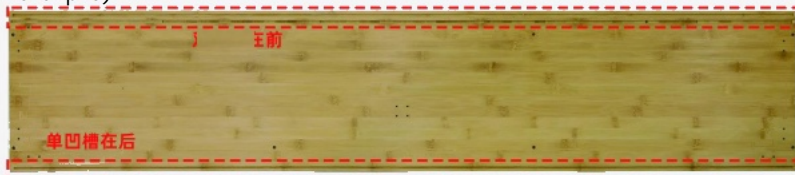


Bottom layer board * 1

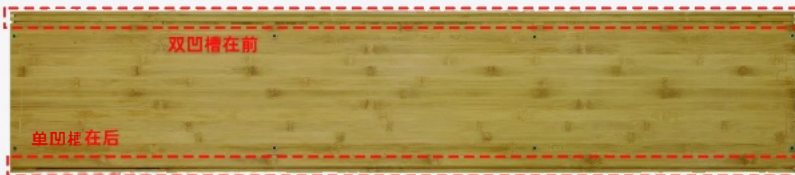

Top layer board * 1



Side bracket left * 1



Side bracket right * 1



Middle bracket * 2



Three legged stick



Middle foot stick



Lock screws



Lock nut



Door panel * 3



Backboard * 3



Large screw



Small screw



tool

Start assembly



1. Remove the bottom layer and triangular housing rod with small screws



2. Take out the middle foot stick and install it with a small screw installation thread



3. Flip the shelf and remove the right side bracket and install the left side bracket with a large screw
(Align the side bracket with the single groove of the bottom layer board)



4. Remove the middle bracket and install it with large screws



5. Take out the backboard and insert it along the bracket groove



6. Remove the top layer plate hole and screw in the locking screw



4. Then align the top layer locking screws with the holes - insert into the bracket
(Top layer board with double grooves in front)



5. Take out the door panel and gently pry open the top department board and the entrance board



6. Remove the locking nut - place it in the bracket hole and tighten it