

ASSEMBLY INSTRUCTIONS

Queen

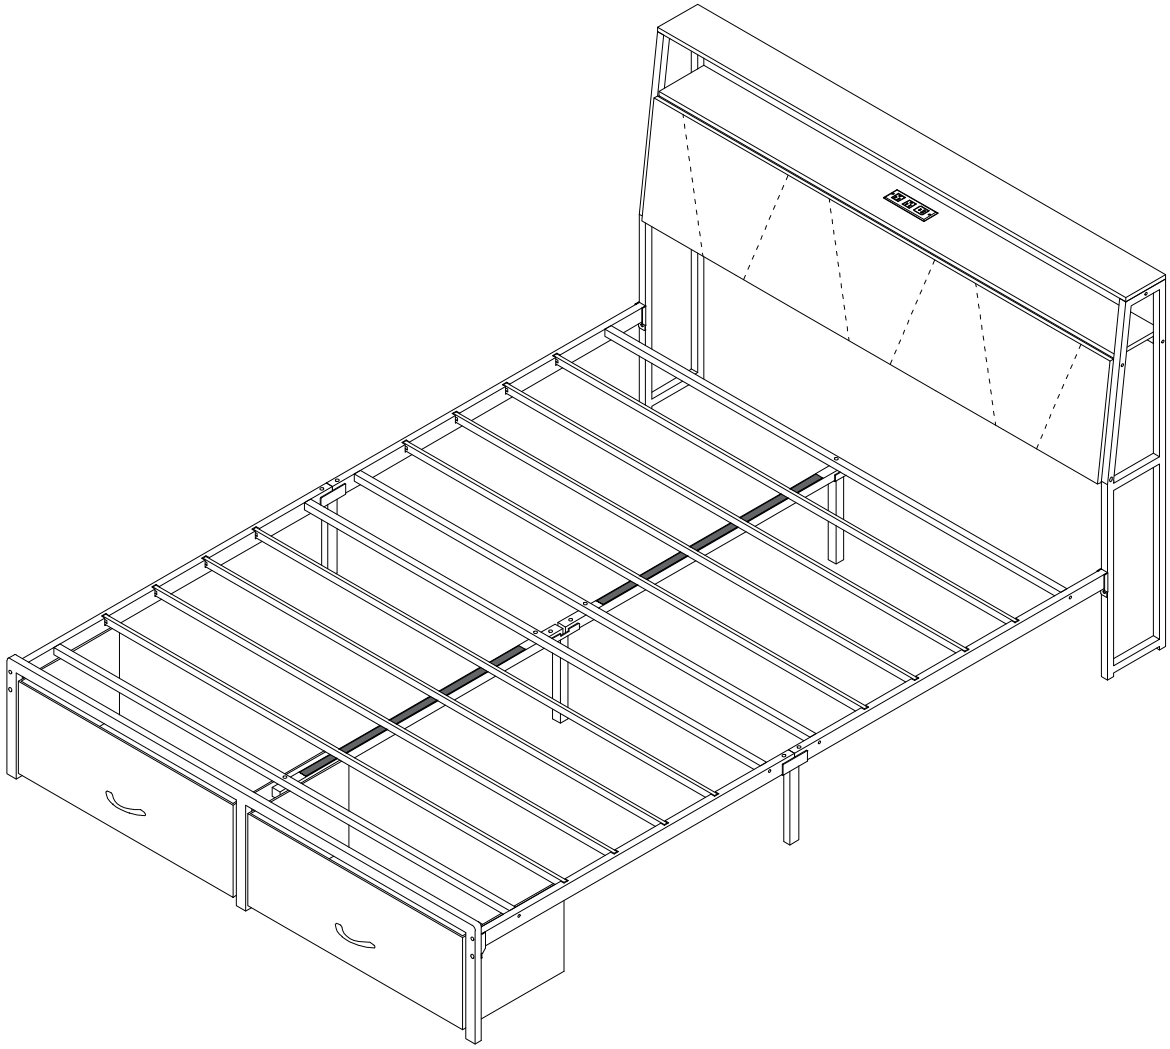


Note:
Should be assembled on flat ground to keep balance.
It needs at least two people to install.
Before starting the assembly, you must read the whole manual and follow the instructions.


EXPLODED VIEW

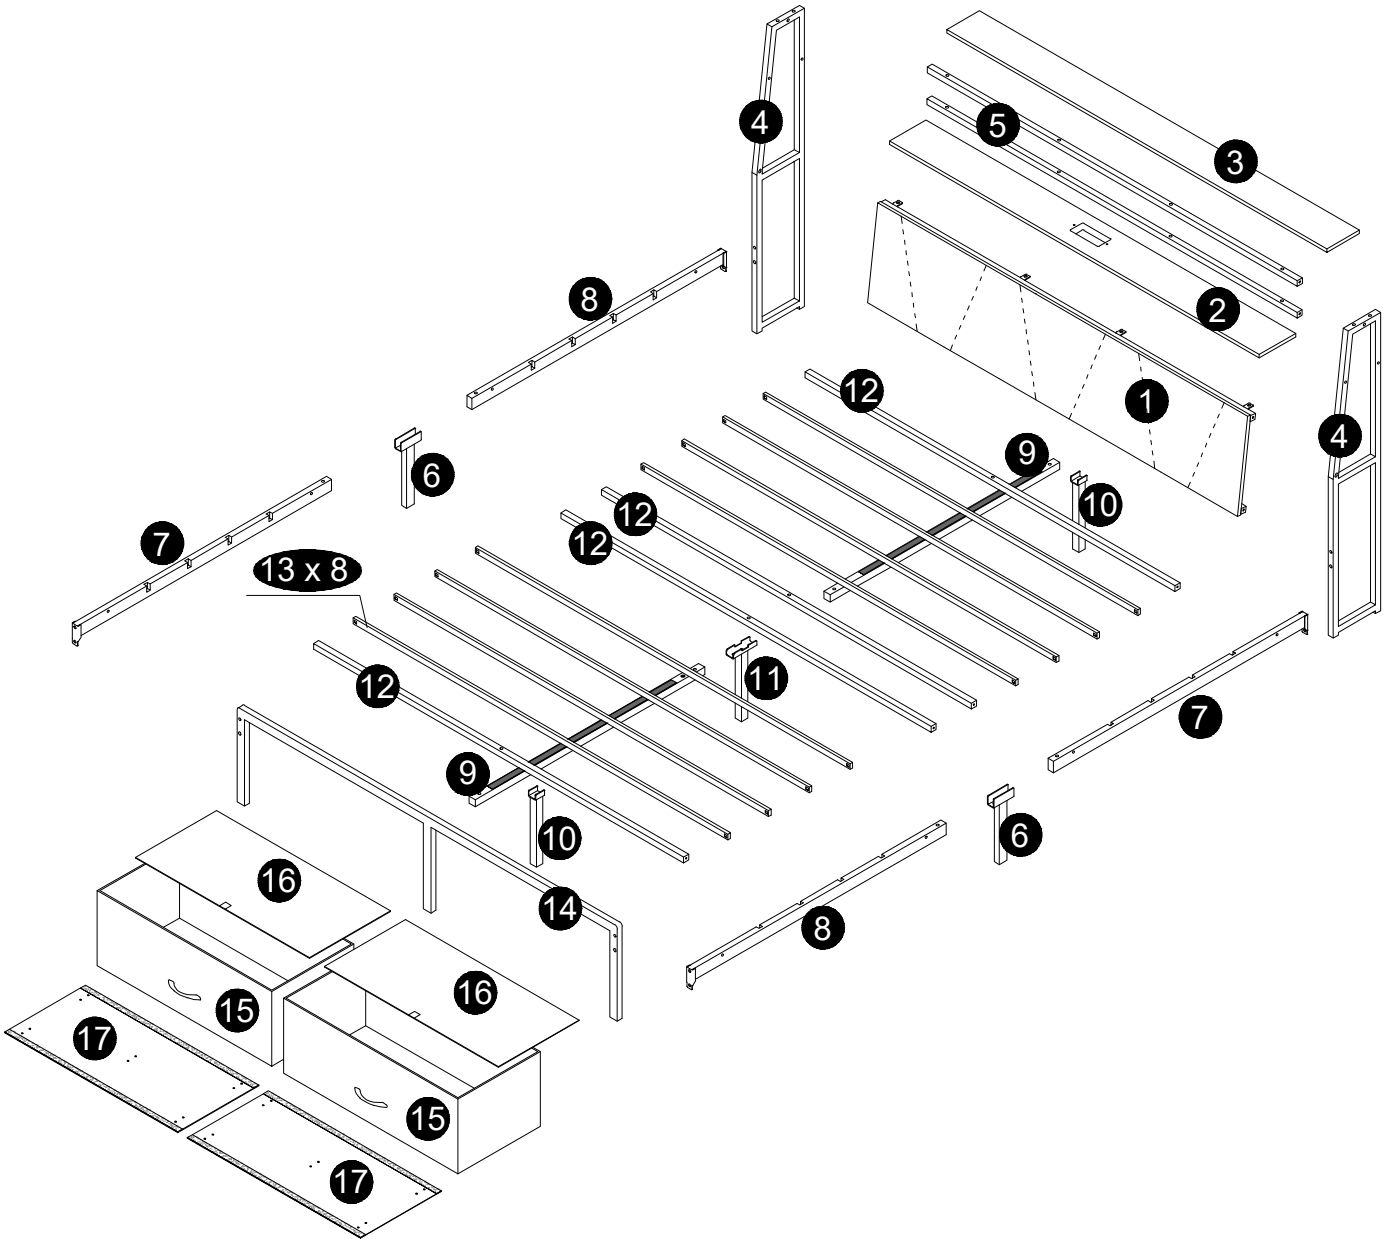


⚠ Pls make sure all the accessories are complete!

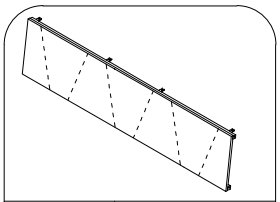


1	1pc

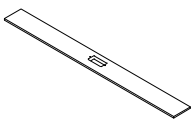


2	1pc

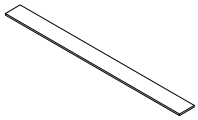


3	1pc




4	2pcs




5	2pcs



6	2pcs

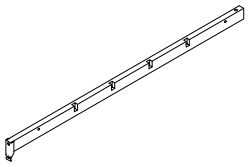


7	2pcs

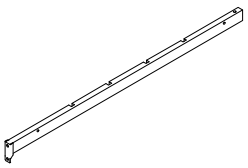


8	2pcs




9	2pcs



10	2pcs




11	1pc




12	4pcs




13	8pcs

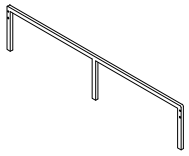


14	1pc



15	2pcs



16	2pcs

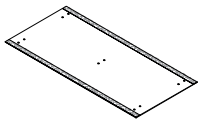

17	2pcs




18	10pcs




19	2pcs




20	5pcs



21	1pc



22	1pc



23	1pc



M6x28mm

A 28pcs



M6x10mm

B 4pcs



M3x10mm

C 5pcs



M8x55mm

D 6pcs



M8x35mm

E 10pcs




M3x15mm

F 2pcs



M4x8mm

G 24pcs

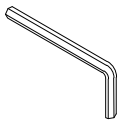

S5




S4



PH2

Step1

A		M6x28mm	6pcs

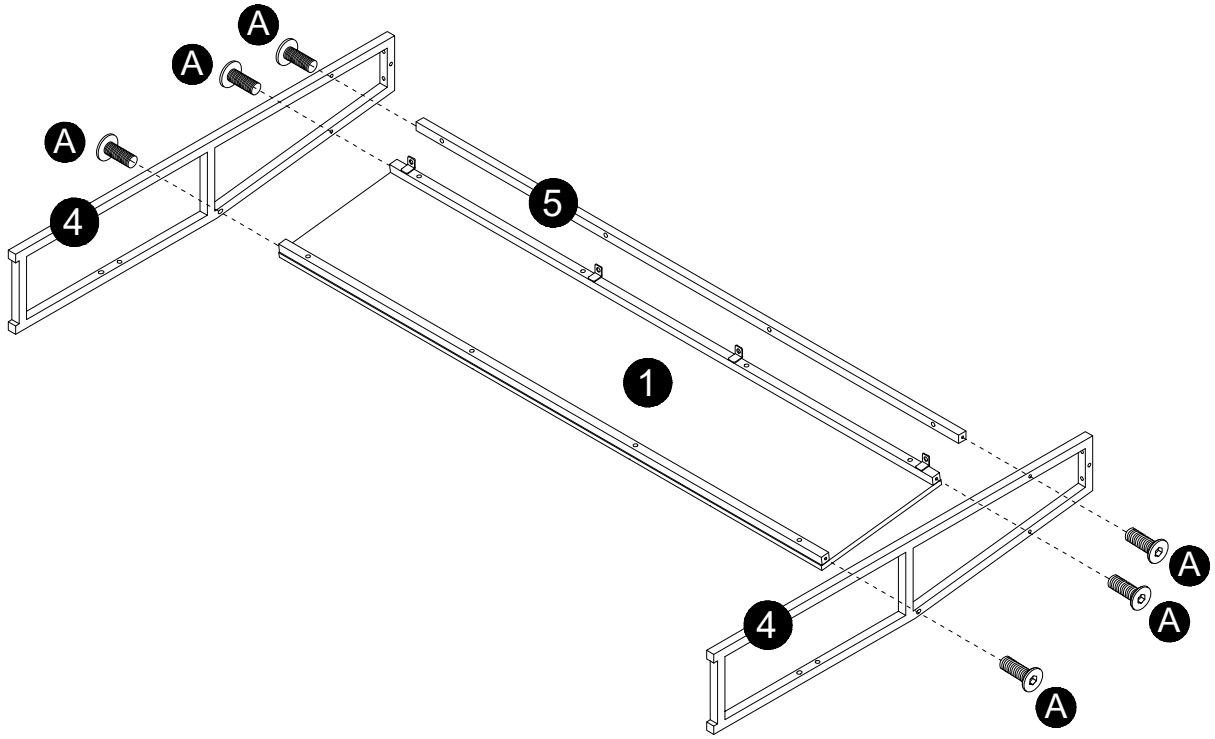



Please do not tighten any screws until all of them are inserted into the holes

Step2

A		M6x28mm	4pcs
B		M6x10mm	4pcs


Please note the installation direction

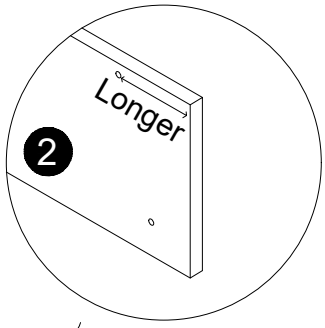

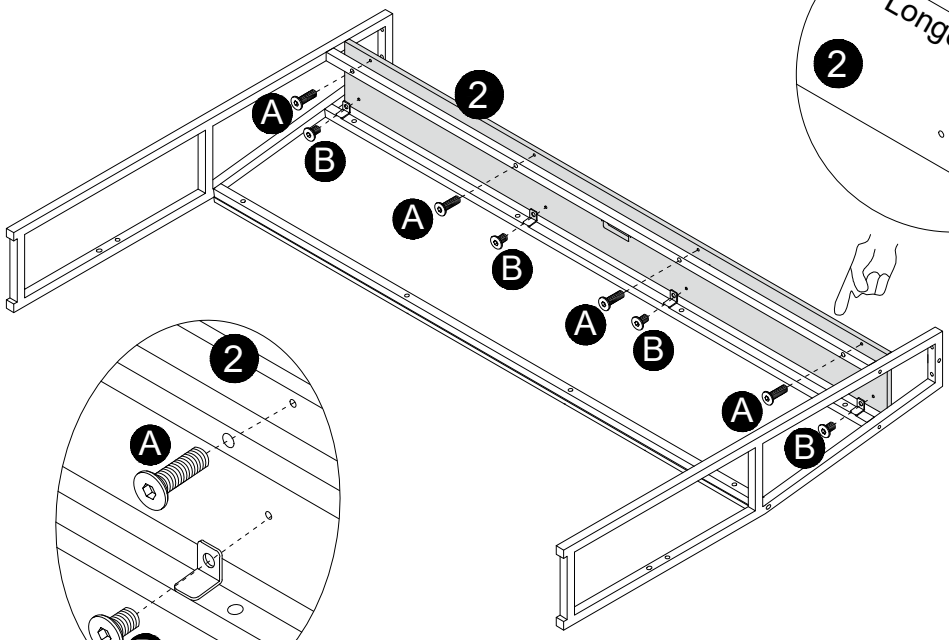

Step3


A		M6x28mm	2pcs

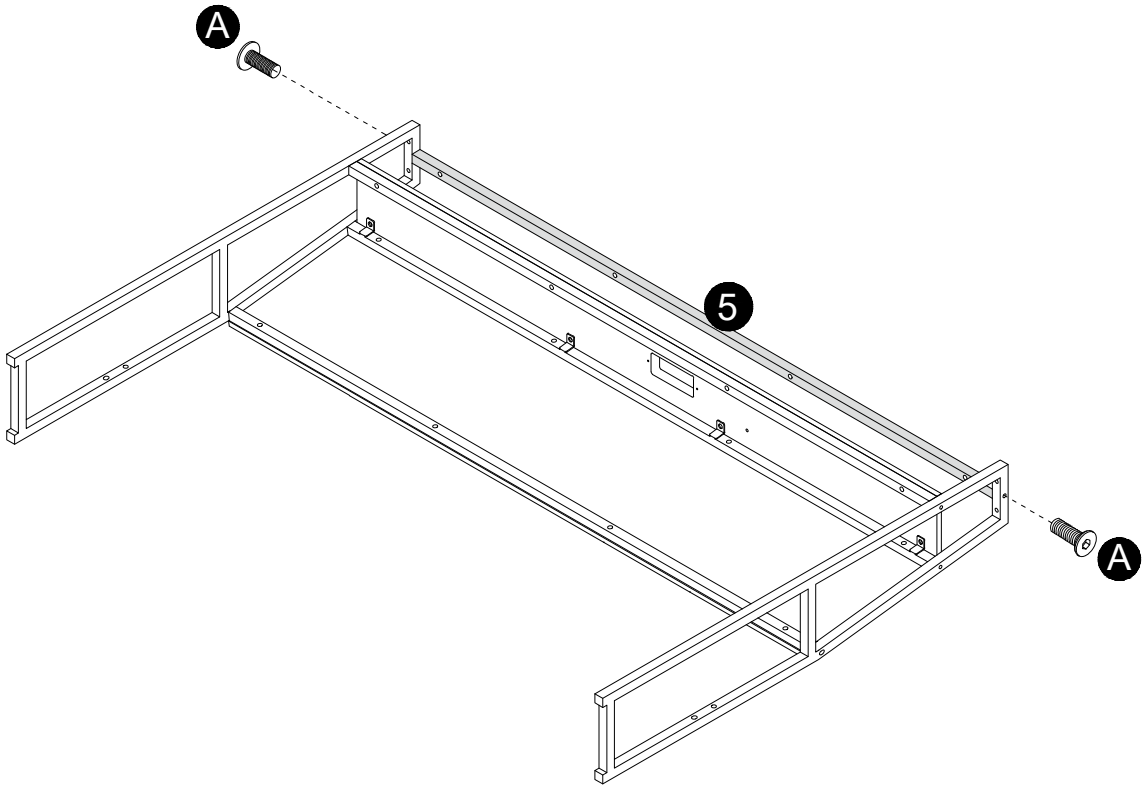

Step4

A		M6x28mm	6pcs

Please note the installation direction

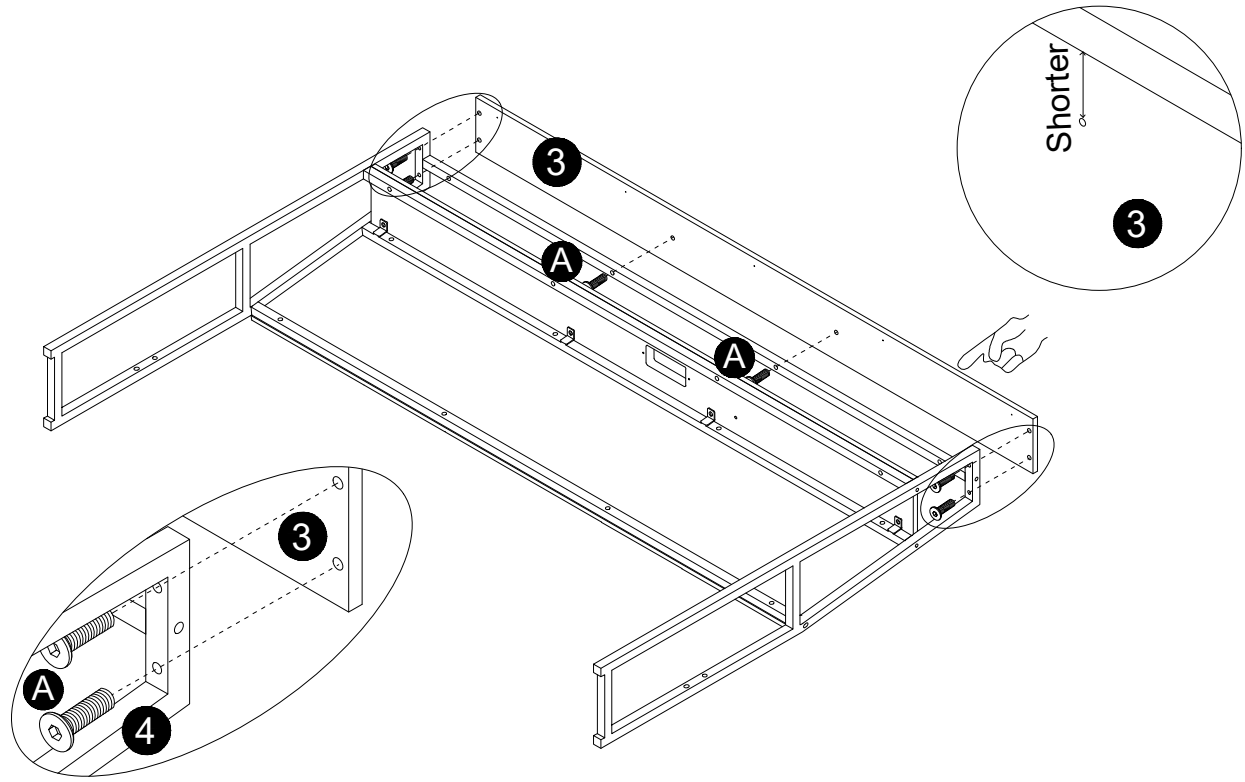


Step5

C		M3x10mm	5pcs


Step1:







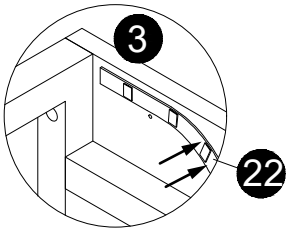

Step2:

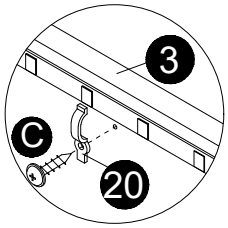


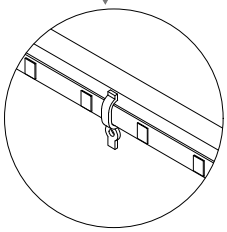

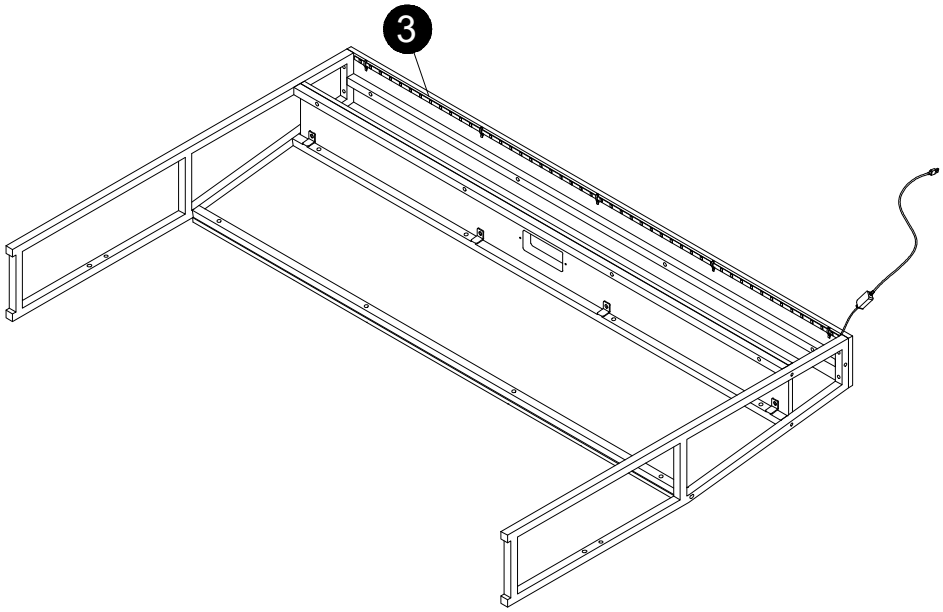


Step6

D		M8x55mm	4pcs

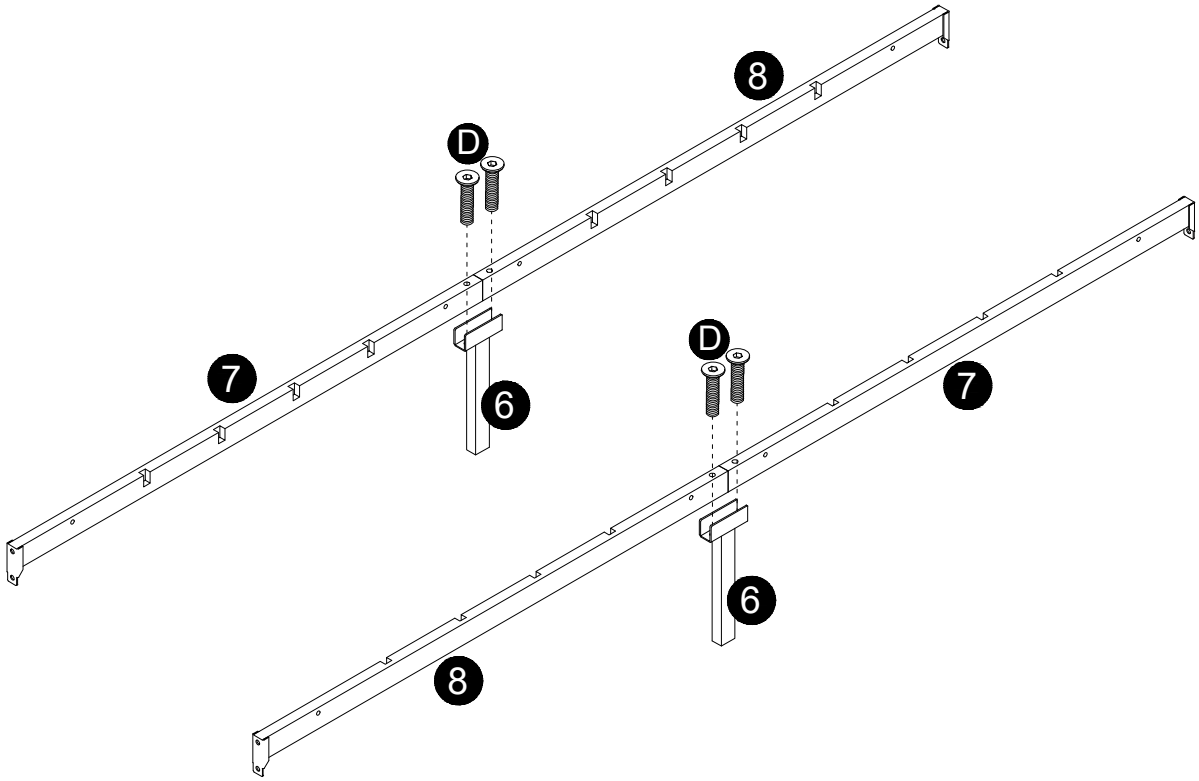

Step7

E		M8x35mm	4pcs

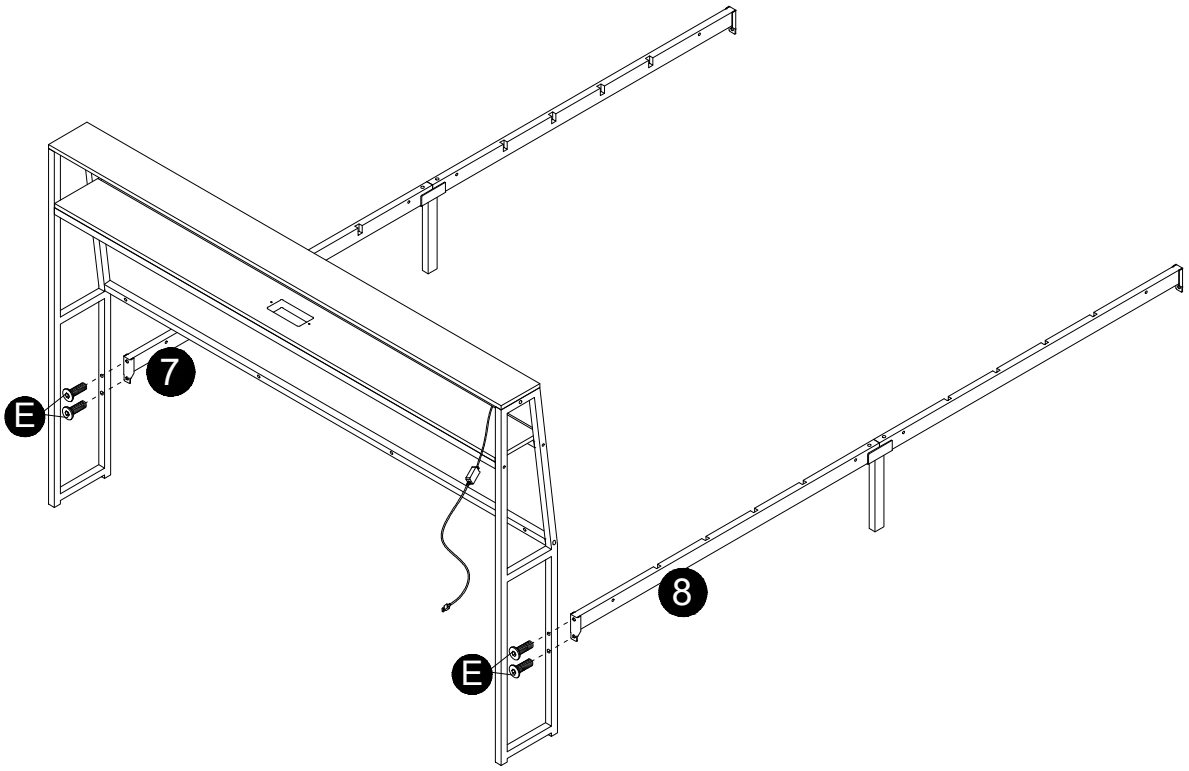


Step8

E		M8x35mm	4pcs


Step9

A		M6x28mm	8pcs

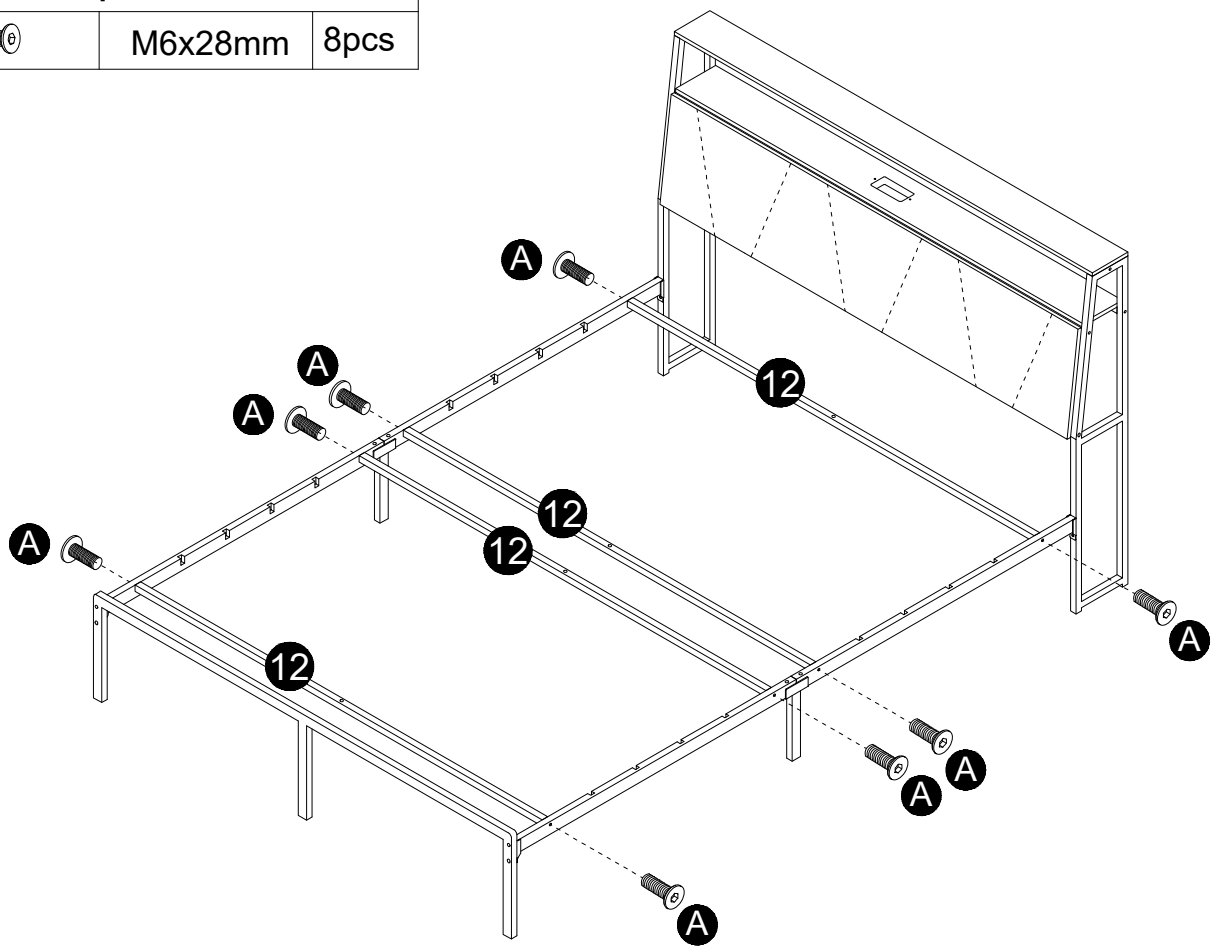

Step10


E		M8x35mm	2pcs

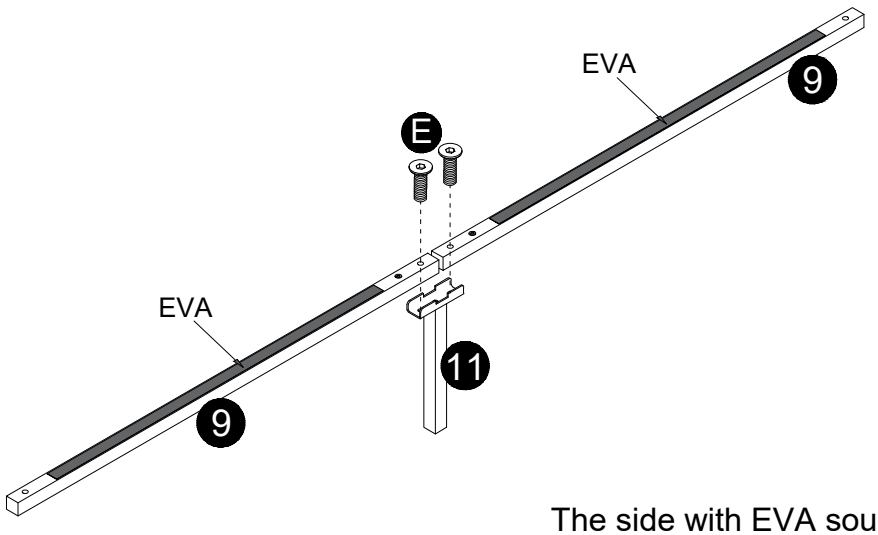

The side with EVA sound-absorbing pad should face up


Step11

D		M8x55mm	2pcs

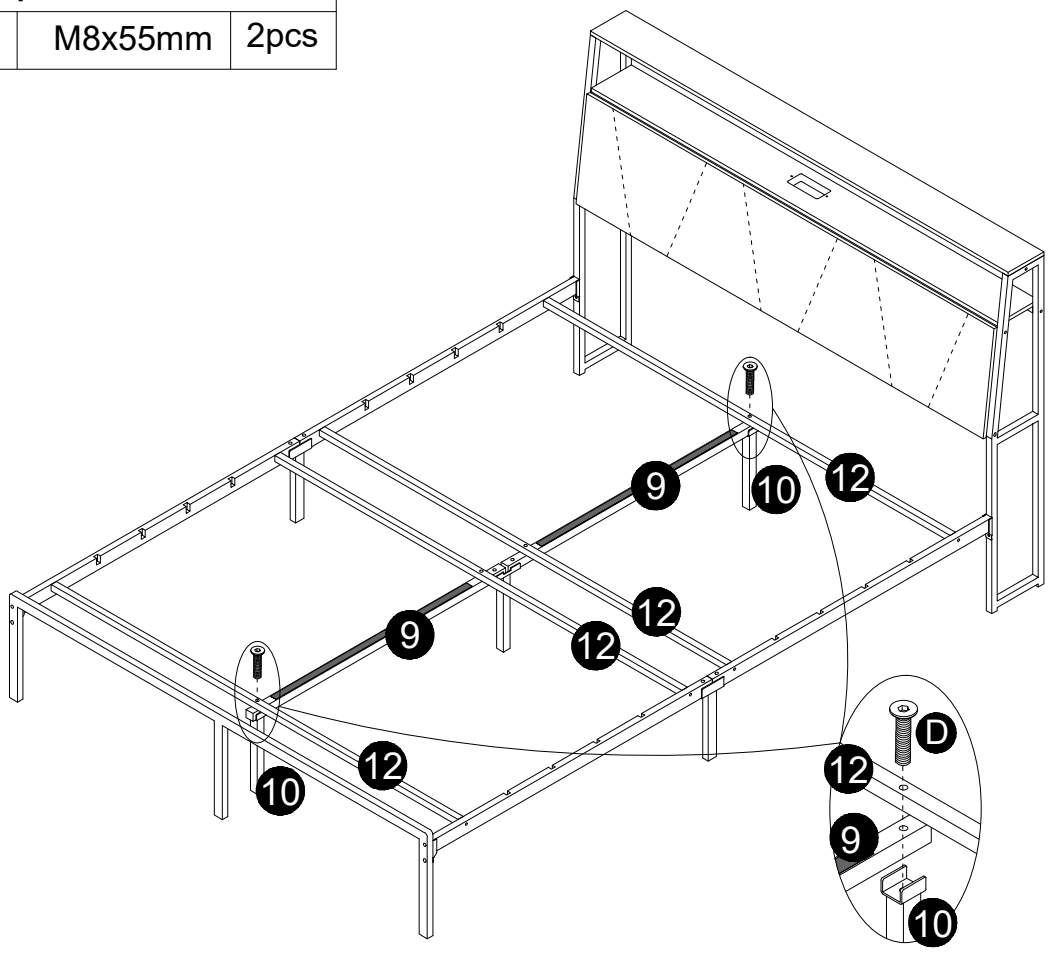


Step12

A		M6x28mm	2pcs

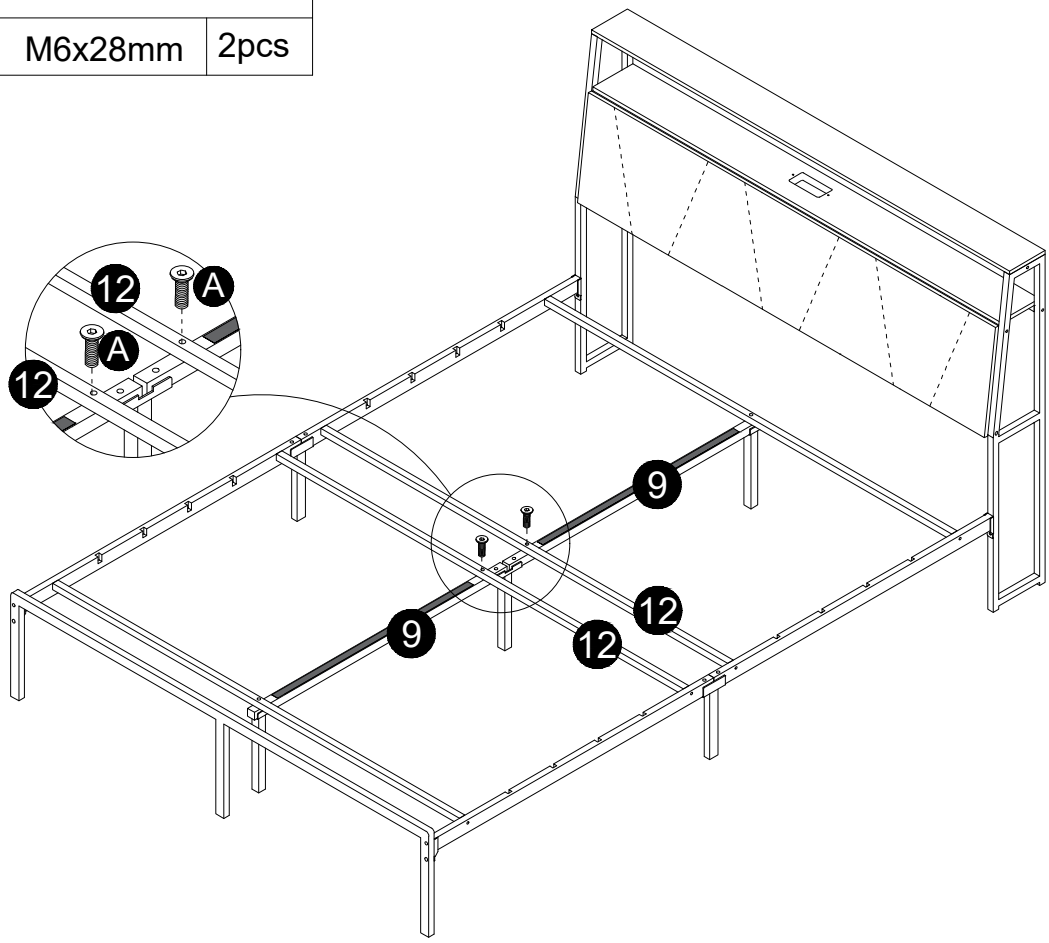


Step13

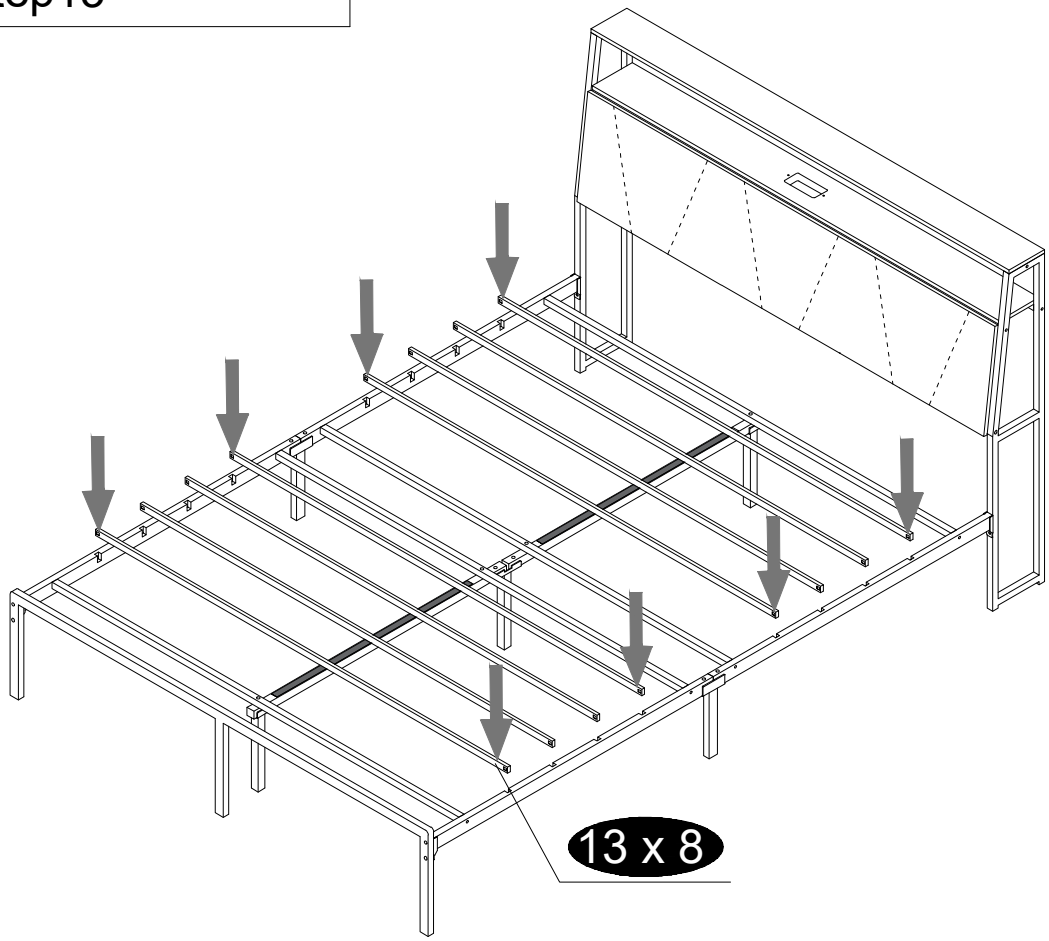


Step14

F		M3x15mm	2pcs

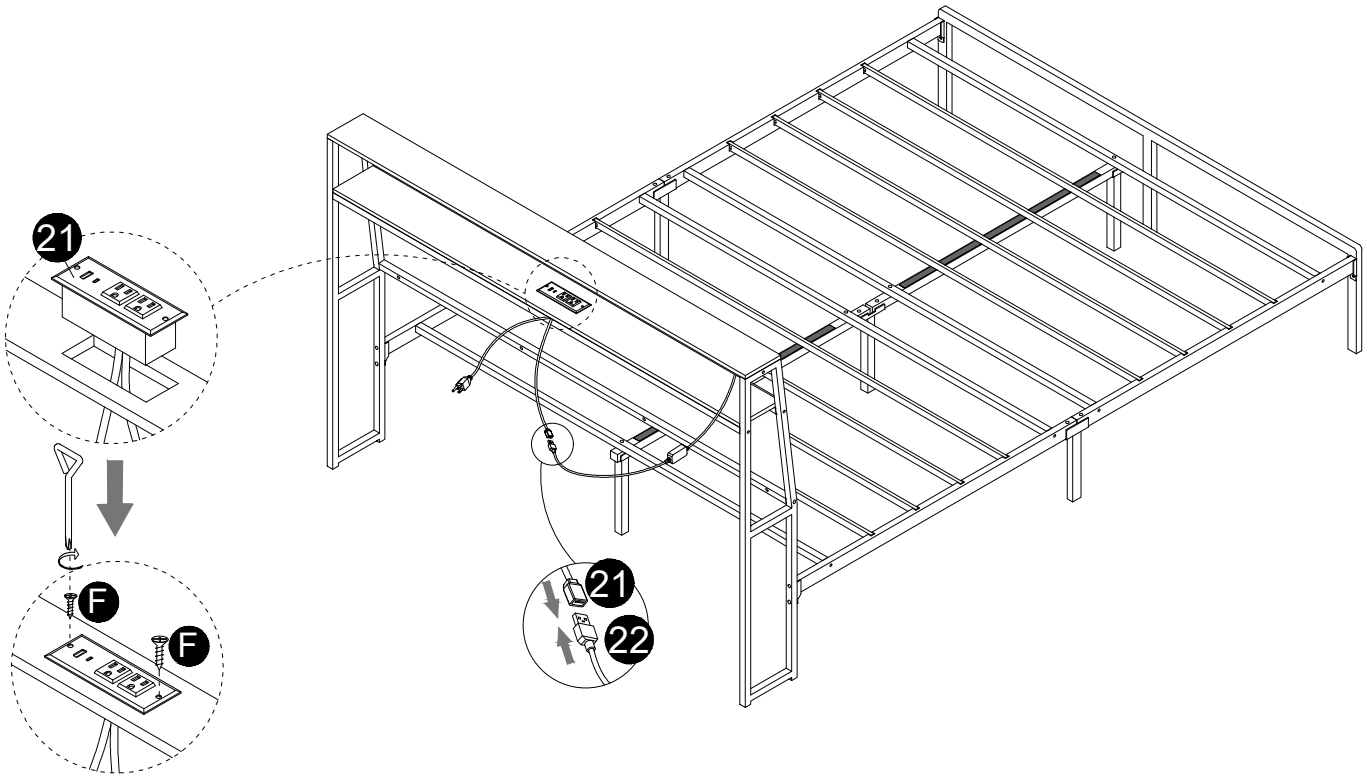


Step15

G		M4x8mm	24pcs

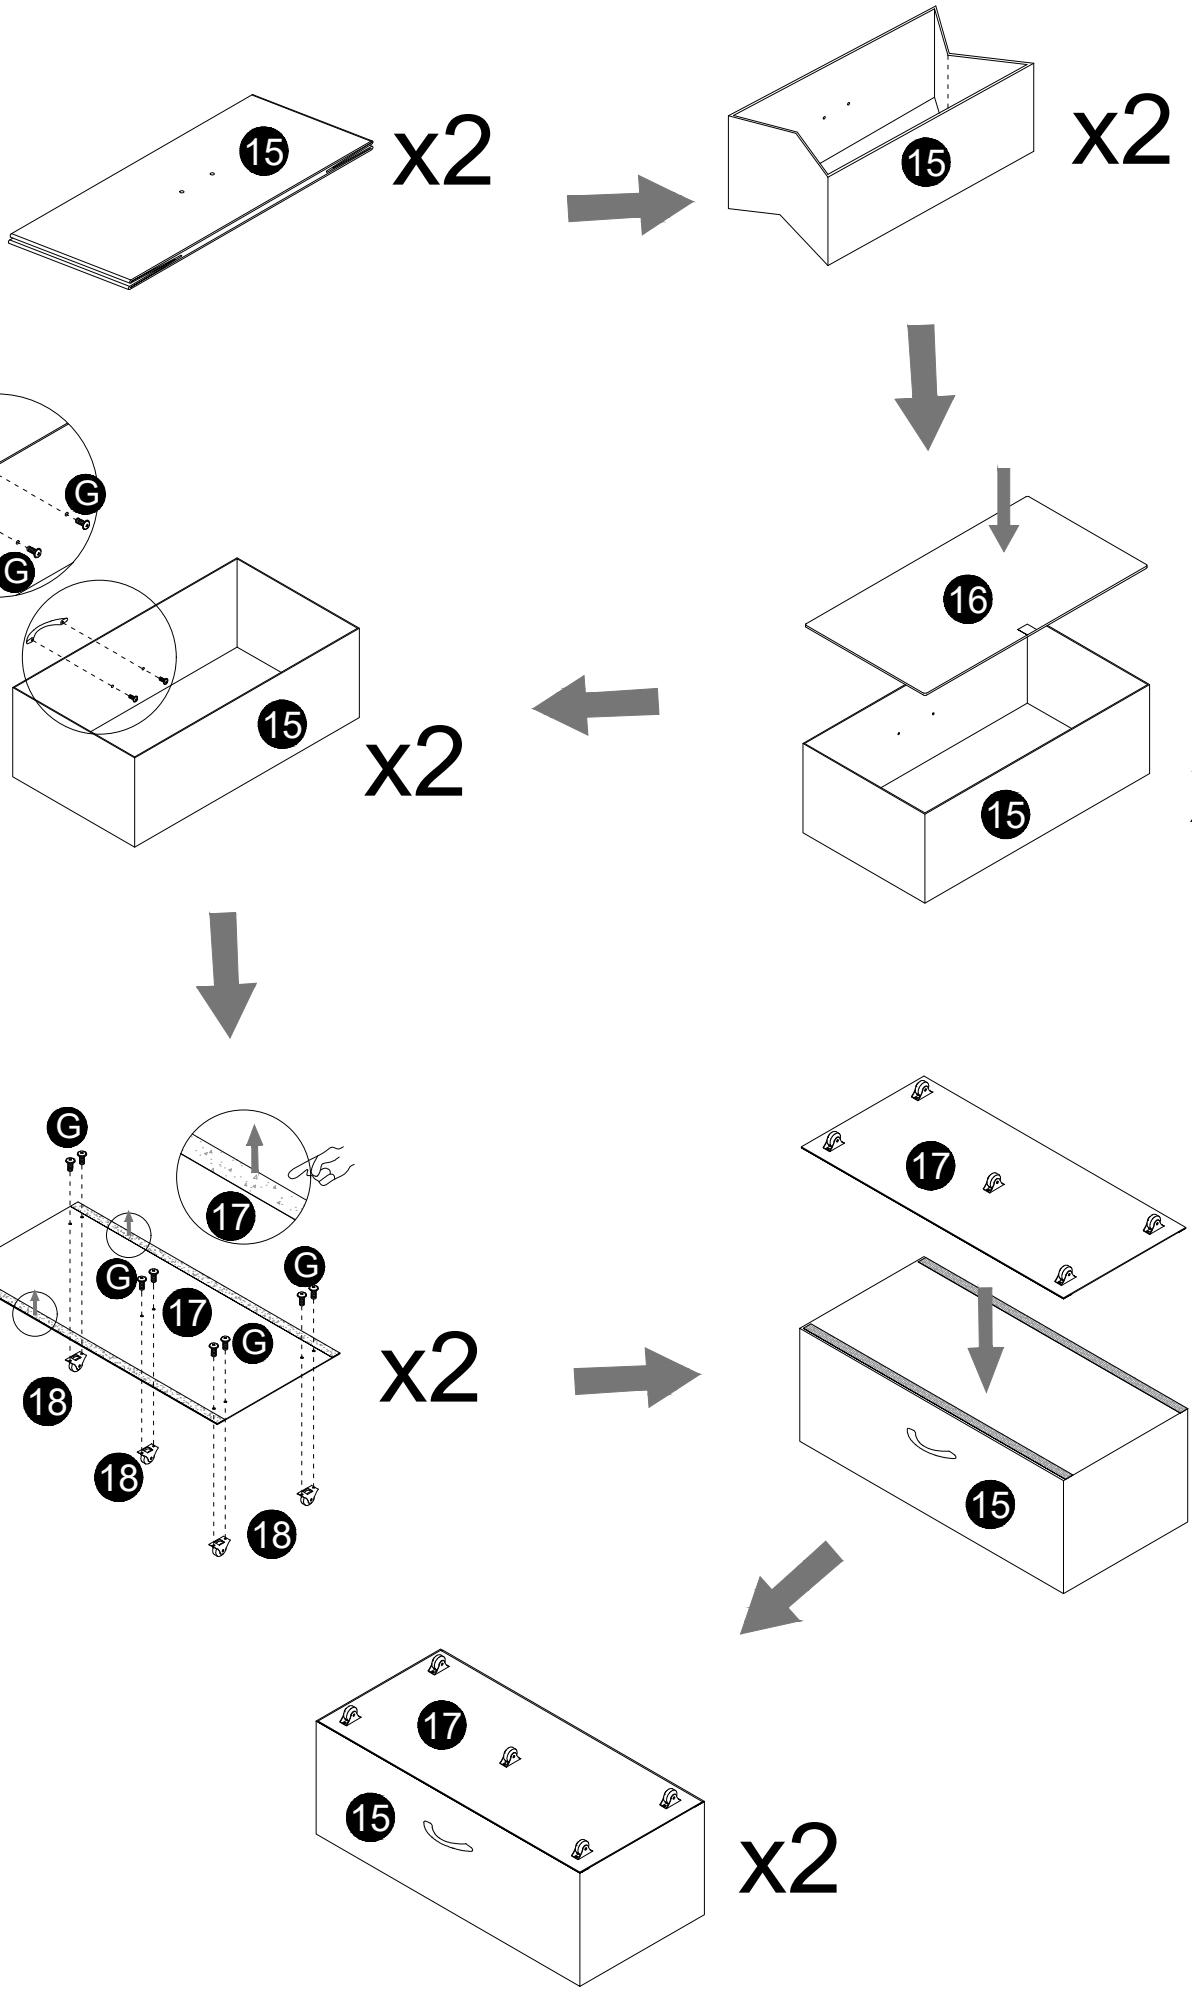

Step16

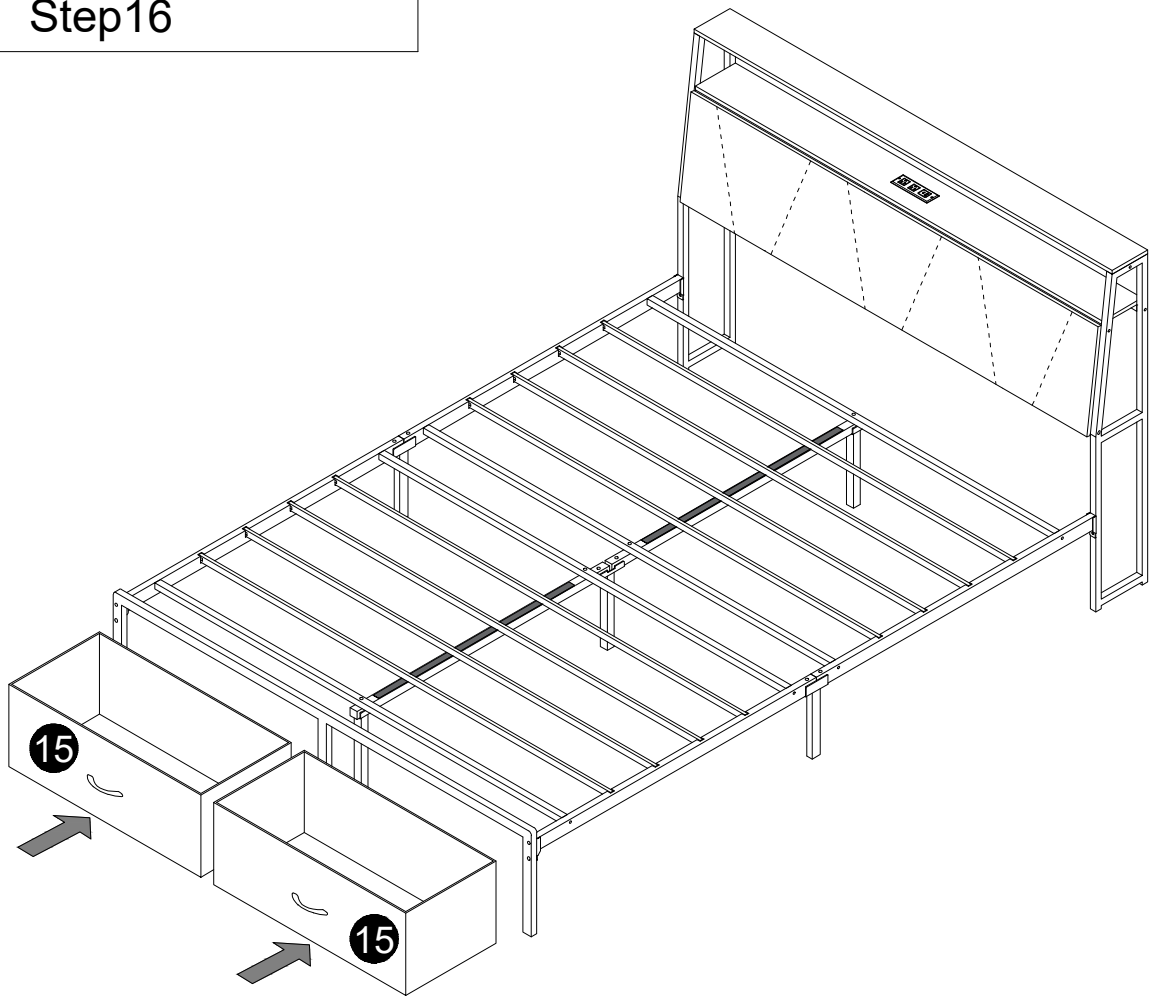

Step17

