



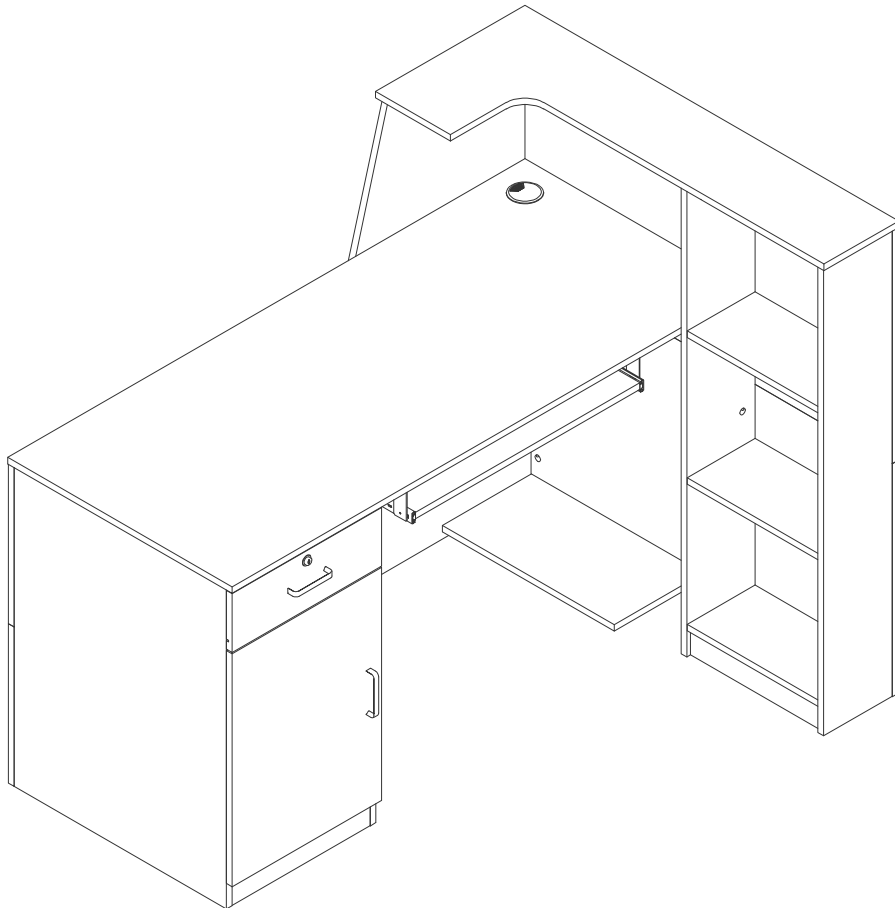


THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

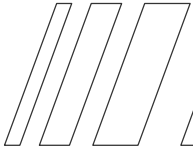


WARNING

- Unit can tip over causing severe injury or death.
- Anchor unit to stud in wall (if instructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.

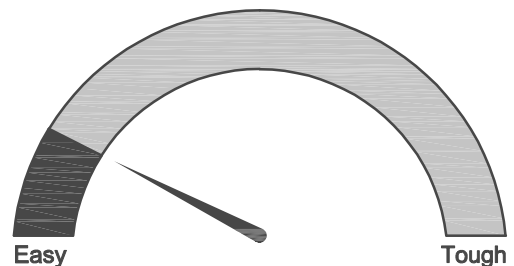

Assembly Difficulty Meter

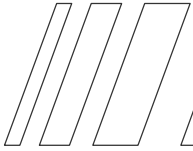

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1 - 2
ESTIMATED ASSEMBLY TIME: 1 HOUR
















- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with a R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.















Before You Start


- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.








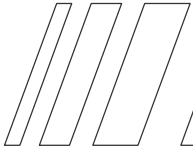


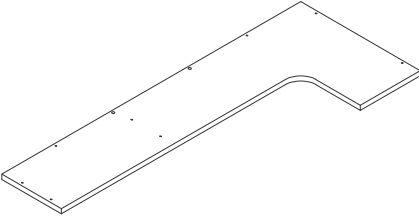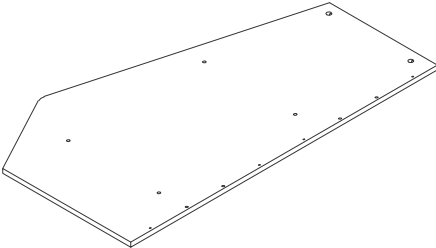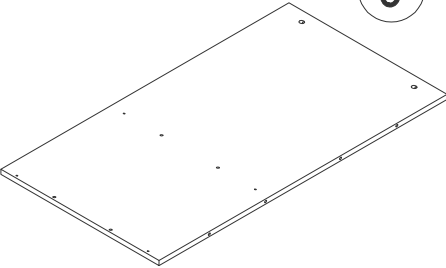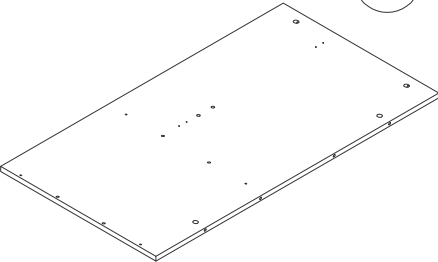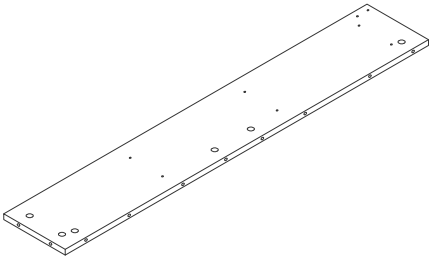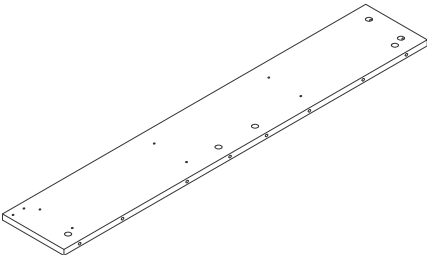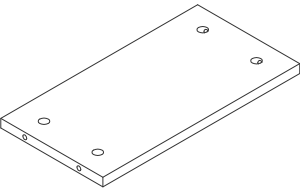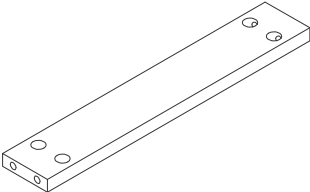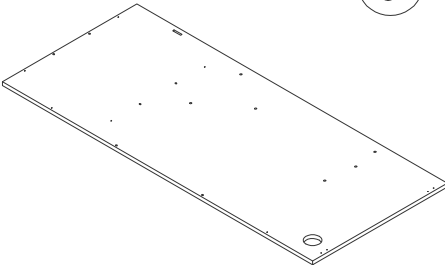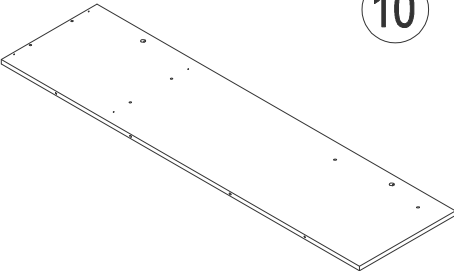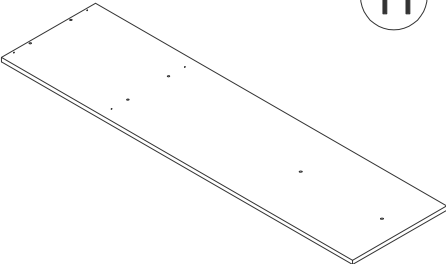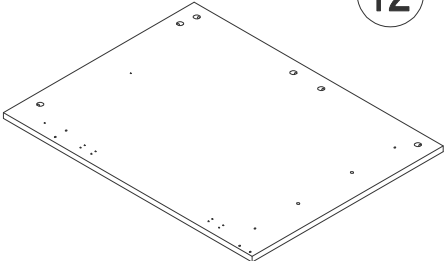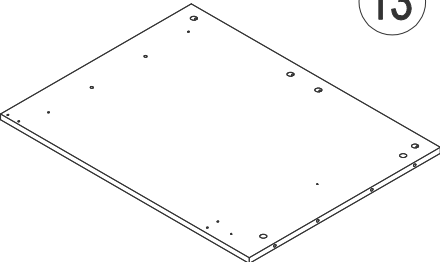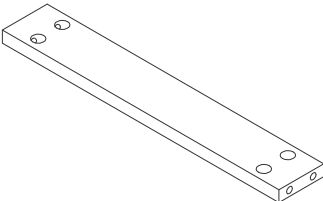
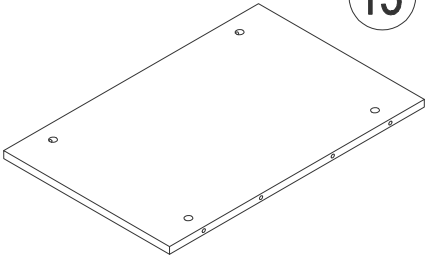
 1	 2	 3
 4	 5	 6
 7 3 PCS	 8	 9
 10	 11	 12
 13	 14 2 PCS	 15

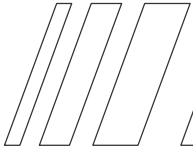

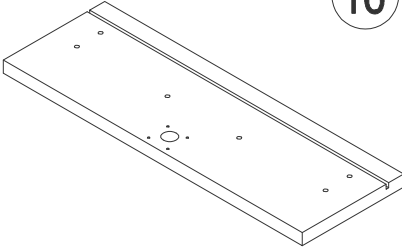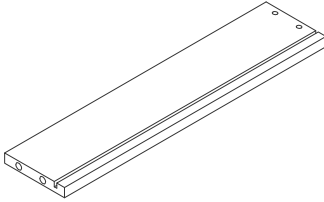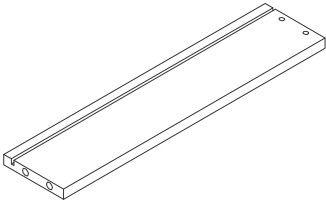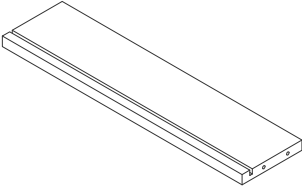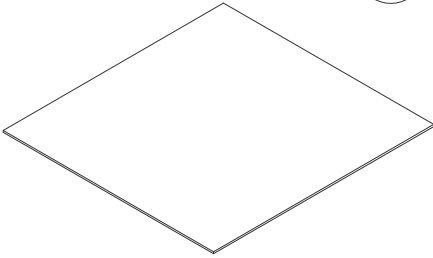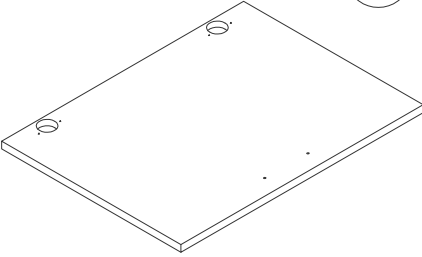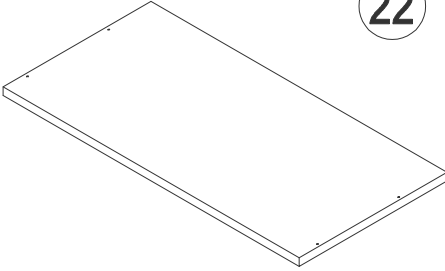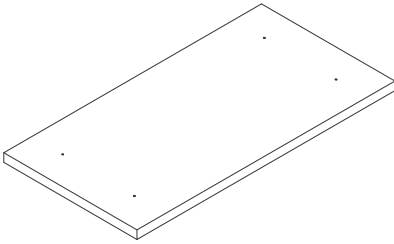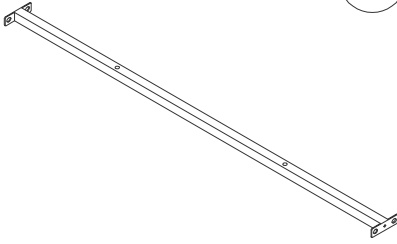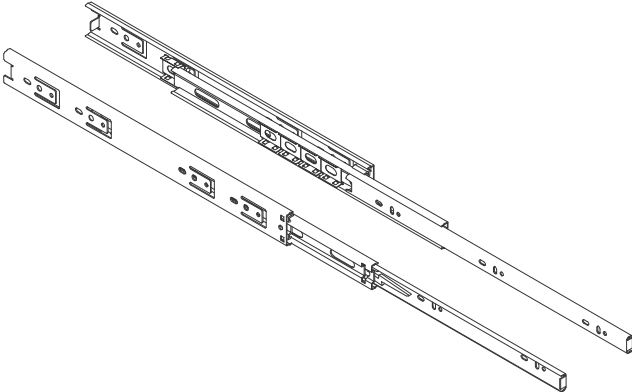
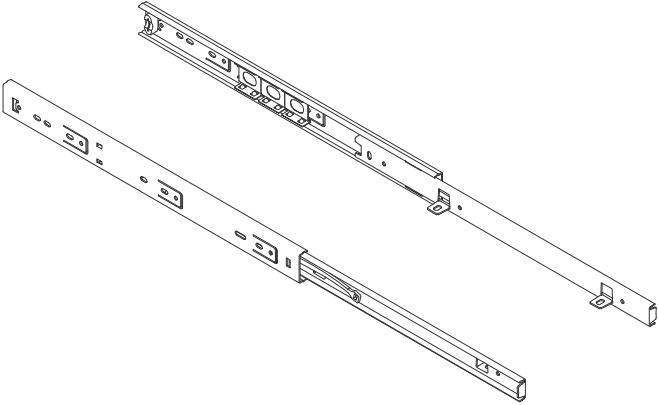
 16	 17	 18
 19	 20	 21
 22	 23	 24
 25 14" 3508W 1 SET		 26 12" 1 SET



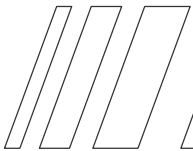


A M5x42  X 66+1	B Ø15x10  X 66+1	C M3.5x12  X 32+2
D M5x40  X 4	E M6x12  X 8	F M6x25  X 4
G M6x30  X 2	H Ø8x40  X 34+1	I Ø60  X 1
J M4x18  X 4	K  X 2	L  X 1 SET
M 20MM  X 1	N 40MM  X 1	O  X 15+1
P M3.5x25  X 4	Q  X 4	R M3x18  X 4
S  X 1	T M4x8  X 4	U L=90MM  X 4
V  X 2	#4  X 1	 X 1

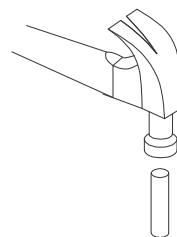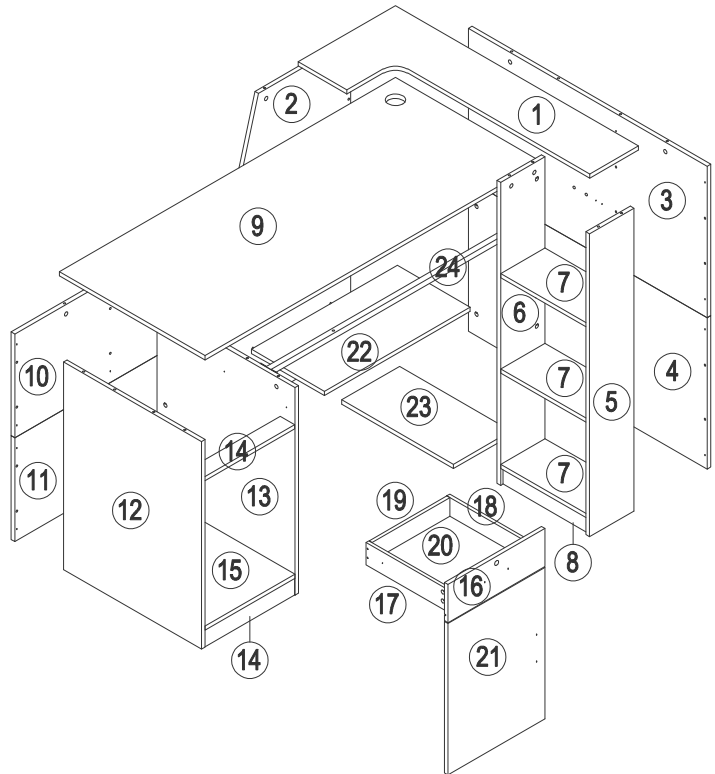


***Hammer isn't inside
Accessory Pack.**

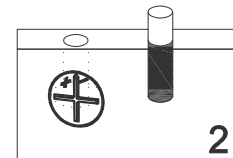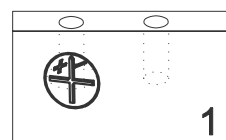

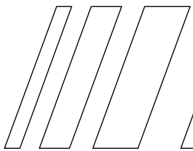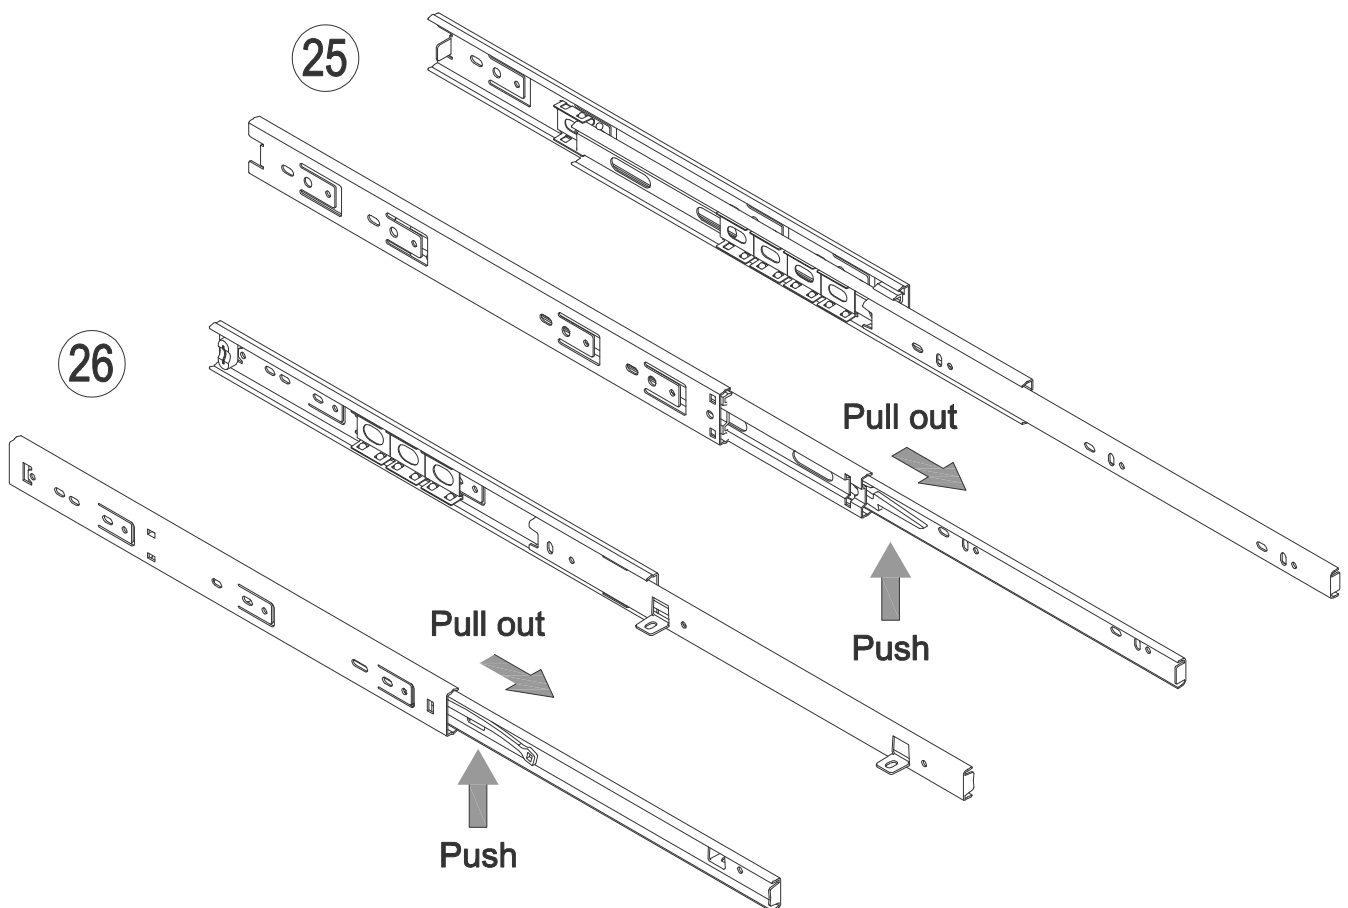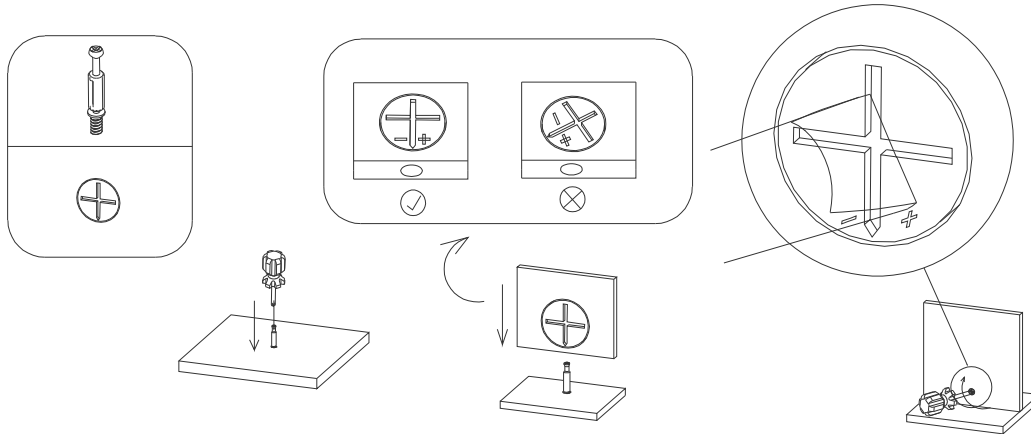
**M5X42mm**

Disconnect the keyboard rail with the BLACK PLASTIC PART.
It needs to be pulled down to disconnect the runners.

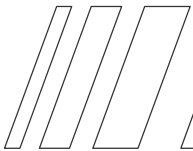


P.7

1

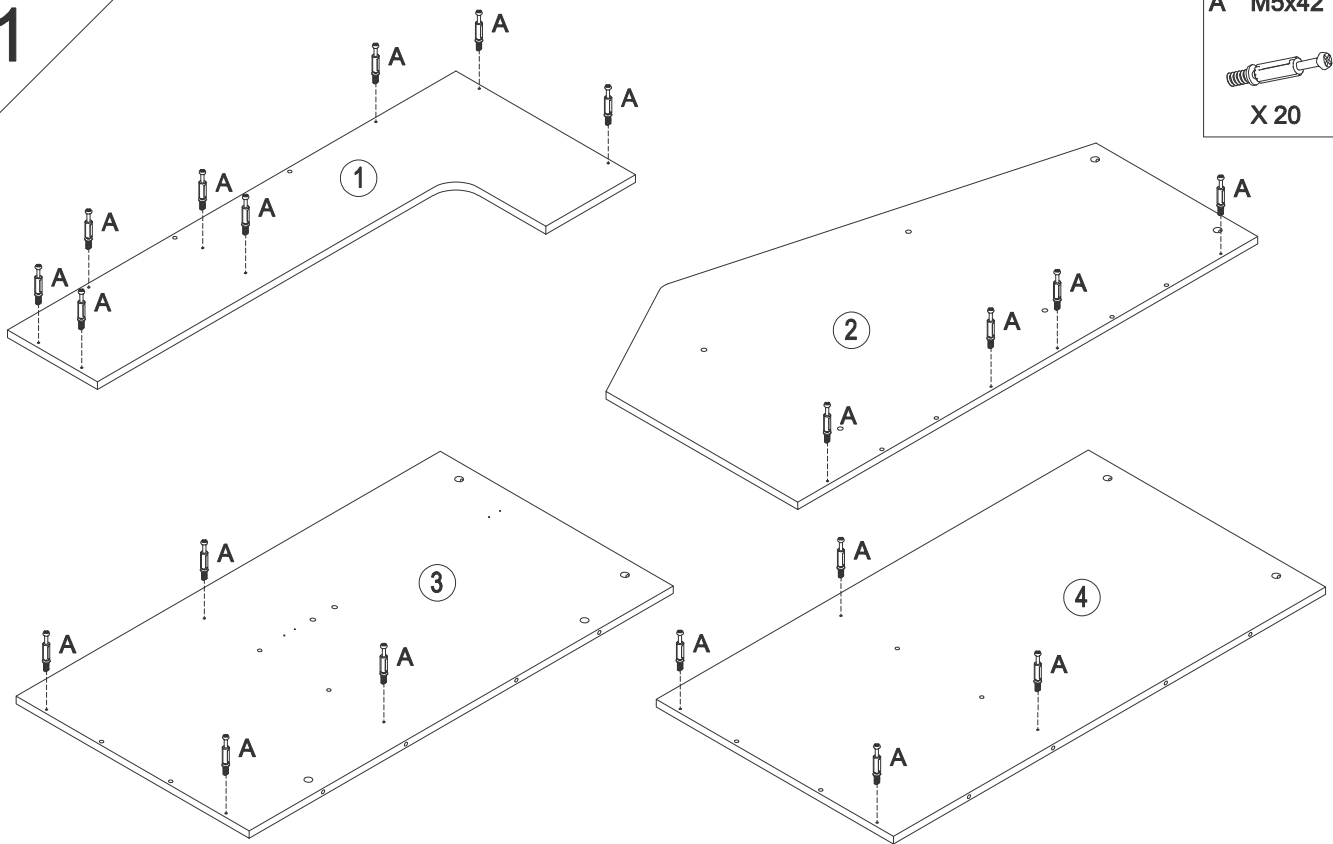


A M5x42




X 20


2

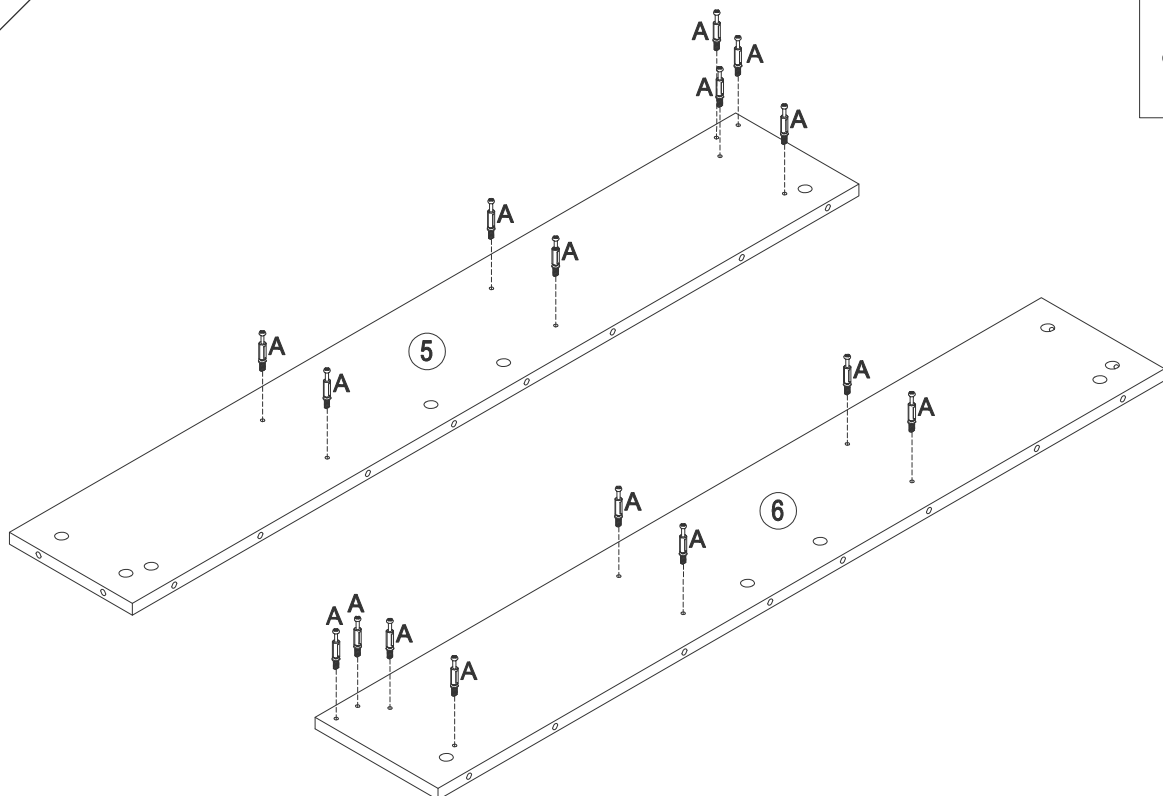

A M5x42




X 16

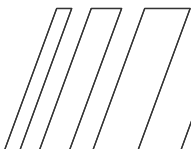

P.8

3

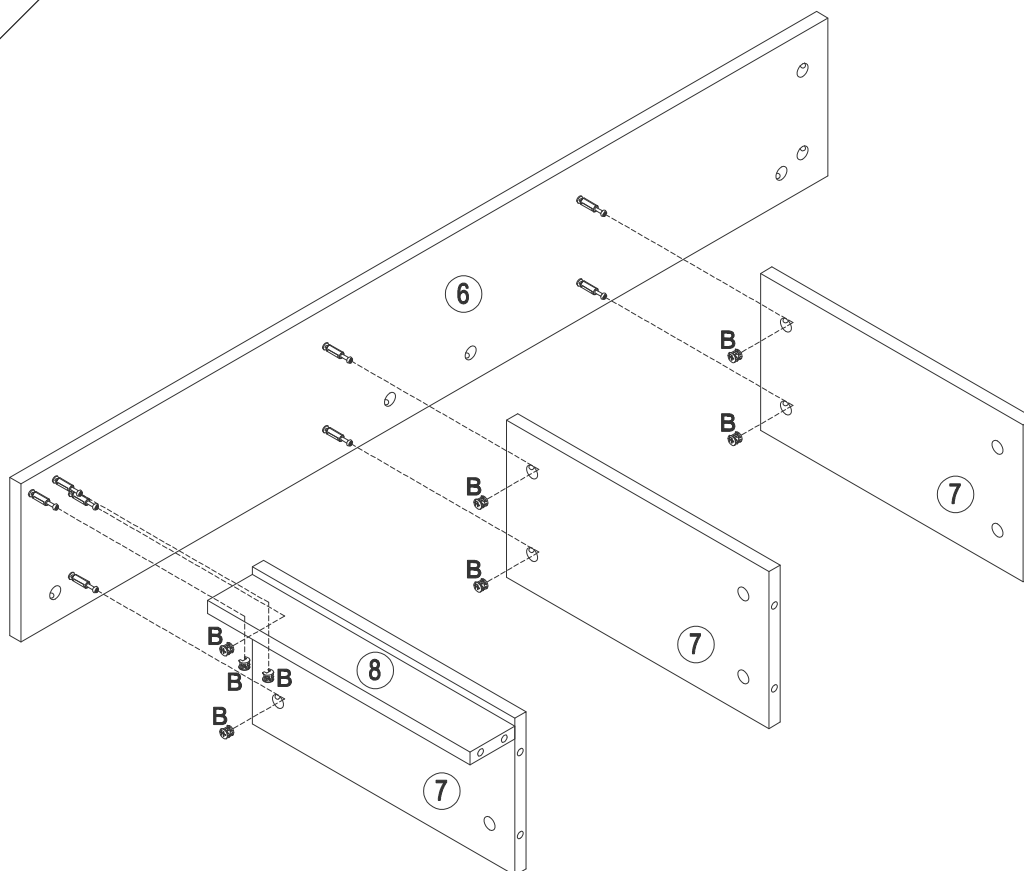


B Ø15x10



X 8

4

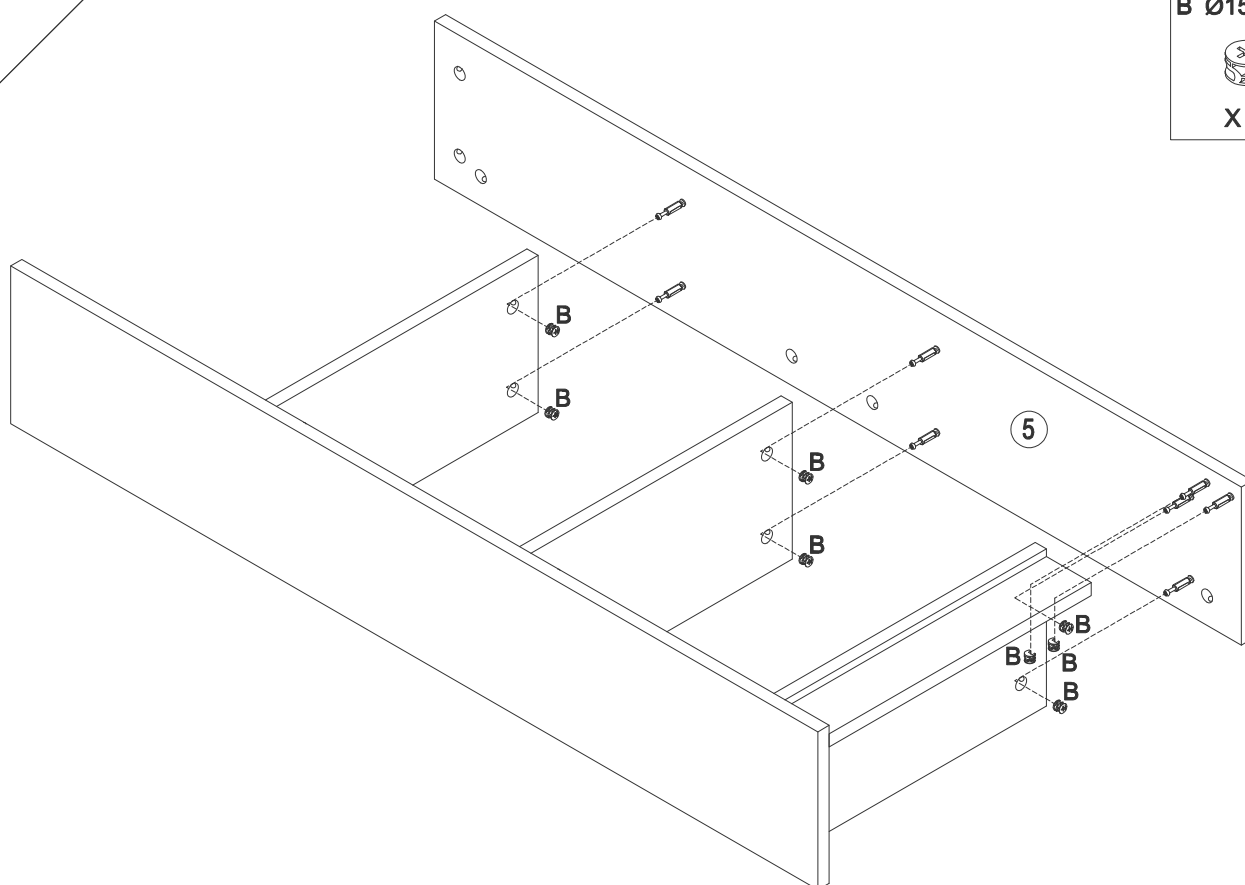

B Ø15x10




X 8



P.9

5

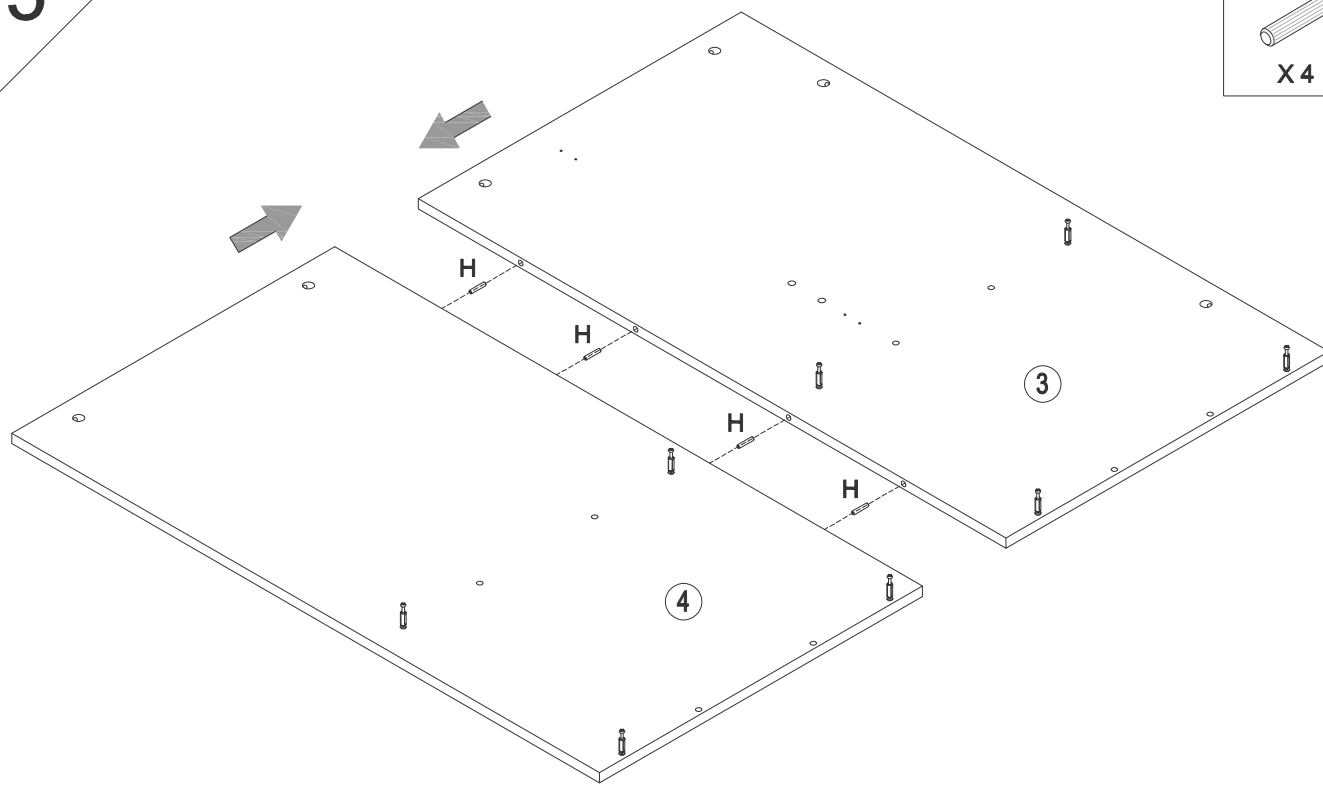


H Ø8x40



X 4

6

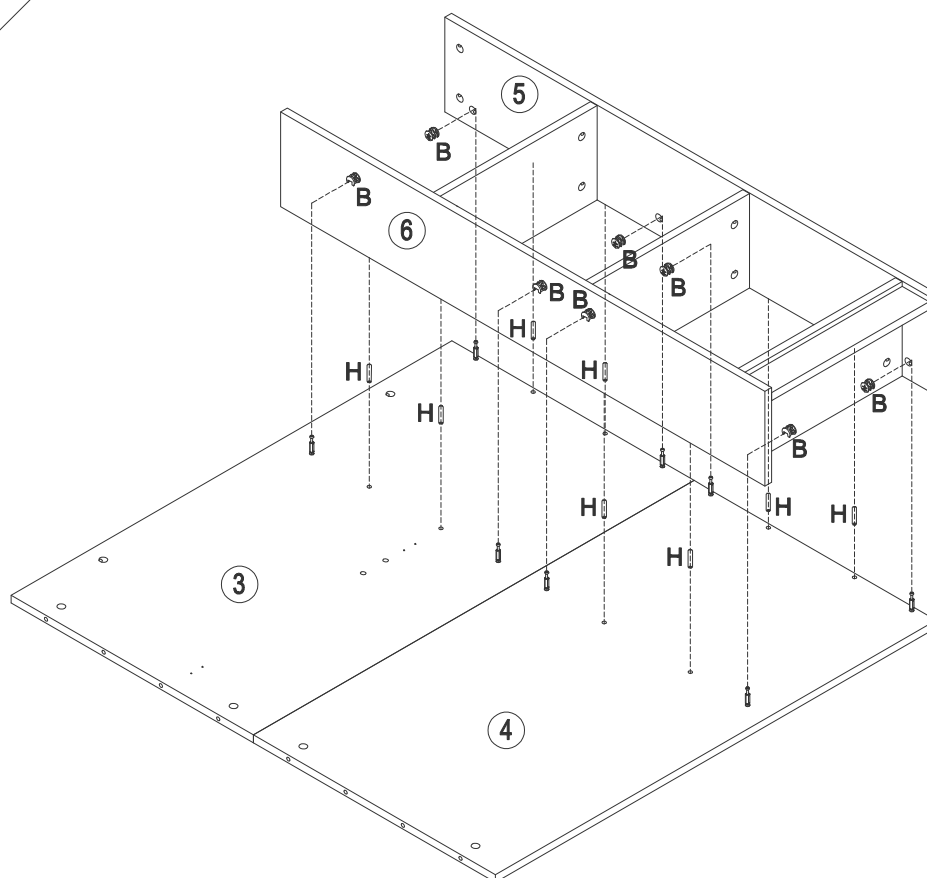

B Ø15x10




X 8

H Ø8x40




X 8

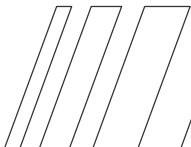

P.10

7

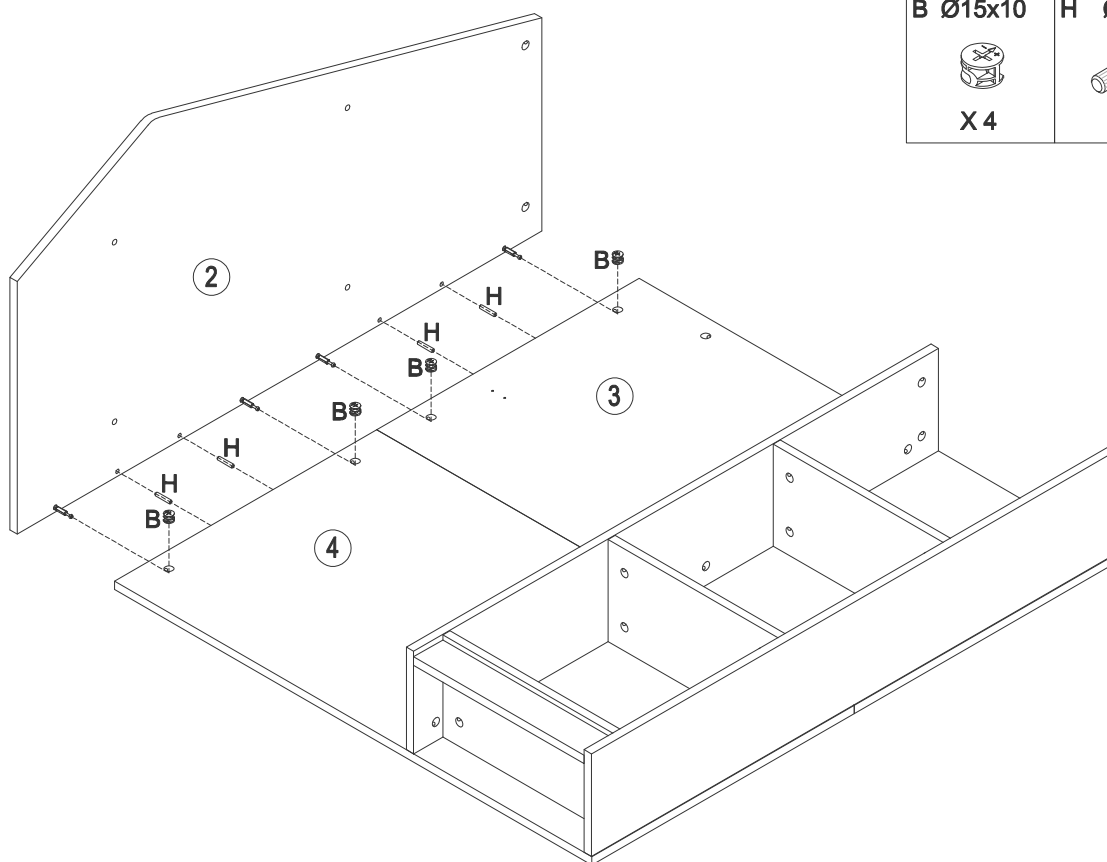

B Ø15x10




X 4

H Ø8x40



X 4

8

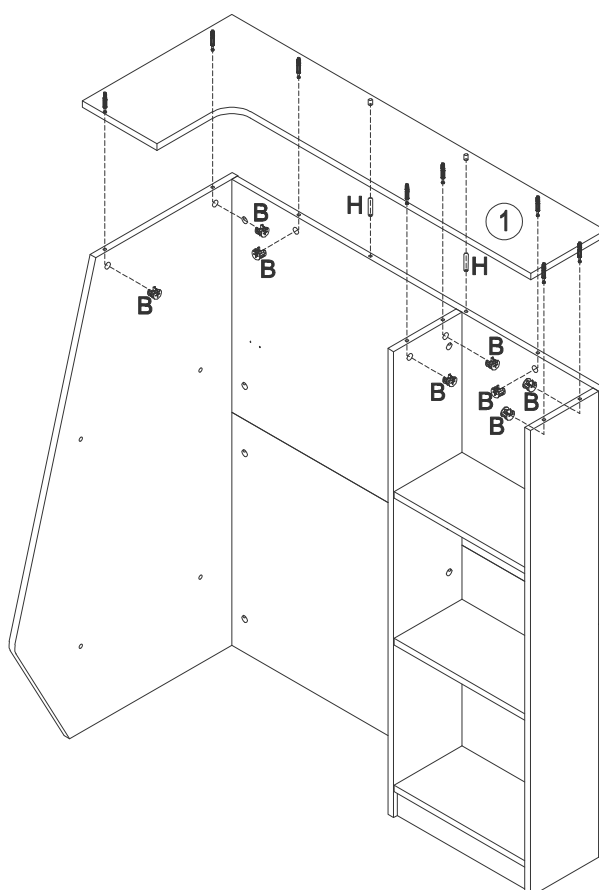

B Ø15x10




X 8

H Ø8x40




X 2

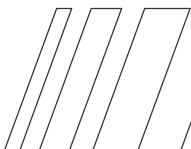


P.11

9

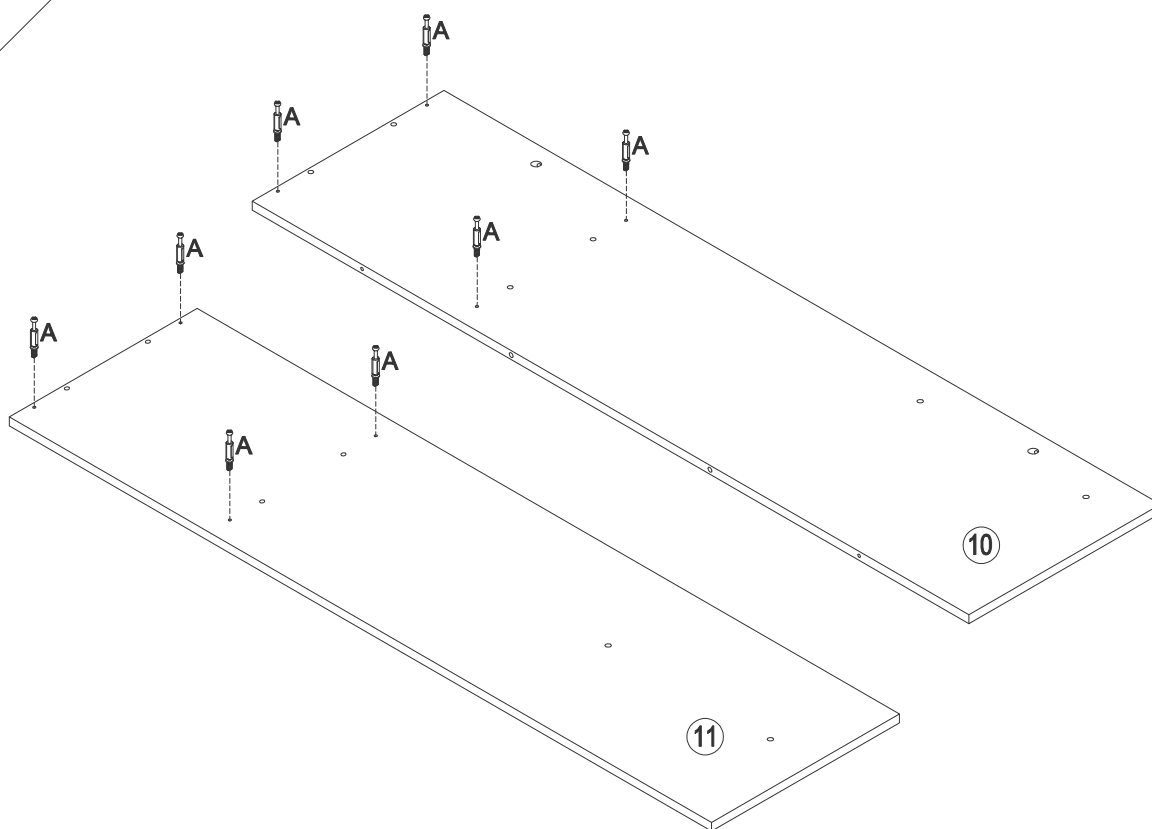


A M5x42



X 8

10

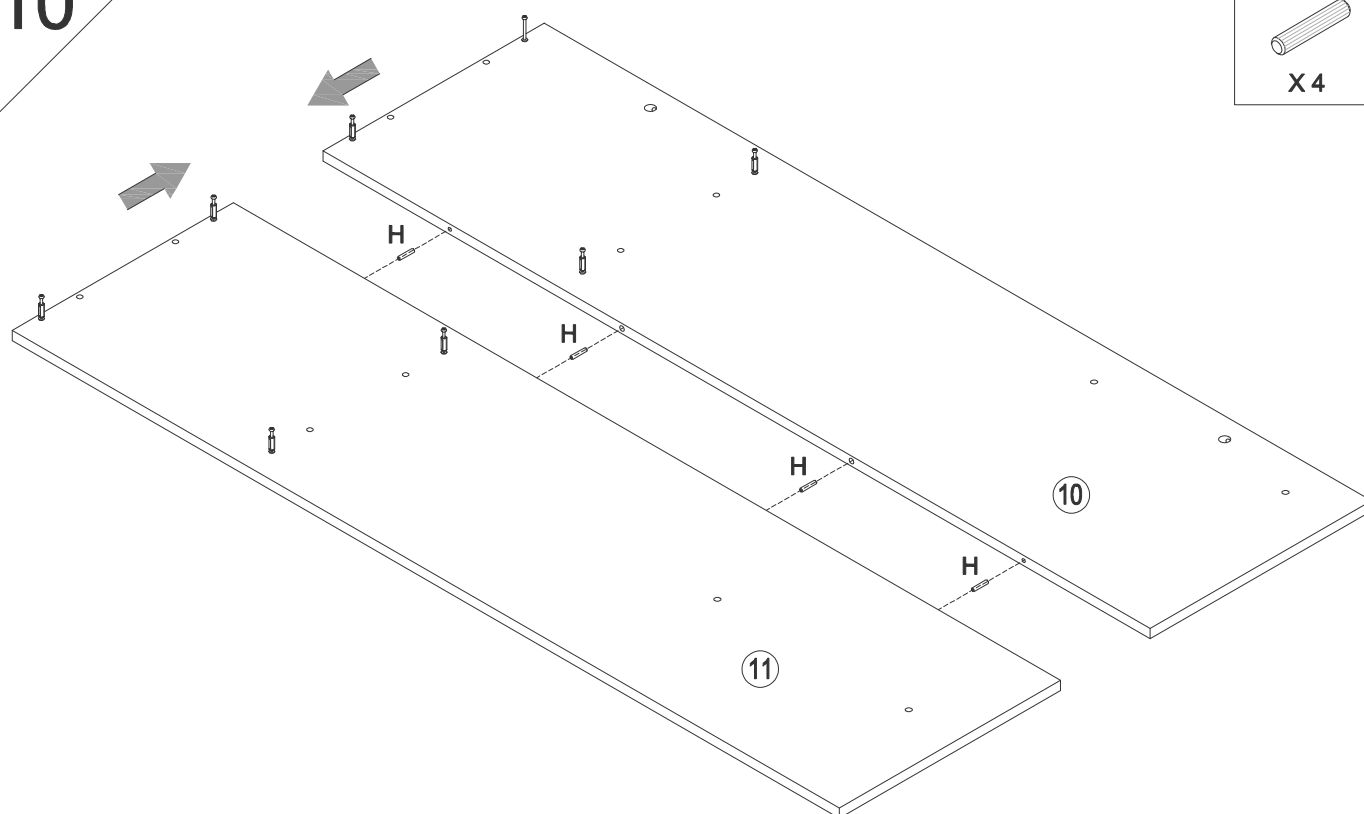

H Ø8x40





X 4




P.12

11

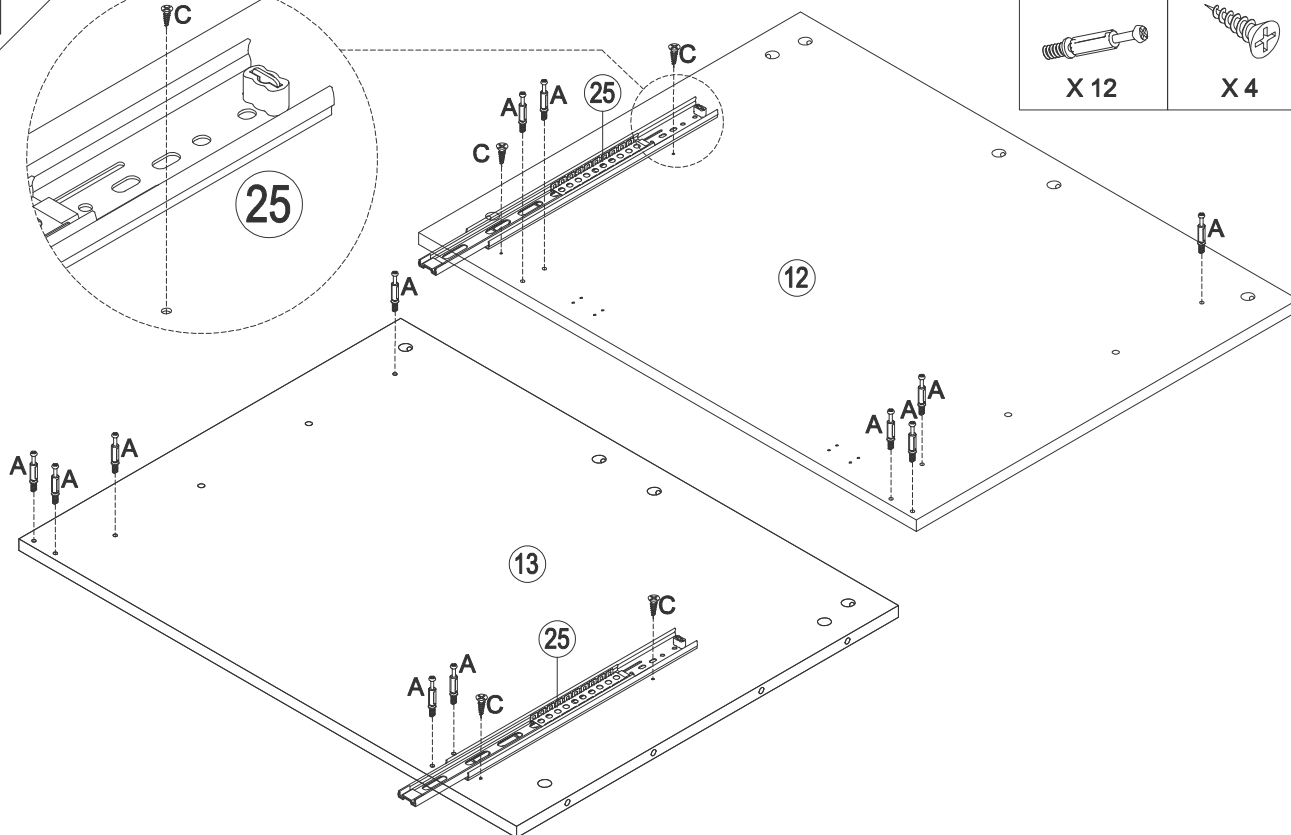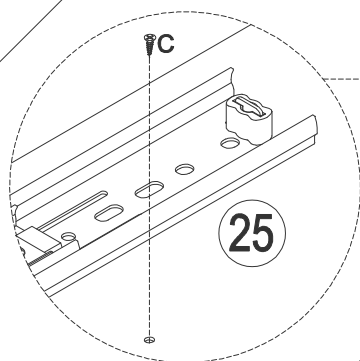

A M5x42




X 12

C M3.5x12



X 4

12

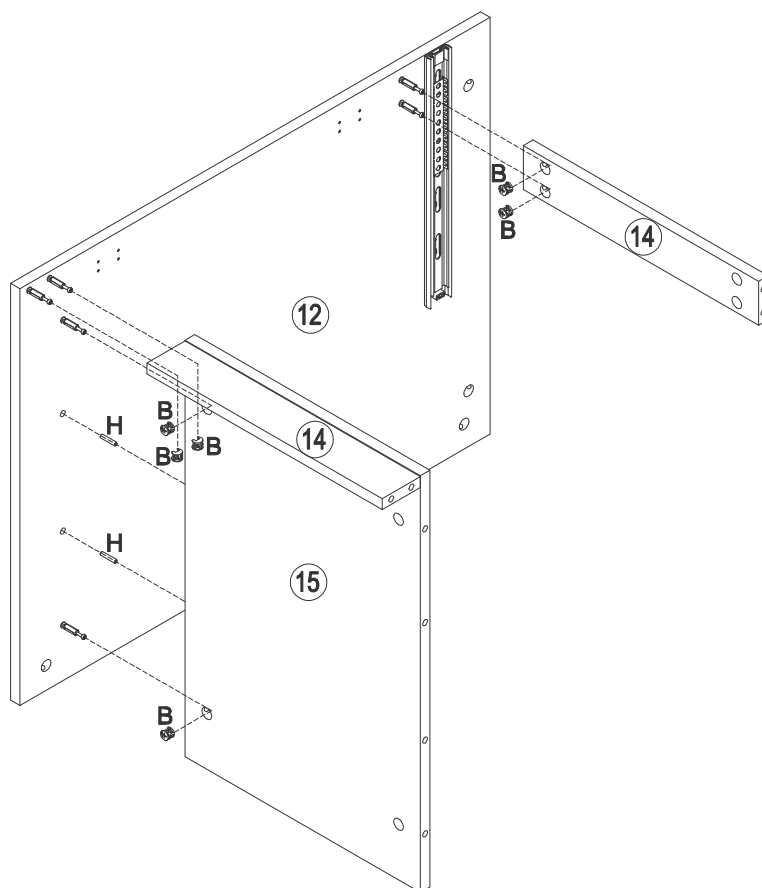

B Ø15x10



X 6

H Ø8x40




X 2



P.13

13

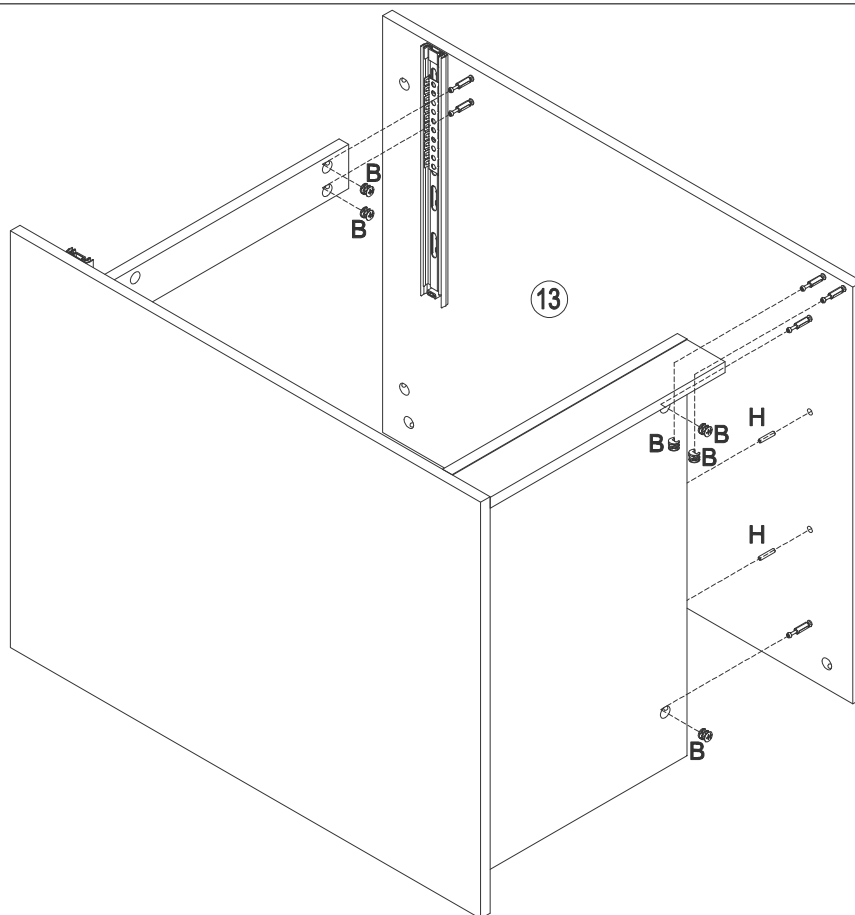

B Ø15x10




X 6

H Ø8x40



X 2

14

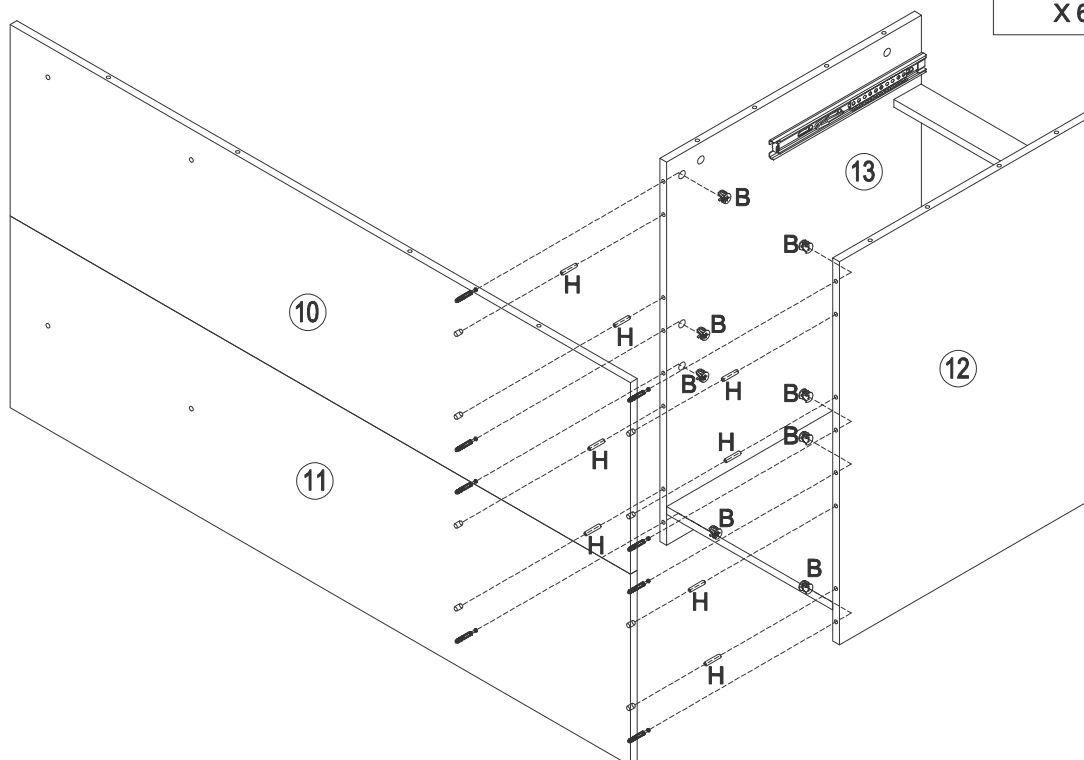

B Ø15x10




X 6


H Ø8x40



X 2

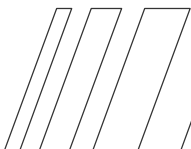

15

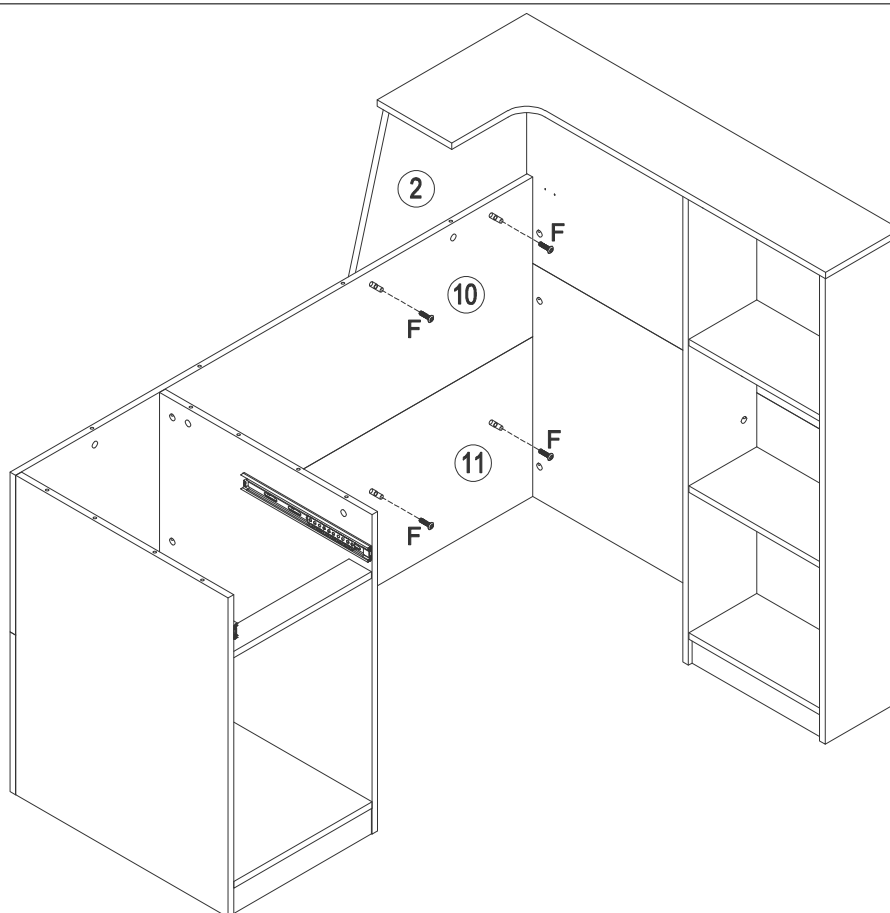


F M6x25



X 4

16

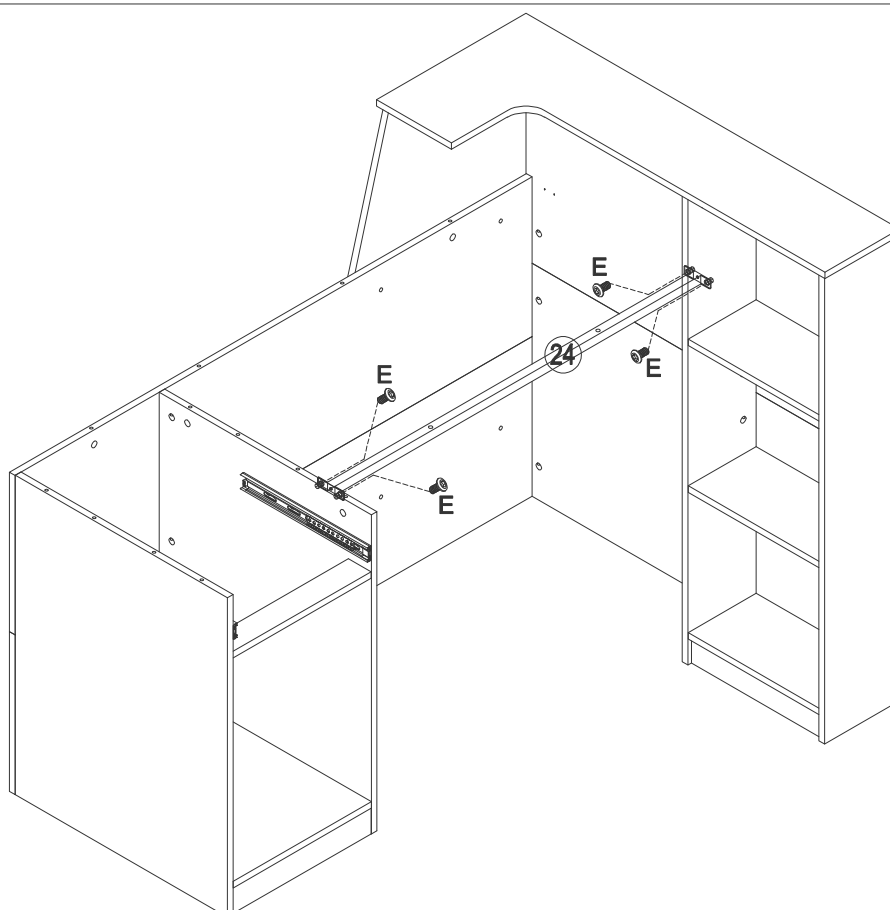


E M6x12




X 4




17

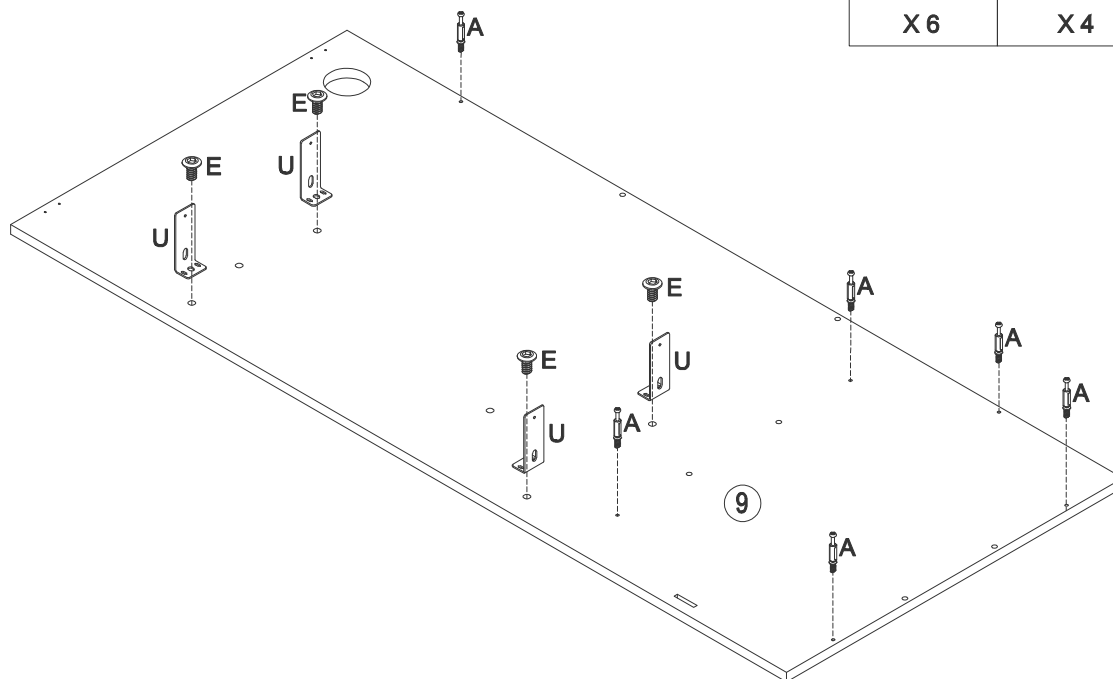

A M5x42  X 6	E M6x12  X 4	U L=90MM  X 4
---	---	--


18

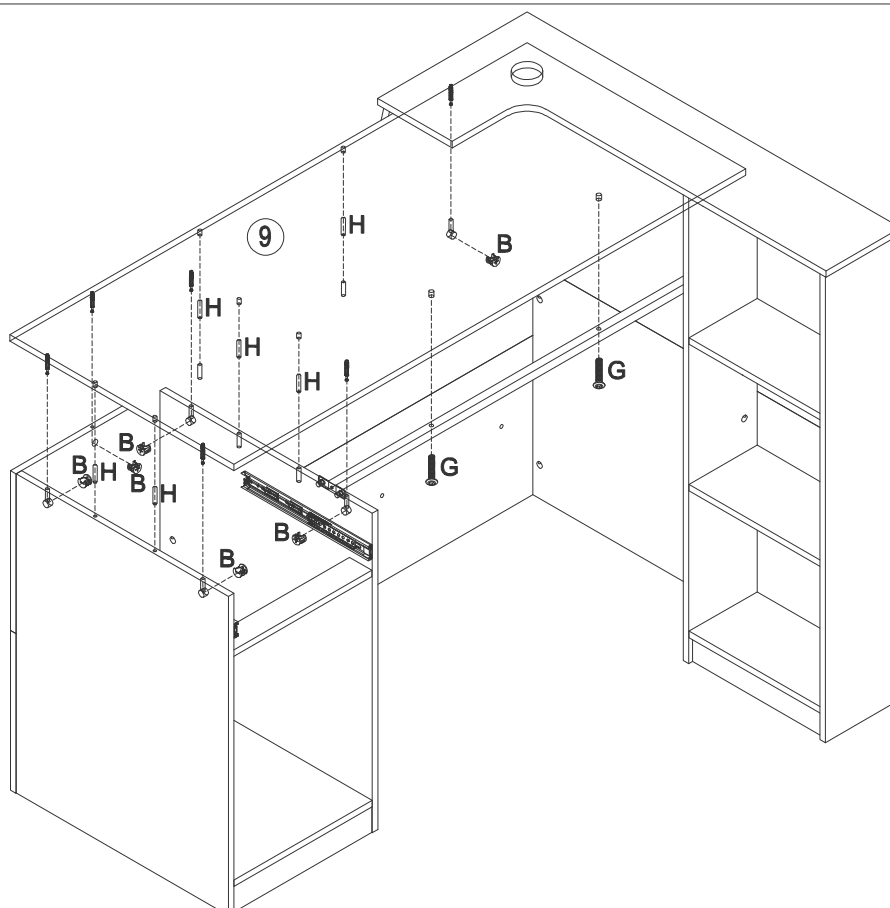



B Ø15x10  X 6	G M6x30  X 2
H Ø8x40  X 6	




19

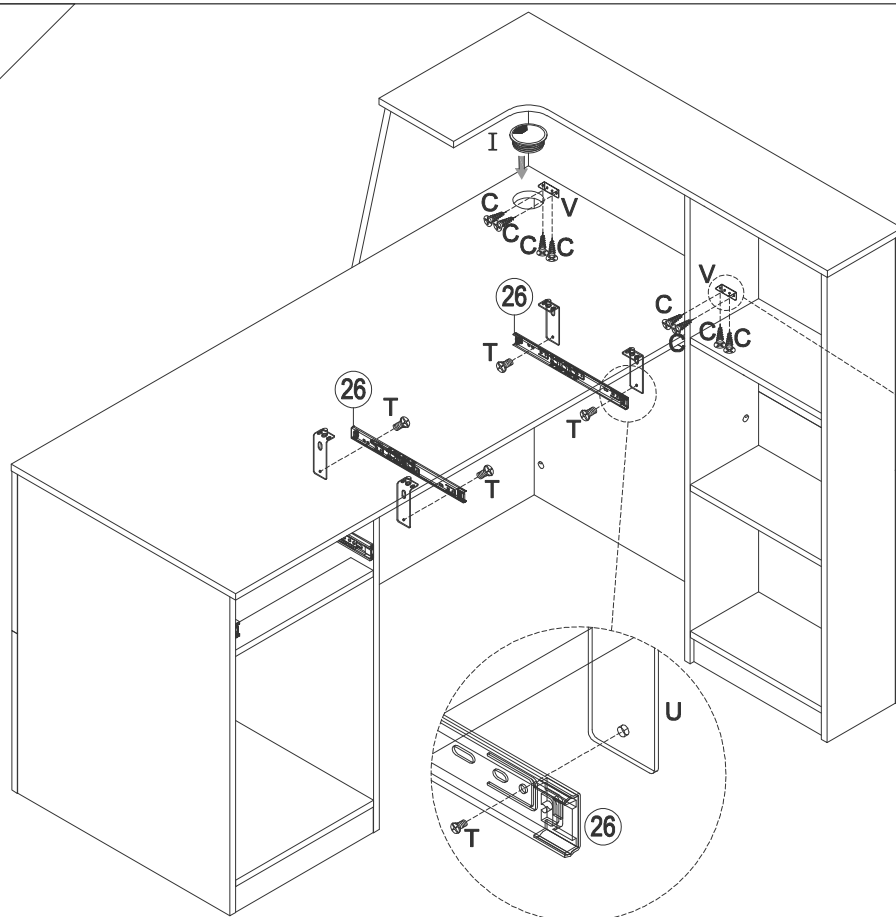

C M3.5x12  X 8	I Ø60  X 1
T M4x8  X 4	V  X 2

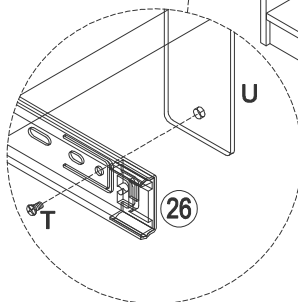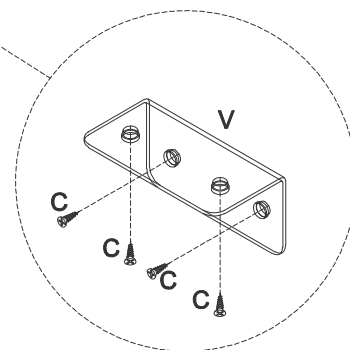


20

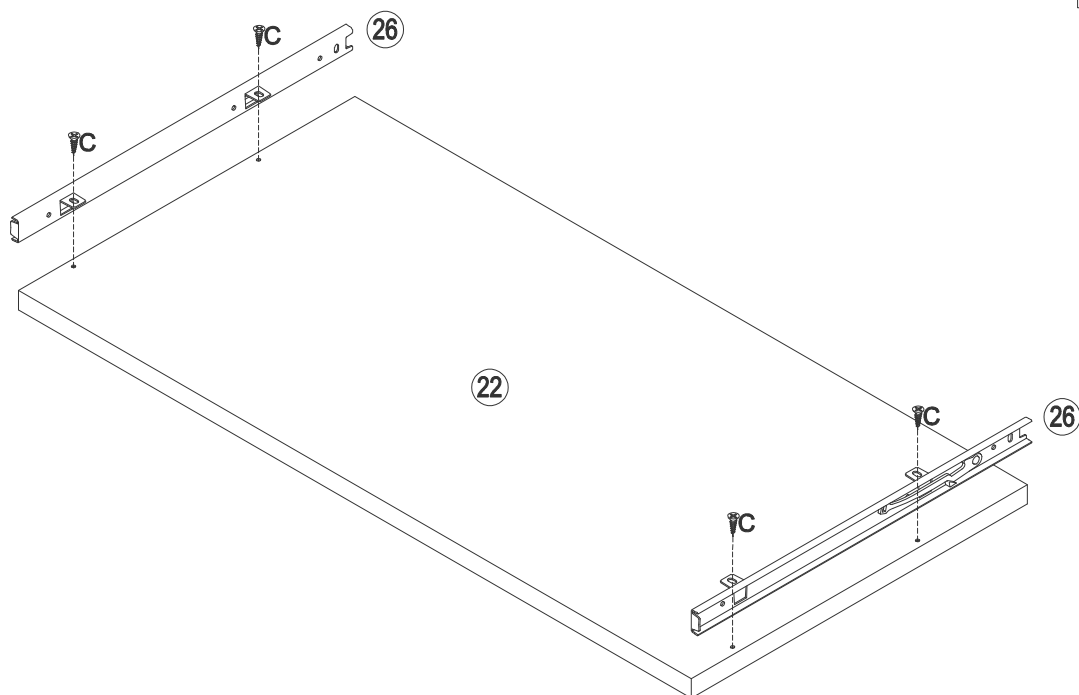


C M3.5x12  X 4



21

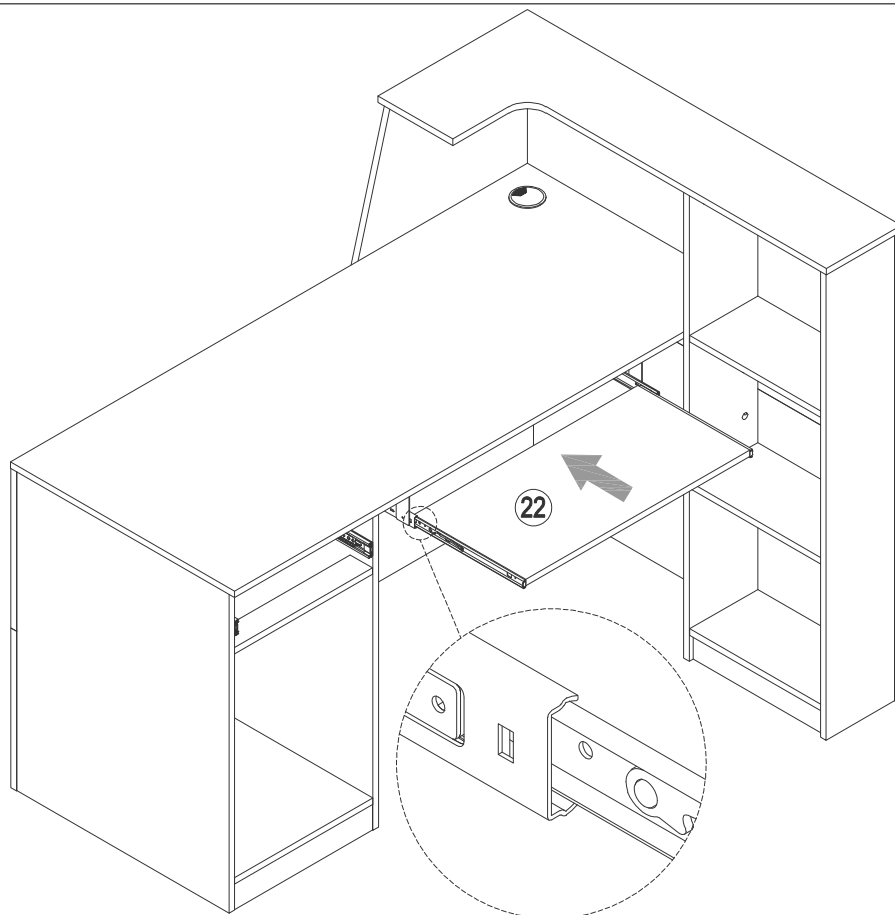


22

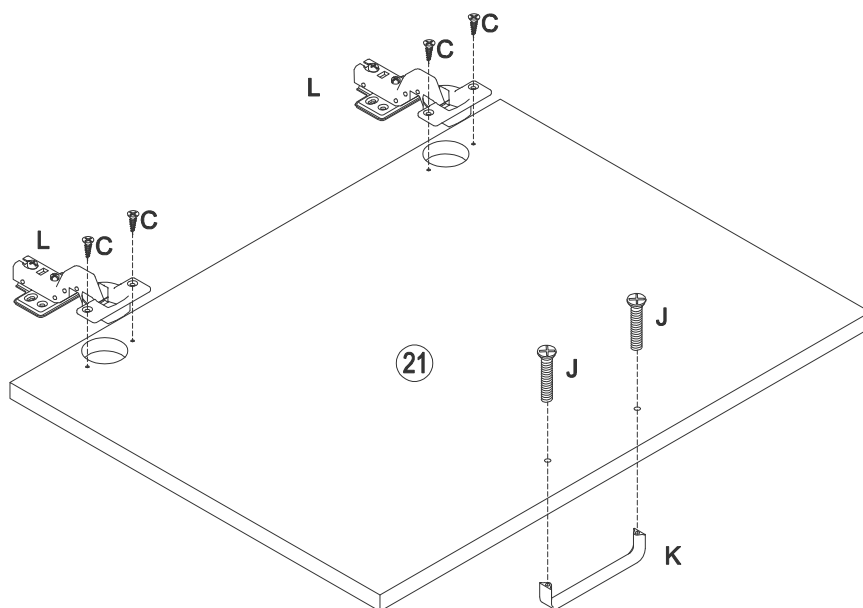

C M3.5x12  X 4	J M4x18  X 2
K  X 1	L  X 1 SET


23

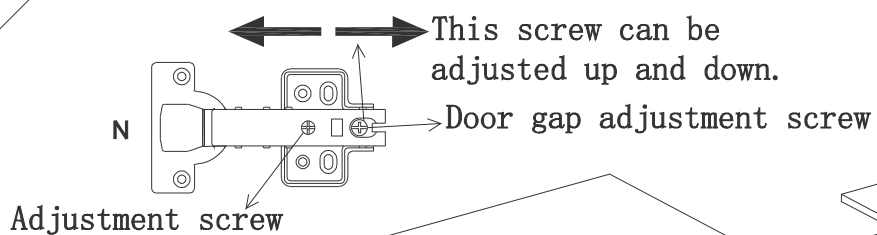

C M3.5x12




X 8

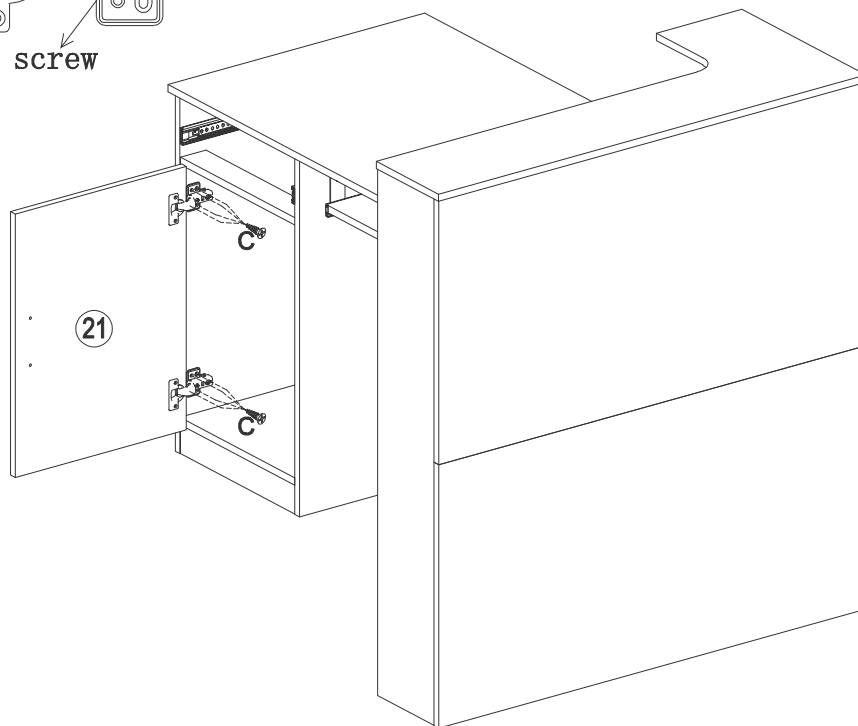

24

A M5x42



X 4

J M4x18



X 2

K



X 1

R M3x18




X 4

S



X 2

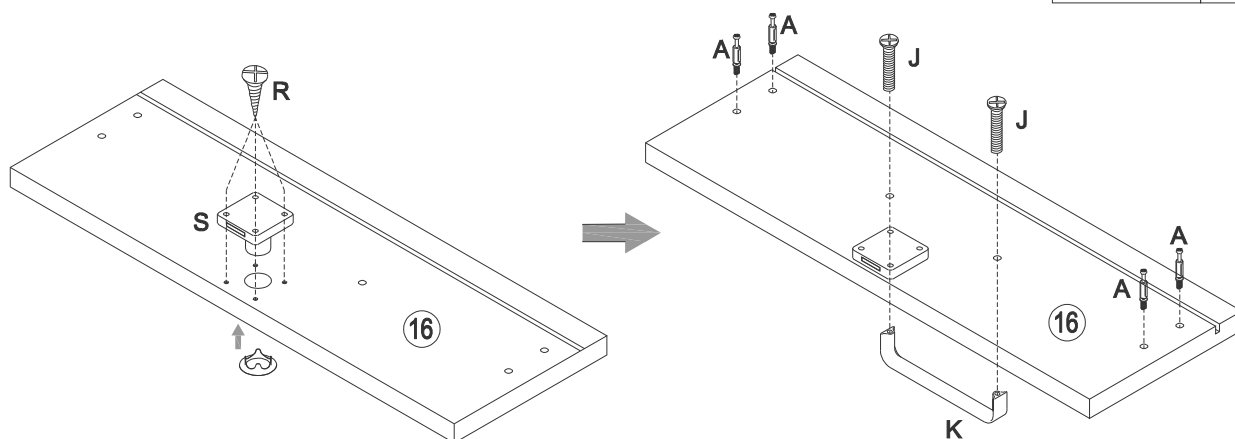




25


B Ø15x10



X 4

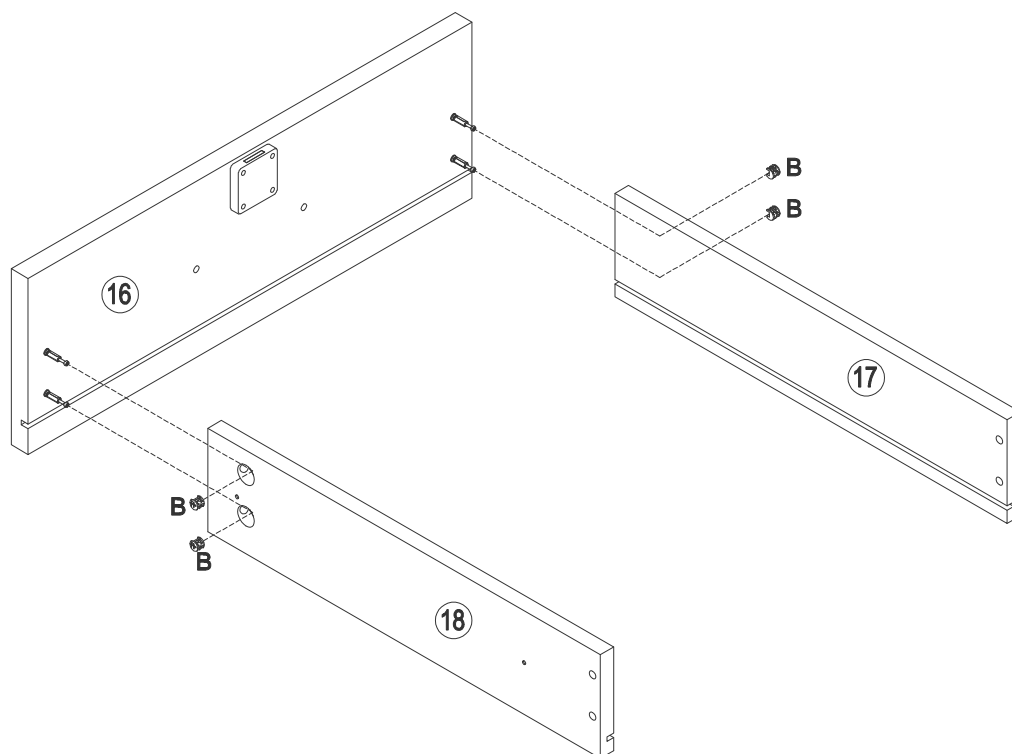

26

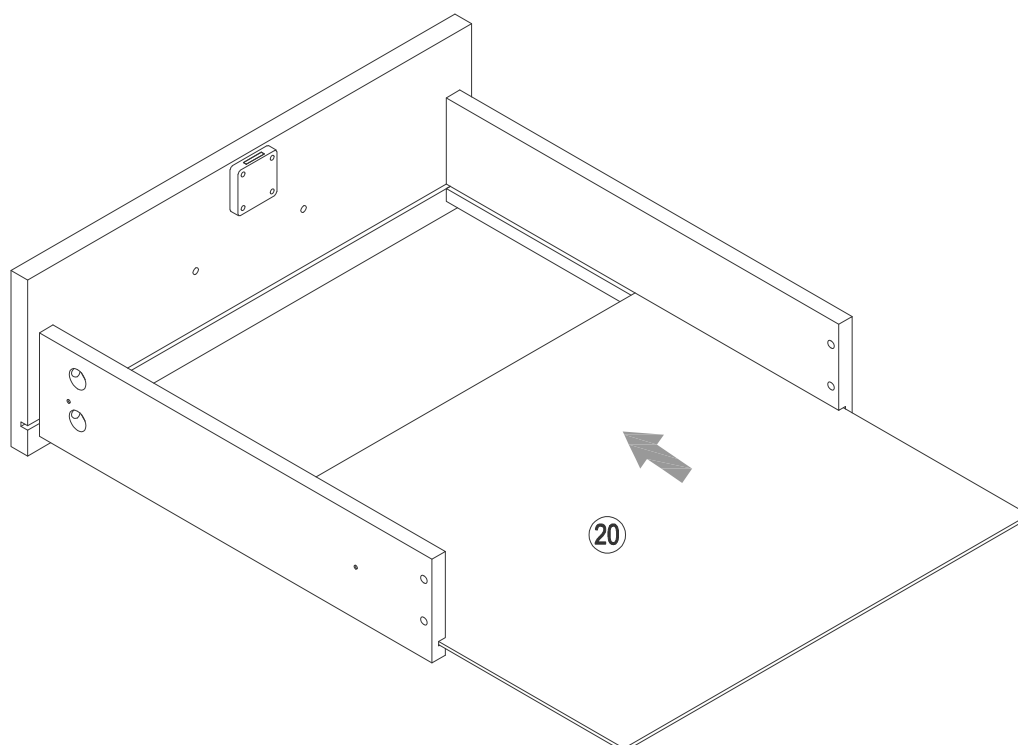




27

D M5x40



X 4

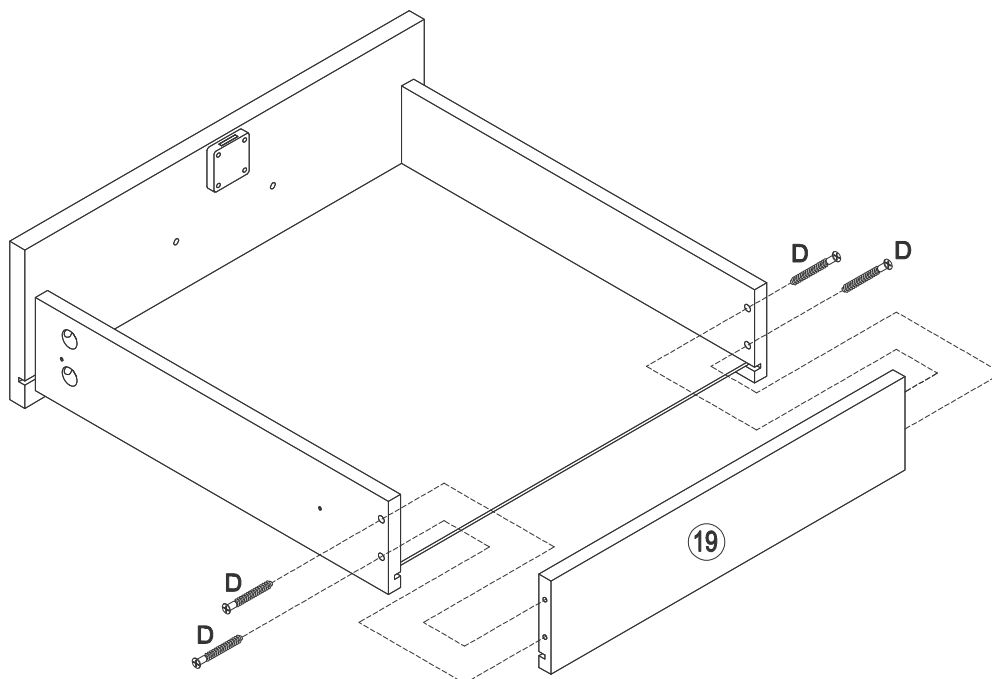


28

C M3.5x12





X 4

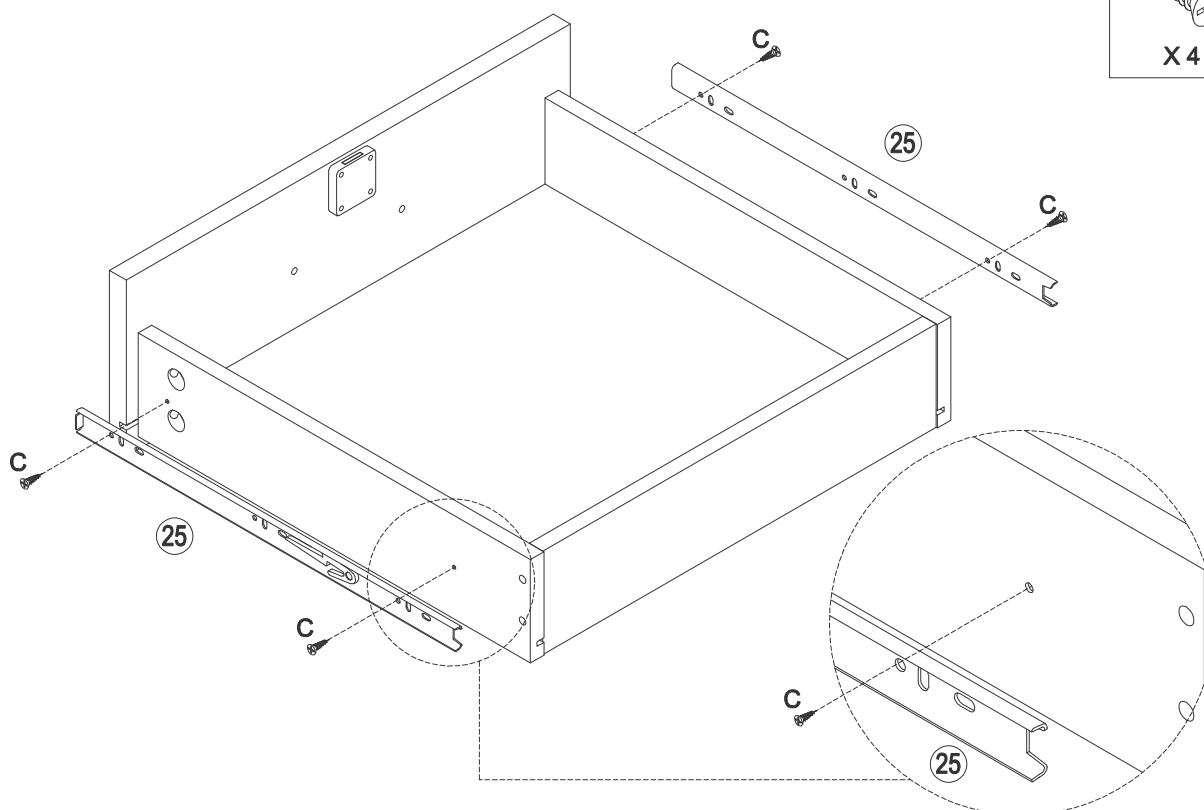




29

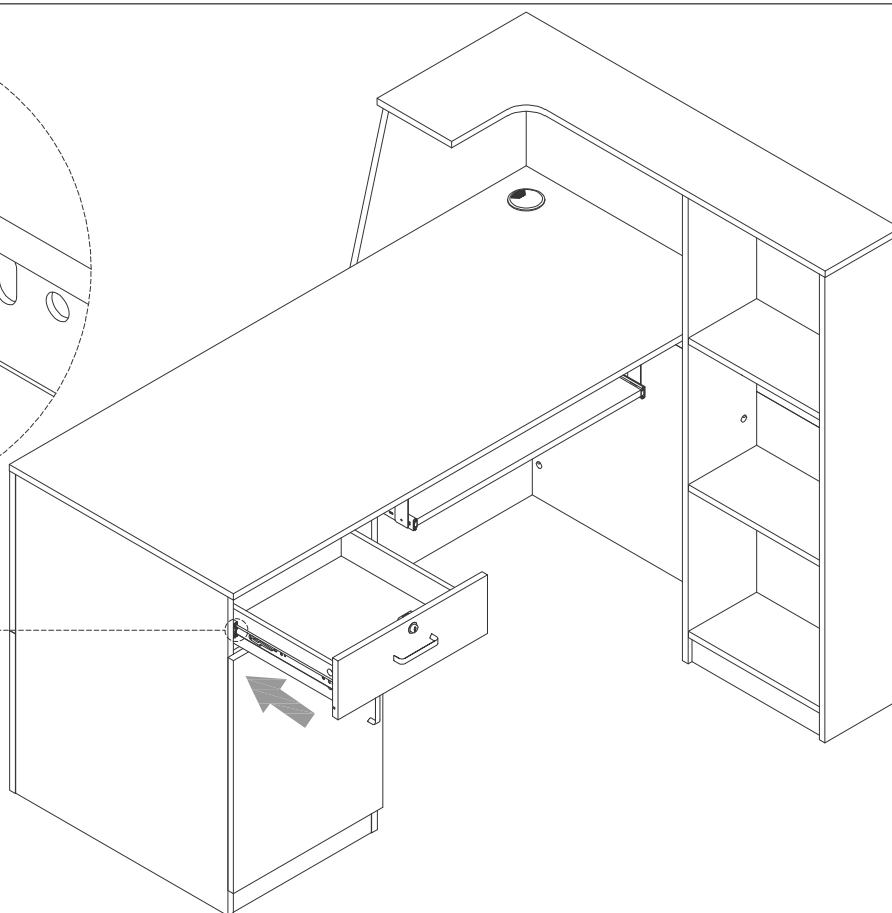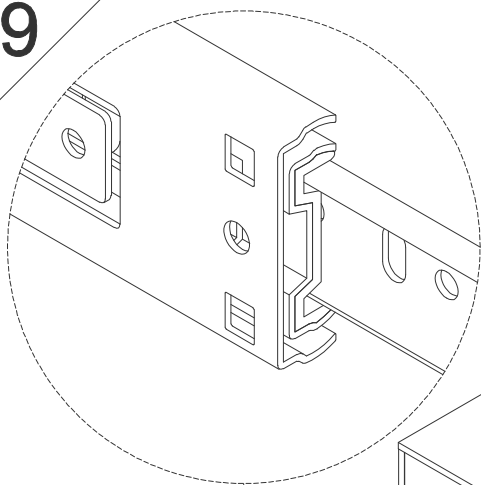

30

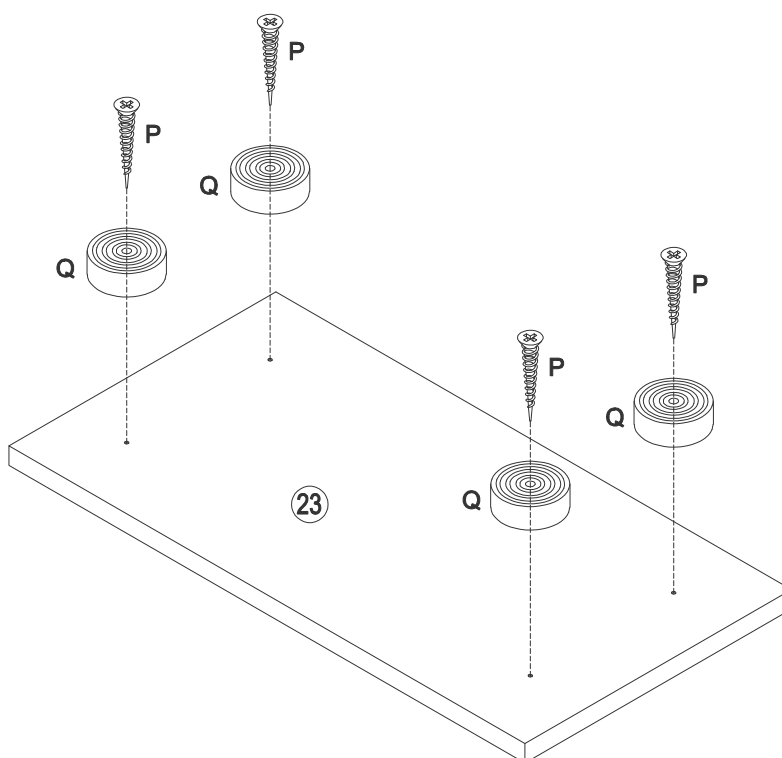


P M3.5x25 Q




X 4




X 4

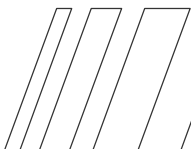


31

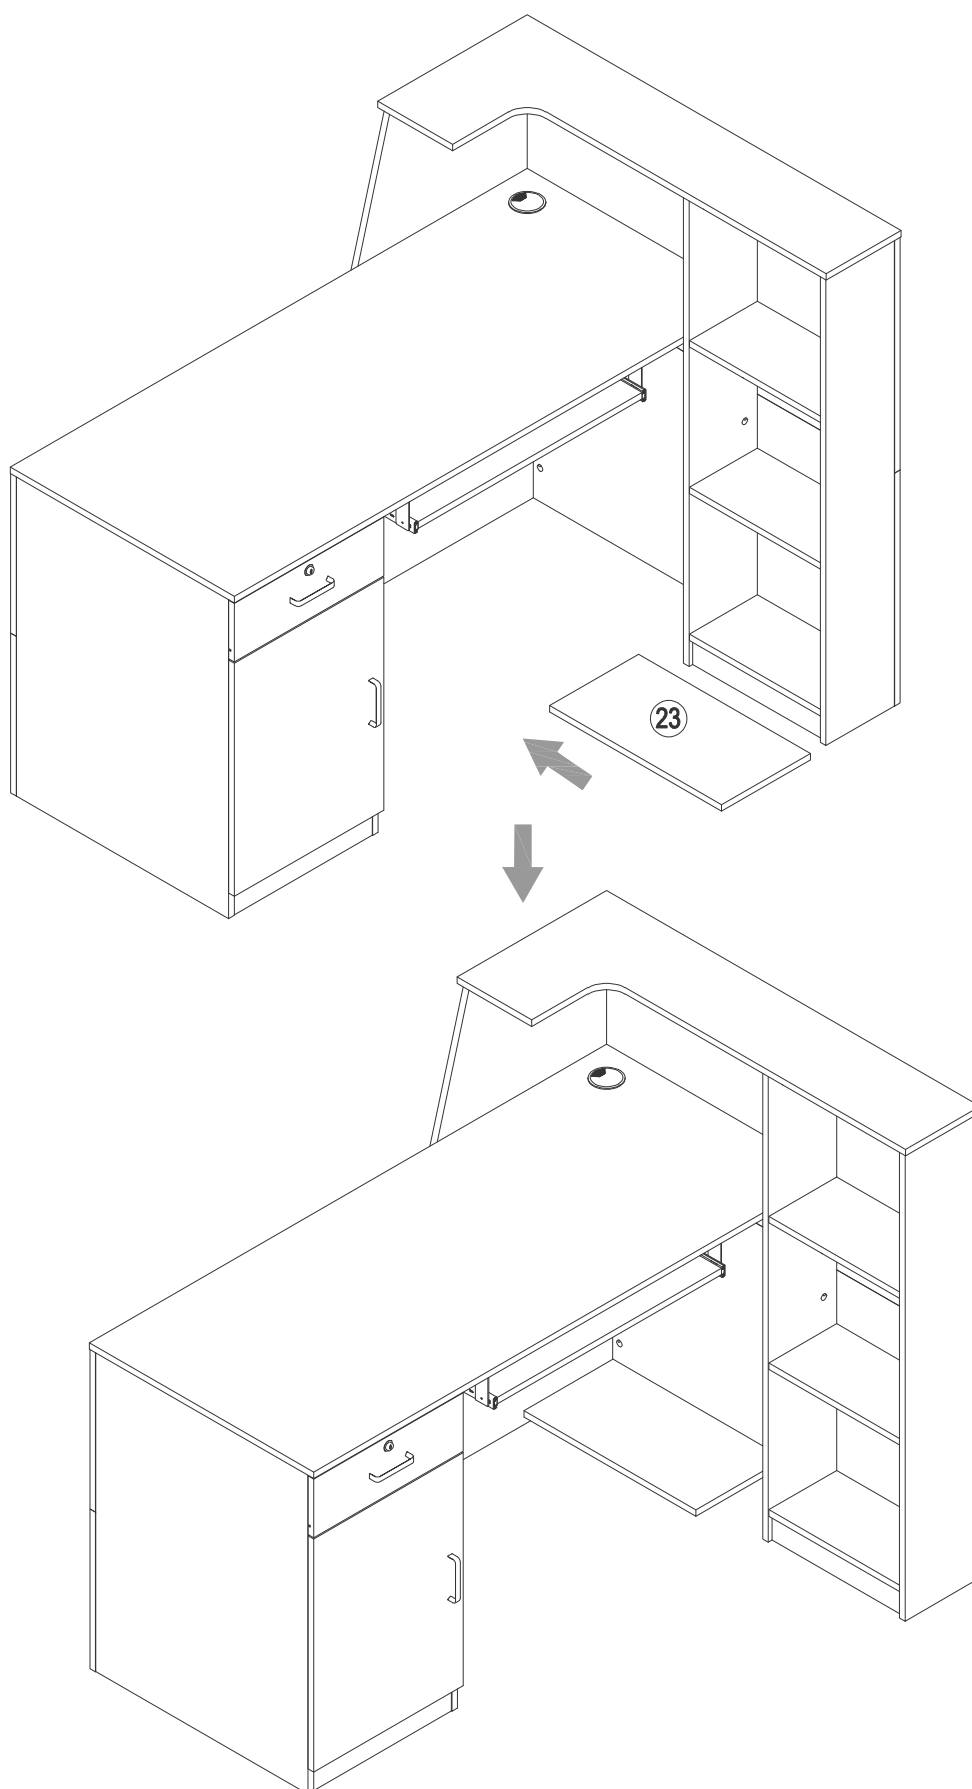

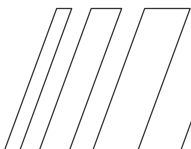


32

M 20MM	N 40MM
	
X 1	X 1

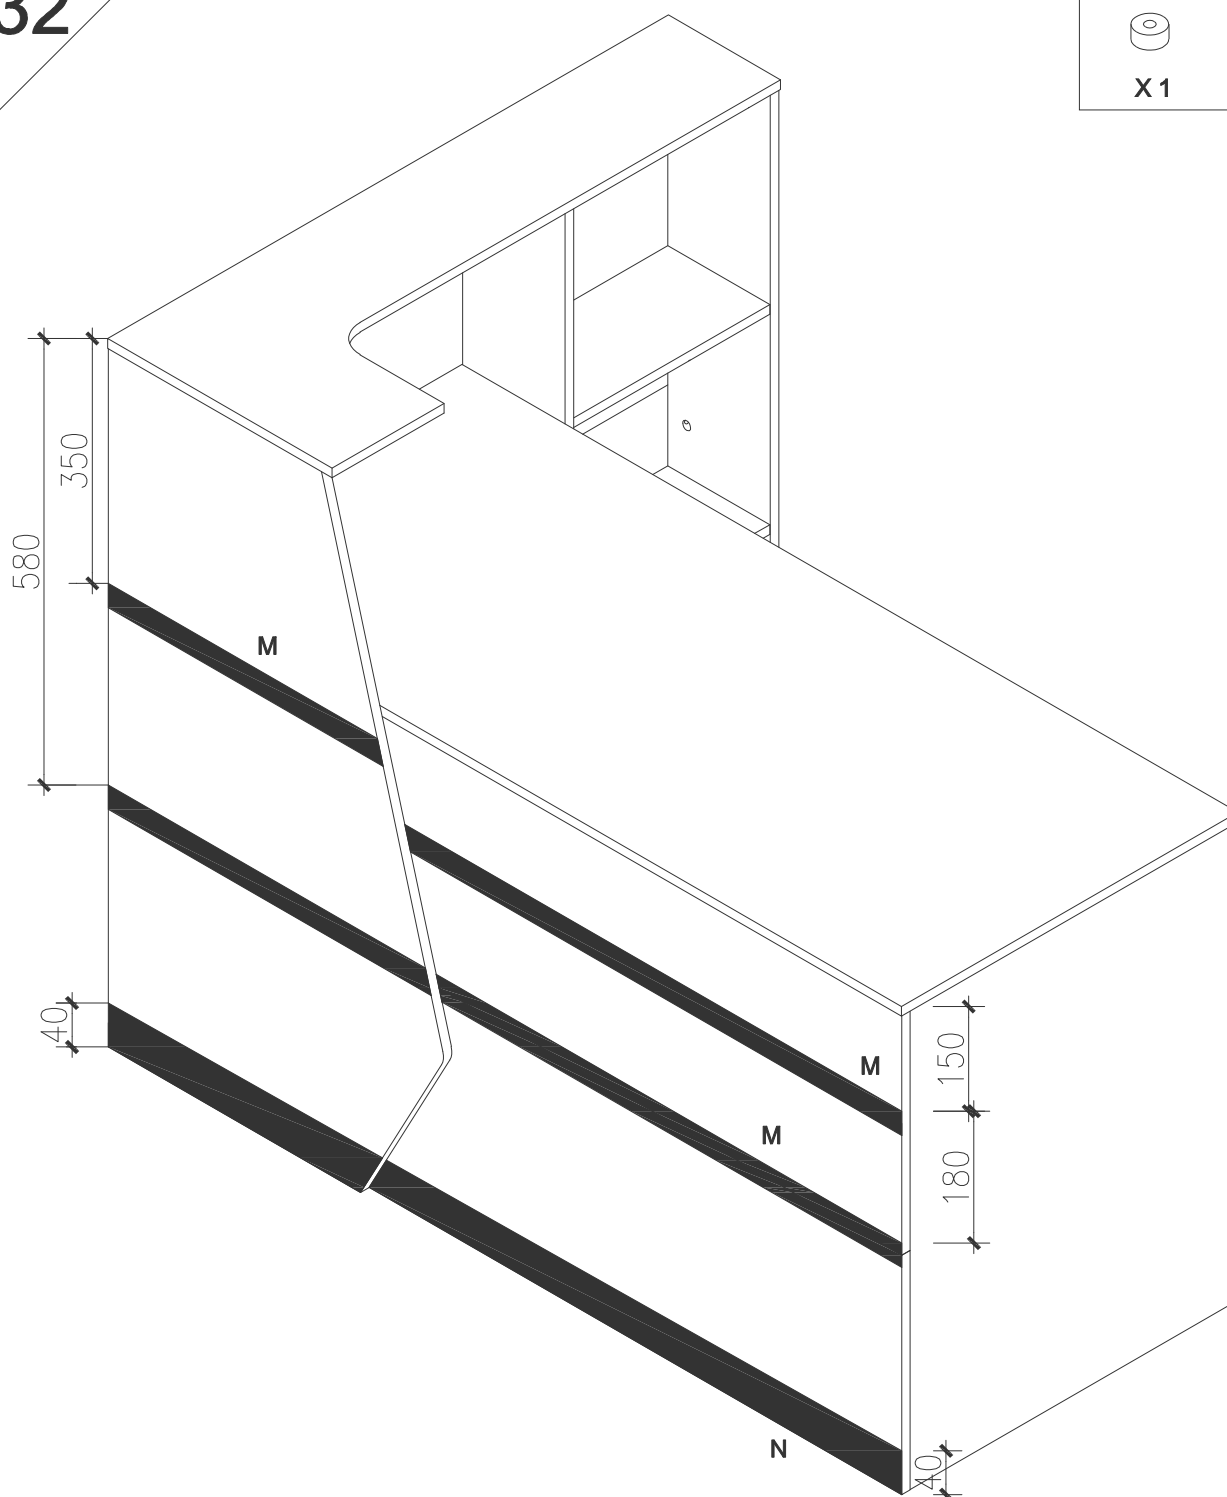**Tips:**

Paste the decorative strip in a reasonable position. Attached picture for suggestion, you can adjust it according to your request.

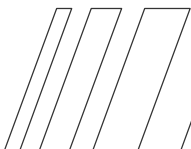

33

o



X 15

