



INSTALLATION INSTRUCTIONS



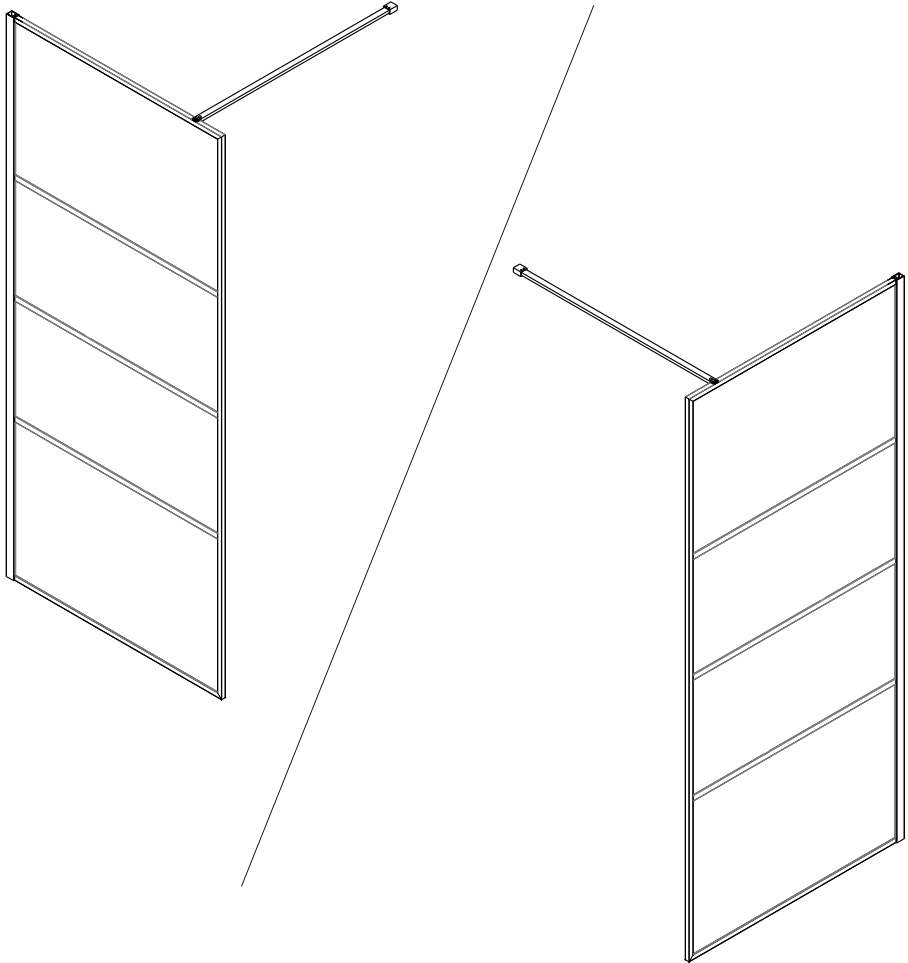



TIN3266MBBP

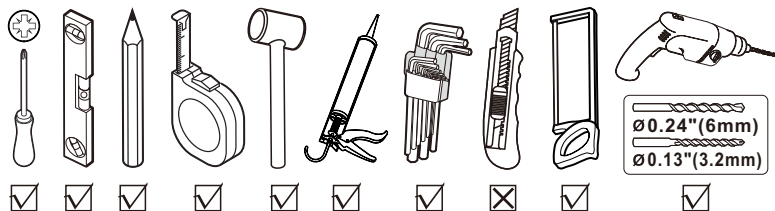


WARNING

When the glass is placed upright, something soft should be placed on the bottom of the Tempered Glass. Please don't hit the corners and the surrounding, otherwise the glass will burst.

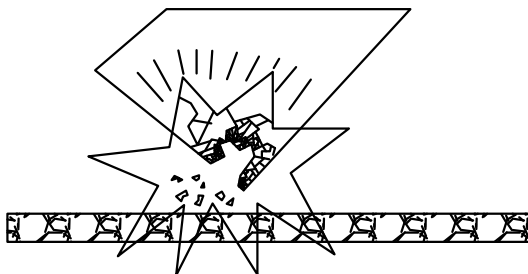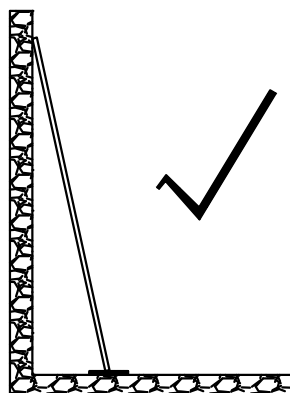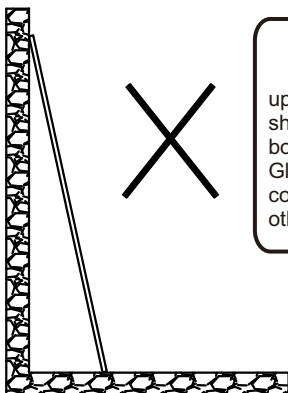





[01] x1

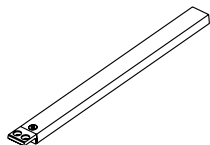

[02] x1

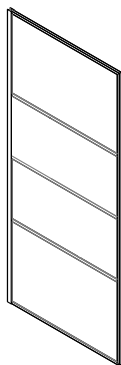

[03] x1



[04] x1



[07] x4



ST4x35

[08] x4



ST4x8

[09] x2




ST4x8

[10] x3







[11] x3




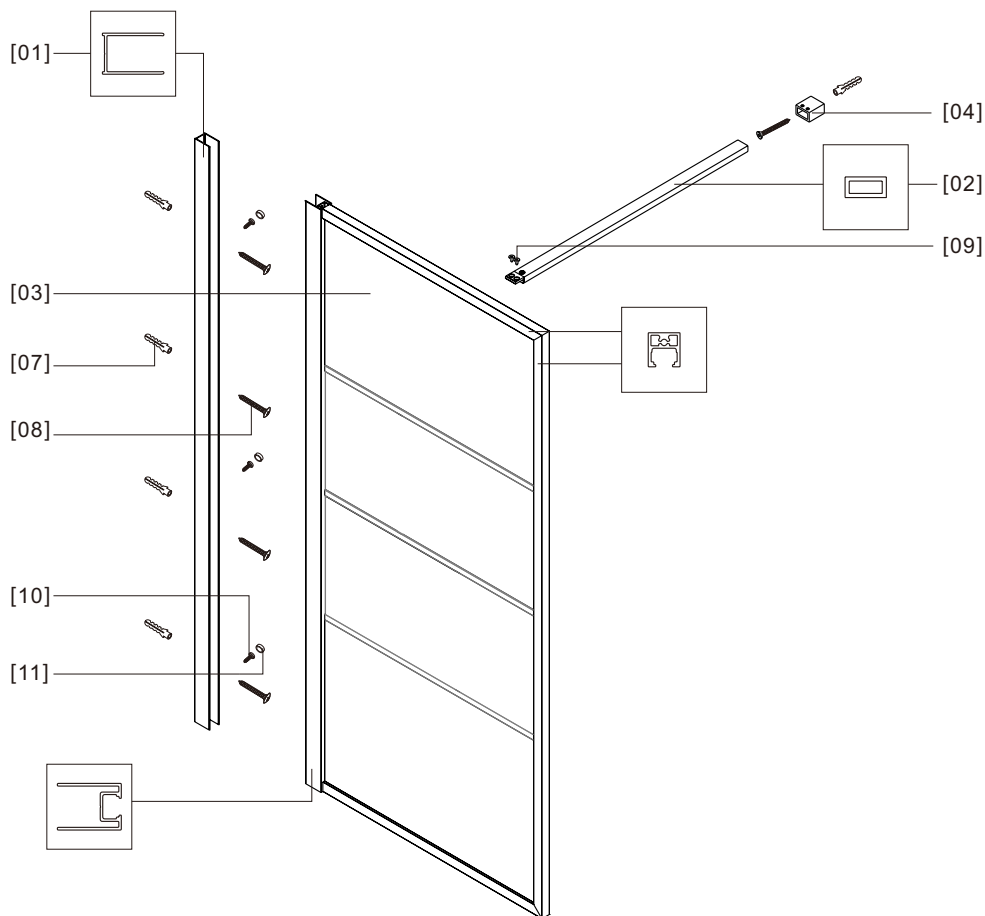







01

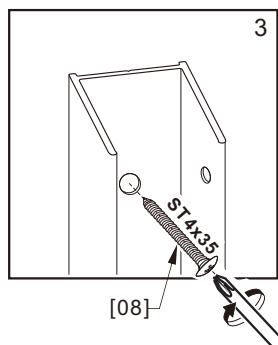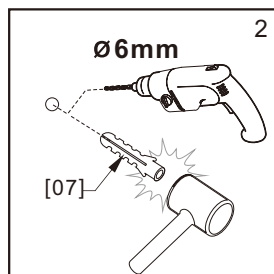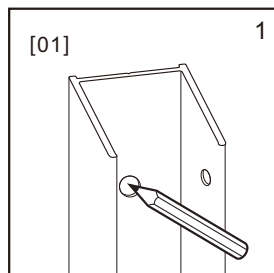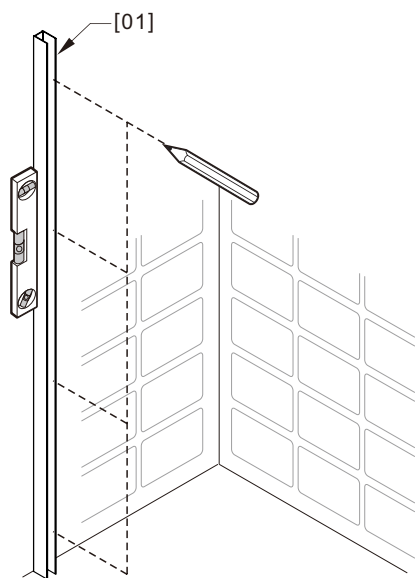



02

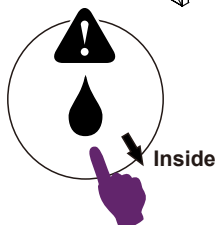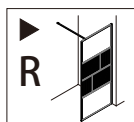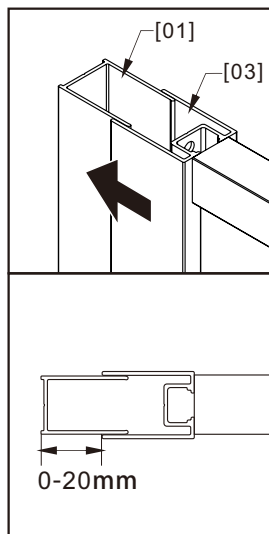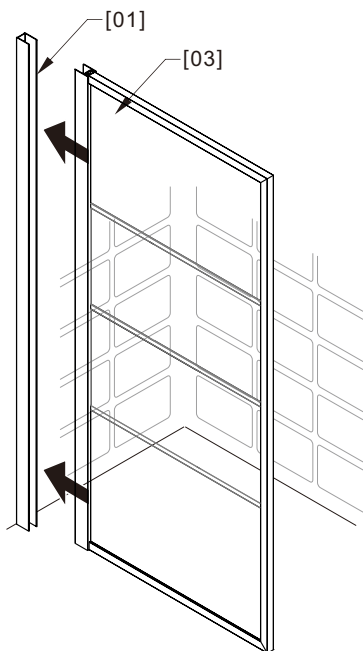


Glass side with easy clean symbol must be installed inside of shower enclosure

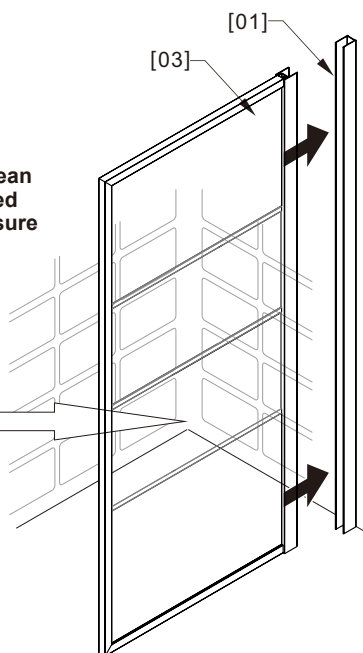


03

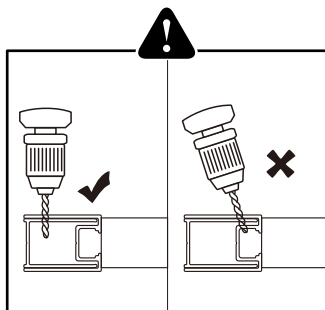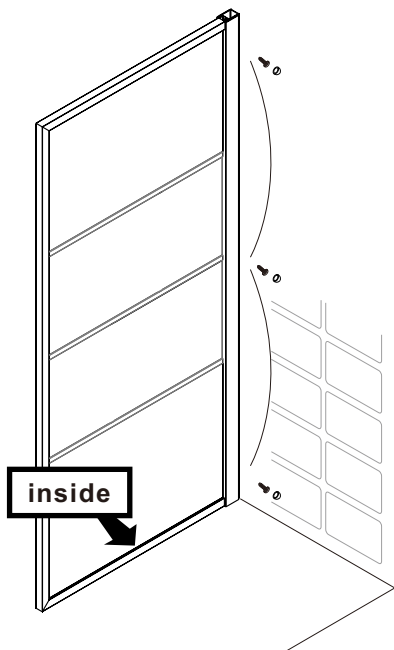













3x

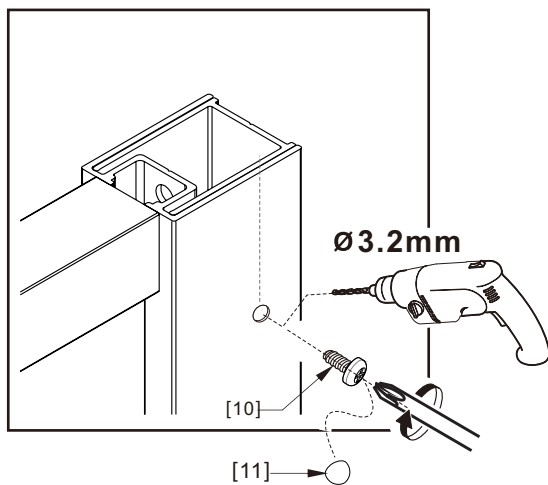

04

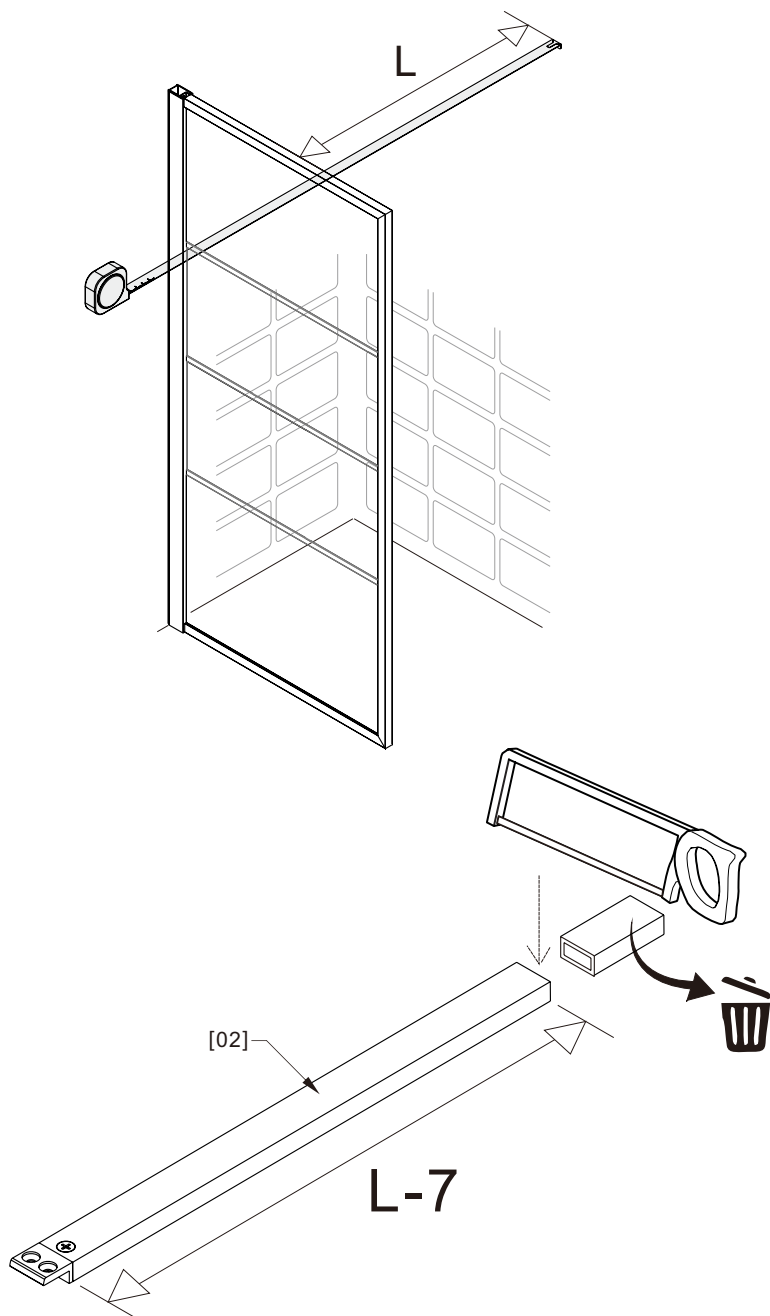

05

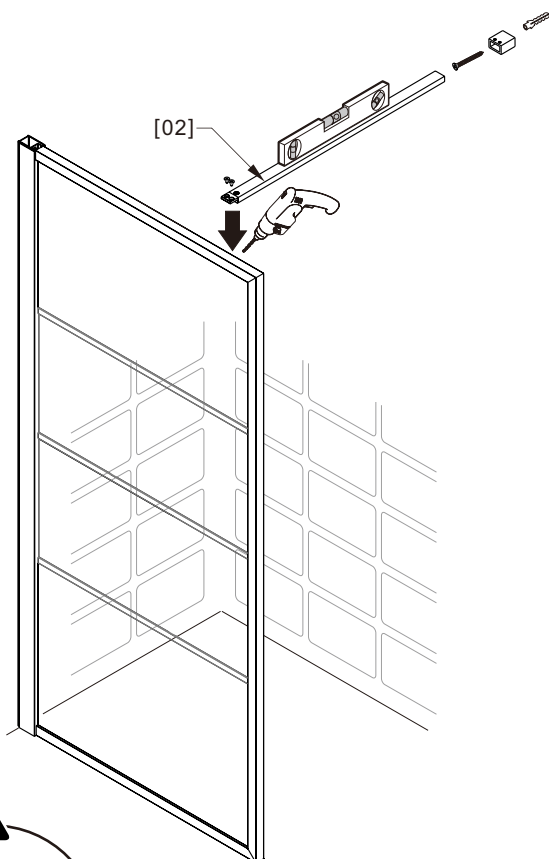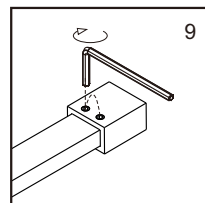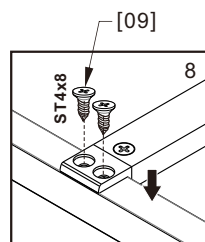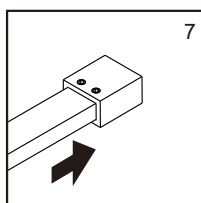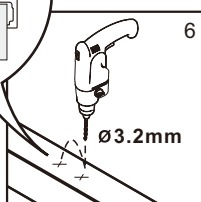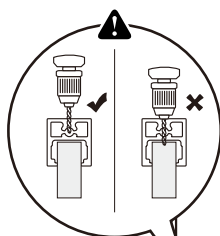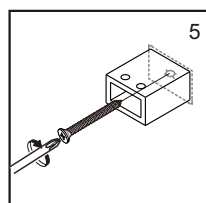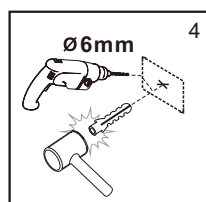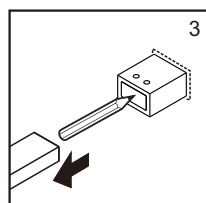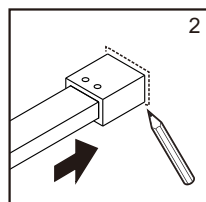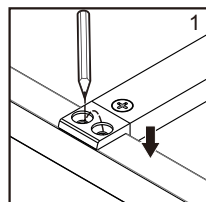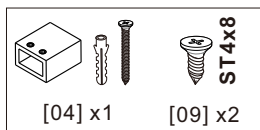

06

