




Product Installation Instructions

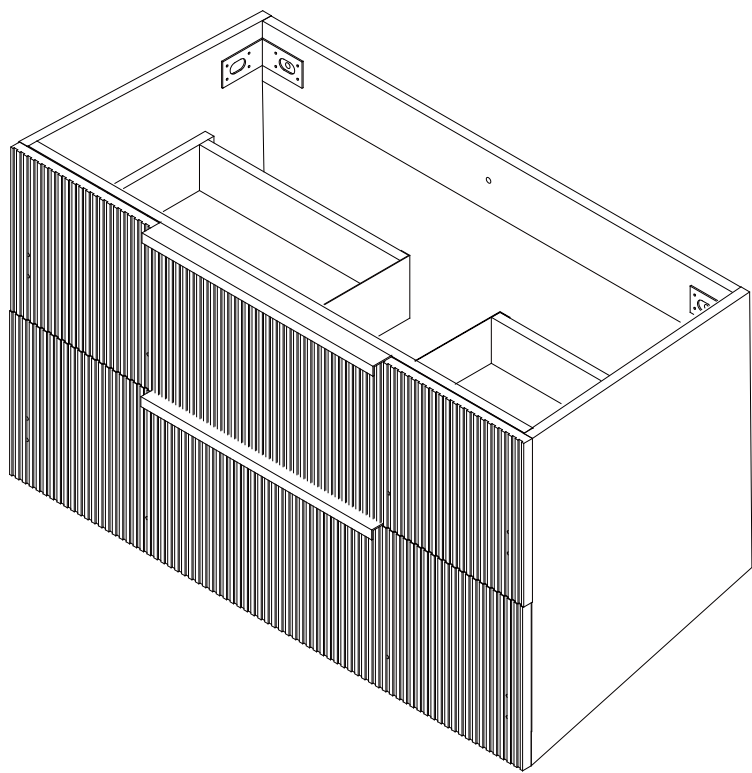


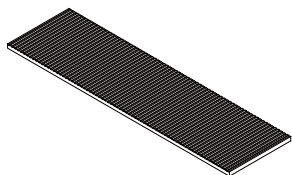


A x2




R x1




S x1

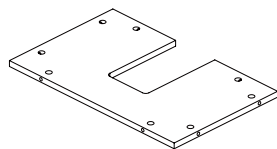


D x1




E x1

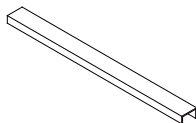


F x2

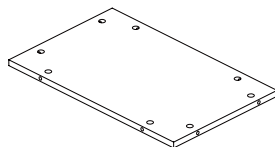


G x1




H x1

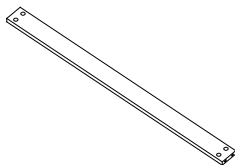


I x2

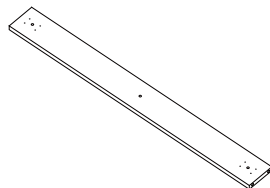


J x1

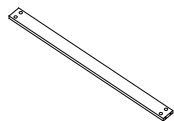


K x1

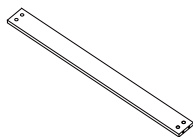


L x1




M x1



N x1

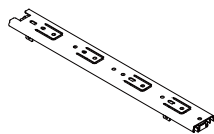

O x4




C x1



B x1








Q x1




P x1






1

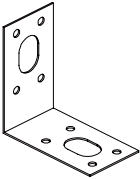①		52pcs	②		52pcs
Two in one nut(10x12mm)			Wood chipping(8x30mm)		
③		2pcs	④		40pcs
⑤		2pcs	⑥		2pcs
Wood chipping(4x14mm)					
 1pcs  Double-head screwdriver, use as required					
					

Product structure decomposition

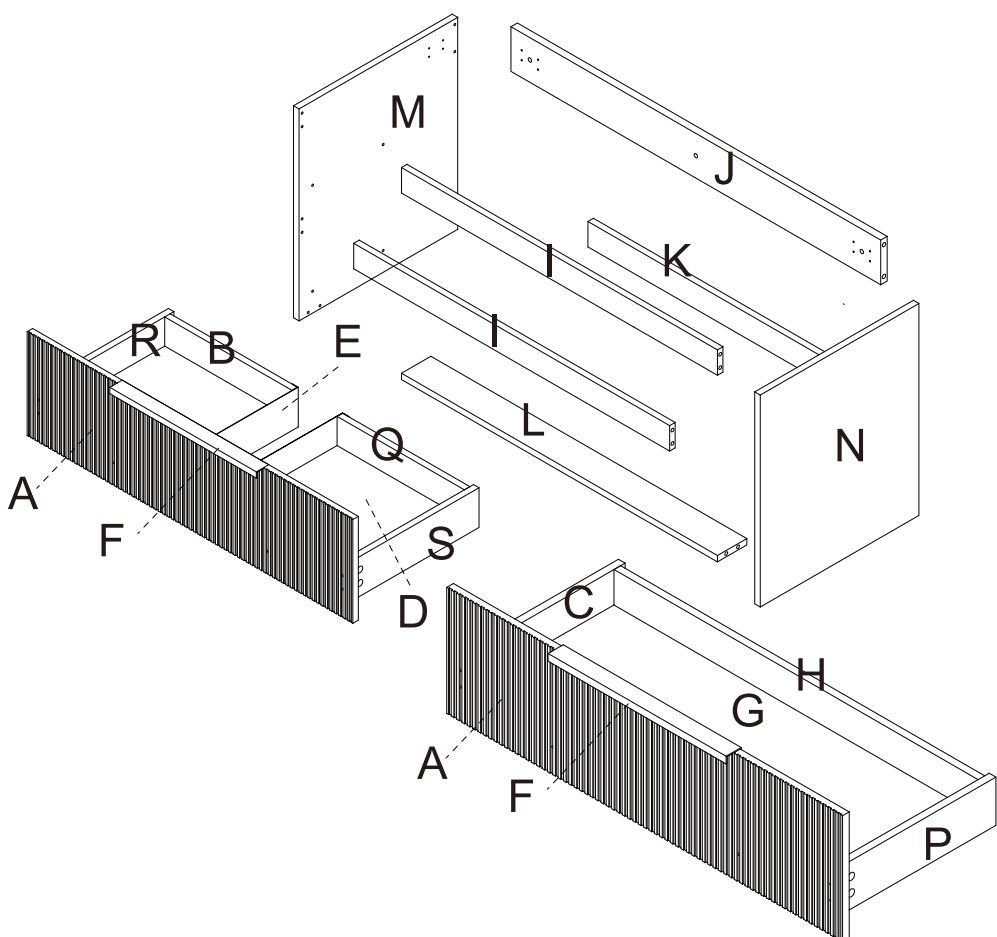


①		16pcs	②		16pcs
Two in one screw(6x28mm)			Two in one nut(10x12mm)		
④		13pcs			
Wood chipping(8x30mm)					

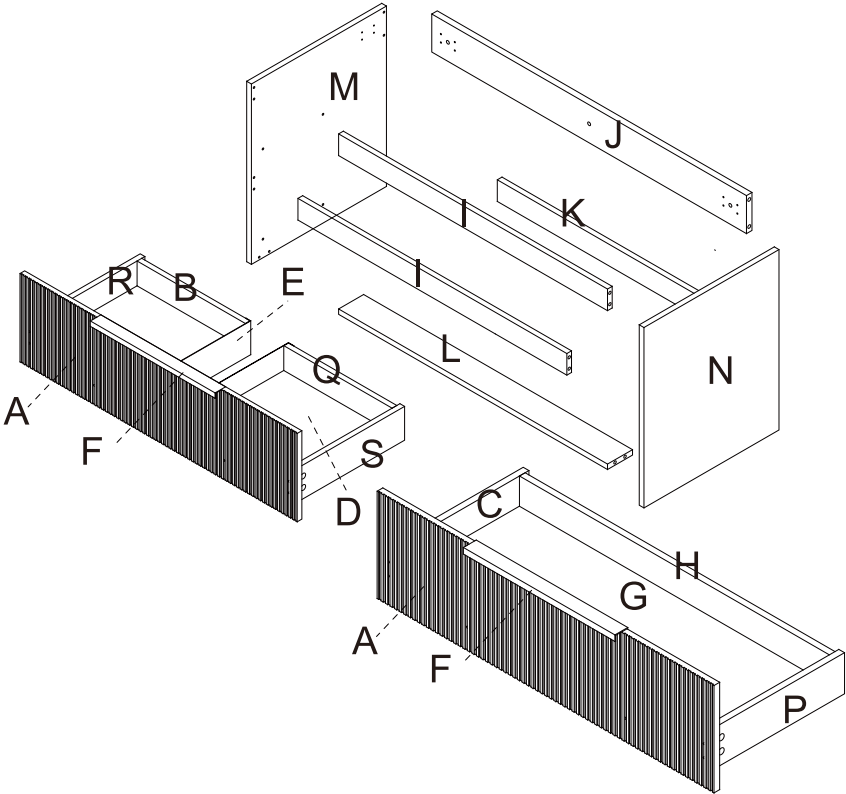


Use parts ① and ②



Step1

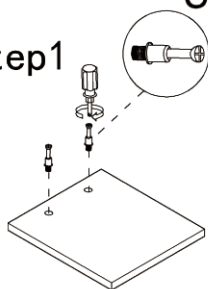


Step2

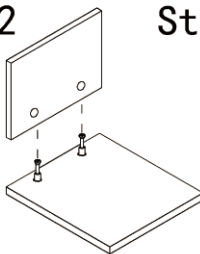

Step3

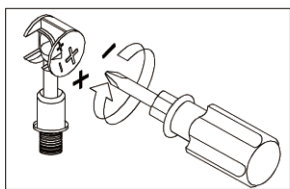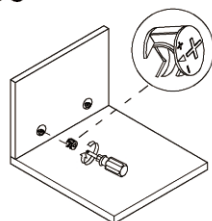





Use a screwdriver to lock in the direction of the "+" sign

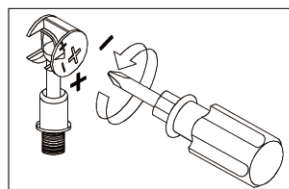


Disassemble along the direction of "-" sign

Step 01


①  x10

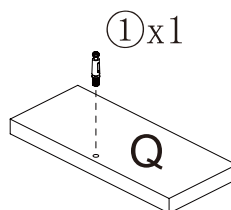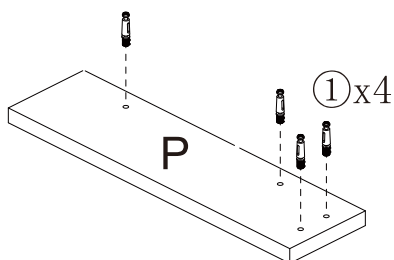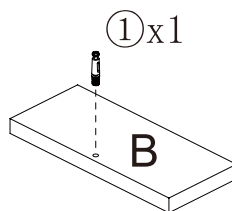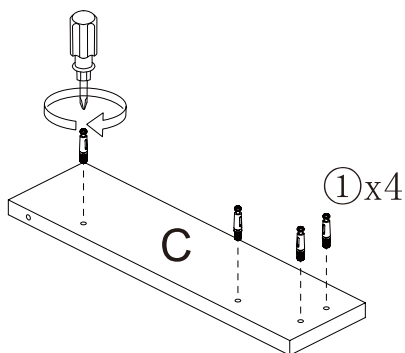

Step 02

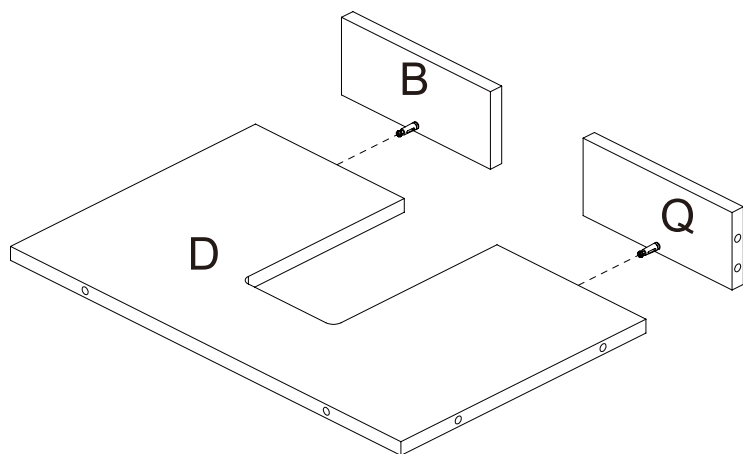

Step 03

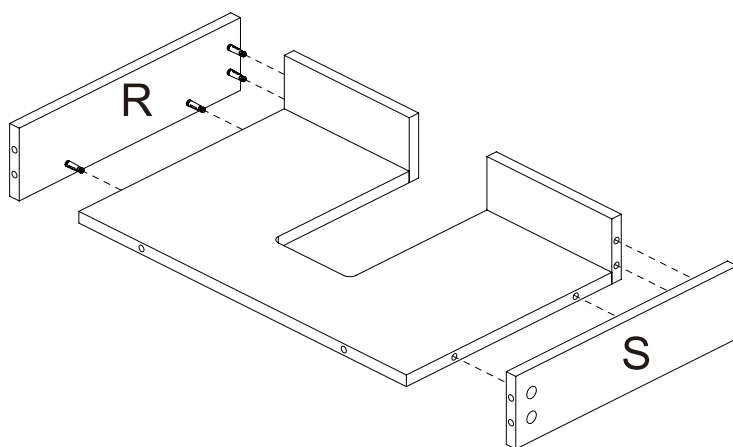


Step 04

②




x10

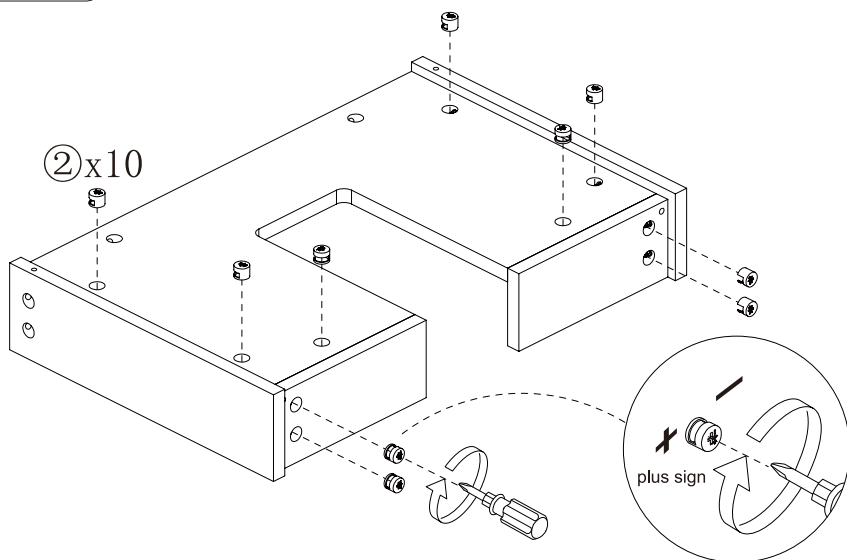

Twist in the direction of the plus sign

Step 05

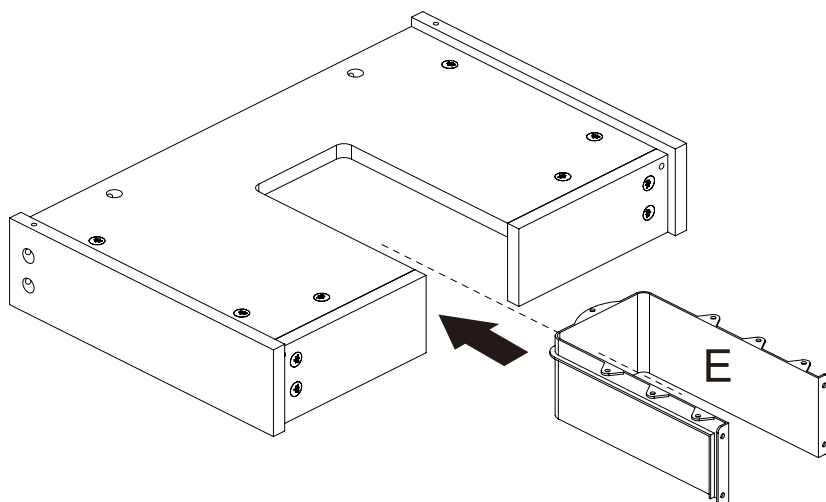


Step 07

④



x11

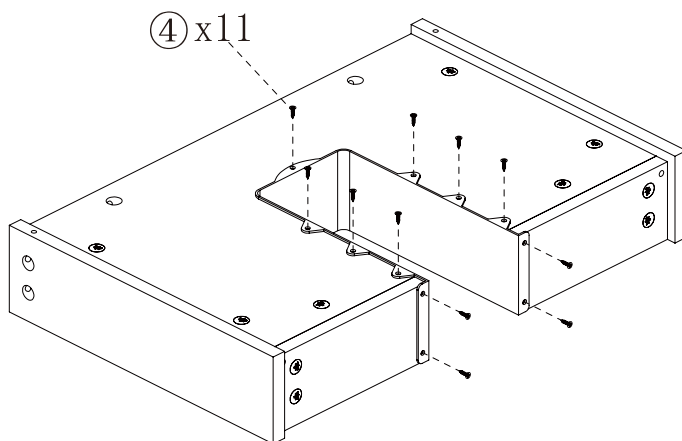


Step 08


①



x6

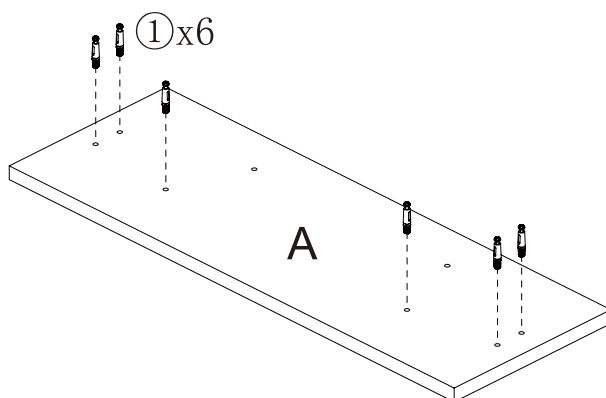

Step 09


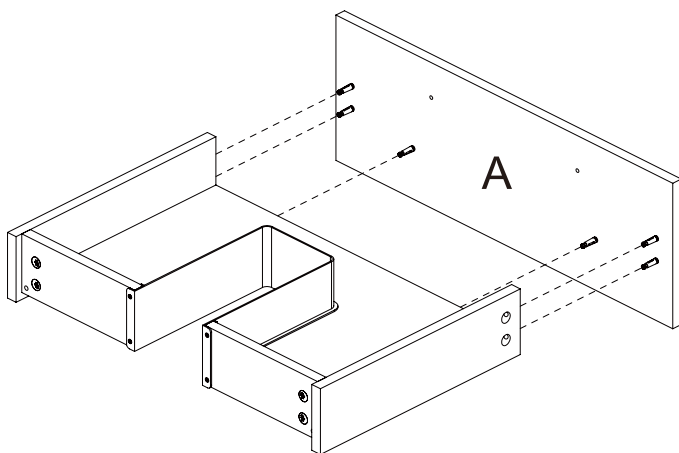


Step 10

②



x6

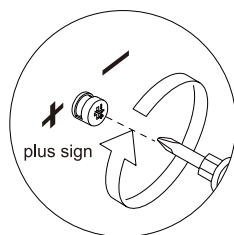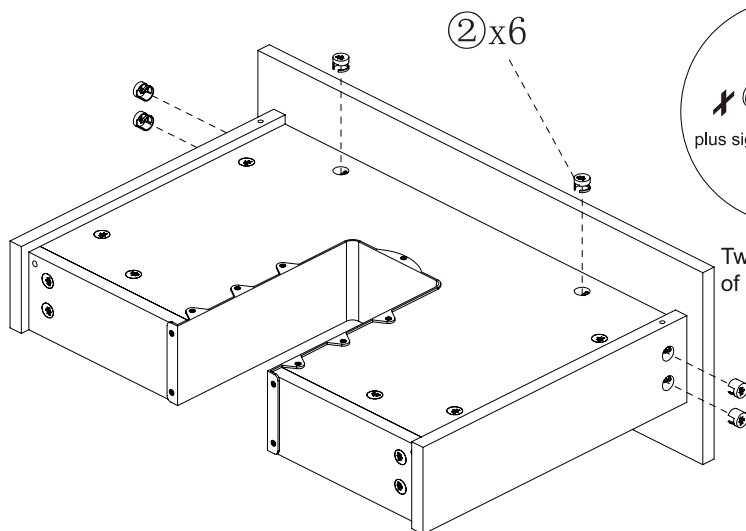

Twist in the direction of the plus sign



Step 11

④



x2

⑤x2

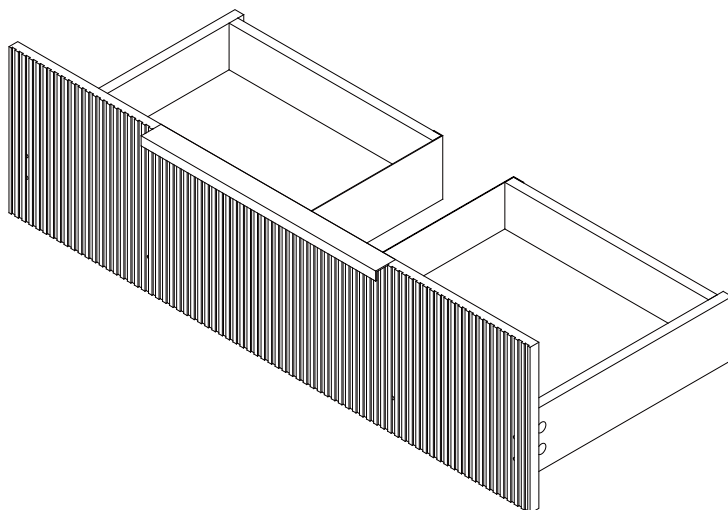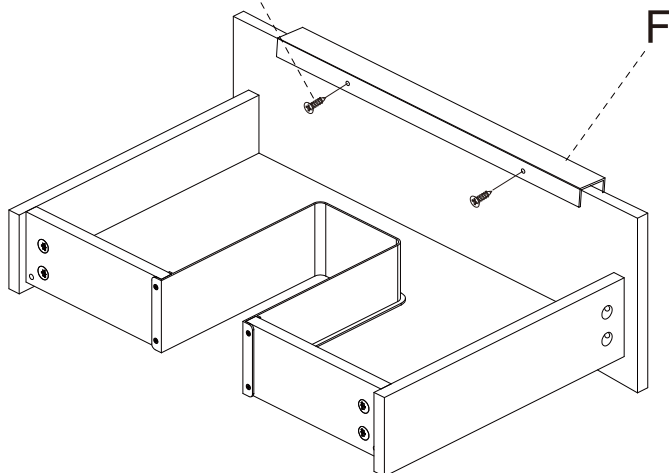


1



16pcs

2




16pcs

Two in one screw(6x28mm)


Two in one nut(10x12mm)

4







2pcs

Wood chipping(4x14mm)

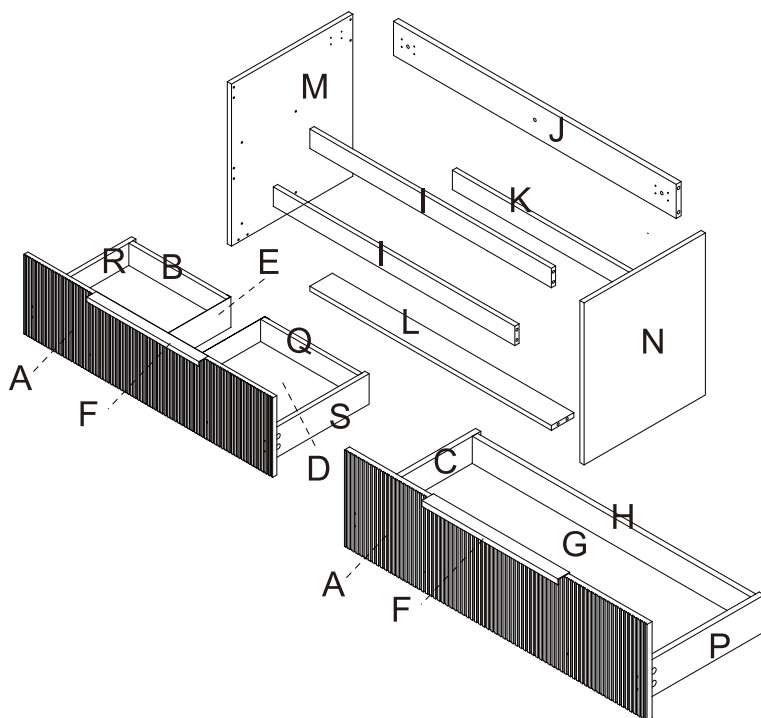



Step 12

①  x10

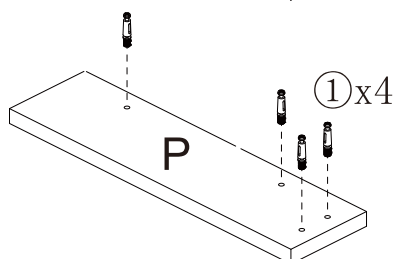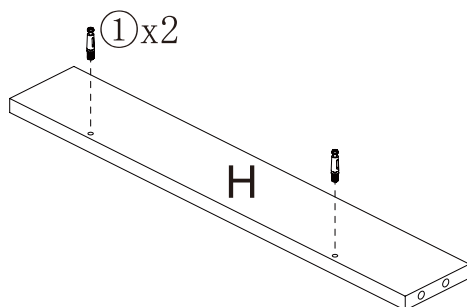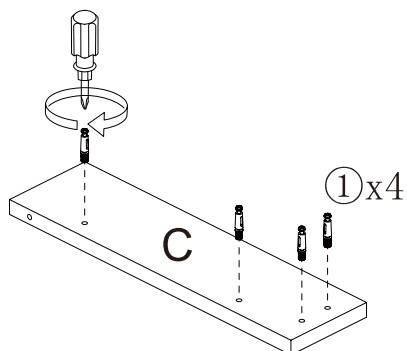

Step 13

②  x2

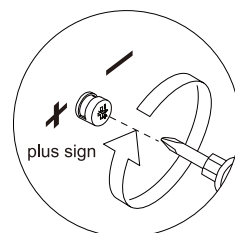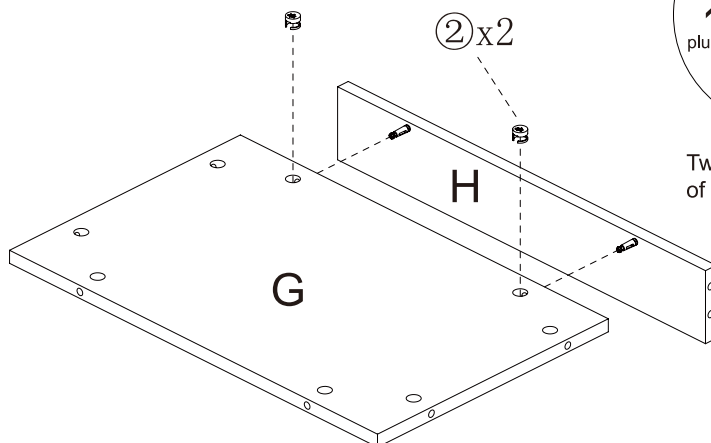


Twist in the direction
of the plus sign

Step 14

②



x8

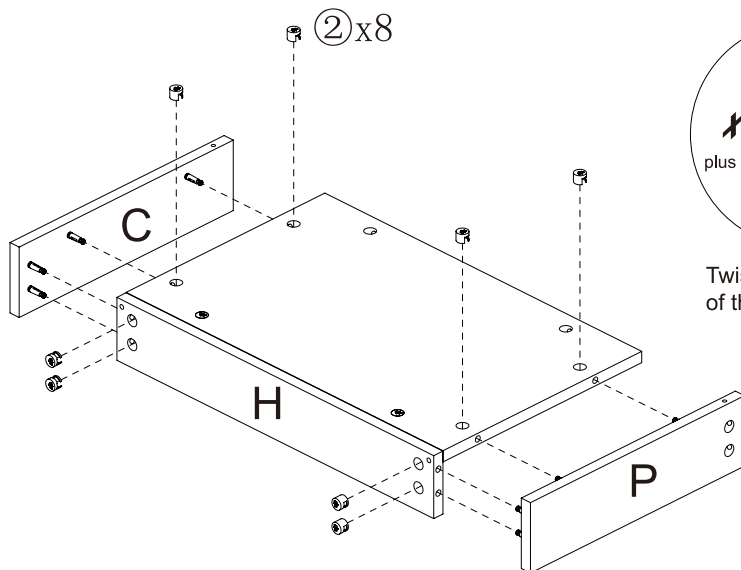


Twist in the direction
of the plus sign

Step 15

①



x6


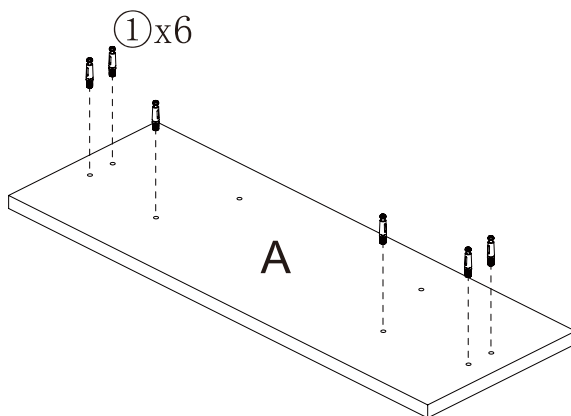


Step 16

②



x6

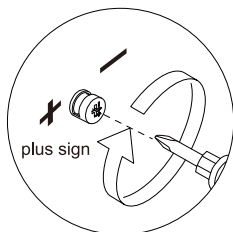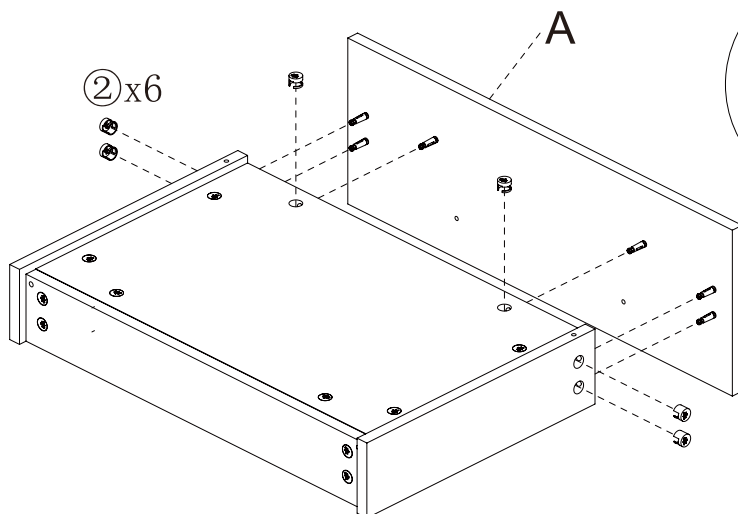


Twist in the direction of the plus sign




Step 17


④



x2


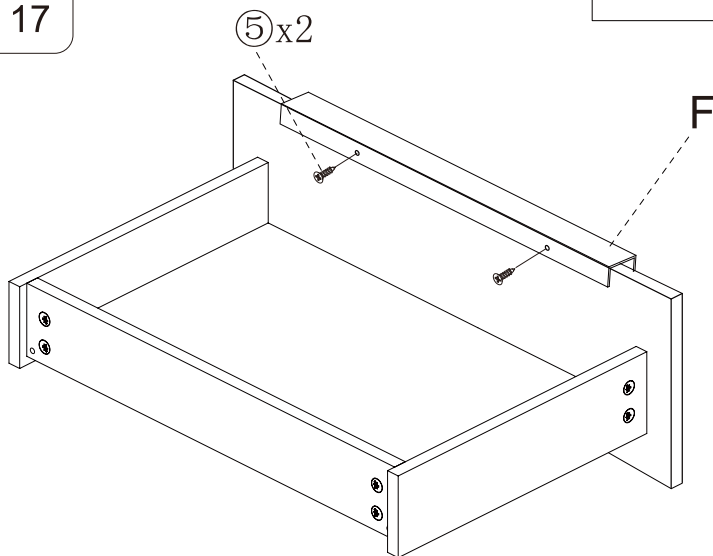


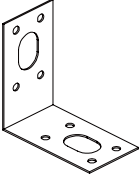①		16pcs	②		16pcs
Two in one nut(10x12mm)			Wood chipping(8x30mm)		
③		2pcs	④		32pcs
Wood chipping(8x30mm)					

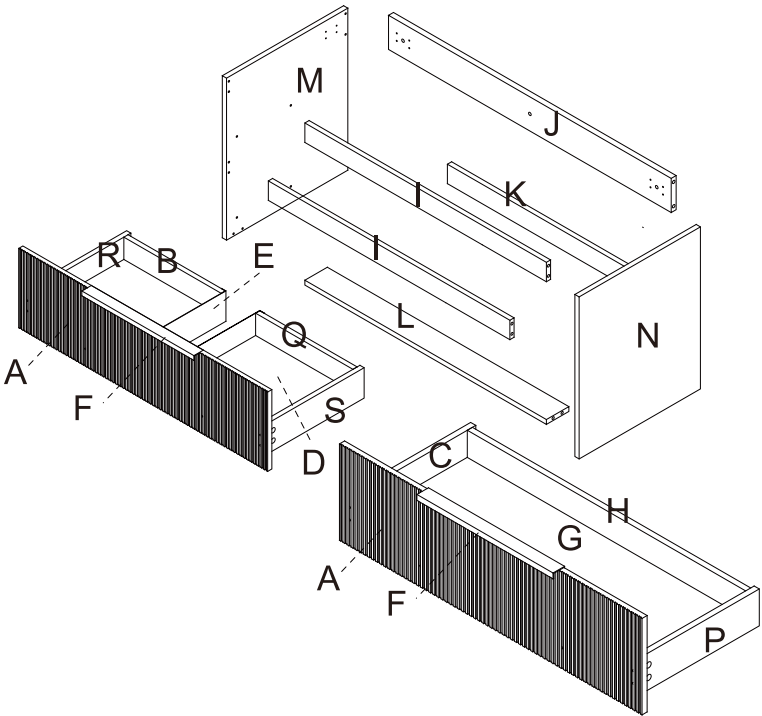

Step 18


①  x16

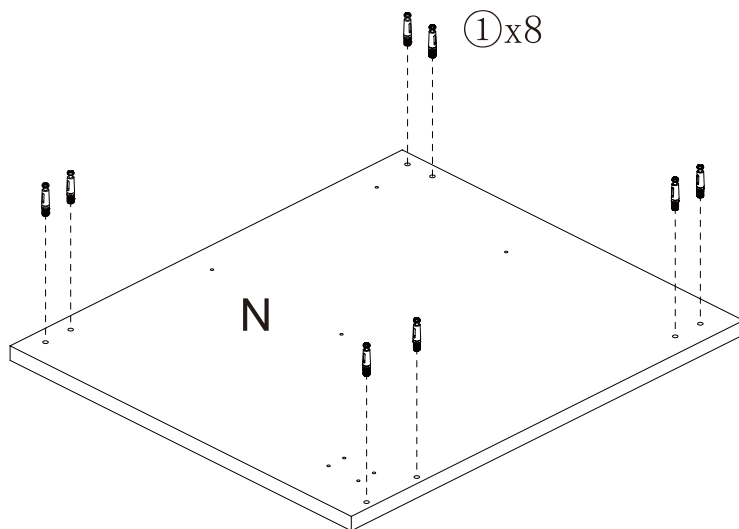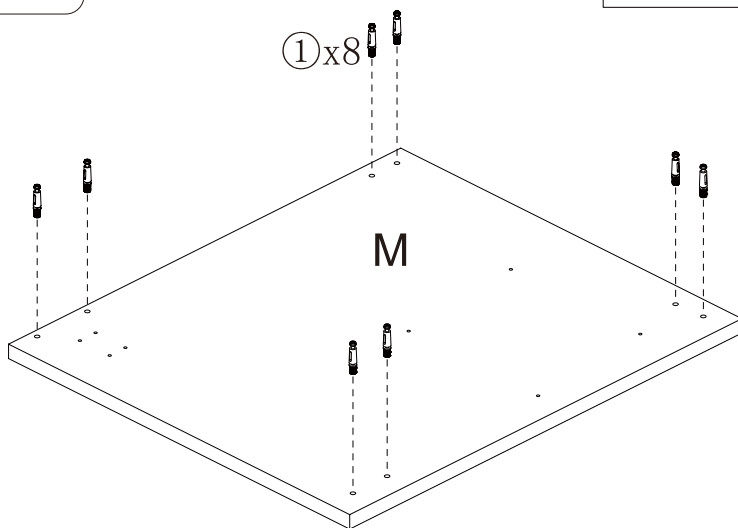


Step 19

Prepare drawer slides and follow the steps below


19-1 Extend Drawer Slide.

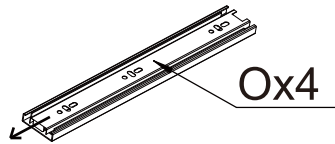


19-2 Flip Drawer Slide over.

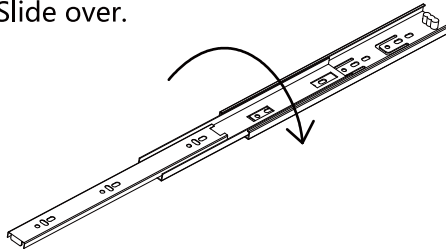

19-3 Move release trigger as shown below while pulling on Drawer Side.

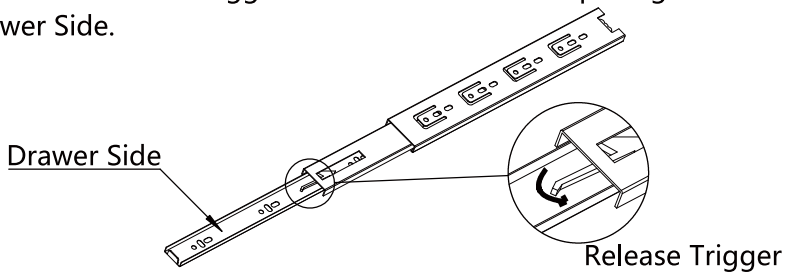

19-4 Separate Drawer Side from Drawer Slide Assembly.


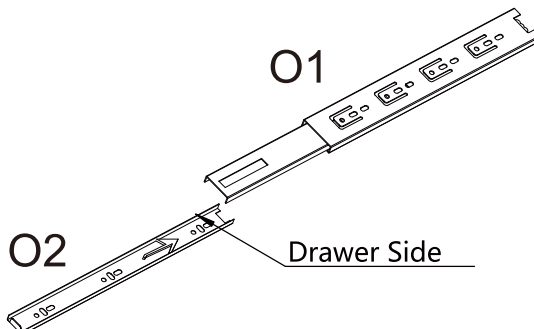


Step 20

④



x8

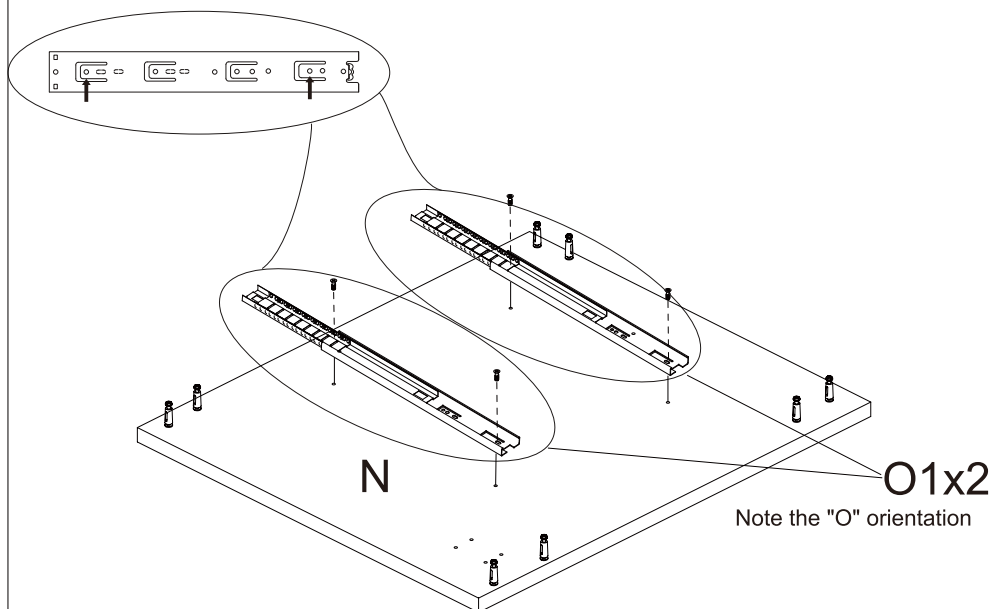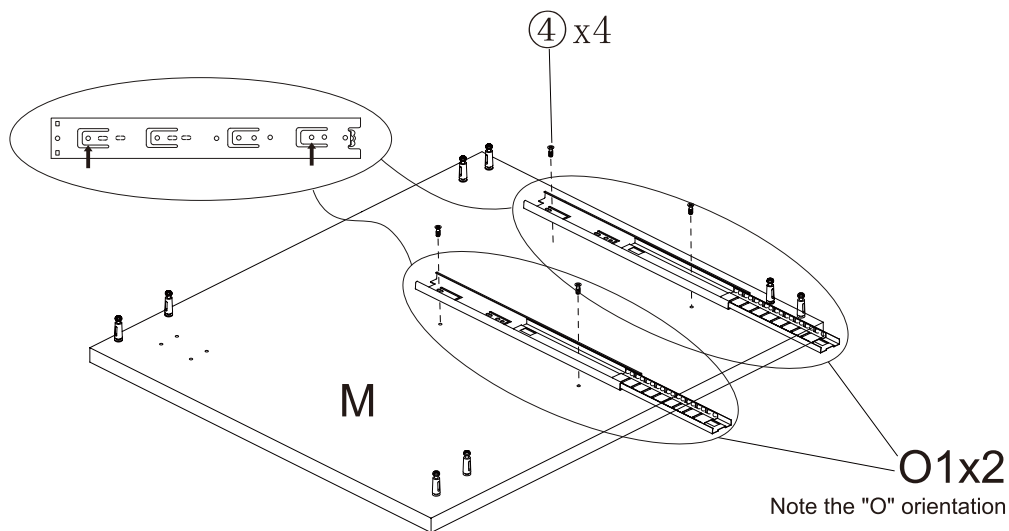


Step 21

②



x2

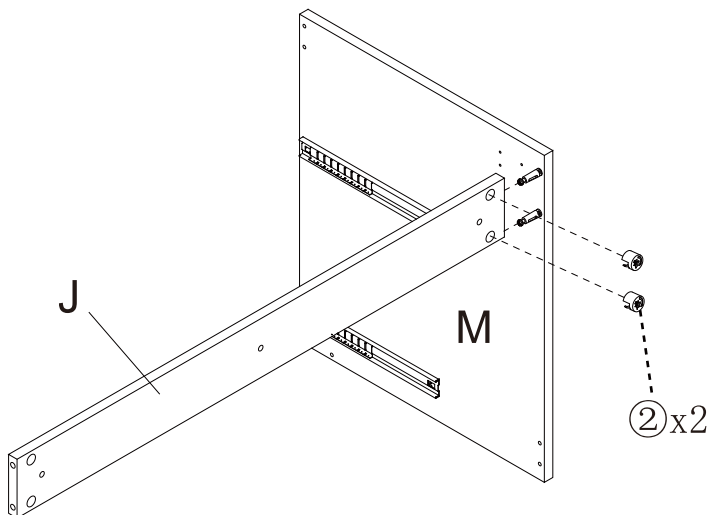


Step 22

②



x2

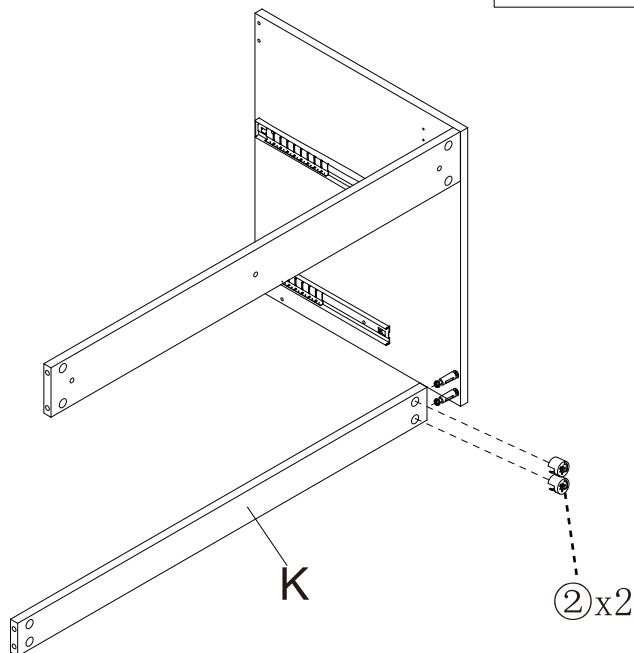


Step 23

②



x2

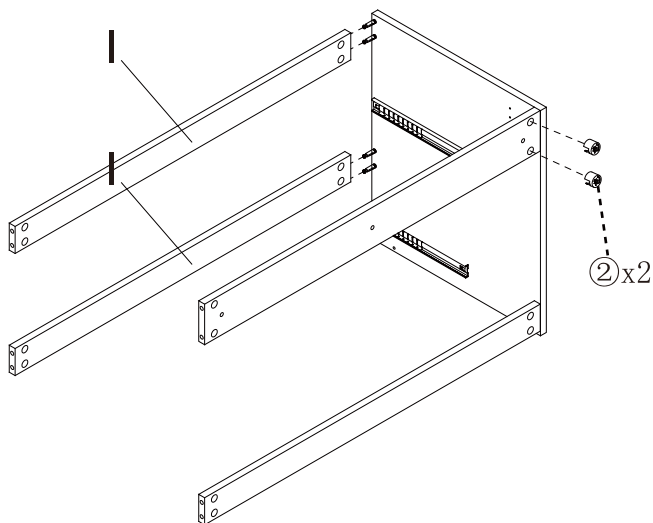


Step 24

②



x2

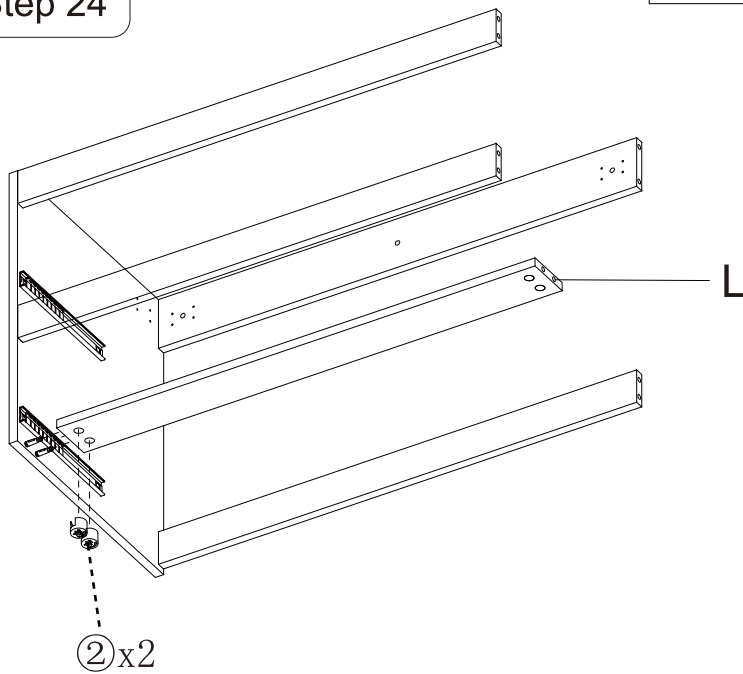


Step 25


②



x8

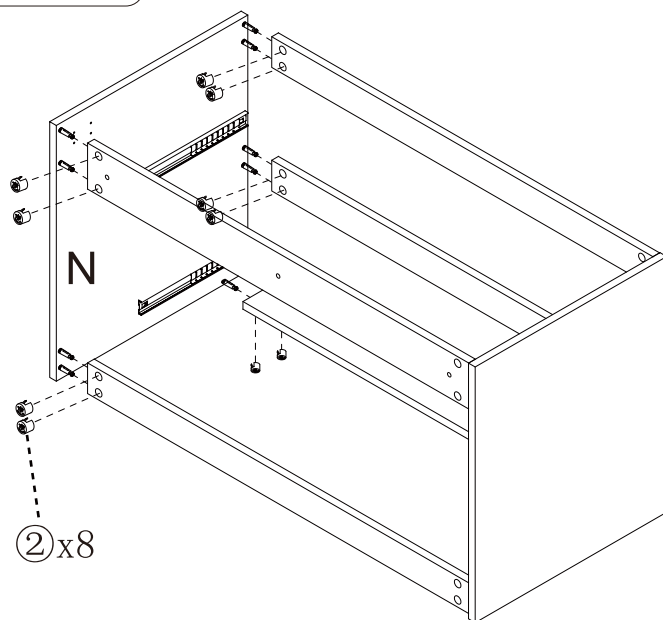


Step 26


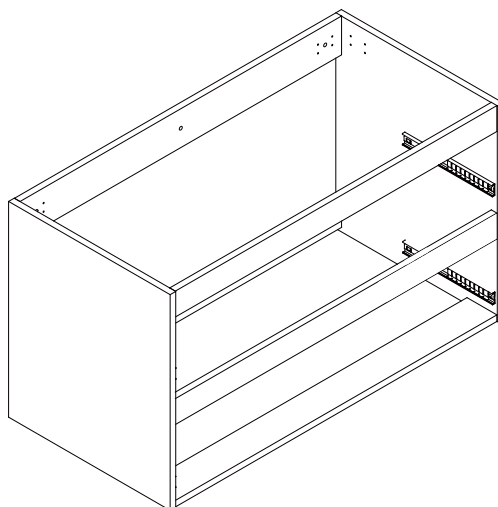


Step 27

④  x16

③  x2

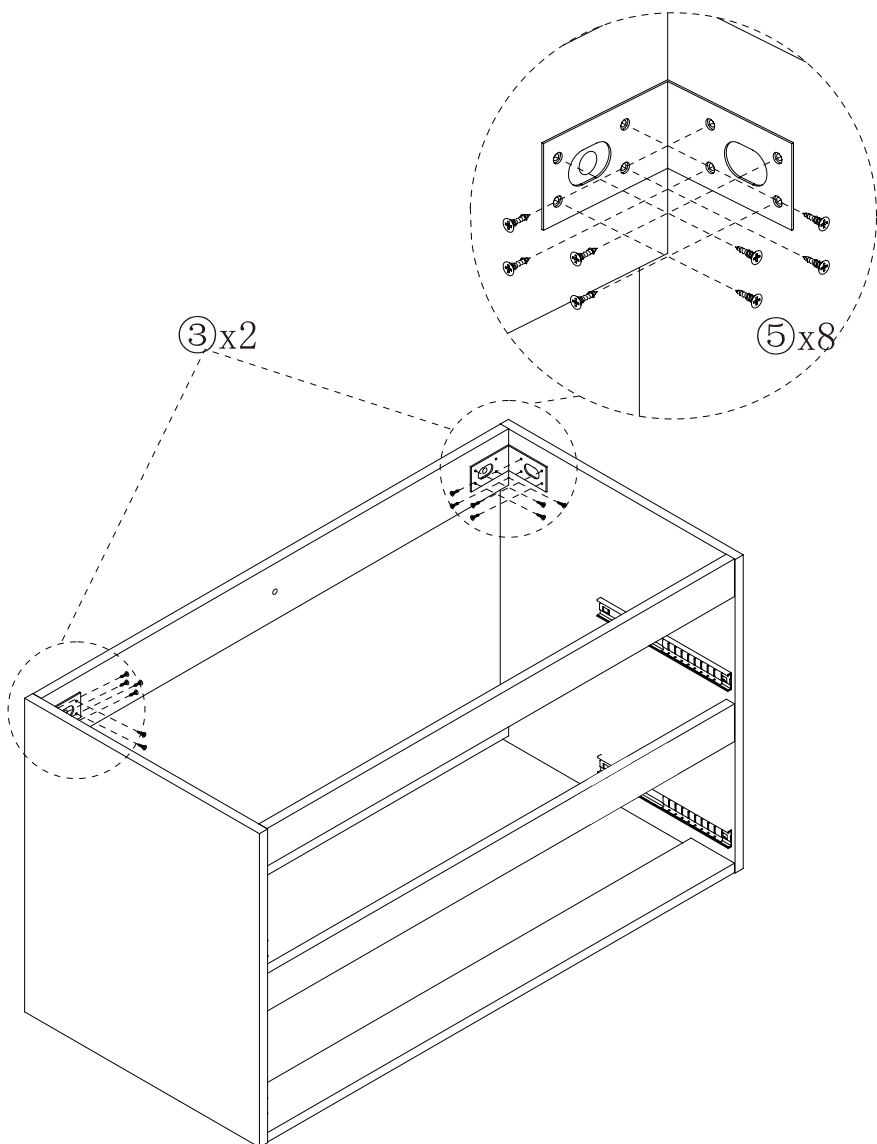


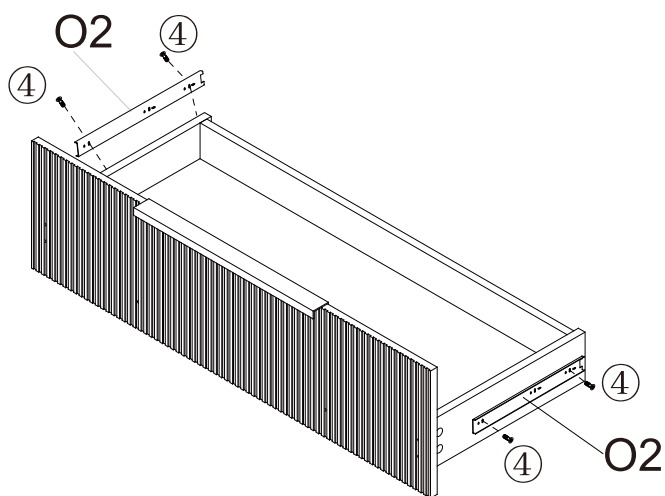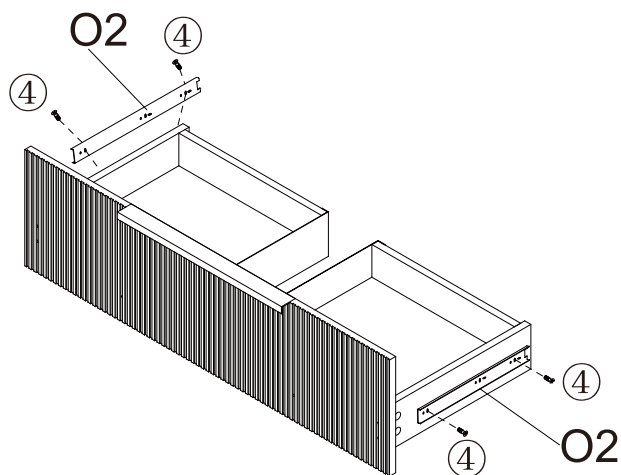


Step 29




All four slides need to be installed

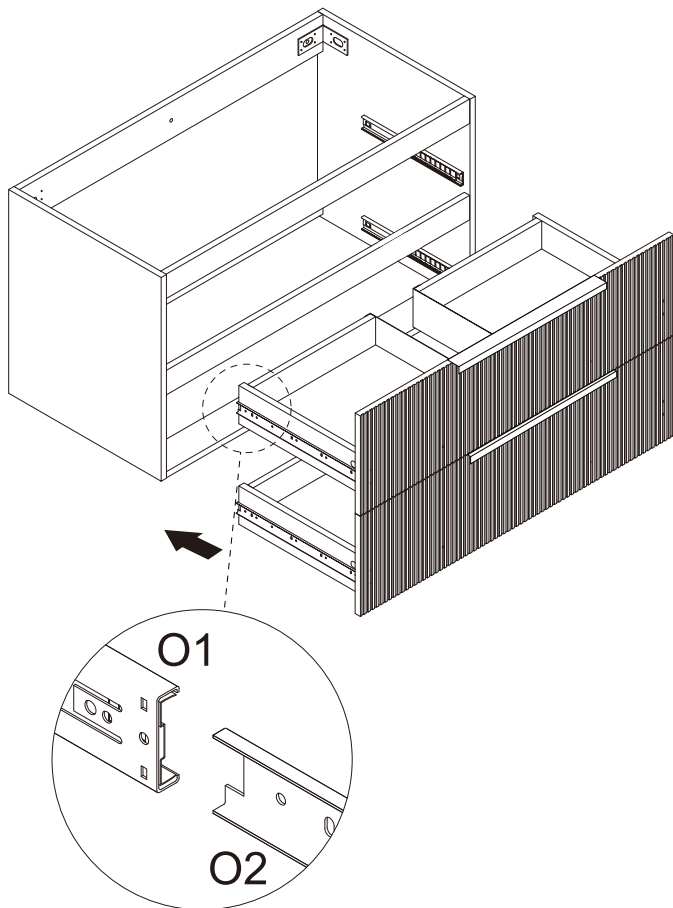

Step 30

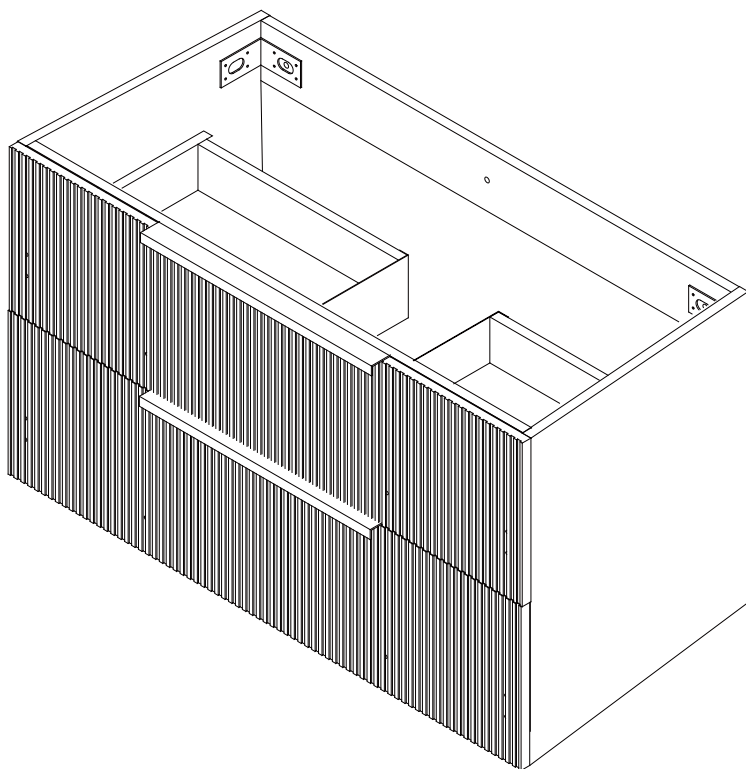

⑤




2pcs

⑥




2pcs


Step 31

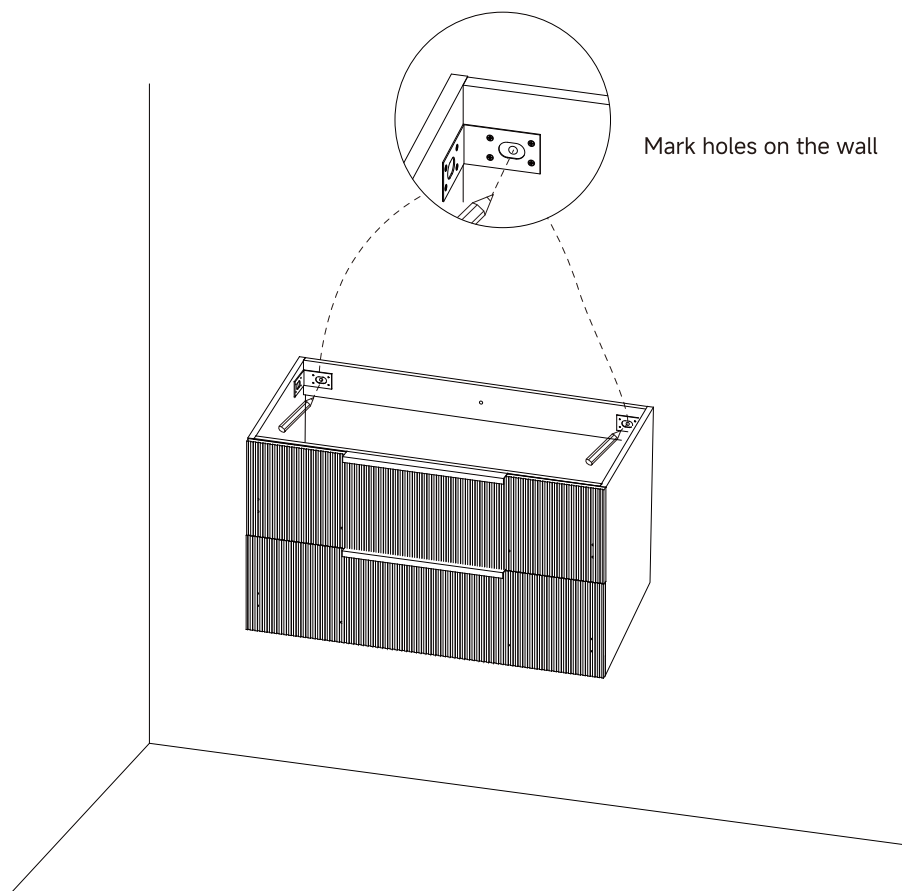


Step 32

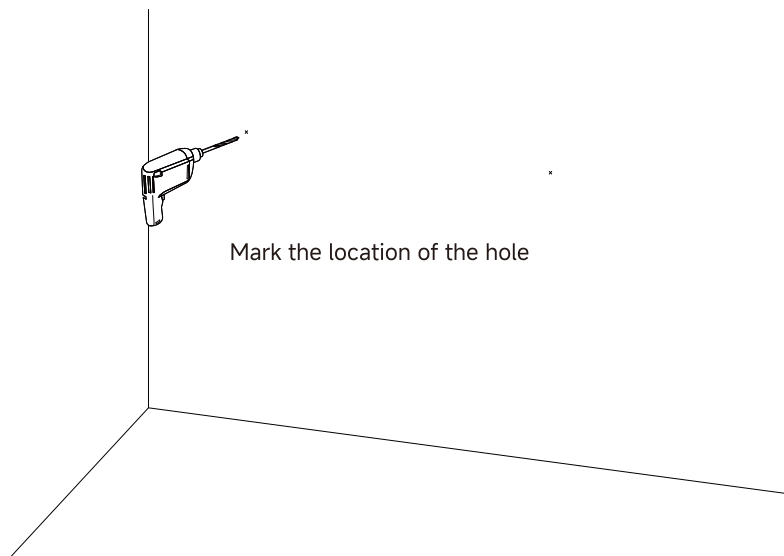

Step33

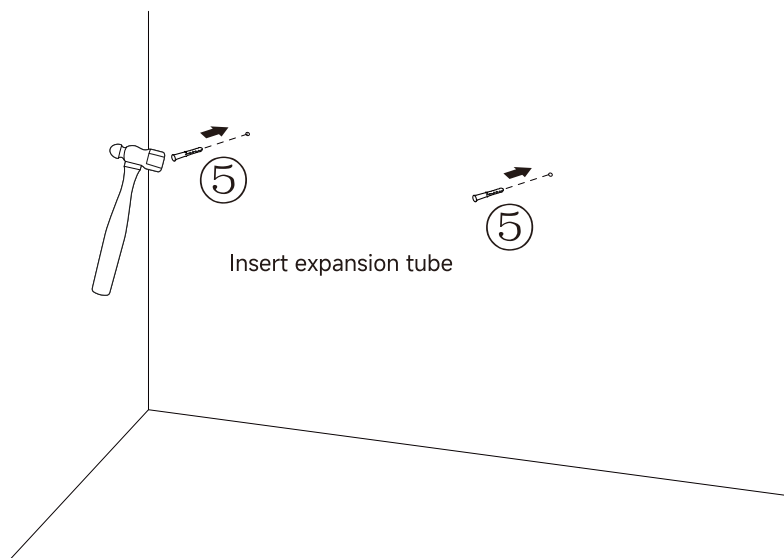

Step 34

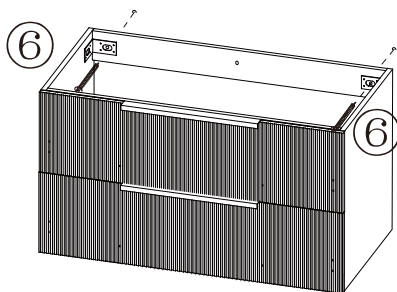

Step 35

Completed

