

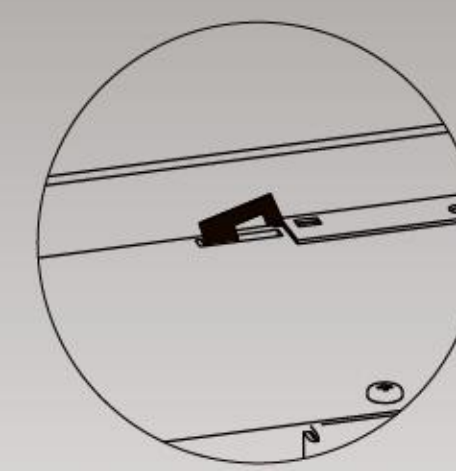



Wall Mounted Installation

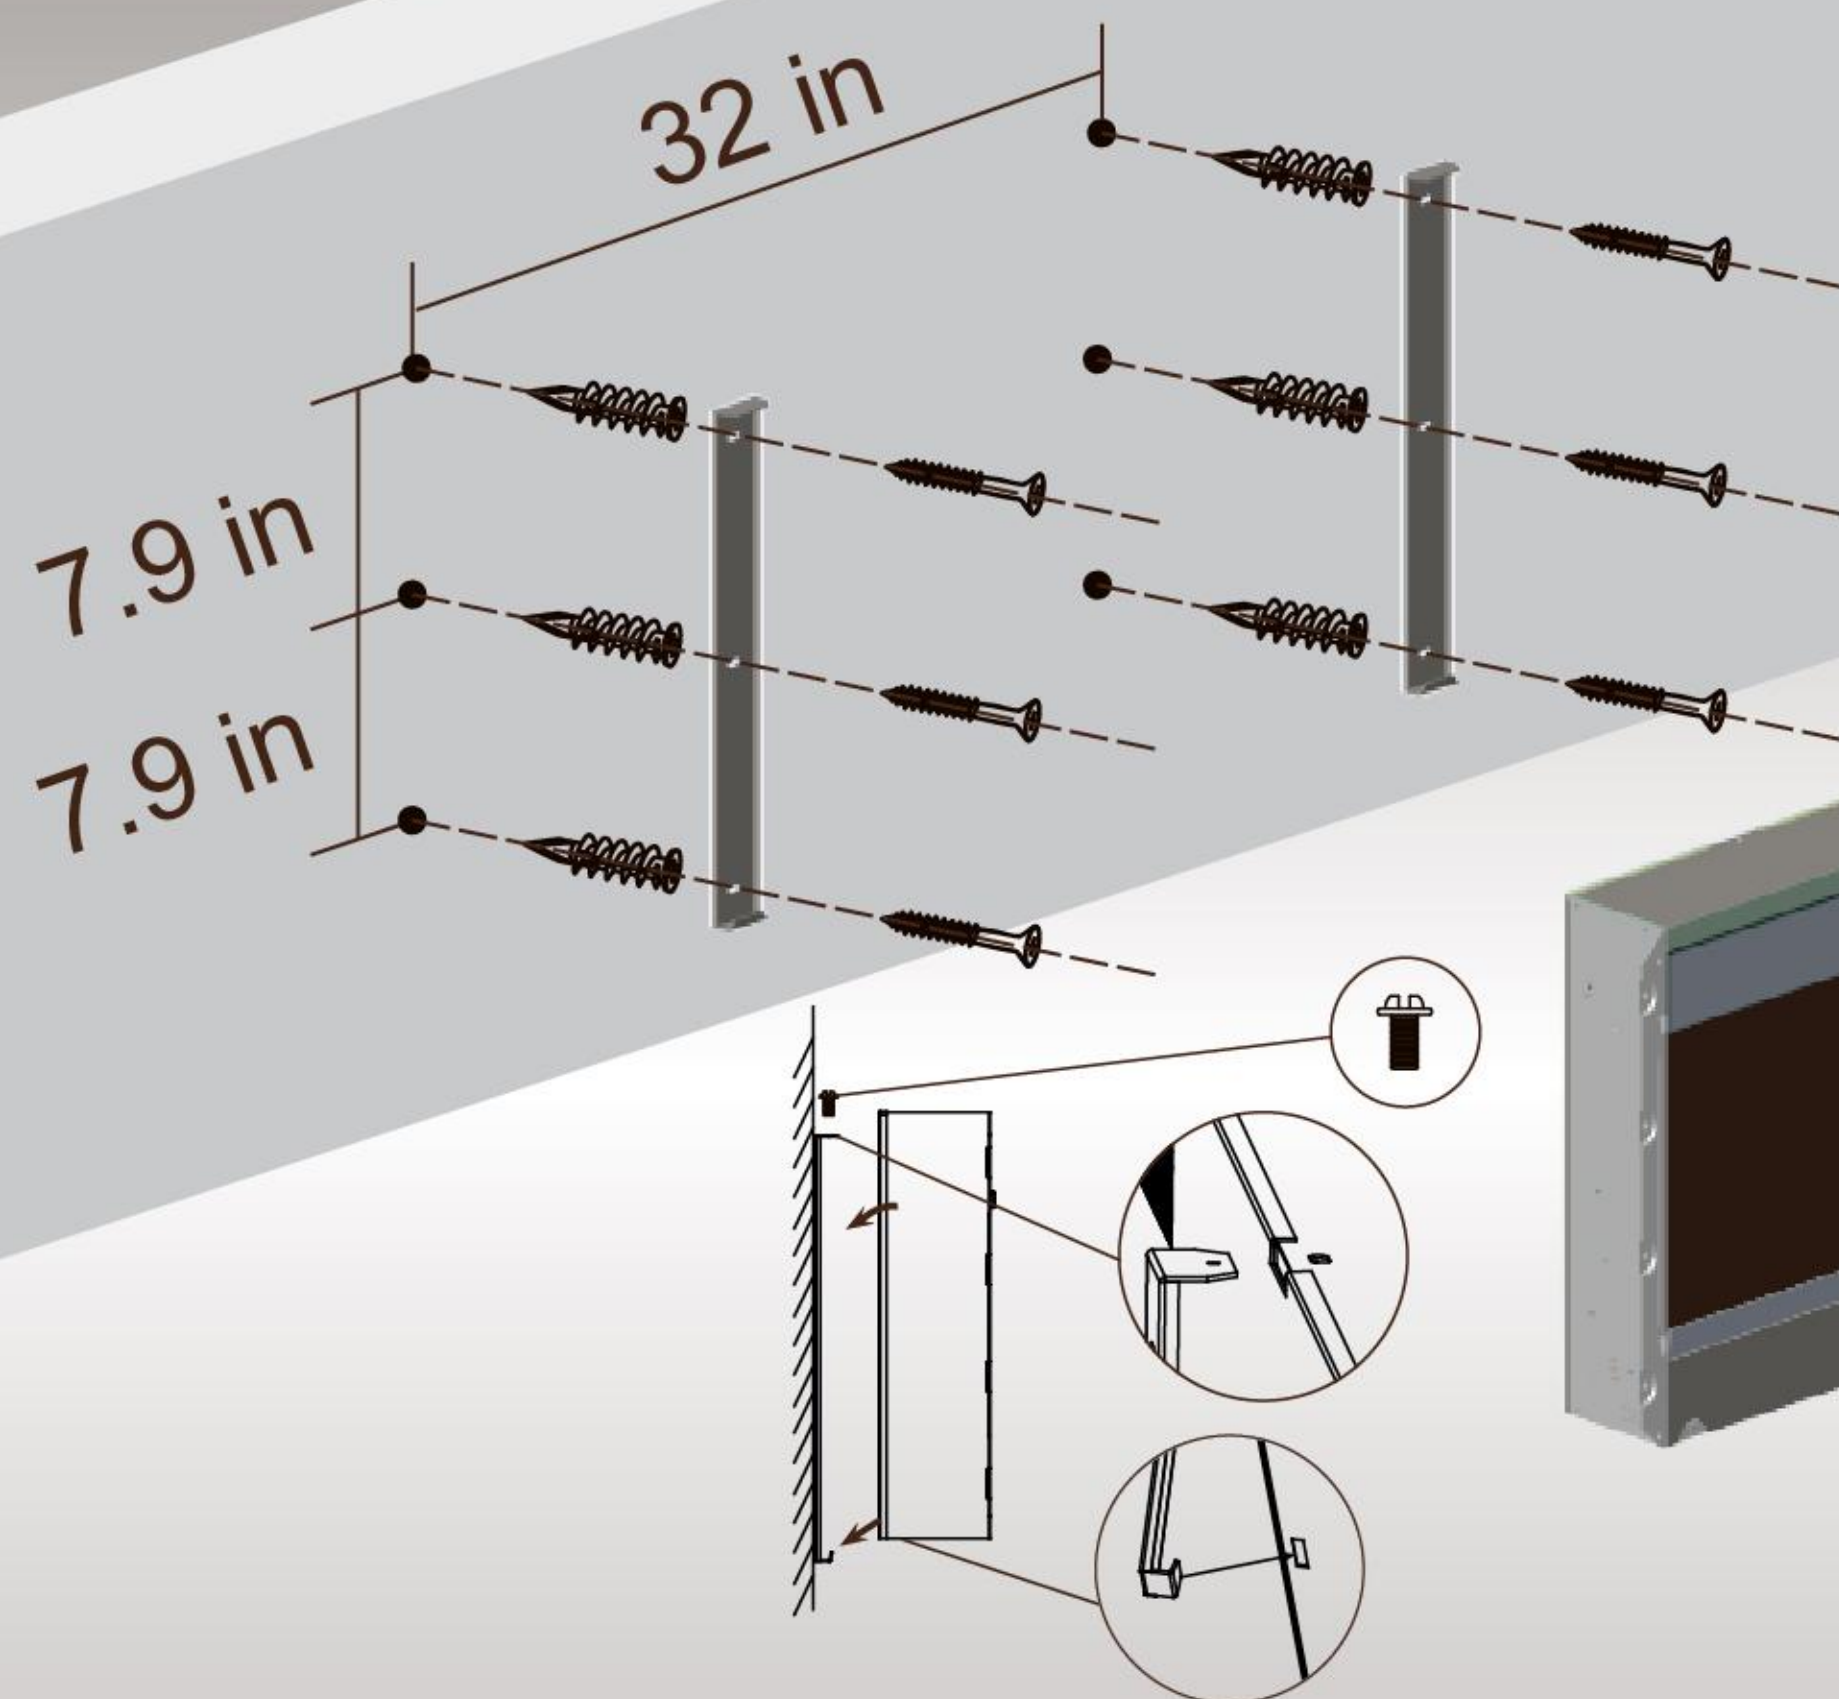





Unlocked

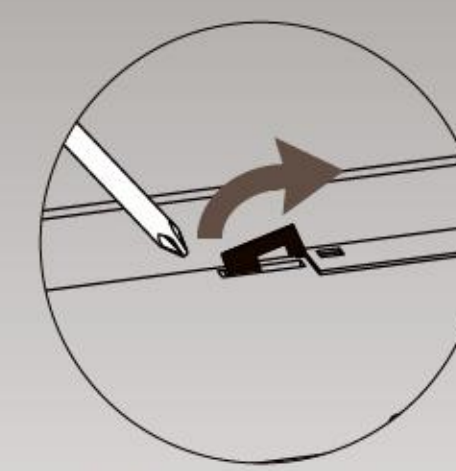

Move to lock

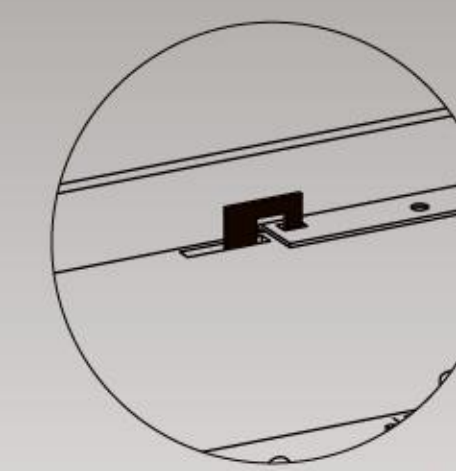



Locked

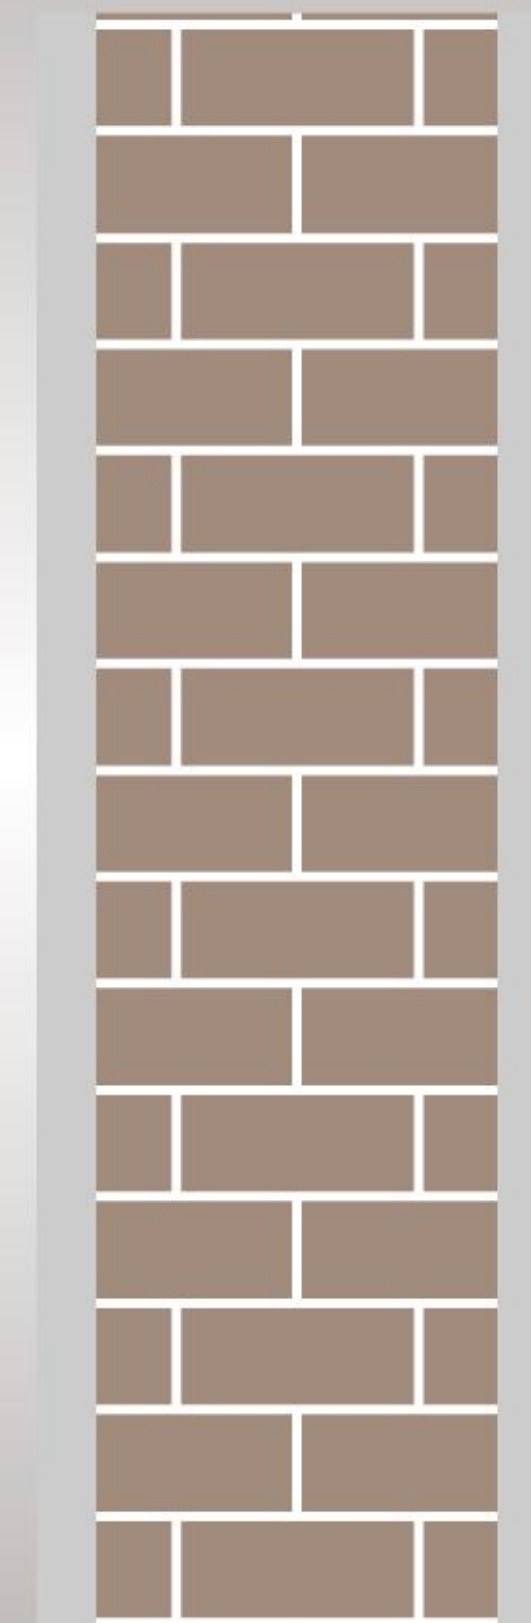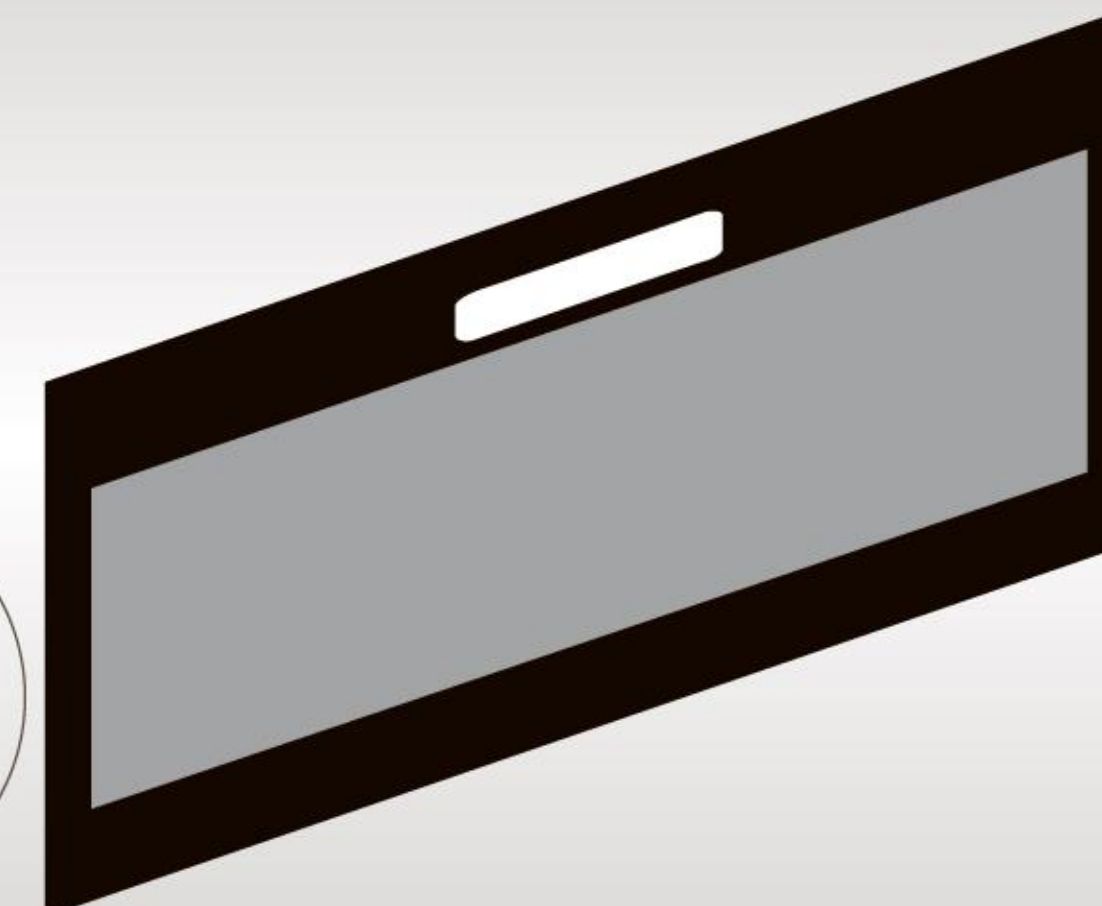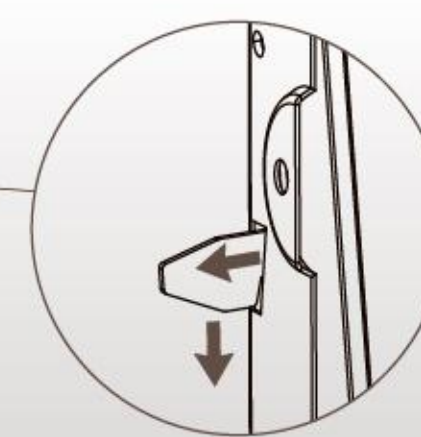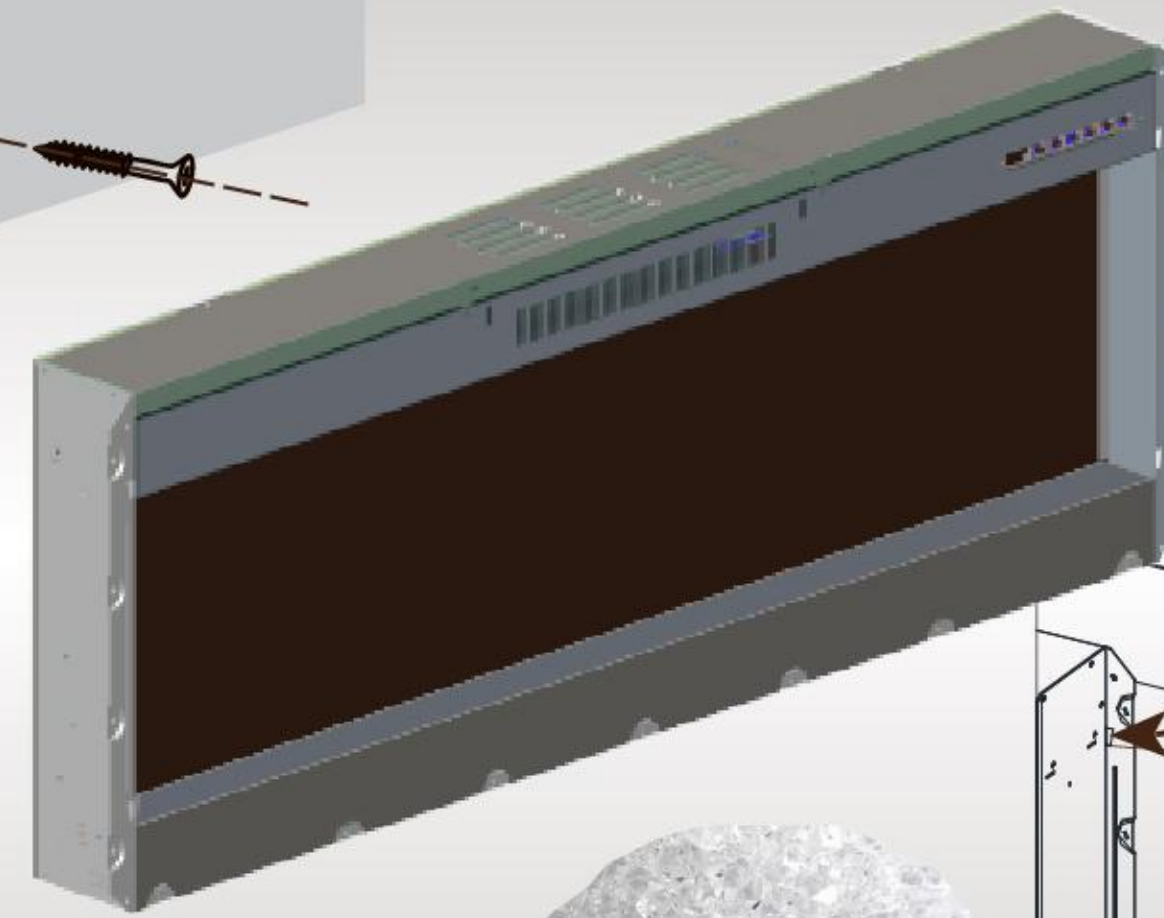


1. Remove the mounting bracket from the fireplace and attach it to the wall.
2. Hang the fireplace on the mounting bracket.
3. Place crystals inside the fireplace.
4. Put the glass front panel on the fireplace and locked it.

Recessed Installation


1. Remove the mounting bracket from the fireplace.
2. Push the fireplace into the cabinet and secure it.
3. Place crystals inside the fireplace.
4. Put the glass front panel on the fireplace and locked it.

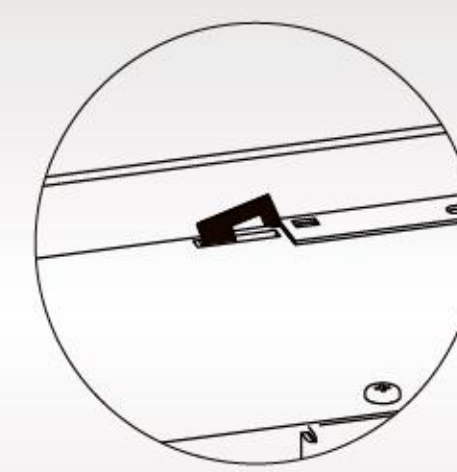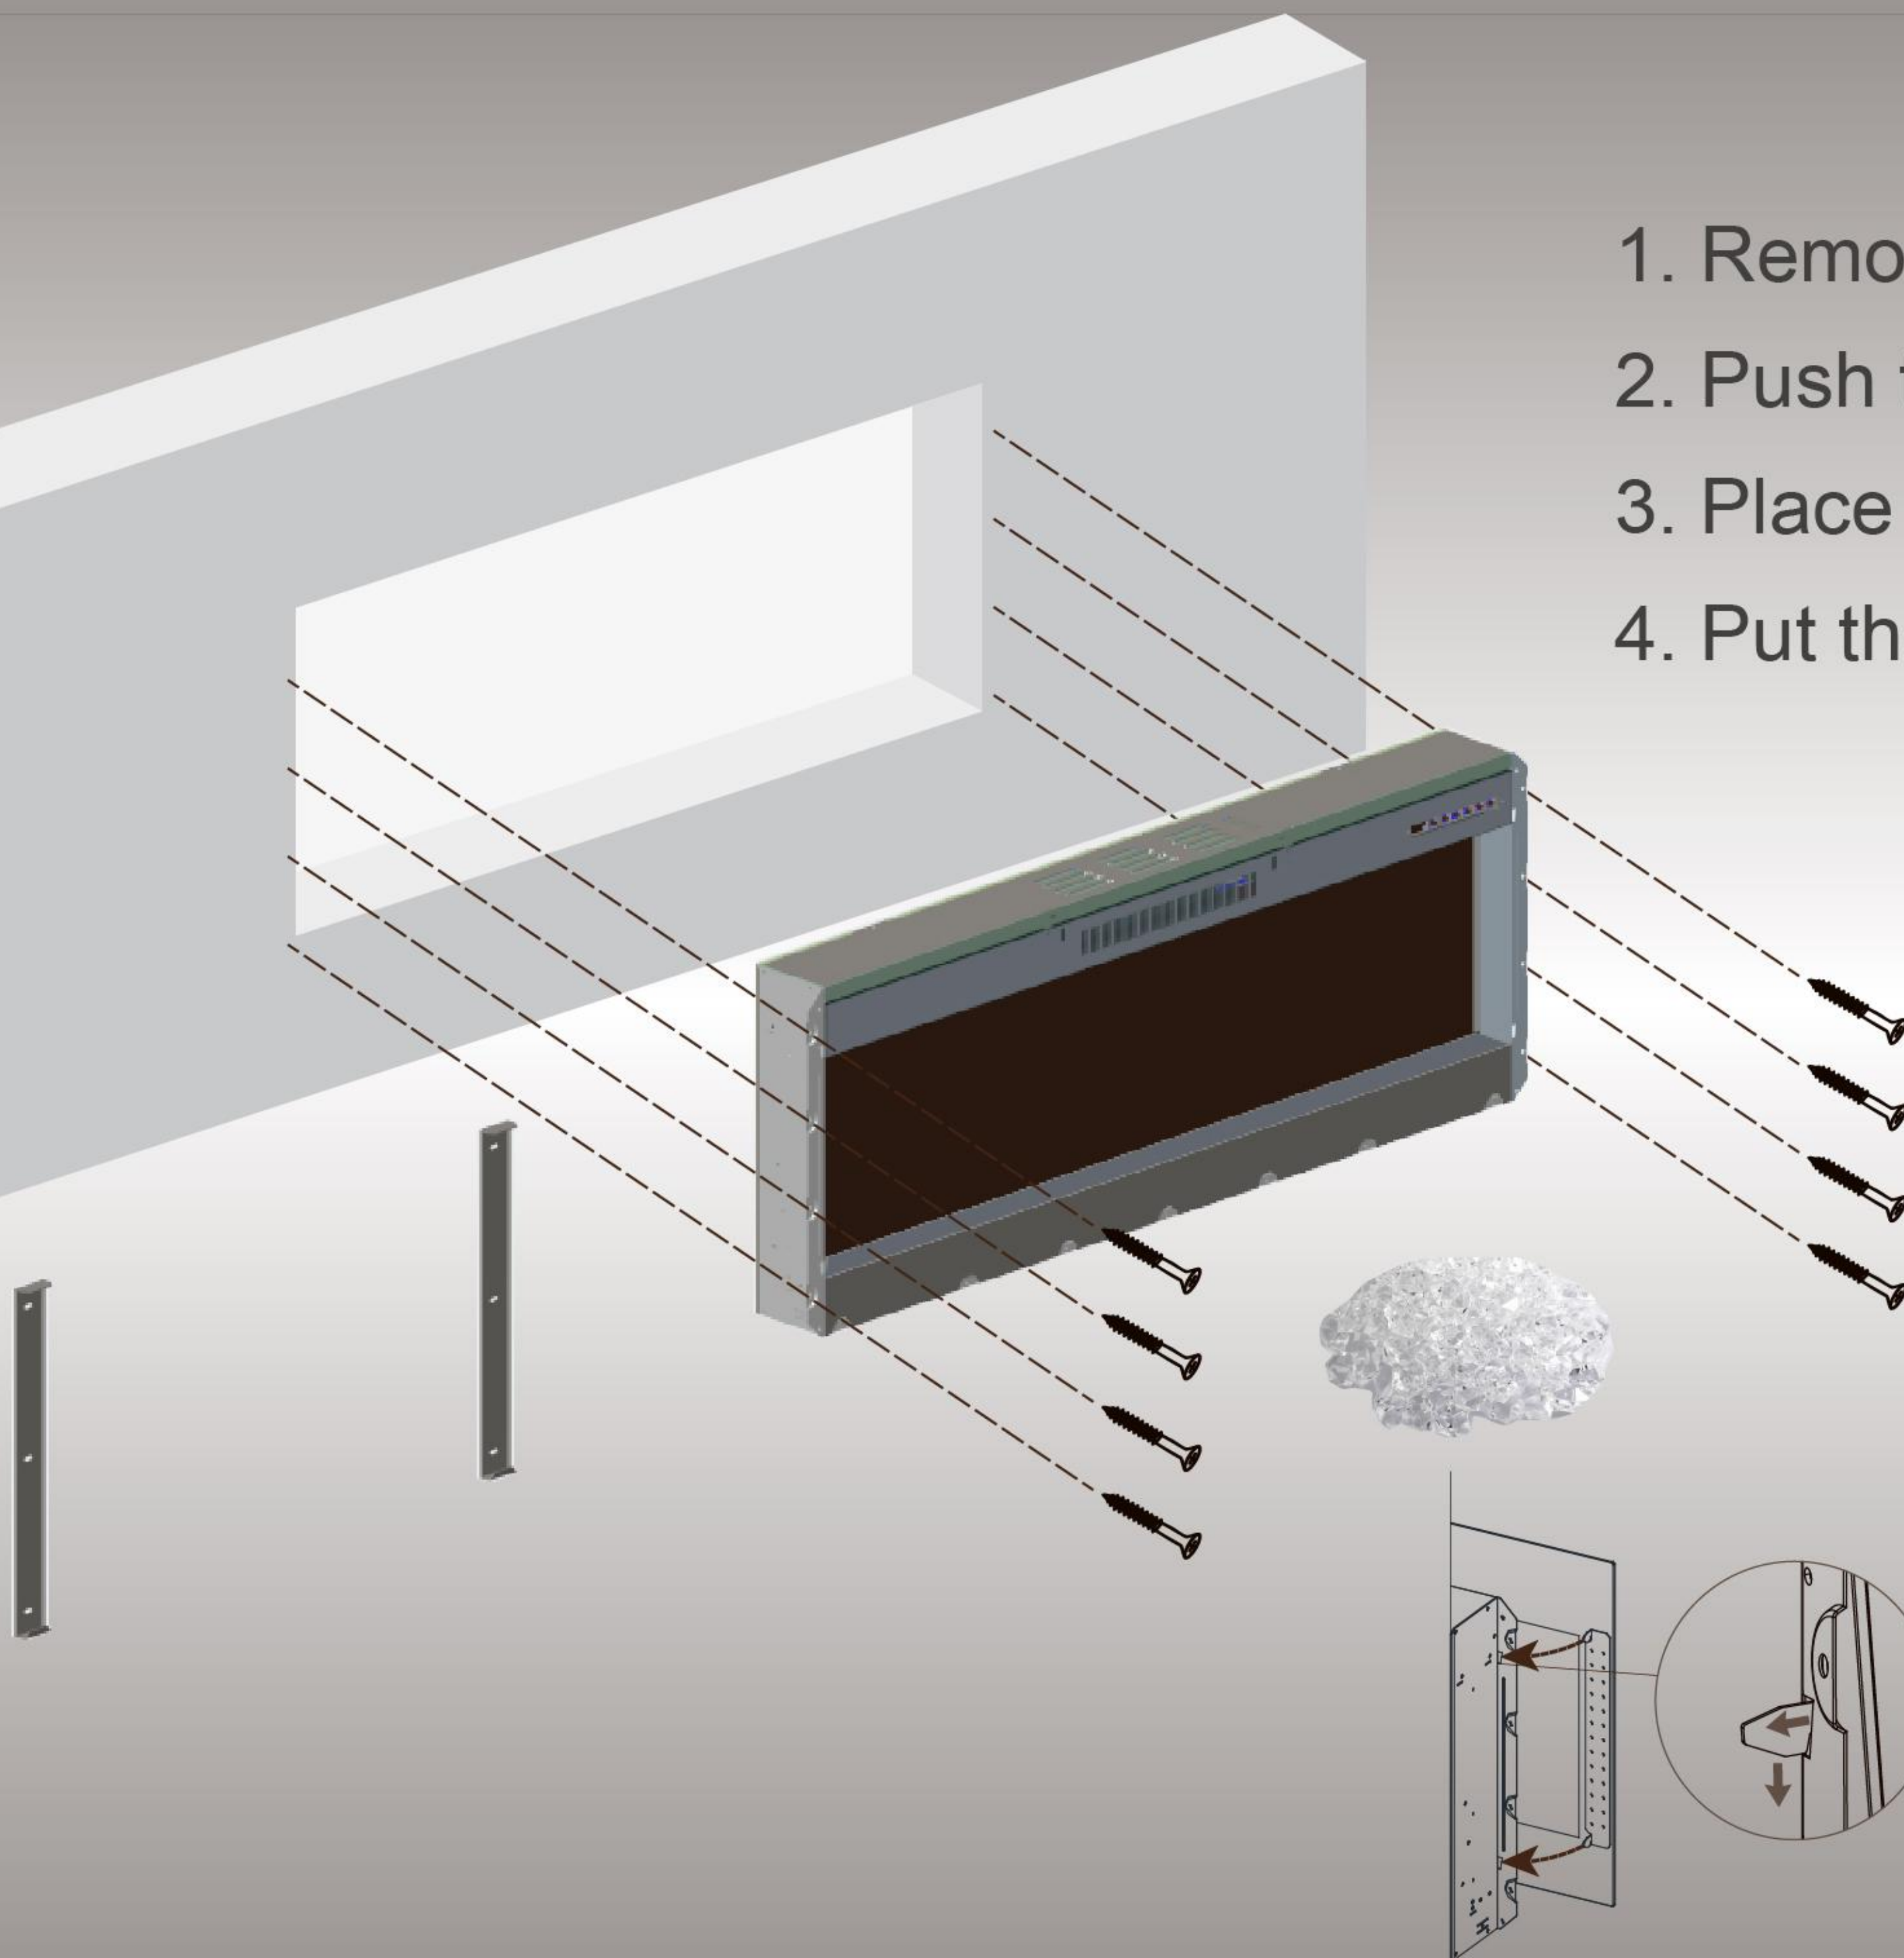

Unlocked

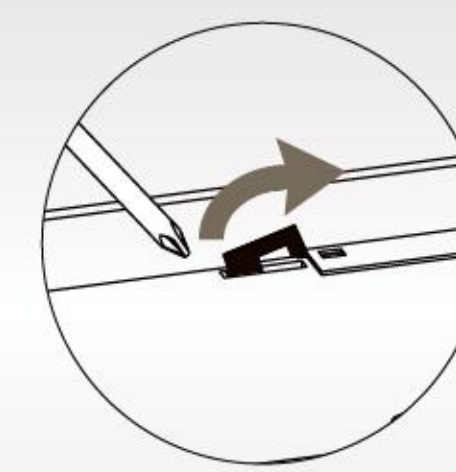

Move to lock

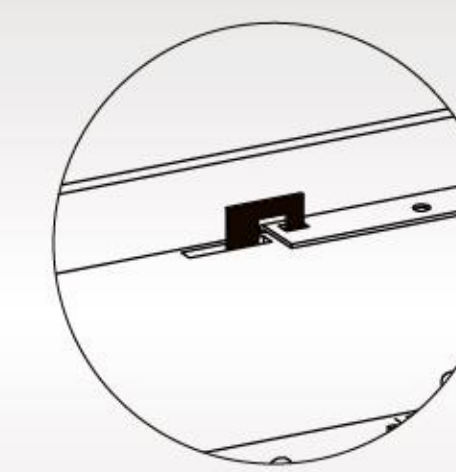

Locked

