


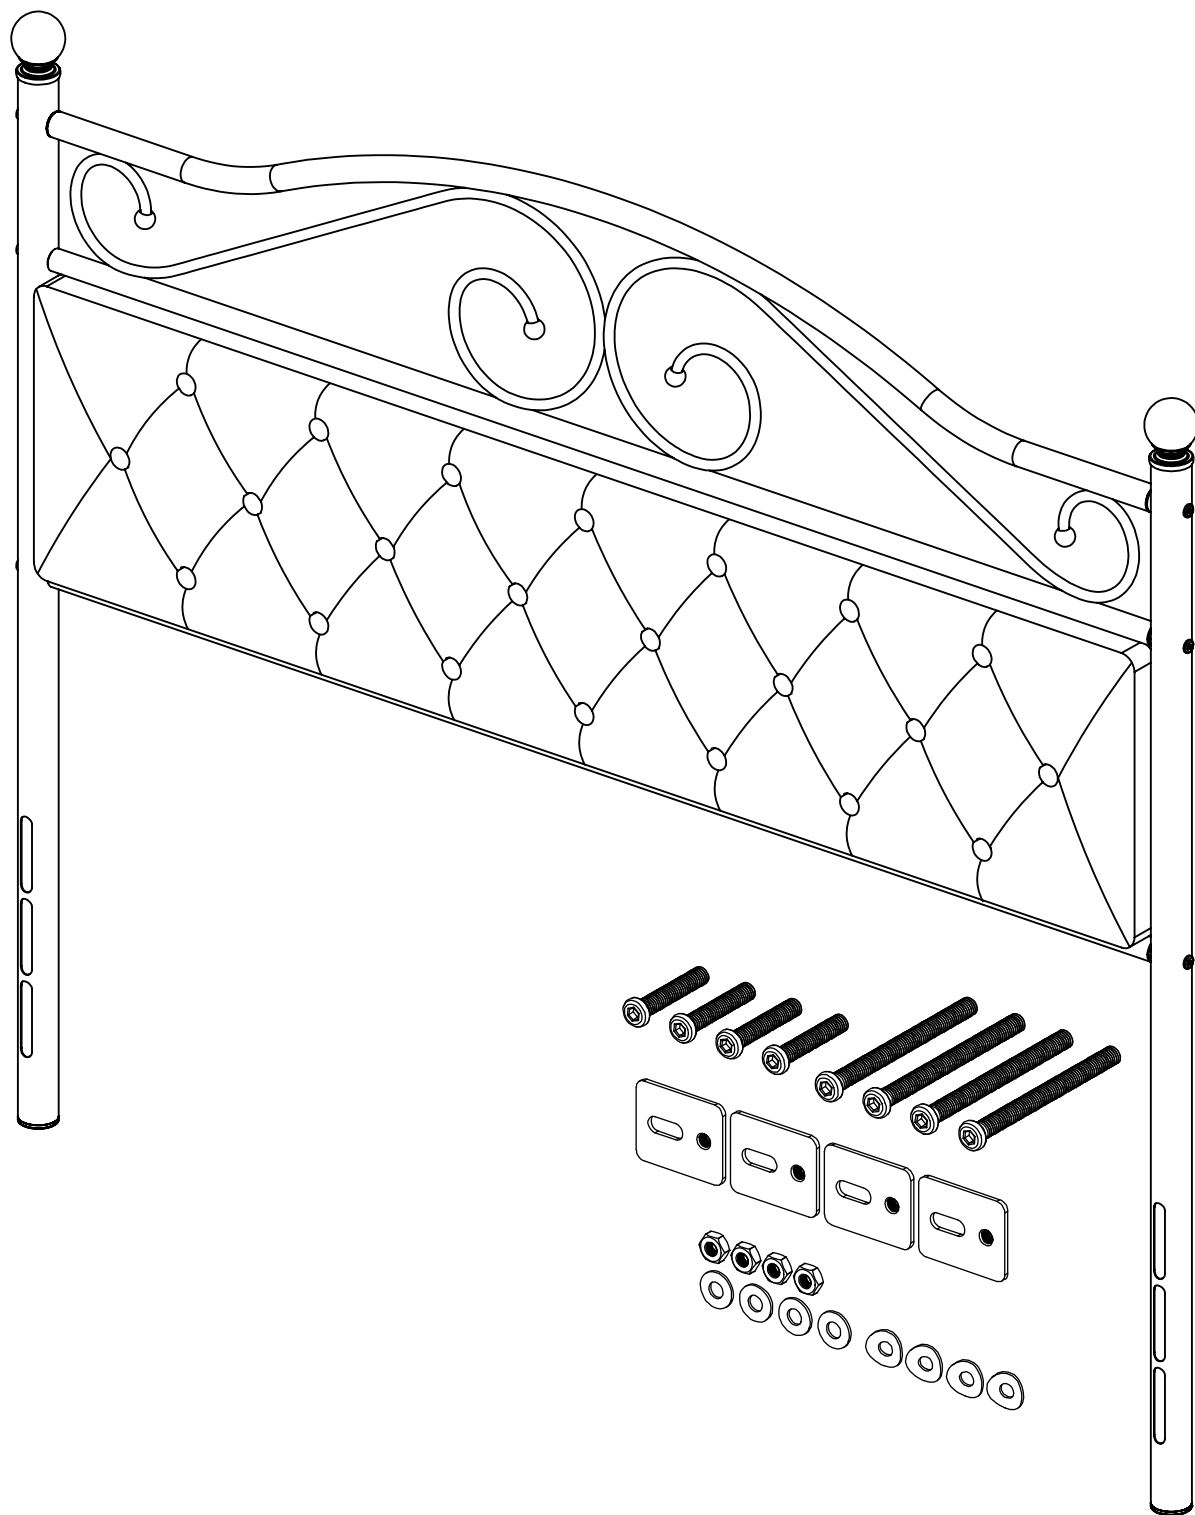
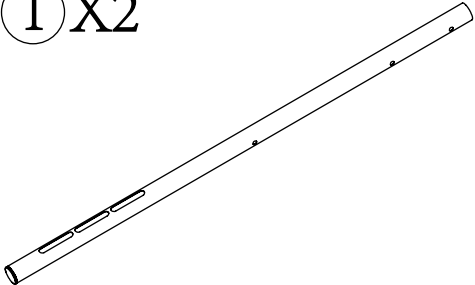
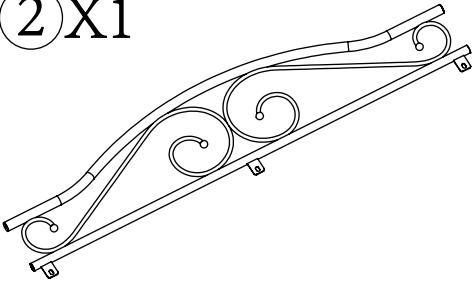
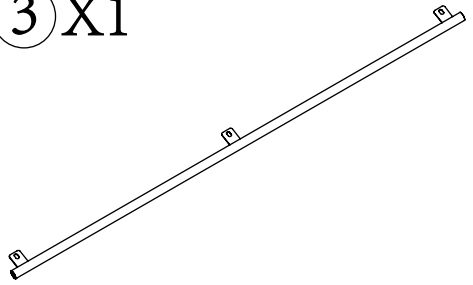


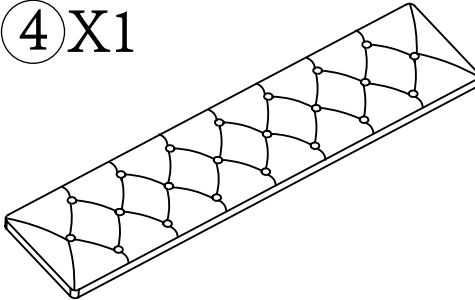





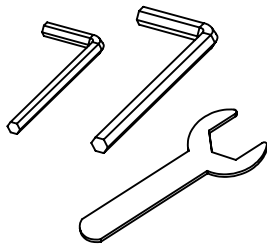









MSIPU Headboard Assembly Instruction

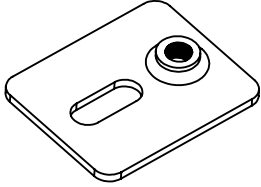

① X2 	② X1 	③ X1 
④ X1 	⑤ X2 	⑩ X4 


<div>Ⓐ X4</div> <div></div> <div>M8X95</div>	<div>Ⓑ X4</div> <div></div> <div>M8X45</div>	<div>Ⓒ X6</div> <div></div> <div>M6X60</div>	<div>Ⓓ X6</div> <div></div> <div>M6X15</div>	
<div>Ⓔ X4</div> <div></div> <div>M8</div>	<div>Ⓕ X6</div> <div></div> <div>M6</div>	<div>Ⓖ X4</div> <div></div> <div>M8</div>	<div>Ⓗ X4</div> <div></div>	<div></div>

Difference screws display(1:1)


A  M8X95	B  M8X45	C  M6X60	D  M6X15	E  M8	F  M6	G  M8
---	---	---	---	---	--	--

M6:Screw outer diameter 6mm
M8:Screw outer diameter 8mm

Step 1

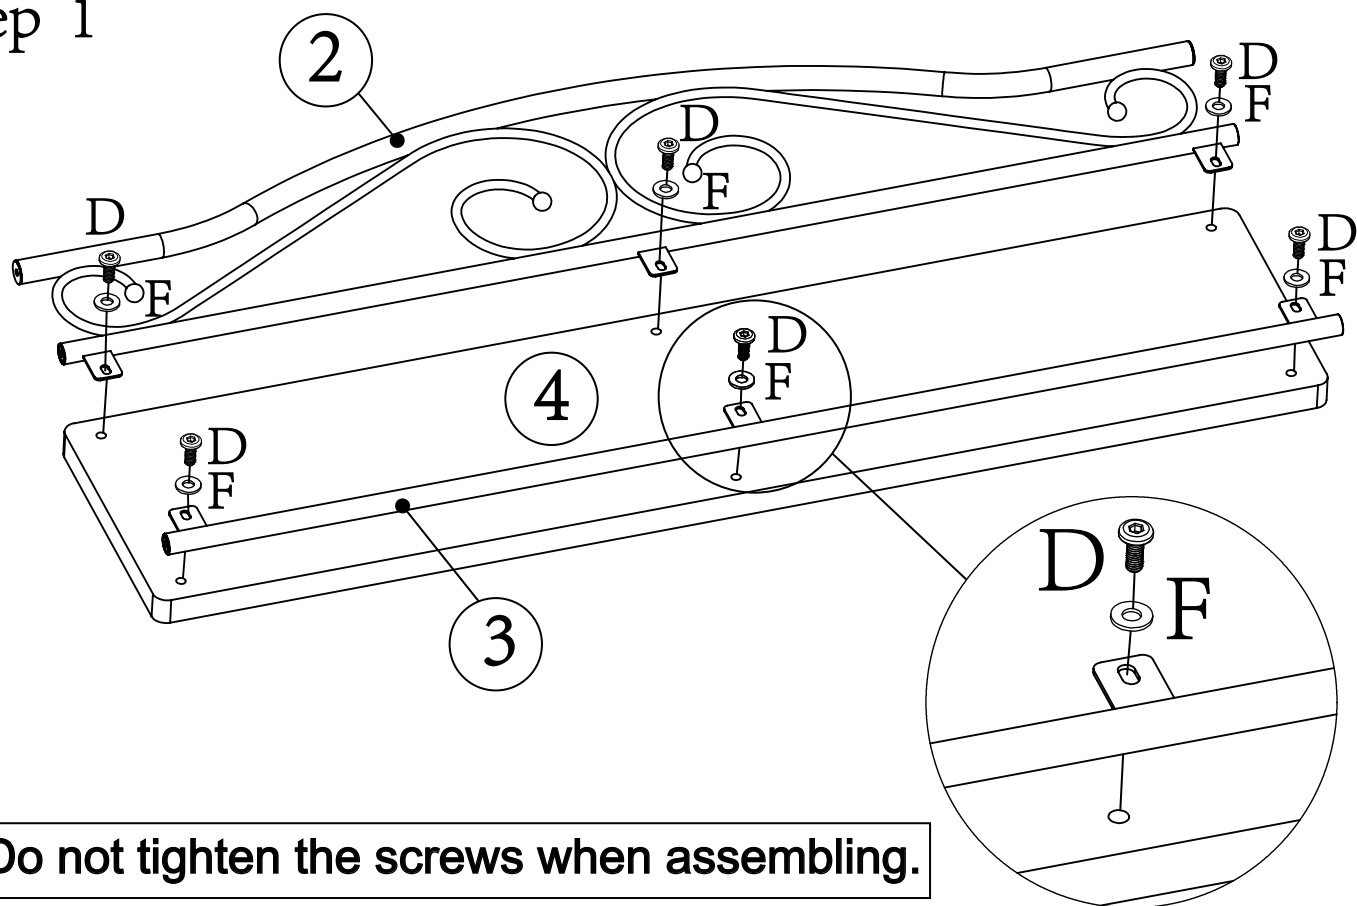


Step 2

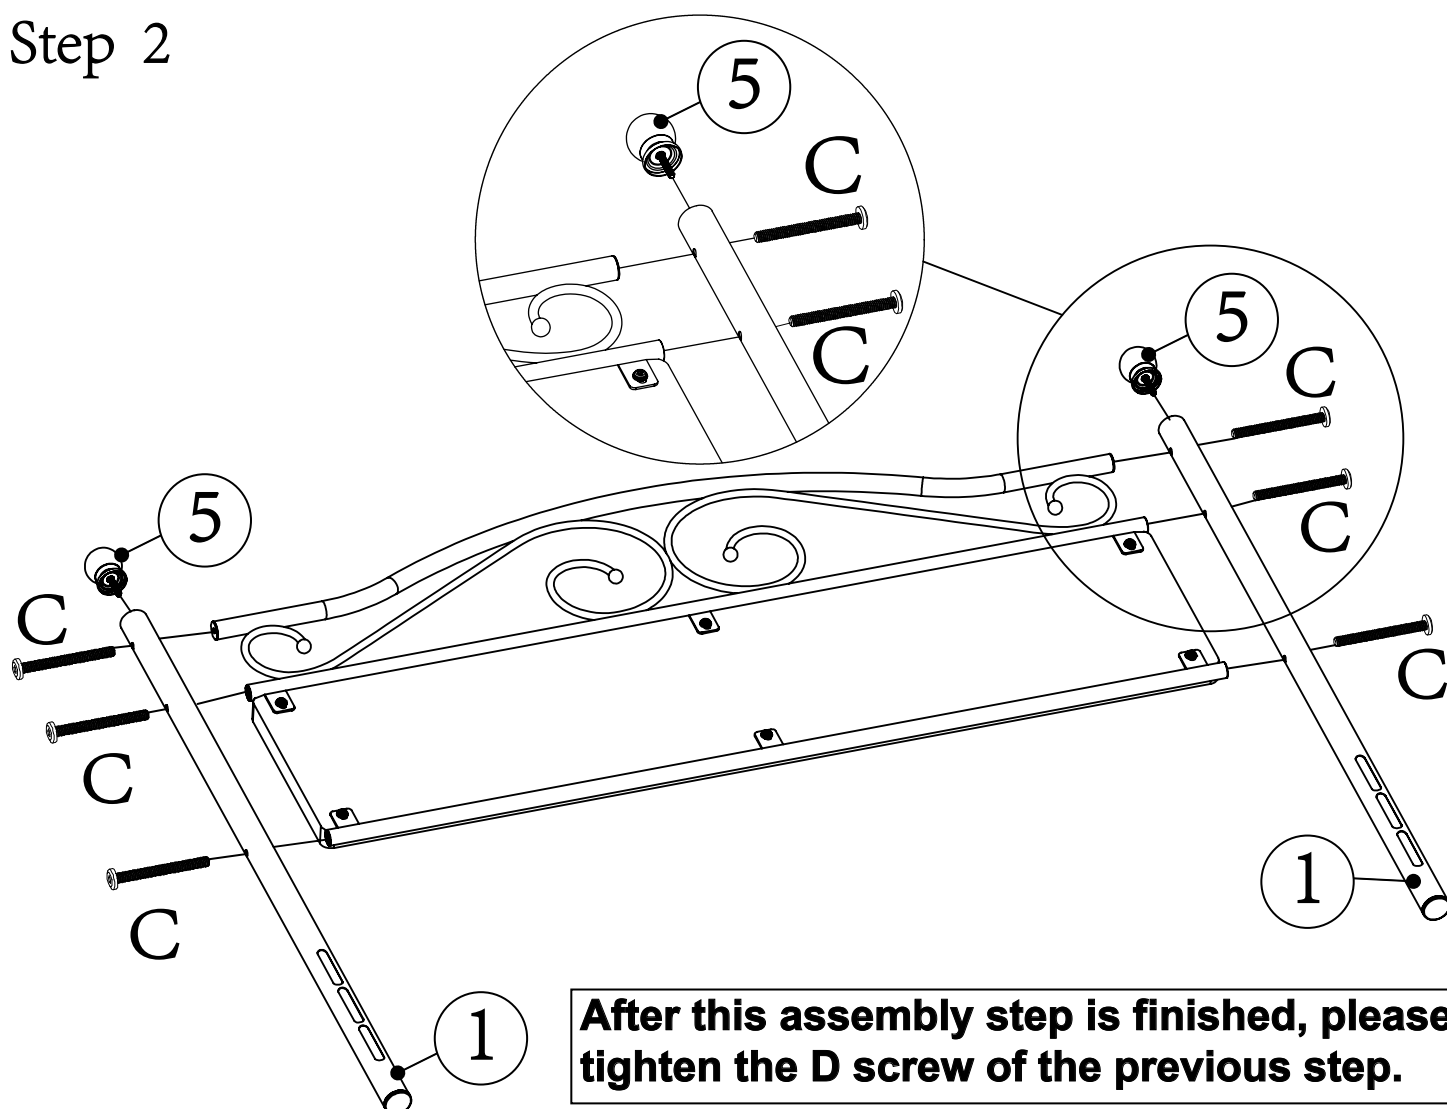

Step 3

Select the fitting assembly scheme in accordance with the requirement.

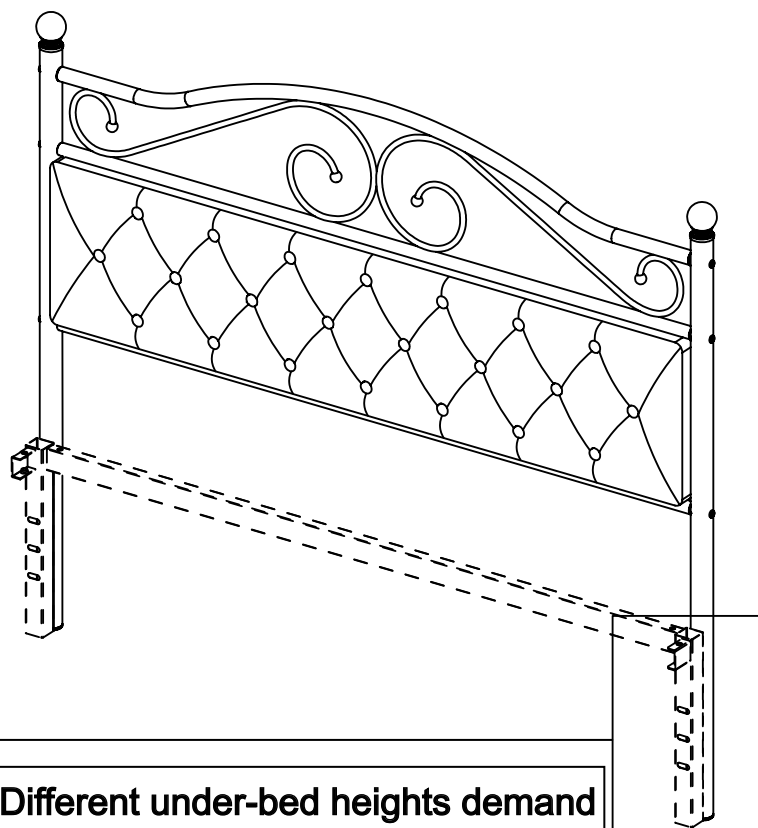

★:When assembling Part 10, please pay attention to the direction. The direction to the left or right is adjustable.

Different under-bed heights demand different heights in assembly.

