


USER'S MANUAL

Product Name: **Outdoor Adirondack Chair Set**

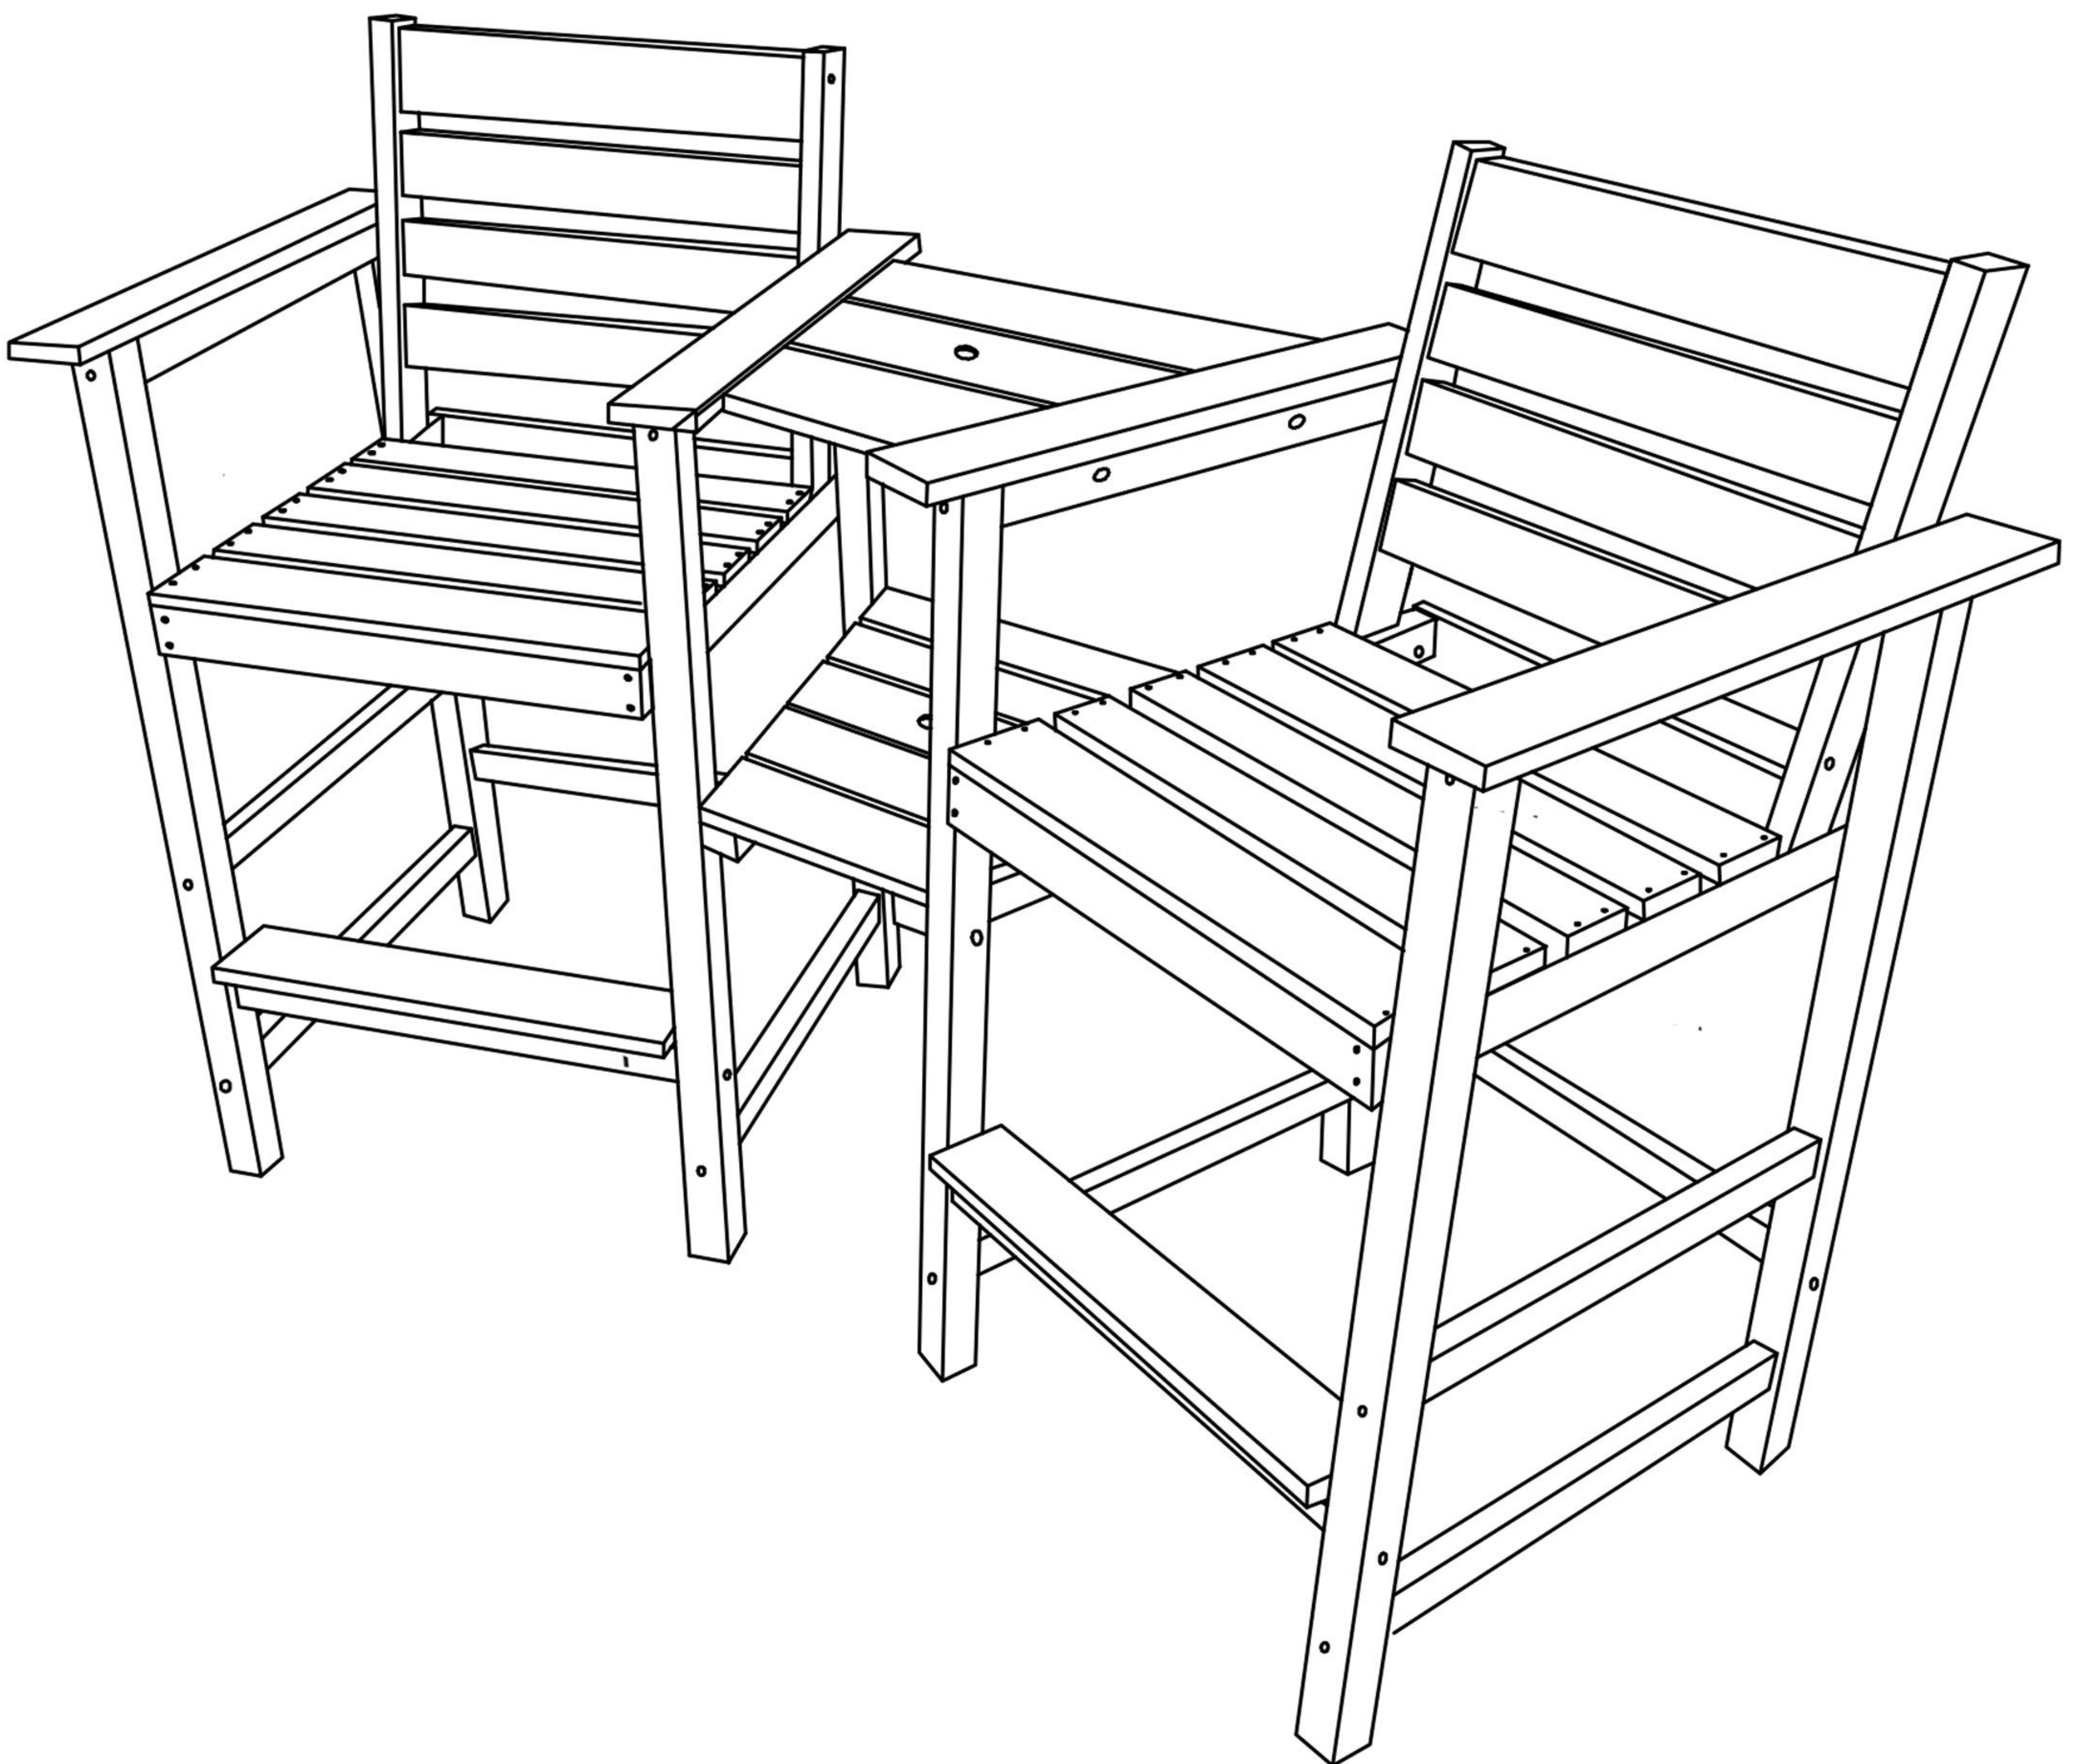

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT SAFETY INFORMATION**.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Contact Us


If you have any problem, please give us a chance to make it right for you!



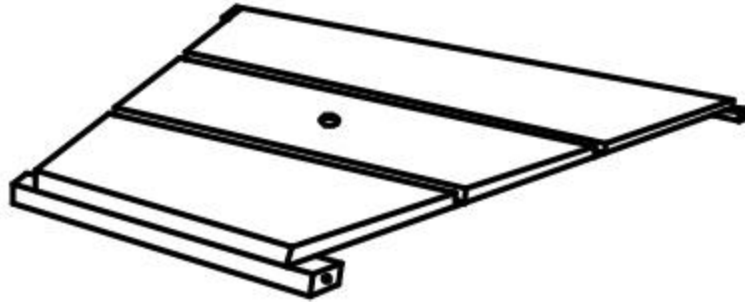
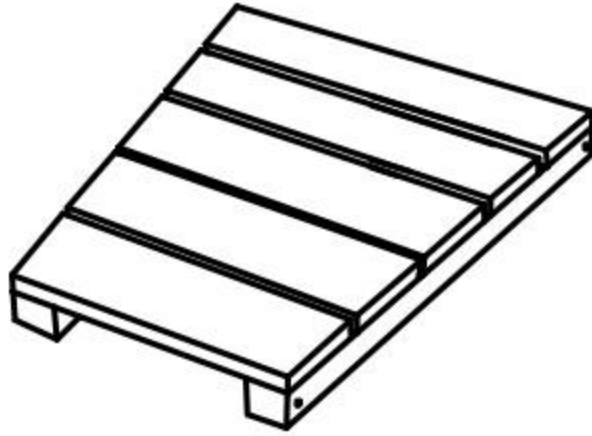
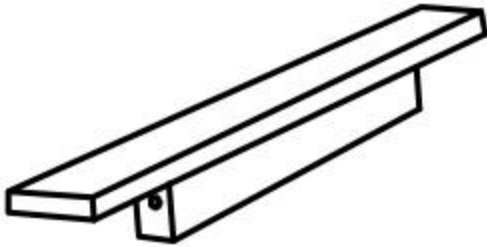
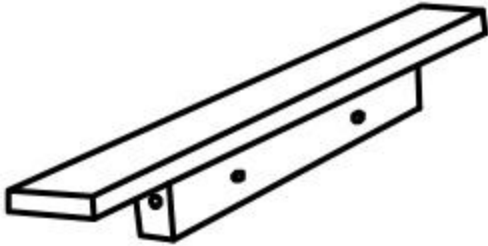



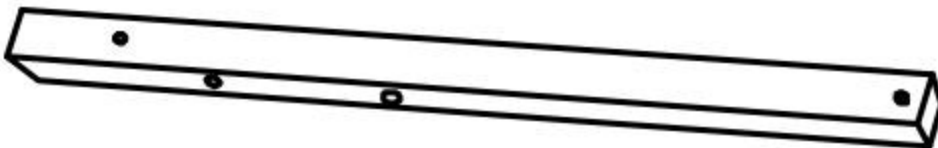
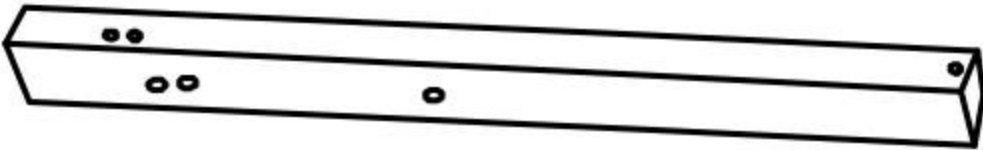
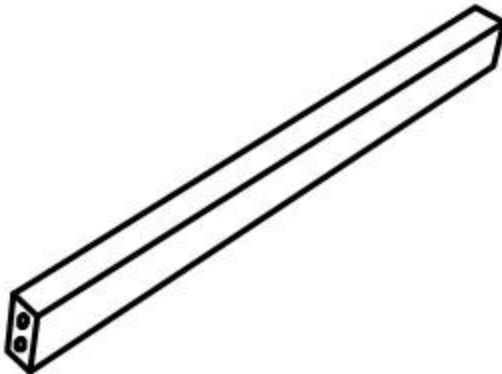





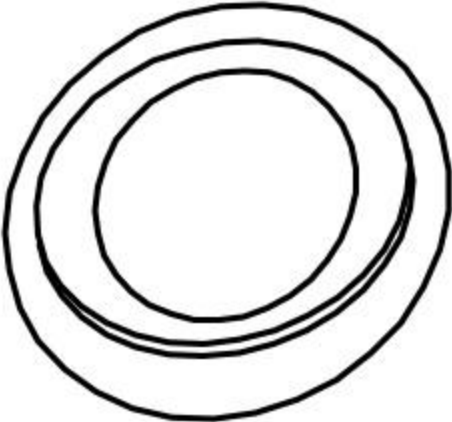
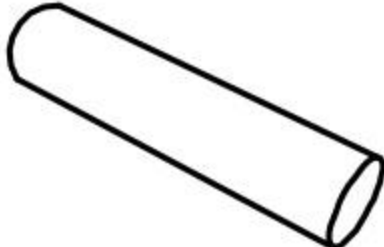
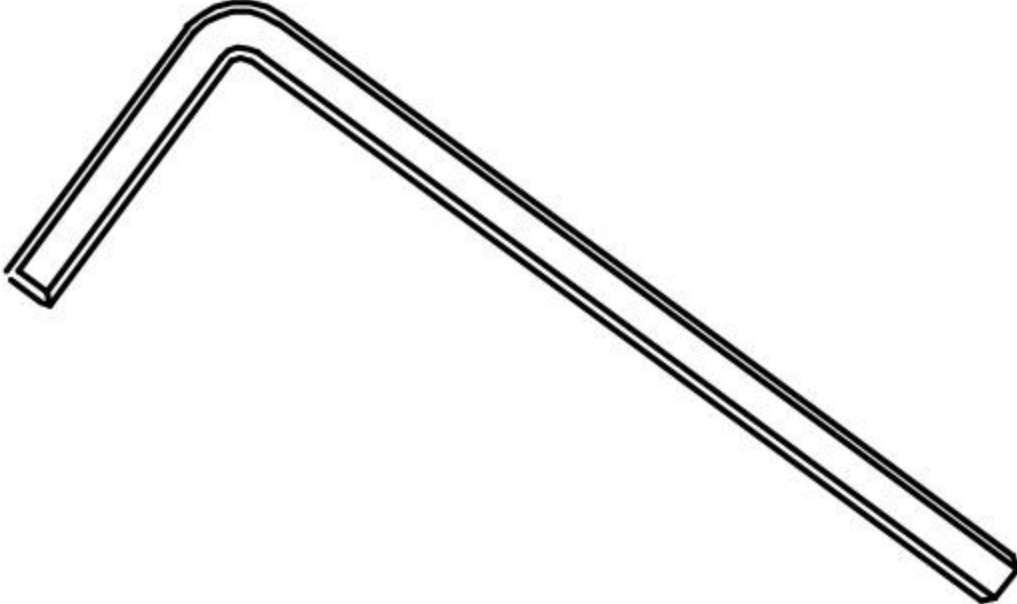
Contact our friendly customer service department for help first. Replacements for missing or damaged parts will be shipped ASAP!

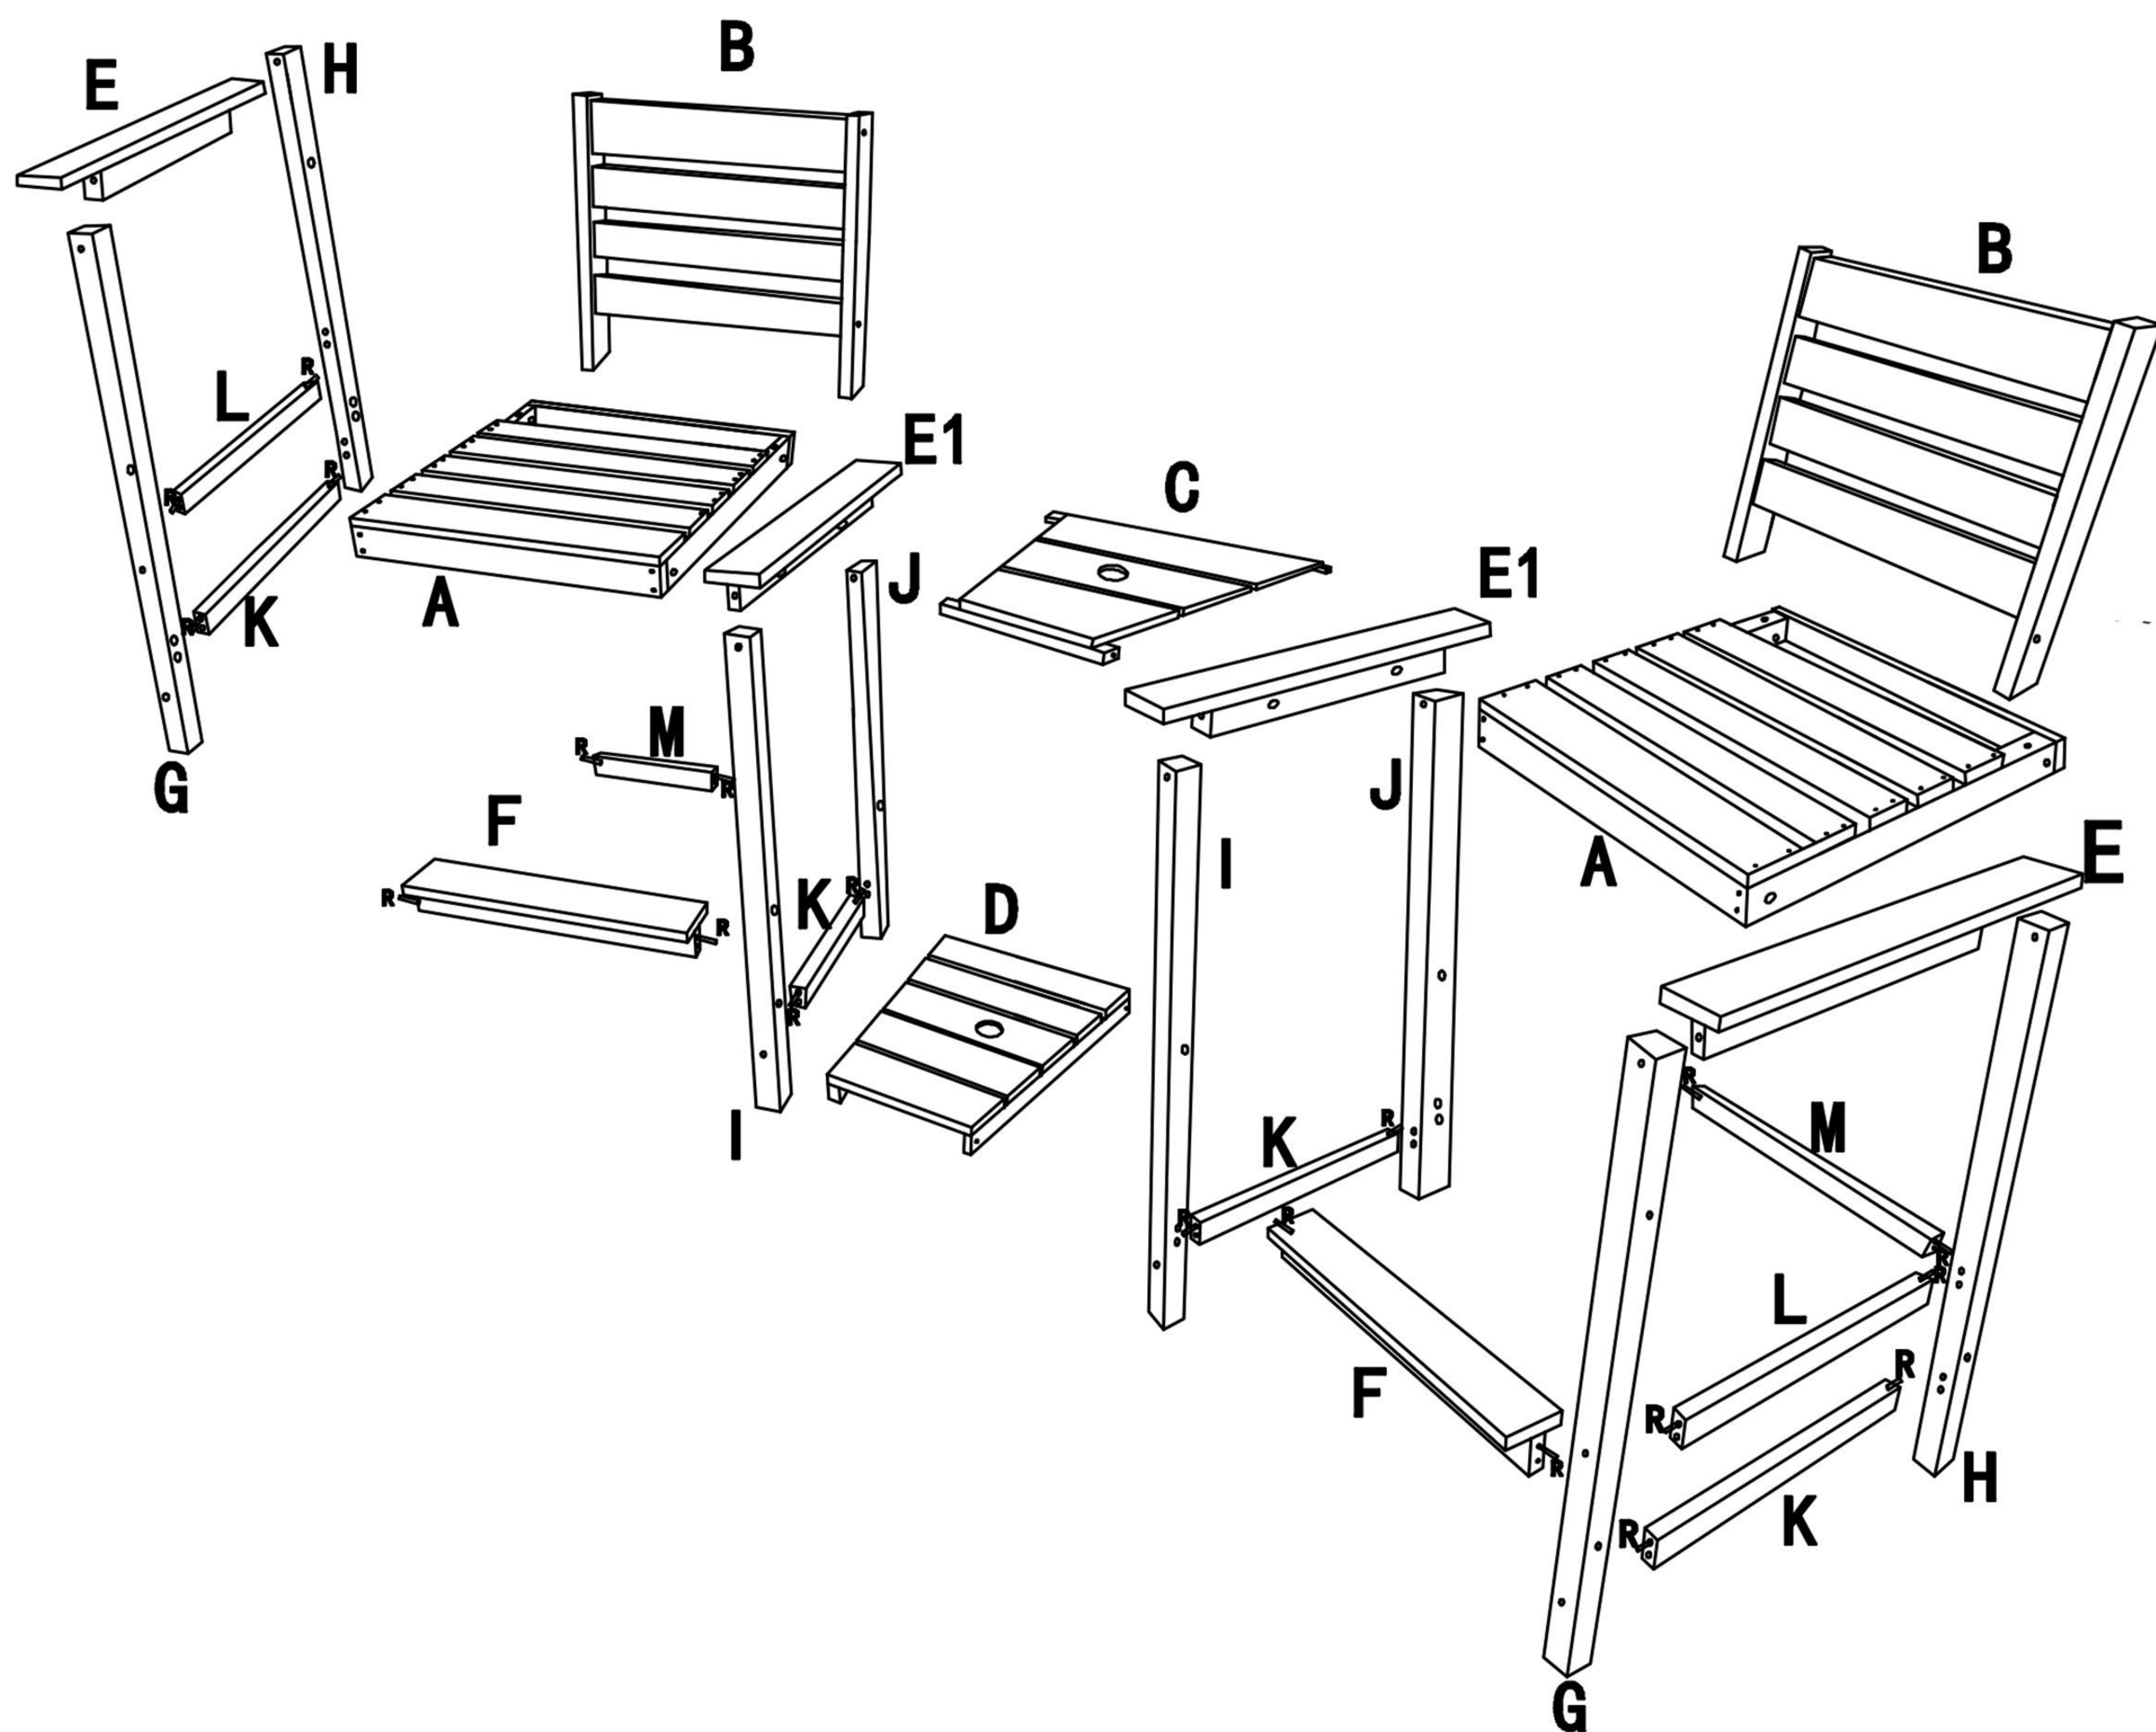Before You Start

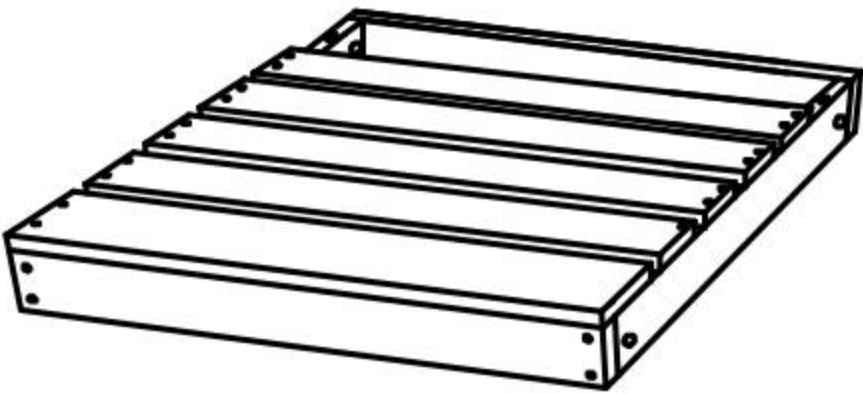- Please read all instructions carefully.
- Retain instructions for future reference.
- Separate and count all parts and hardware.
- Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- Keep all small parts and packaging materials for this product away from babies and children.

KNOW YOUR PARTS





<div>A</div> <div></div> <div>A=2</div>	<div>B</div> <div></div> <div>B=2</div>	<div>C</div> <div></div> <div>C=1</div>	<div>D</div> <div></div> <div>D=1</div>
<div>E</div> <div></div> <div>E=2</div>	<div>E1</div> <div></div> <div>E1=2</div>	<div>F</div> <div></div> <div>F=2</div>	<div>G</div> <div></div> <div>G=2</div>
<div>H</div> <div></div> <div>H=2</div>	<div>I</div> <div></div> <div>I=2</div>	<div>J</div> <div></div> <div>J=2</div>	<div>K</div> <div></div> <div>K=4</div>
<div>L</div> <div></div> <div>L=2</div>	<div>M</div> <div></div> <div>M=2</div>	<div>N</div> <div></div> <div>M6*6028pc</div>	<div>O</div> <div></div> <div>M6*4516pc</div>
<div>P</div> <div></div> <div>M6*608pc</div>	<div>Q</div> <div></div> <div>Q=2</div>	<div>R</div> <div></div> <div>20pc</div>	<div>S</div> <div></div> <div>S=1</div>

Step 1:



Take out Part E x 2 , E1 x 2 and K x 4 , L x 2
Install them with Screw N x 20 and Part R x12

PS: Please Notice Part R is pre-installed on PartK & Part L

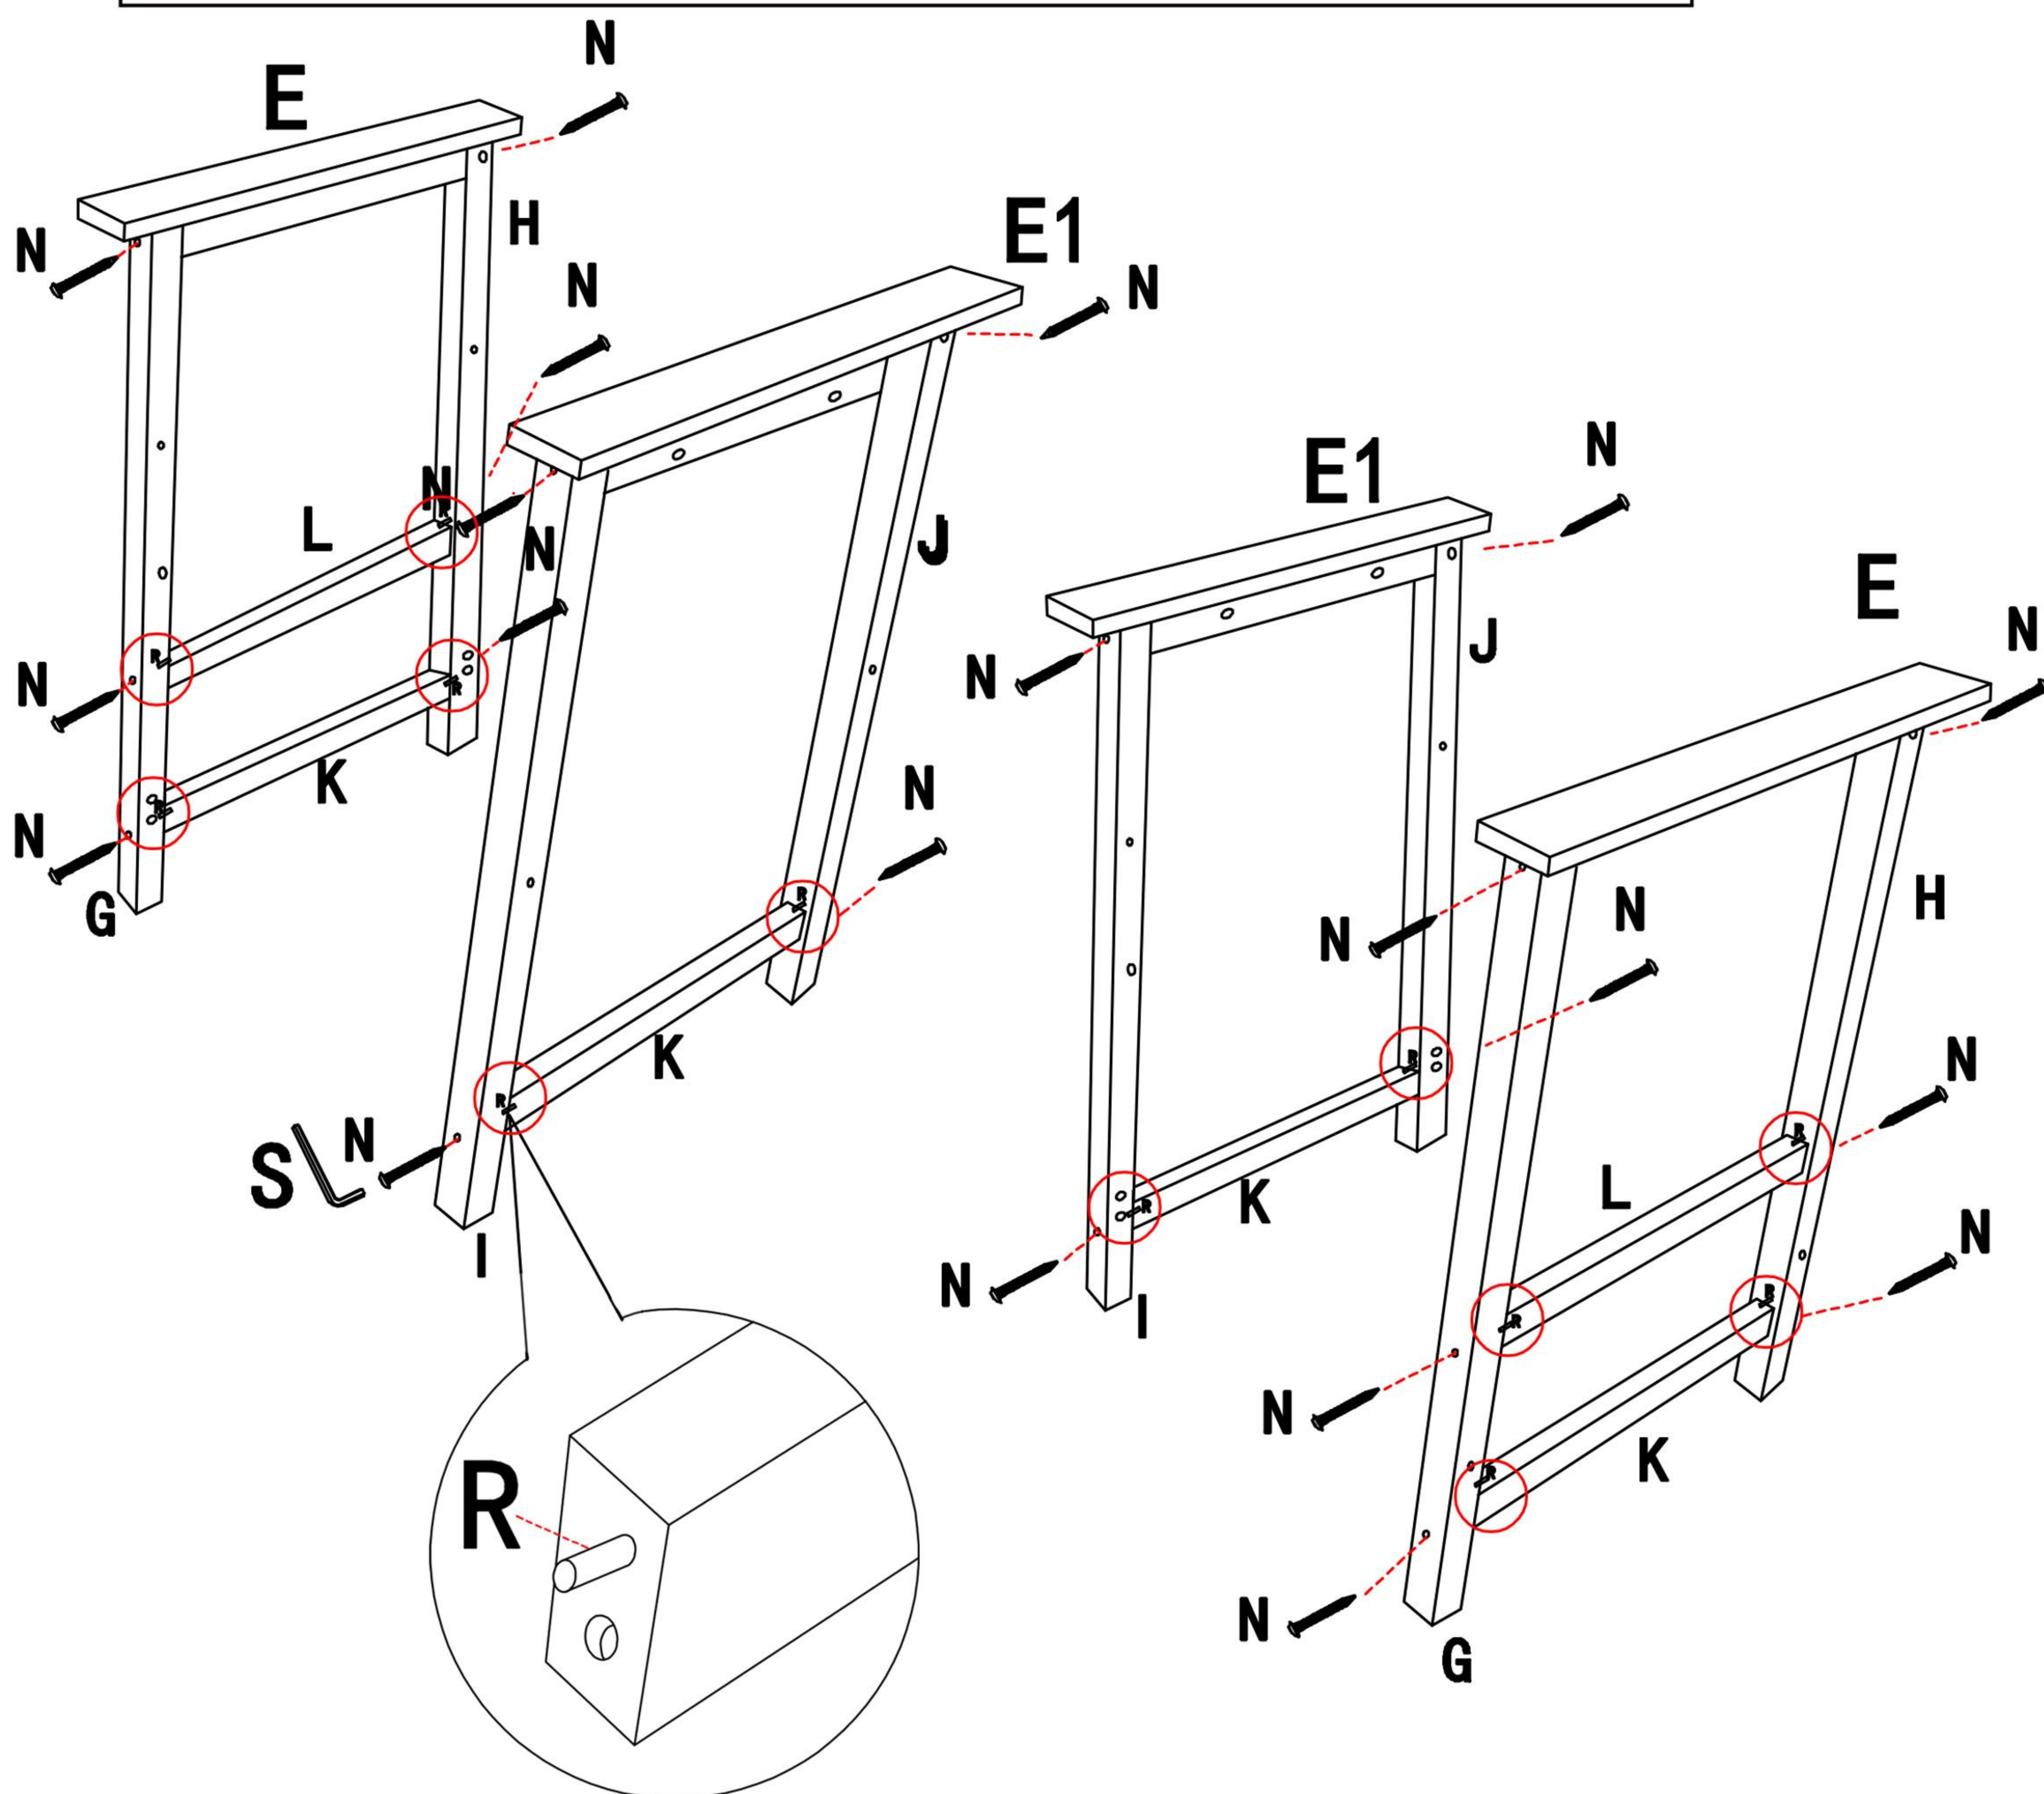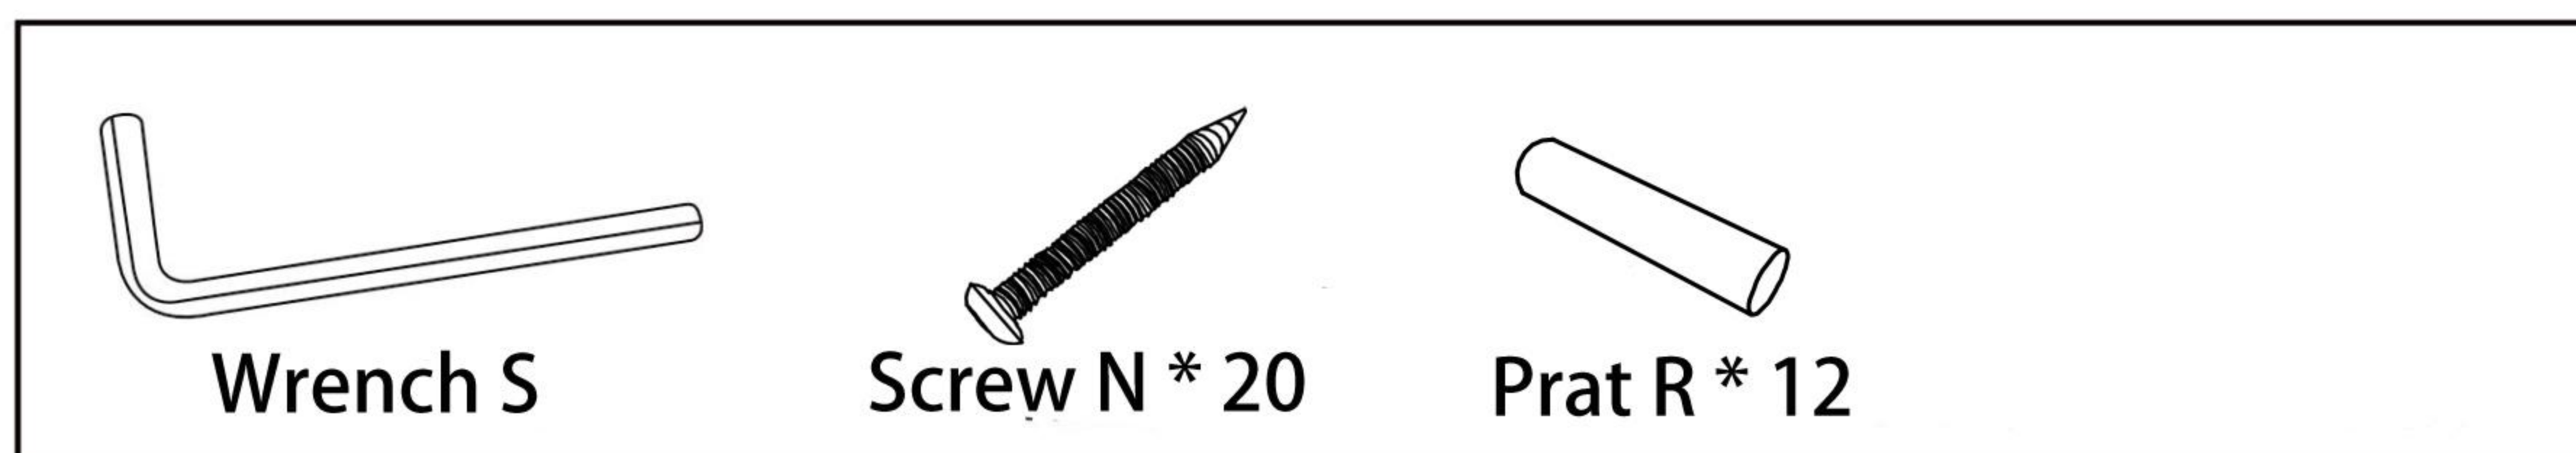

Step 2:



Take out Part B (Back Panel) x 2 & Part A (Seat Panel) x 2
Install them with Screw P x 4

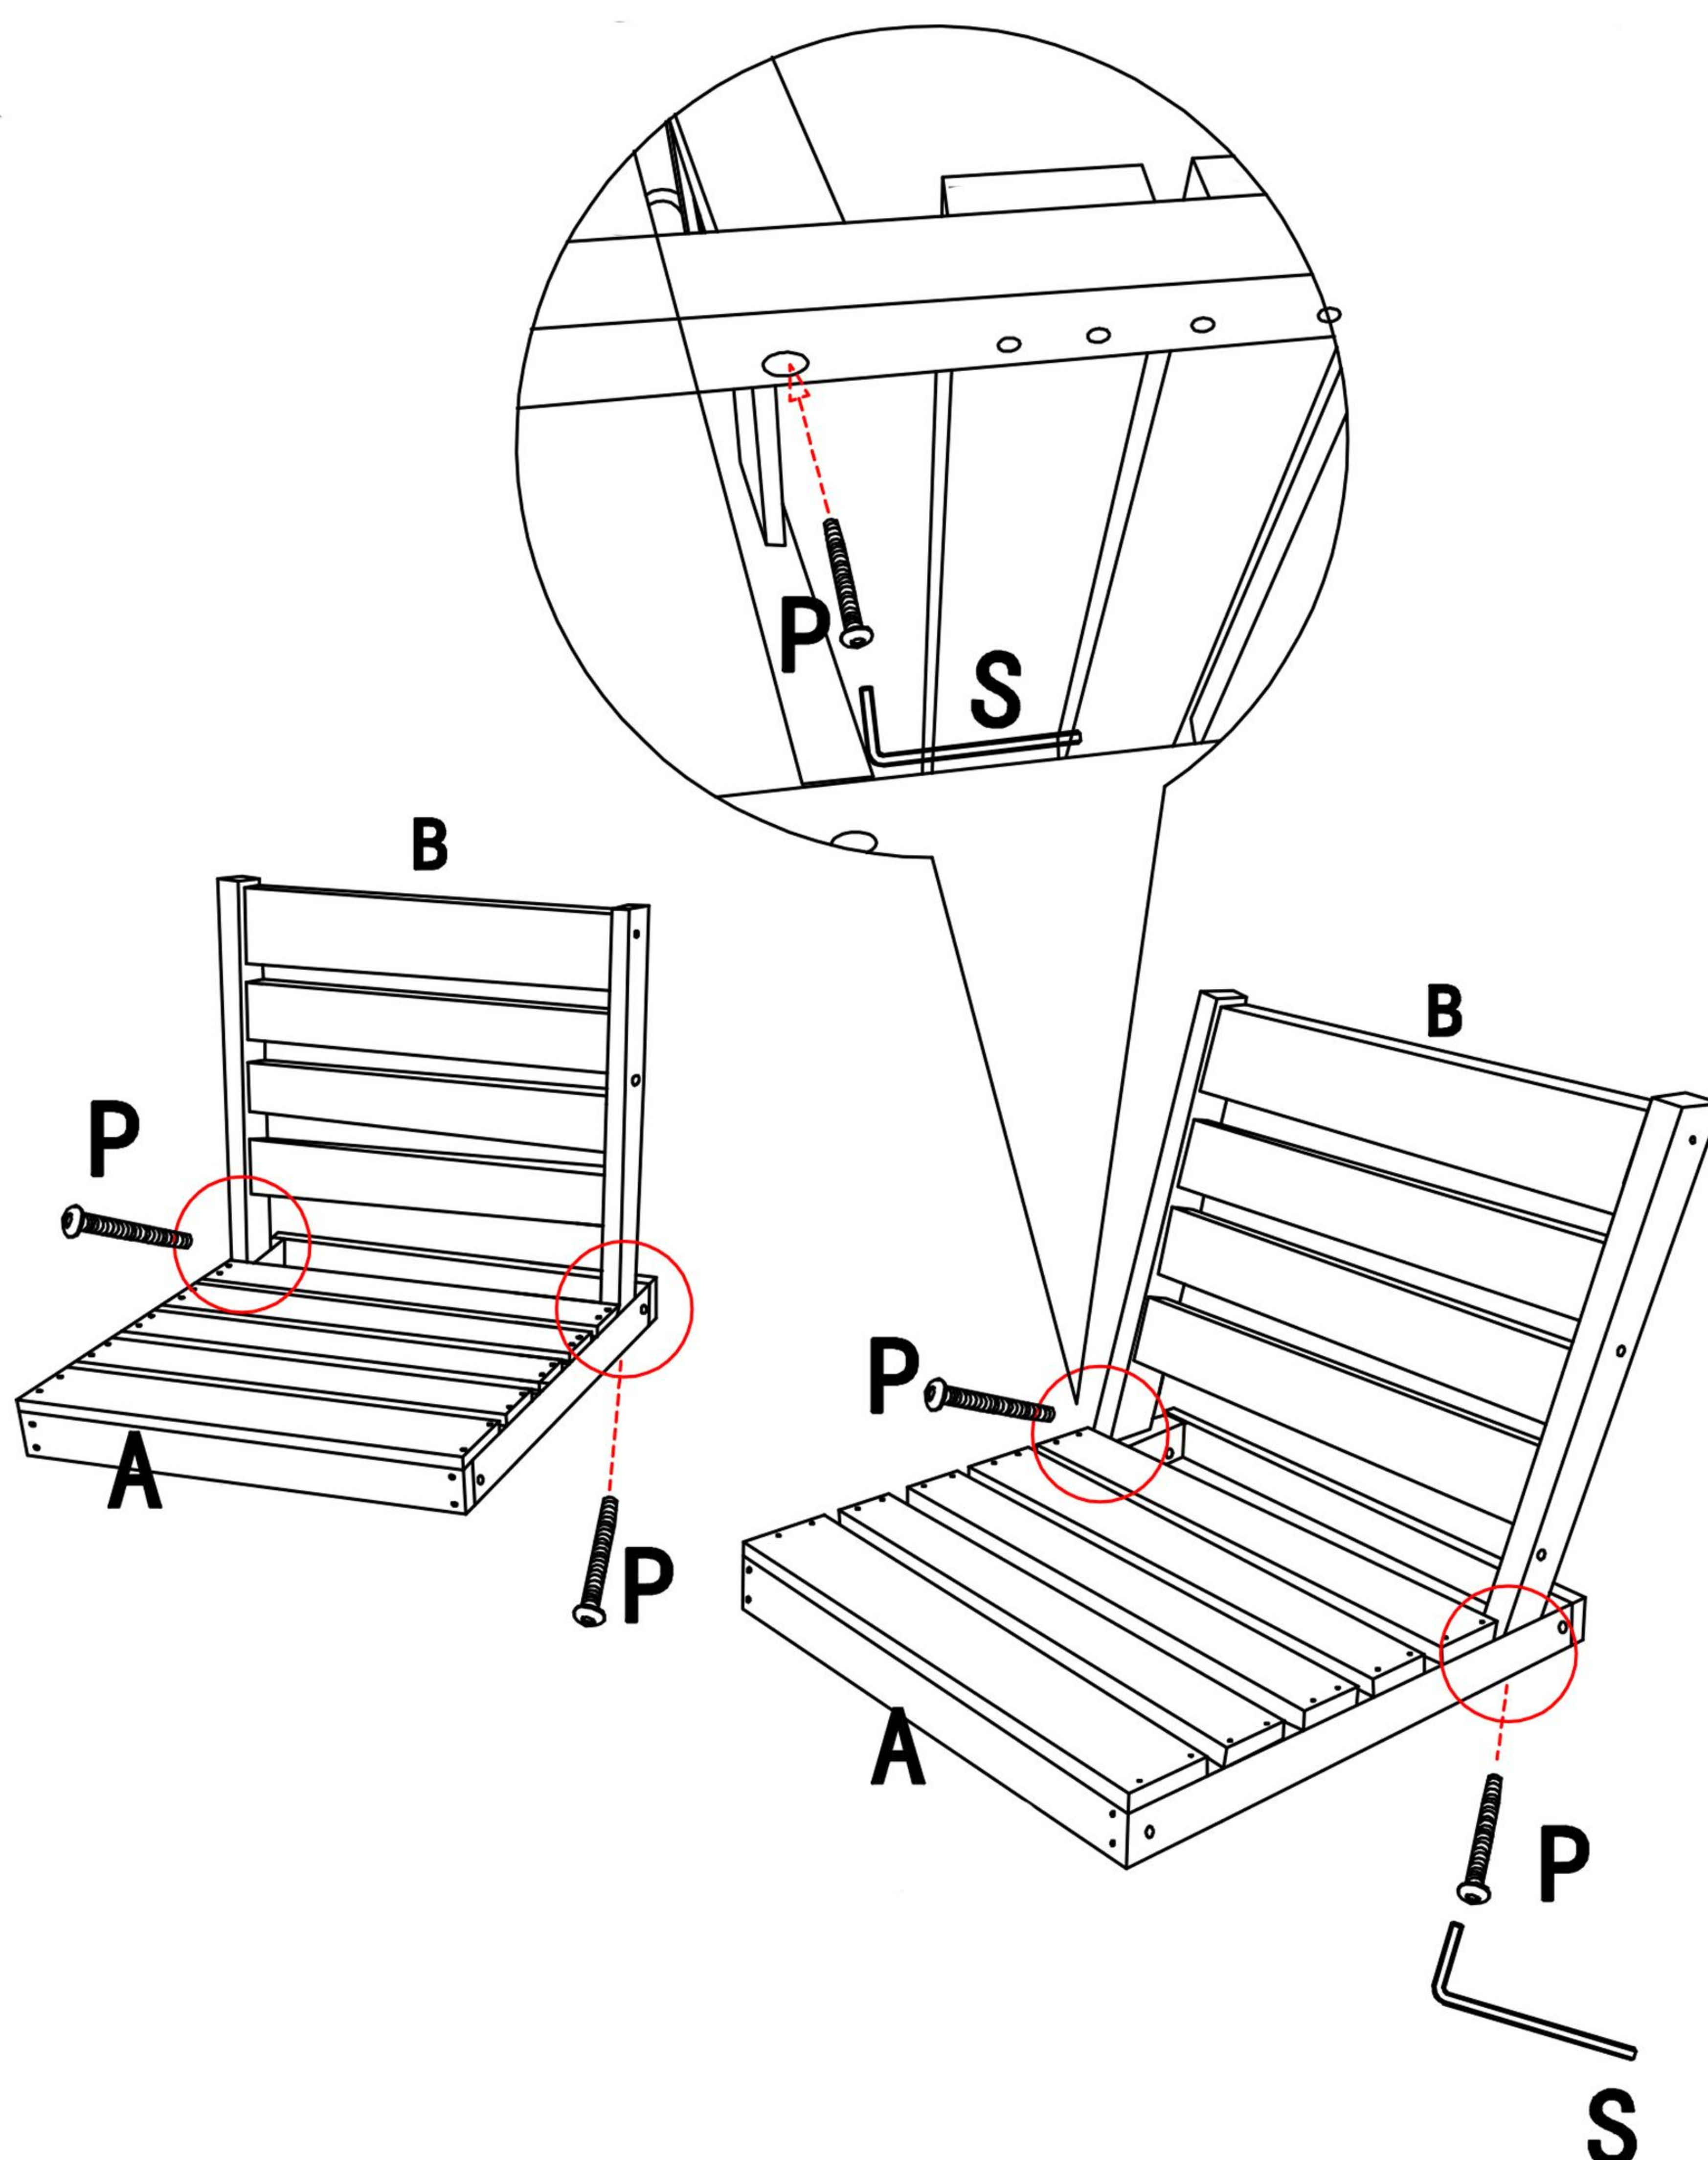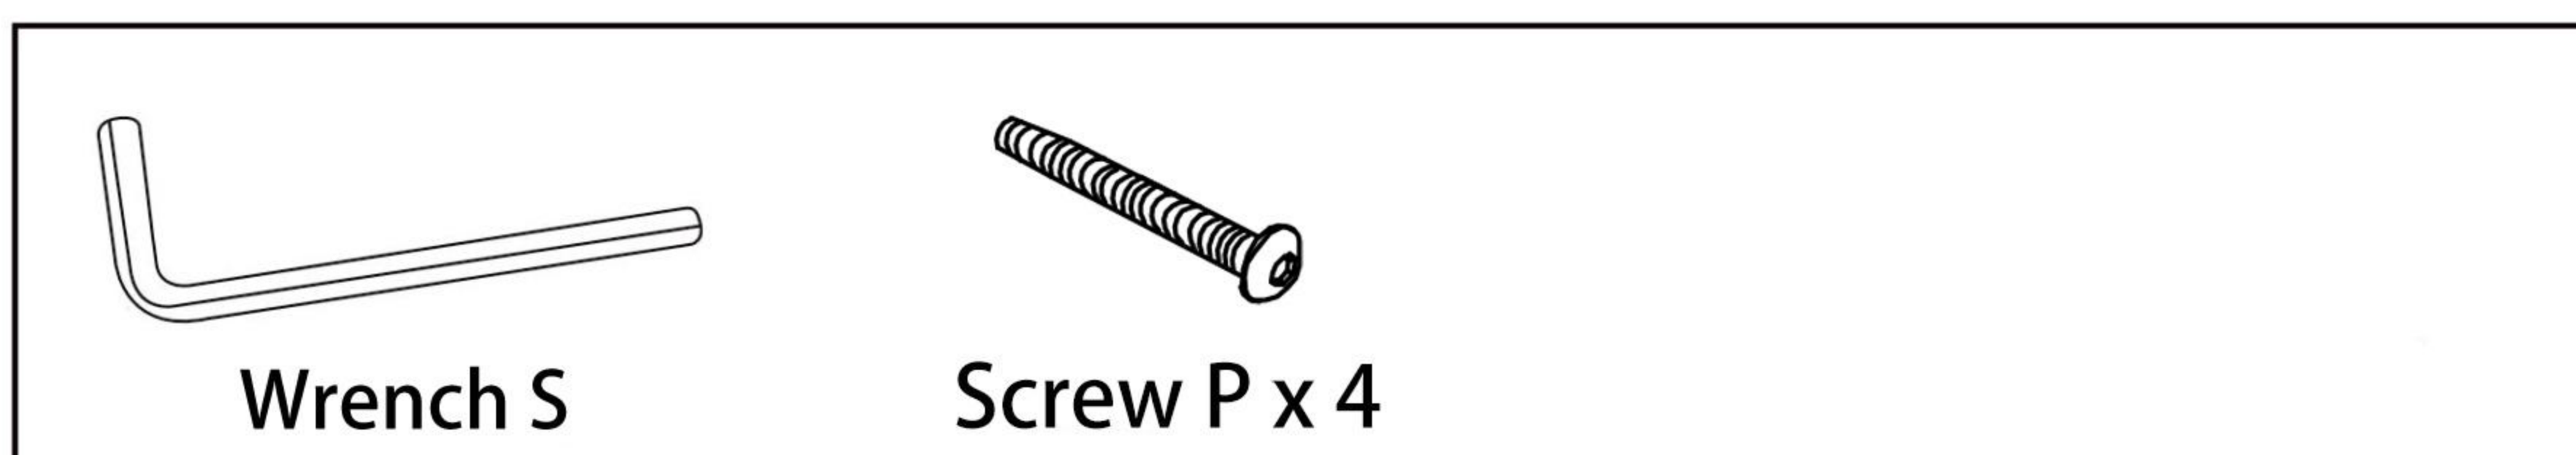

Step 4:

Take out Part F x 2 , Assemble Part F (Front Panel) in Chairleg
Install them with Screw N x 4 and Part R x 4



PS: Please Notice Part R is pre-installed on Part F

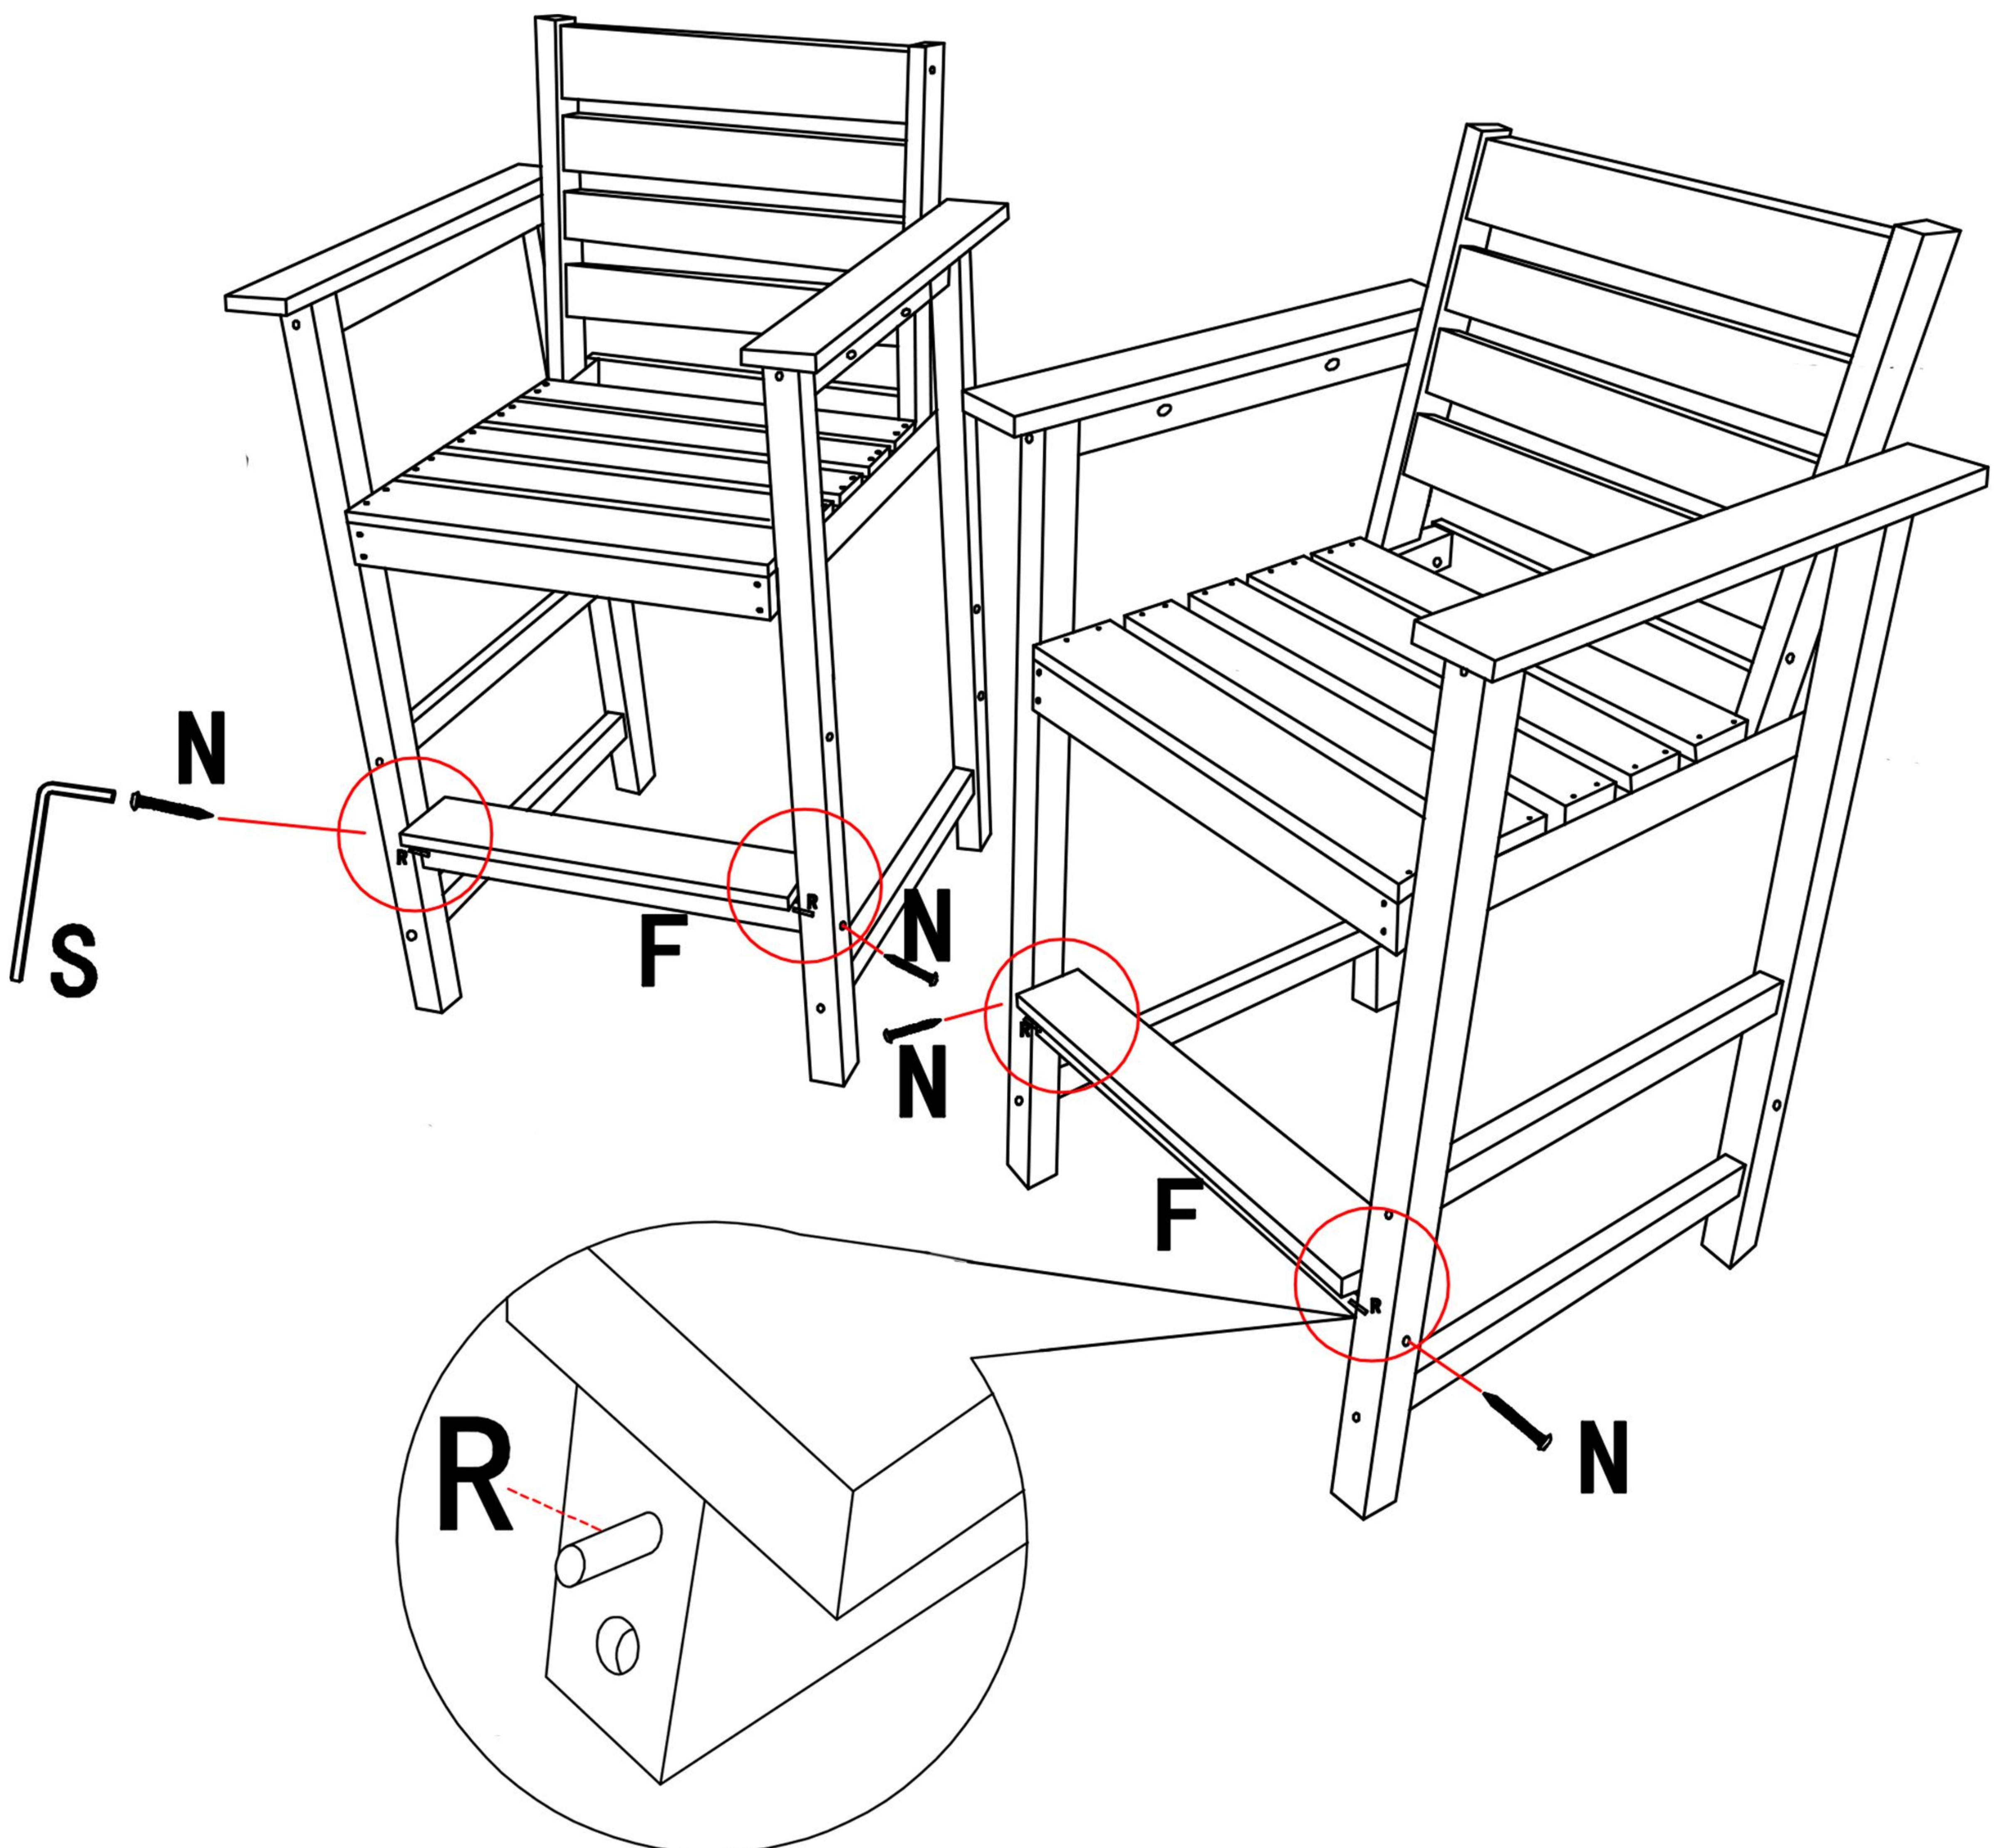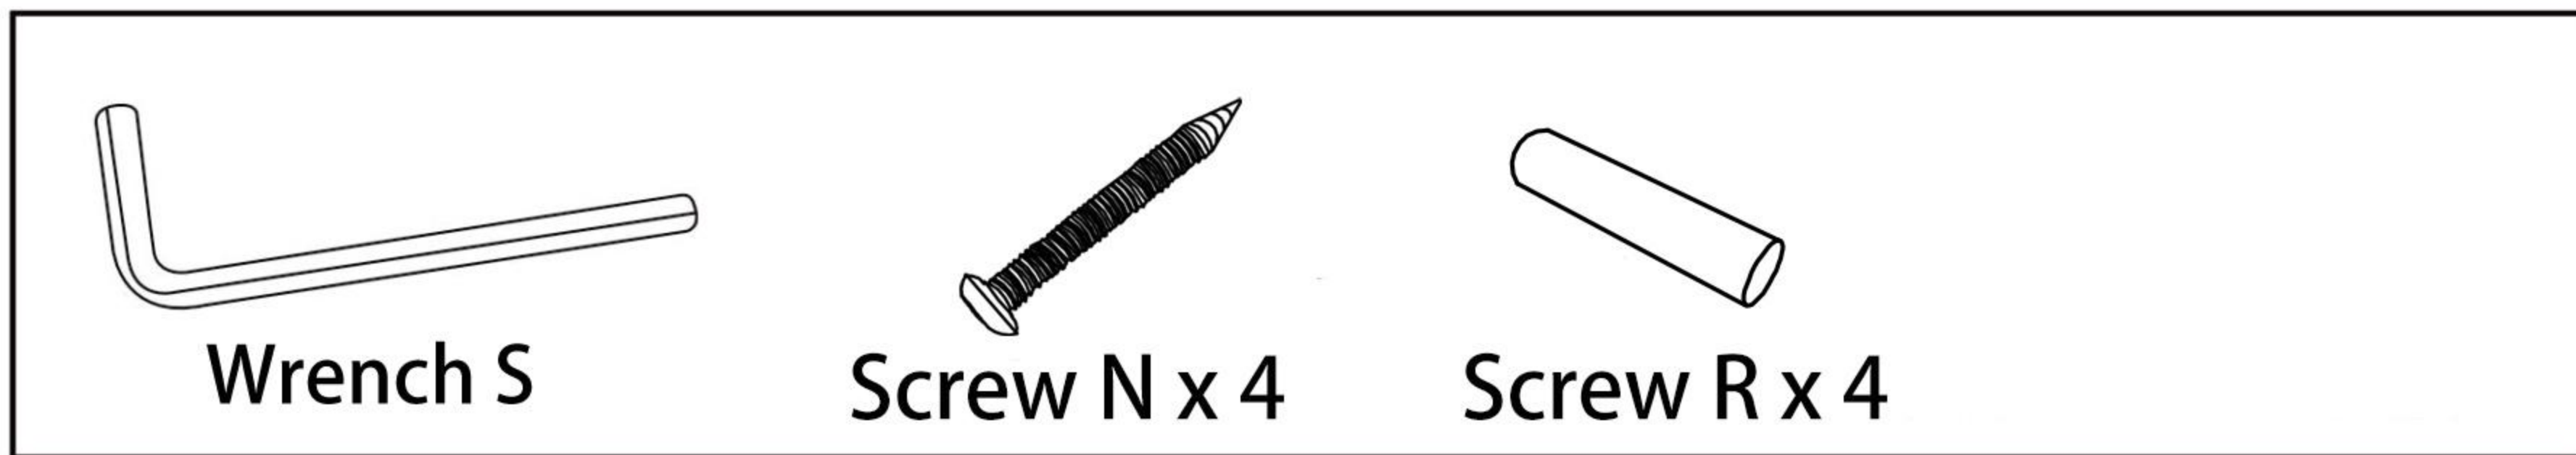

Step 5:



Take out Part M x 2 , Assemble Part M (Back Panel) in Chairleg
Install them with Screw N x 4 and Part R x 4

PS: Please Notice Part R is pre-installed on Part M

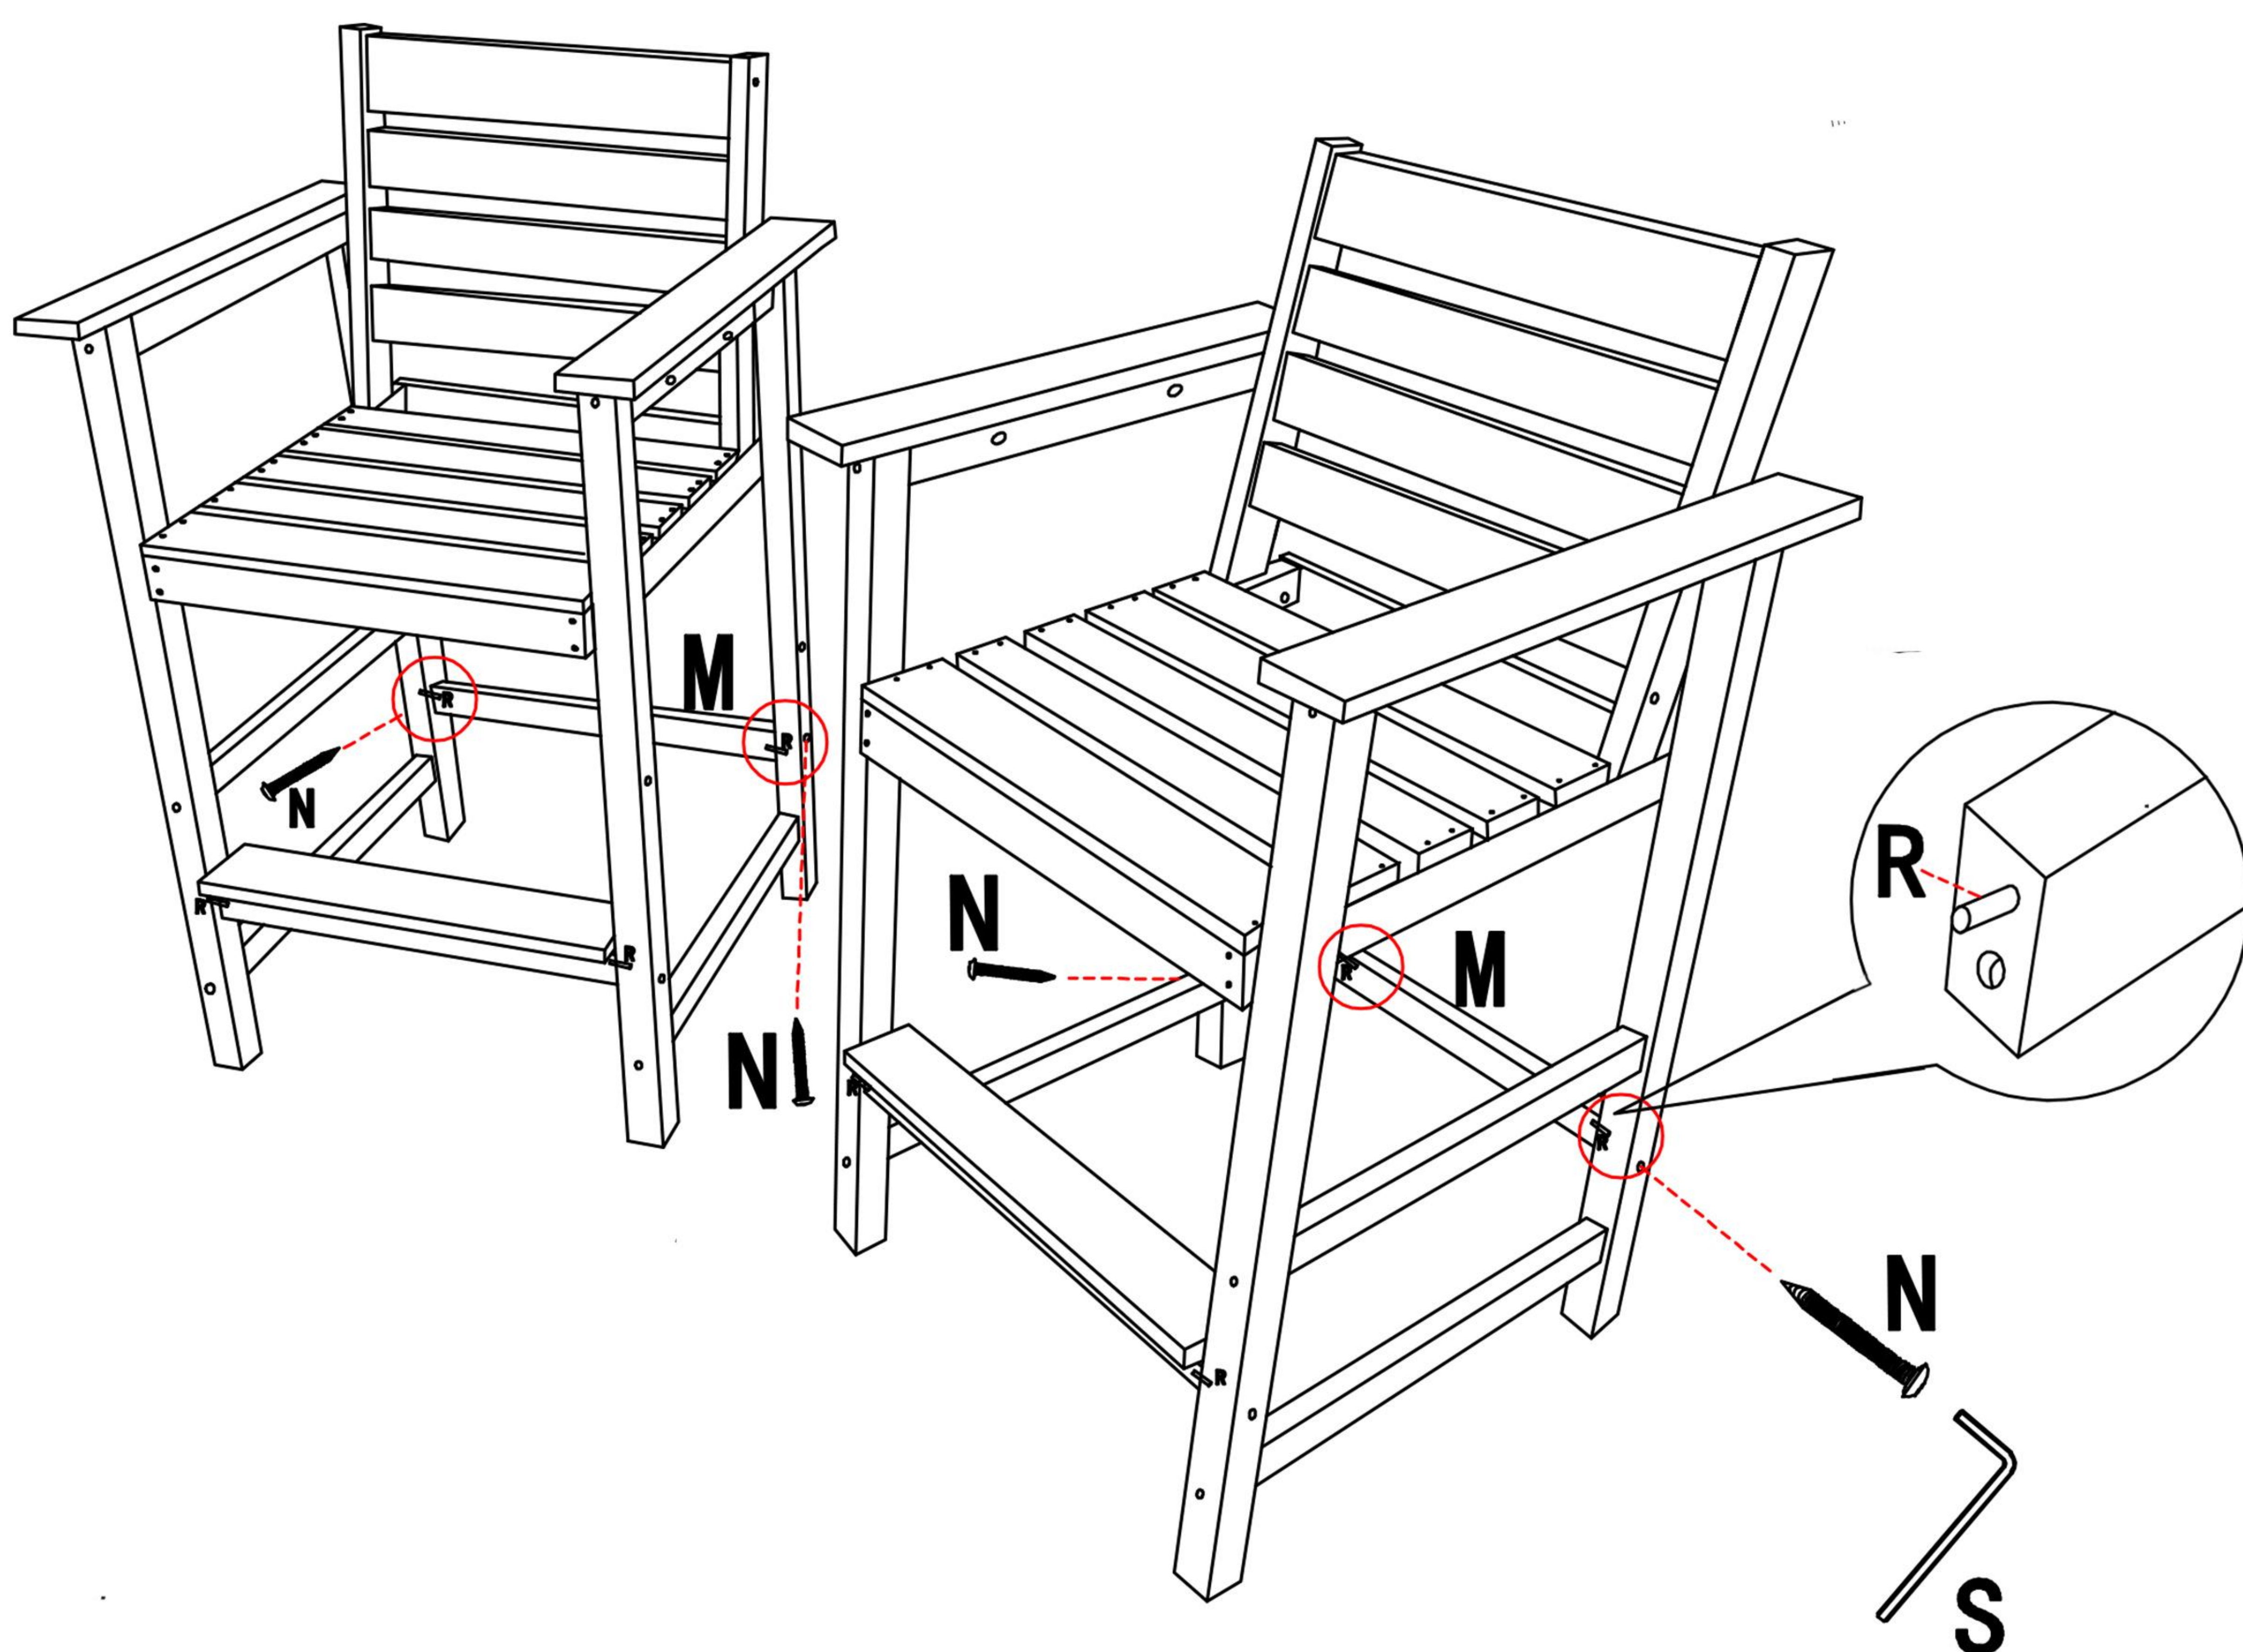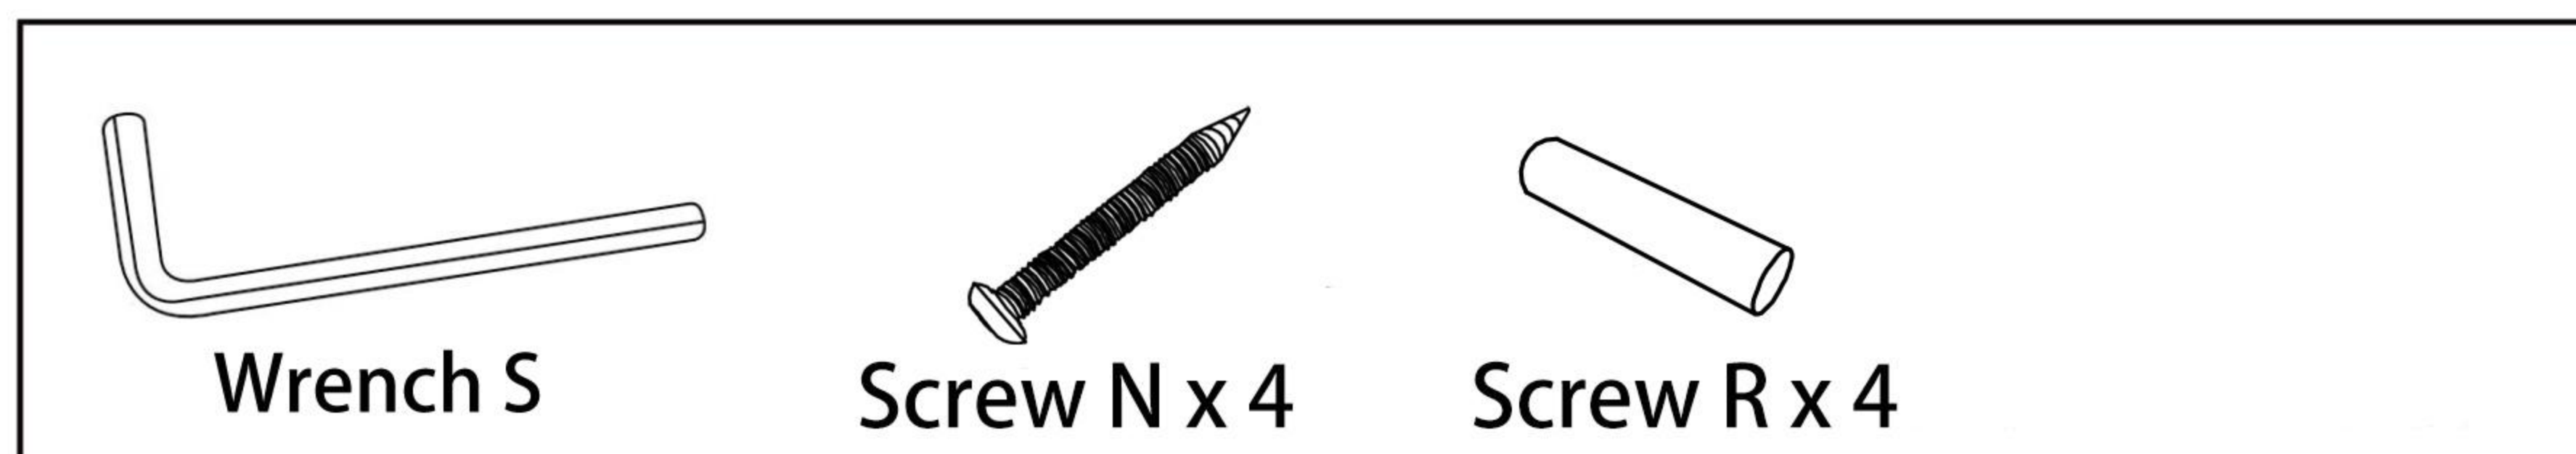



Step 6-I:

Take out Part D and install it in the middle of the two chair armrests, using Screw P x 4 (As shown in the figure below)

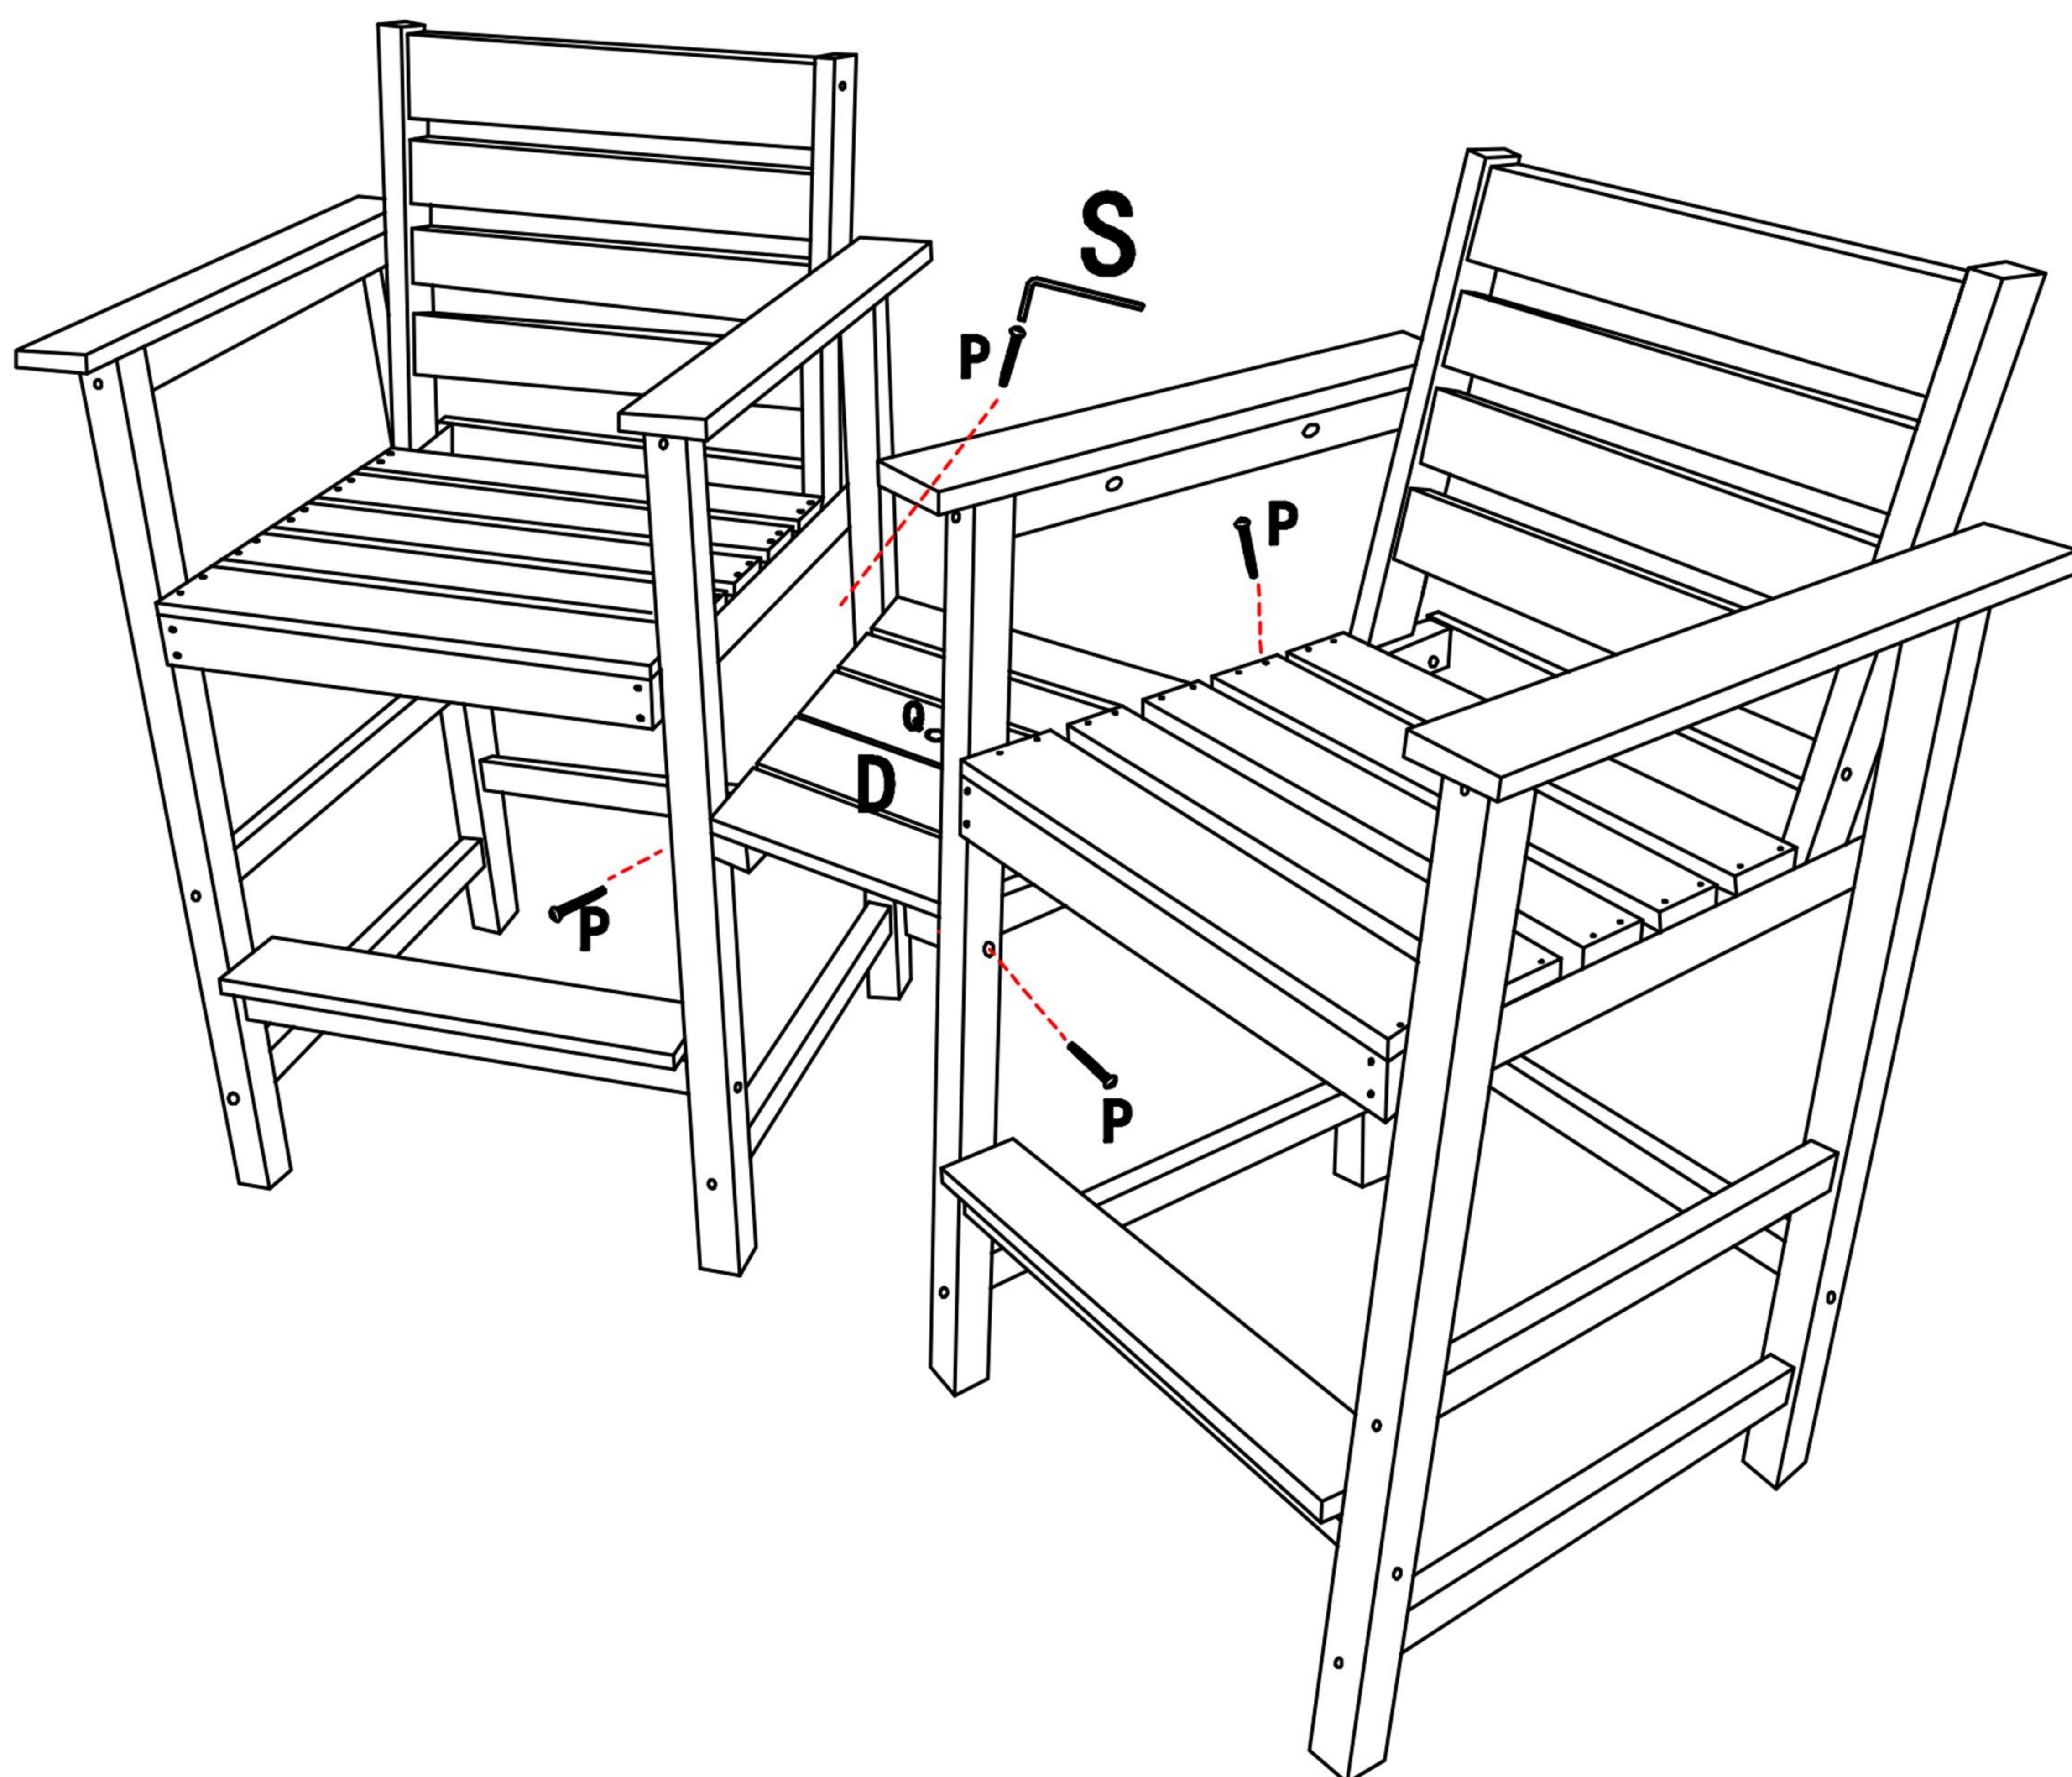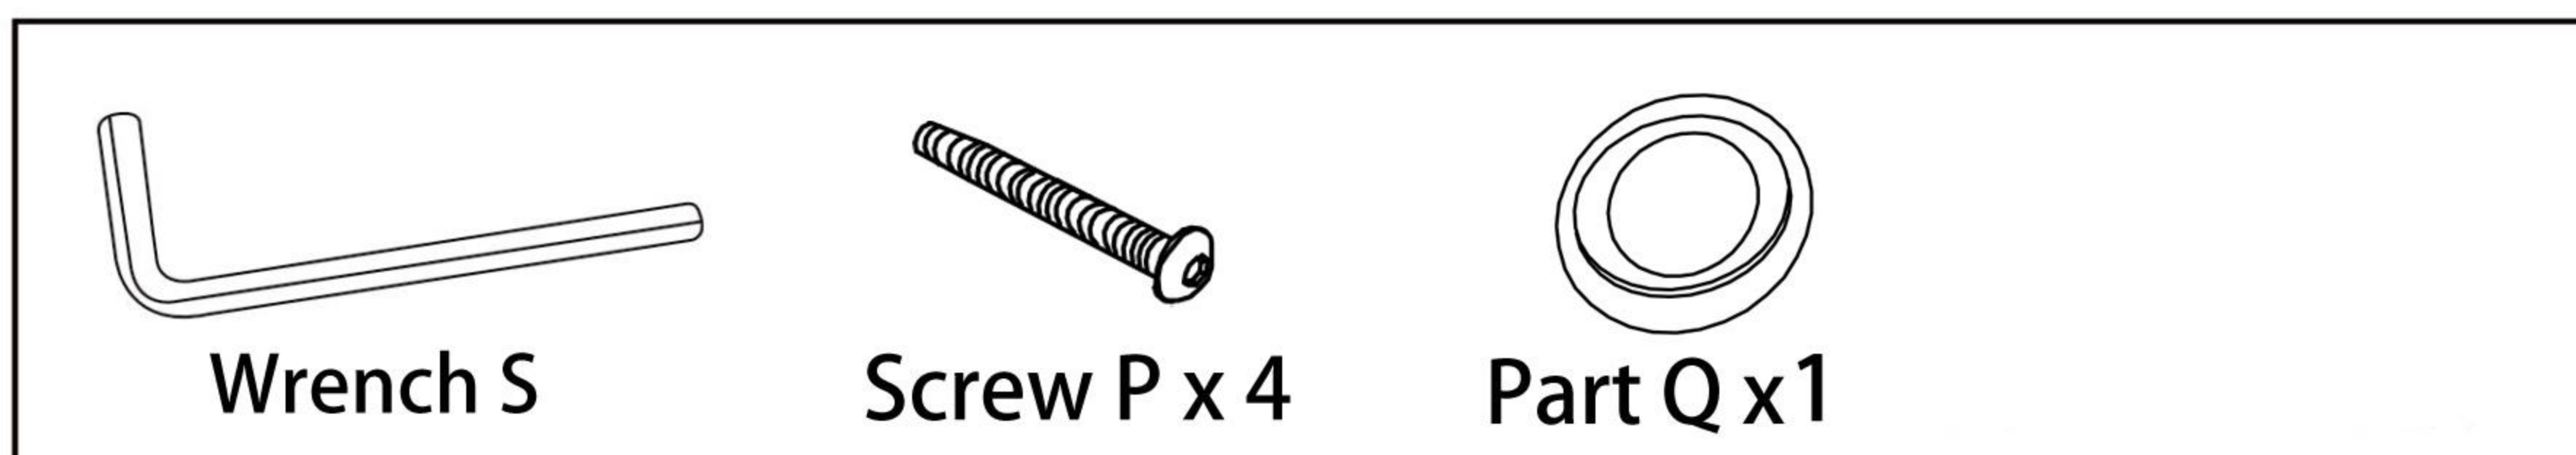

Step 6-2:

Take out Part C and install it in the middle of the two chair armrests, using Screw O x 4 (As shown in the figure below)

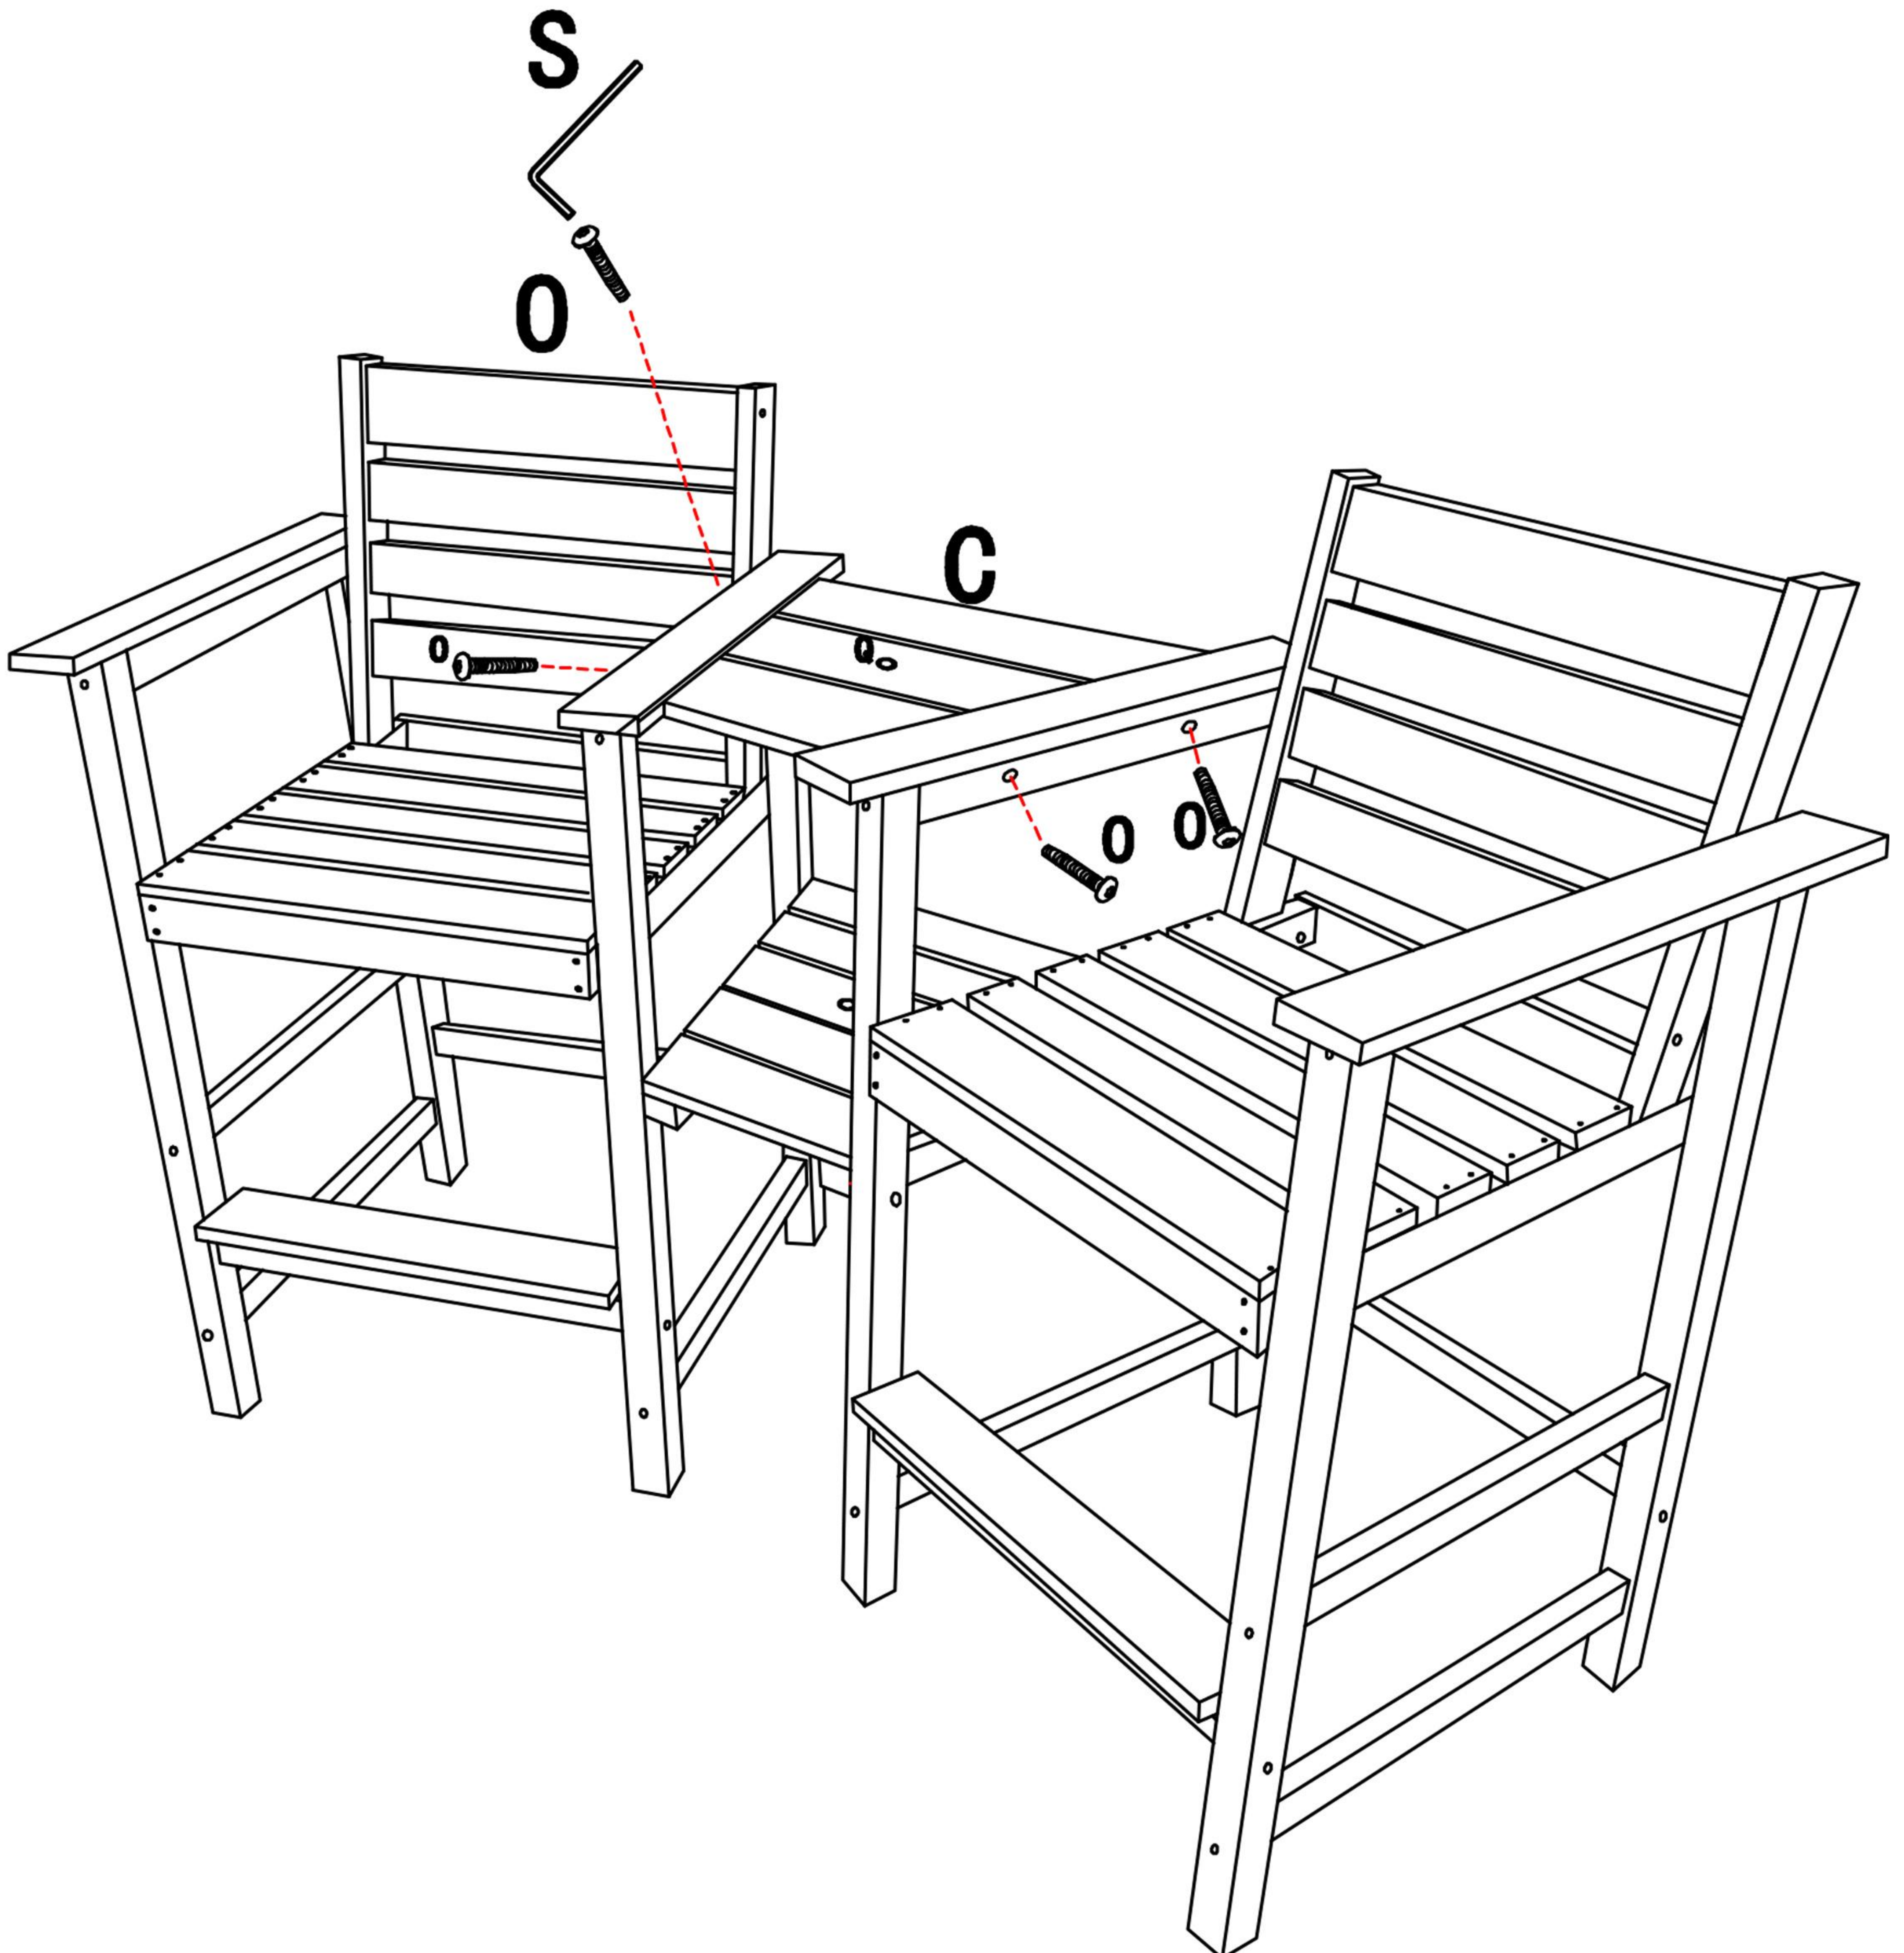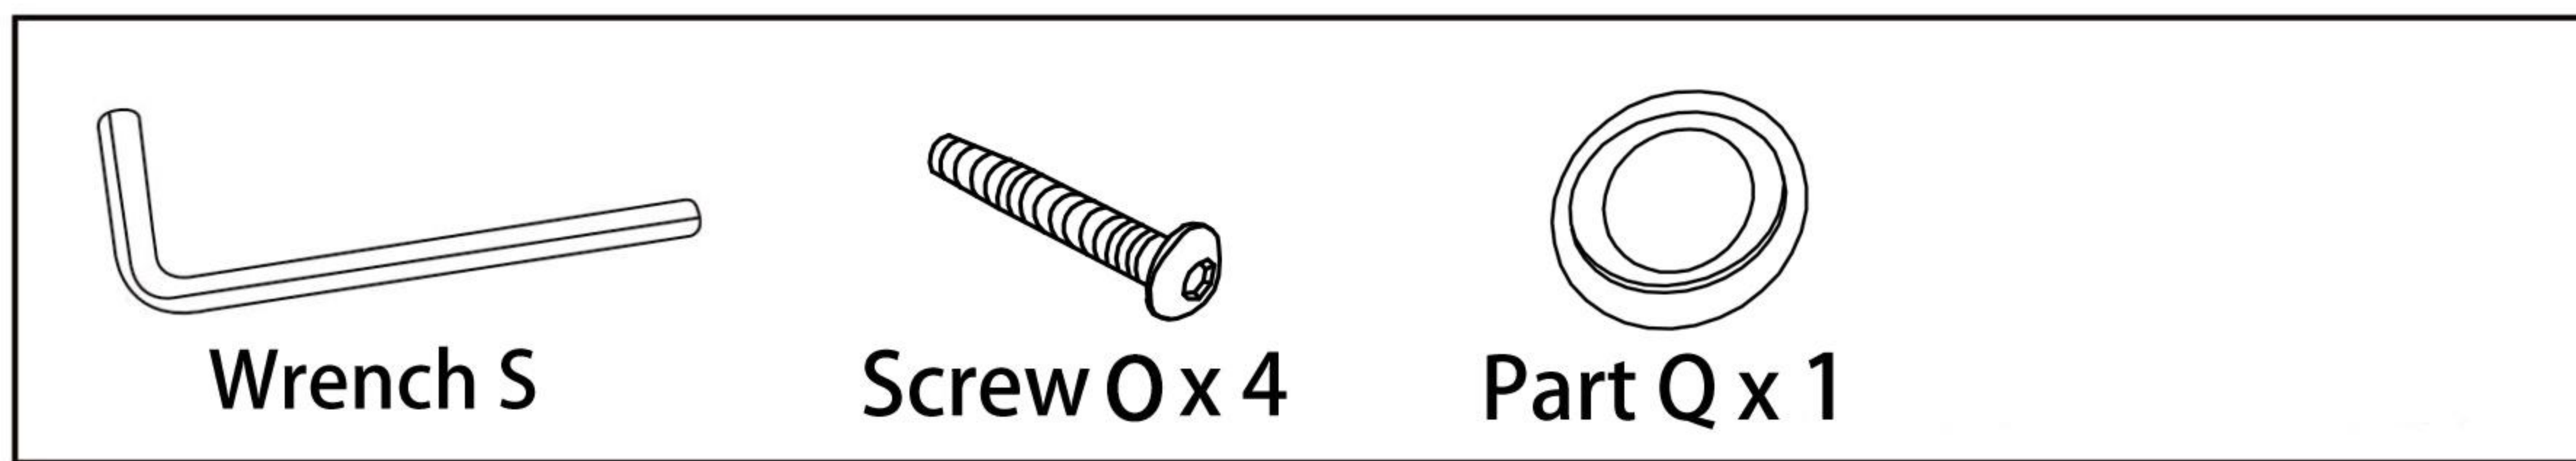

Step 3:

Connet Chair Leg (Assemble in Step 1) with Chair Seat
(Assemble in Step 2) ,Use Screw O x 12

PS: Please Notice The screw holes are on the inside of the Part A (Seat
Panel) & Part B (Back Panel)

