

ASSEMBLY INSTRUCTIONS:※VERY IMPORTANT

PLEASE READ THOROUGHLY. MAKE SURE YOU PROPERLY ALIGN POLES BEFORE SCREWING THEM TOGETHER TO AVOID DAMAGING CONNECTION THREADS. NOT ADHERING TO THIS PROCEDURE MAY VOID YOUR WARRANTY.

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A FLAT SURFACE AND LINE THEM UP AS PER THE SKETCH.
2. PUT THREAD OF TUBE (E) INTO BASE (D), ATTACH WASHER (C), WASHER (B), THEN SECURE THE BASE (D) WITH NUT (A) USING WRENCH (O) AS SHOWN IN DRAWING.
3. PLACE GLASS (G) ONTO TUBE (E), ADJUSTS THE HOLE OF GLASS (G) AND THE HOLE OF TUBE (E) IN ORDER.
4. PLACE RUBBER WASHER (Q) AND TUBE (J) INTO THE HOLE OF THE GLASS (G) AND TUBE (E) THEN SECURE THEM WITH SCREW (F) USING ALLEN KEY (P).
5. INSERT HARP (L) INTO SADDLE AT THE TOP OF SOCKET ON TUBE (J).
6. PLACE SHADE (M) ONTO HARP (L) AND TIGHTEN WITH FINIAL (N).
7. INSTALL BULB (K) INTO SOCKET OF TUBE (J).
8. INSERT THE POLARIZED PLUG INTO WALL OUTLET, TURN ON THE SWITCH AND ENJOY YOUR NEW LAMP.


USE A 25W 3-WAY CFL TYPE BULB OR 150W (MAXIMUM) 3-WAY INCANDESCENT A TYPE BULB.

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

ATTENTION:

POUR PRÉVENIR LES CHOCS ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DECOURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI

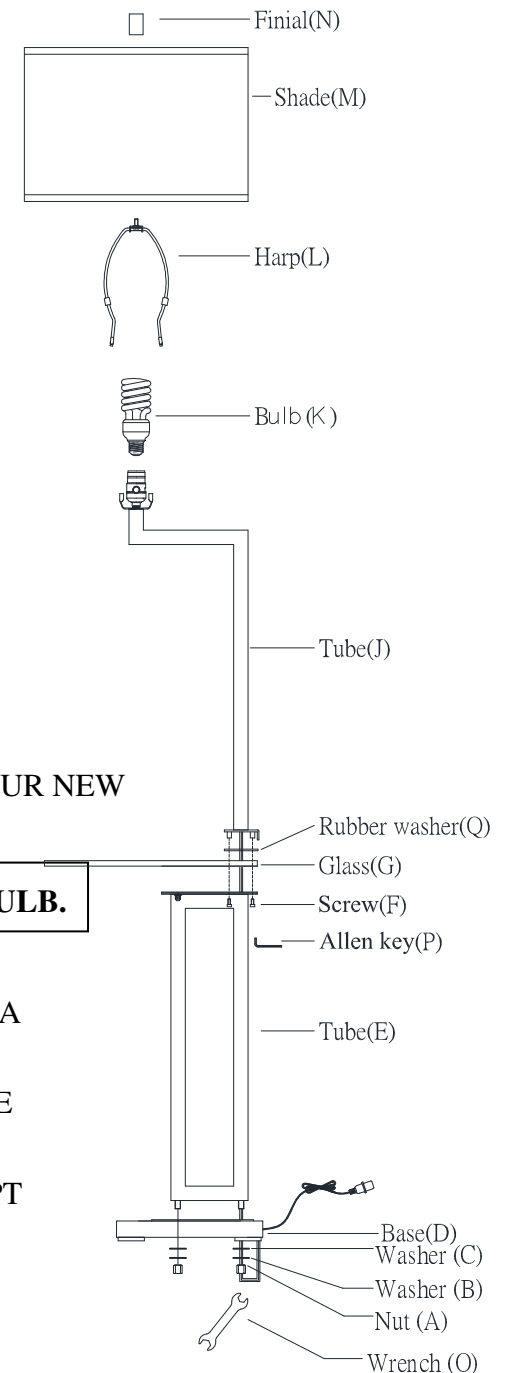

LES LAMES PEUVENT ÊTRE INSÉRÉES A FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT.

※ PLEASE INFORM YOUR DEALER IMMEDIATELY IN CASE OF ANY PARTS SHORTAGE.
※ SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.