

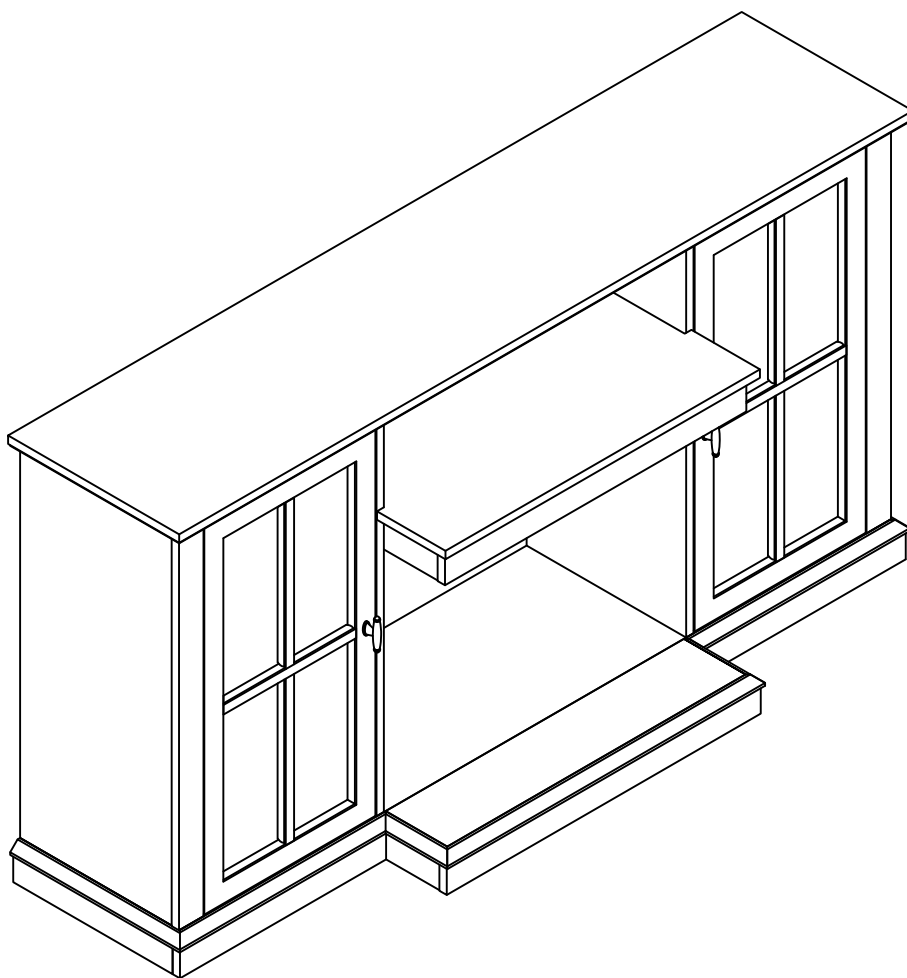


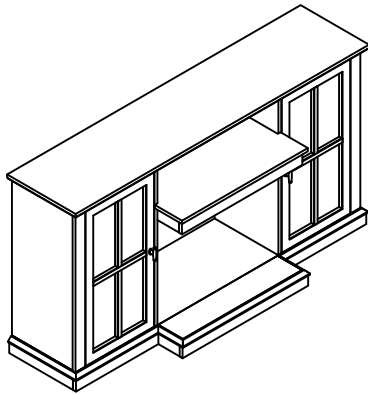


WARNING!




Estimated Time for Assembly

50 mins

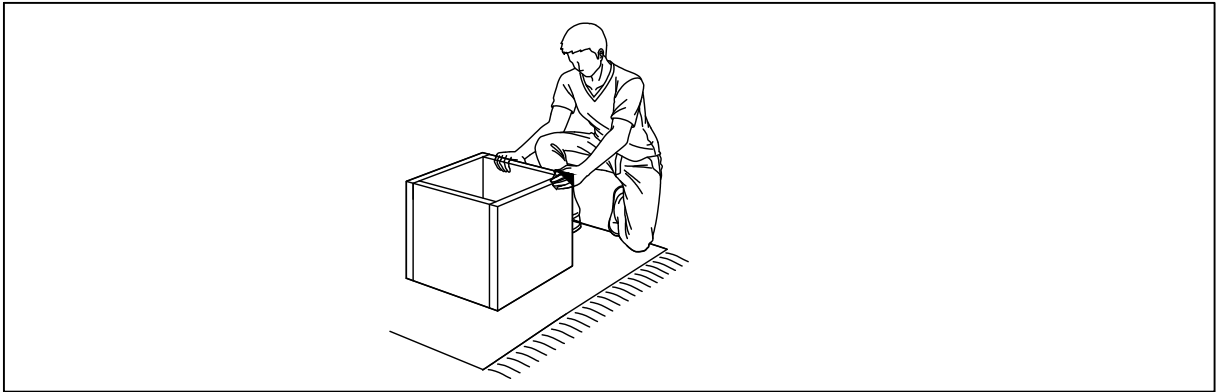


Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

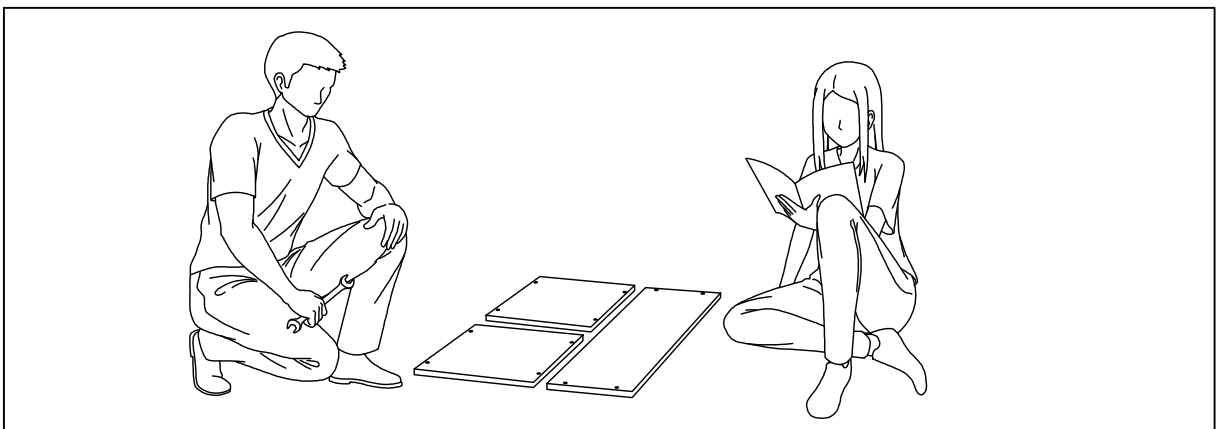


This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.


Not actual size

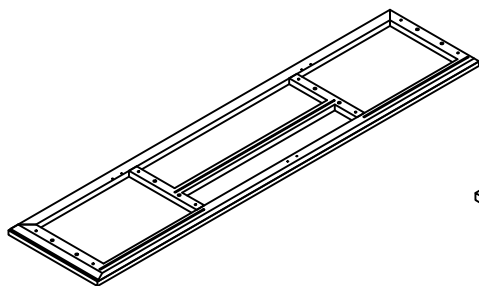


①X1

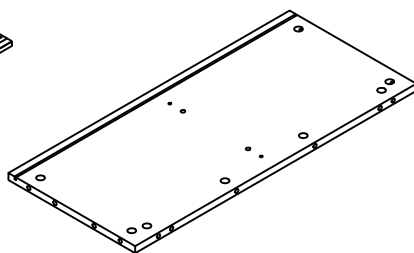


②X2

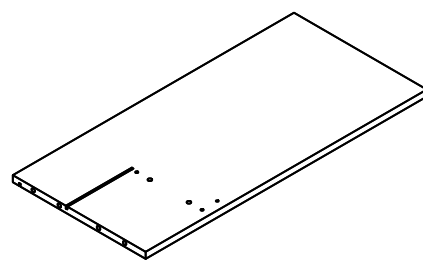


③X1

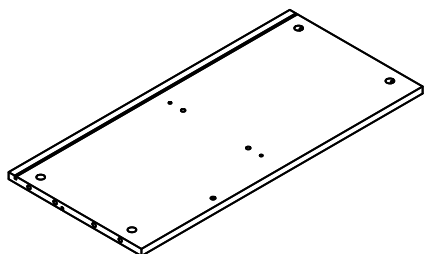


④X1

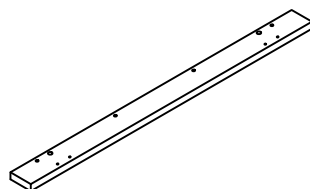


⑤X2

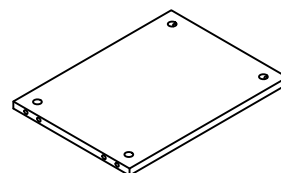


⑥X2

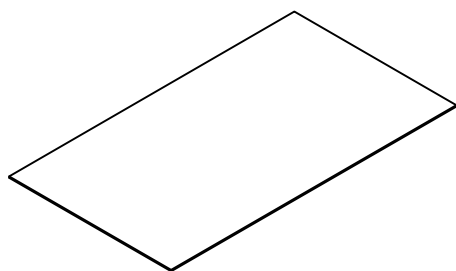


⑦X2

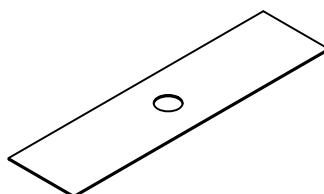


⑧X1

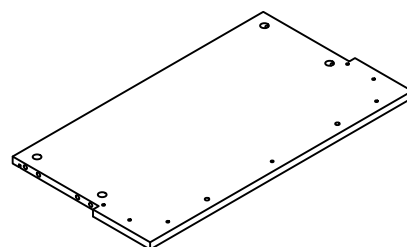


⑨X1



⑩X1




⑪X1

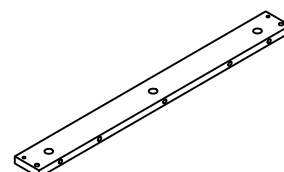


⑫X1


Not actual size

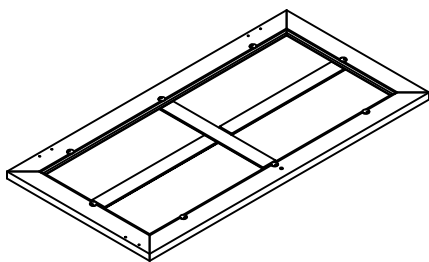


⑬X1

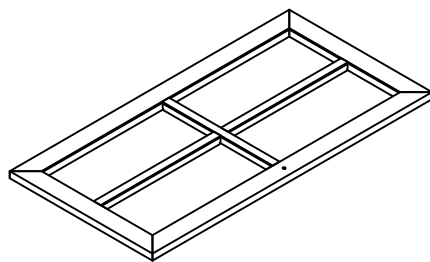


⑭X1

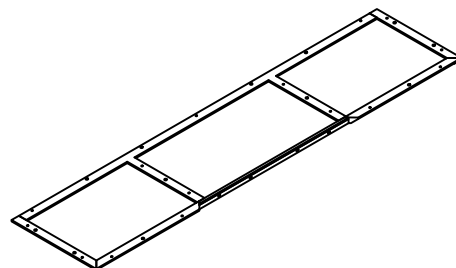


⑮X1

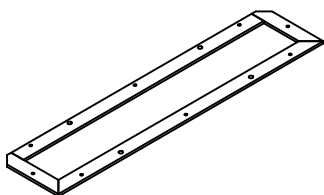


⑯X1




⑰X1

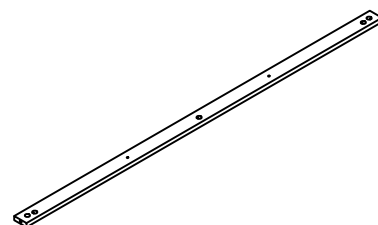

⑱X1




⑲X2

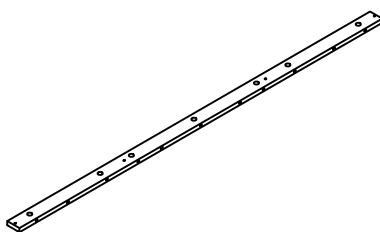


⑳X1




㉑X2

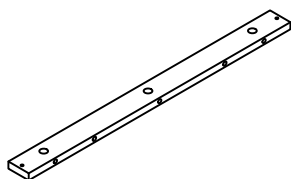











㉒X1



㉓X1

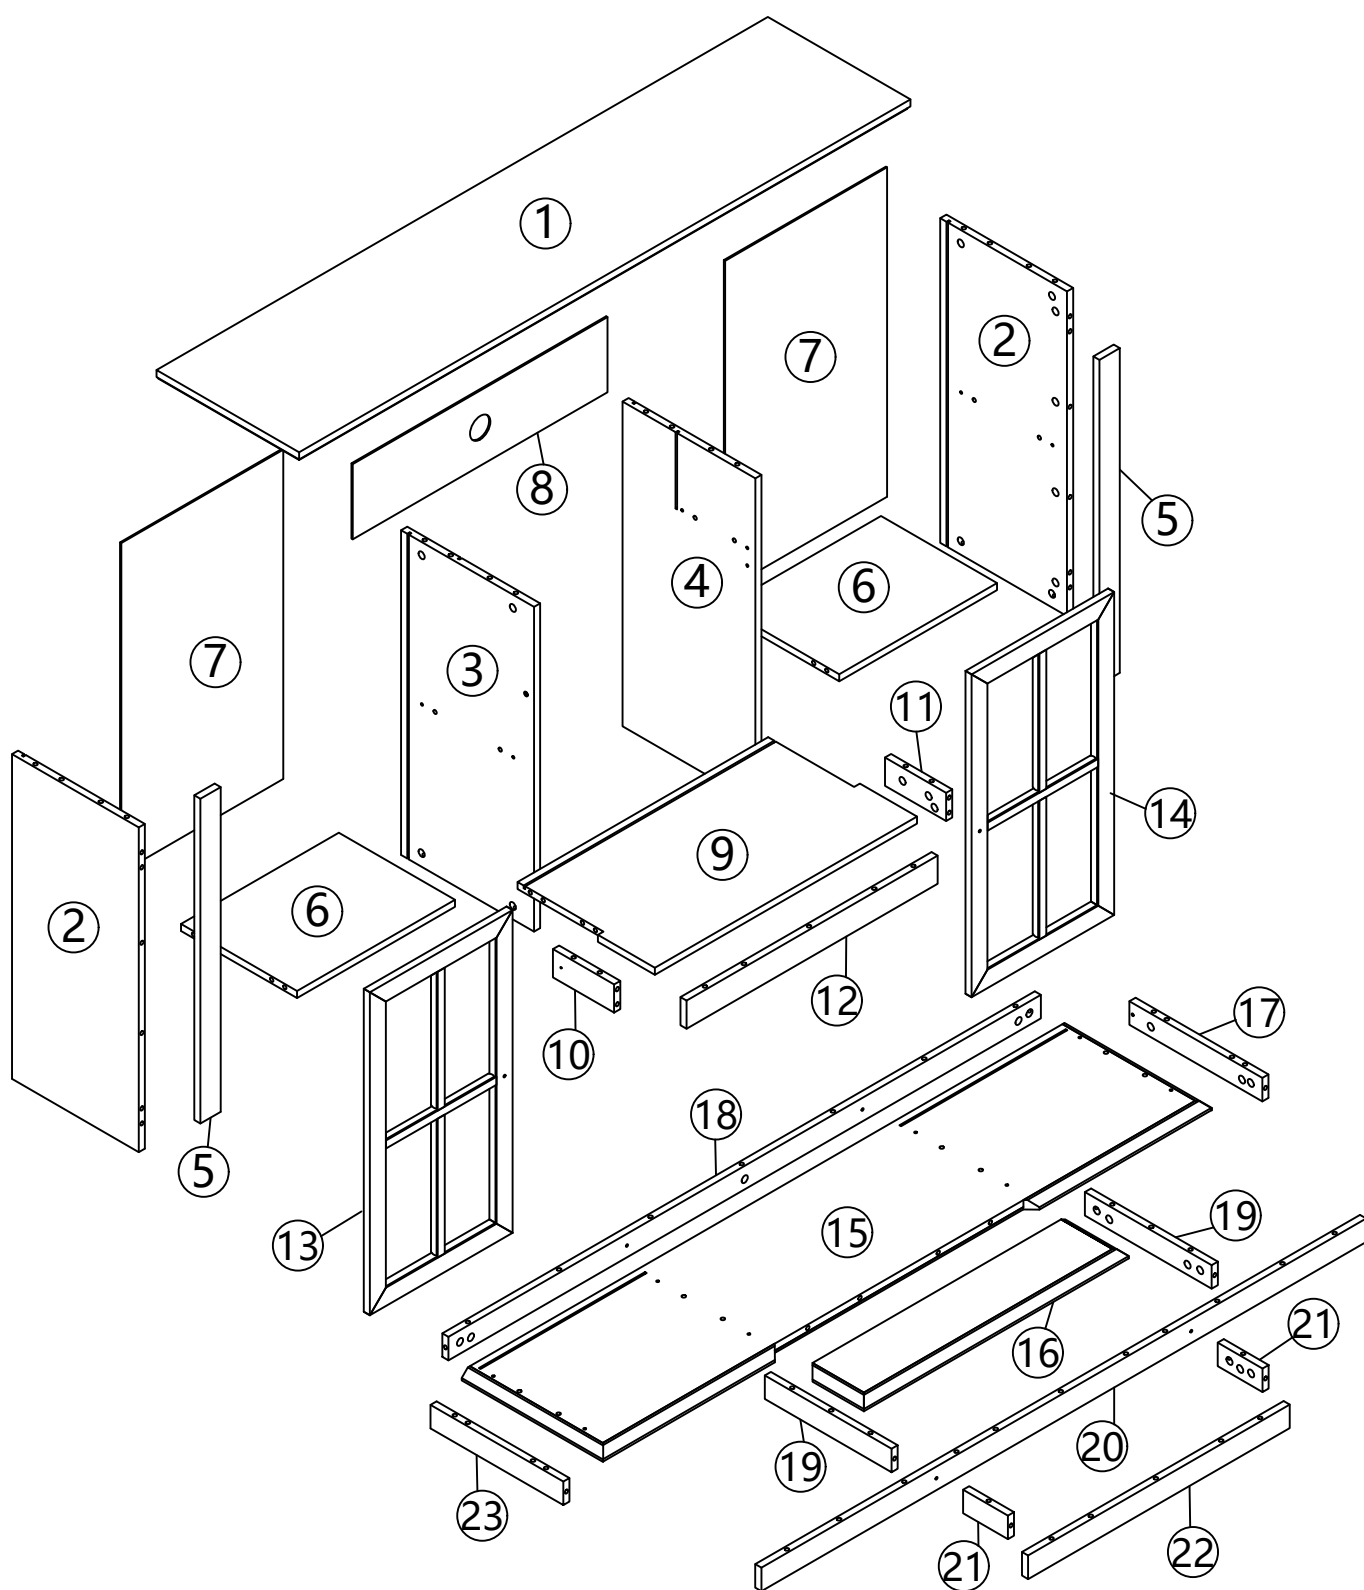





Ⓐ X80+3  ø15*9.5	Ⓑ X80+3  ø6.5*35	Ⓒ X56+3  ø8*30	Ⓓ X4  ø3*12
Ⓔ X2  M4*19	Ⓕ X20+1  ø3*12	Ⓖ X4  ø3*16	Ⓗ X4  ø46*23*17
Ⓘ X2  46*15*14	Ⓙ X2  45*12	Ⓚ X2  62*14*31	Ⓛ X1  72*30*5
Ⓜ X8+1  ø3*14	Ⓝ X1SET 	Ⓞ X2  ø4*25	


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


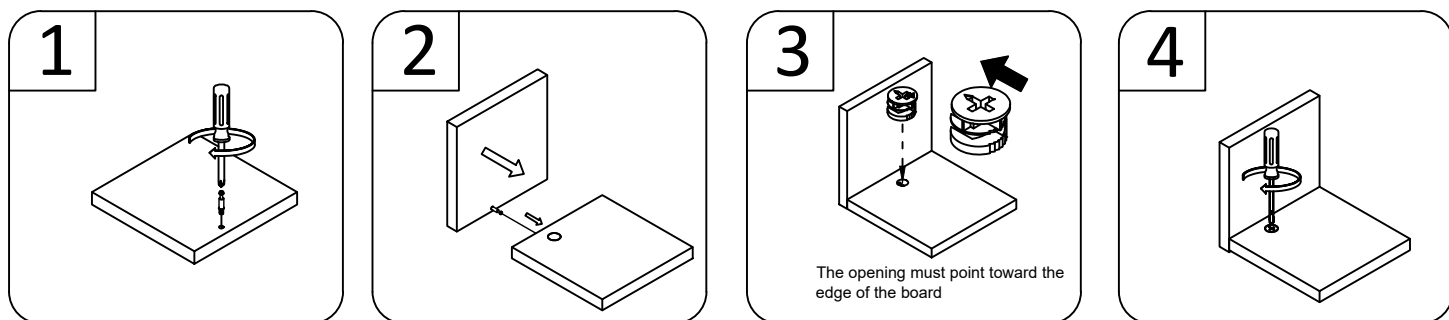


STEP 1

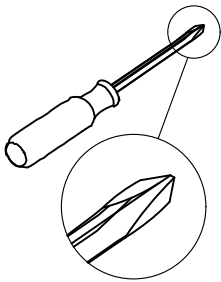









(B)	X23
	
$\phi 6.5 \times 35$	

(C)	X4
	
$\phi 8 \times 30$	


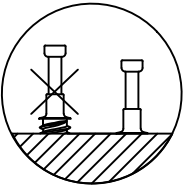
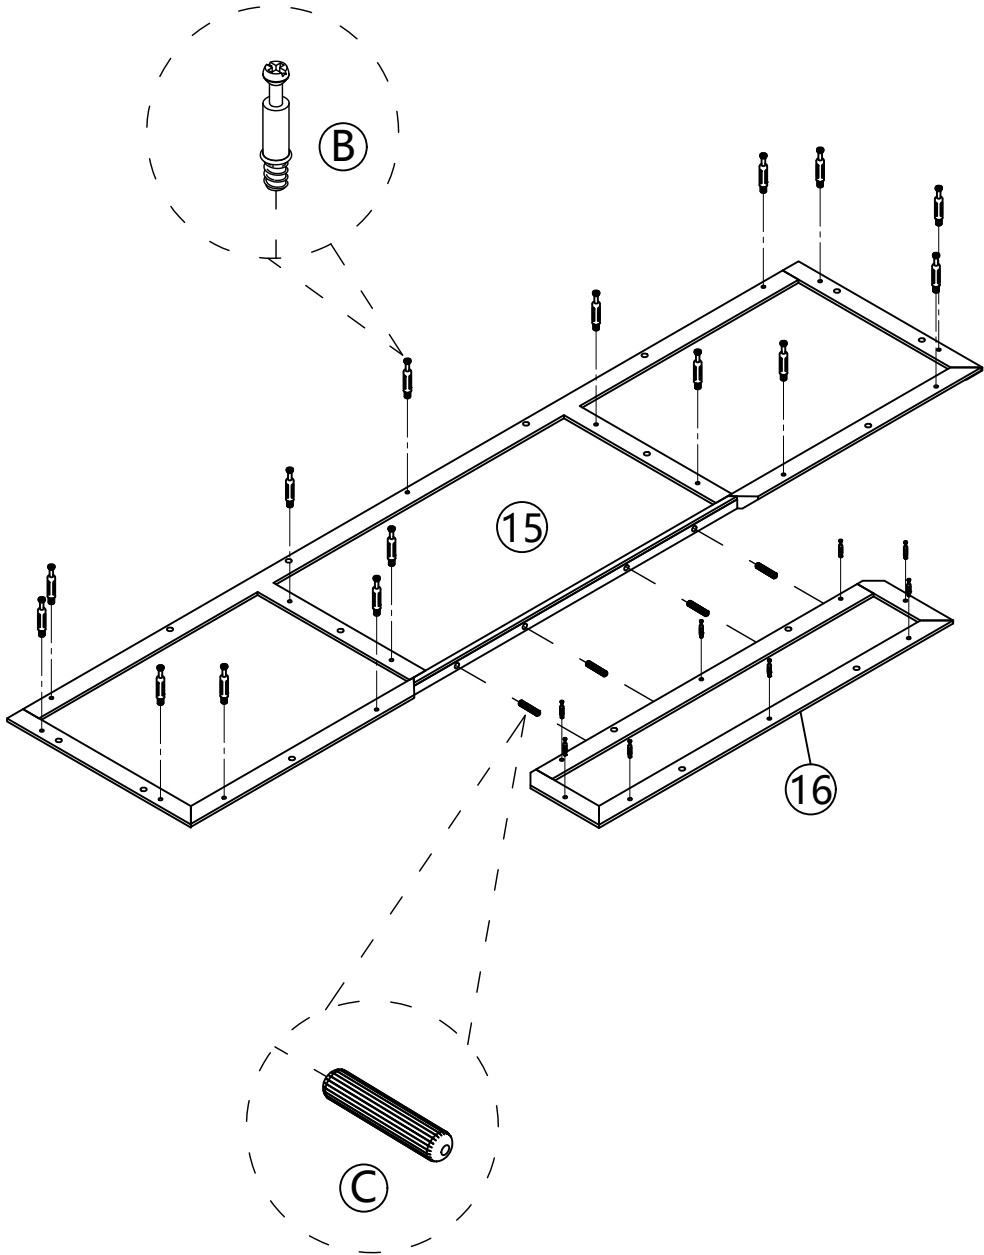


STEP 2


(B)	X12
	
ø6.5*35	

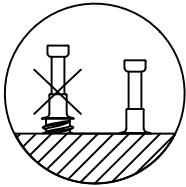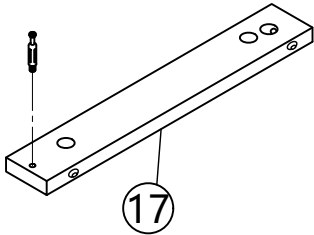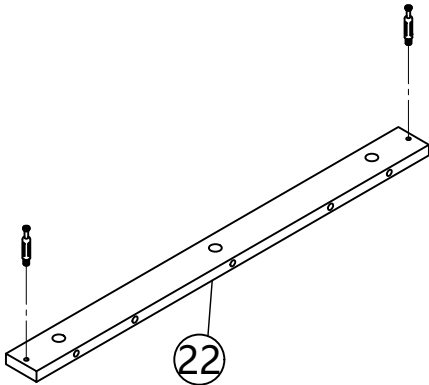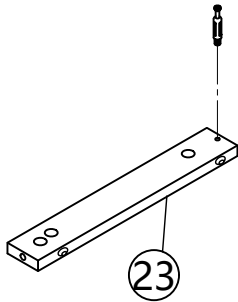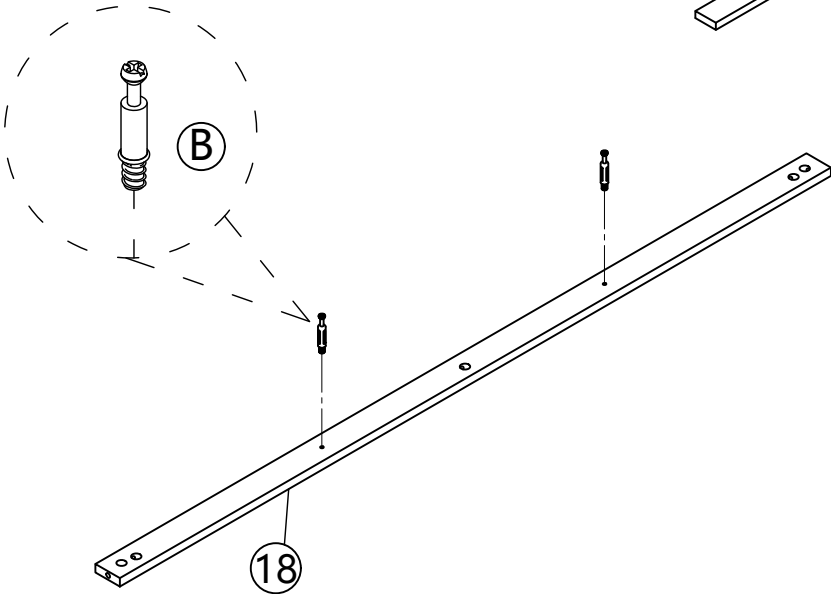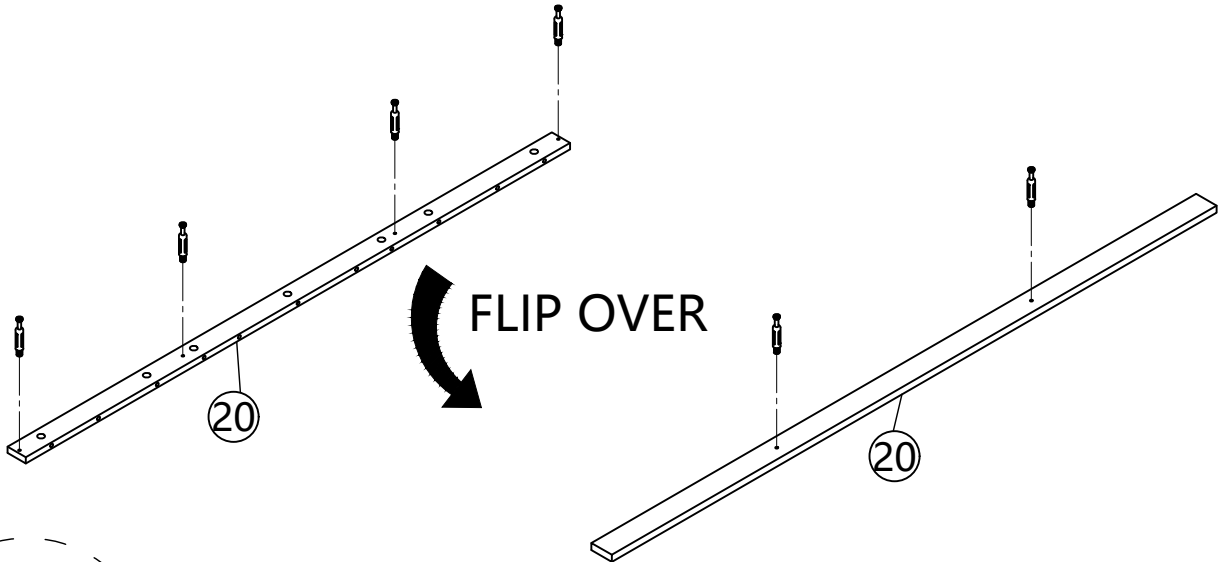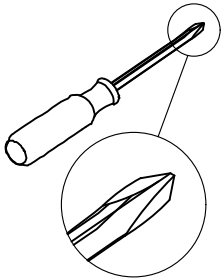

STEP 3

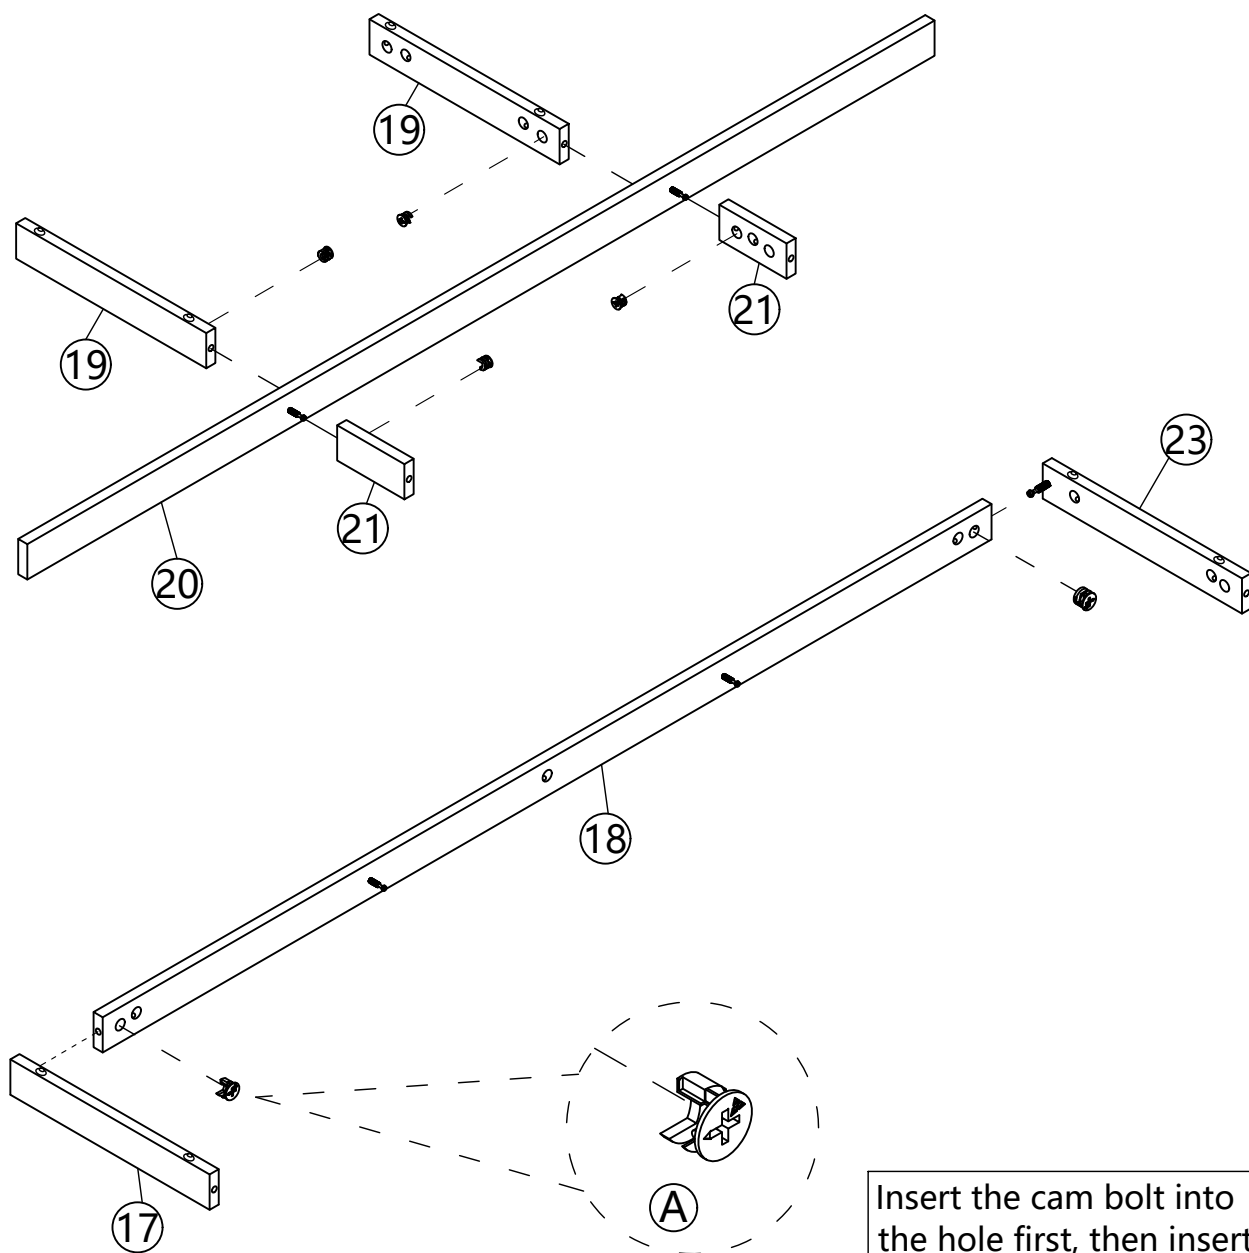
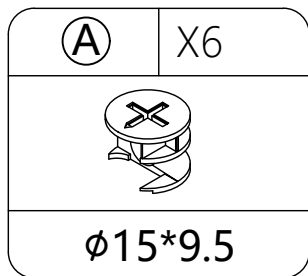
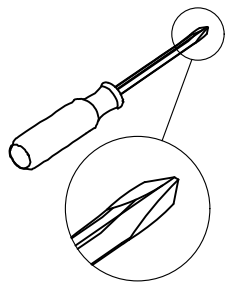


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

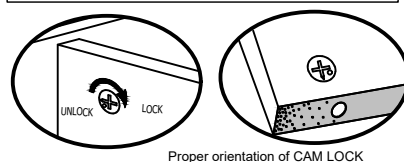


Proper orientation of CAM LOCK

STEP 4

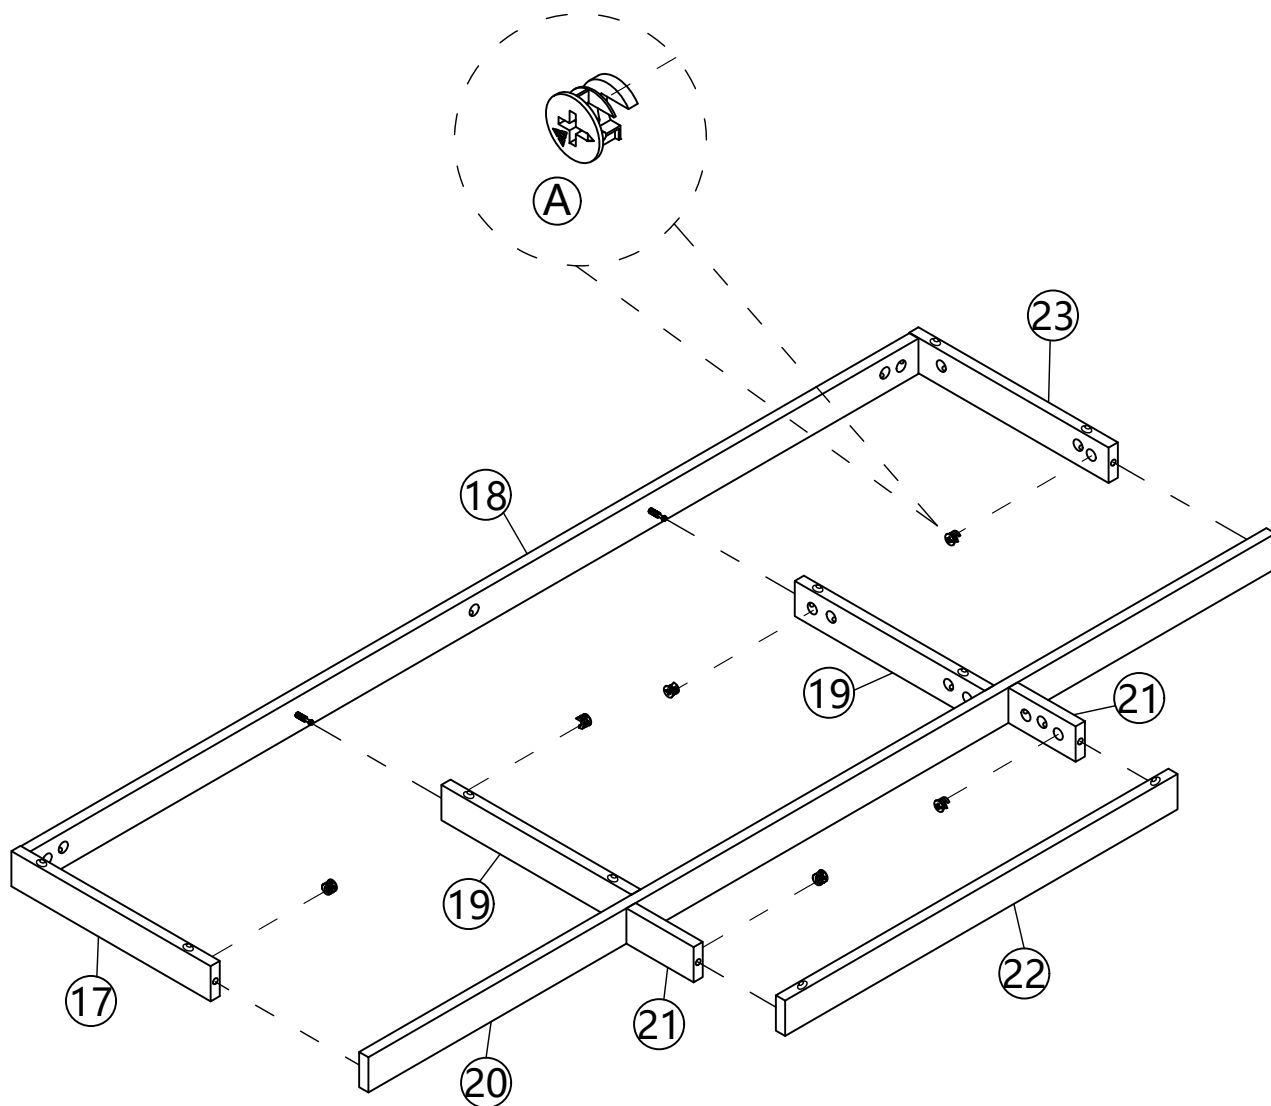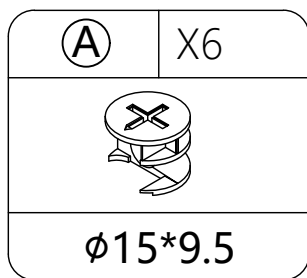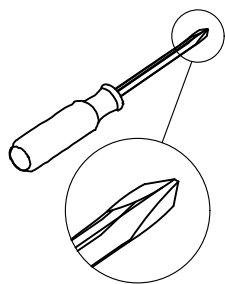


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

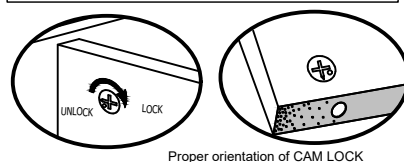


Proper orientation of CAM LOCK

STEP 5

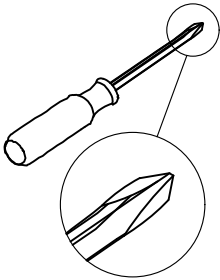


(A)	X23
	
ø15*9.5	







(C)	X16
	
ø8*30	

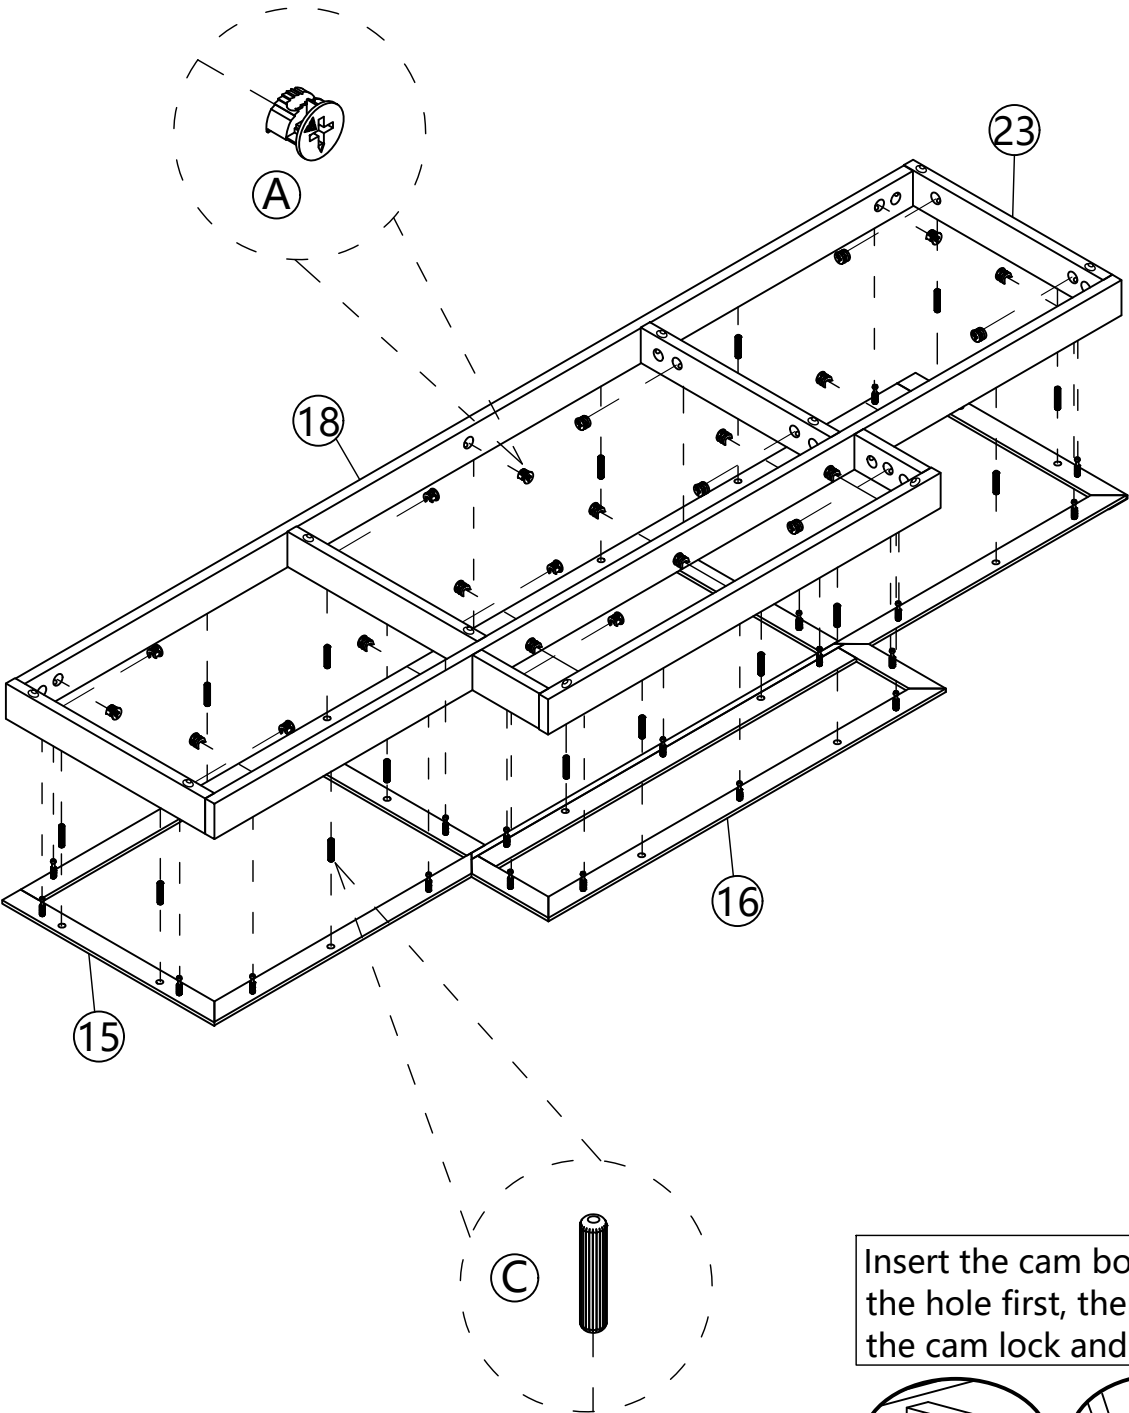


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

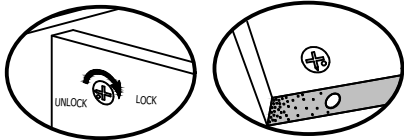

STEP 6

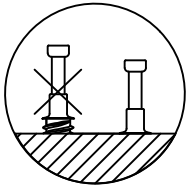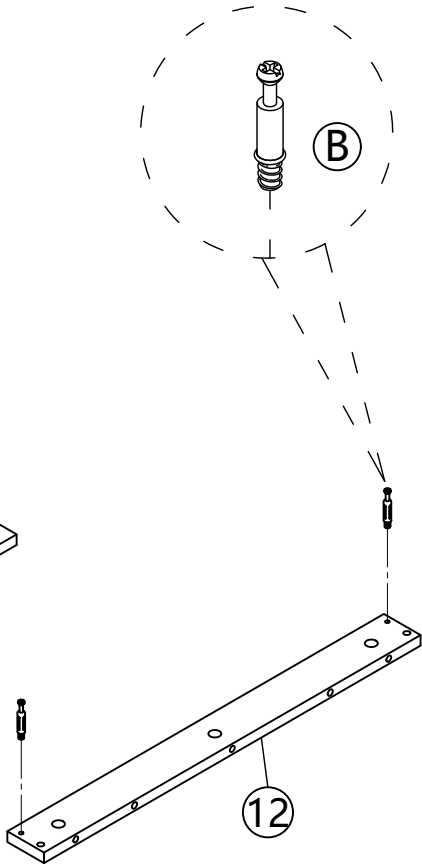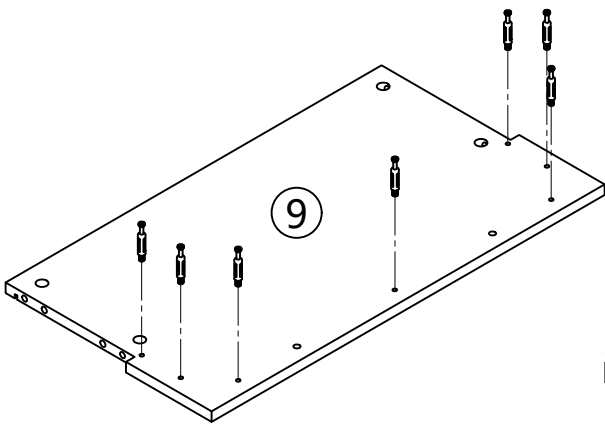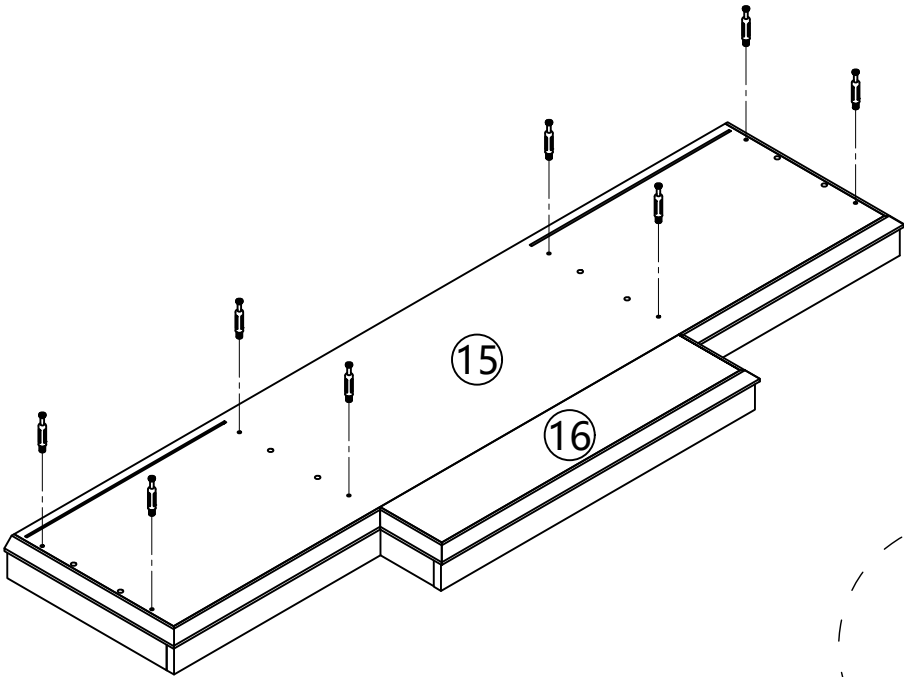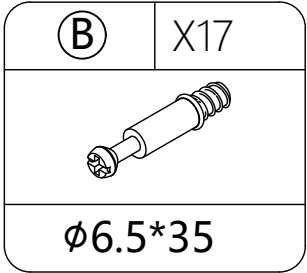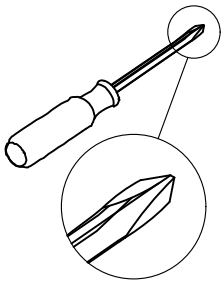


STEP 7

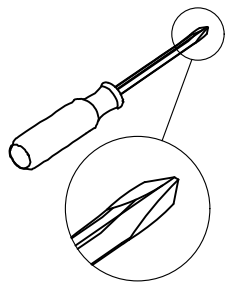


Ⓐ	X9
ø15*9.5	


Ⓒ	X4
ø8*30	

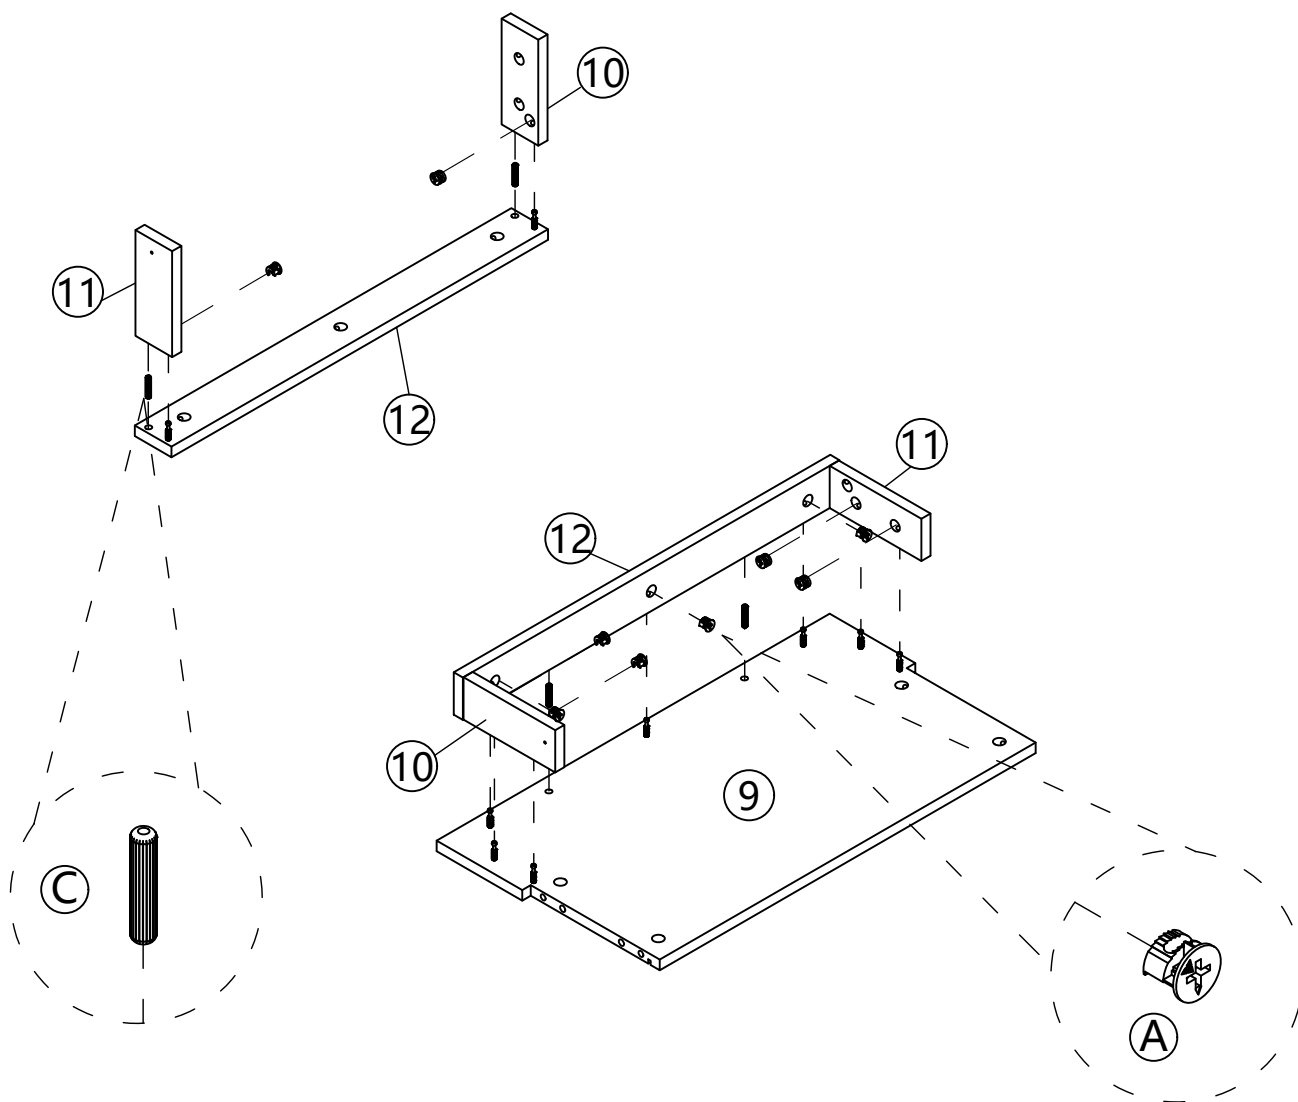



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

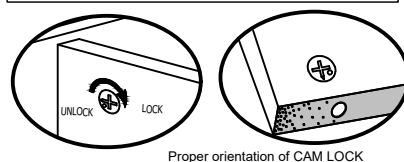



STEP 8

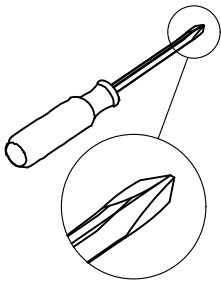



(B)	X8
	
ø6.5*35	

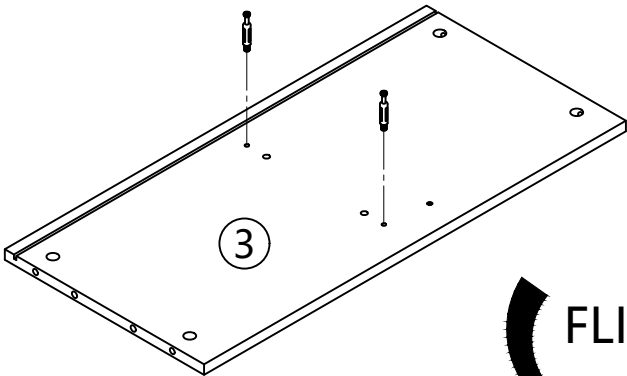








FLIP OVER

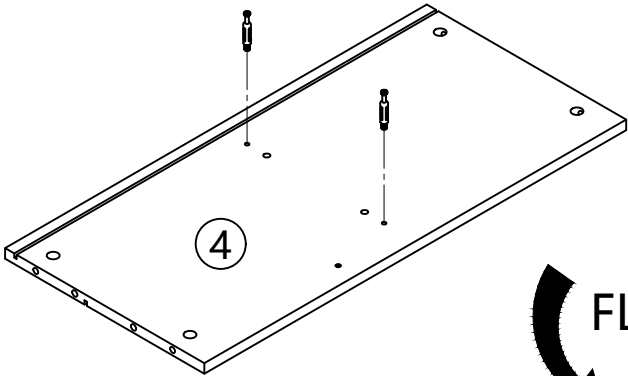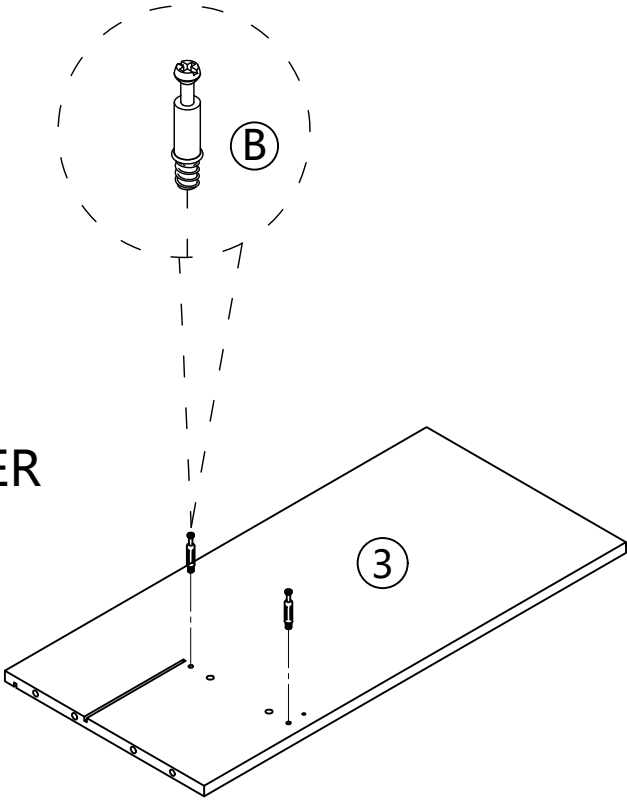


FLIP OVER

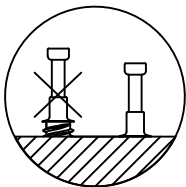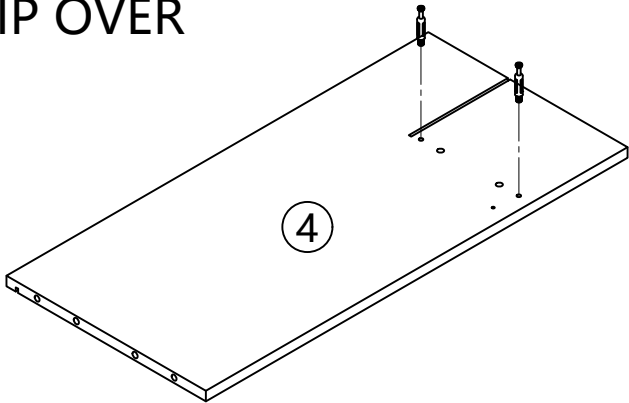

STEP 9

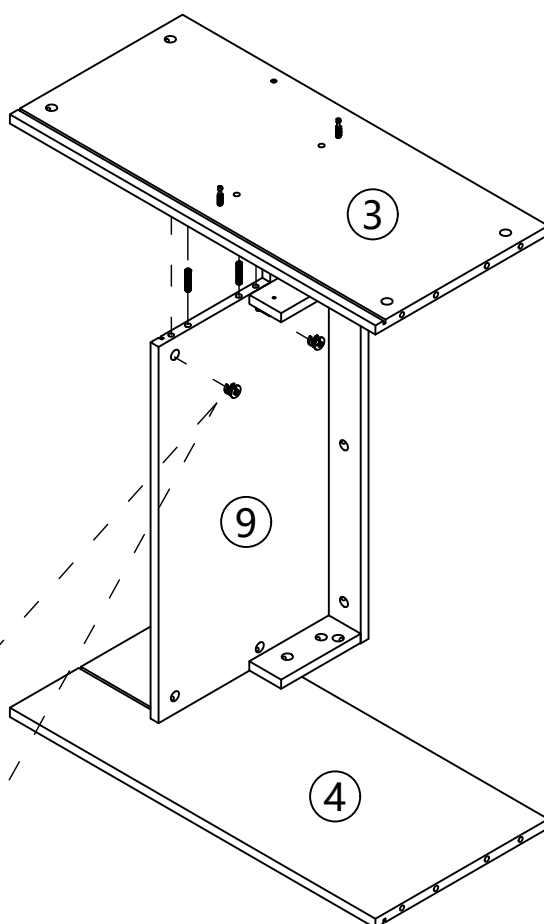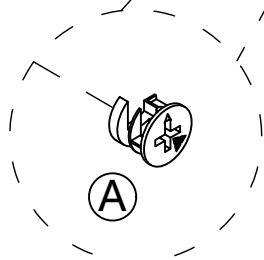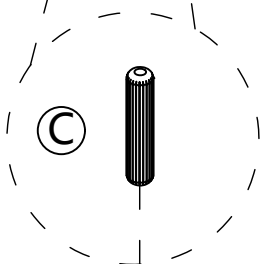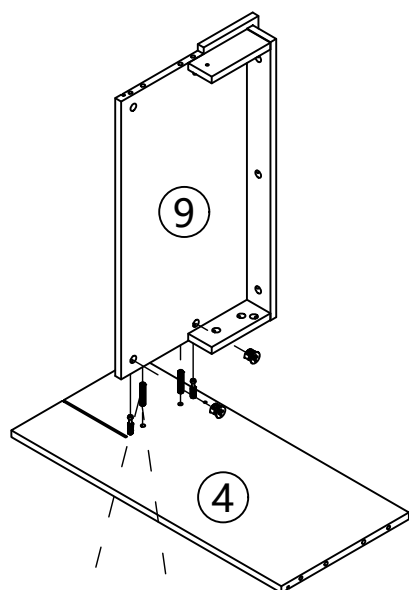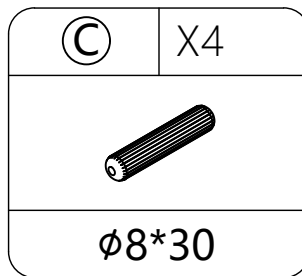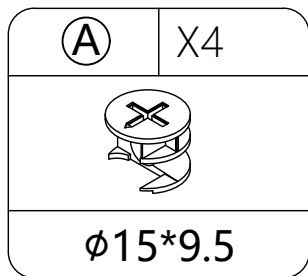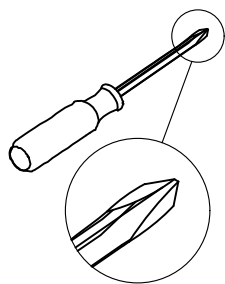


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

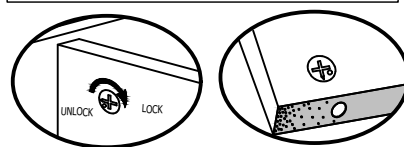

Proper orientation of CAM LOCK

STEP 10

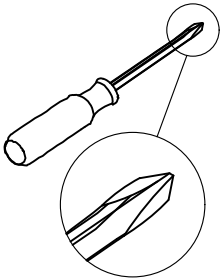


(A)	X8
$\phi 15 \times 9.5$	

(C)	X4
$\phi 8 \times 30$	

(B)	X12
$\phi 6.5 \times 35$	





(F)	X8
$\phi 3 \times 12$	

(H)	X4
$\phi 46 \times 23 \times 17$	

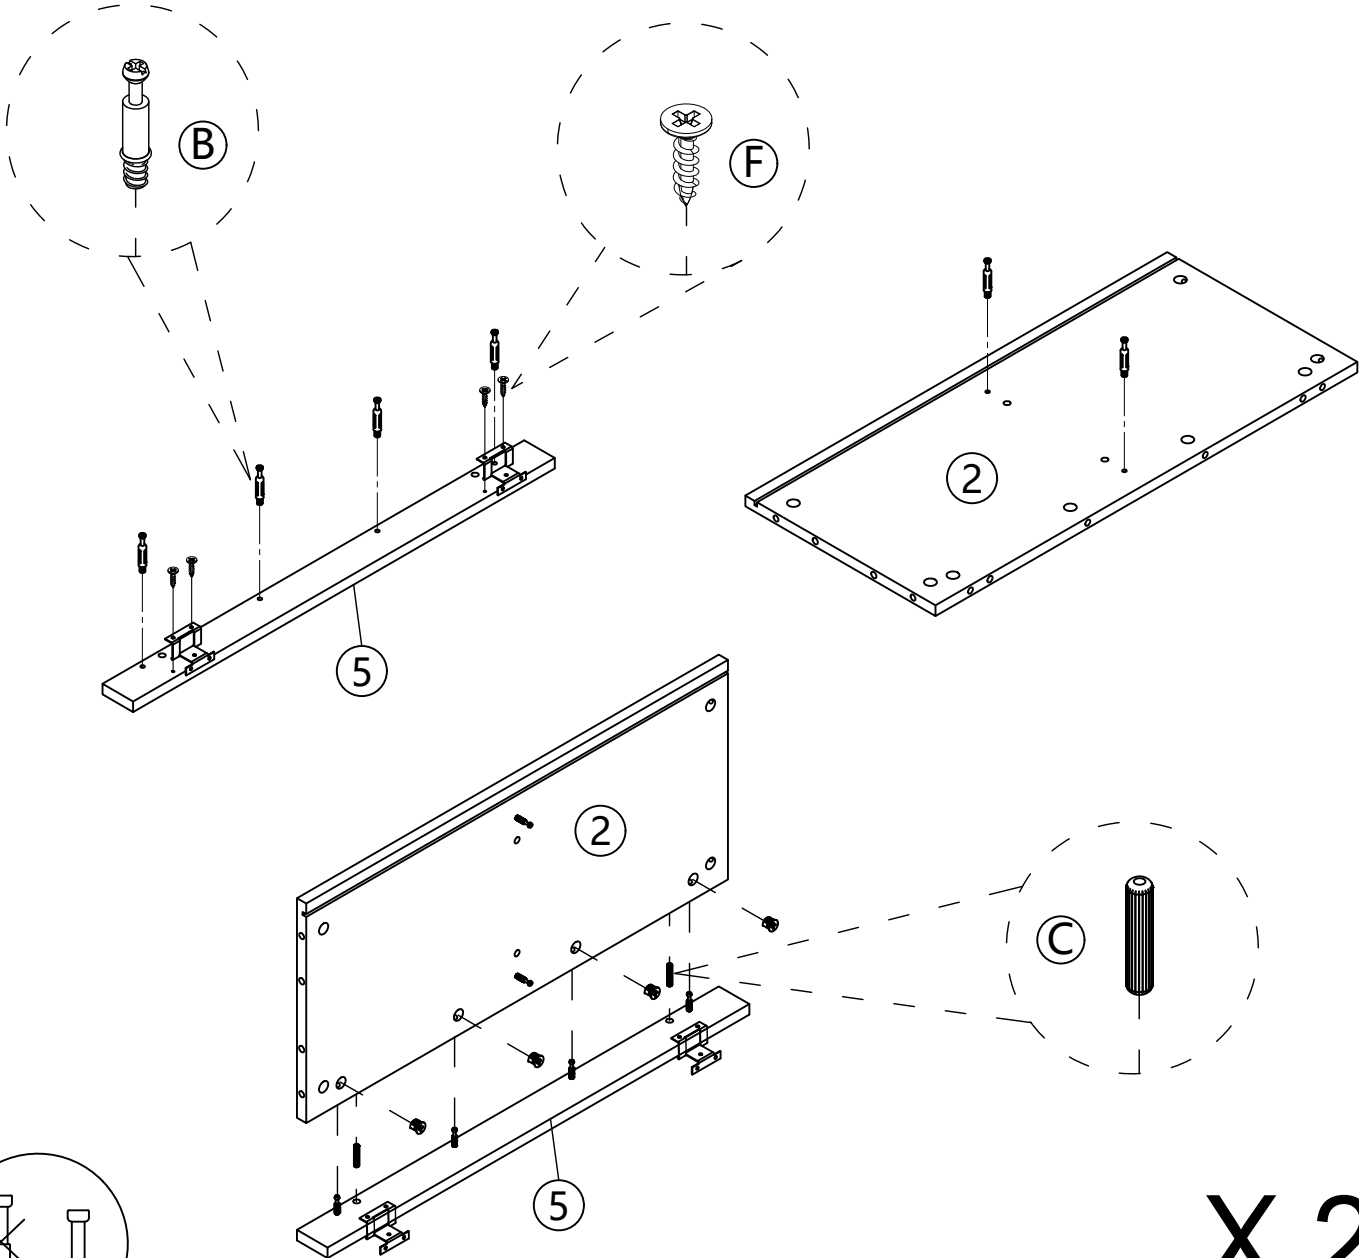


X 2


STEP 11

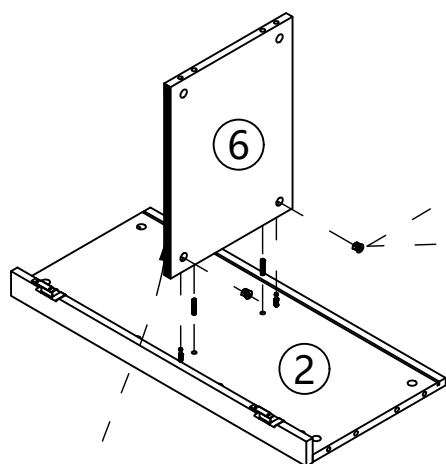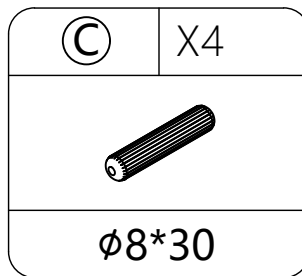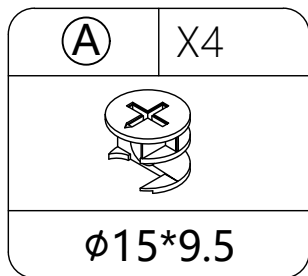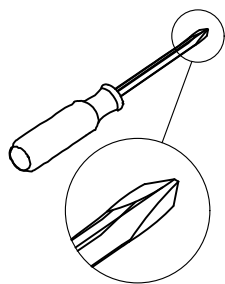


Edge banding

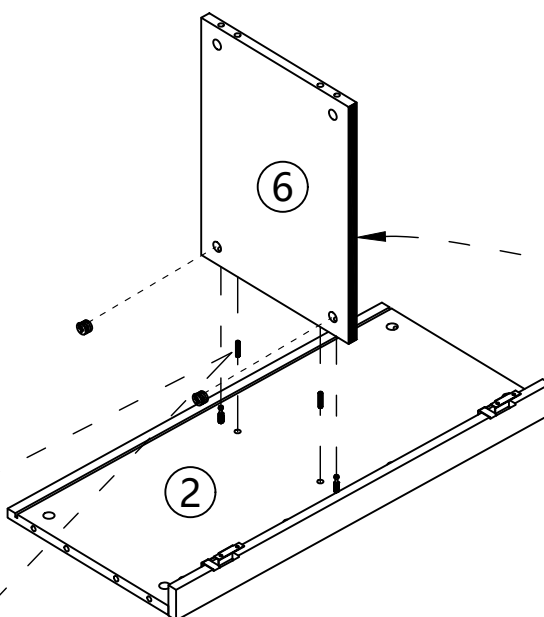

Edge banding

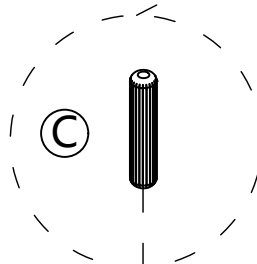


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

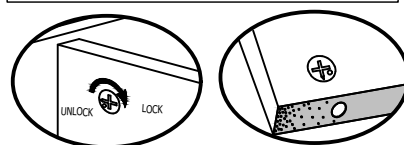


Proper orientation of CAM LOCK


STEP 12

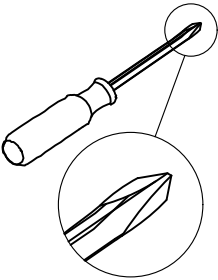


Ⓐ	X4
	
ø15*9.5	

Ⓒ	X4
	
ø8*30	

⓪	X2
	
ø4*25	






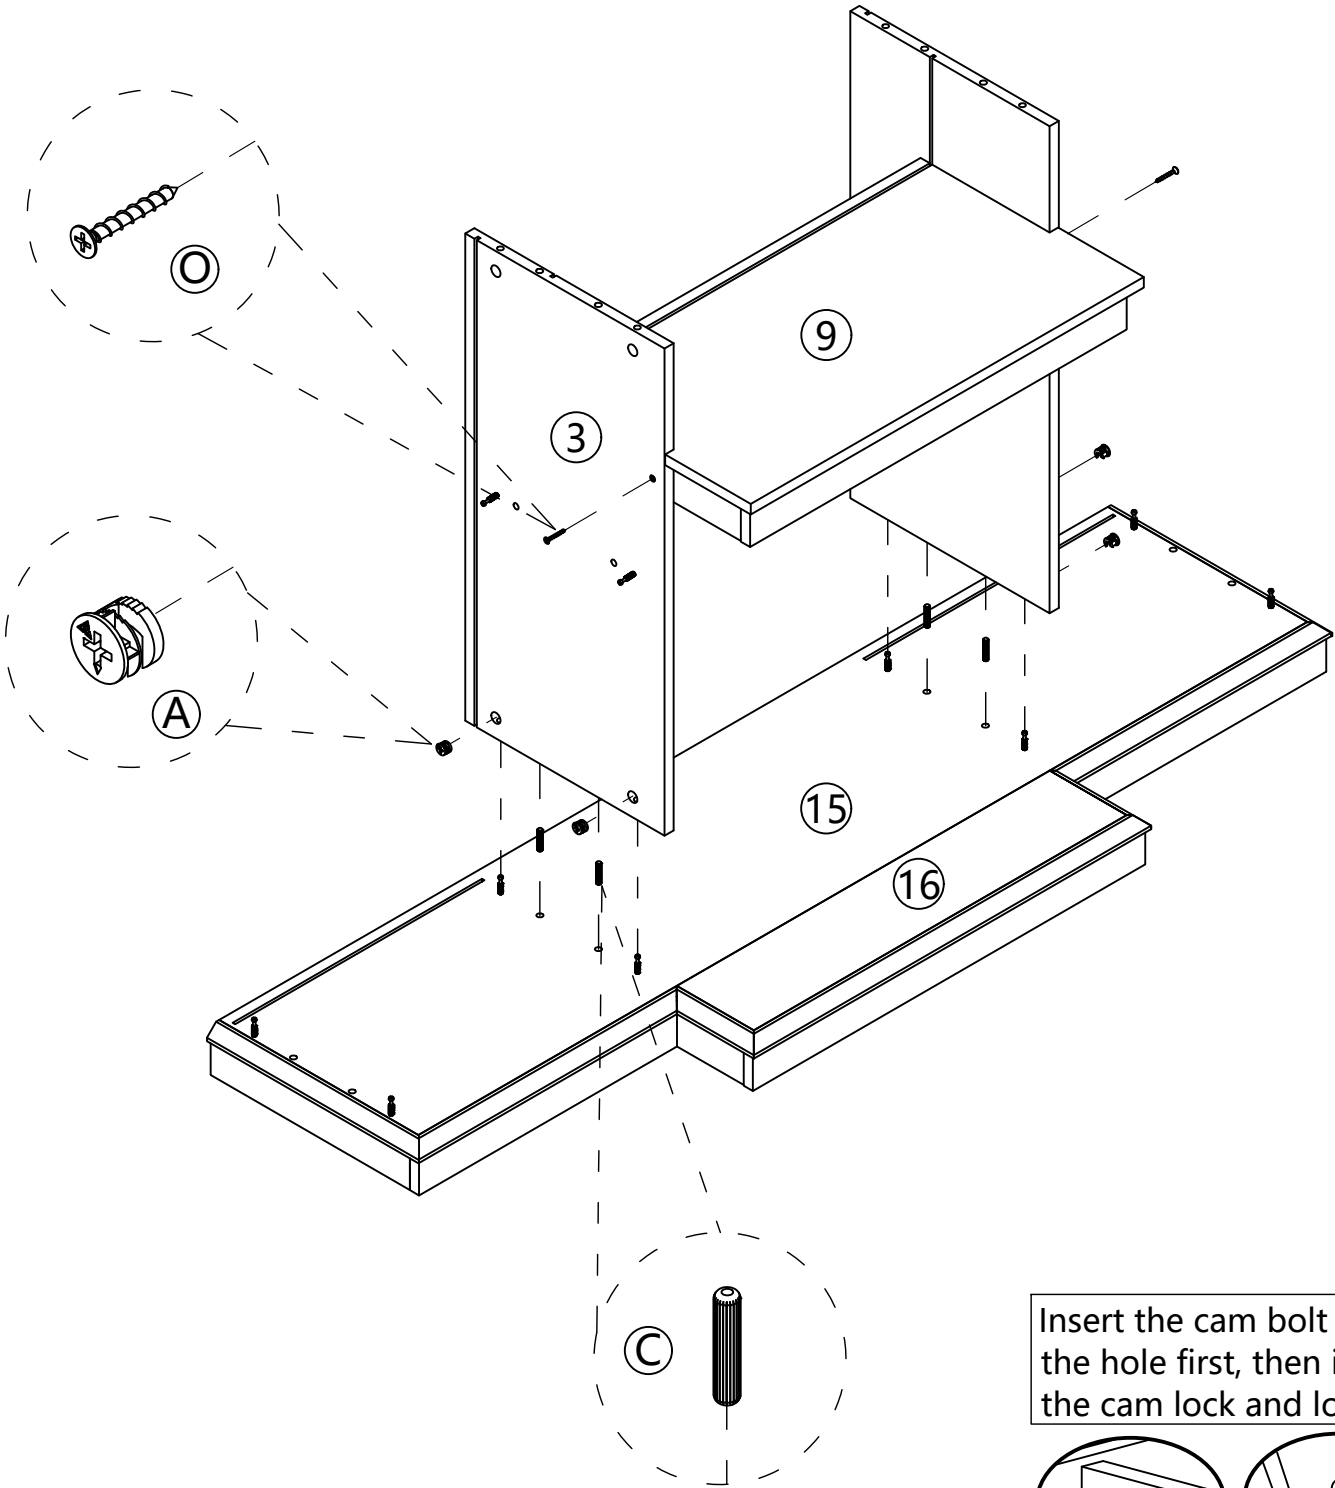


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

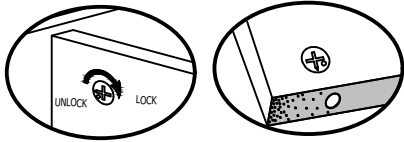


Proper orientation of CAM LOCK

STEP 13

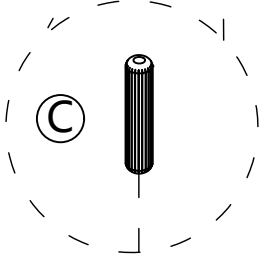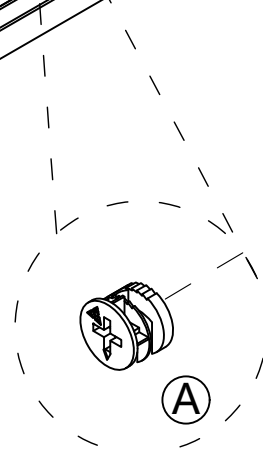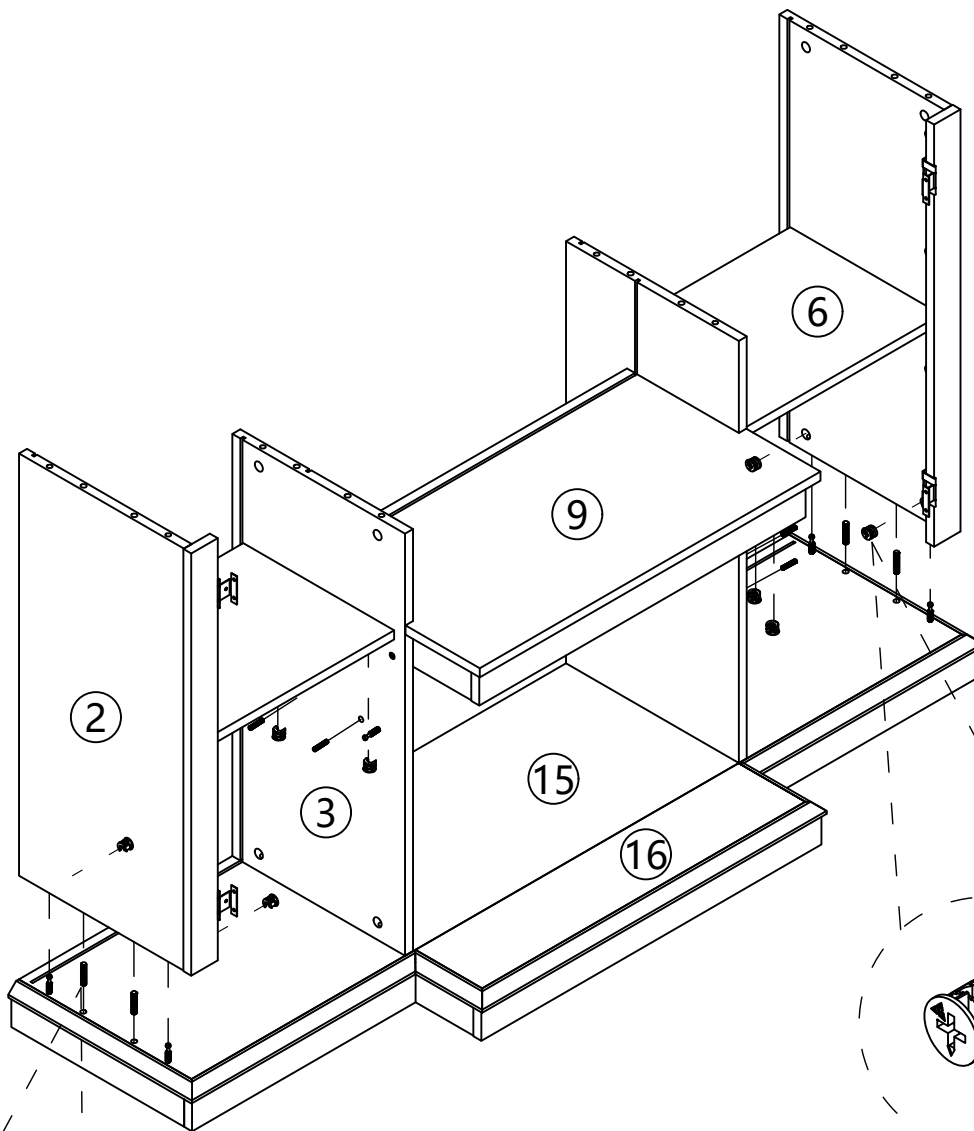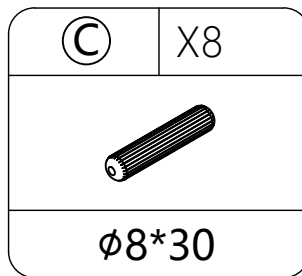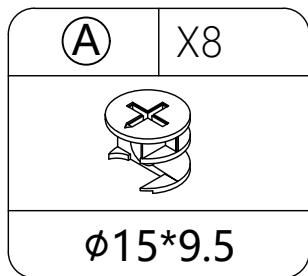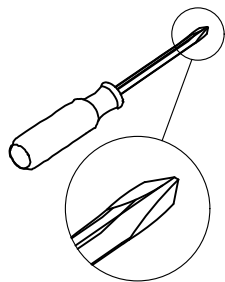


After the 2 plates are connected to the 15 plates, they need to be tilted outward, and the 6 plates are connected to the 3 plates.

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

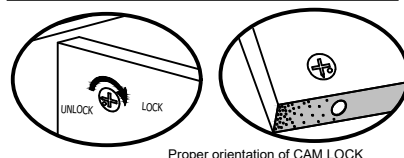


Proper orientation of CAM LOCK


STEP 14

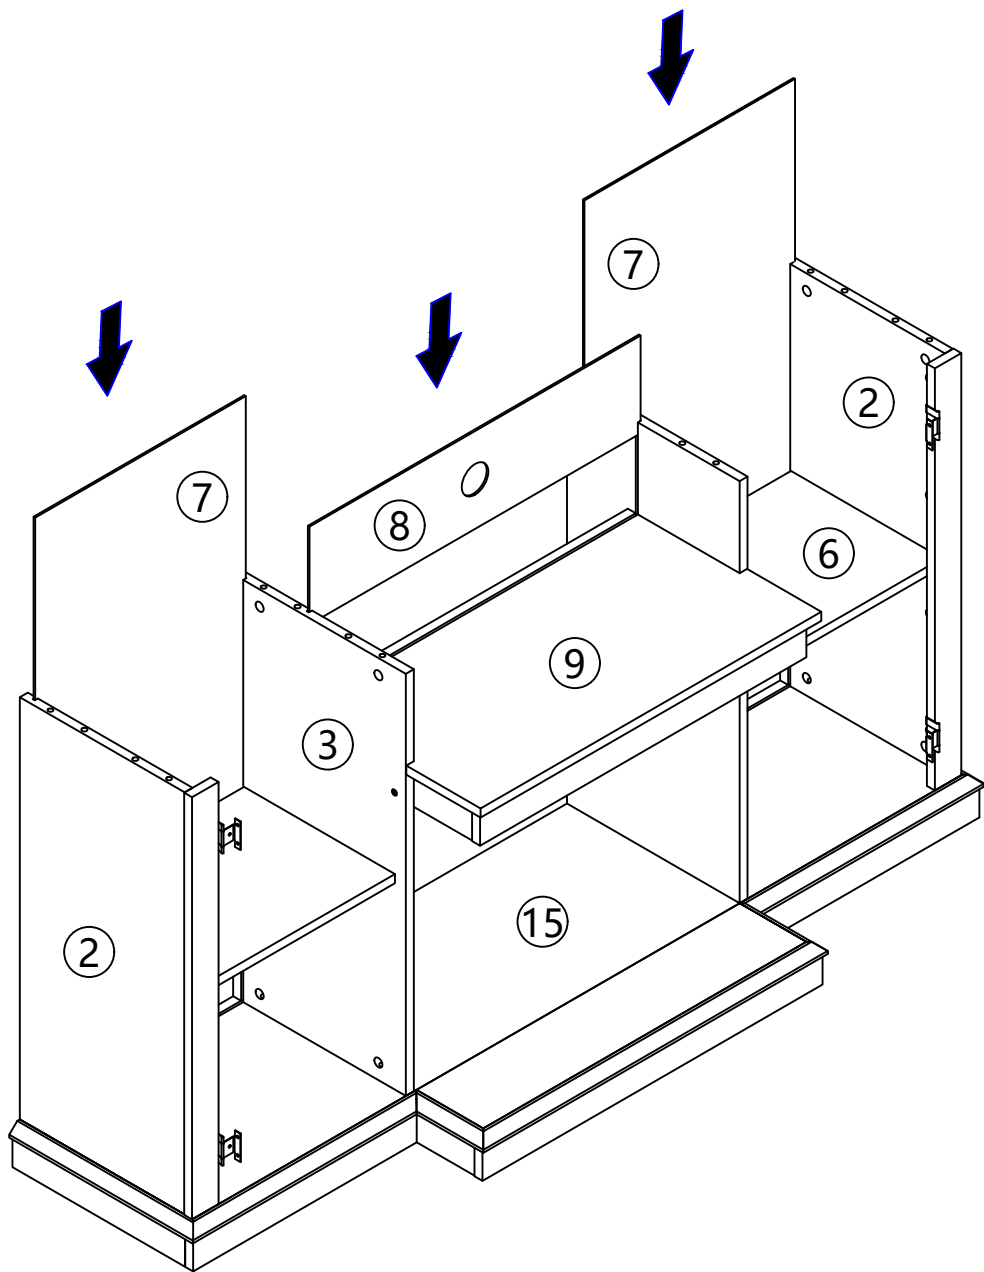


STEP 15

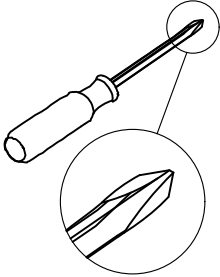


(A)	X8
	
ø15*9.5	


(B)	X8
	
ø6.5*35	

(C)	X8
	
ø8*30	


(G)	X4
	
ø3*16	

(I)	X2
	
46*15*14	


(N)	X1SET
	

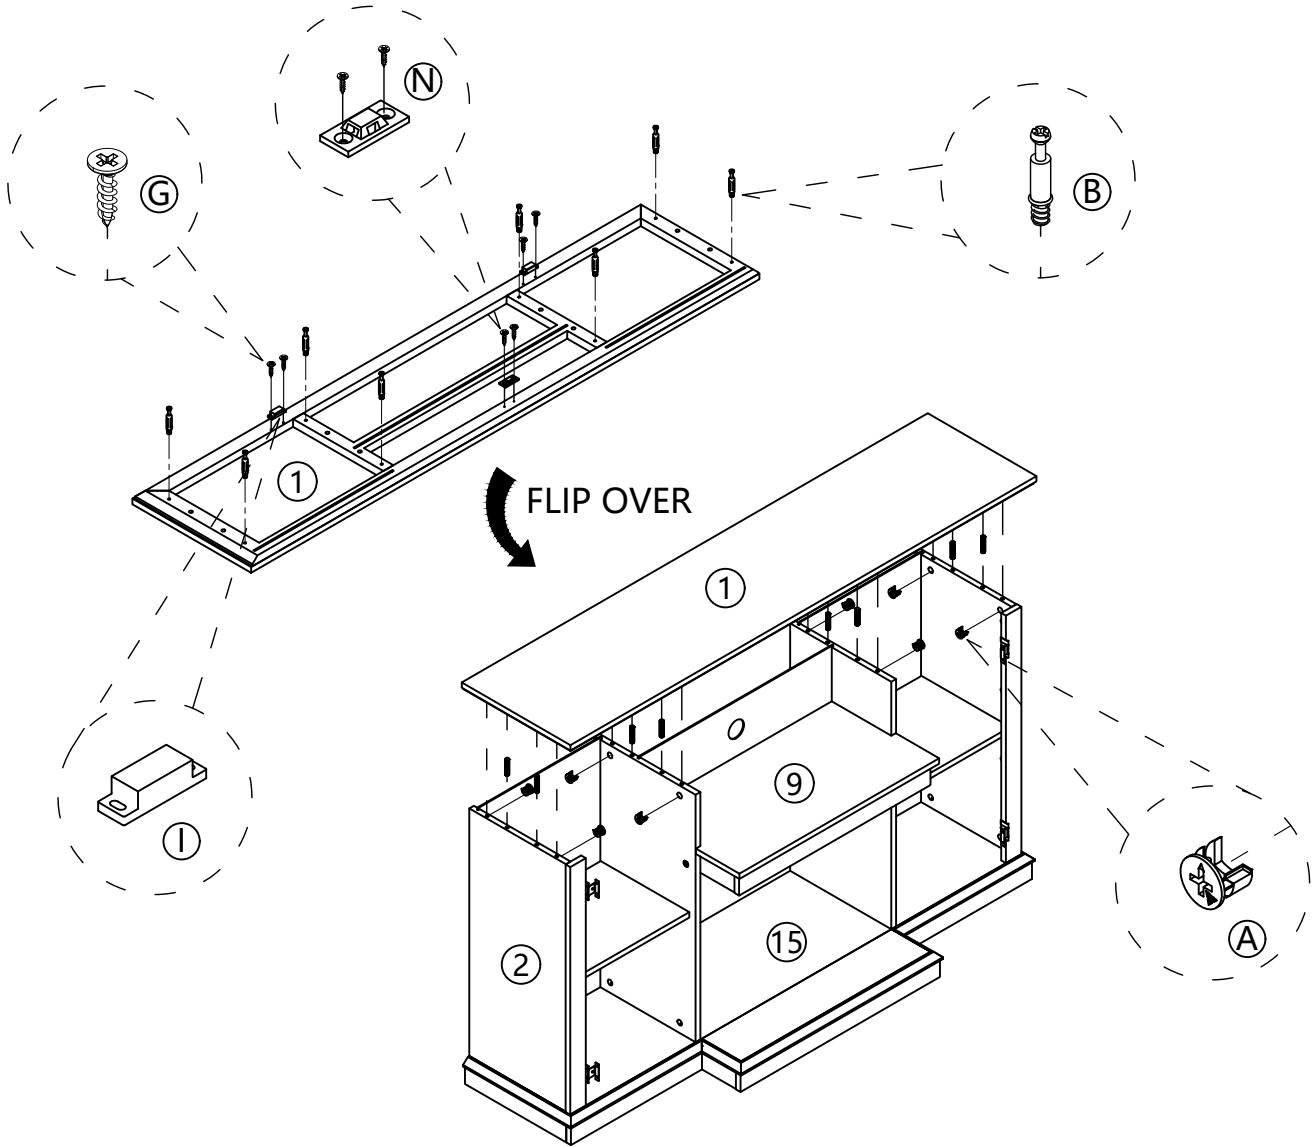


STEP 16

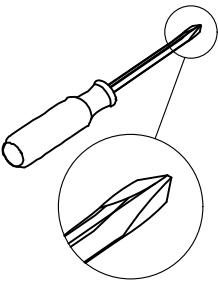





Ⓓ	X4
	
ø3*12	

Ⓔ	X2
	
M4*19	


Ⓕ	X12
	
ø3*12	

Ⓙ	X2
	
45*12	




Ⓚ	X2
	
62*14*31	

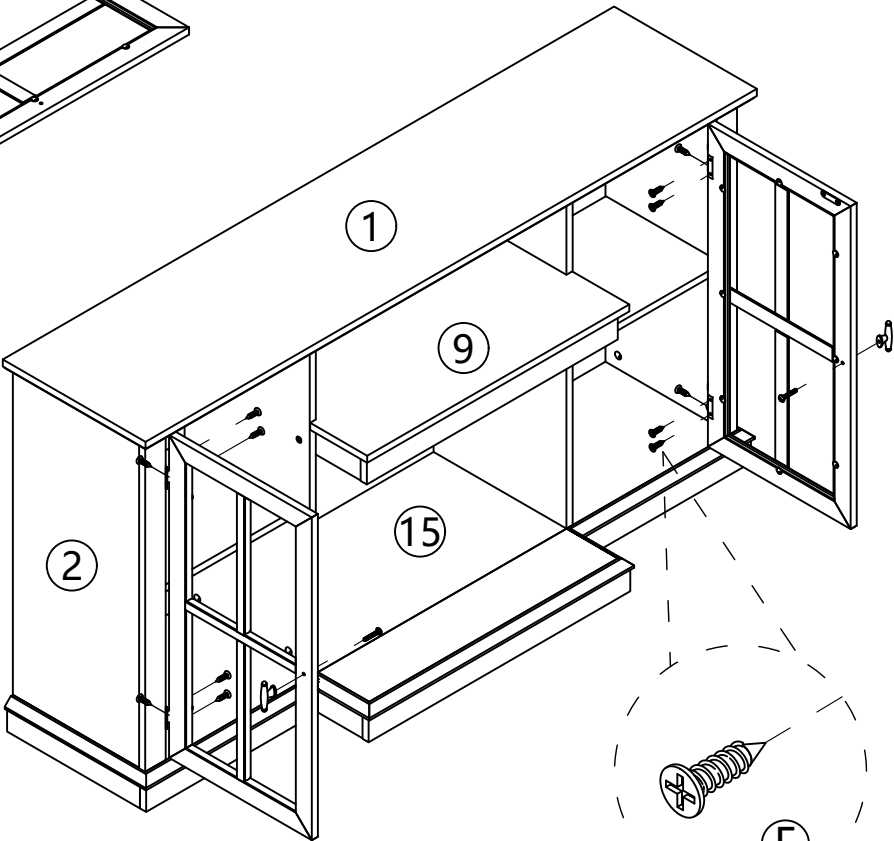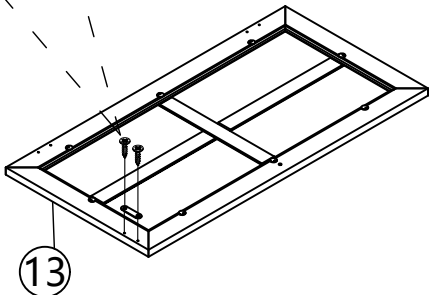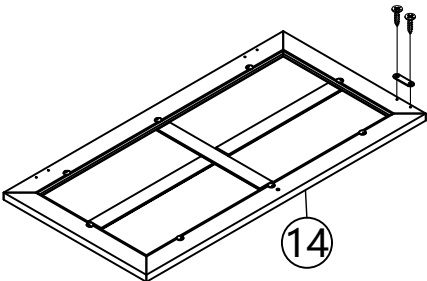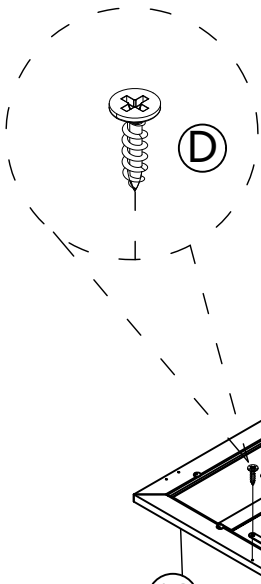


STEP 17

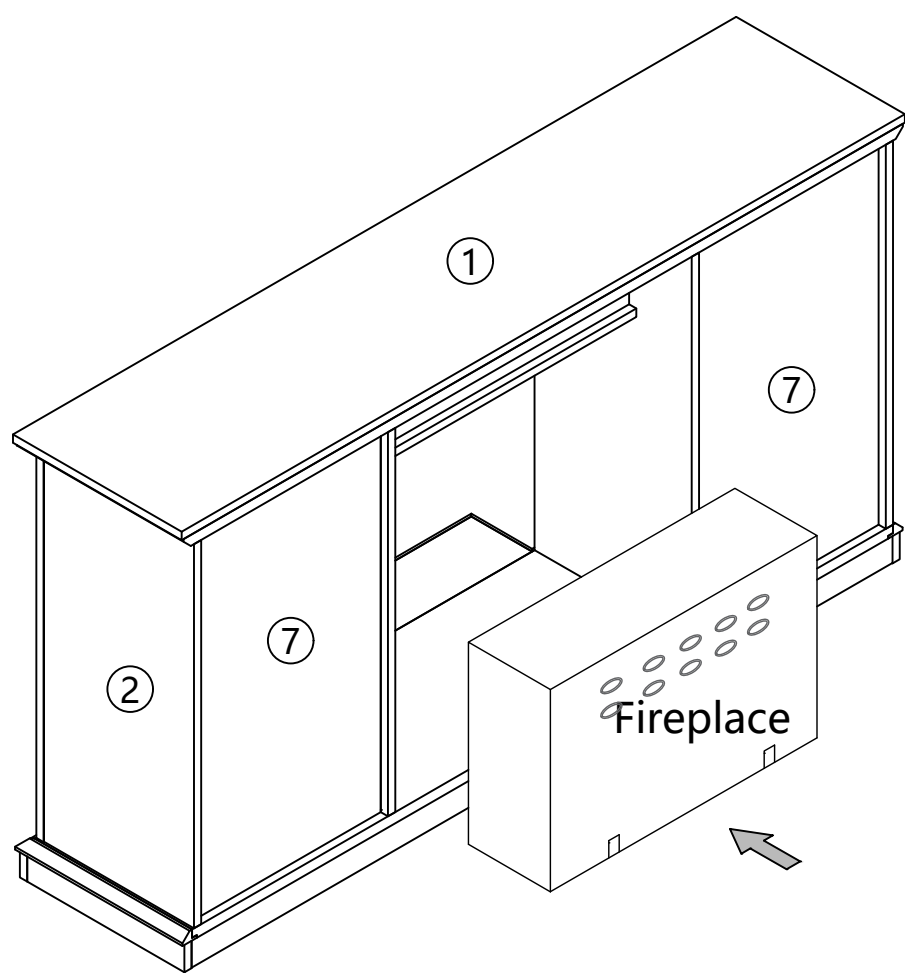

STEP 18

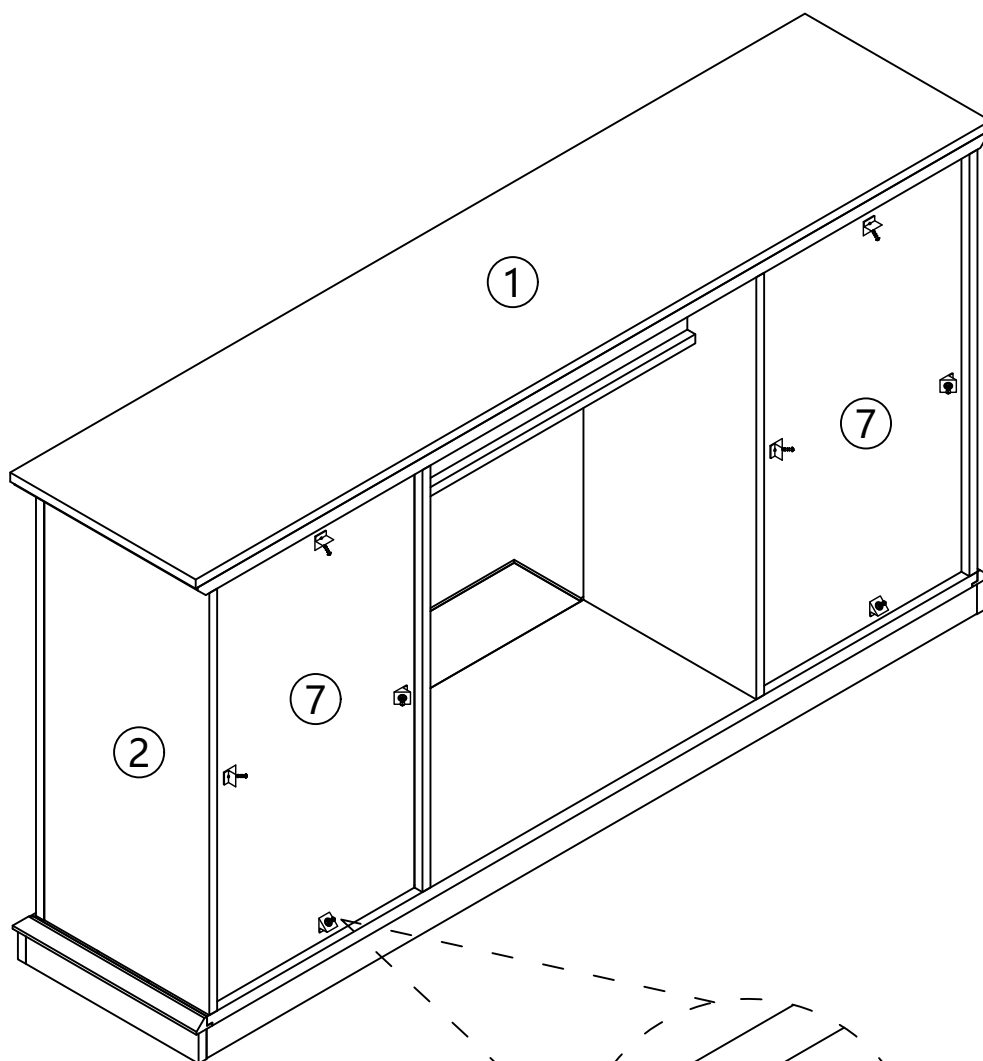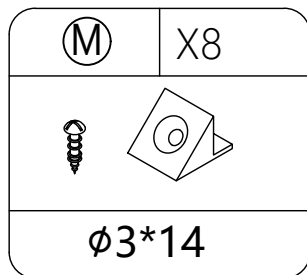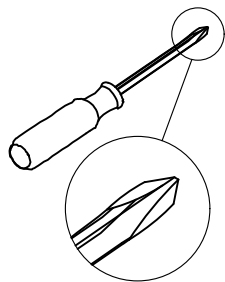


FINISH!


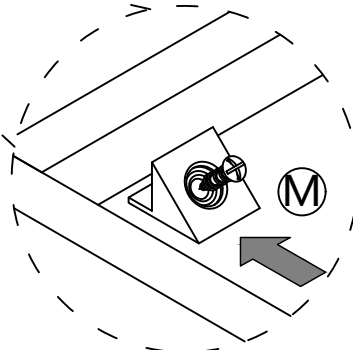


Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.


STEP 19

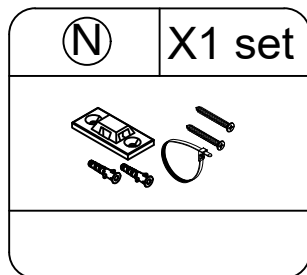


Install the tipping restraint hardware

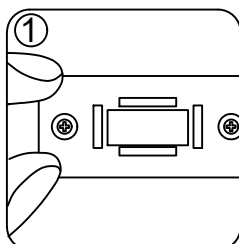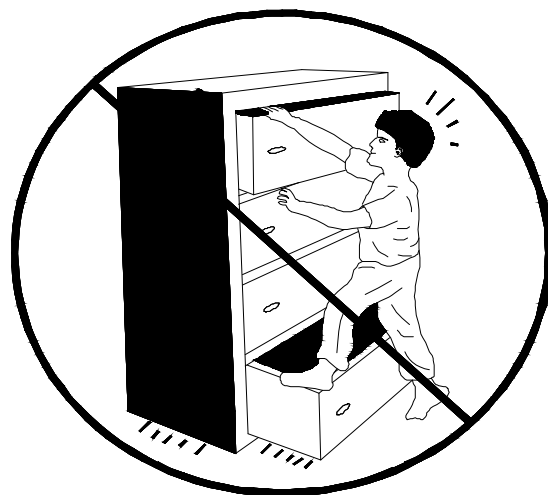


1. make mark on the wall

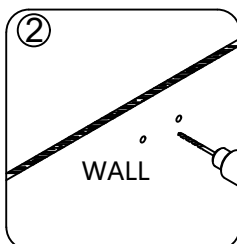


2. drill two $\phi 6$ holes on the wall

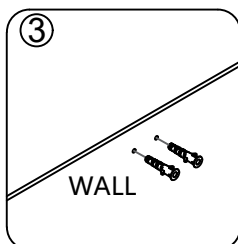

3. put two anchors in the holes

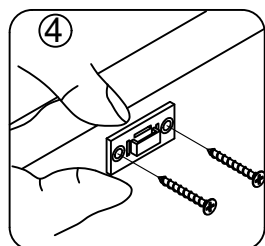

4. fix the device on the wall by the long screws

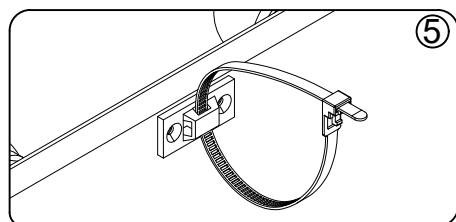

5. Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

