
Tribesigns

DESIGNED FOR LIFE

Assembly Instructions

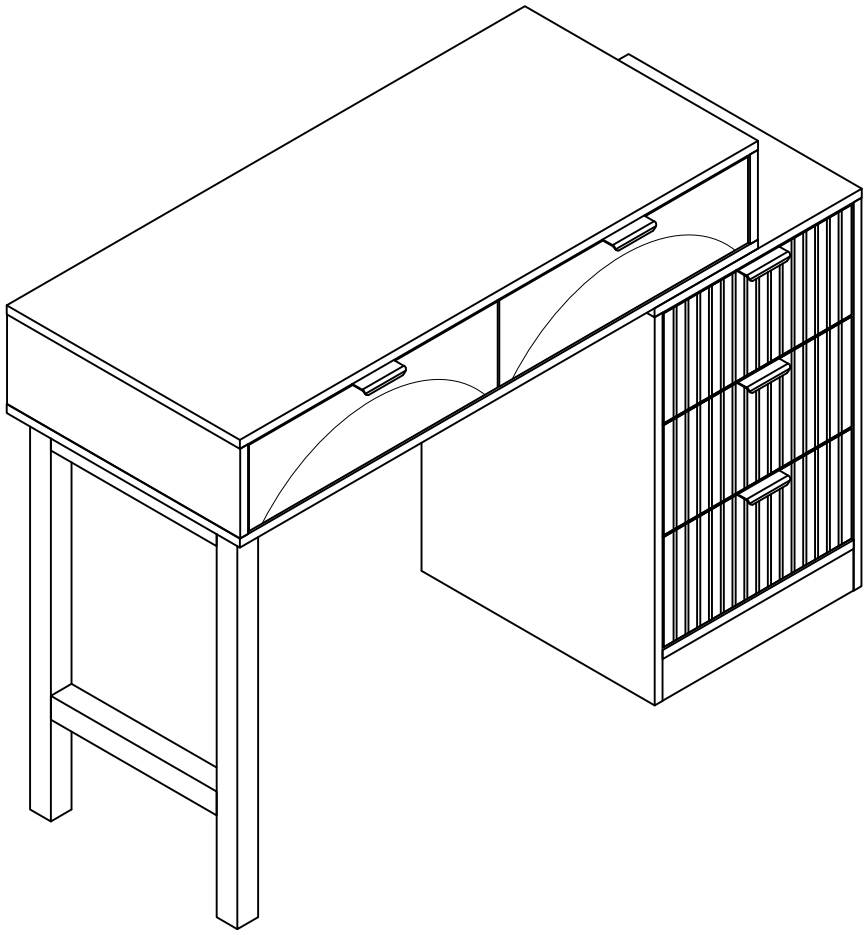


Computer desk

Model No.
HOGA-RY0177

LITTLE TREE
Little Tree by Tribesigns

www.tribesigns.com

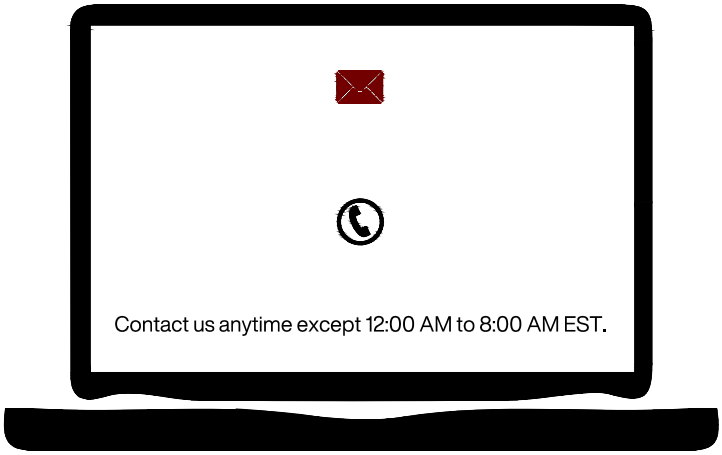


Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.


Step 1 Scan the QR code.

Installation Video


Step 2 Search with the Model No.
(on the bottom left corner of the title page)

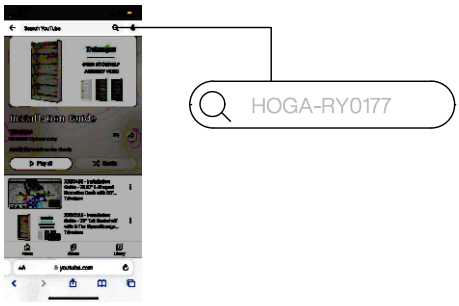

Note: If you can't find the assembly video, please contact us.

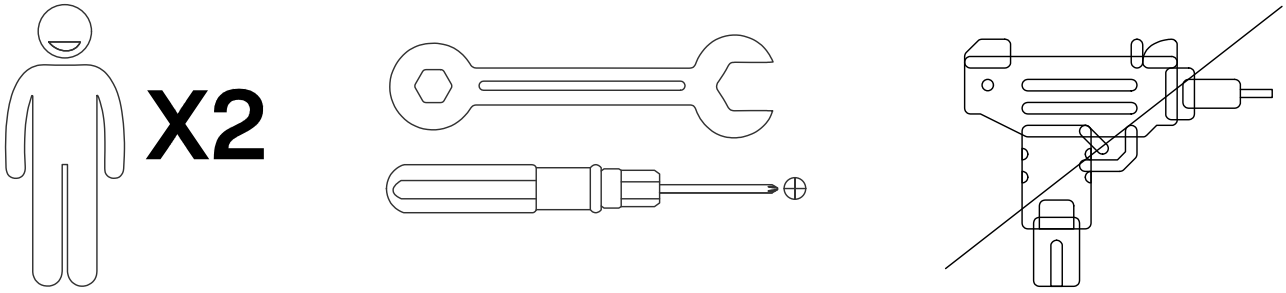



We recommend using hand tools for assembly.
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

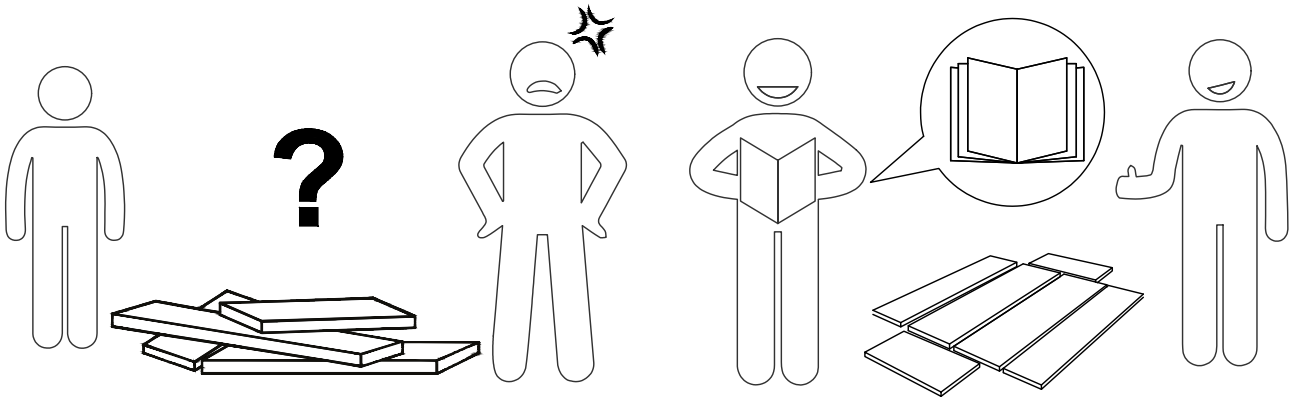

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

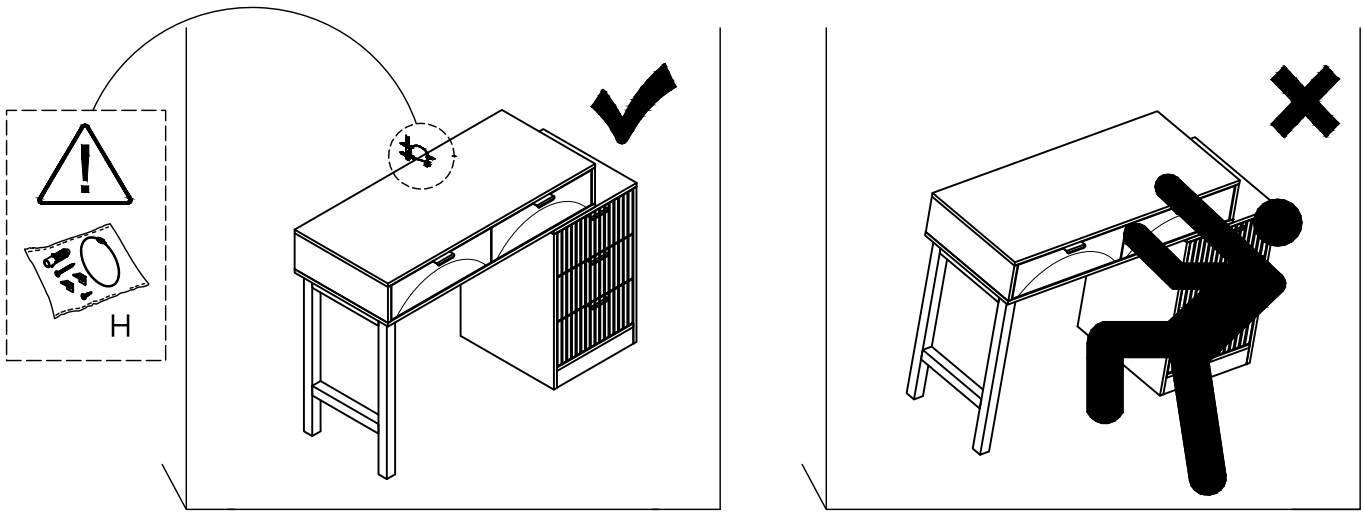


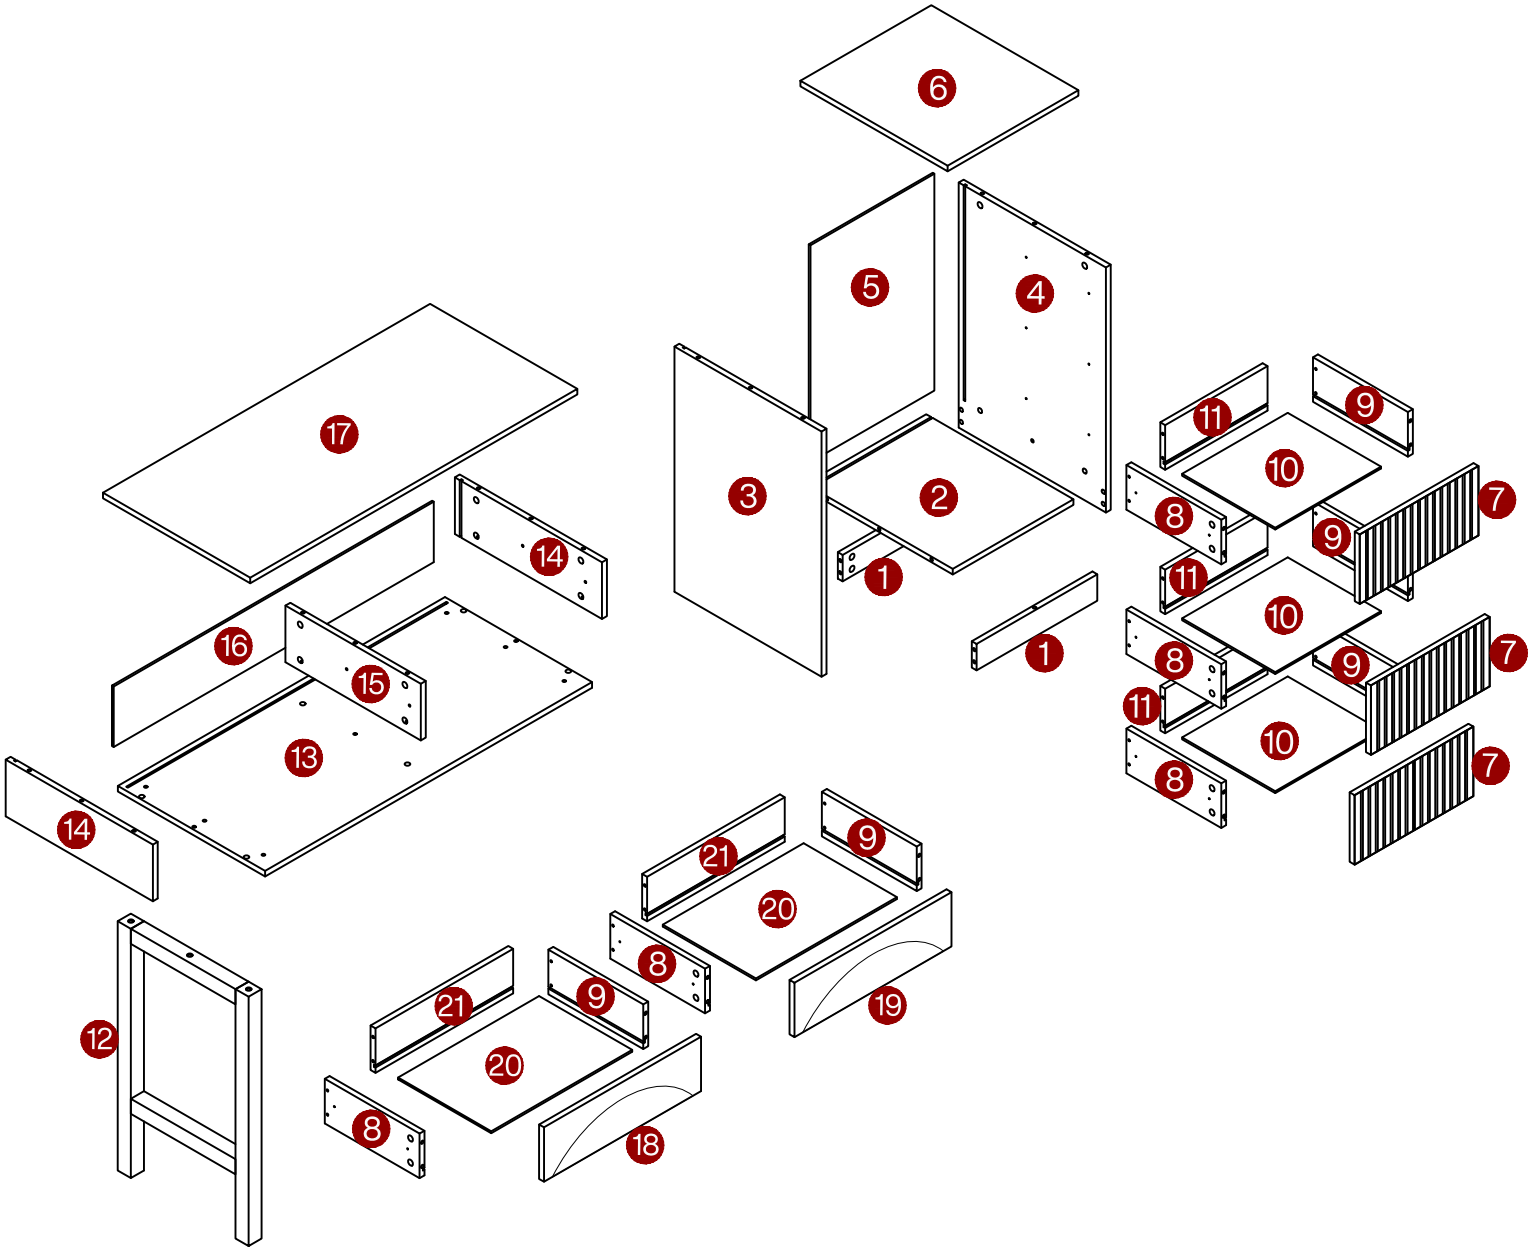


Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List




1 2pcs

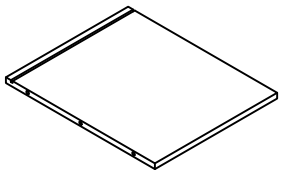


2 1pc

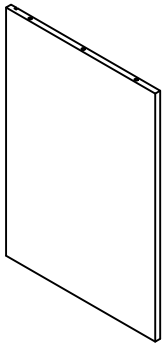


3 1pc

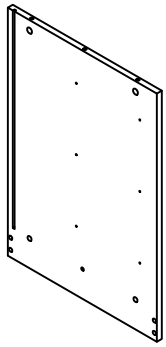


4 1pc

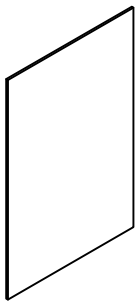


5 1pc

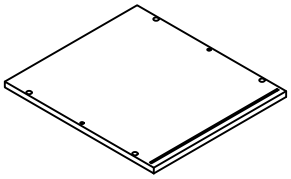


6 1pc

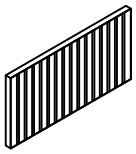


7 3pcs




8 5pcs




9 5pcs

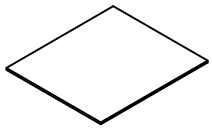


10 3pcs

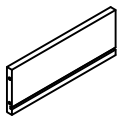


11 3pcs

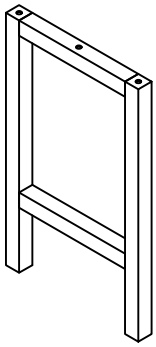


12 1pc

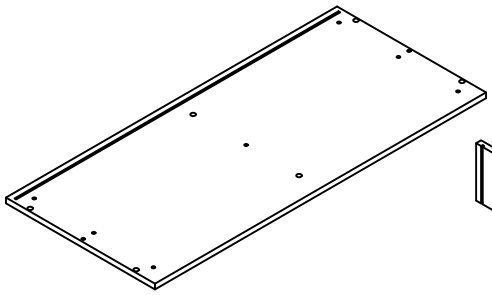


13 1pc

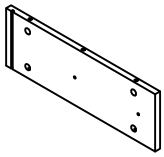


14 2pcs

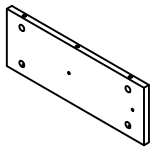


15 1pc

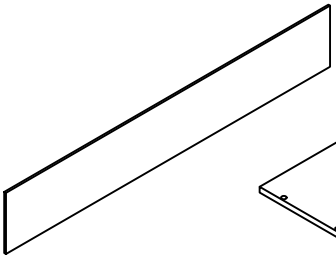


16 1pc

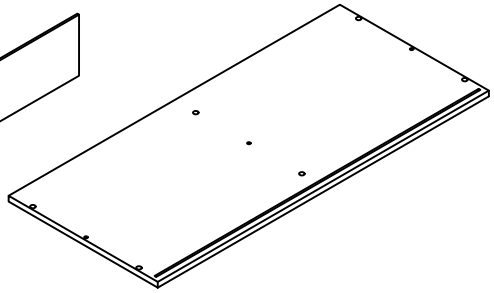

17 1pc

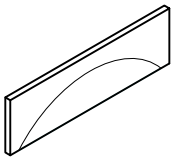


18 1pc

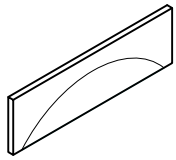


19 1pc

Parts List

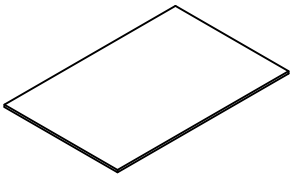

20 2pcs

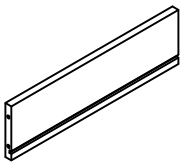

21 2pcs

Hardware List



A
50pcs



B
10pcs



C
3pcs




D
20pcs




E
58pcs



F
2pcs



G
5pcs

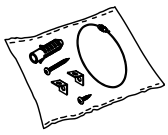

H
1pc




I
8pcs



J
5pcs



K
8pcs



1pcs




1pcs

L


Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

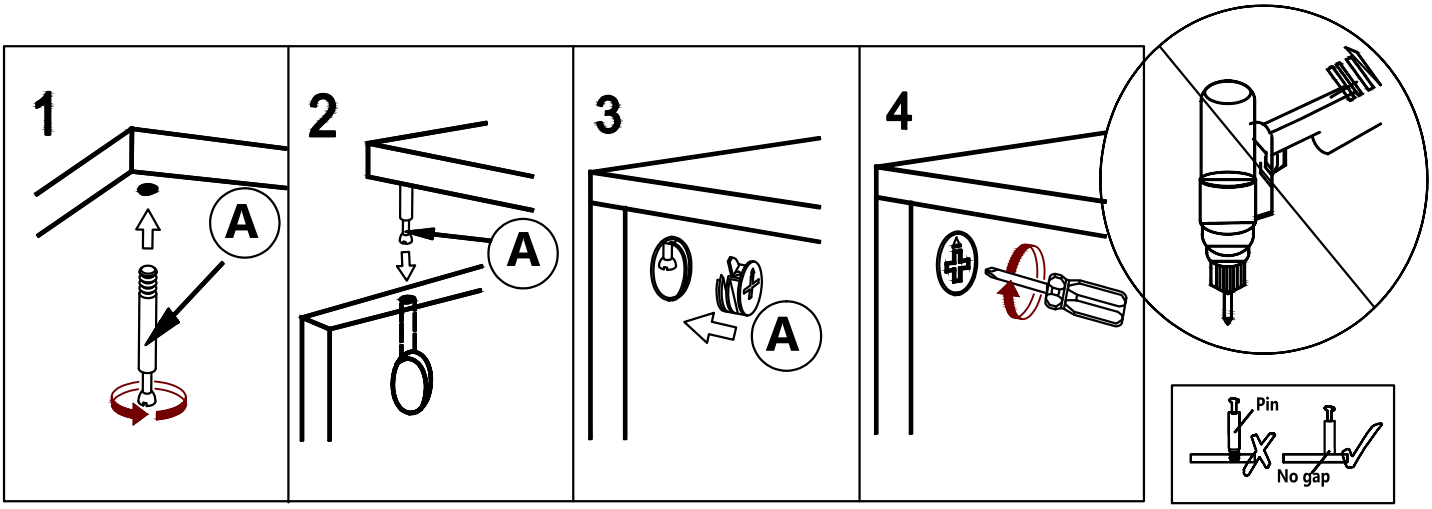


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

Three section guide rail diagram

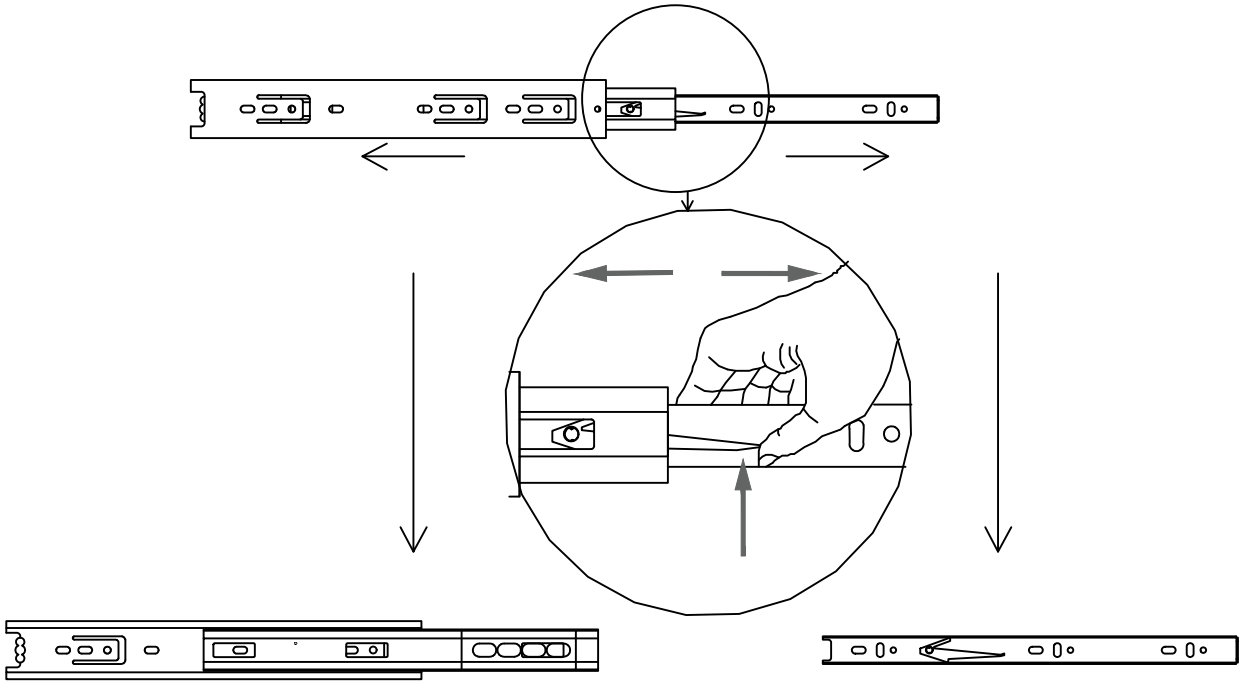


Disconnect the rail with the BLACK PLASTIC PART.
It needs to be pulled down to disconnect the runners.

1

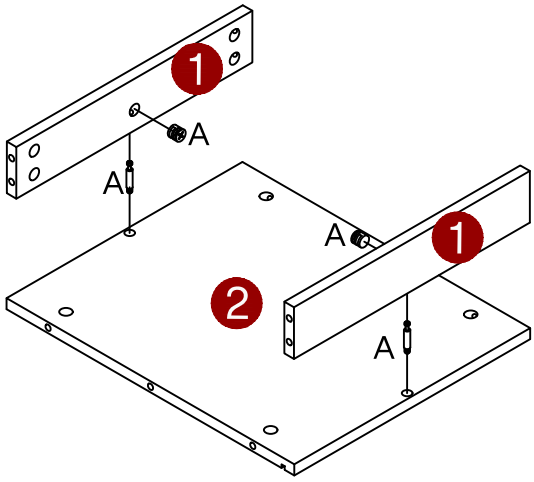





A
2 pcs

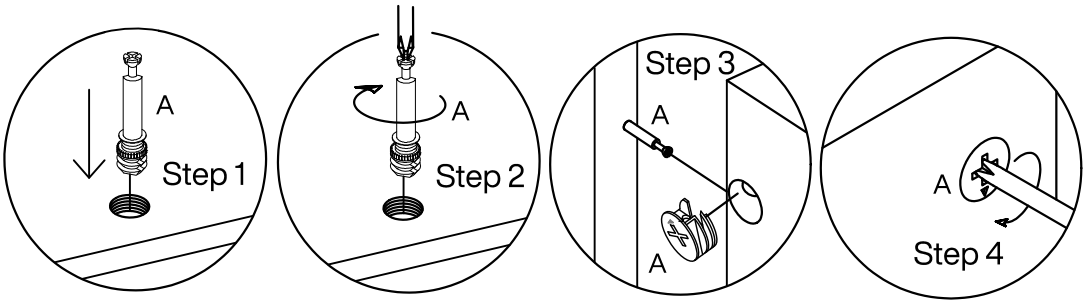


2

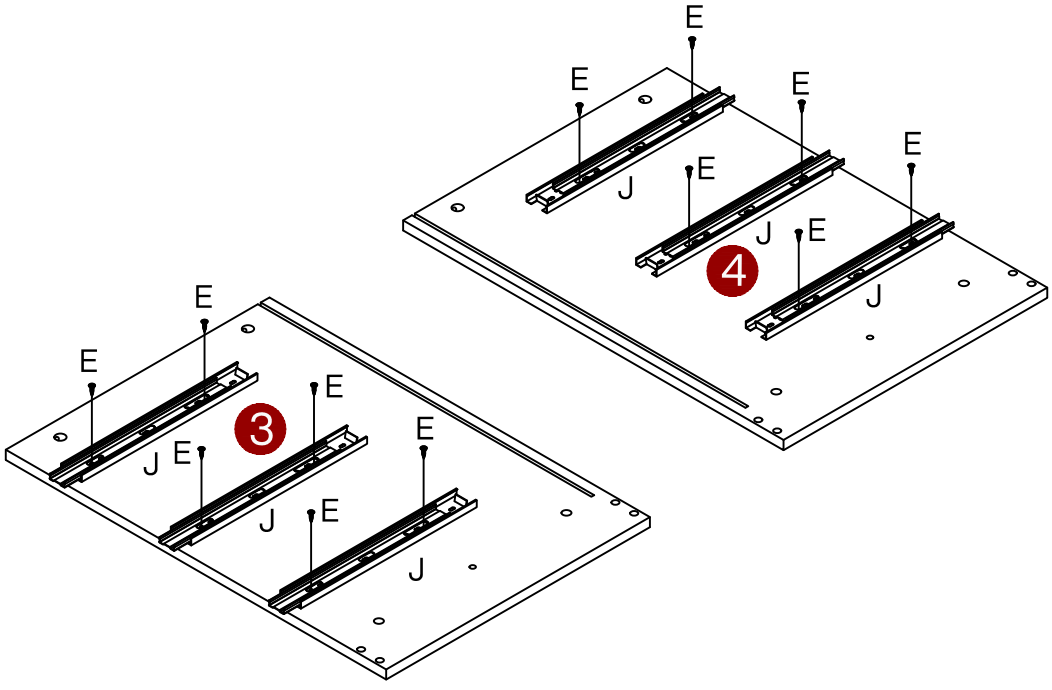

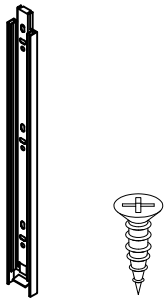



J
3 pcs


E
12 pcs

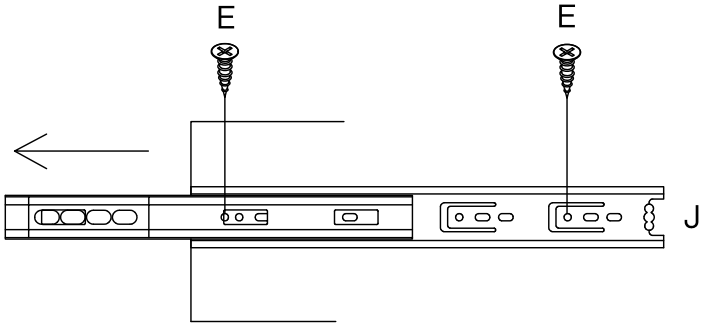



3

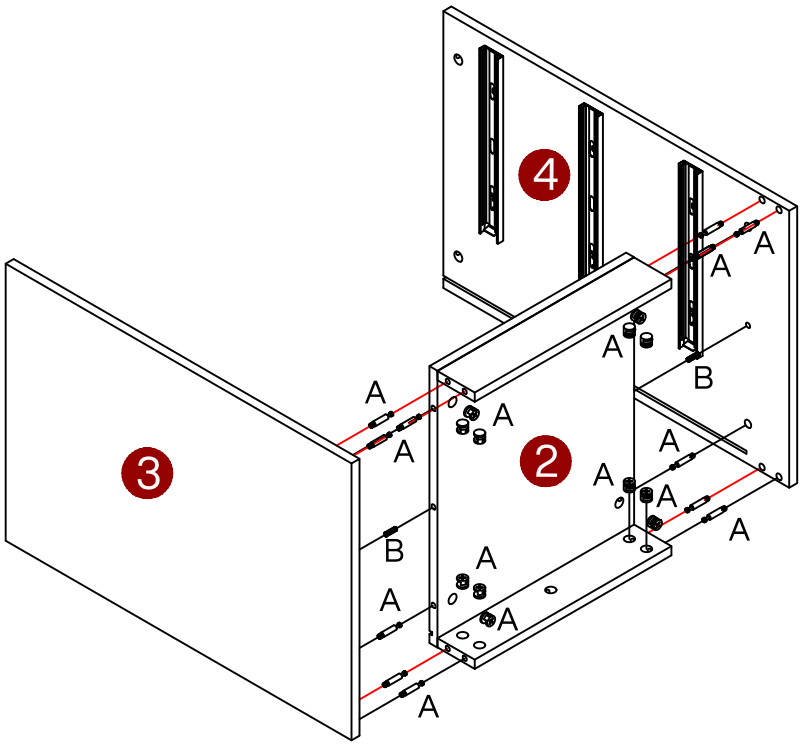


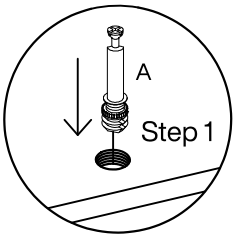

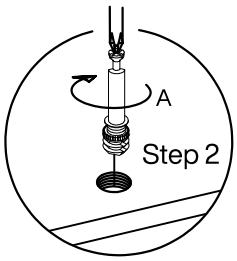


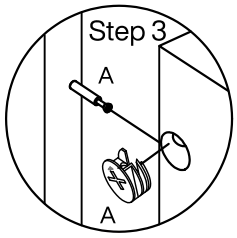

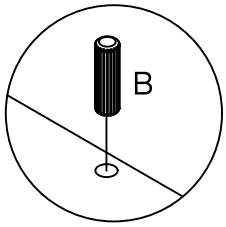

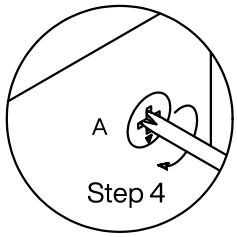










A 12 pcs B 2 pcs


4

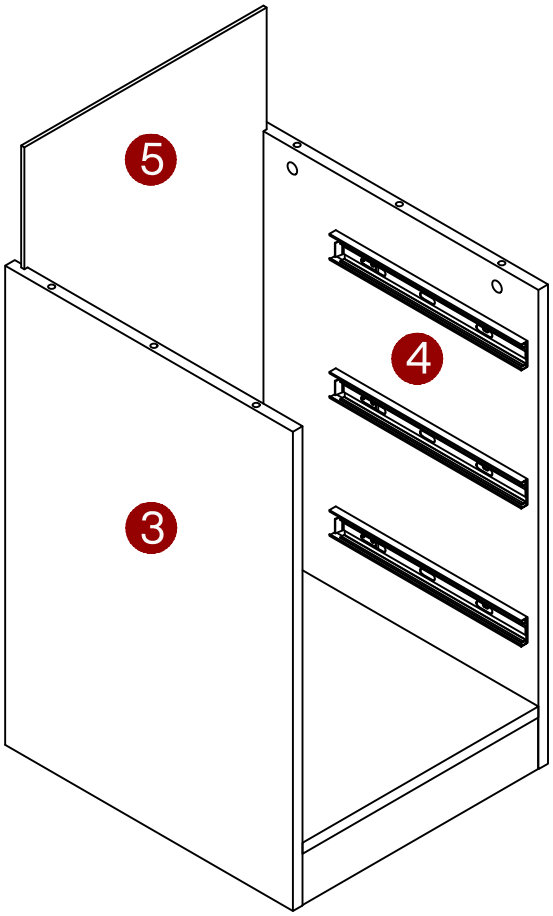

5

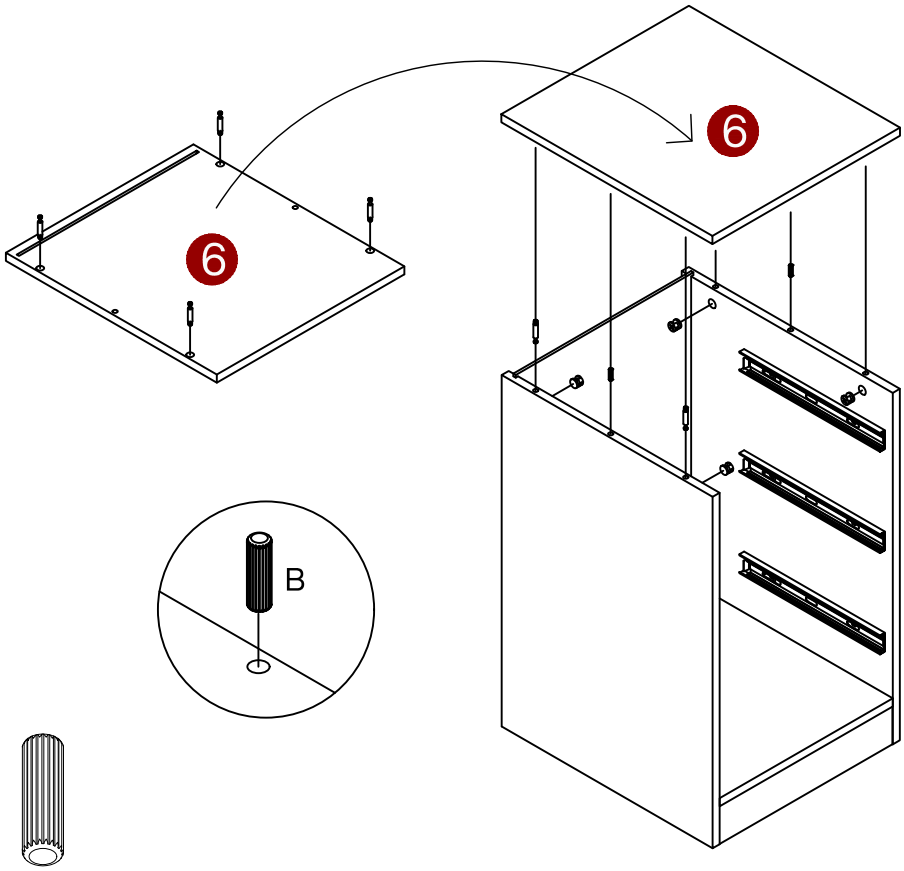

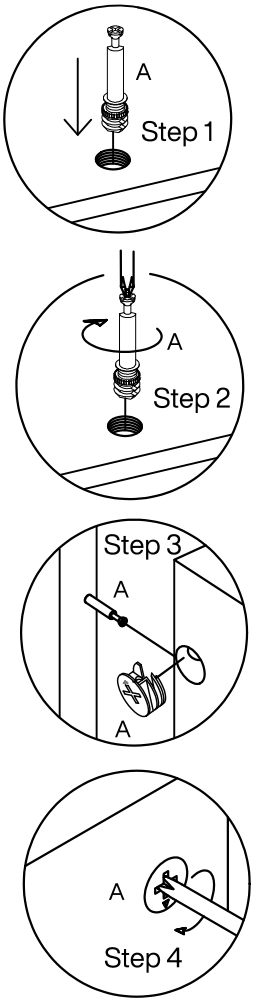


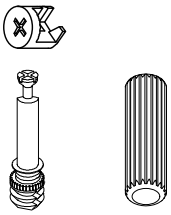


A 4 pcs


B 2 pcs

6

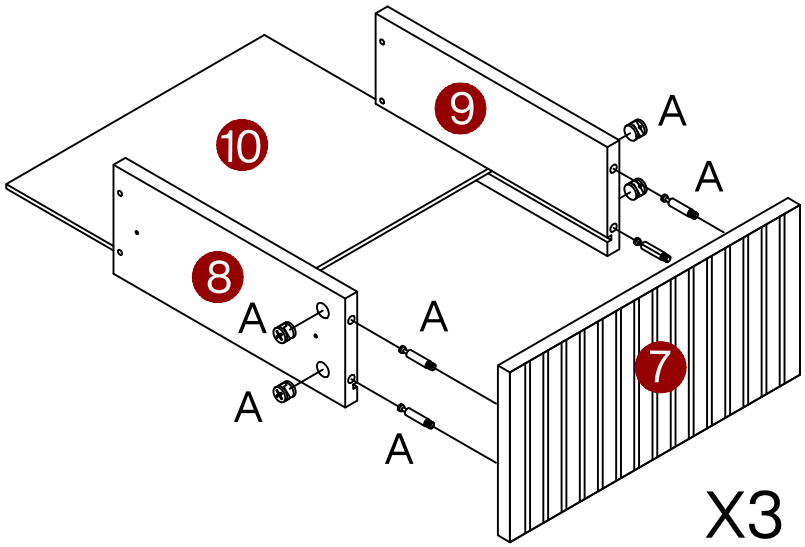






A 4pcs

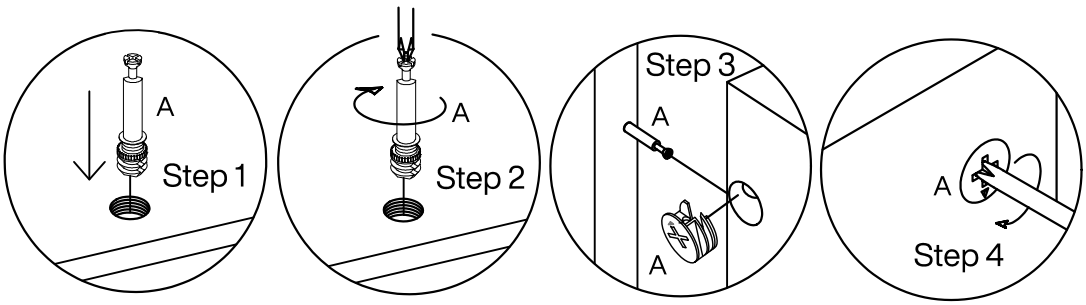


7

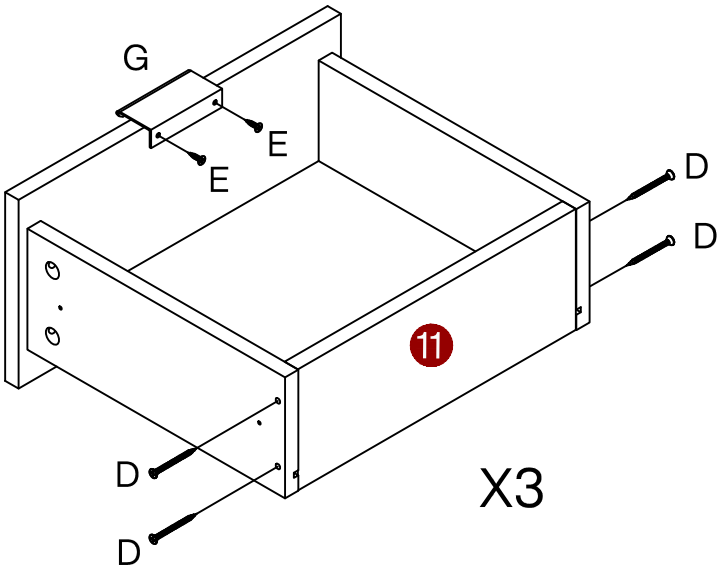

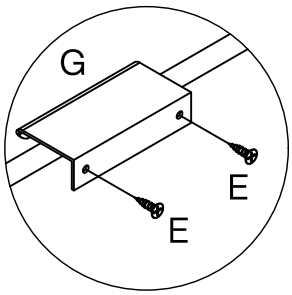


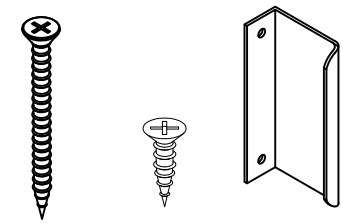


D 4pcs E 2pcs G 1pc

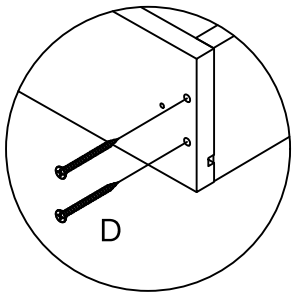

8

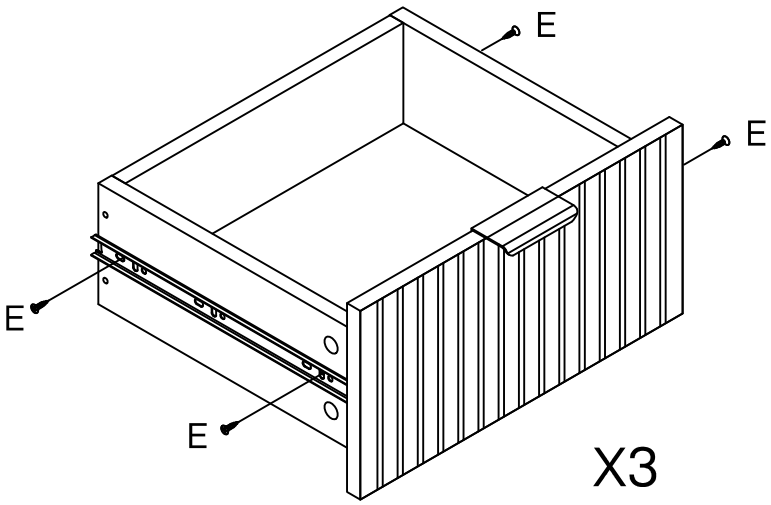

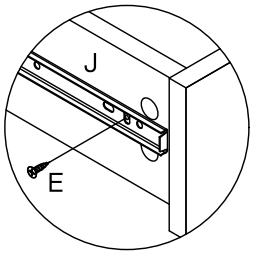





E 4 pcs




J 1 pcs

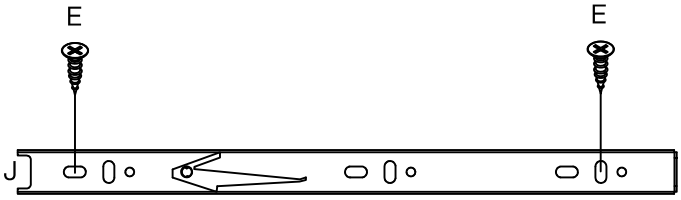


9

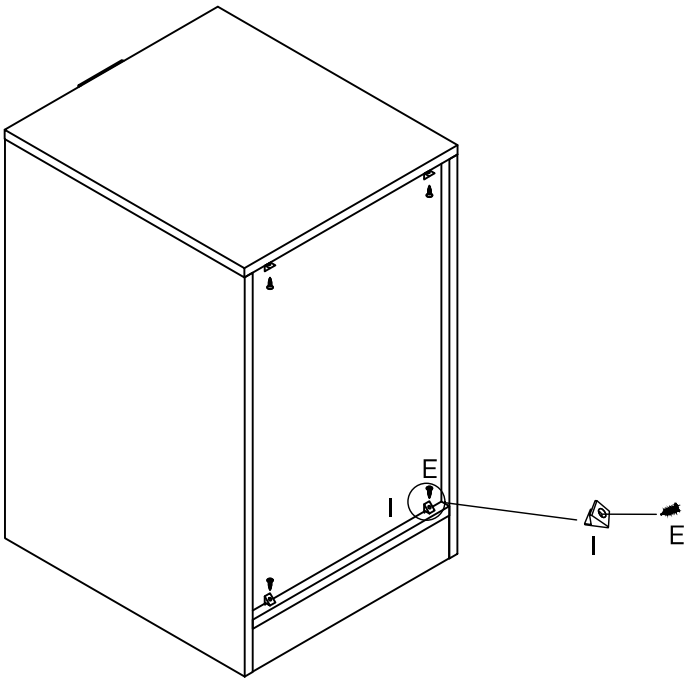





E
4 pcs


I
4 pcs

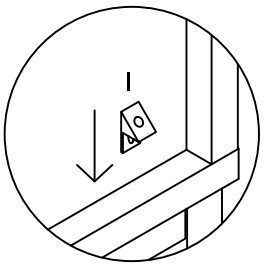


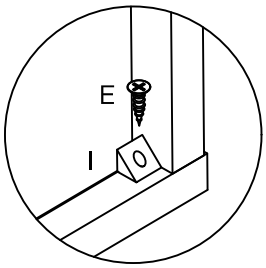

10

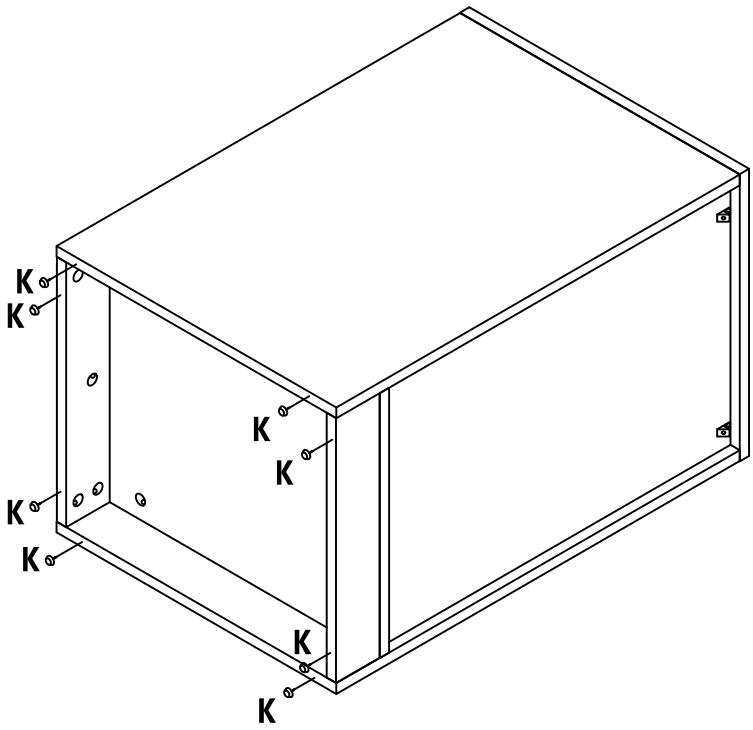


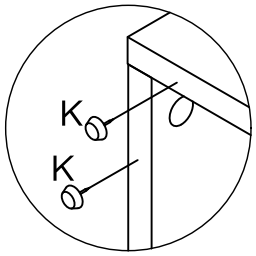



K
8pcs

11

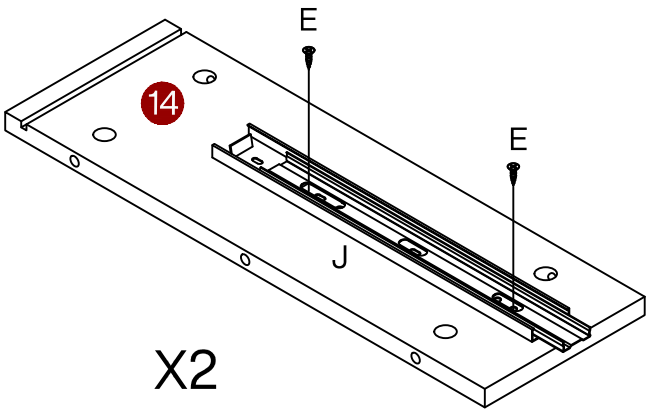





J
1 pcs




E
2 pcs

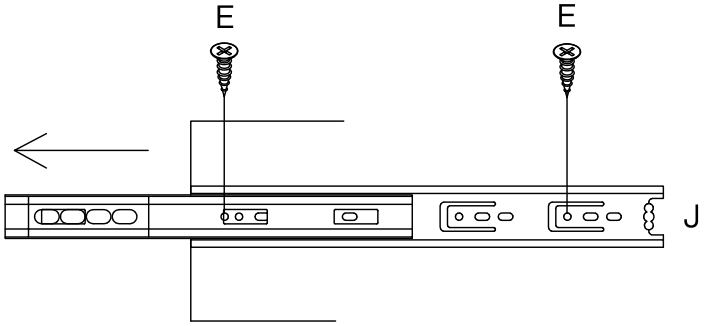

12

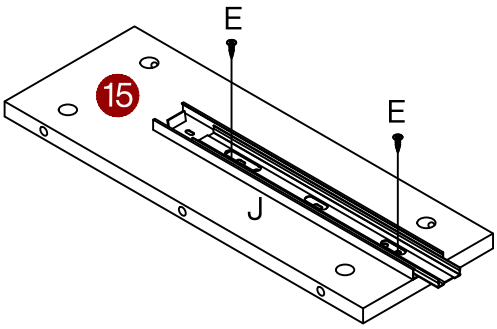

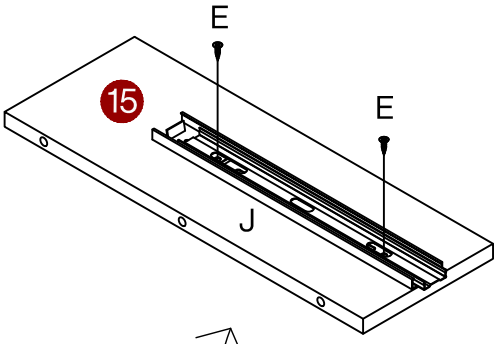





J
2 pcs




E
4pcs

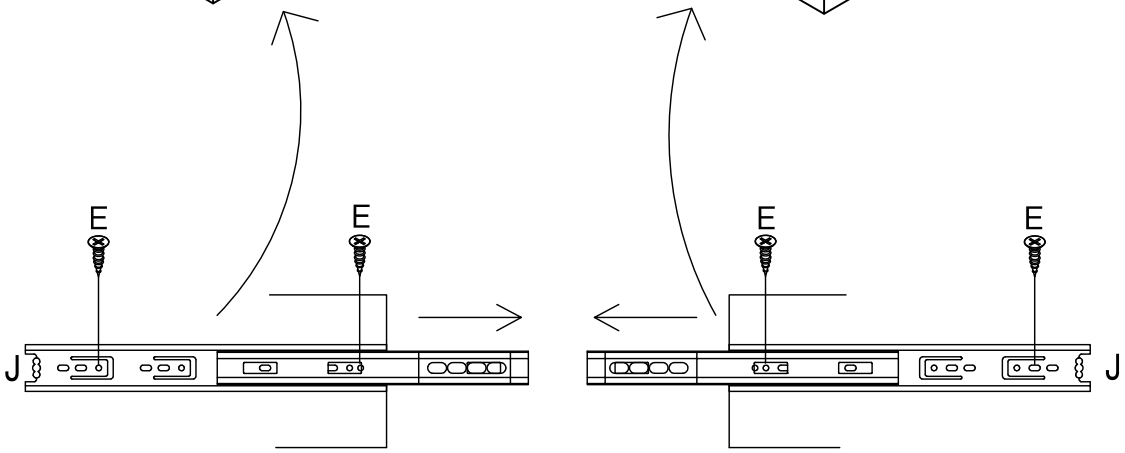


13

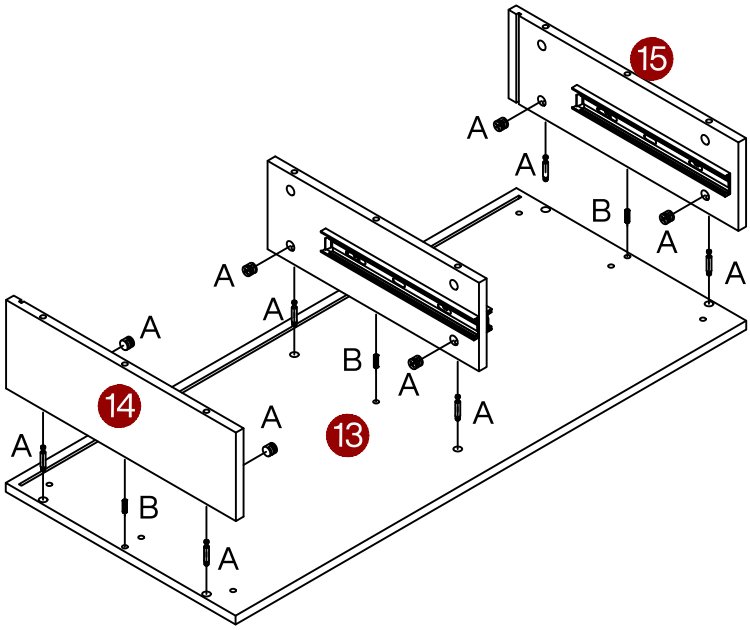

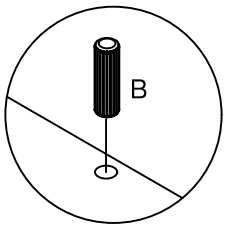









A
6 pcs


B
3 pcs

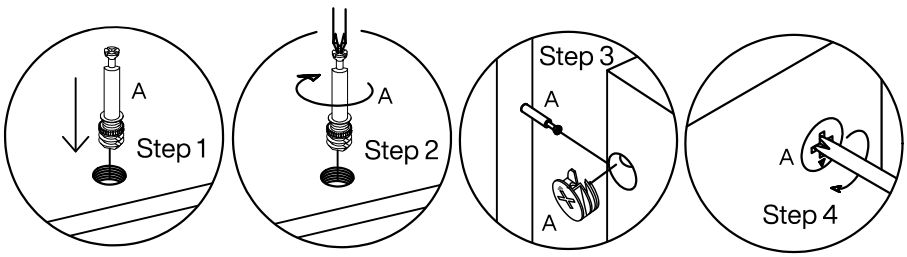



14

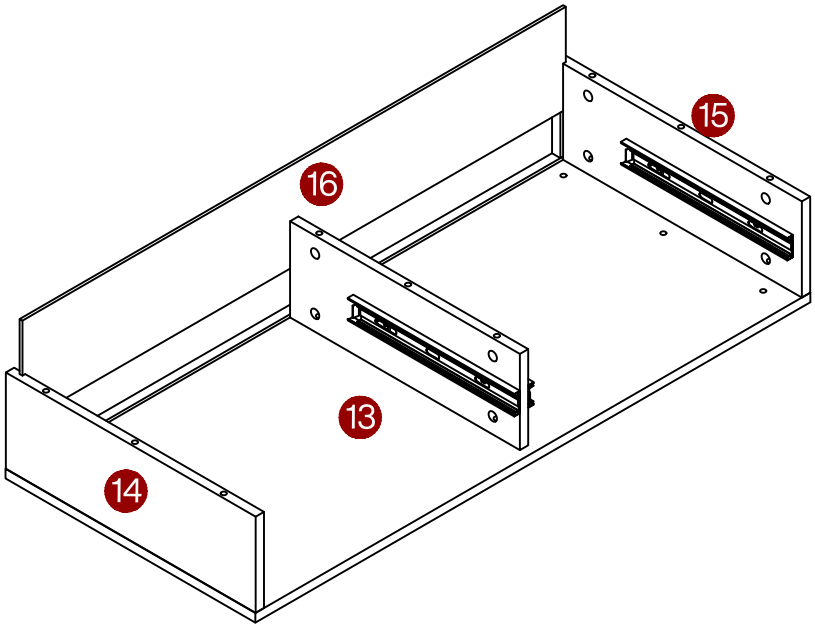


15

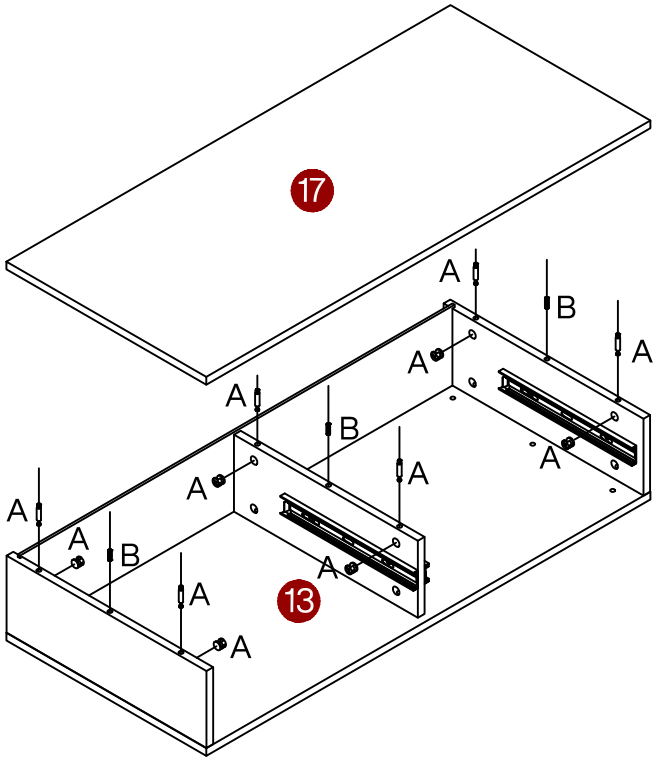

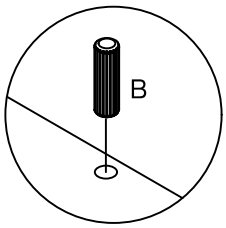





A 6 pcs





B 3 pcs

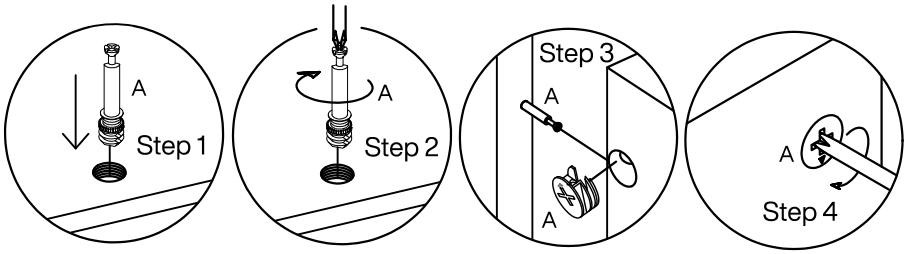


16

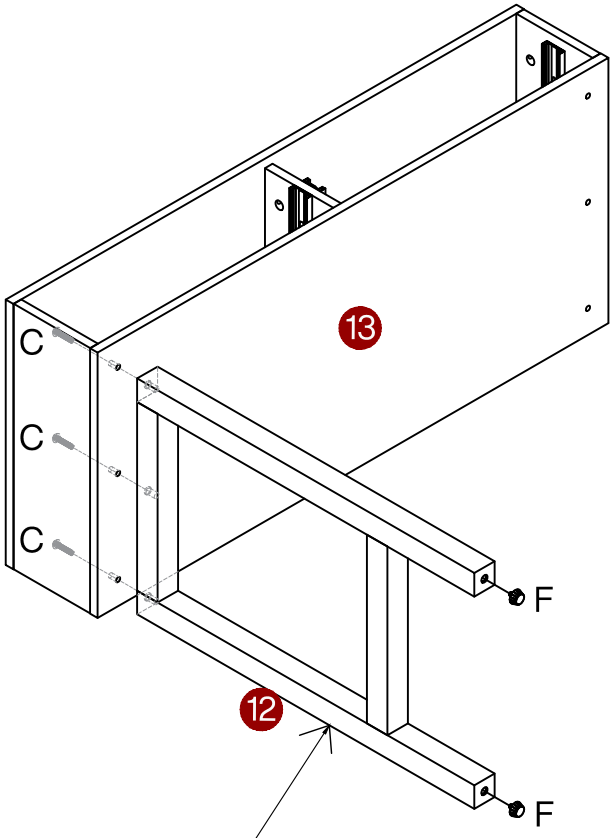

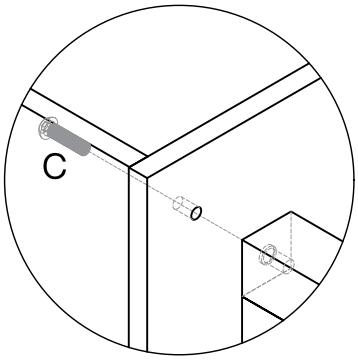

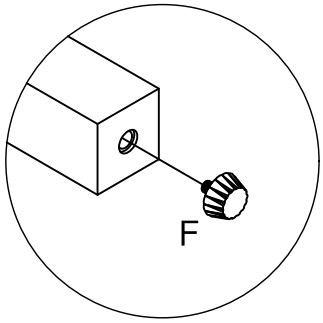




C 3pcs



F 2 pcs


Feet can be installed on the left or right side as needed

17

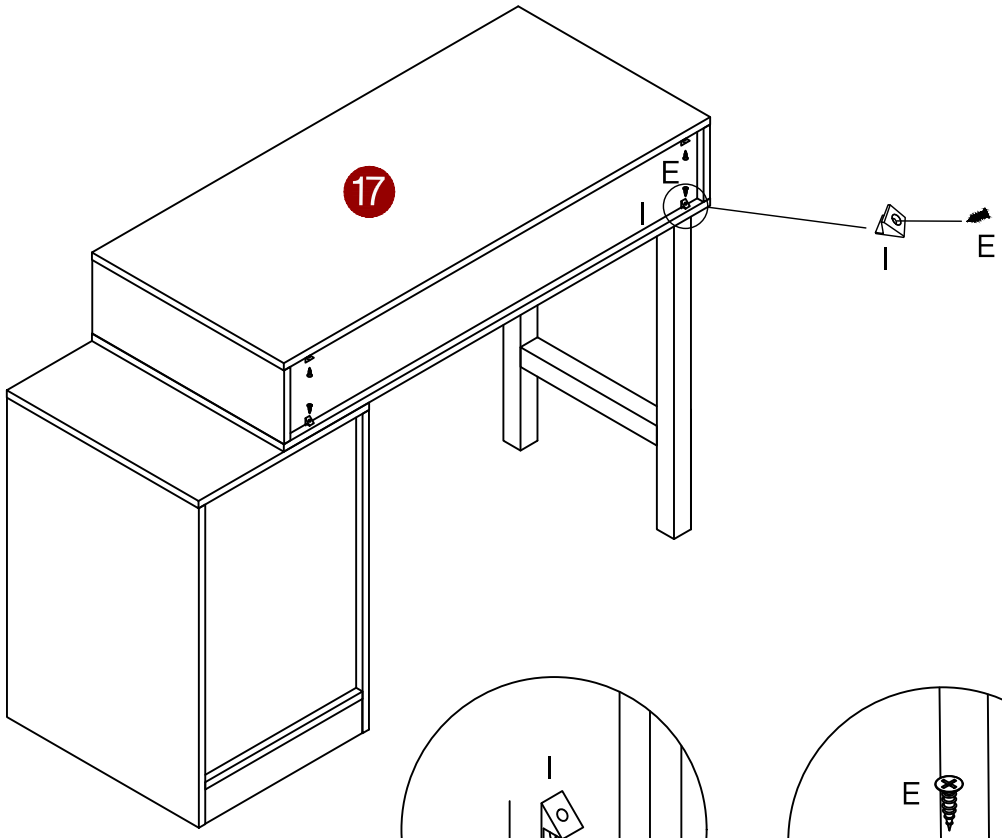





E
4 pcs




I
4 pcs

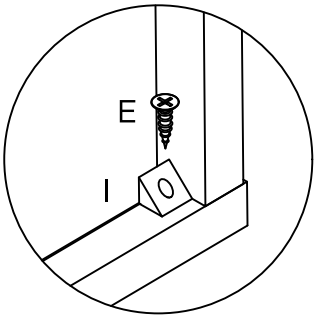


18

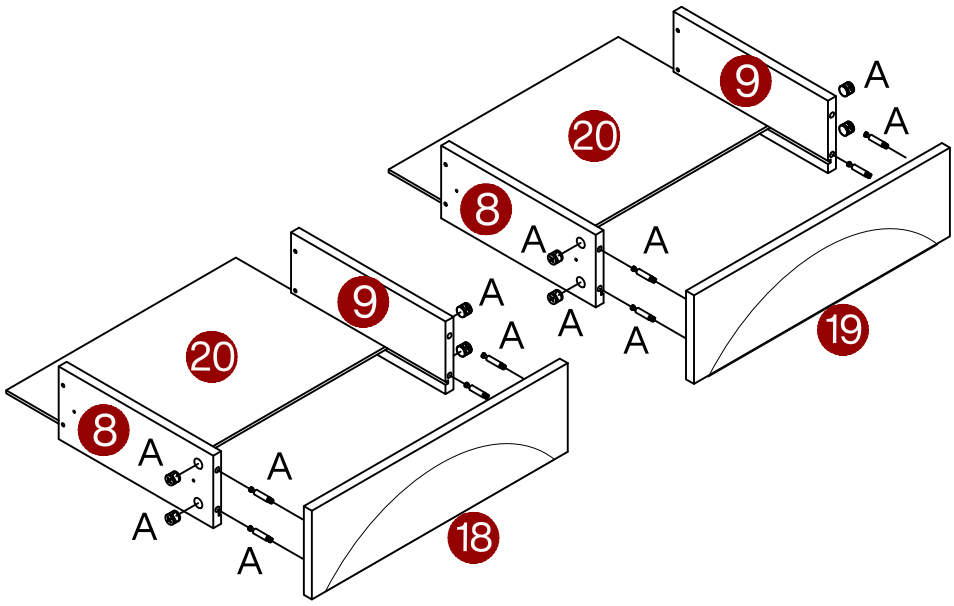






A
8 pcs

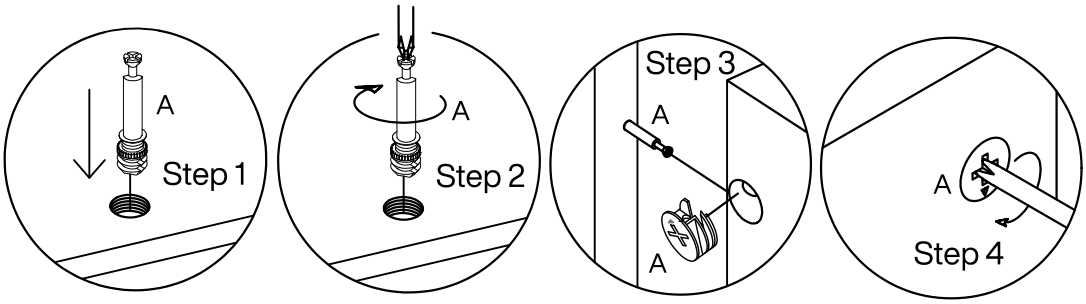

19

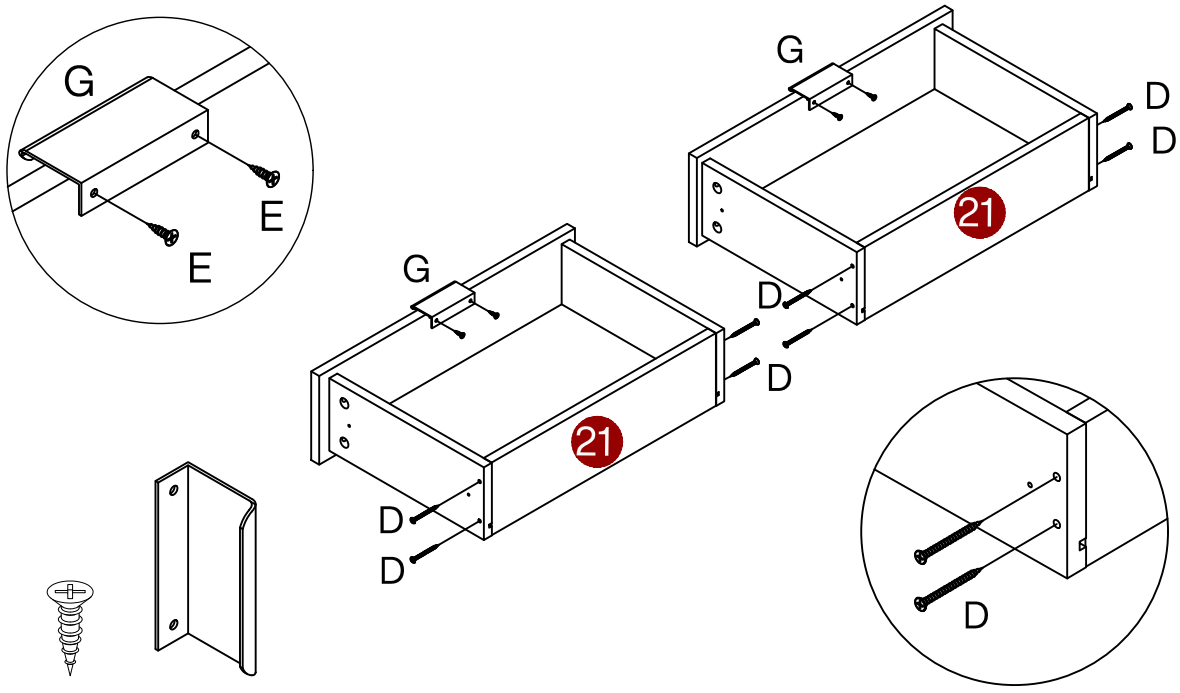


D
8 pcs

E
4pcs

G
2pc

20

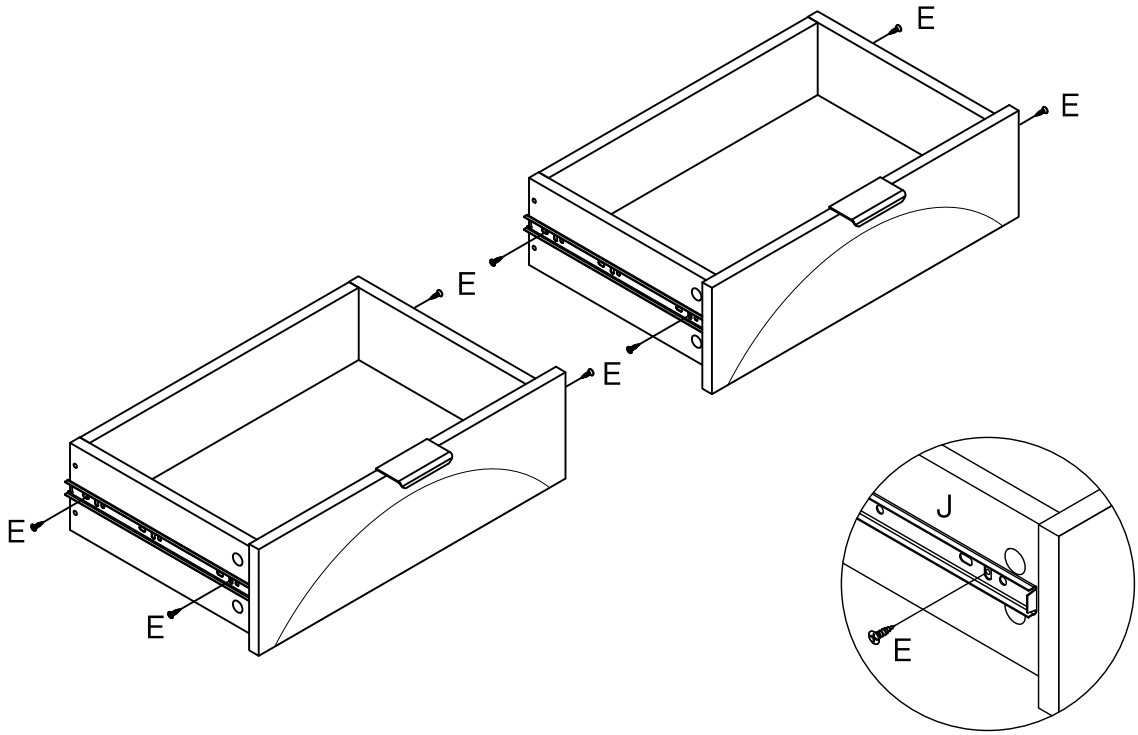





E
8 pcs




J
2 pcs

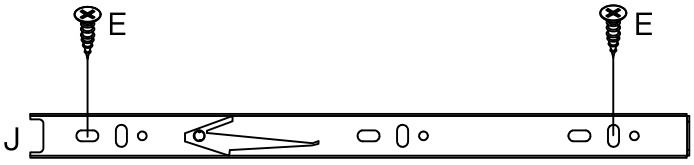


21

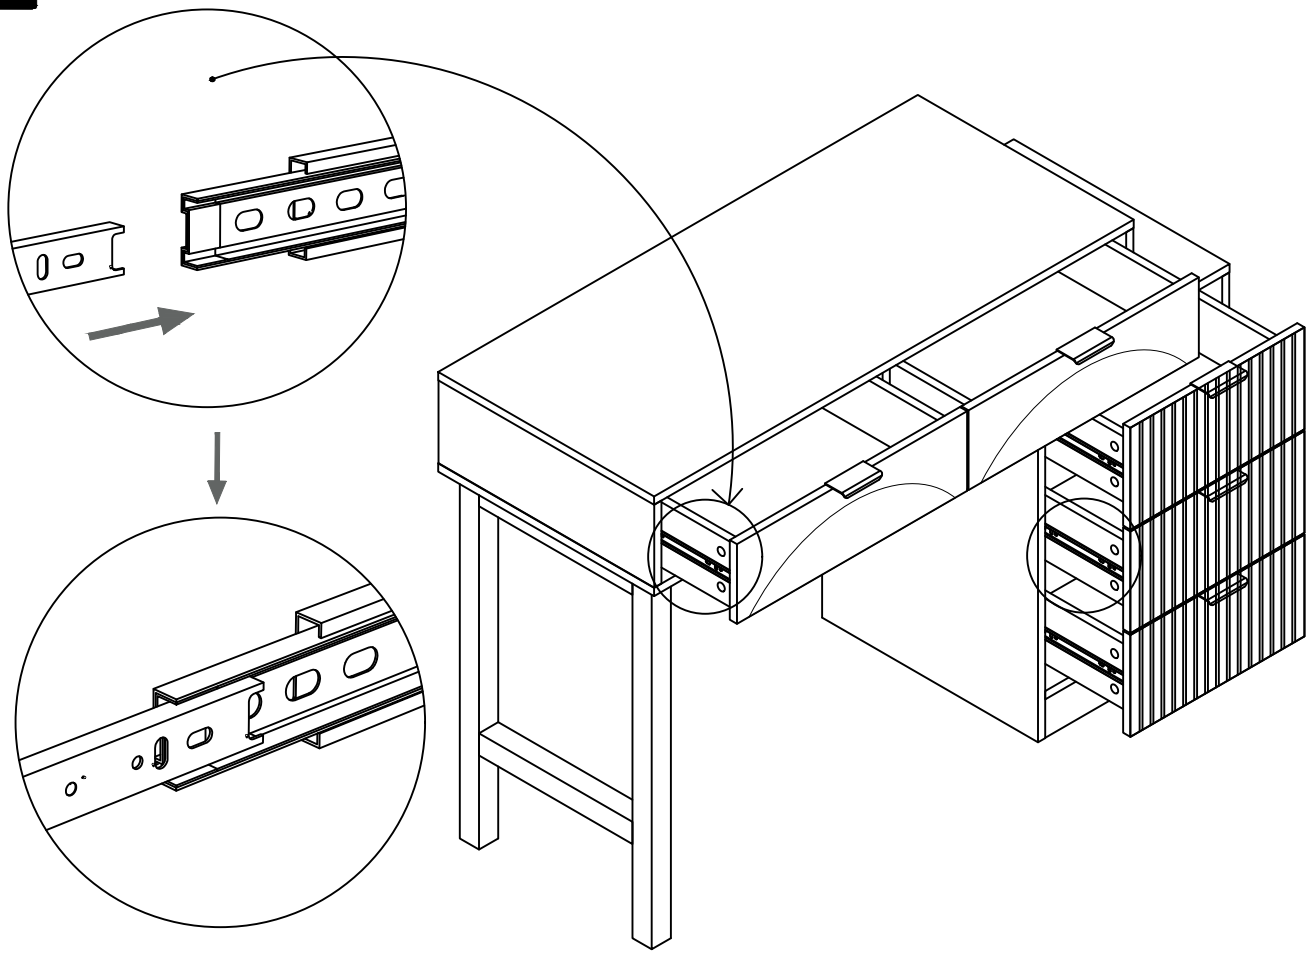

22

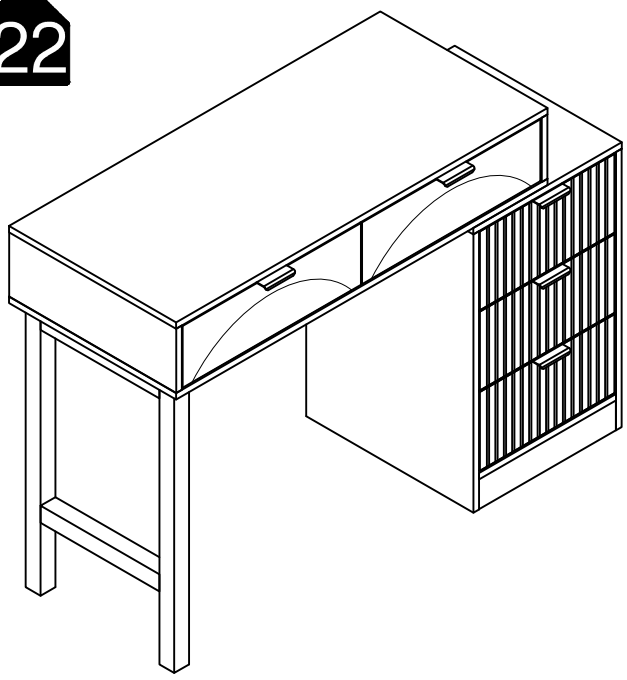


Left side rendering of foot installation

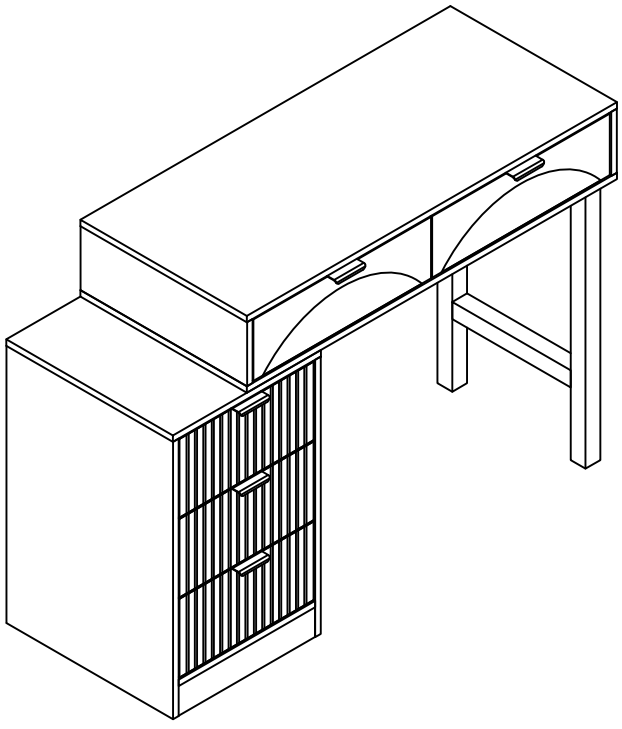

Right side rendering of foot installation

23

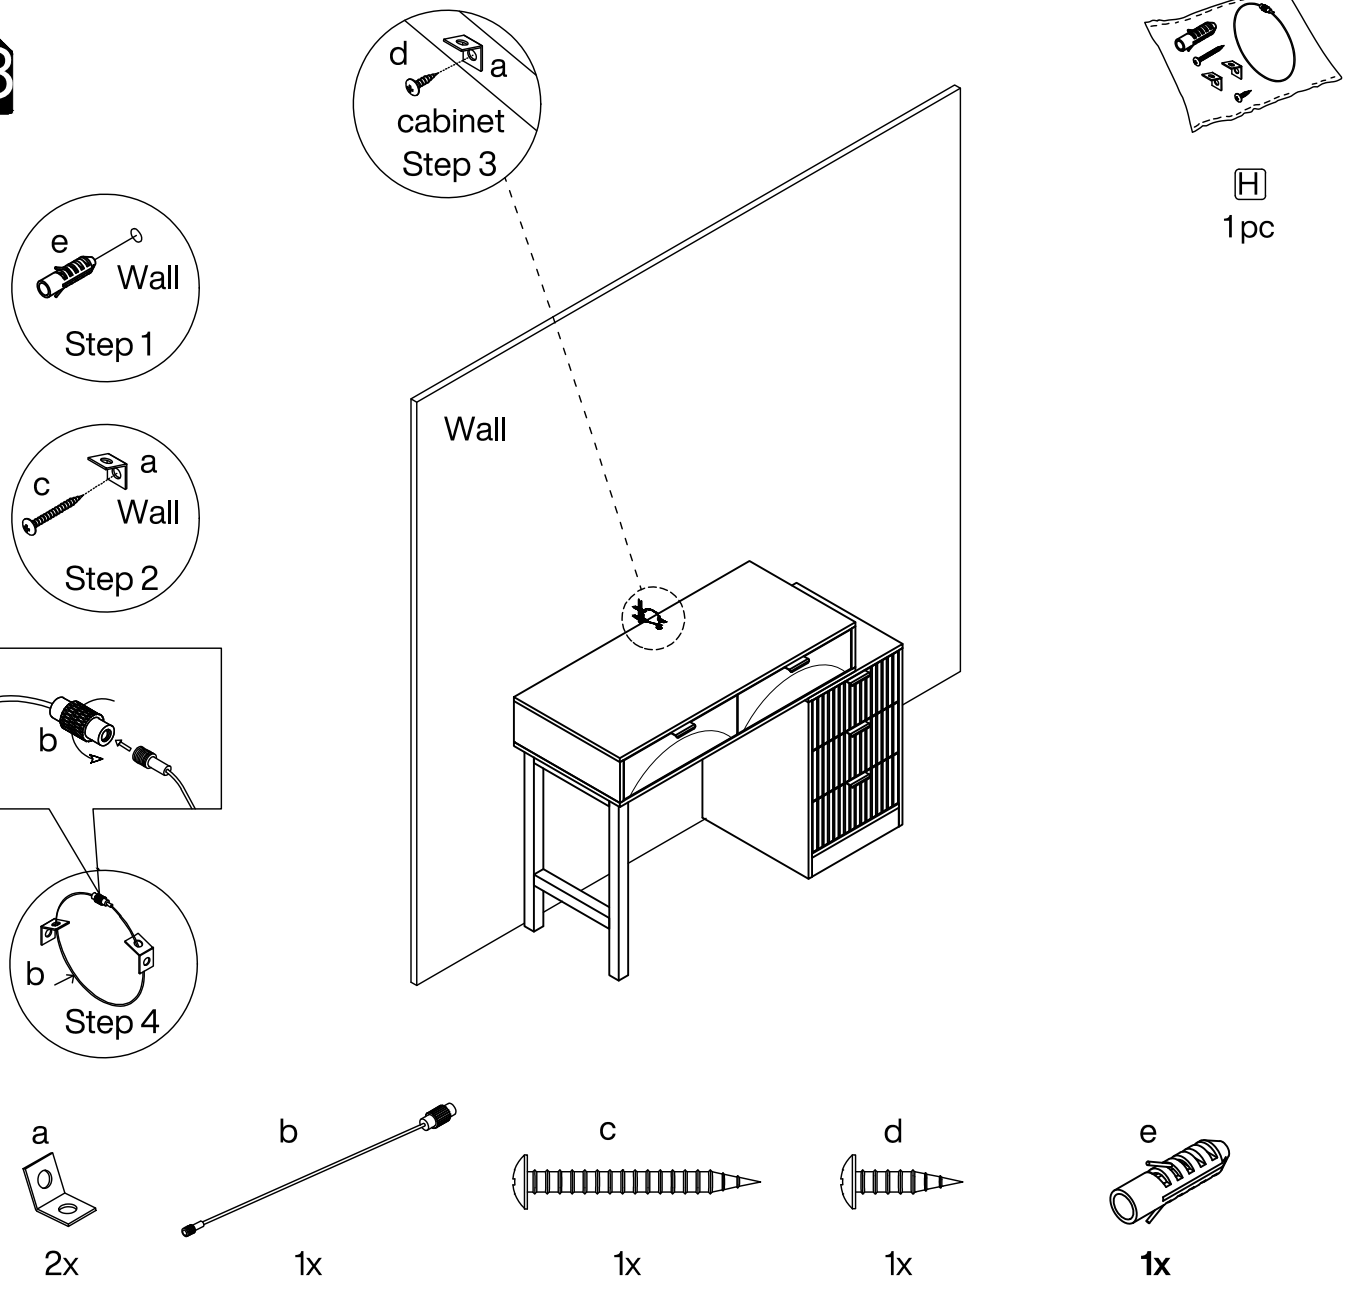

Installation Steps:

1. Drill a hole on the wall, insert the expansion bolt (e) into the hole.
2. Secure one bracket (a) into the expansion bolt (e) using the screw(c).
3. Position the furniture in place. Attach another bracket(a) (aligns with the bracket on the wall) to the back edge of unit top using the screw(d),
4. Thread the male end of the steel cable(b) through both brackets. Securely join the ends by turning the female connector clockwise.


Note:

Before installing the anti-tip kit, please determine where the furniture is to be placed and locate the center line of a wooden stud using a stud finder.
For a concrete wall, ensure no steel bars inside it.

Tribesigns

DESIGNED FOR LIFE

Thank you for your support !

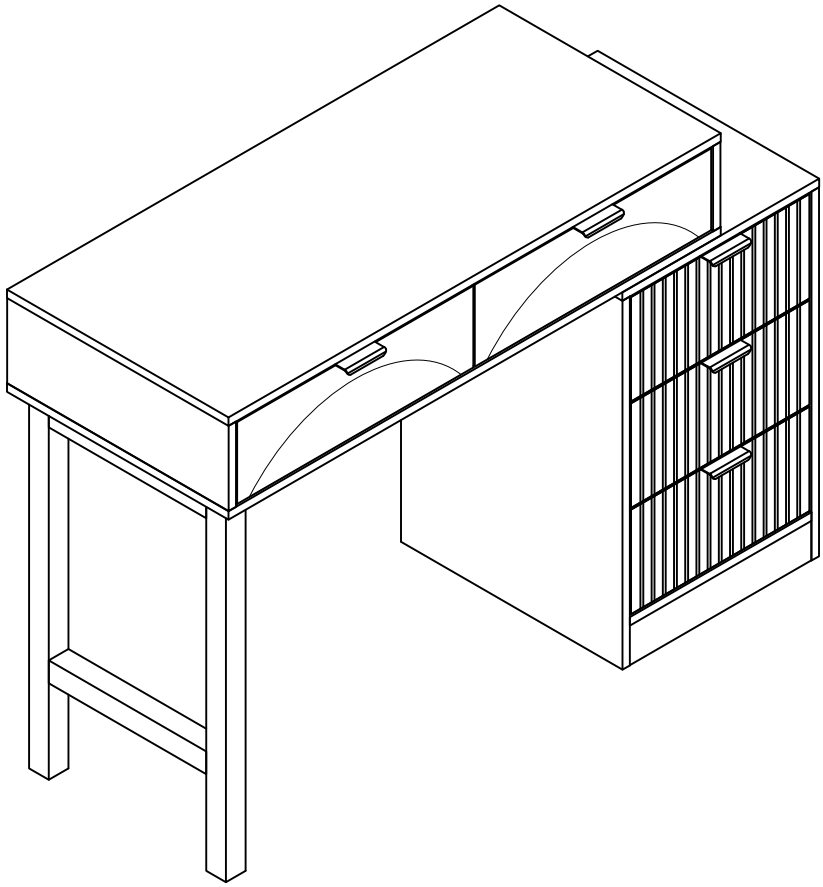

Contact our customer service team

support@tribesigns.com

www.tribesigns.com

1-424-220-6888

Contact us anytime except 12:00 AMto 8:00 AMEST.

Follow Tribesigns

Facebook | Instagram | Pinterest | Twitter | YouTube | TikTok | WhatsApp