


Drawer Chest With High UV Gloss

Assembly Instructions - Please keep for future reference

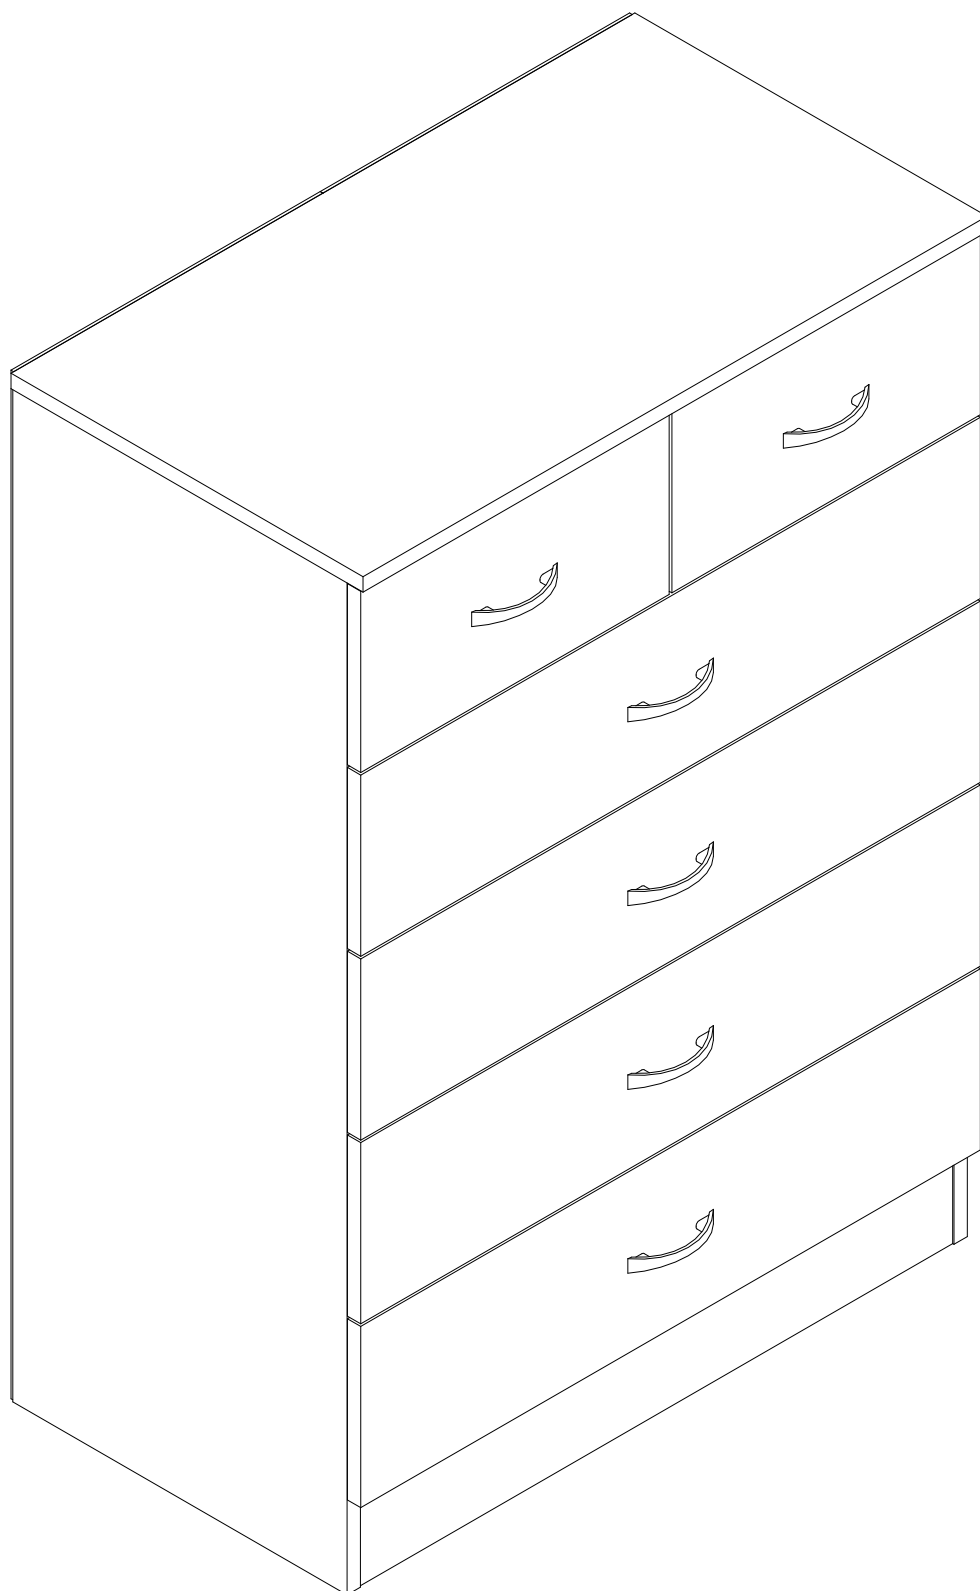

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important—Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all settings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your Door.
- Parts of the assembly will be easier with **2 people**.













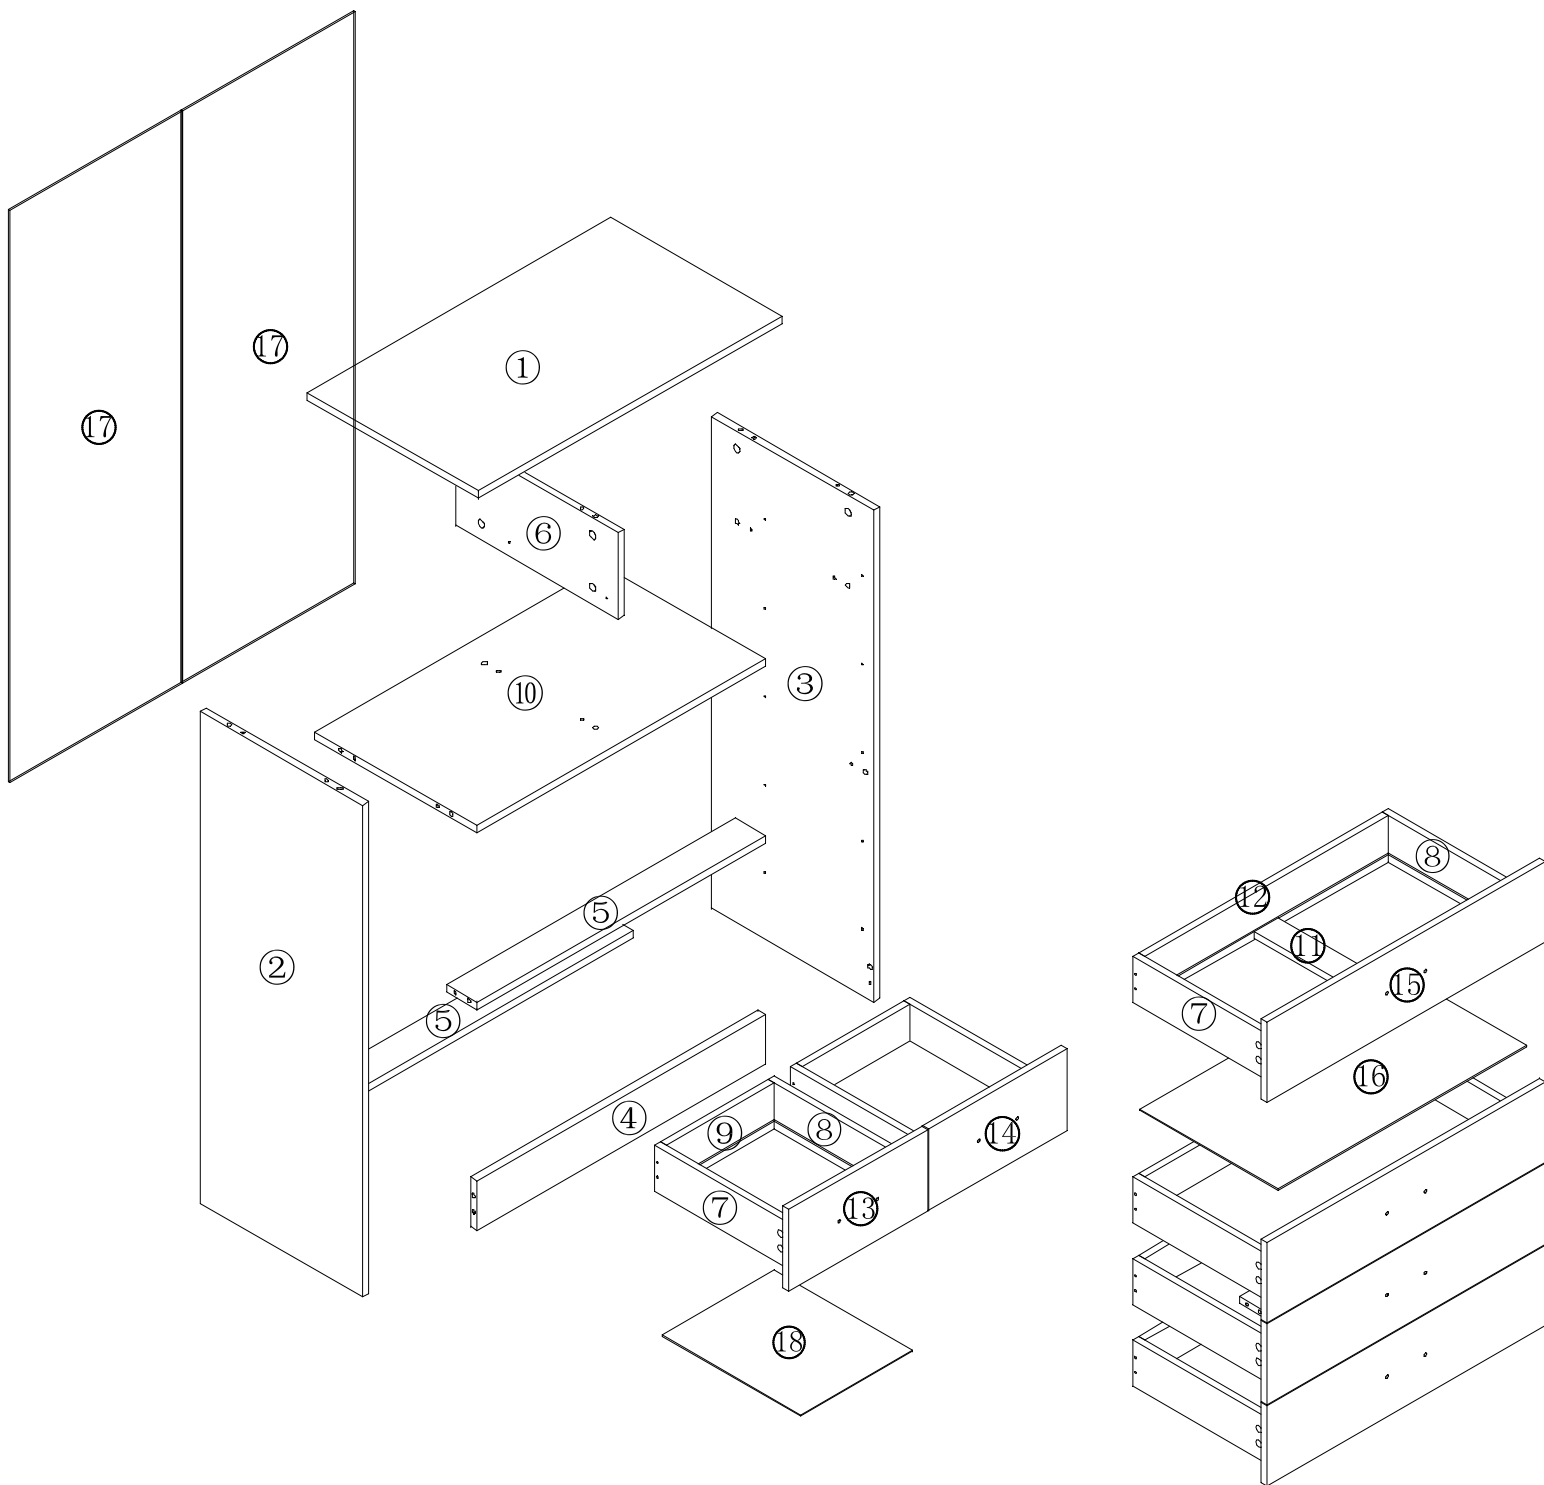
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.

Note: The quantities below are the correct amount to complete the assembly. In some cases more setting may be supplied than are required.


A  CAM PEG Φ6x33.5 42 PCS	B  CAM LOCK Φ15x12 42 PCS	C  Dowel Φ6*30 34 PCS	D  Screw Φ3.5*14 48 PCS	E  Pins 25 PCS	F  Long Screw Φ4*38 24 PCS
G  Drawer Runner 6 SETS	H  Foot Nail 4 PCS	I  Handles Screws 12 PCS	J  Handles 6 PCS		



Ruler - Use this ruler to help correctly identify the fixings




Tools required

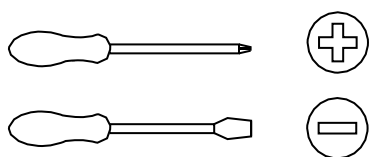

**Cross Headed
Crew driver**



Small hammer

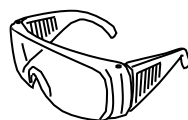


**Eye protection
(when using a
hammer or glue)**


Assembly Instructions

Step 1


Fitting the Drawer Runner to the Right & Left Panels 2/3 with Screw as shown. Follow the provided screw guide hole to assembly



D
Screw
Φ3.5*14
20 PCS




G
Drawer Runner
5 SETS

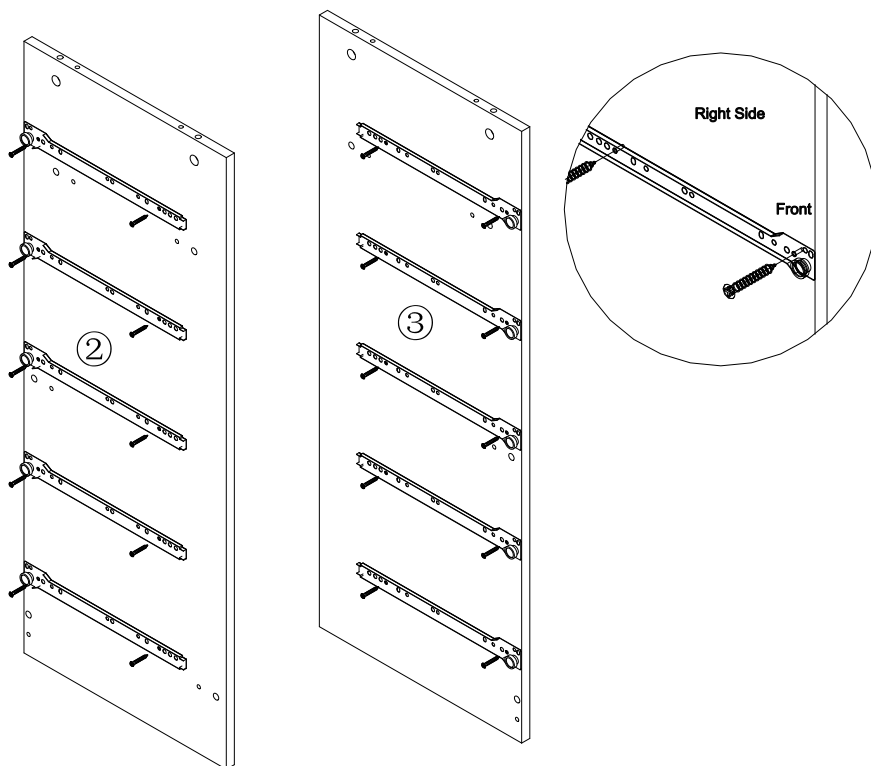


Step 2

Fitting the Shelf 10, Rails 5 & Front Rail 4 the Right & Left Panels 2/3 as shown.


Fitting the Septi-panels 6 to the Shelf 10 as shown.



A
CAM PEG
Φ6x33.5
12 PCS




B
CAM LOCK
Φ15x12
12 PCS



C
Dowel
Φ6*30
12 PCS



H
Foot Nail
4 PCS

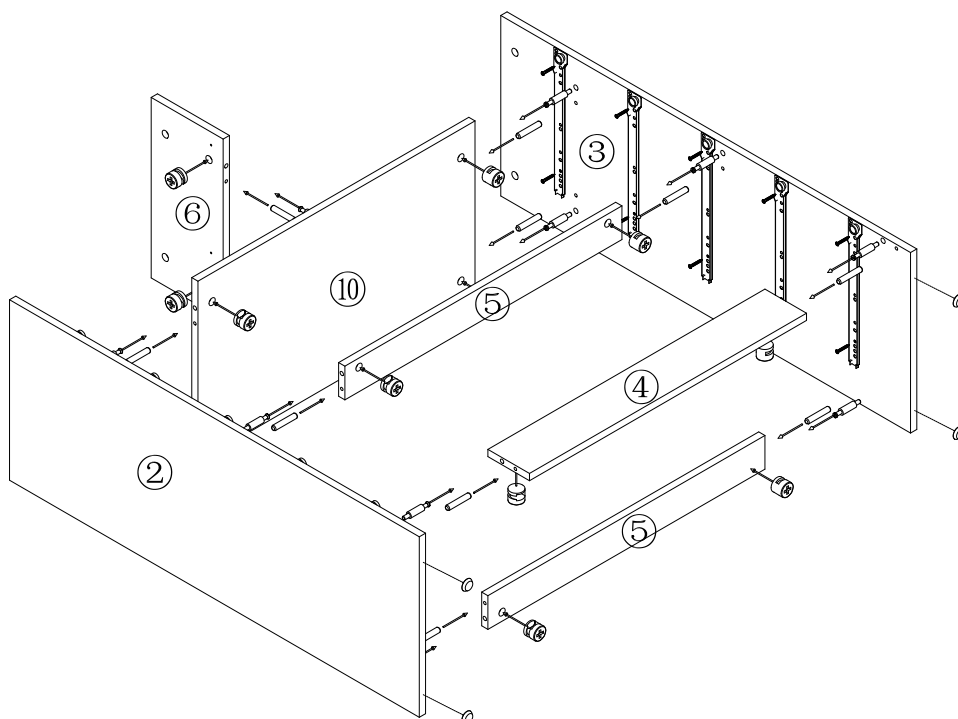


Assembly Instructions

Step 3


Install the last Drawer runner to the Septi-panels 6.

Be careful about the hole for fitting screws.


Fitting the Top 1 to the part finished as shown.




A
CAM PEG
Φ6x33.5
6 PCS




B
CAM LOCK
Φ15x12
6 PCS



C
Dowel
Φ6*30
6 PCS



G
Drawer Runner
1 SETS



D
Screw
Φ3.5*14
4 PCS

Step 4

Fitting the backs 17 to the back of the unit as shown.



Gently Hammer the pins as shown.

Note: Make sure unit is square before fixing the back.



E
Pins

25 PCS

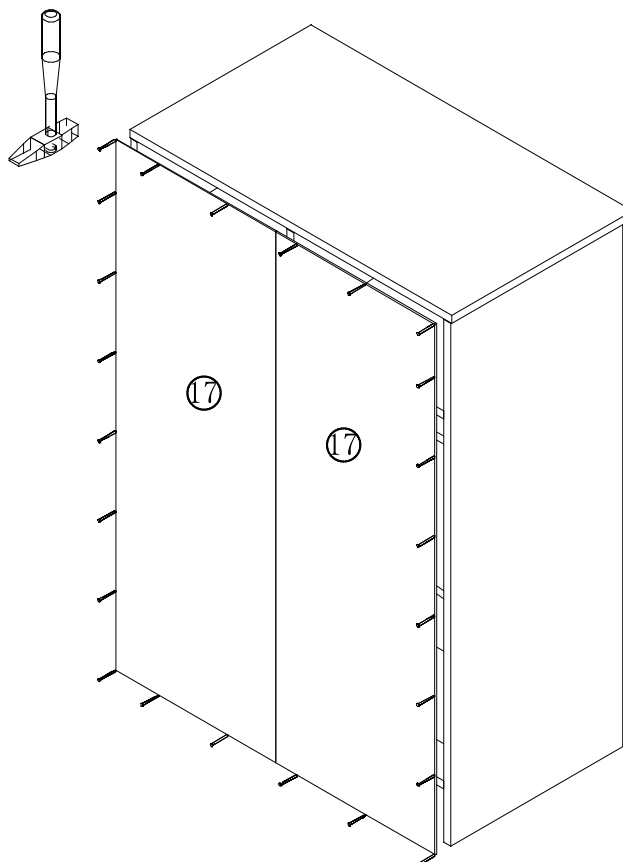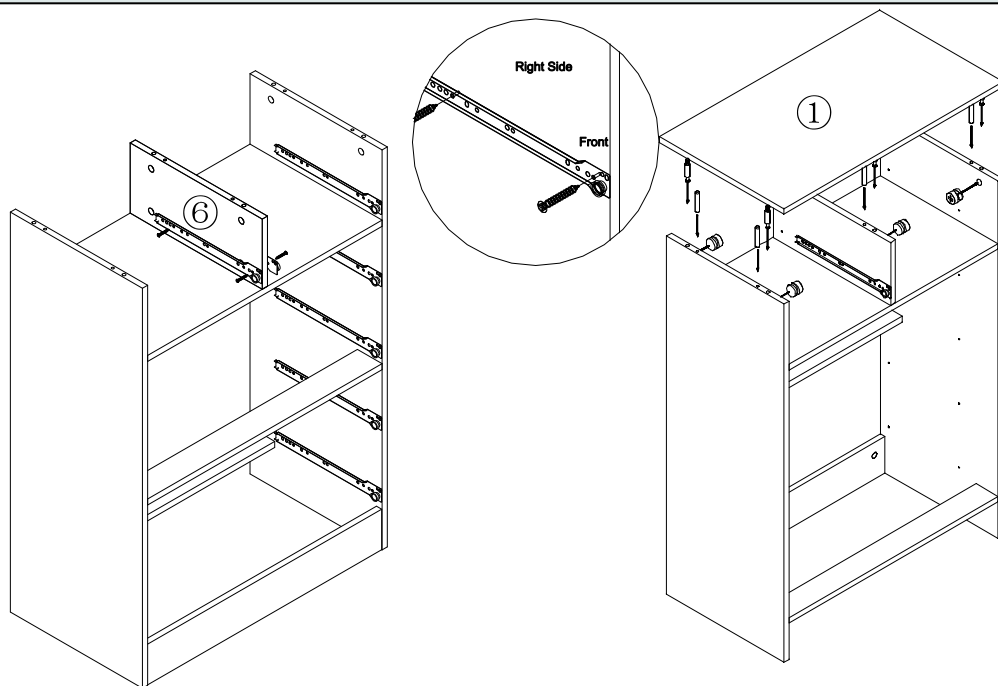

Assembly Instructions


Step 5

Fitting the Drawer sides 7/8 to the Drawer front 13/14 with CAM lock and peg as shown.


Put the Drawer base 18 into the groove of the Drawer.

Fix the Drawer back 9 to the part finished with long Screw.

Repeat this step for both Drawers.




CAM PEG
Φ6x33.5
8 PCS



CAM LOCK
Φ15x12
8 PCS



Long Screw
Φ4*38
8 PCS

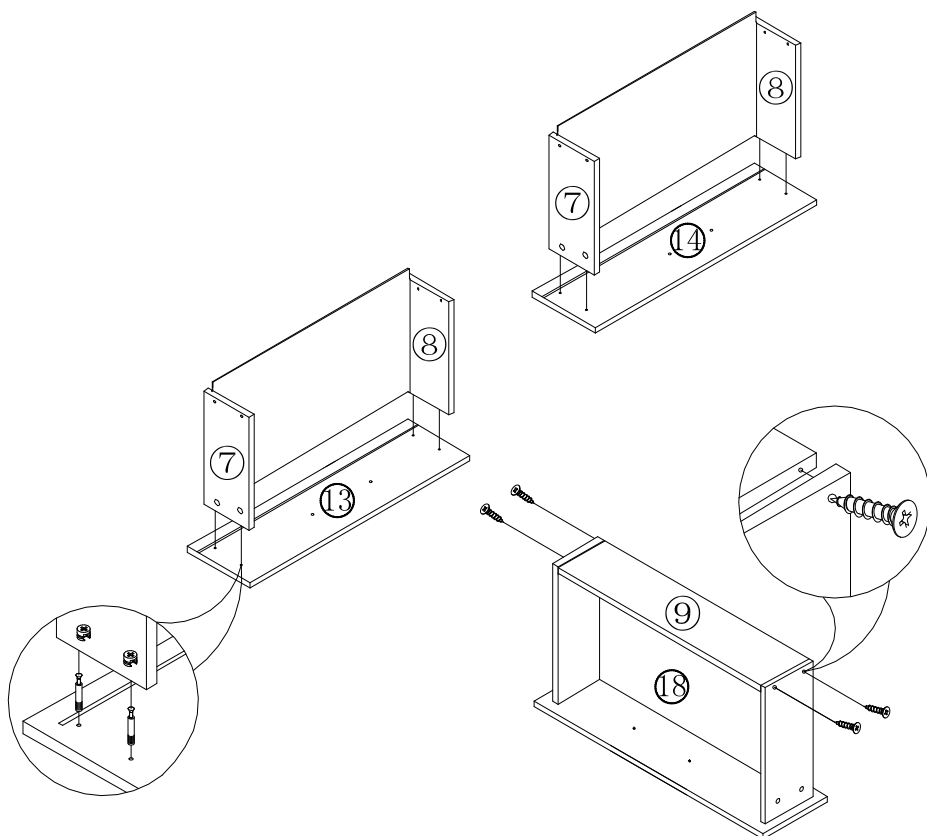


Step 6


Fitting the Drawer sides 7/8 & Reinforcement bar 11 to the Drawer front 15 with CAM lock and peg as shown.

Put the Drawer base 16 into the groove of the Drawer.


Fix the Drawer back 12 to the part finished with long Screw.




CAM PEG
Φ6x33.5
16 PCS




CAM LOCK
Φ15x12
16 PCS



Dowel
Φ6*30
16 PCS



Long Screw
Φ4*38
16 PCS

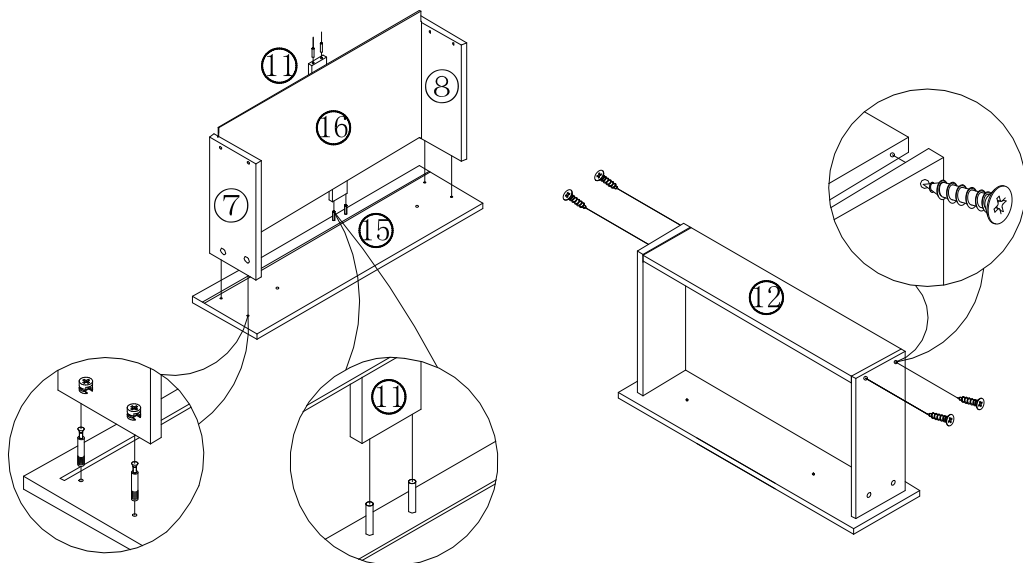


Assembly Instructions

Step 7

Fitting the Handles to the Drawer front 13/14/15 as shown.

Fitting the Drawer runners to the Drawer sides 7/8 with Screw as shown.




**Handles
Screws**

12 PCS



Handles

6 PCS



**Screw
Φ3.5*14**

24 PCS

Step 8

RESULT

