

Do Not Return This Product !

Contact our customer service team for help first.

+60172508638 (Malaysia)

+6597975992 (Singapore)


Before you begin, please follow assembly instructions carefully, then follow them step by step.

Place and assemble furniture on a clean flat soft surface, such as carpet or rug to prevent being scratched.




1		MINIFIX CAM 1510	39	7		CSK SCREW M3.5 X 12MM	8
2		MINIFIX BOLT 8030T	39	8		METAL DRAWER SLIDE CR (300MM)	2
3		CSK SCREW M4.7 X 38MM	10	9		METAL DRAWER SLIDE CL (300MM)	2
4		WOOD DOWEL (Φ6 X 30MM)	20	10		METAL DRAWER SLIDE DR (300MM)	2
5		EURO SCREW M5 X 8MM	8	11		NAILS	14
6		CUP METAL HANDLE + CSK SCREW M3.5 X 16MM	2			STUD NAIL	6


STEP 1

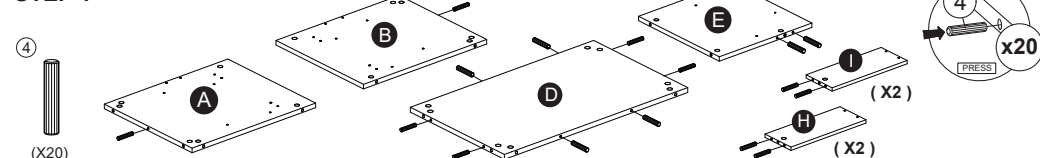


STEP 2

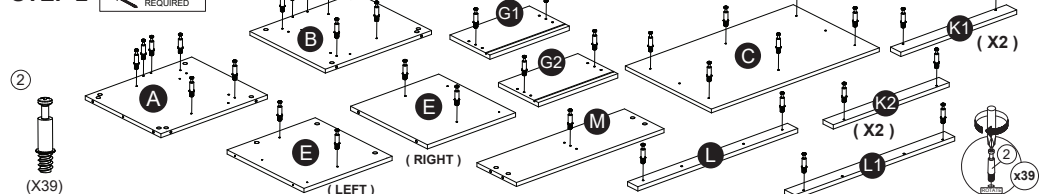

STEP 3

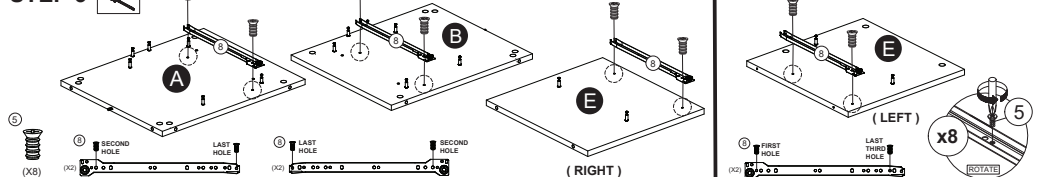

STEP 4

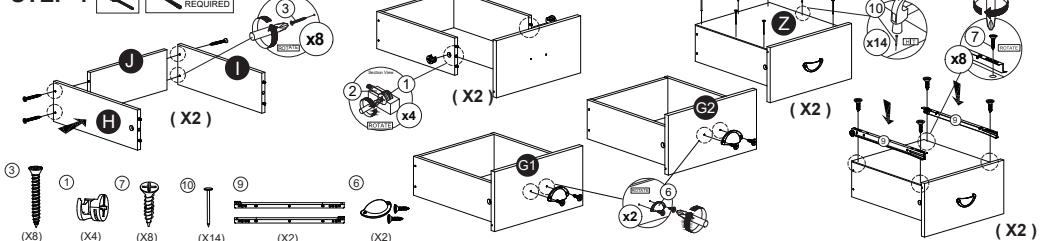


Do Not Return This Product !


Contact our customer service team for help first.

Call: +60172508638(MY) +6597975992(SG)


STEP 5

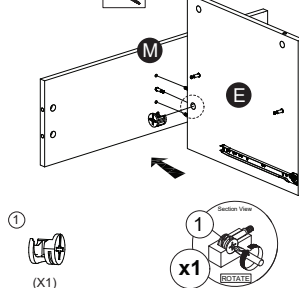


STEP 6

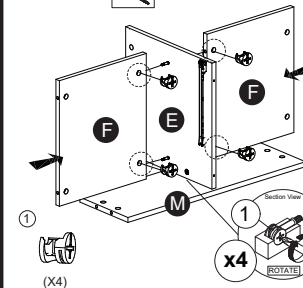


STEP 7

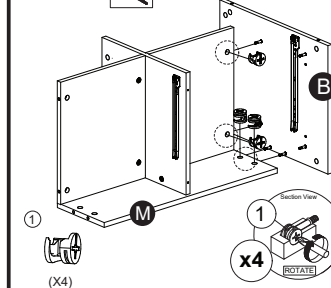


STEP 8

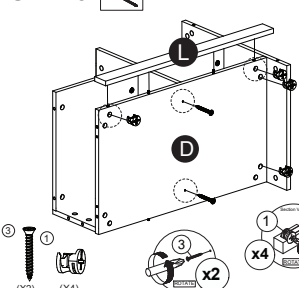


STEP 9

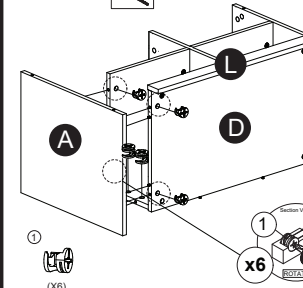


STEP 10

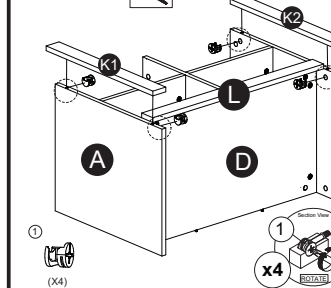


STEP 11

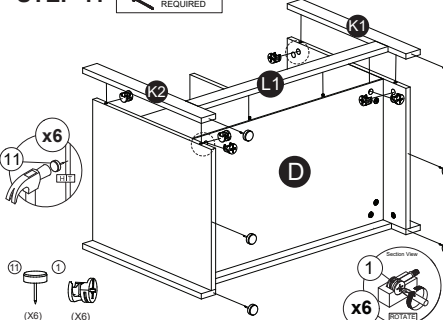

STEP 12

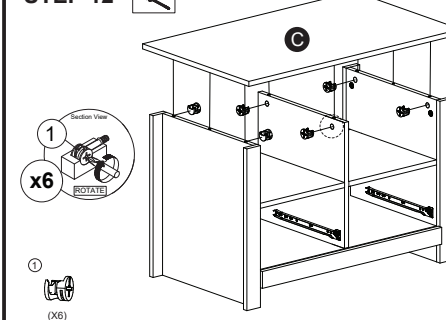

STEP 13

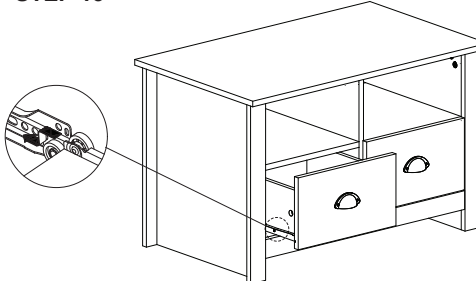

STEP 14

