


Loft Bed

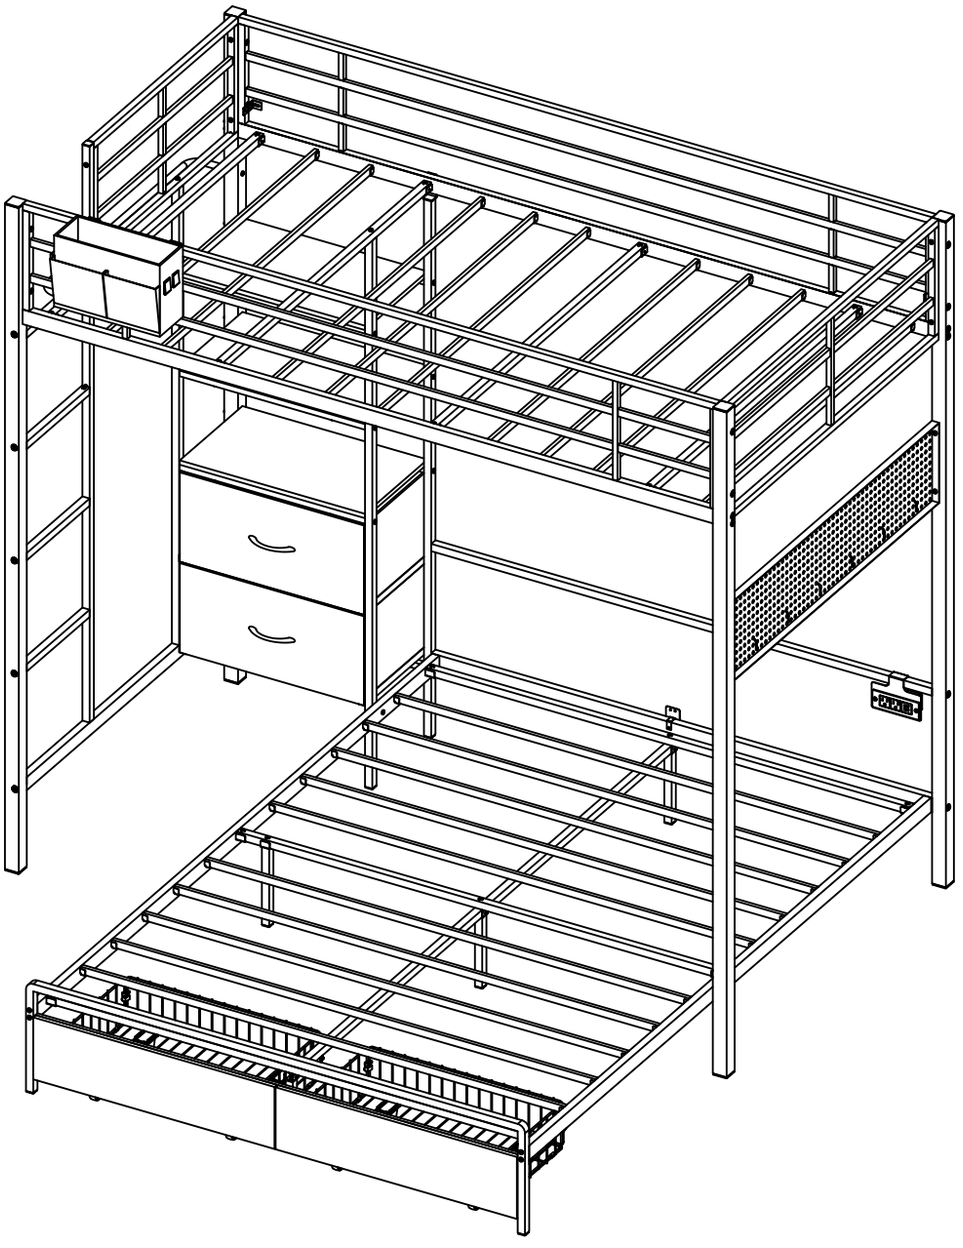

AJ-DJ505208_1
AJ-DJ505208_2

Version: 3.0

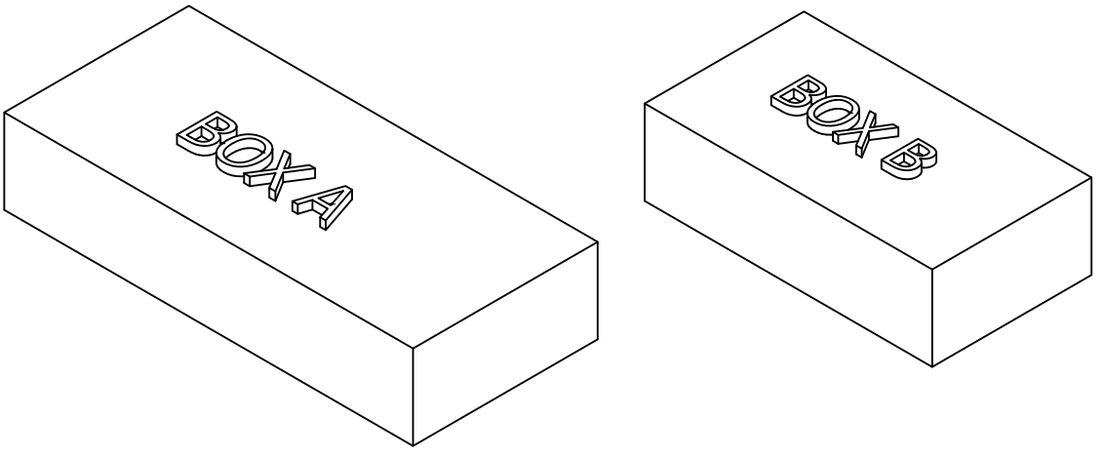

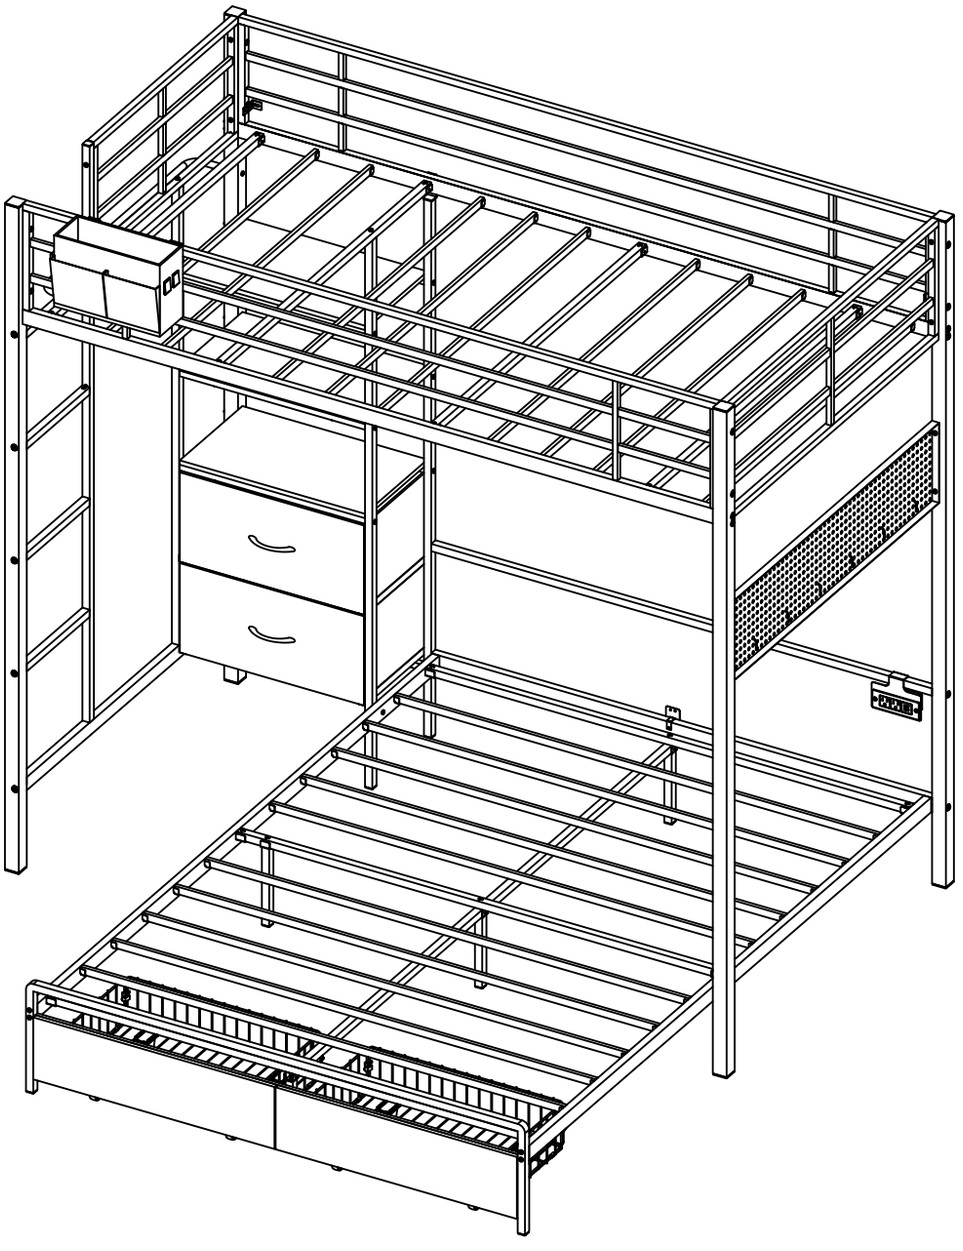


This product comes in two packages: Box A and Box B. You only need the parts in Box A and Box B to assemble the entire bed.
Please ensure you begin installation after receiving Box A and Box B


Package Contents

Plates and iron components	Assembly tool kit	Instruction manual


Precautions ⚠

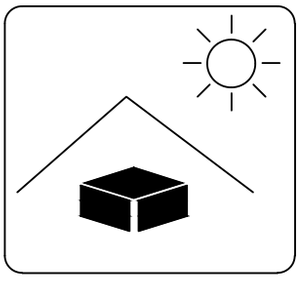


1.Avoid long-term direct sunlight exposure

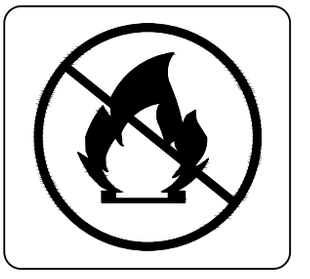


2.Stay away from fire

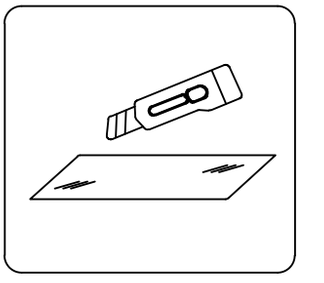


3.Keep away from sharp objects

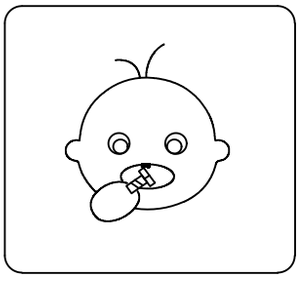


4.Keep infants/children away from assembly parts to avoid choking and suffocation.

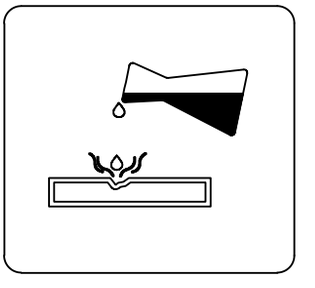


5.Keep away from corrosive substances

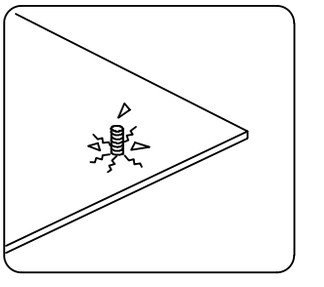


6.Please use the correct screws, otherwise the plate will be damaged.

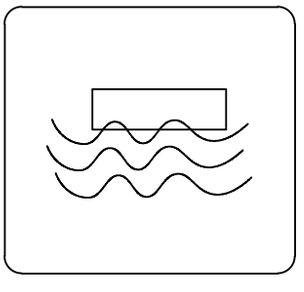

7.Prevent objects from being damaged by immersion in water

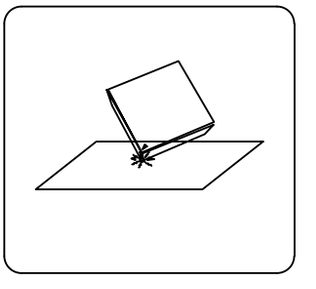

8.Prevent object collision and damage

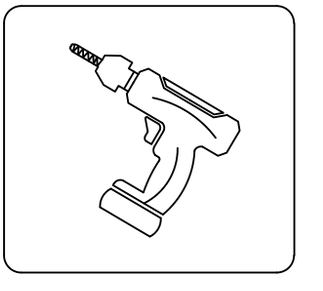


9.An electric drill is recommended for installation

Problems You May Encounter


PART	PROBLEM	SOLUTION
whole Product	Parts are missing, defective or having wrong parts in package.	You can contact us and we will get back to you within 24 hours
	Having issue(s) while reading the instruction or completing the assembly.	Feel free to contact us and we will get back to you within 24 hours.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it.We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Product Surface	Board Surface is broken, scratched or lack of some screw holes.	Feel free to contact us and we will get back to you within 24 hours.
	The screw holes on the wooden board and other wooden boards are not aligned.	1.Please tighten the screws on the board by 70% , do not tighten completely. 2. Adjust the wooden board and board.Until the holes are arranged neatly, then tighten all screws
	Desktop misalignment and unevenness	1.Please tighten the screws connecting the table board to the elevator by 70%, do not tighten them completely. 2.Adjust to a flat and aligned desktop, then tighten the screws. 3.If your problem still can't be solved, please feel free to contact us.
Metal acce-- ssories	Metal accessories are damaged, rusted, bent, and broken.	Feel free to contact us and we will get back to you within 24 hours.
	unstable after being assembled.	1.Check if the screws are tightened. 2.Read throughout the manual, check if there are any parts installed incorrectly or some parts are missed to be installed. 3.If the problem still can't be solved, please feel free to contact us.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it.We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.

BOXAInstall parts


PARTS LIST

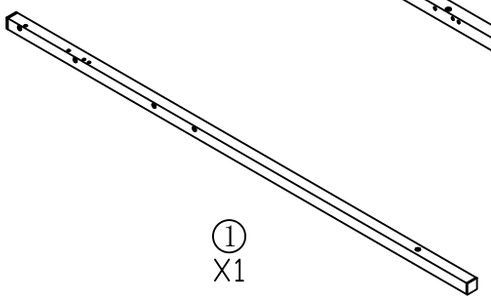


① X1

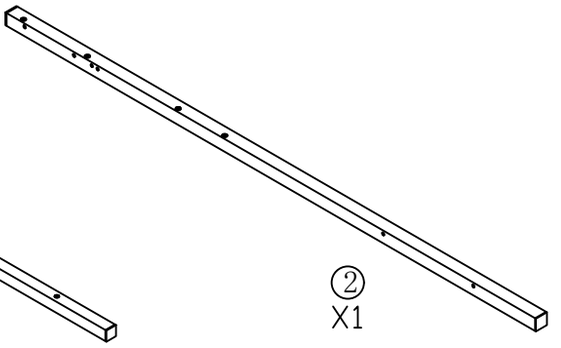


② X1

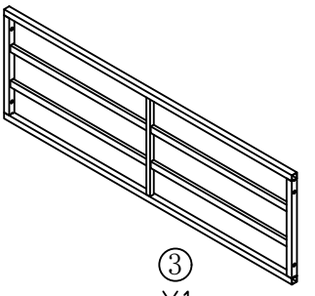


③ X1

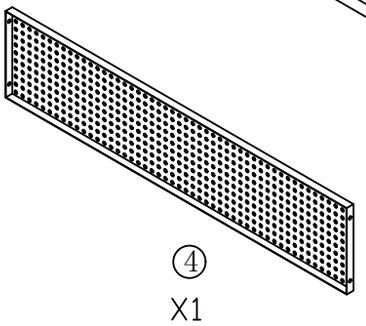


④ X1

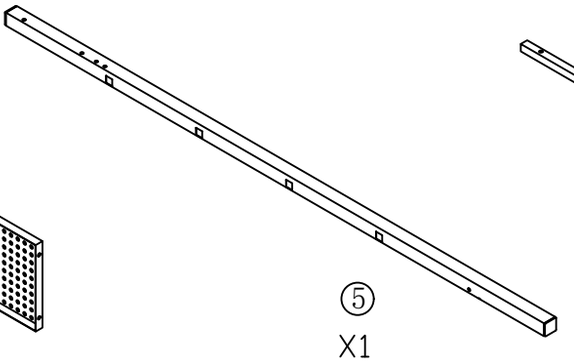


⑤ X1

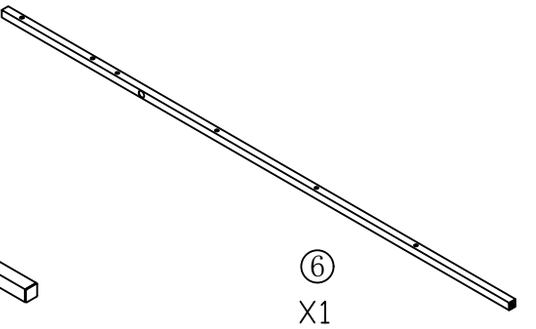


⑥ X1

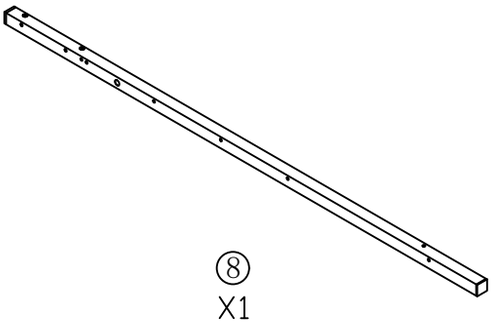


⑧ X1

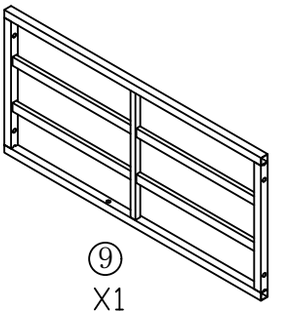


⑨ X1

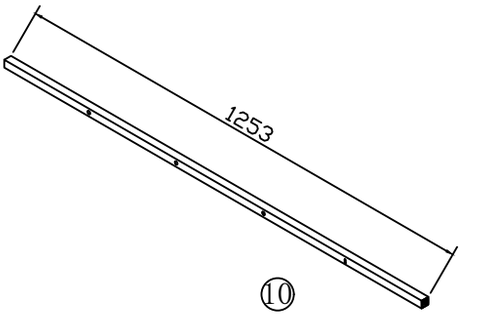


⑩ X1

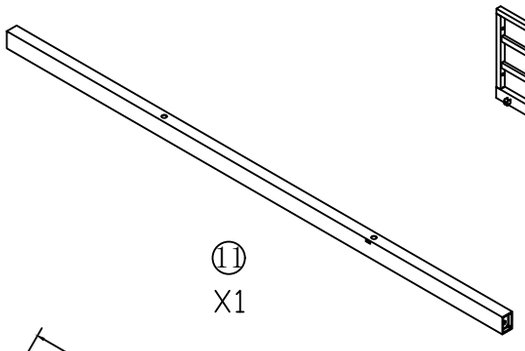


⑪ X1

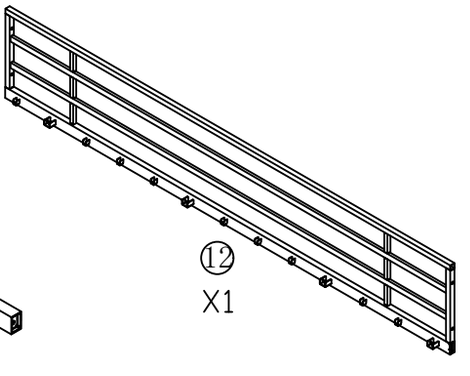


⑫ X1

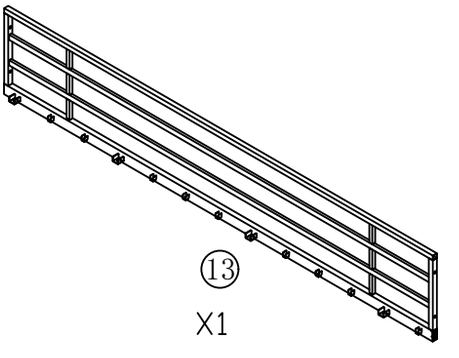


⑬ X1

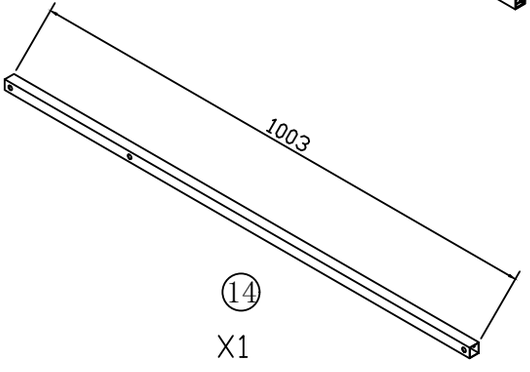

⑭ X1

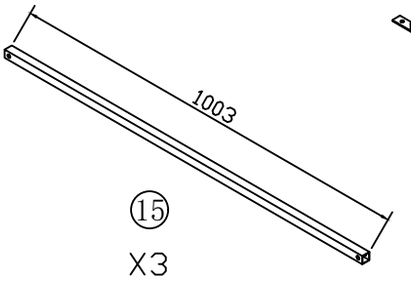


⑮ X3

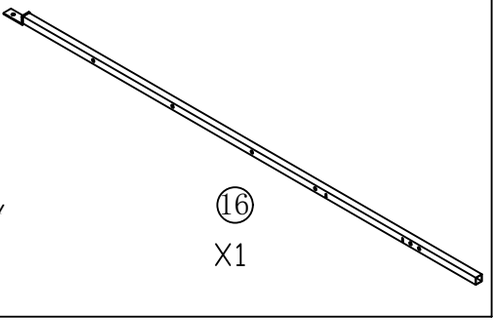


⑯ X1


PARTS LIST

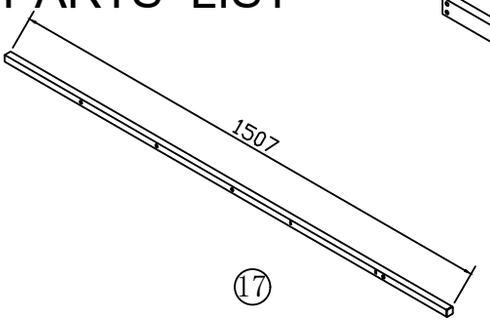


⑰
X1

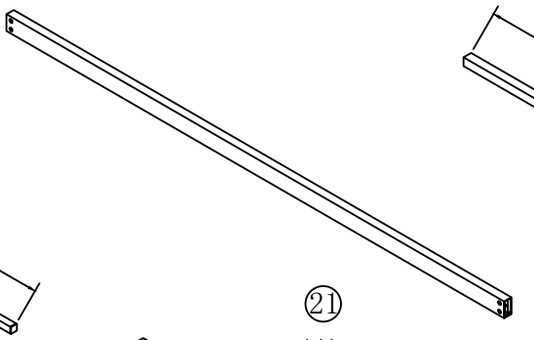


㉑
X1

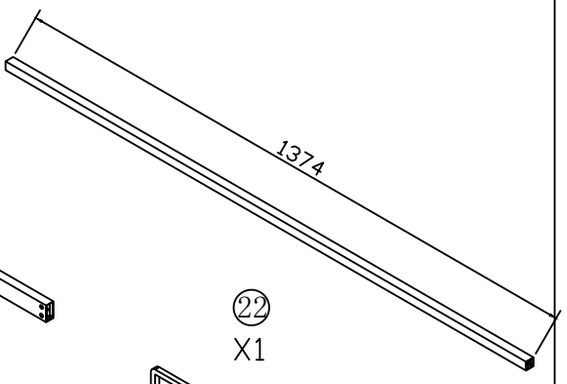


㉒
X1

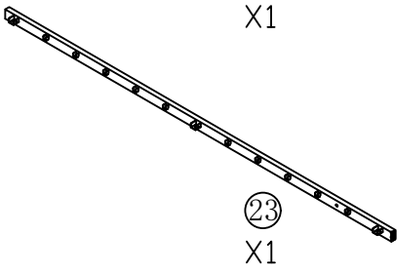


㉓
X1

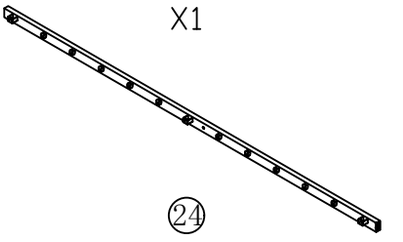


㉔
X1

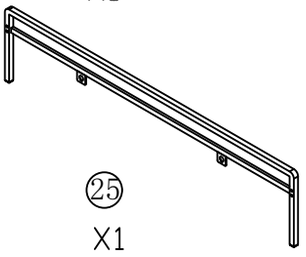


㉕
X1

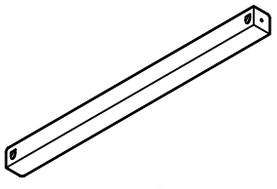


㉖
X2

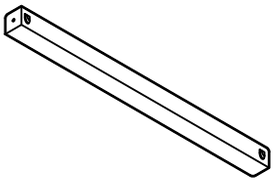


㉗
X2

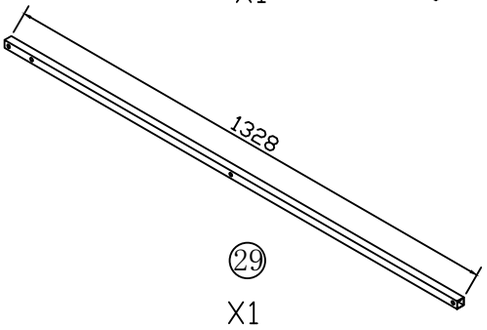


㉙
X1

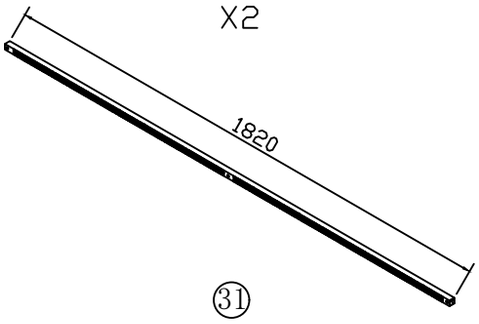


㉛
X1

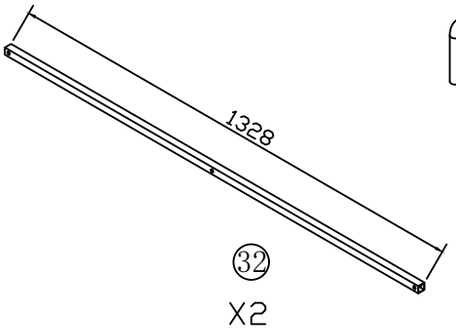


㉜
X2

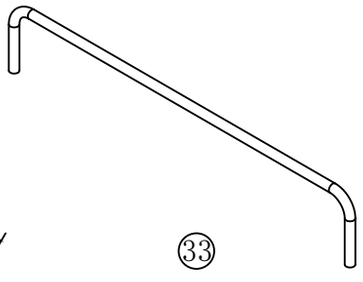


㉝
X1

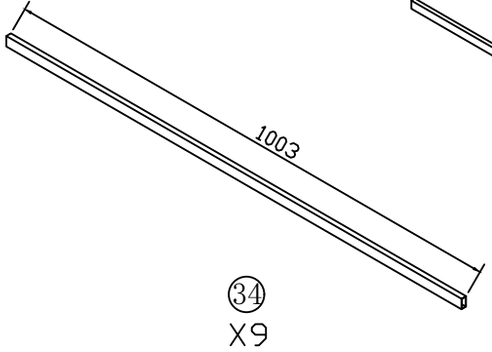


㉞
X9

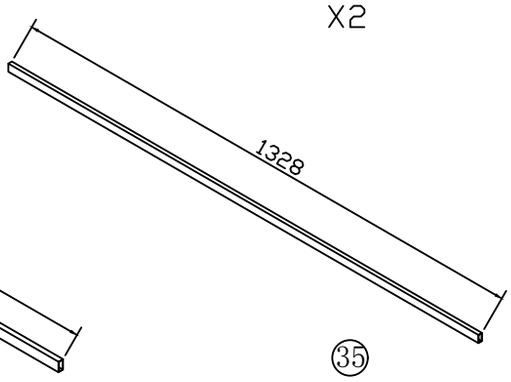

㉟
X10

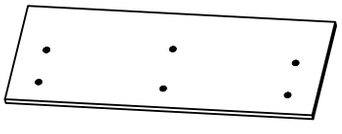


㊶
X2

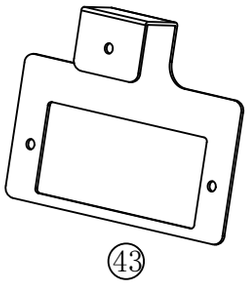


㊸
X1

HARDWARE LIST



A

M6X35mm
x41+2




B

M6X10mm
x12+1




C

x28+2




D

M6X17mm
x11+1




E

M6X55mm
x21+2



F

M6X50mm
x8+1

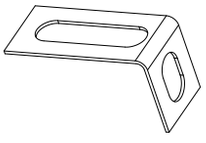

G

x2



H

M6X25mm
x26+2



I

M4X12mm
x4



J

x2



K1 x4




K2 x8




K3 x2

K




L

M6X15mm
x7+1




M

M4
x2



N

x6

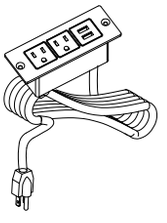


O

x1




P

M4X10mm
x2

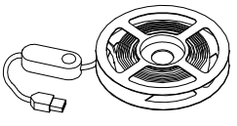


Q

1.9M
x1

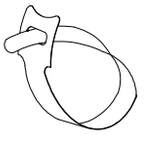


R

x4

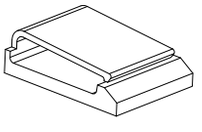


S

x4

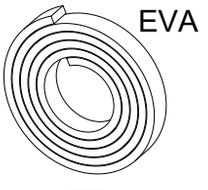


T

1.9M
x1

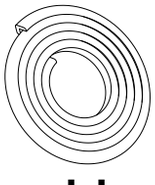


U

2M
x1




V

M5X50mm
x2

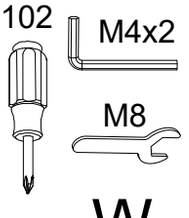

W


x1




X

x1


PARTS LIST

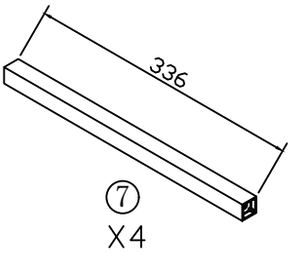


⑦
X4

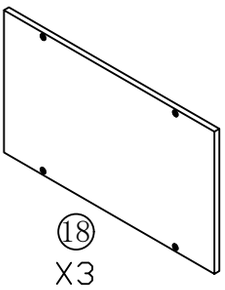


⑱
X3

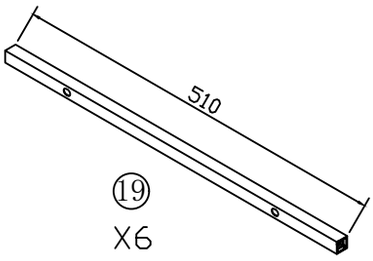


⑲
X6

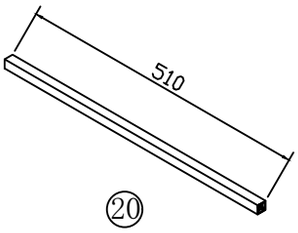

⑳
X1

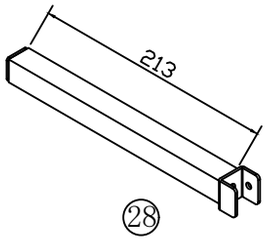


㉘
X1

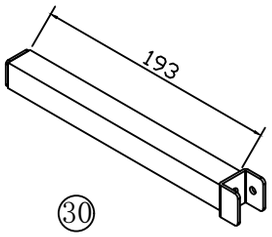


㉚
X3




㊱
X1

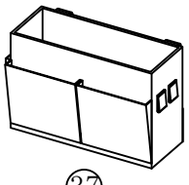


㊲
X1

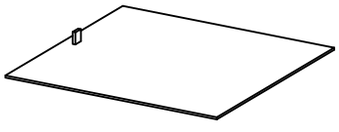


㊳
X2

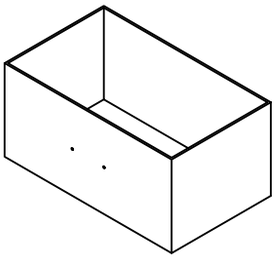

㊴
X2

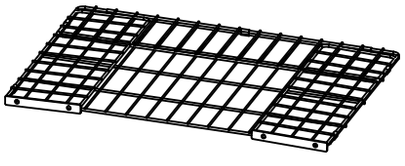

㊵
X2

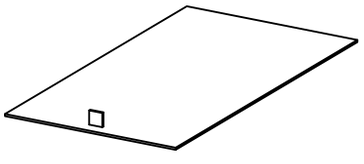


㊷
X2

Note:

1.Should be assembled on flat ground to keep balance.


2. Before completing the installation, do not tighten the screws.

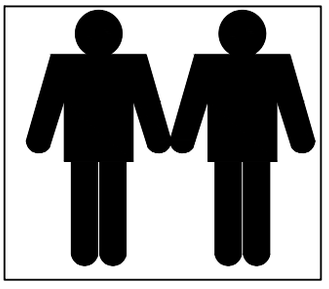

It needs at least
two people to install.




Before starting the assembly,
you must read the whole manual
and follow the instructions.

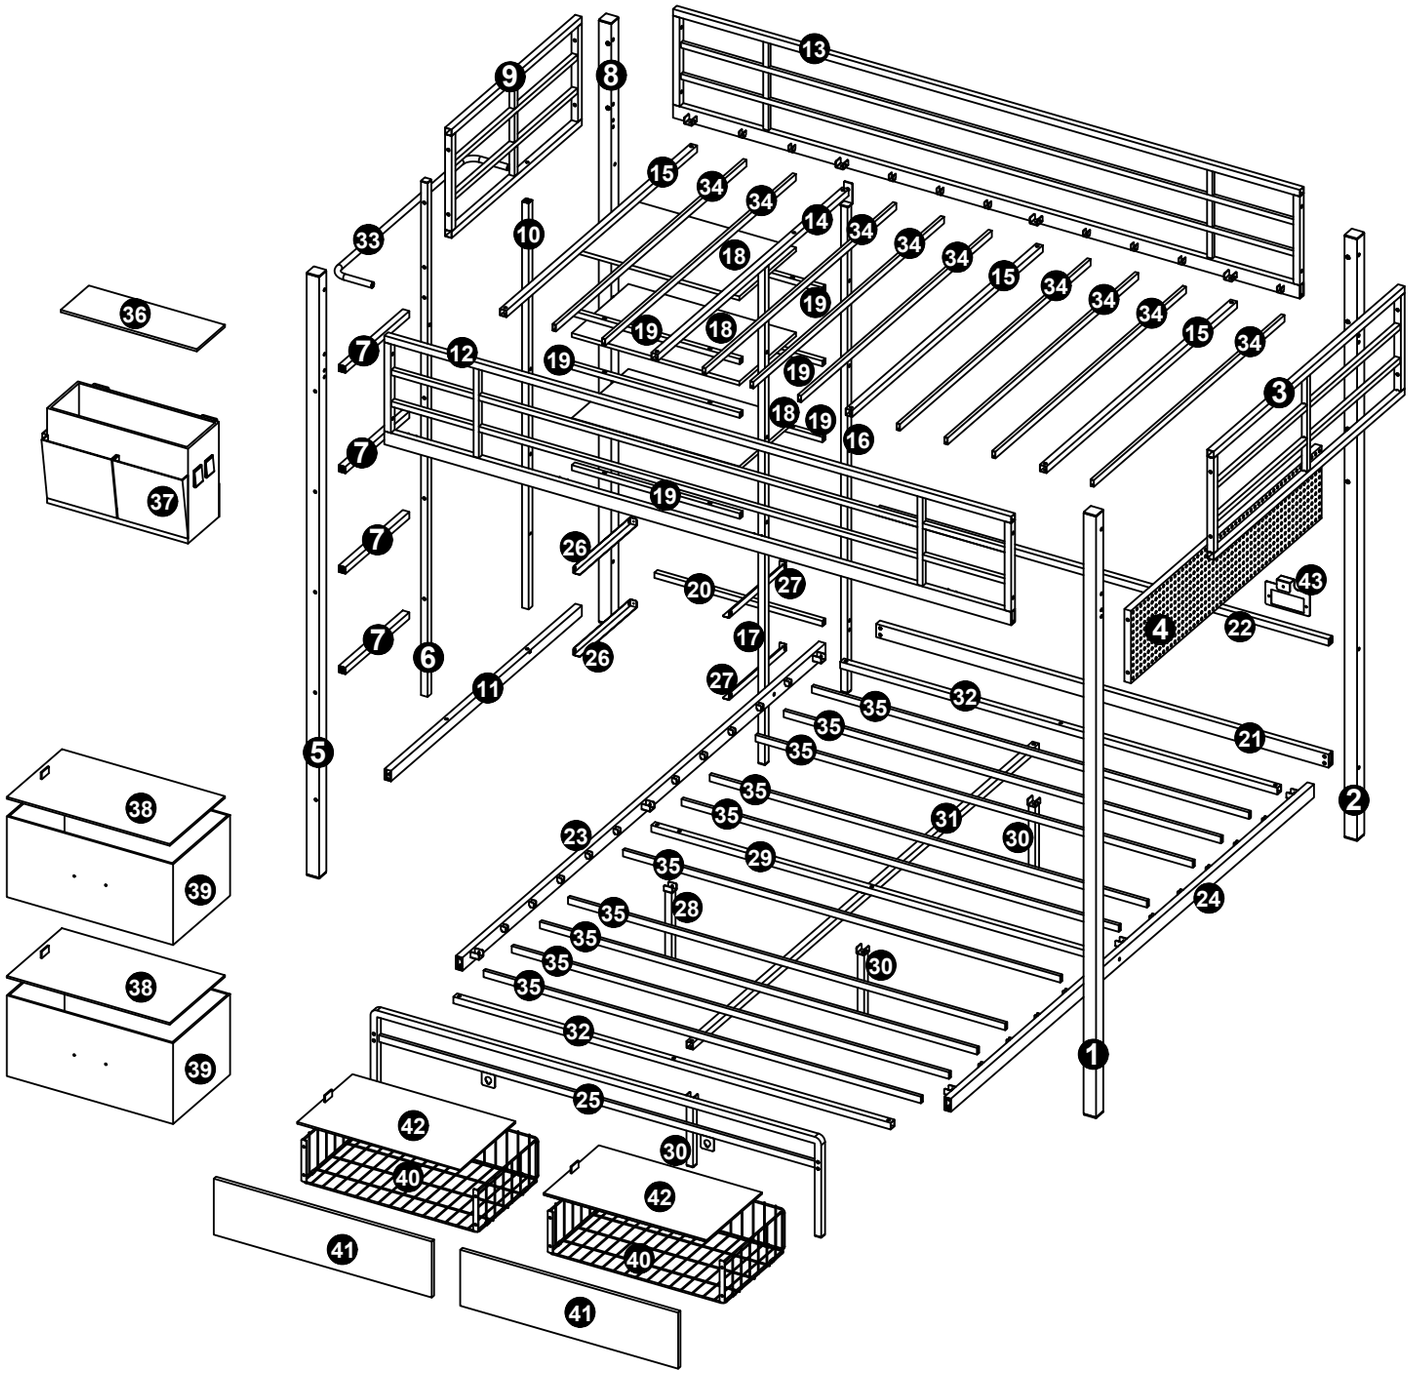

1


Be careful not to overtighten the screws.

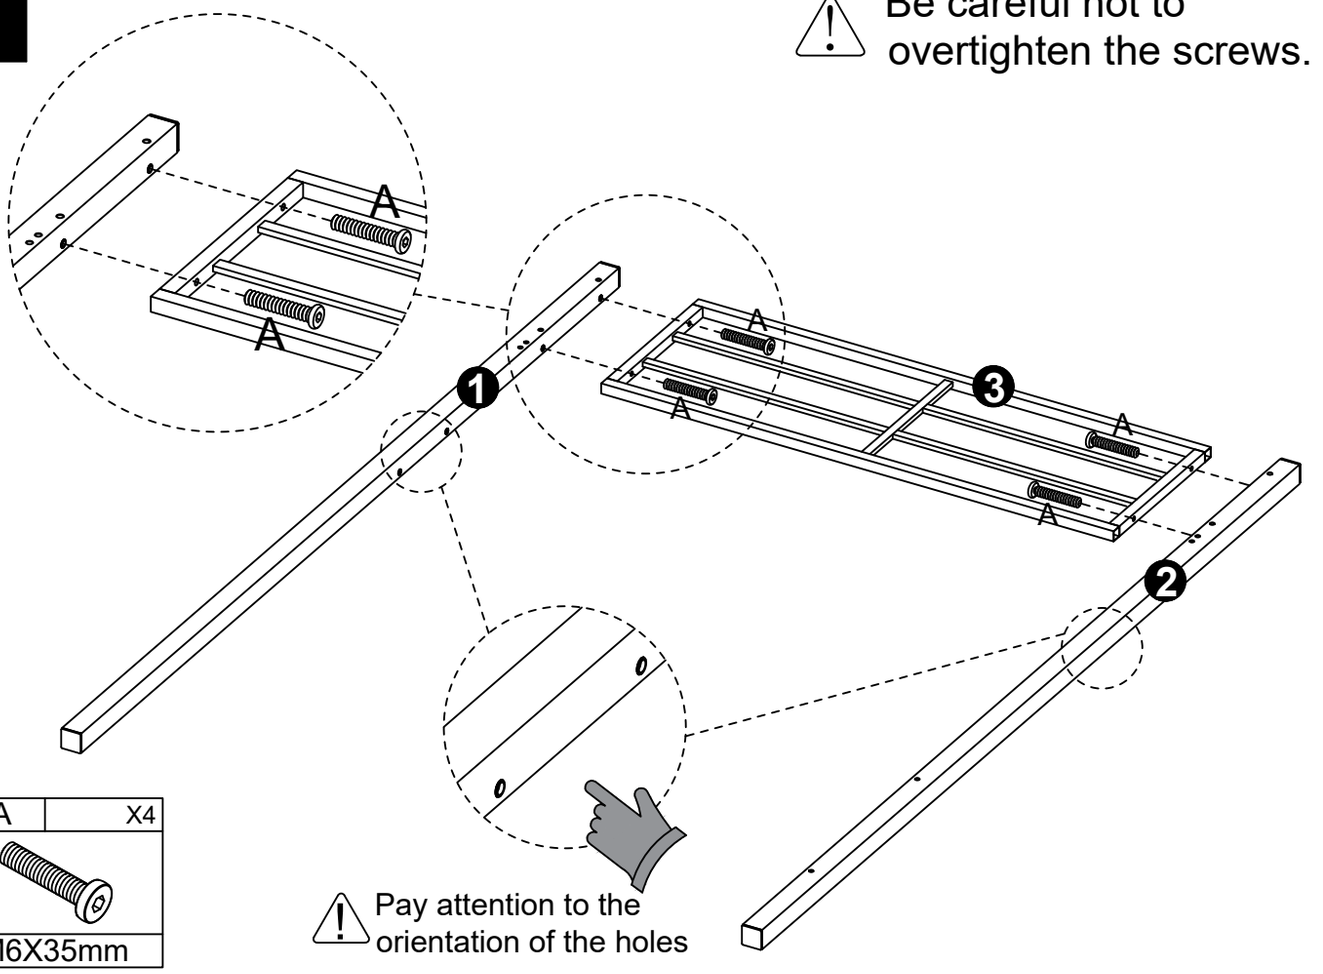

A	X4
M6X35mm	

Pay attention to the orientation of the holes

2

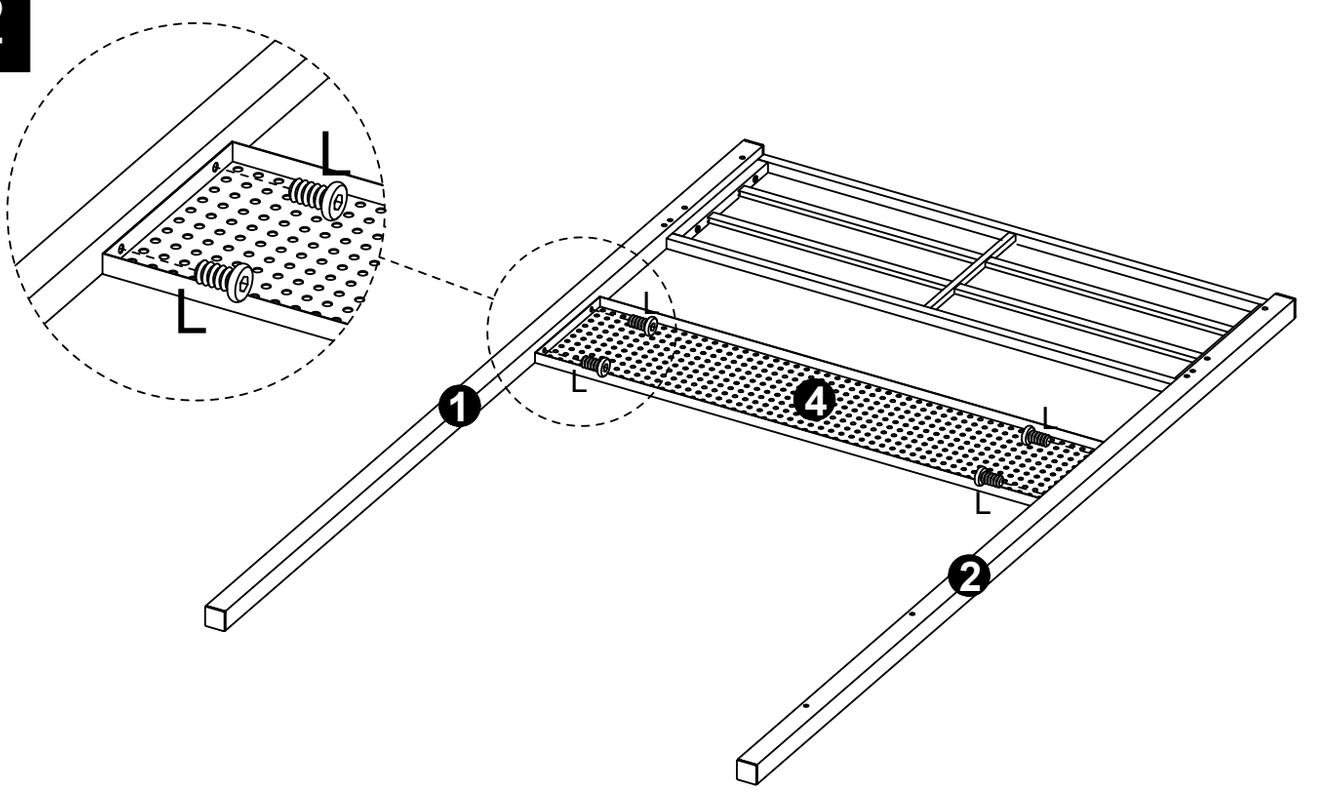


L	X4
M6X15mm	

Be careful not to overtighten the screws.

3


Be careful not to overtighten the screws.

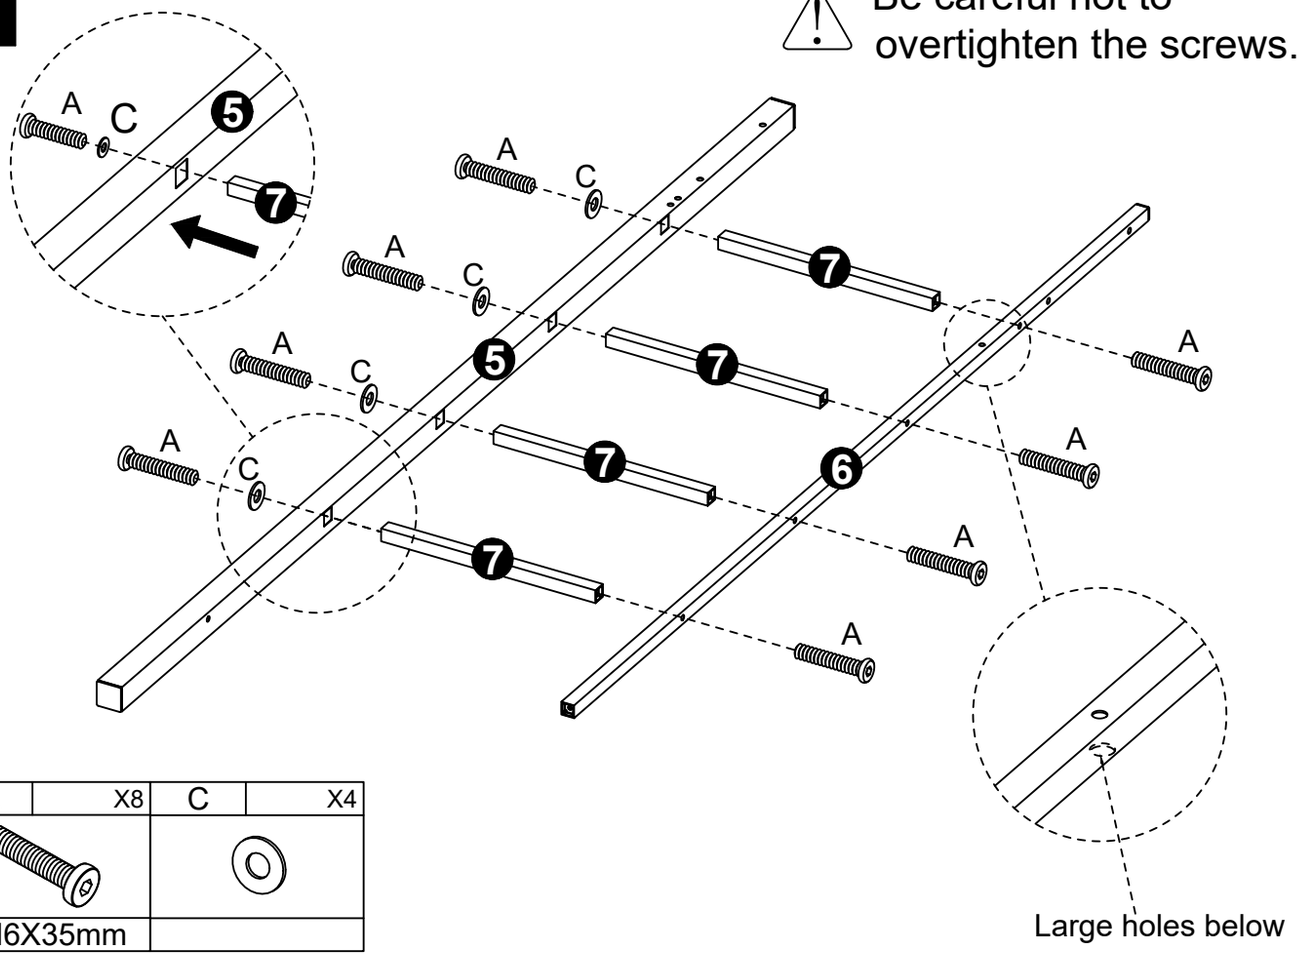

A	X8	C	X4
M6X35mm			


4

Be careful not to overtighten the screws.

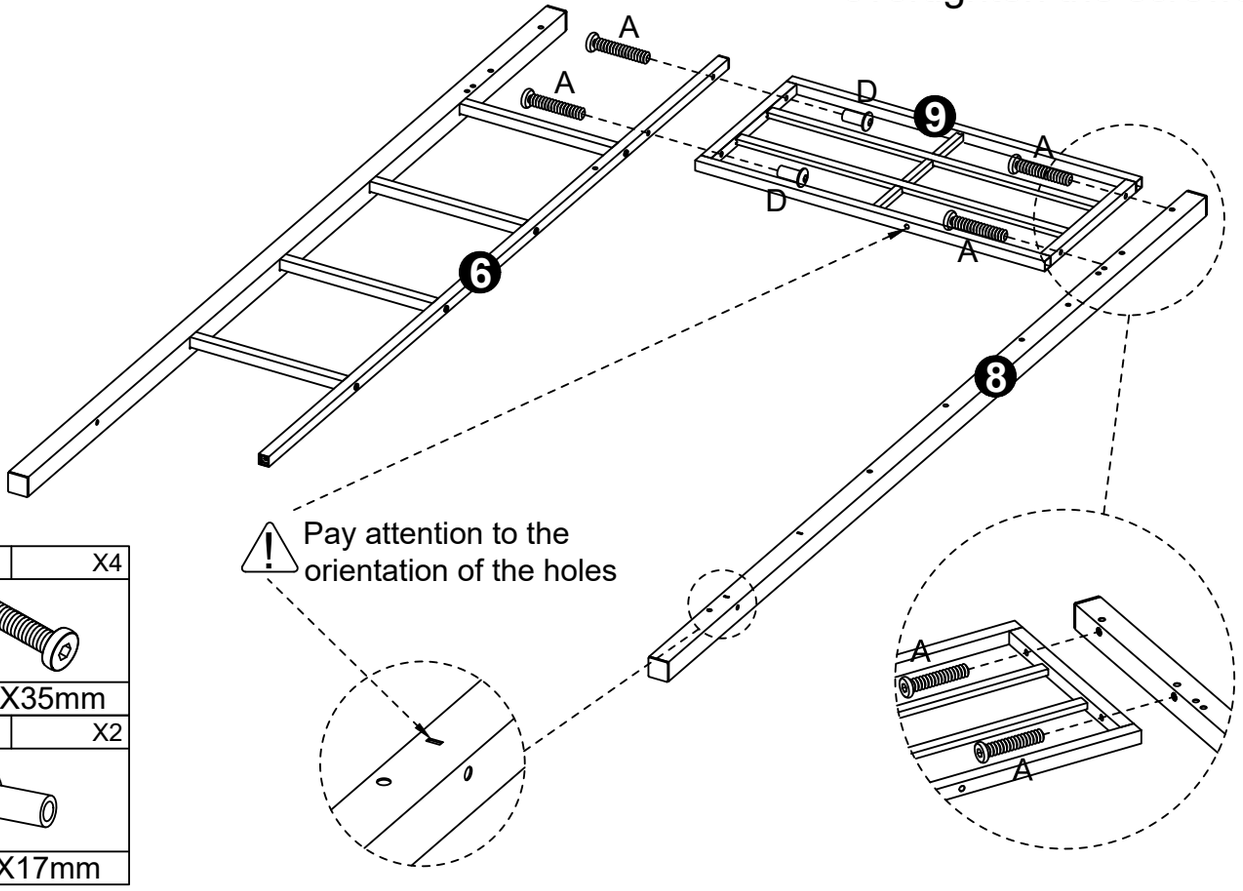


A	X4
M6X35mm	
D	X2
M6X17mm	

5

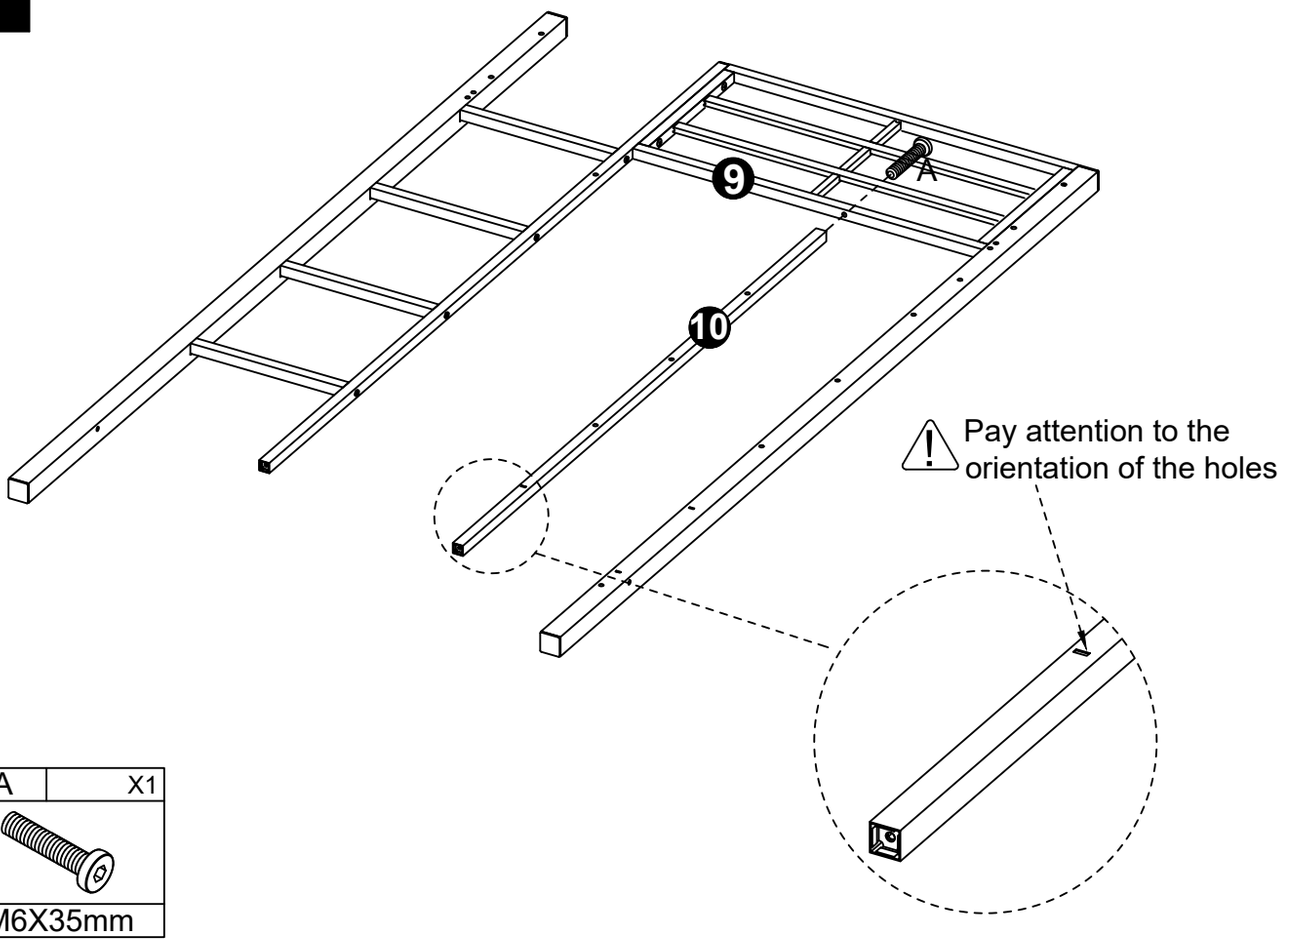

A	X1
M6X35mm	


6

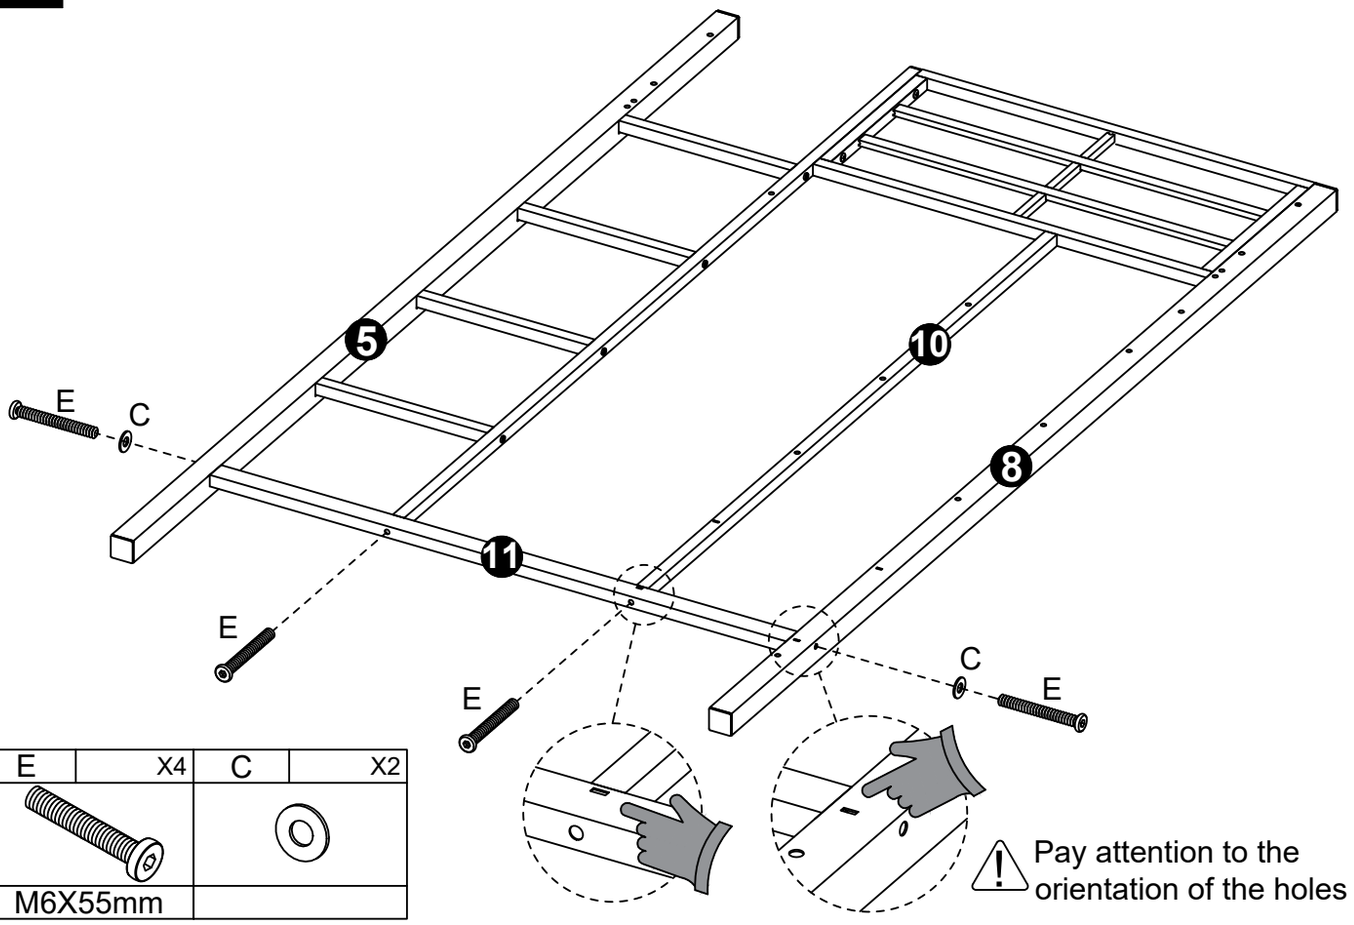

E	X4	C	X2
M6X55mm			


7

Note the installation direction of 1, 2, 13 and 8

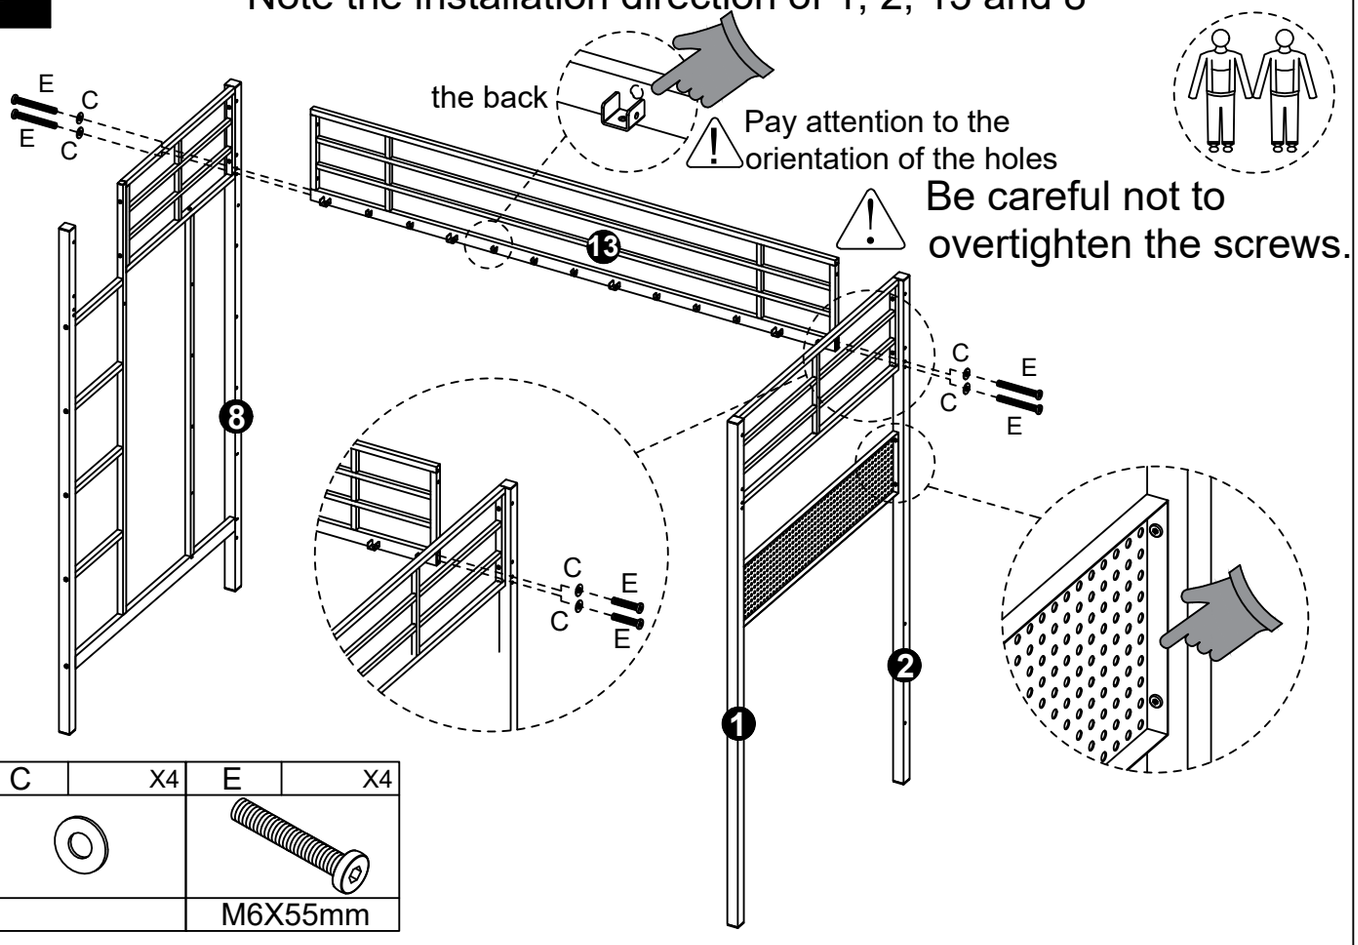


C	X4	E	X4
			M6X55mm


8

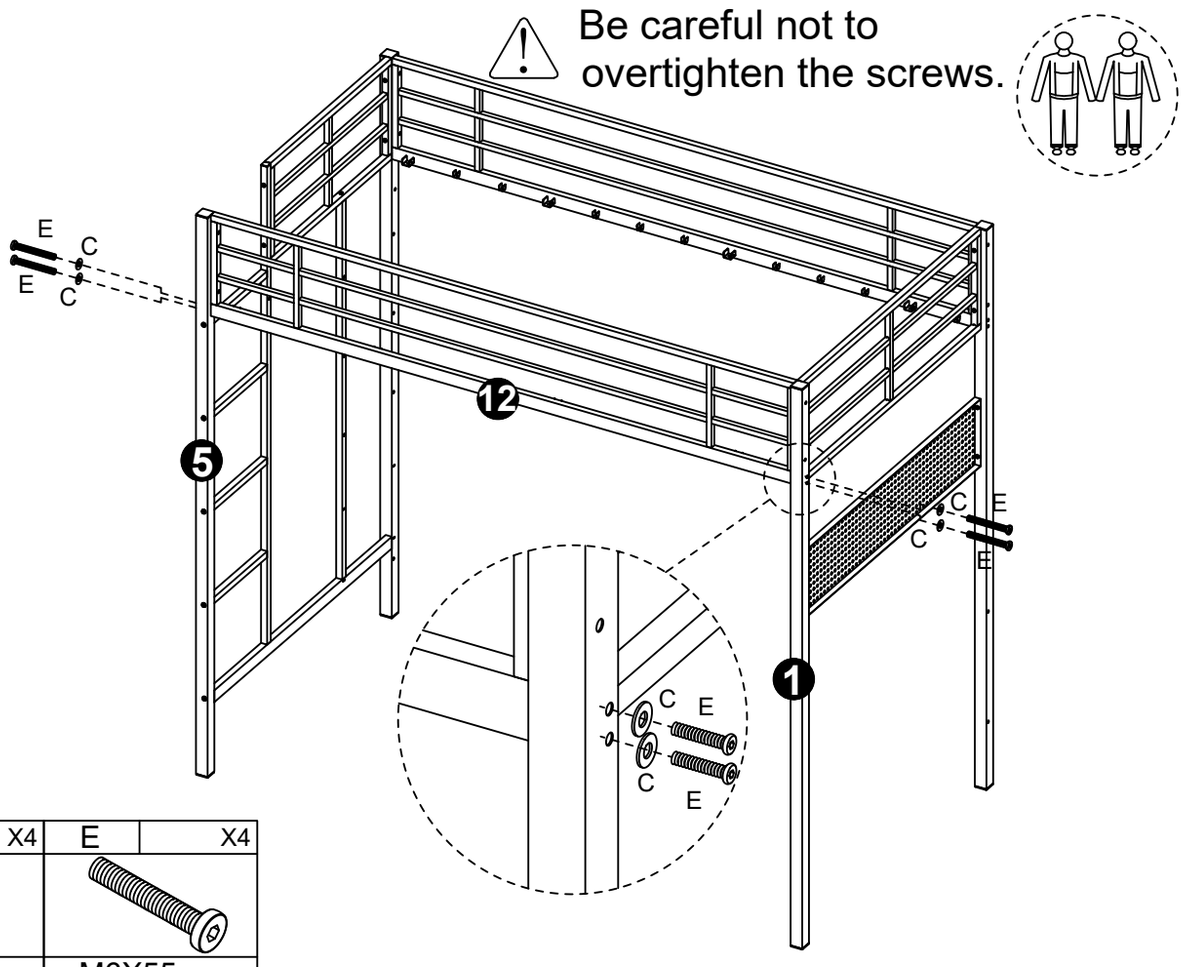

C	X4	E	X4
			
			M6X55mm

9

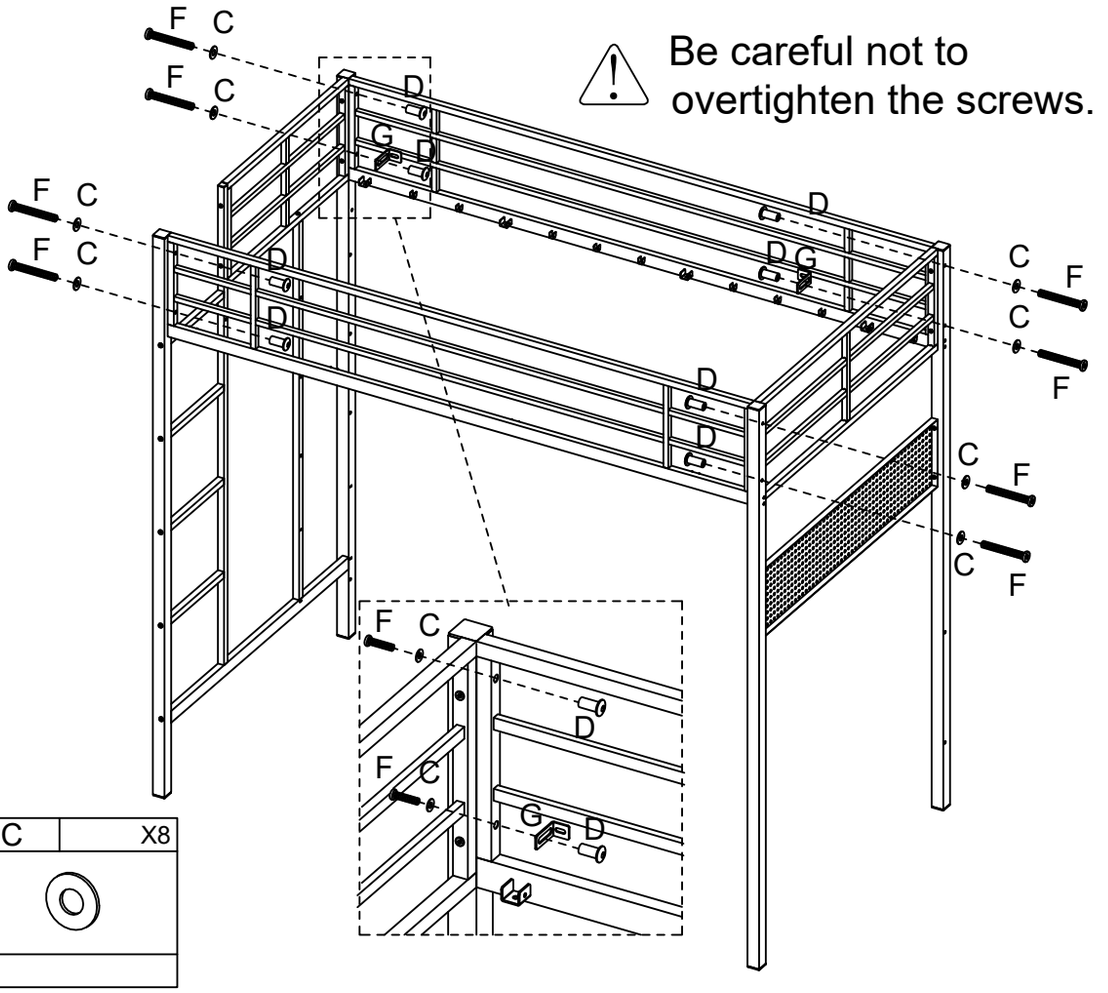



G	X2
	

D	X8
	
M6X17mm	

F	X8	C	X8
			
M6X50mm			

10

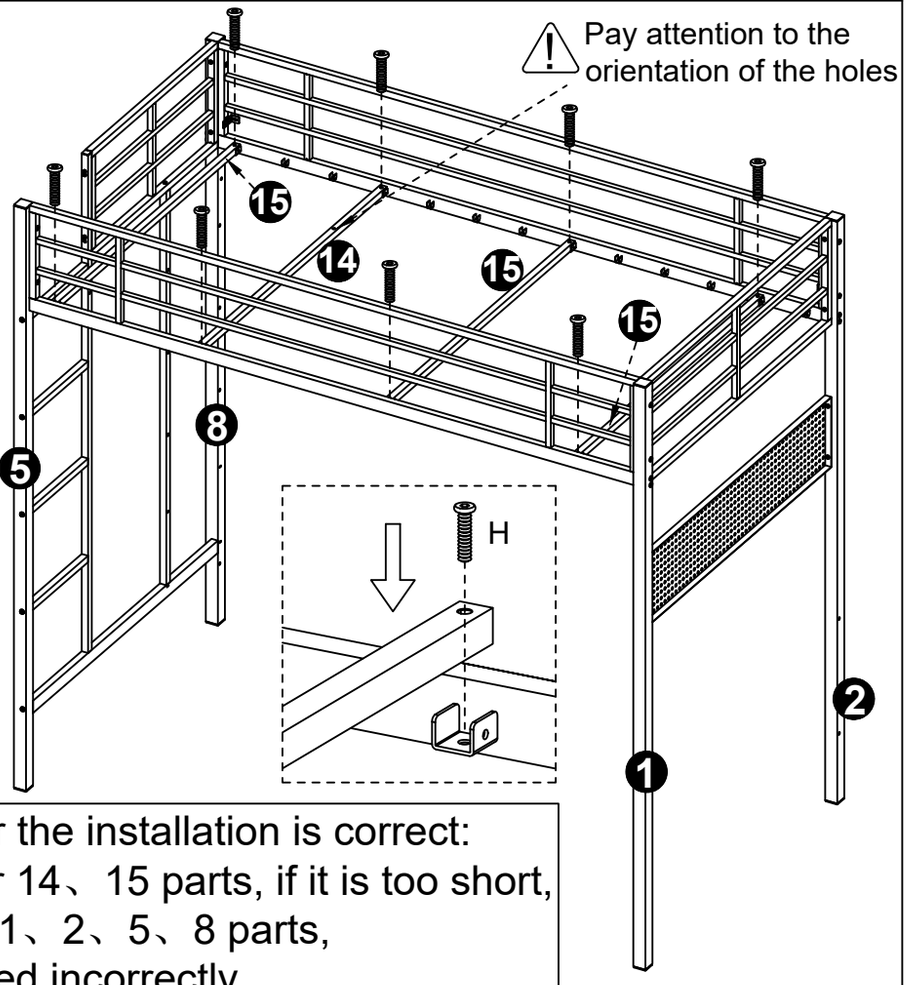

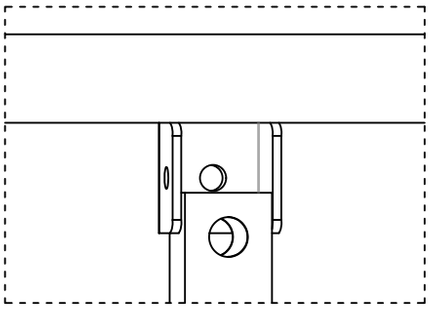



Error

H	X8
	
M6X25mm	

Please first check whether the installation is correct:
first try to lock the number 14、15 parts, if it is too short,
please check the number 1、2、5、8 parts,
some of which are installed incorrectly.


11

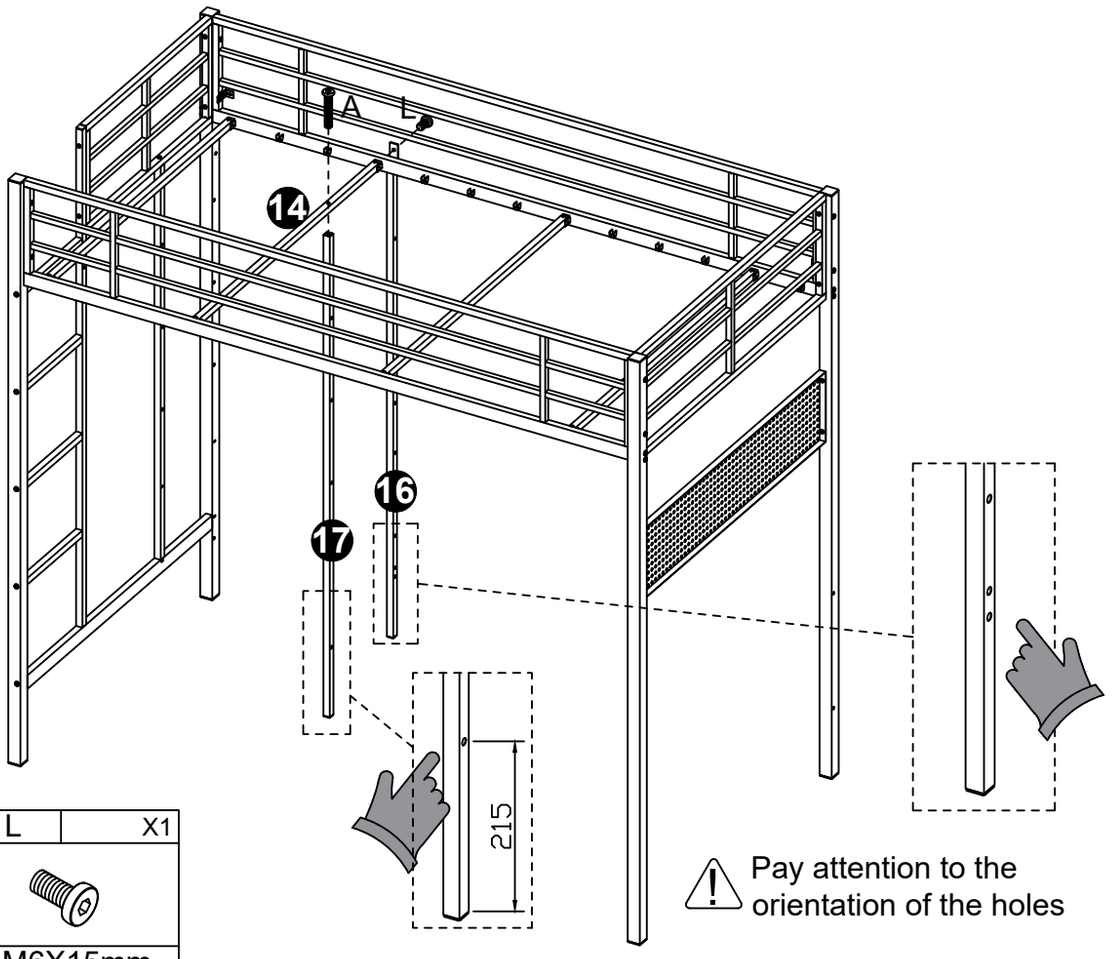

A	X1	L	X1
			
M6X35mm		M6X15mm	


⚠ Pay attention to the orientation of the holes


12

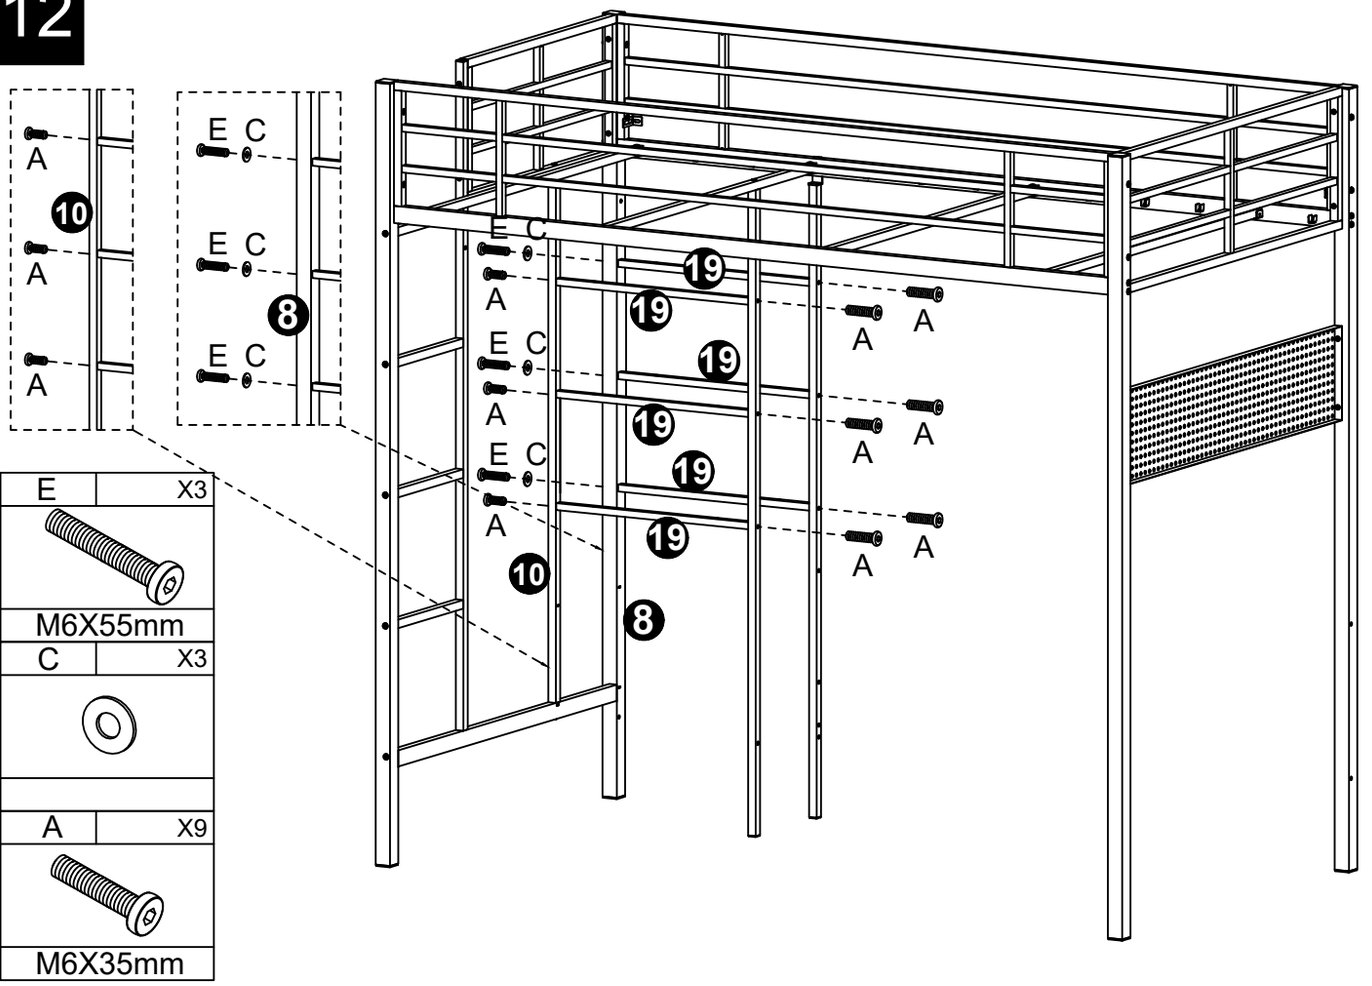


E	X3
M6X55mm	
C	X3
A	X9
M6X35mm	



13

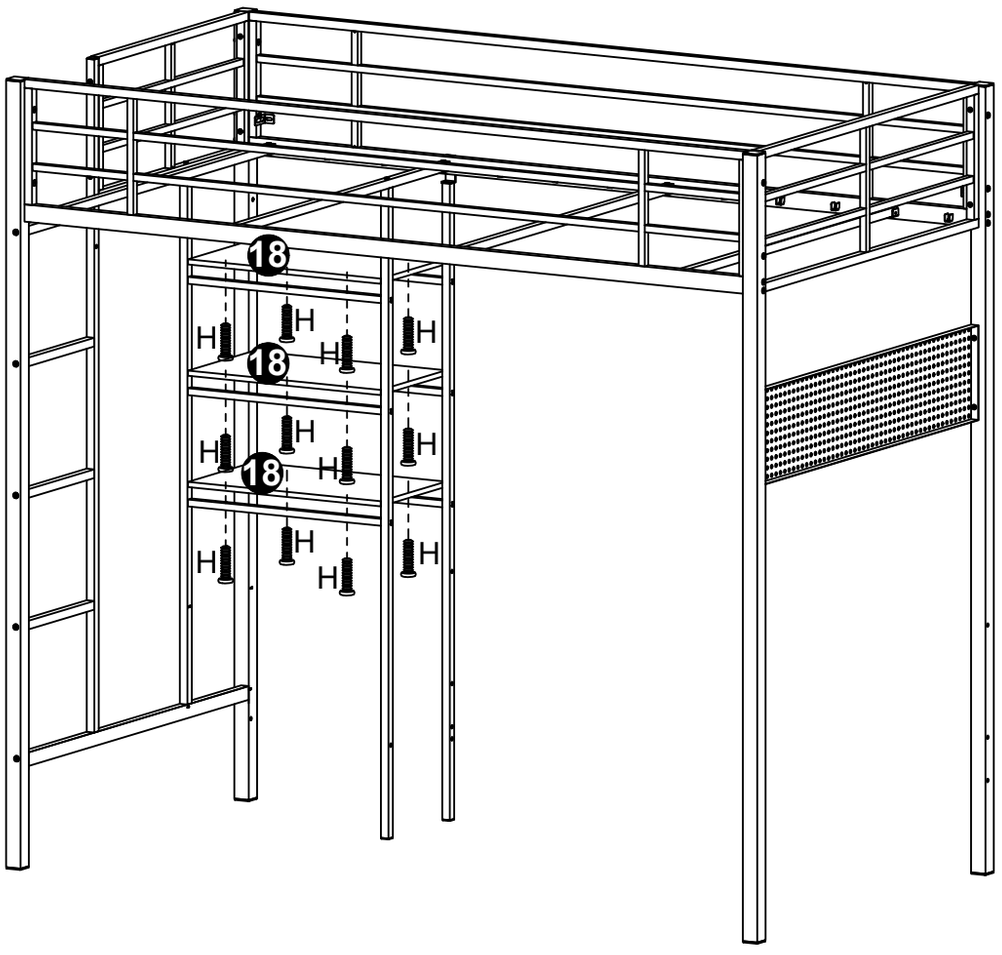



H	X12
	
M6X25mm	


14

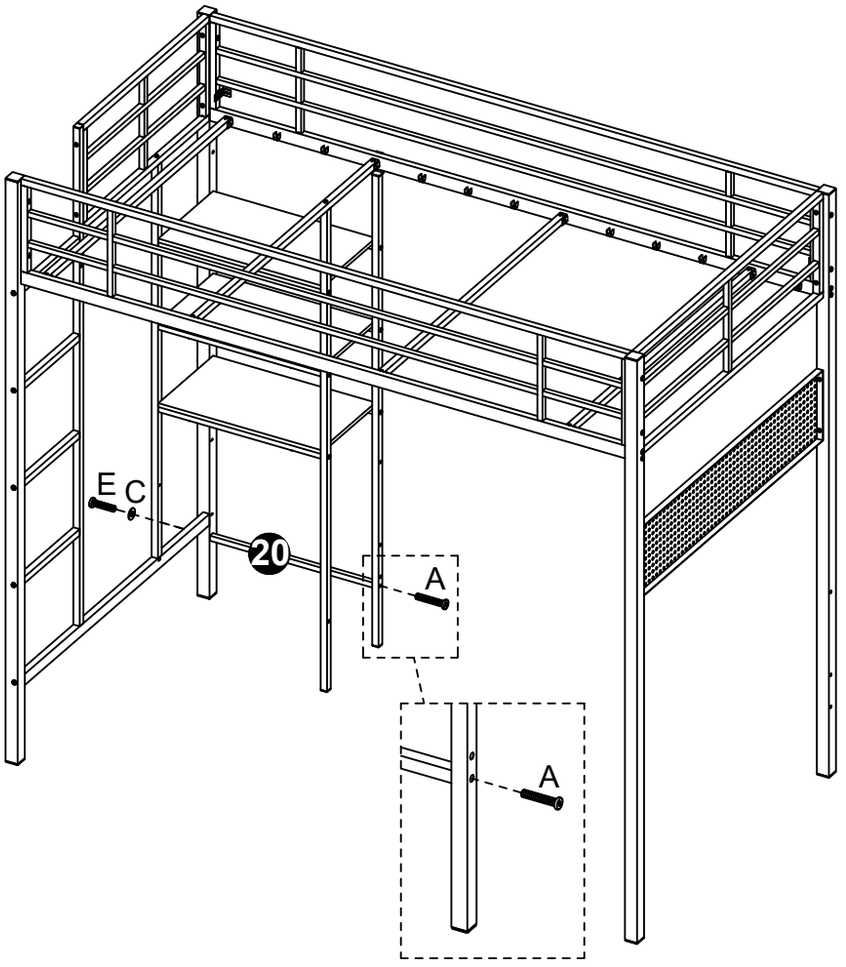



E	X1
	
M6X55mm	
C	X1
	
A	X1
	
M6X35mm	


15

E	X1
	
M6X55mm	
C	X1
	
A	X1
	
M6X35mm	

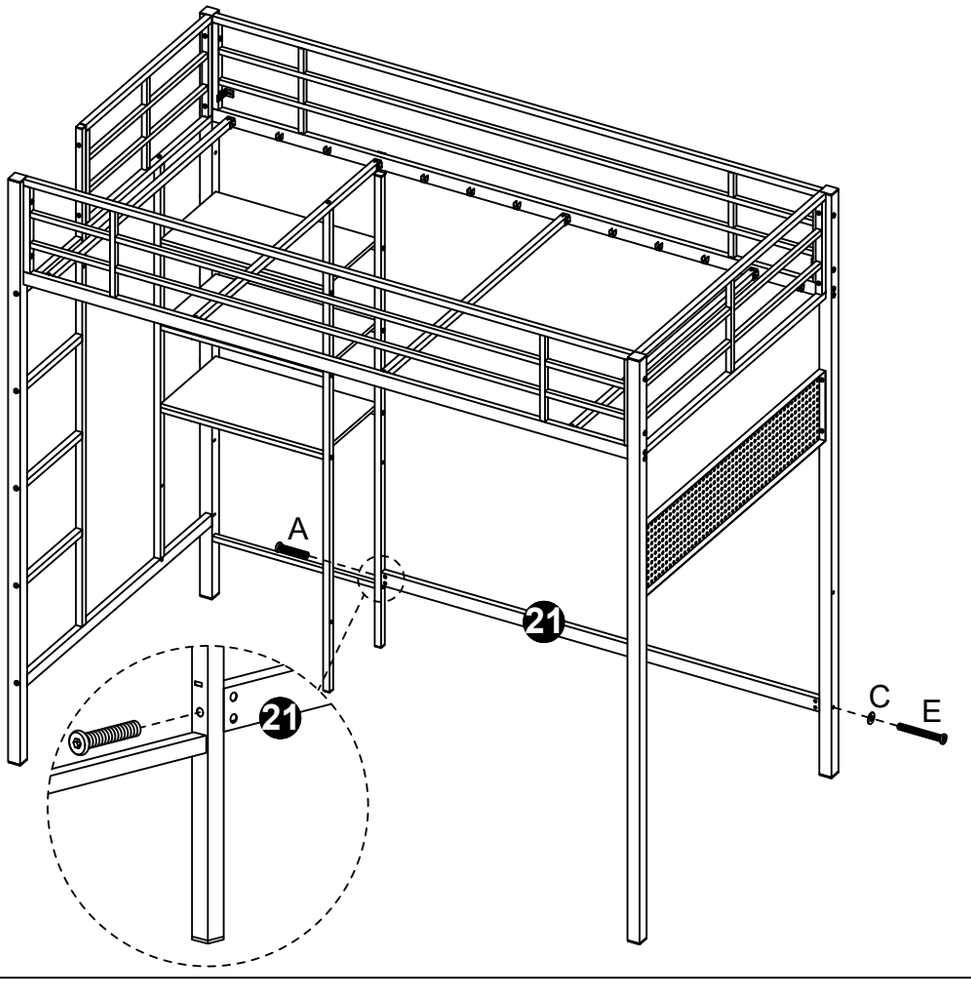


16


E	X1
	
M6X55mm	
C	X1
	
A	X1
	
M6X35mm	


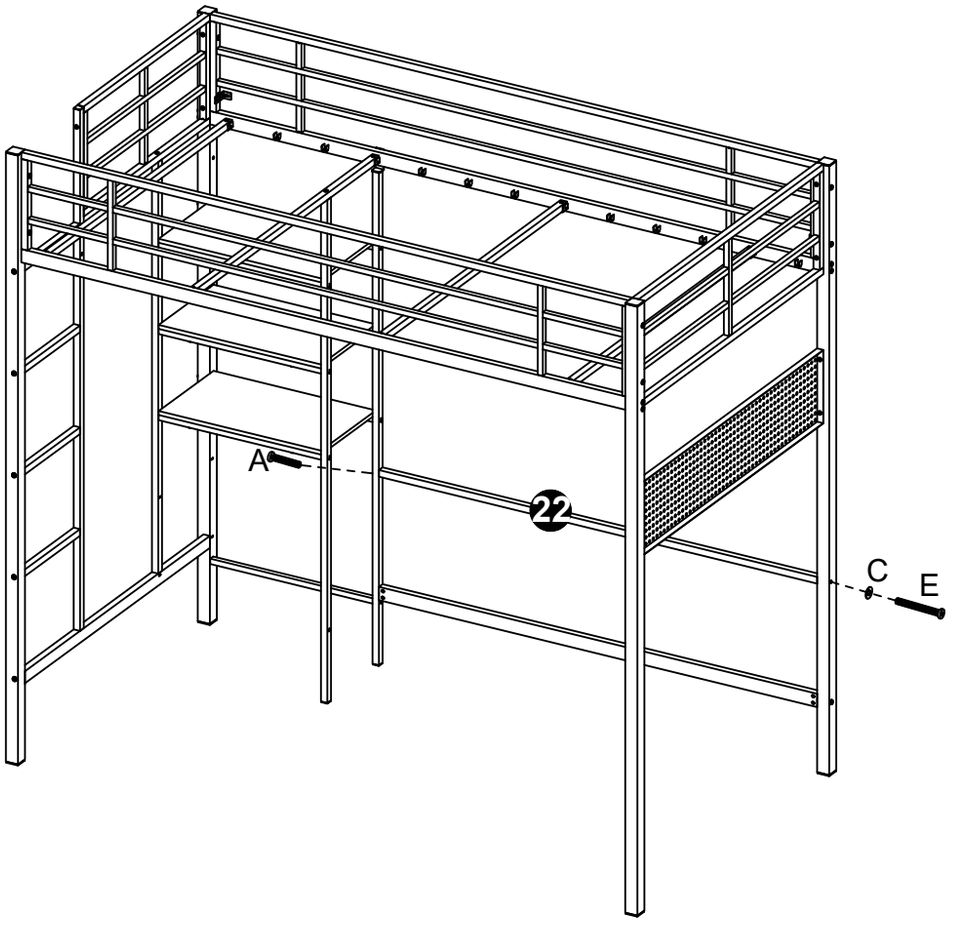


17


Pay attention to the front and back of the accessory

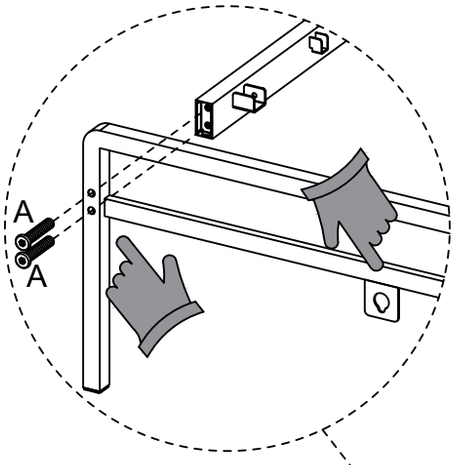


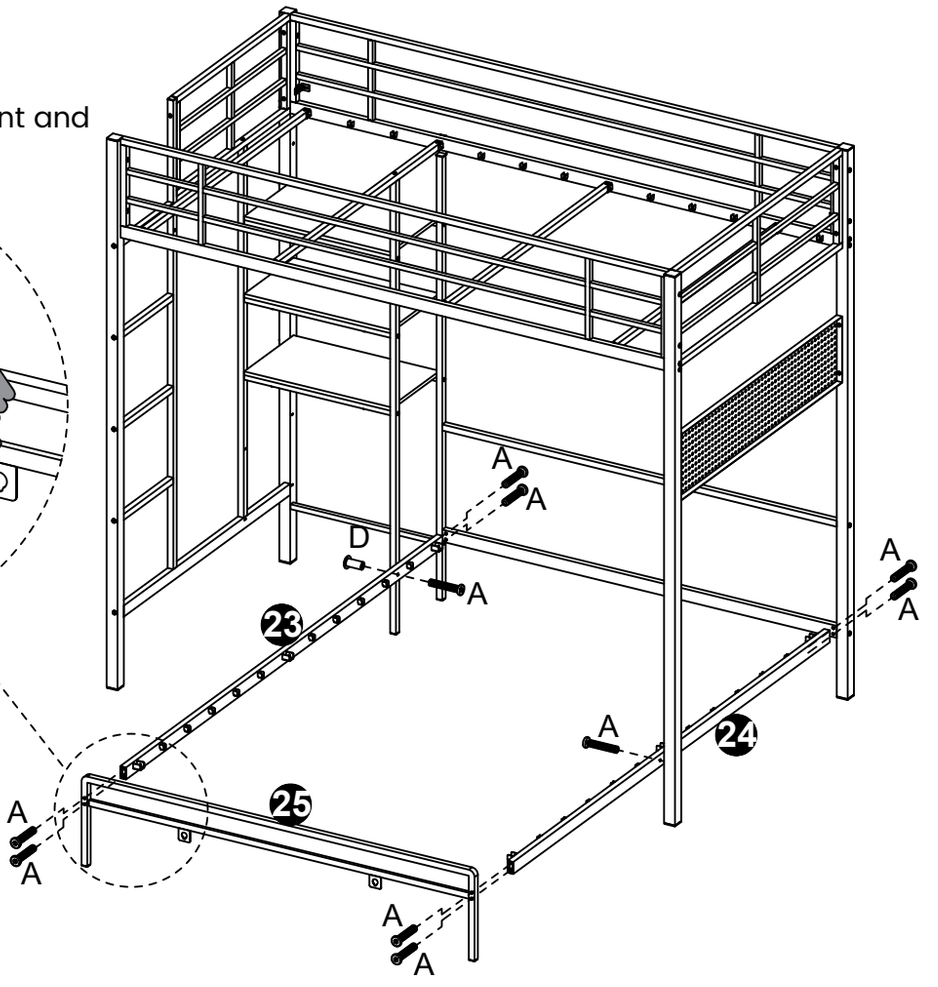


D	X1
	
M6X17mm	
A	X10
	
M6X35mm	


18

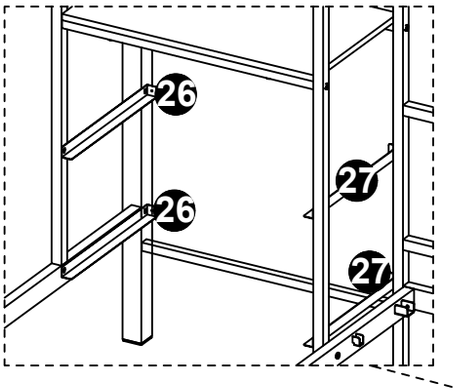

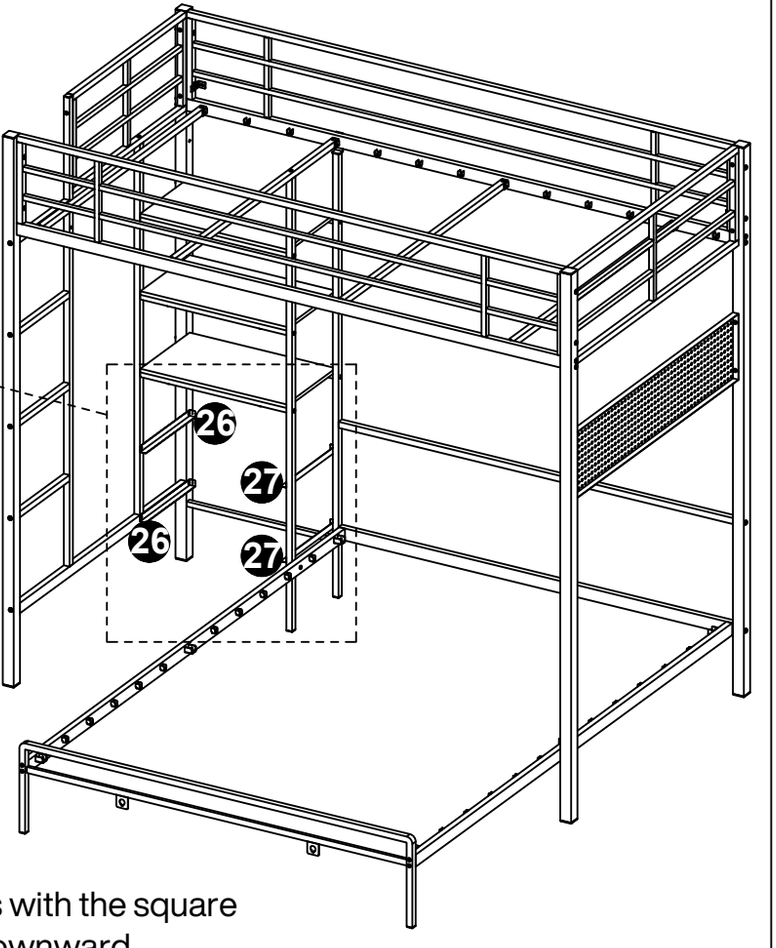

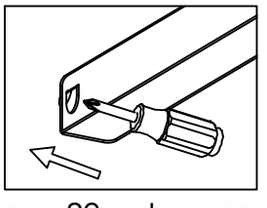



Accessory 26 and accessory27 must be supported with a tool before installation.

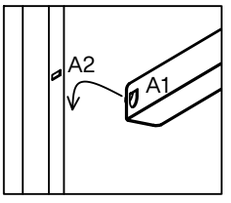


Note that the protruding part of A-1 aligns with the square hole of A-2 and then press inward and downward.

19

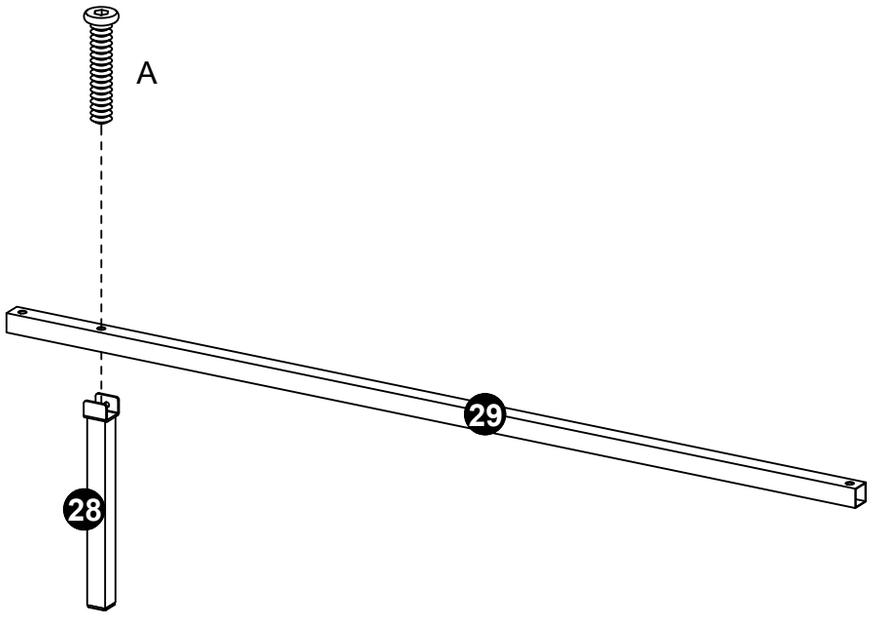


A	X1
	
M6X35mm	


20

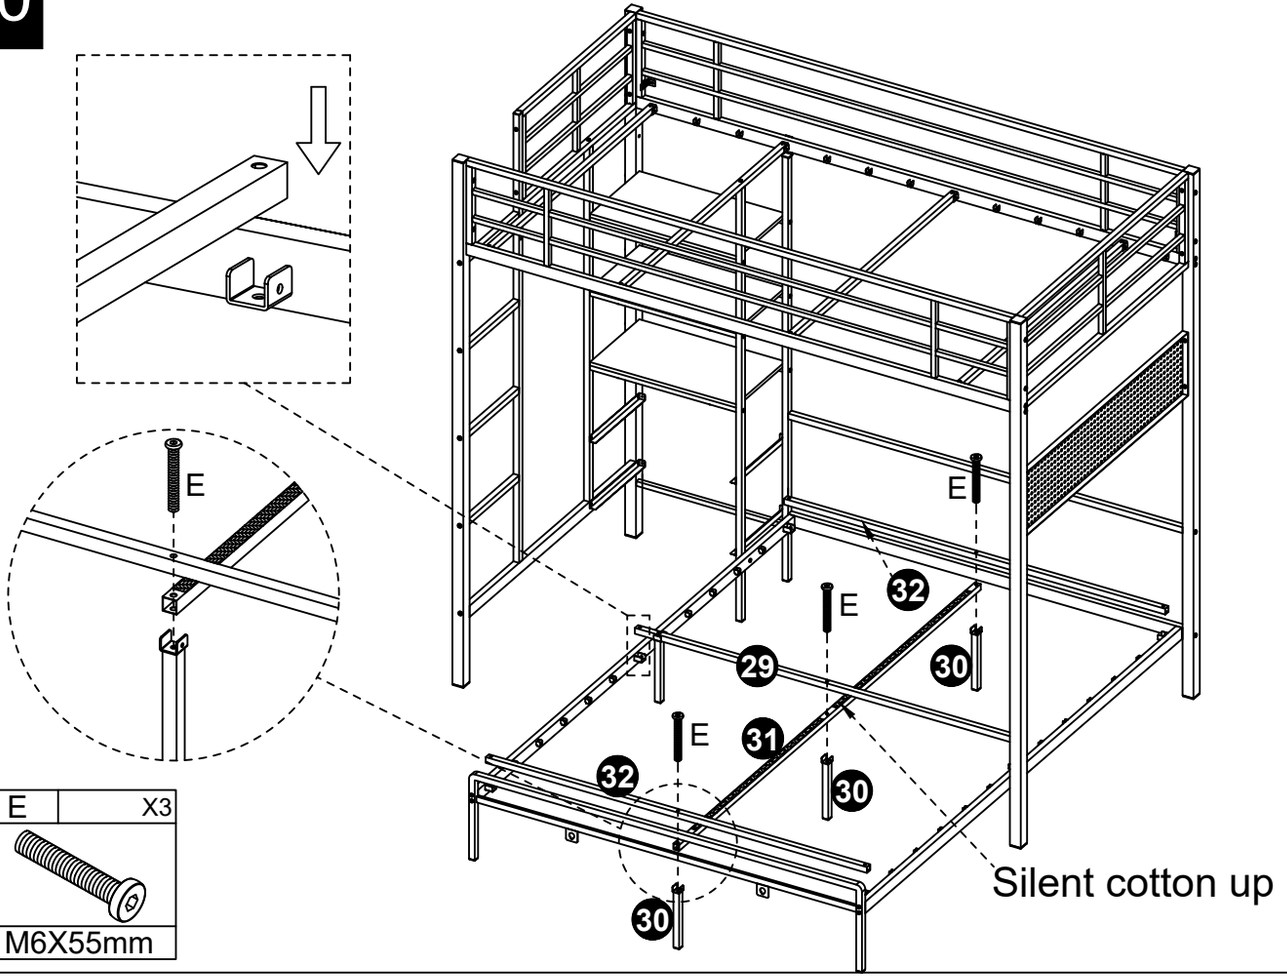


E	X3
M6X55mm	


21

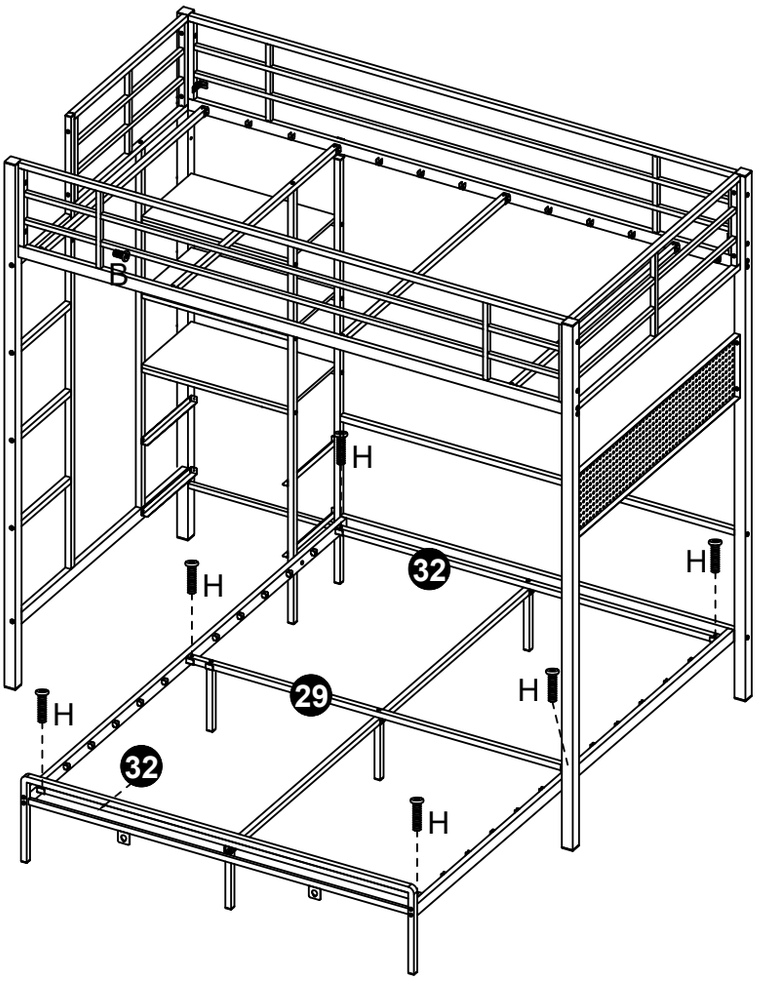


H	X6
	
M6X25mm	

22

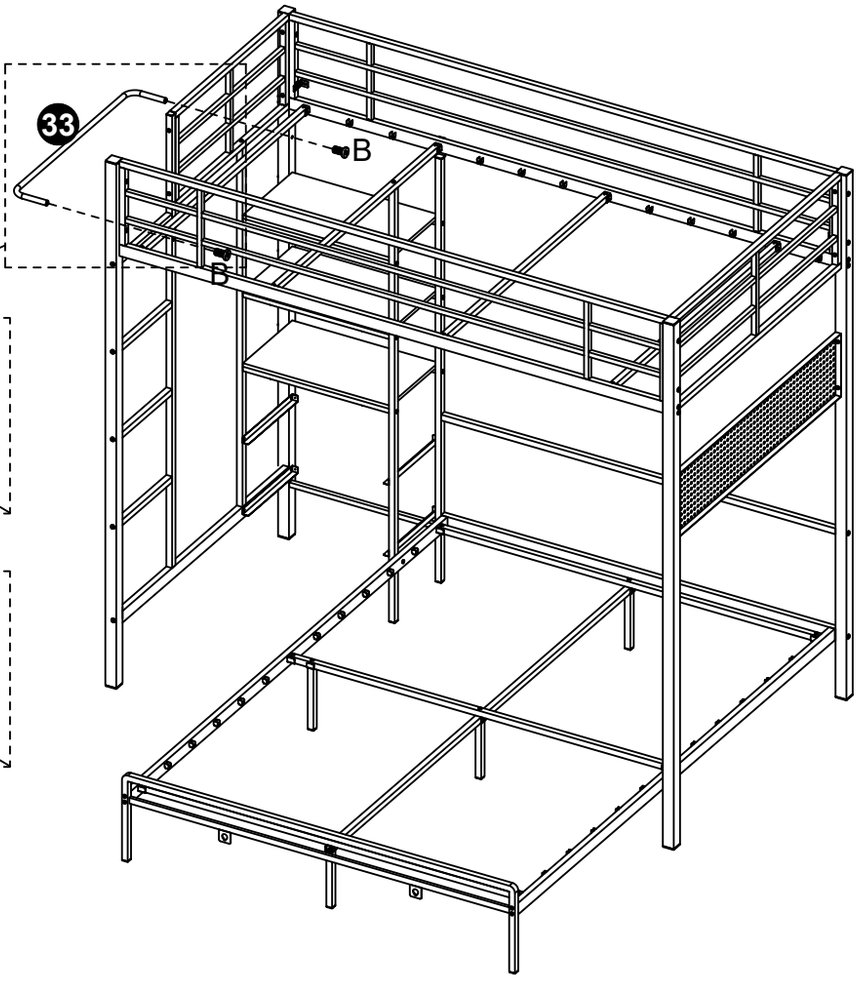


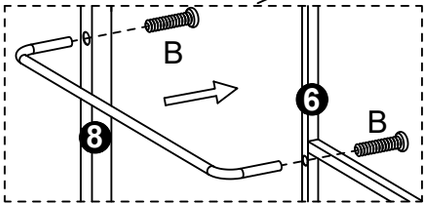


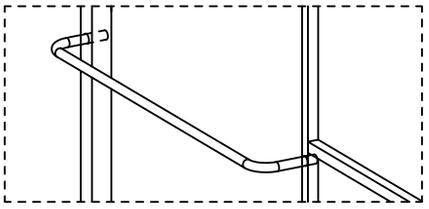


B	X2
	
M6X10mm	


23

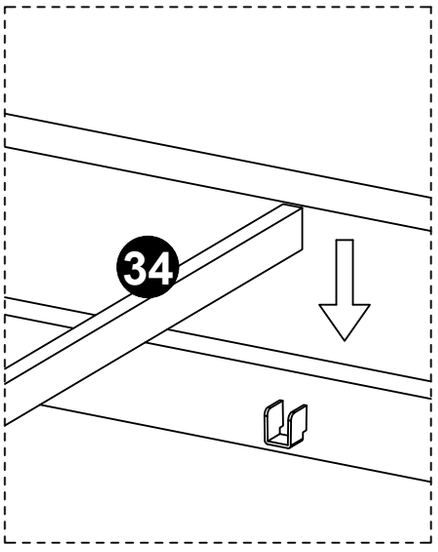

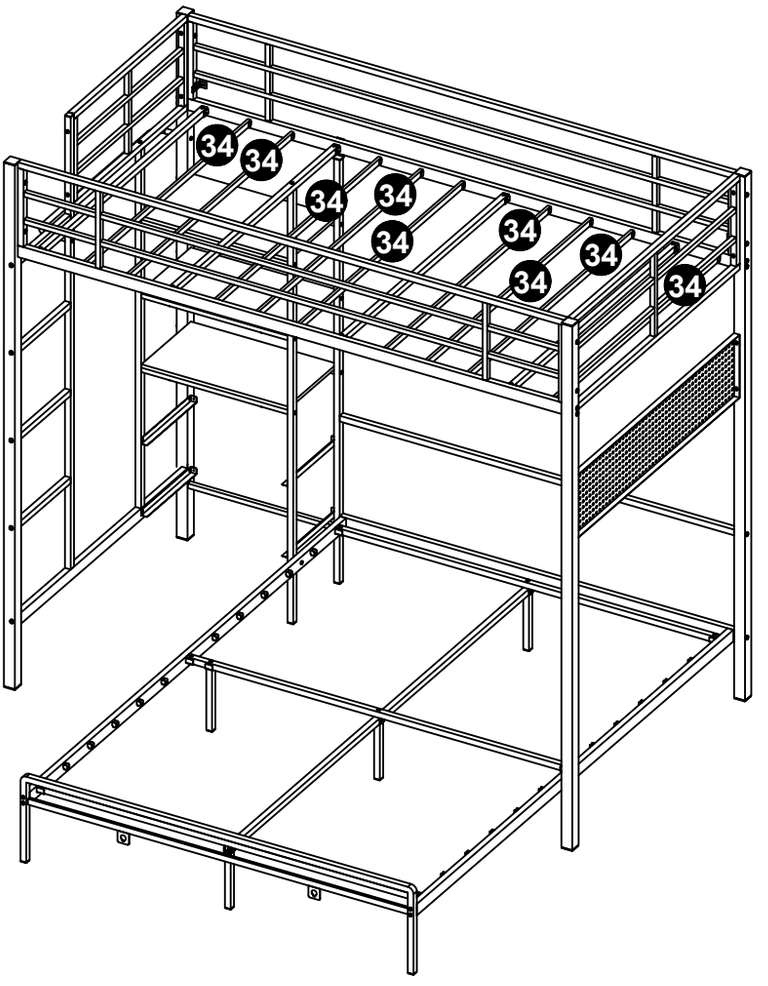


24

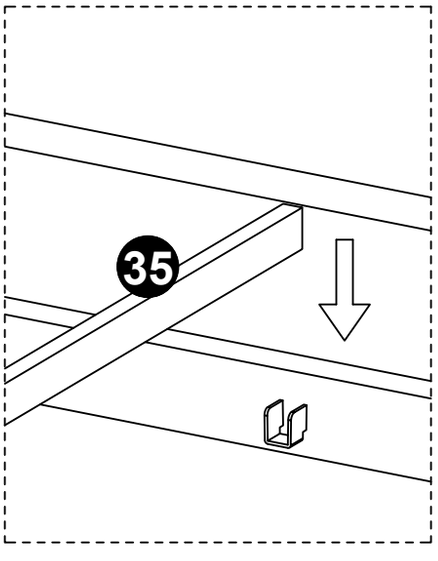

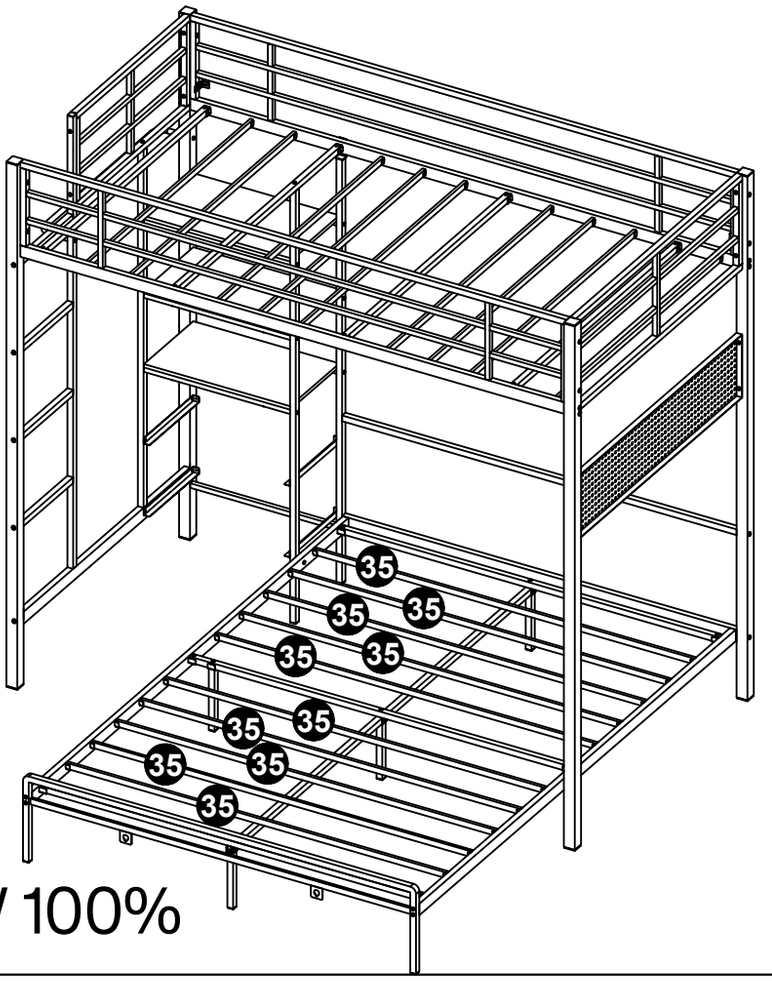


TIGHT ALL SCREW 100%


25

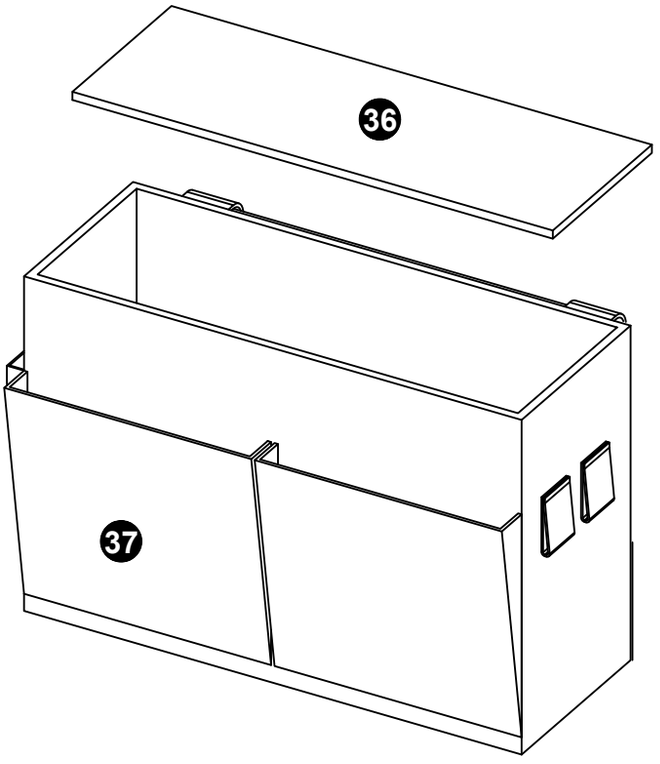


26


Stick it after stretching

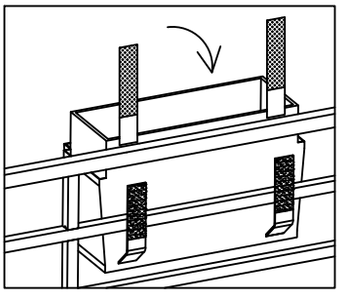

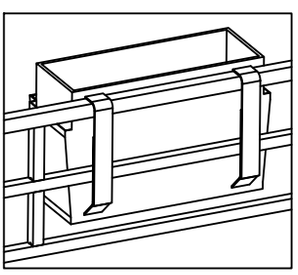

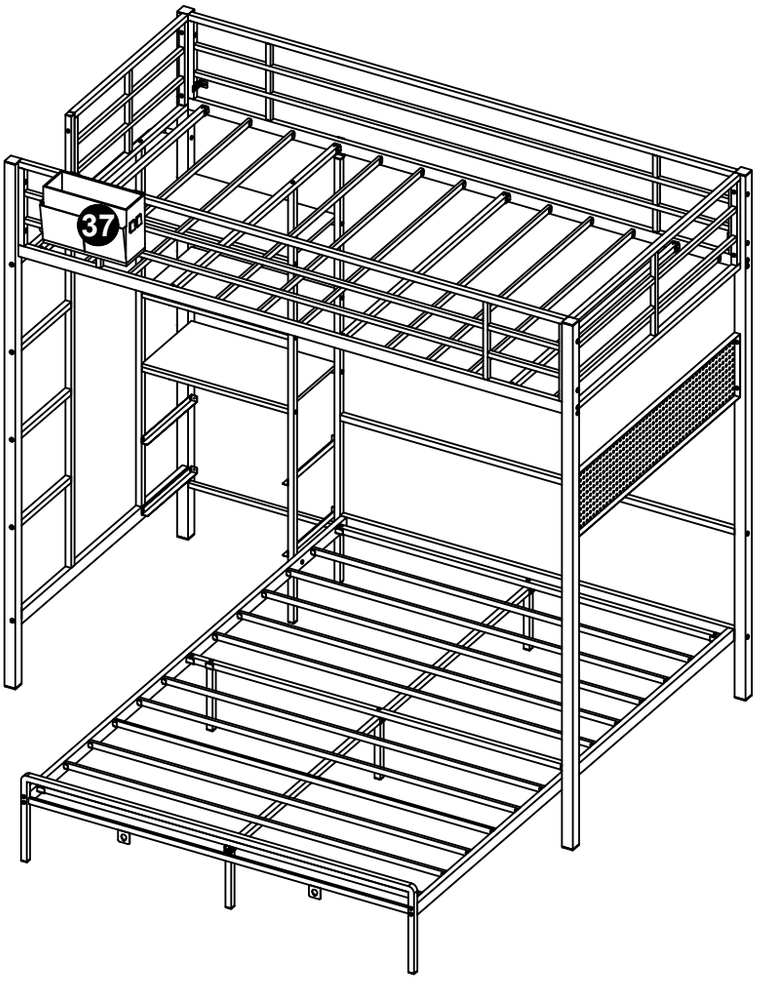


27

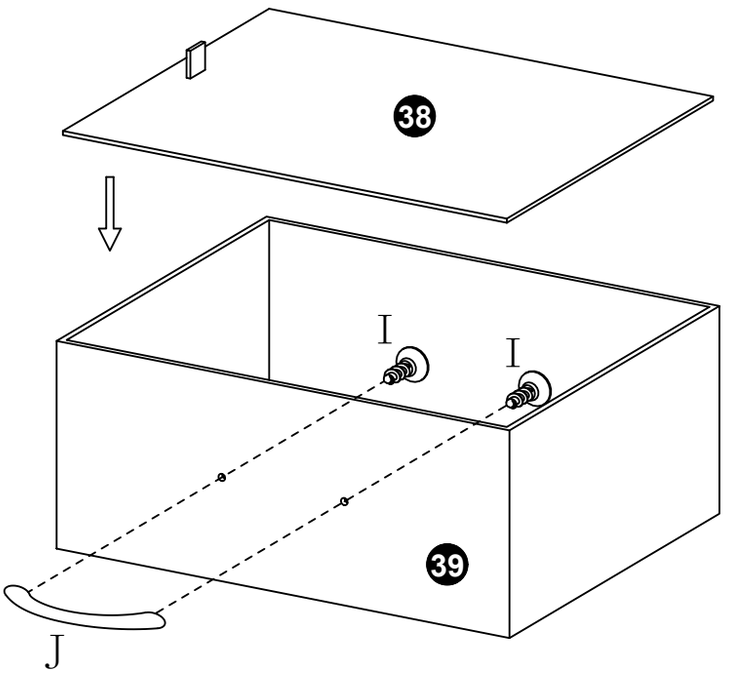

x2


I	X4
	
M4X12mm	
J	X2
	

28

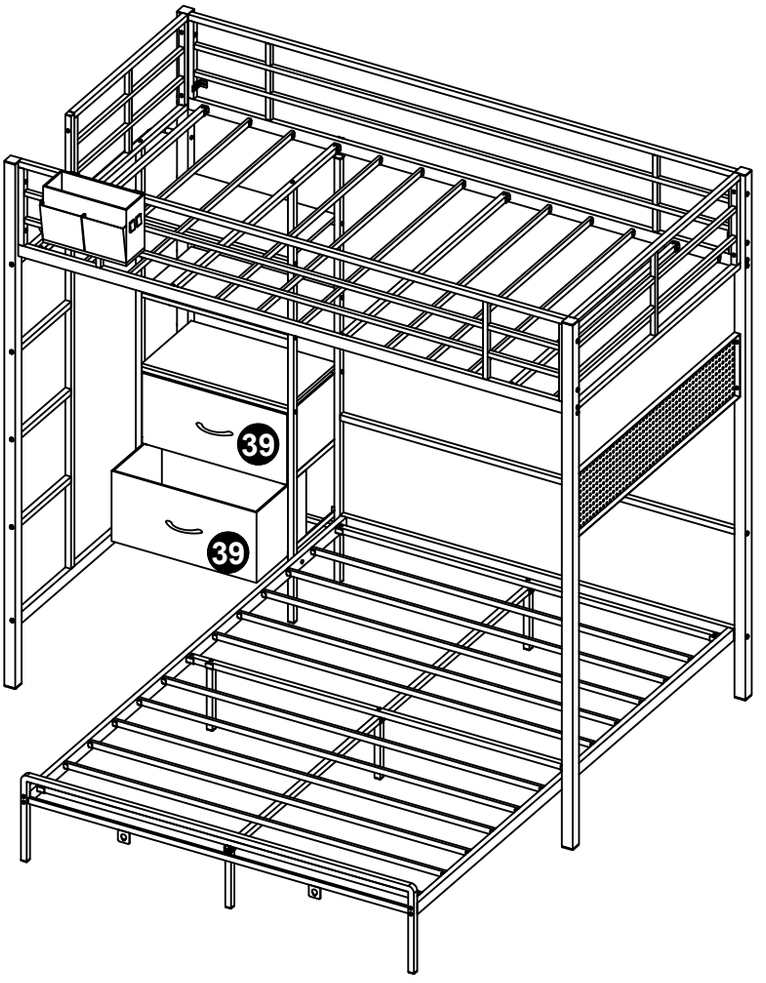

29


x2

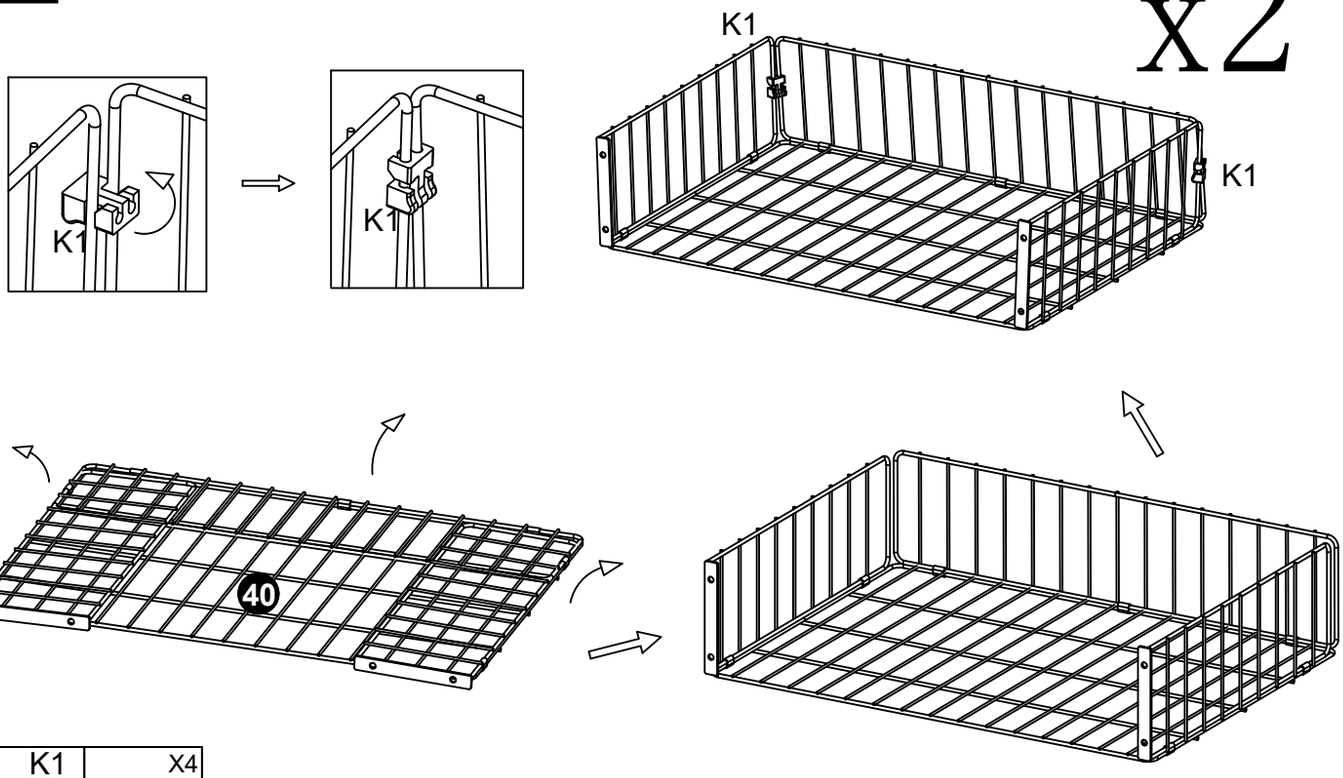

K1	X4
	


30

x2

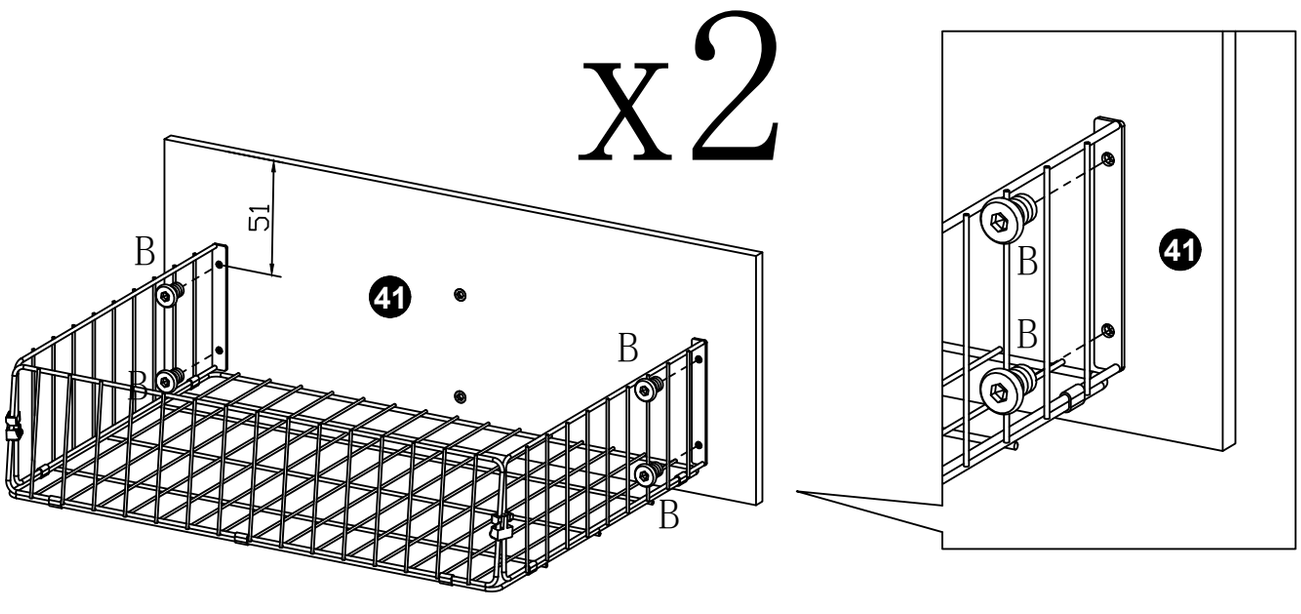

B	X8
	
M6X10mm	

31

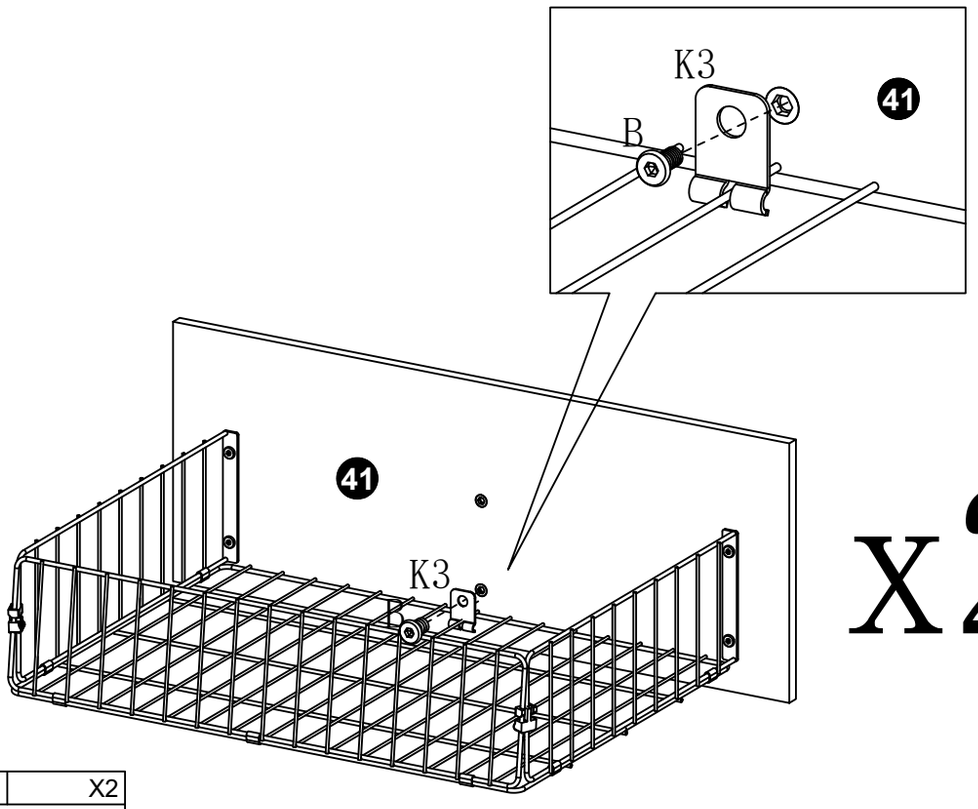



x2

B	X2	K3	X2
			
M6X10mm			

32



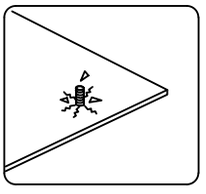


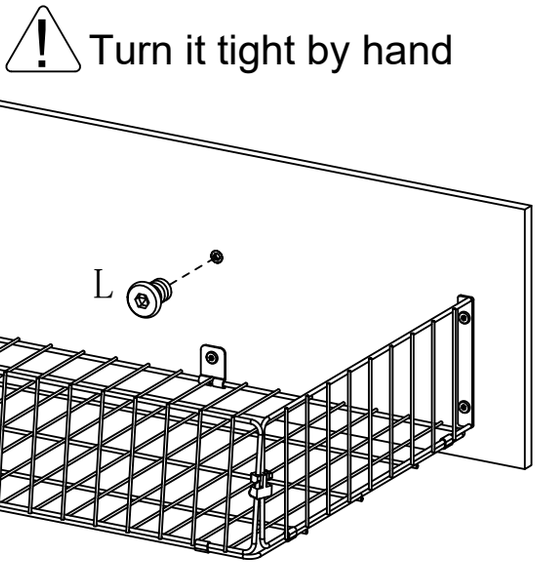

x2


L	X2
	
M6X15mm	


33

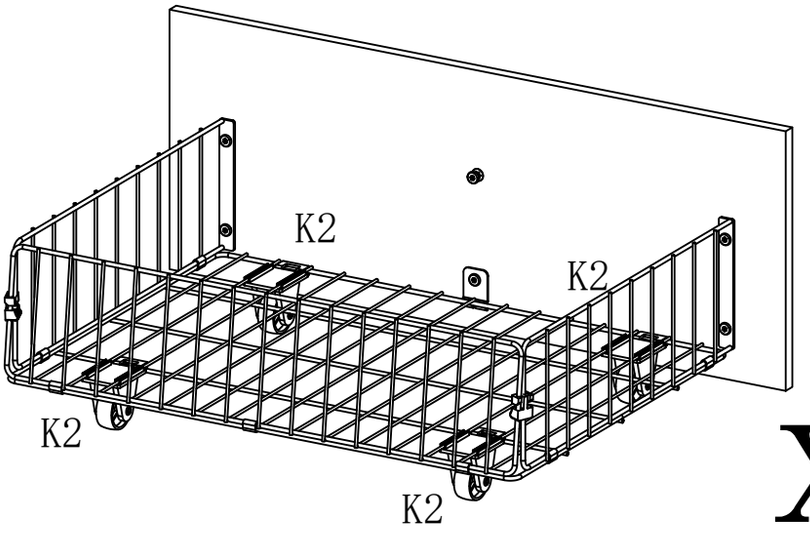

x2


Align and press

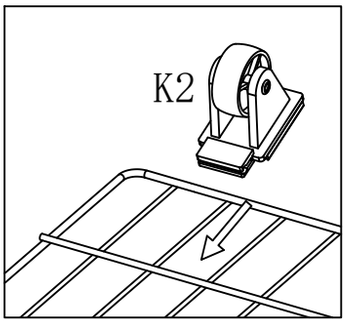


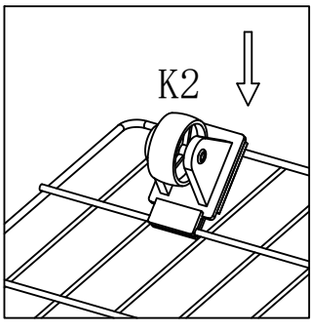

K2	X8
	


34

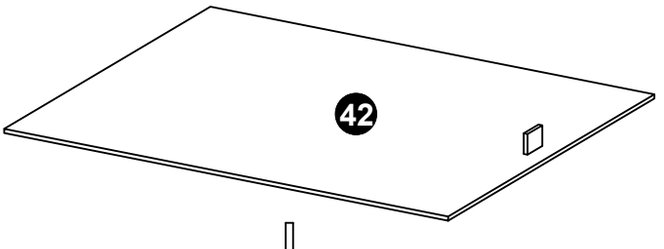

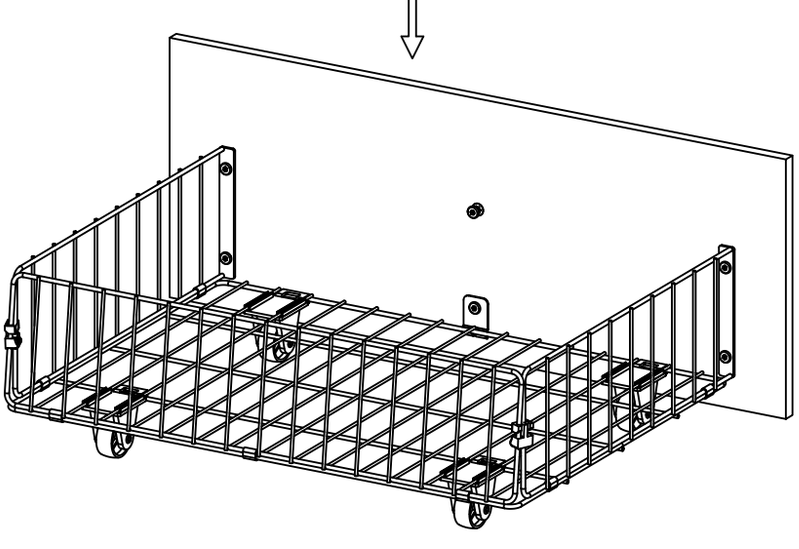


x2


35

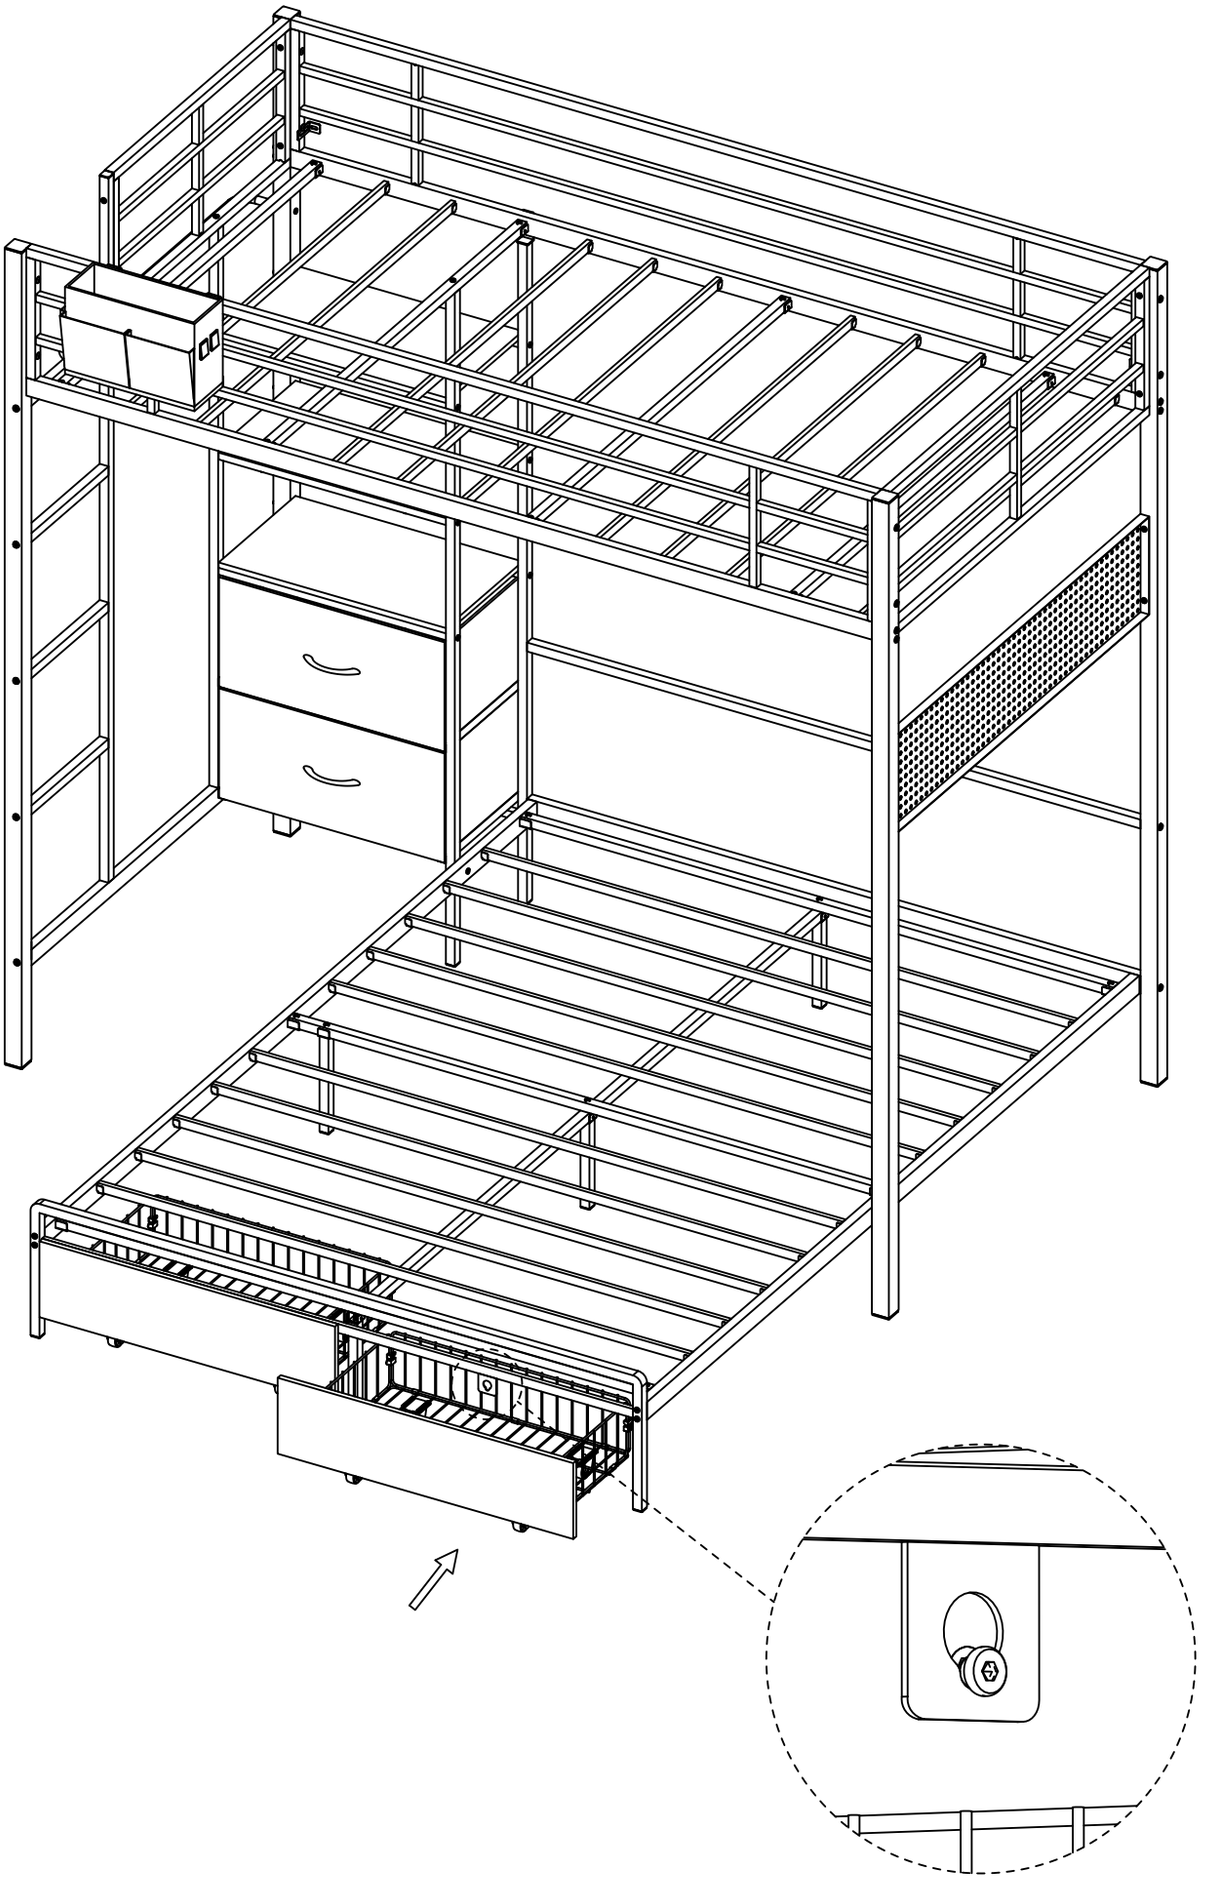


The screw is attached to the card's groove.

36

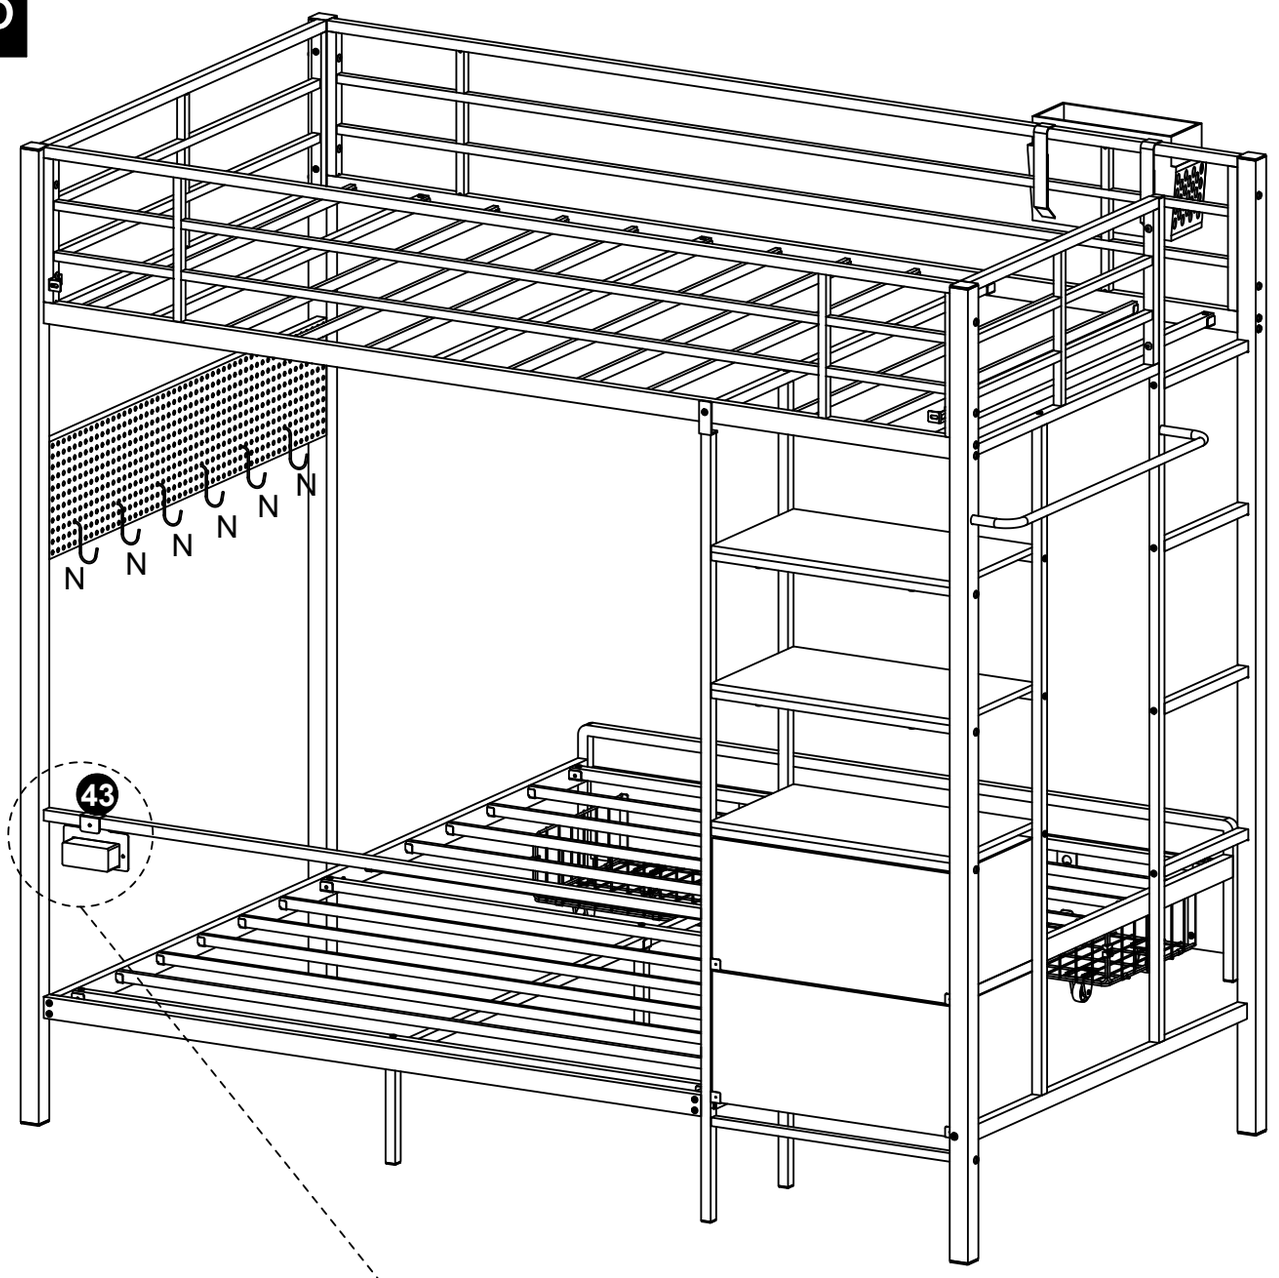


M	x2
	
M4	
P	x2
	
M4X10mm	
O	x1
	
N	X6
	

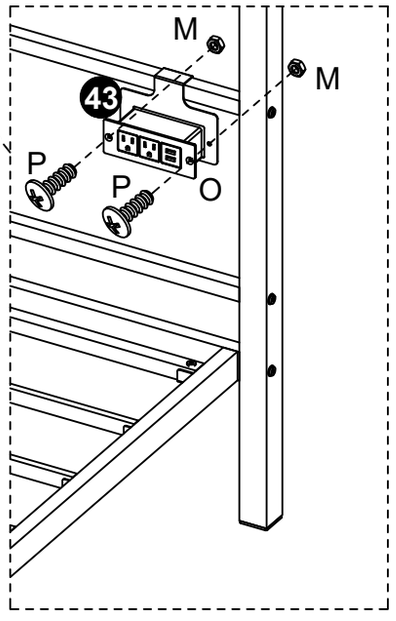


37


Be careful to tear off the paper on the back of the light strip，Then press it firmly with your hand

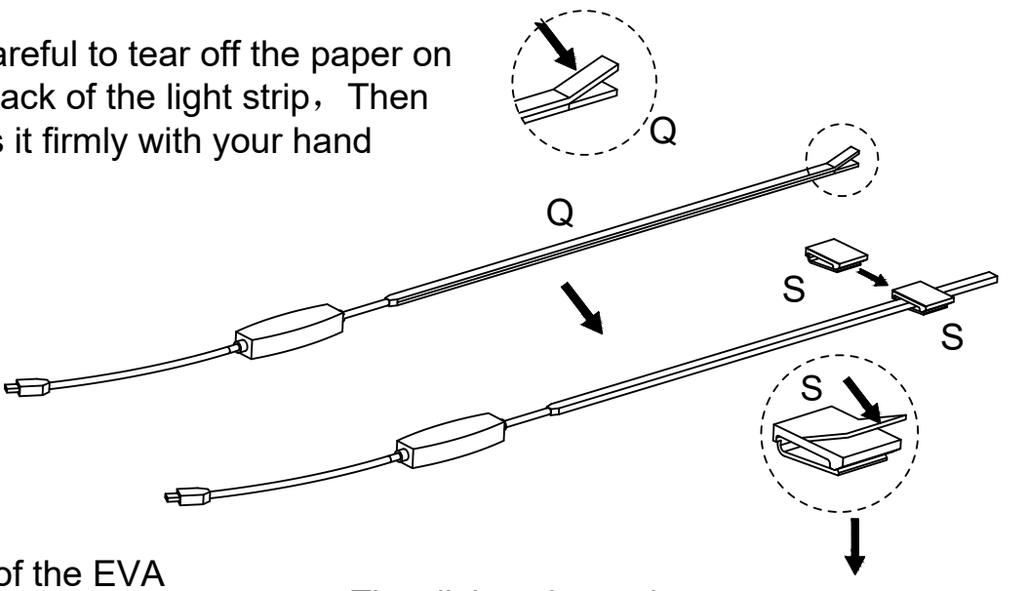



The length of the EVA can be cut according to your own requirements

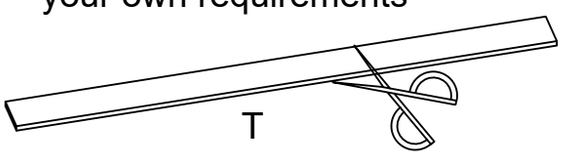

The slight strip can be pasted to the desired position according to your own needs

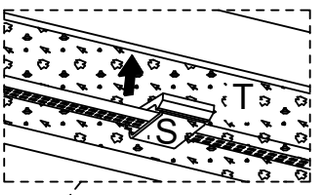


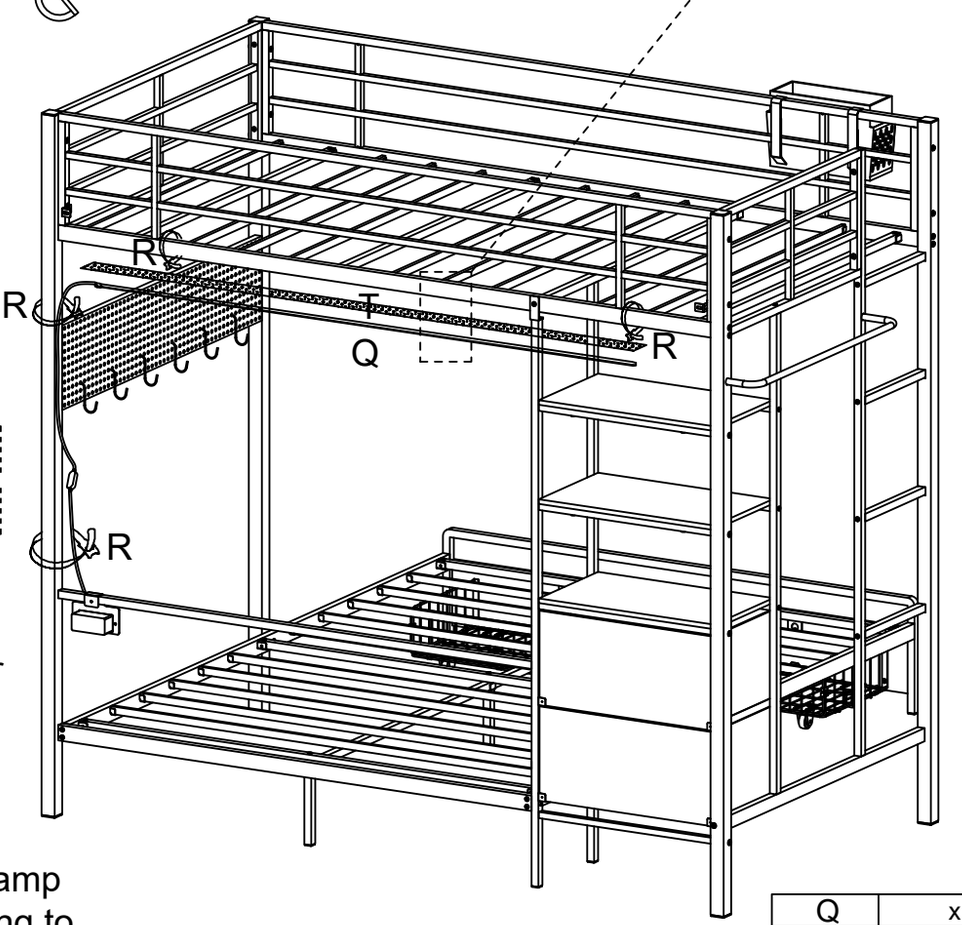


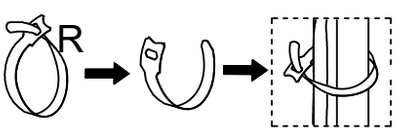

The slight strip can be **placed unde the back** beam according to your own needs

The length of the lamp can be cut according to your own requirements

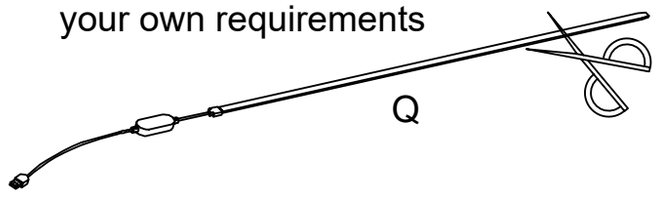



Q	x1
 1.9M	


T	x1	S	x4	R	x4
 EVA 1.9M					


38


Be careful to peel off the stickers

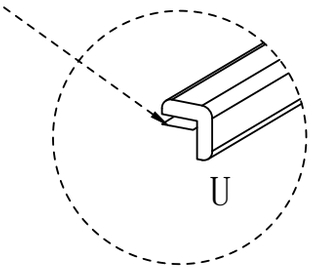

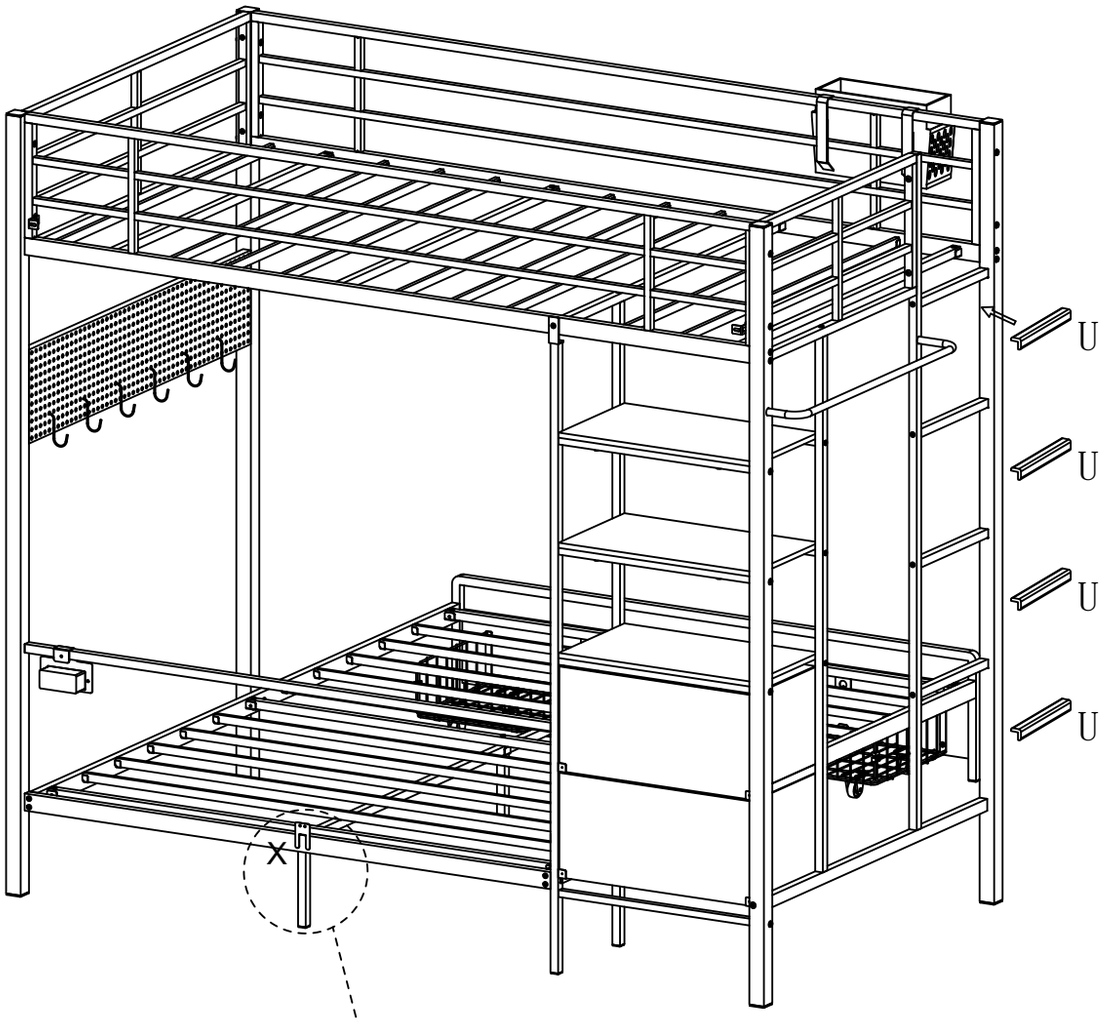

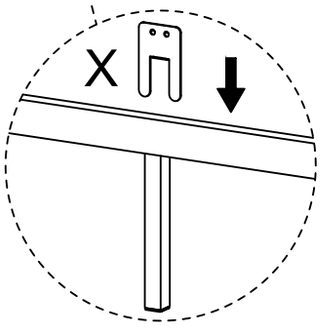


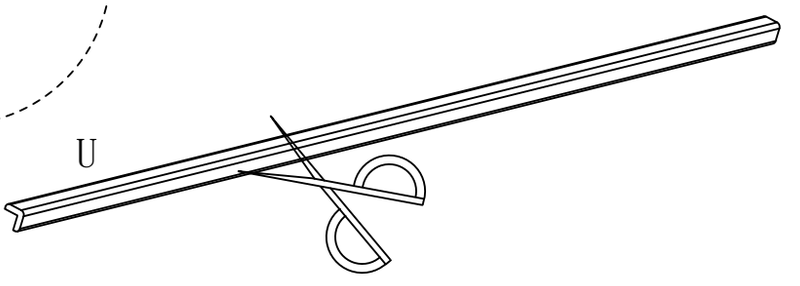


U	x1	X	x1
			
2M			

Cut the crash bar according to the requirement


39

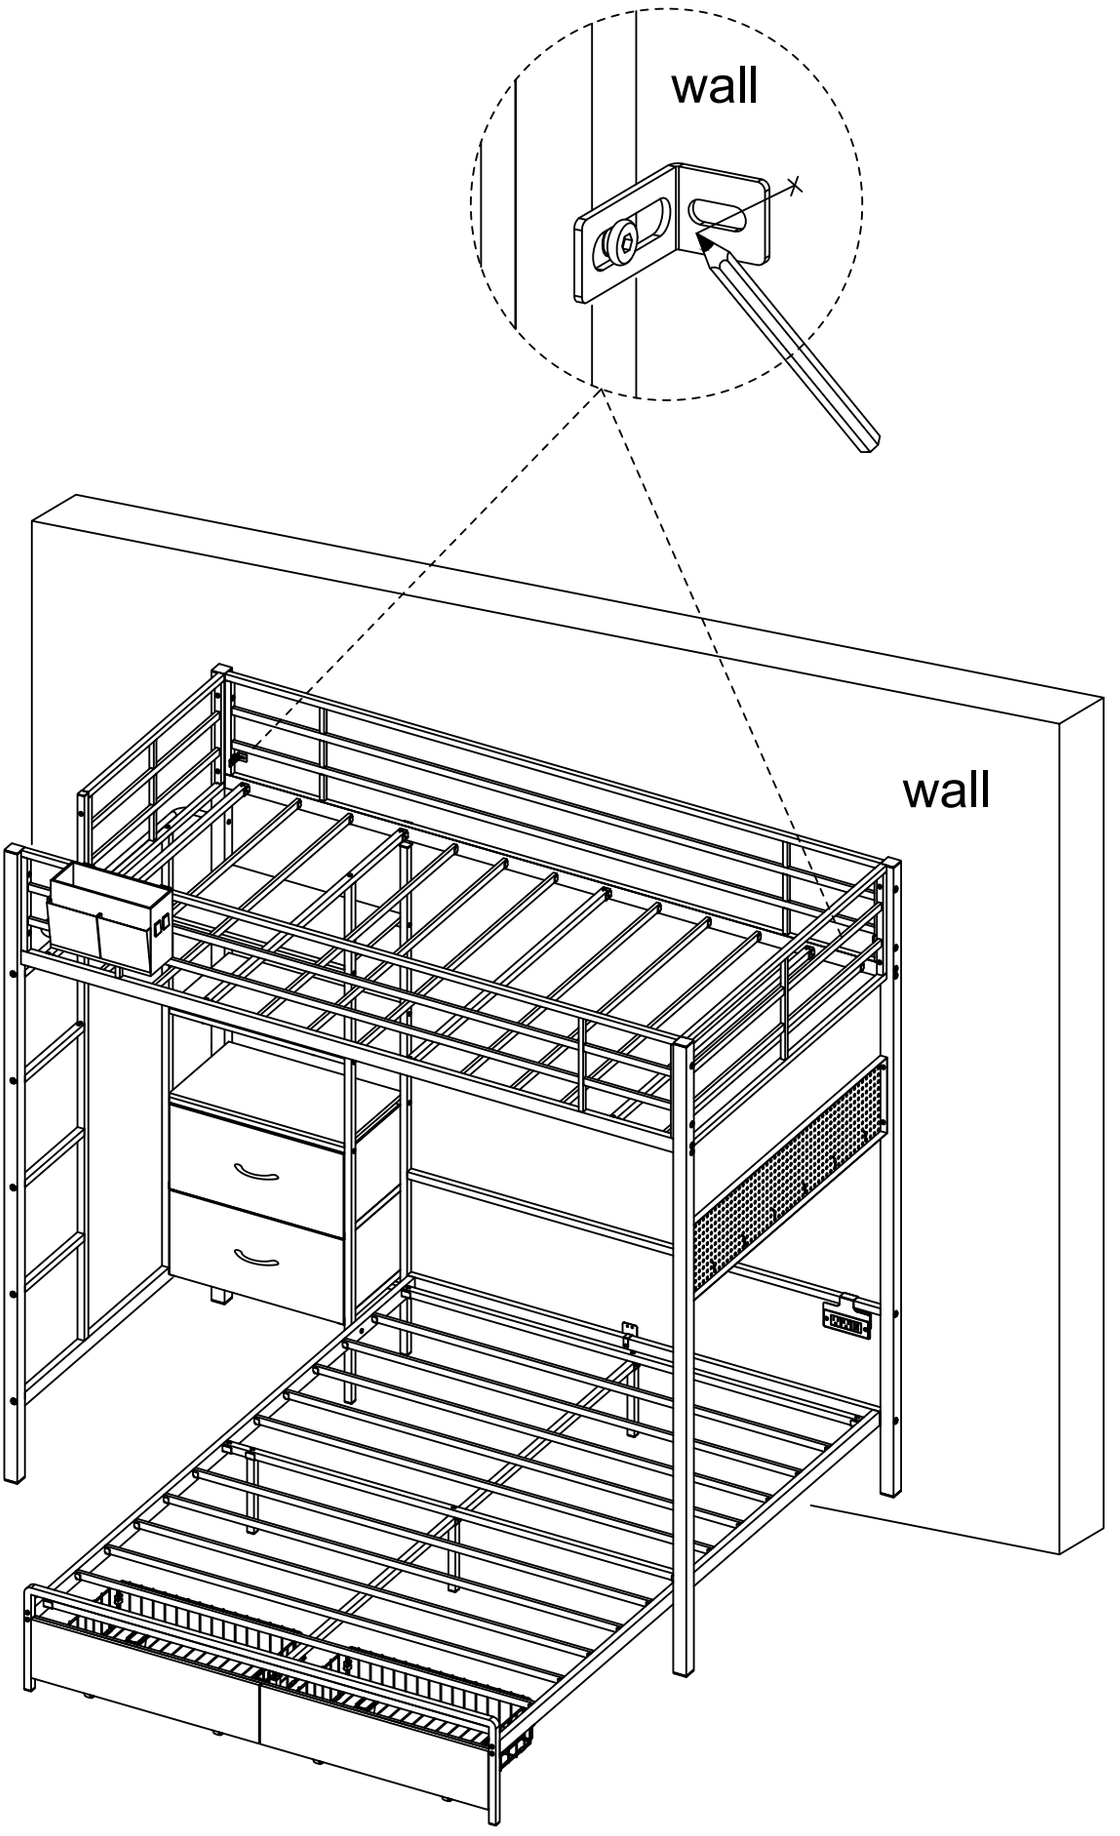

40

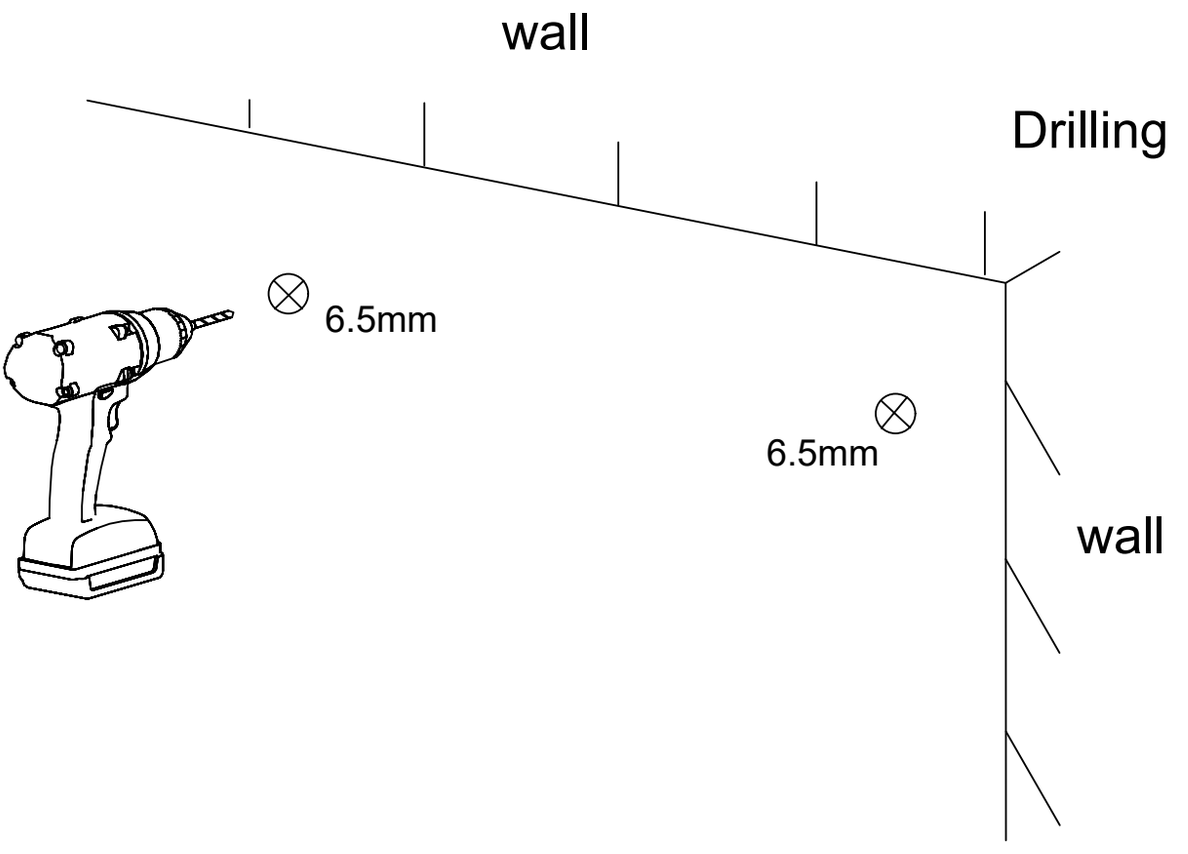


41

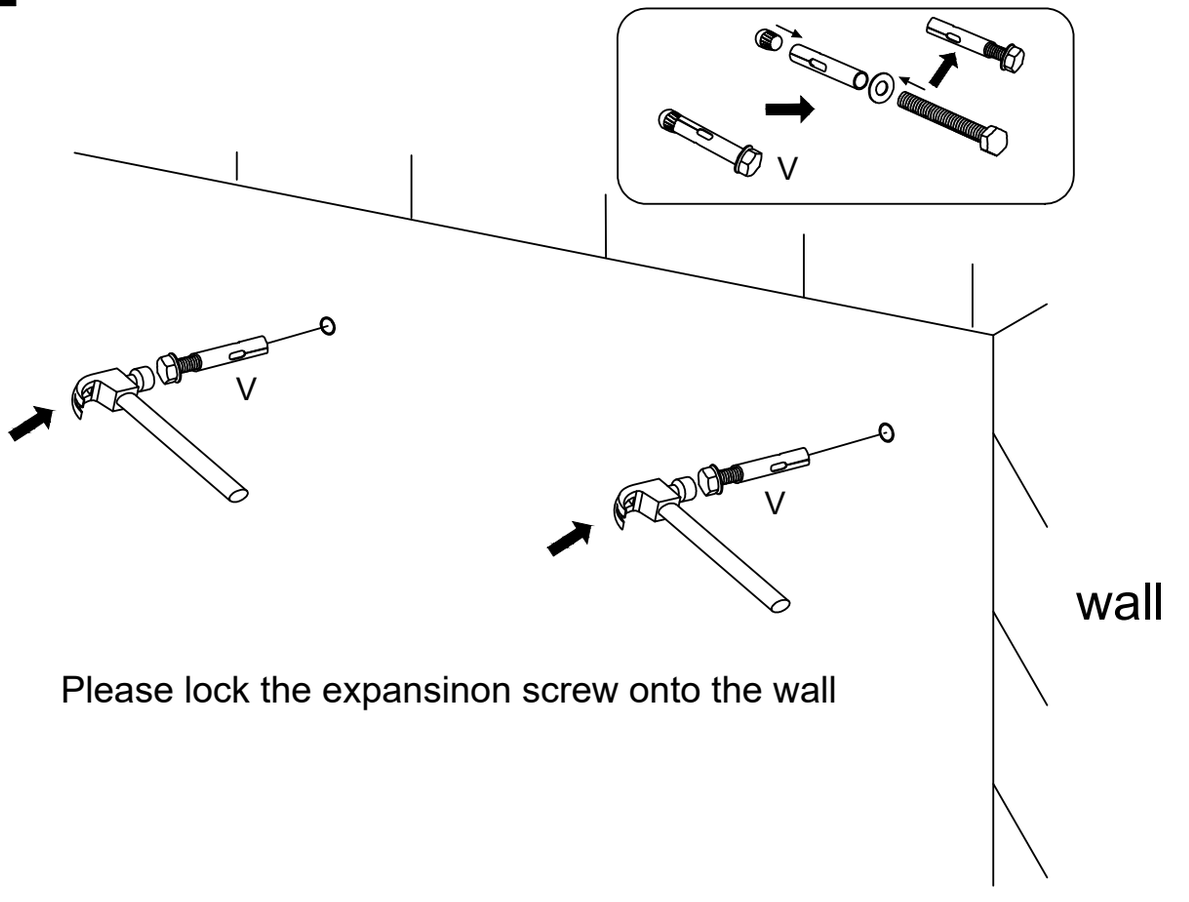


Please lock the expansinon screw onto the wall

42

Remove the screws and gaskets first

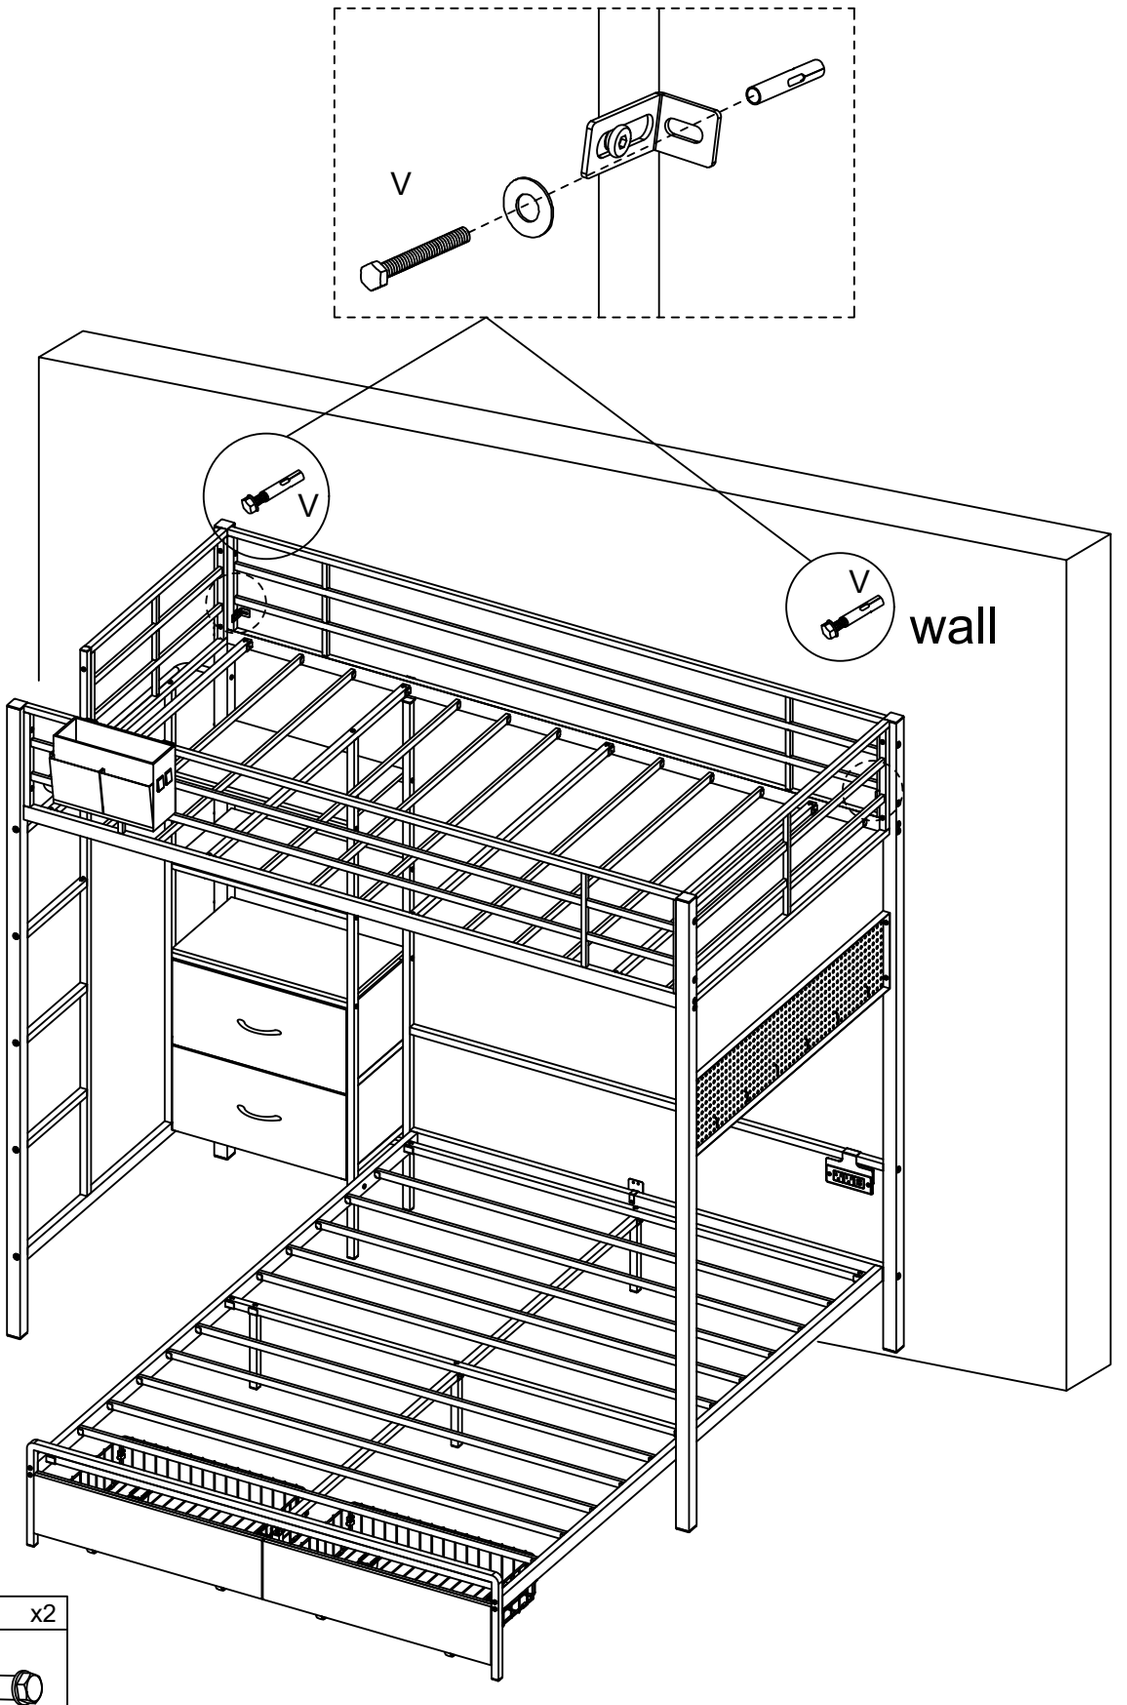

V	x2
	
M5X50mm	