

ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET





Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

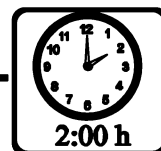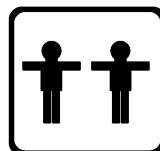

Tools Required



(Not included)




(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

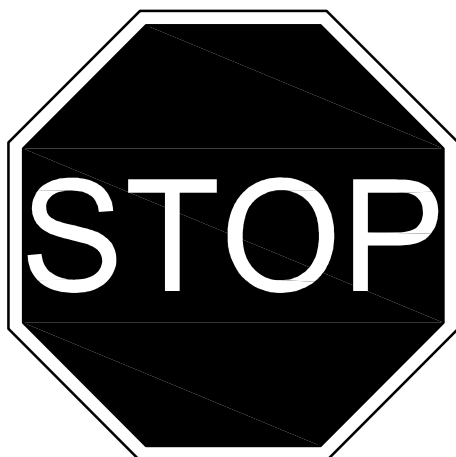

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Cam Lock Assembly Instructions

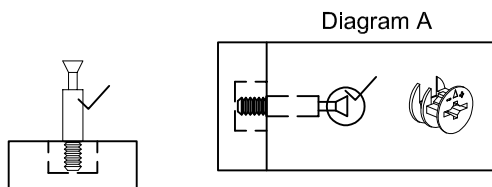


Insert Cam Bolt into hole as shown in diagram A.

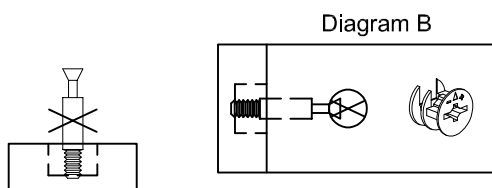


Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause
the Cam Lock to be misaligned and unable to
interlock properly.

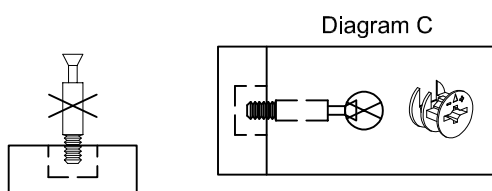


Also avoid inserting the Cam Bolt too close to the
surface of the hole as shown in figure C, as this
will cause the Cam Lock to be too loose, and not
interlock properly.

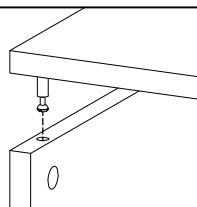

Connect the panels together.

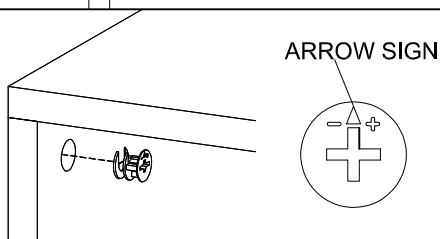


Insert the Cam Lock so the side opening fits over
the head of the Cam Bolt.

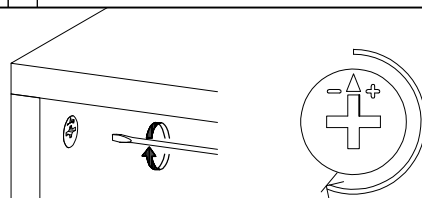

To tighten the Cam Lock, turn it clockwise on half
a turn with a flat screwdriver.












**Do not use an automatic screwdriver as it may
bend or break if too much power is imposed.*

Detail View

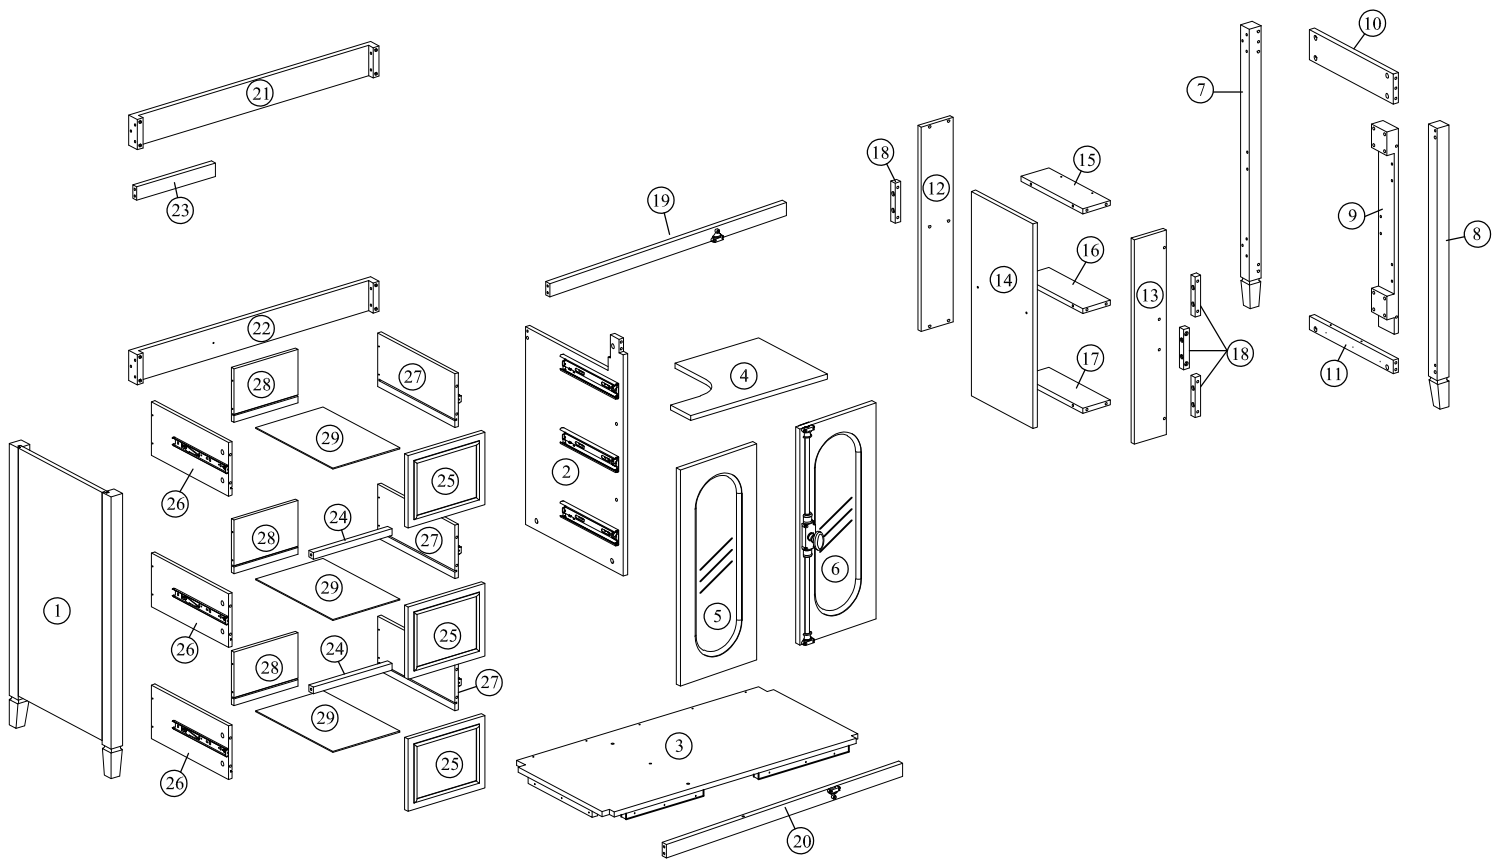


Identifying the Hardware-Identify the hardware using the illustrations below.

Part Lists

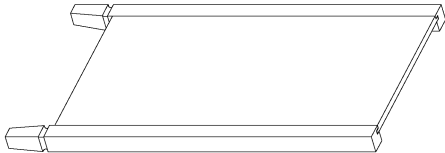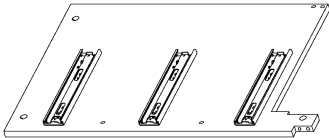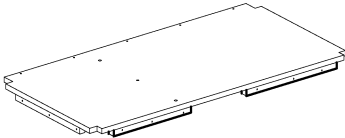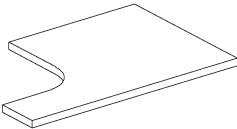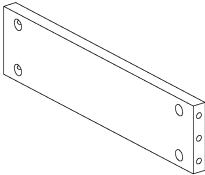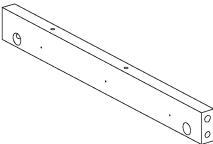1		2	
Side Panel (L) - 1pc		Mid Panel - 1pc	
3		4	
Bottom Frame - 1pc		Adjustable Shelf - 1pc	
5		6	
Door Cabinet (L) - 1pc		Door Cabinet (R) - 1pc	
7		8	
Right Back Leg - 1pc		Right Front Leg - 1pc	
9		10	
Post Frame - 1pc		Top Wood Bar - 1pc	
11		12	
Bottom Wood Bar - 1pc		Back Panel - 1pc	
13		14	
Front Panel - 1pc		Middle Panel - 1pc	


Part Lists

15

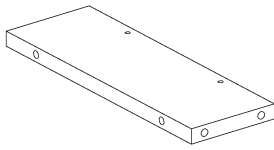


Top Shelf - 1pc

16

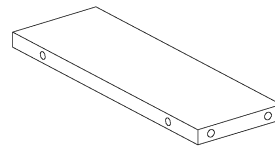


Middle Shelf - 1pc

17

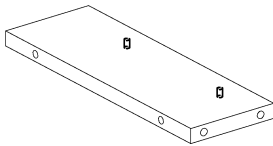


Bottom Shelf - 1pc

18




Support Piece (4pcs)

19




Top Front Crossbar - 1pc

20




Bottom Front Crossbar - 1pc

21

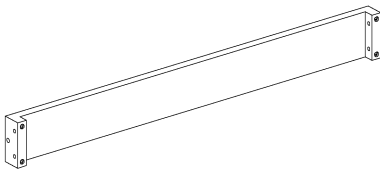


Back Rear Crossbar - 1pc

22

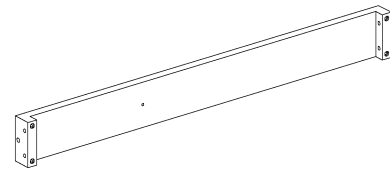


Top Rear Crossbar - 1pc

23

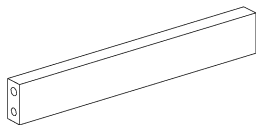


Small Crossbar - 1pc

24




Middle Crossbar - 2pcs

25

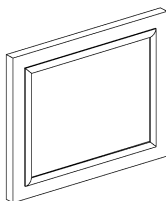


Drawer Face - 3pcs

26

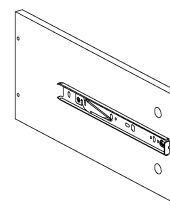


Drawer Panel (L) - 3pcs

27

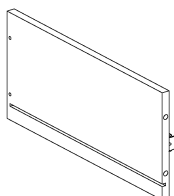

Drawer Panel (R) - 3pcs


28

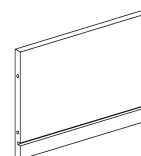


Back Drawer Panel - 3pcs

Part Lists

29












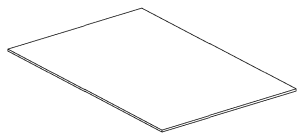


Bottom Panel - 3pcs

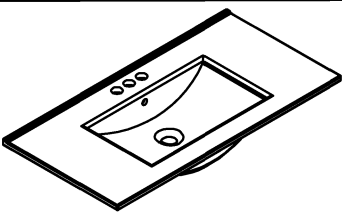


Sink - 1pc

Hardware Lists

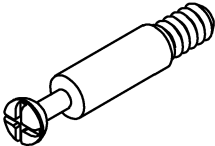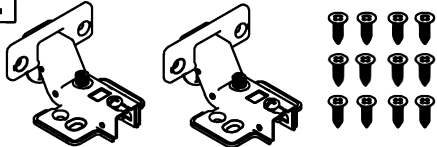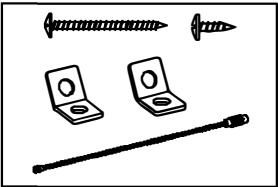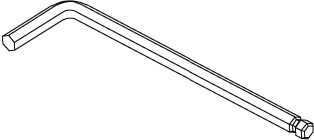A  Ø8*20mm	B  Ø6*34mm	C  Ø14.5*9.5mm
Wood dowel (21pcs)	Three in one bolts (49pcs)	Three in one locks (49pcs)
D  Ø8xØ4*25mm	E  Damping hinge (2set)	F  Ø13xØ1/4*30mm
Round head screw (22pcs)	Damping hinge (2set)	Hex-Head bolt (8pcs)
G  Ø13xØ1/4*25mm	H  Shelf Pin (3pcs)	I  Ø6xØ3*12mm
Hex-Head bolt (16pcs)	Shelf Pin (3pcs)	Round head screw (3pcs)
J  Handle(3pcs)	K  Ø5/32*15mm	L  45*12*1mm 45*17*14mm
Handle(3pcs)	Handle screw (3pcs)	Plastic Door Magnet (2set)
M  Ø6xØ3*15mm	N  Ø10x10mm	O  Ø8xØ4*50mm
Flat head screw (8pcs)	Plastic Canopy (12pcs)	Round head screw (12pcs)
P  Anti fall Hardware (2sets)	Q  K4mm	
Anti fall Hardware (2sets)	Allen key (1pc)	


STEP: 1

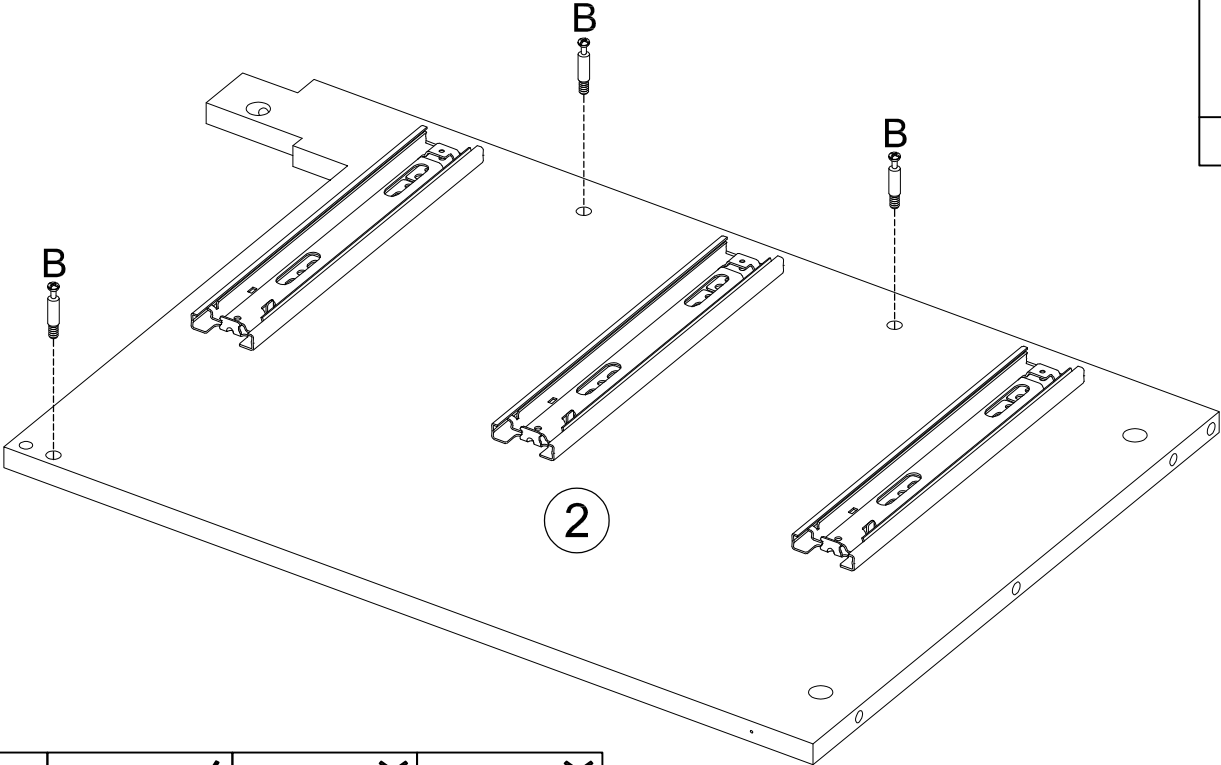


B



3pcs

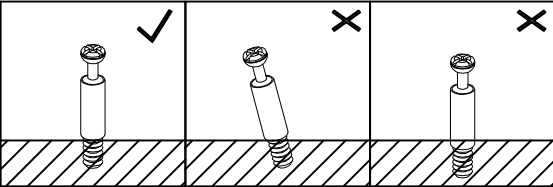

STEP: 2

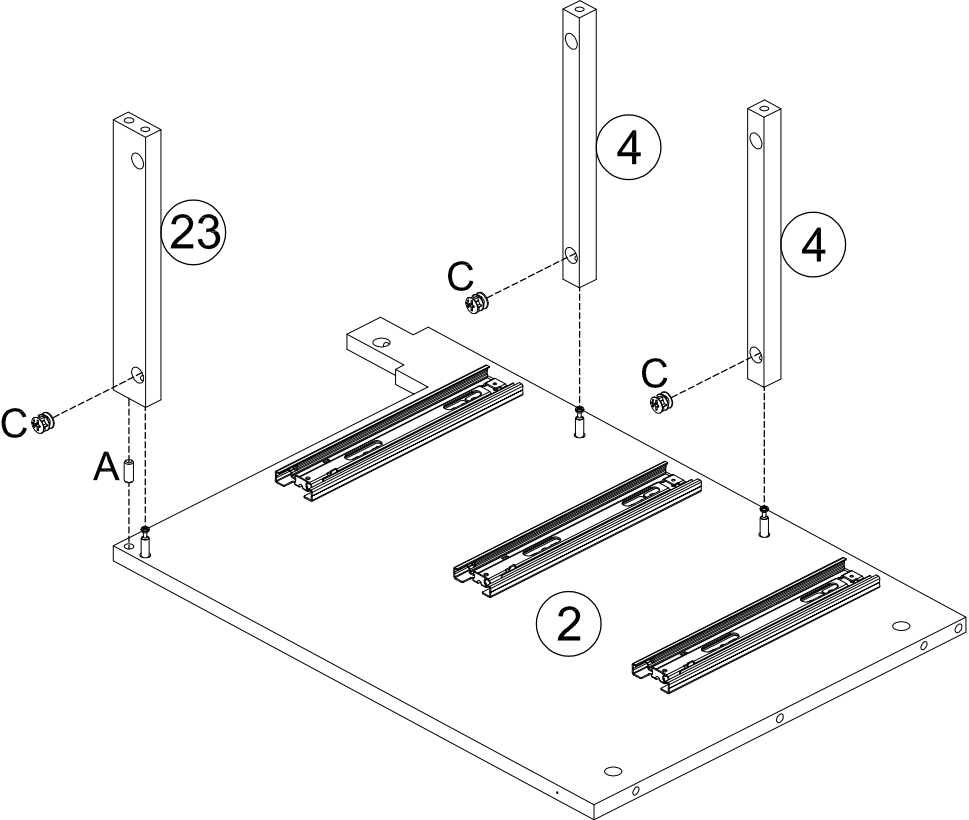

A




1pc


C





3pcs

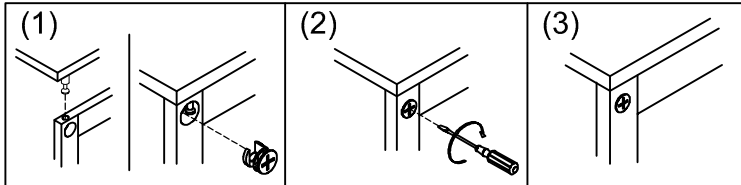


STEP: 3

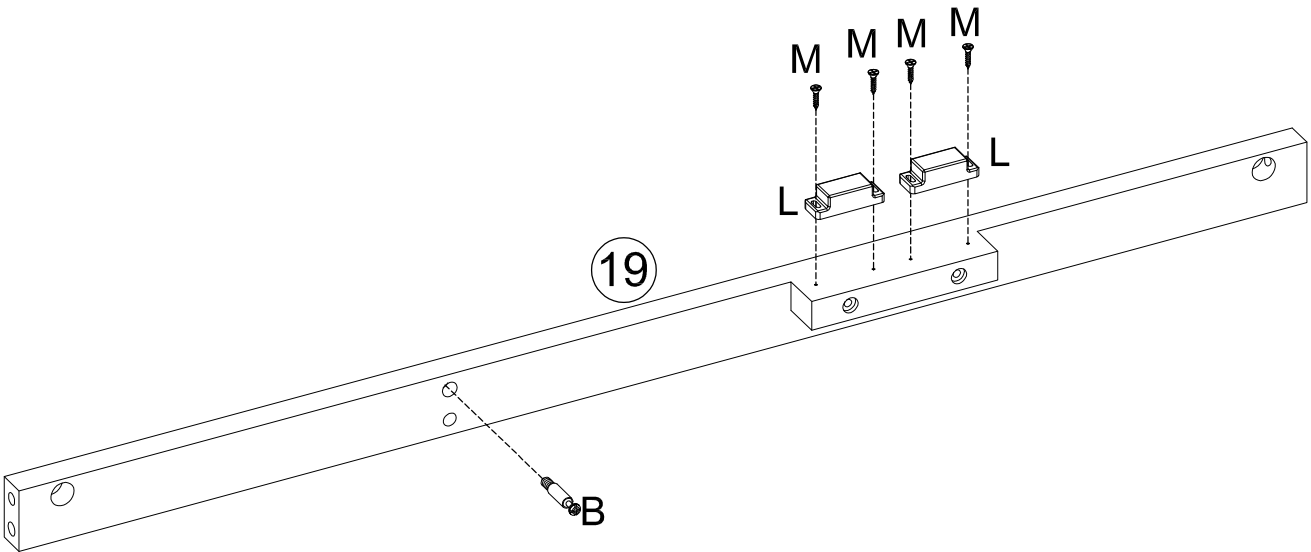

B

1pc
L

2pcs
M

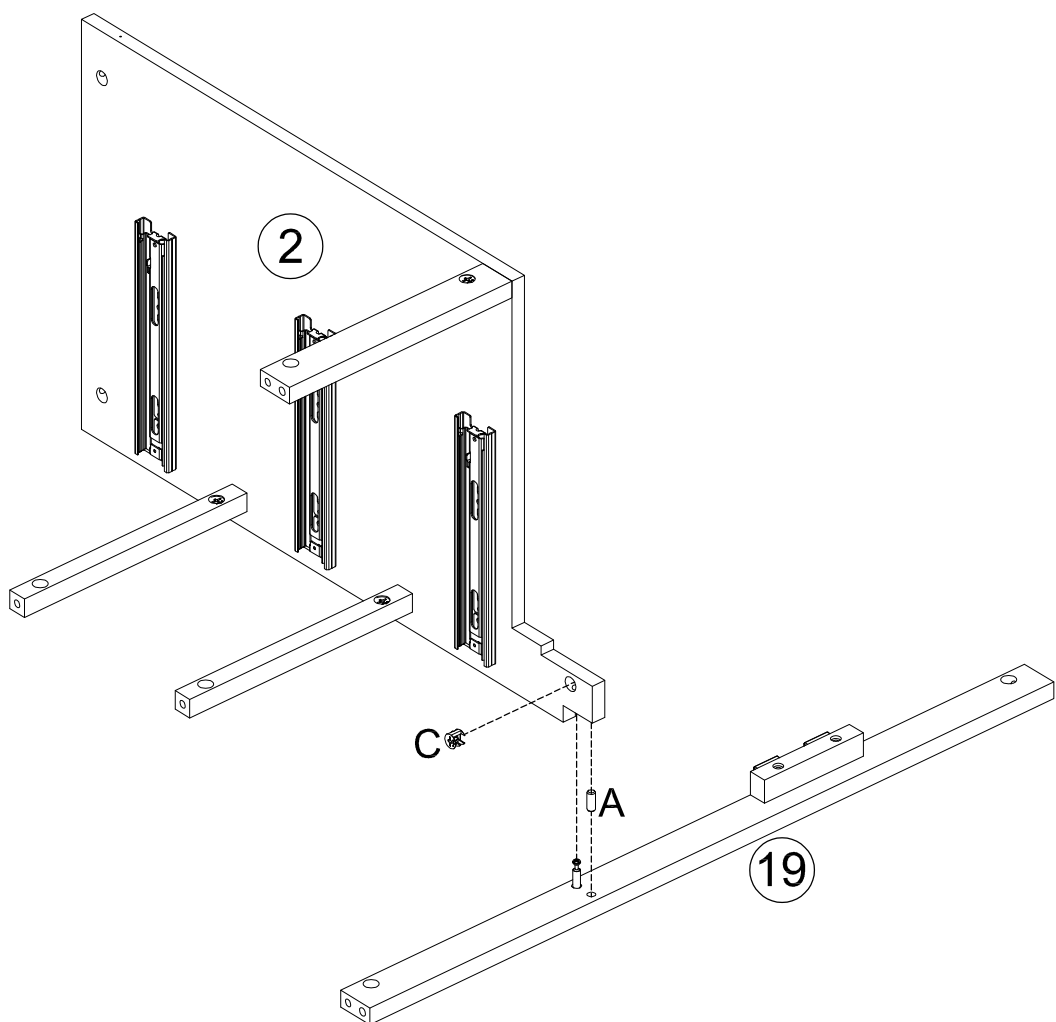4pcs

STEP: 4



A

1pc
C


1pc

STEP: 5

B



2pcs

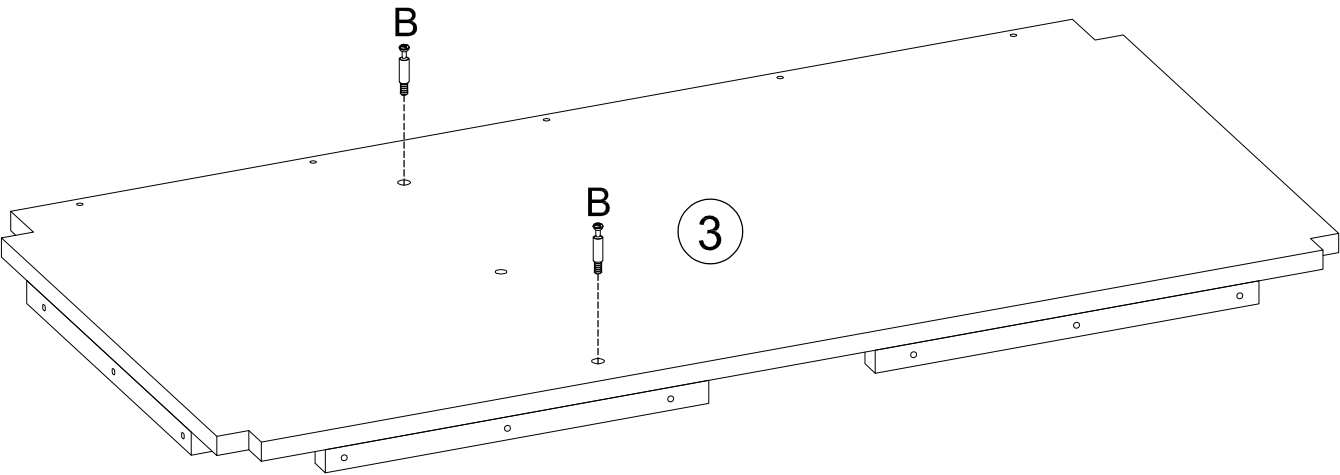


STEP: 6


D



6pcs

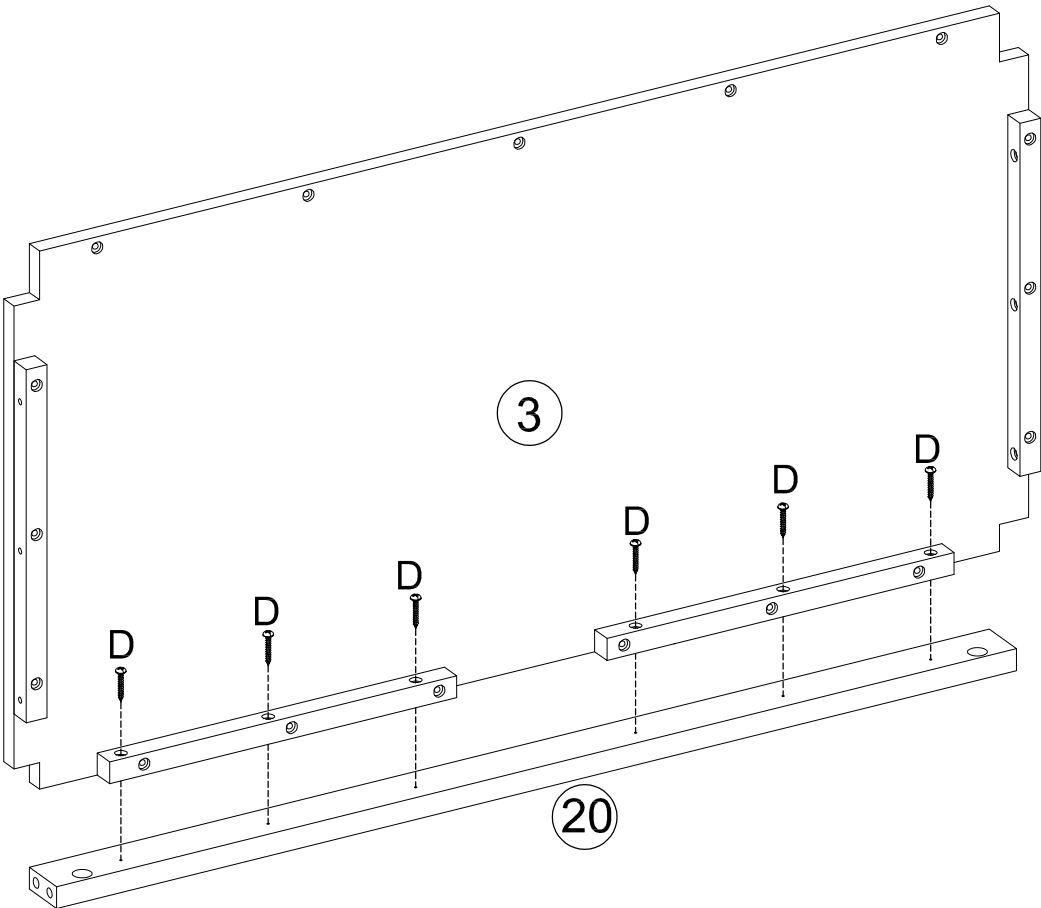

STEP: 7

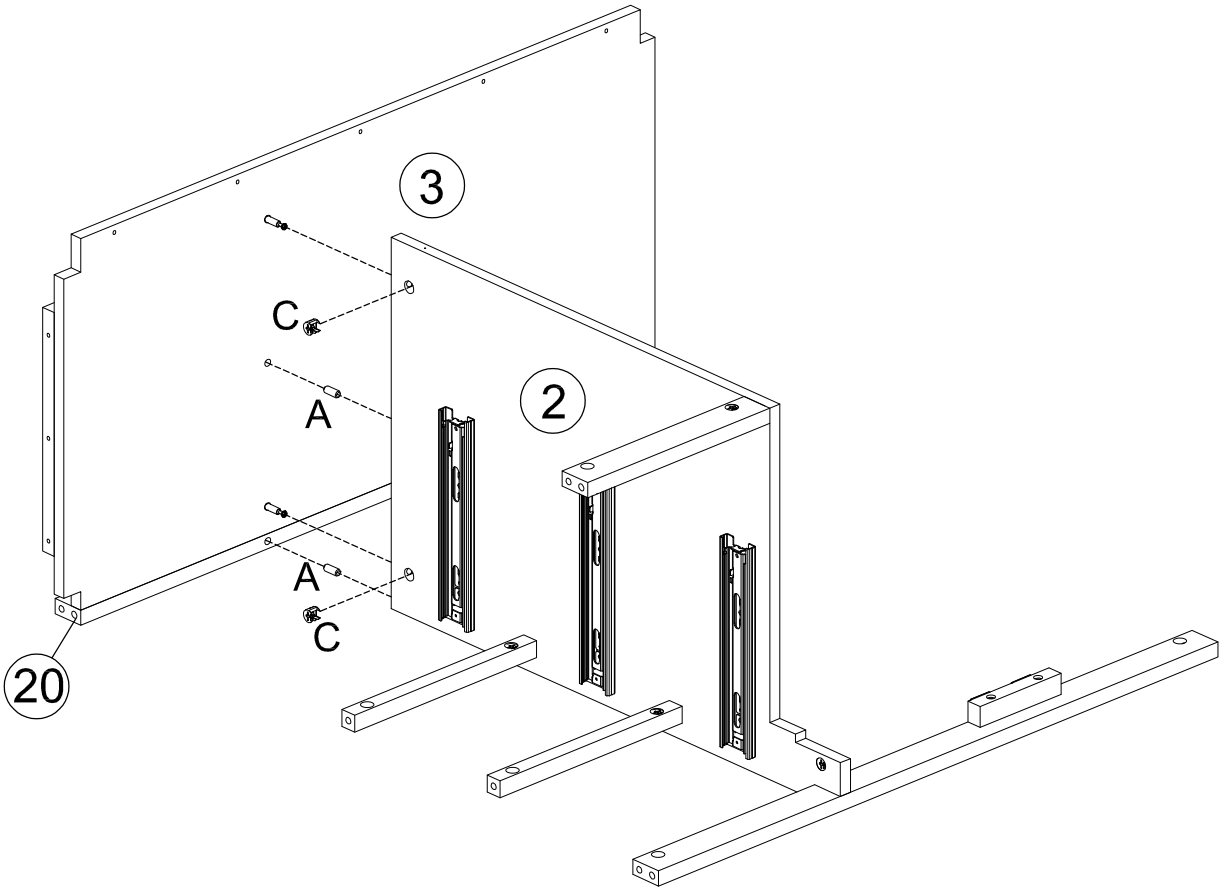

A




2pcs

C



2pcs

STEP: 8

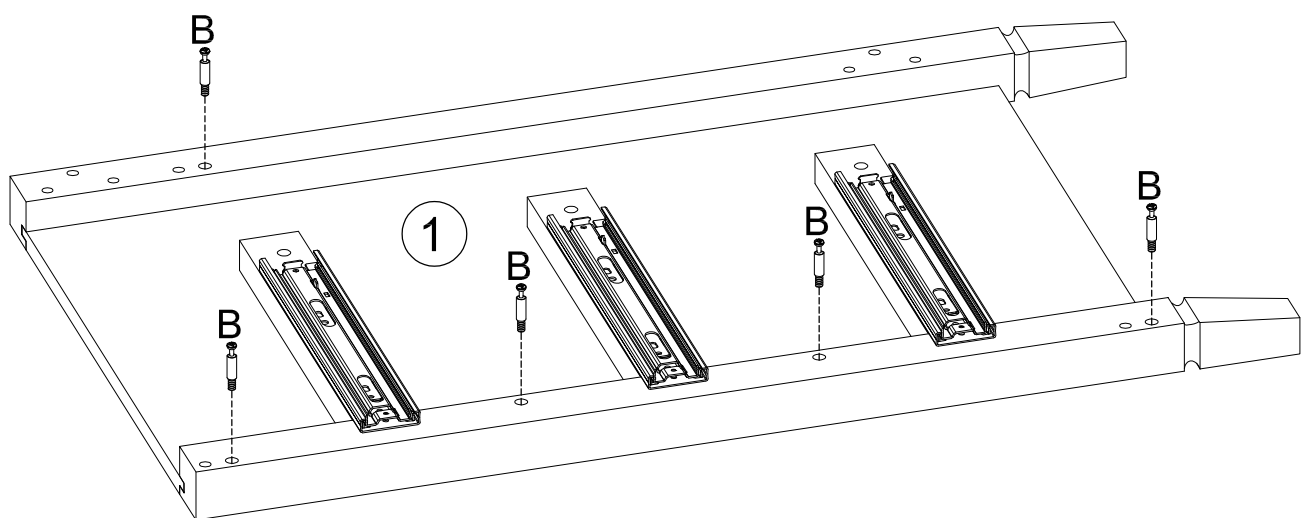


B






5pcs

STEP: 9

A	
	3pcs
C	
	5pcs

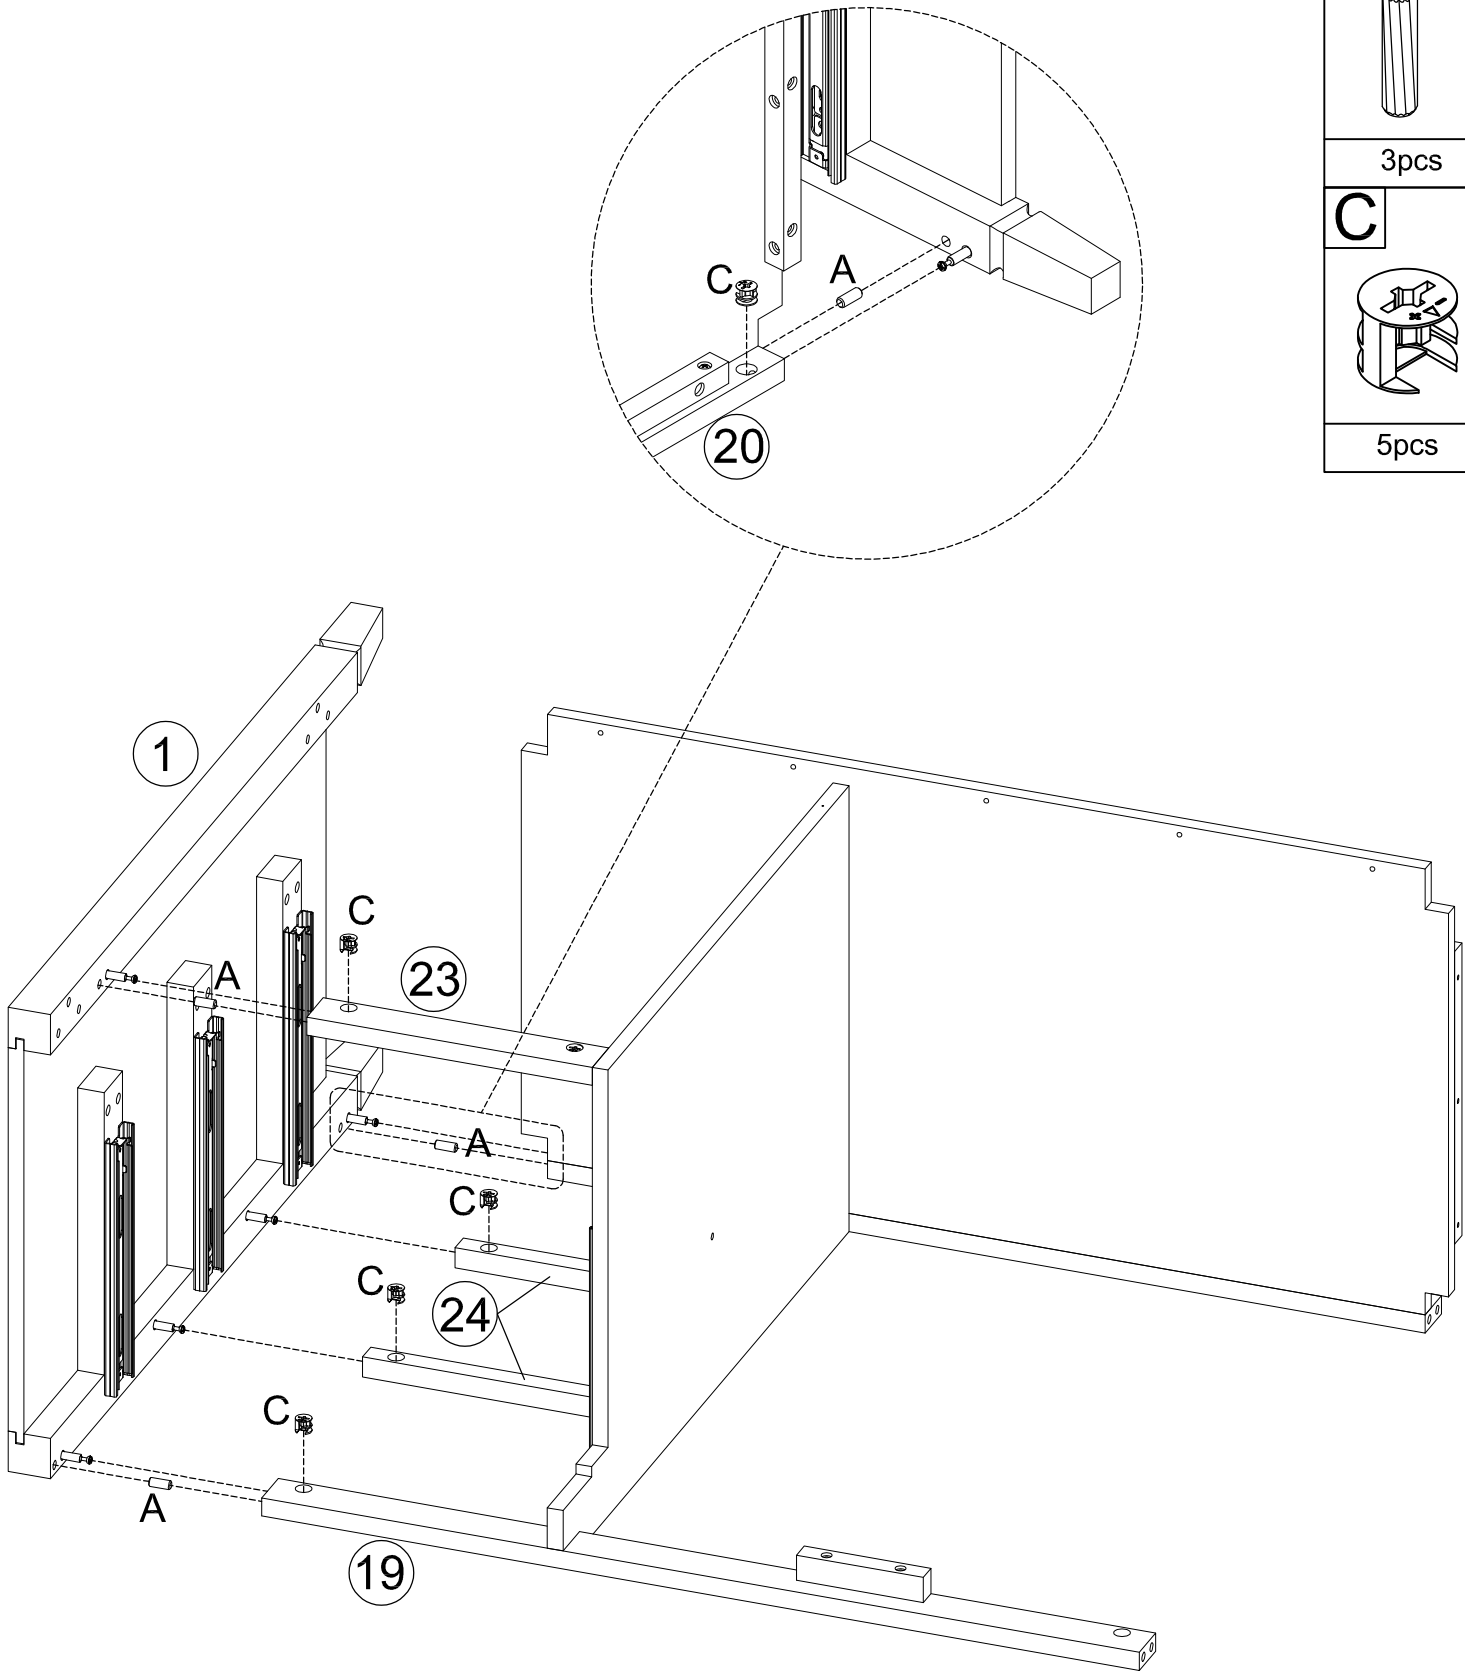


STEP: 10

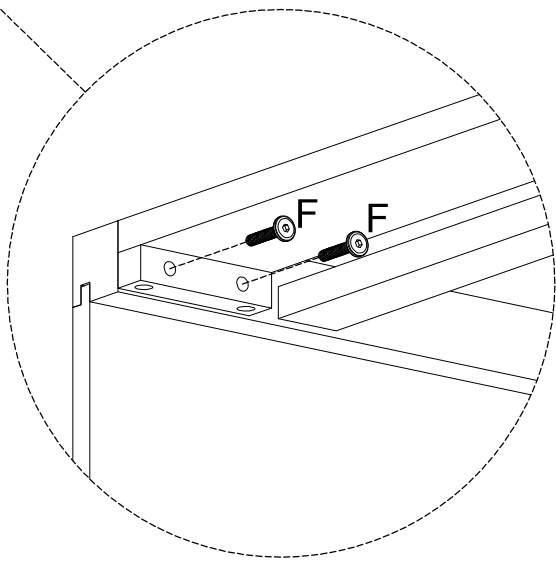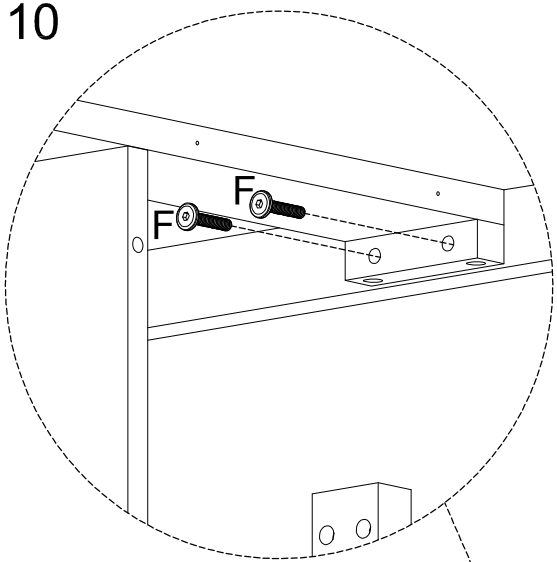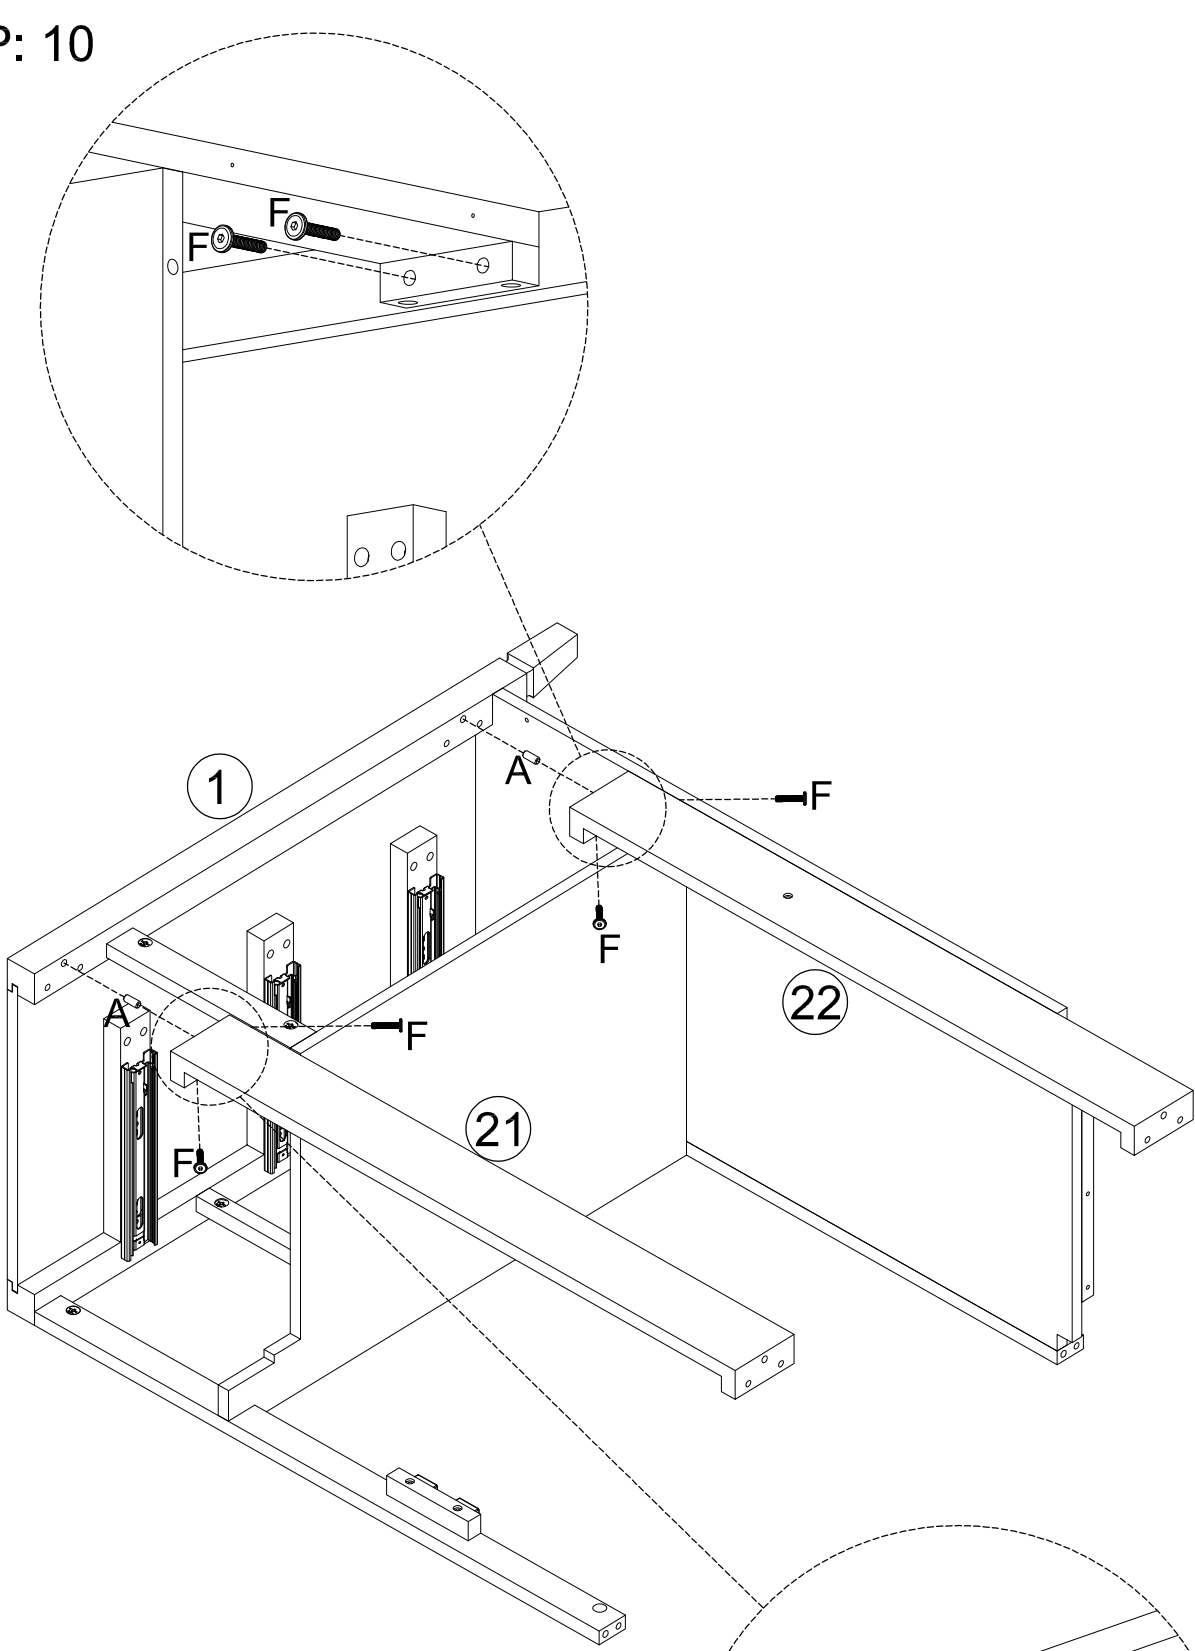

A		2pcs
F		4pcs

STEP: 11

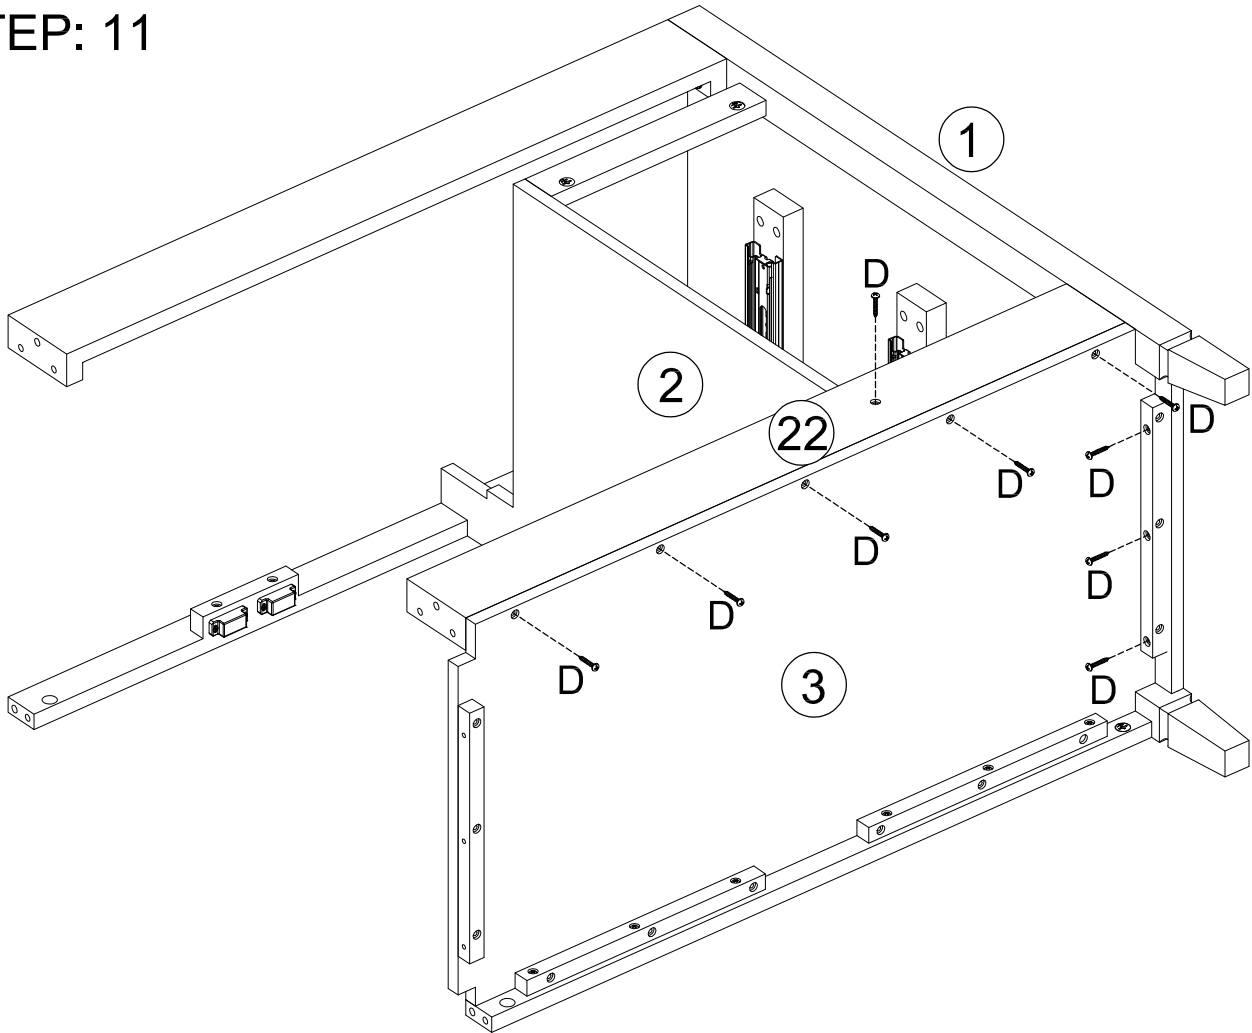


D



9pcs

STEP: 12

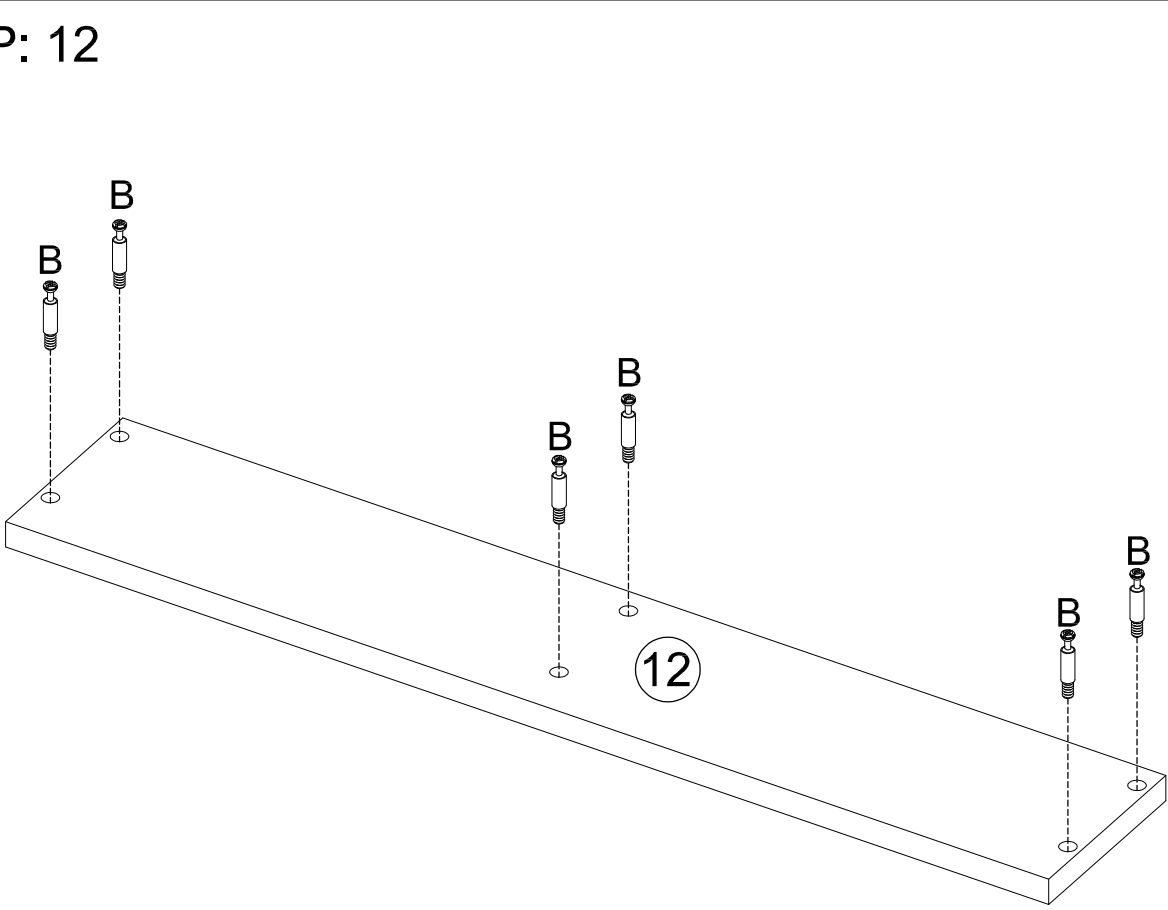

B




6pcs

STEP: 13

B



6pcs

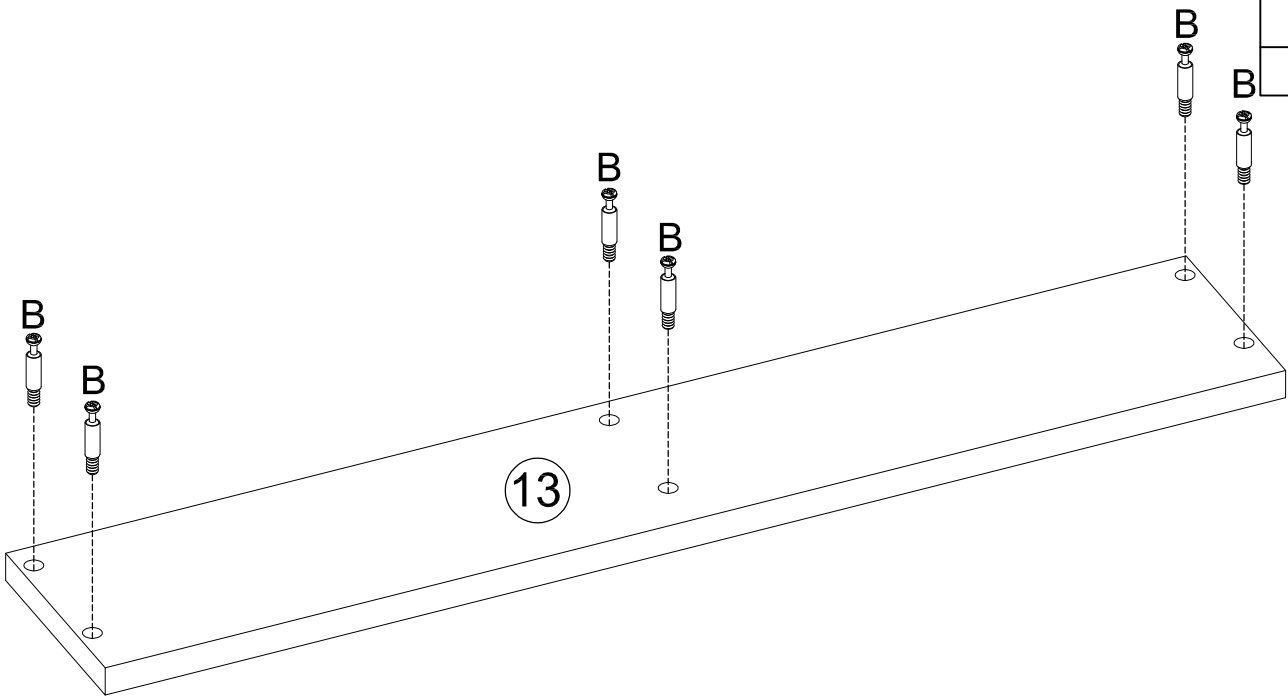


STEP: 14


B



6pcs

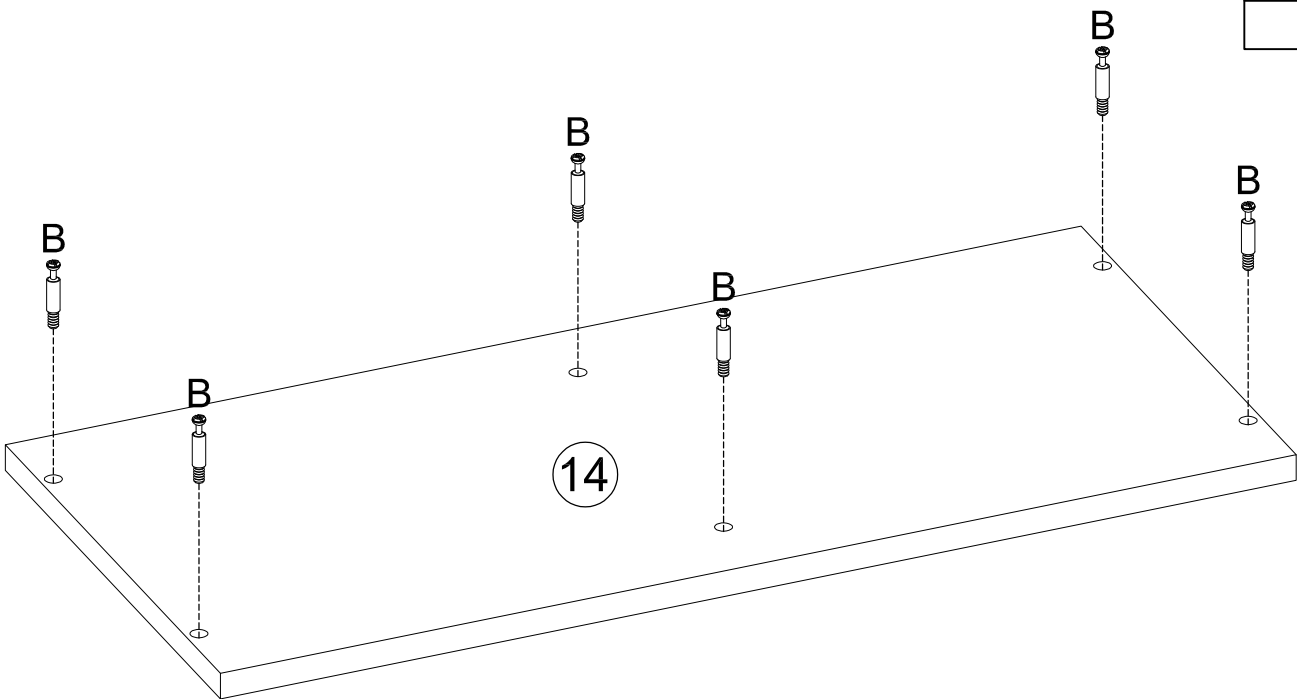

STEP: 15

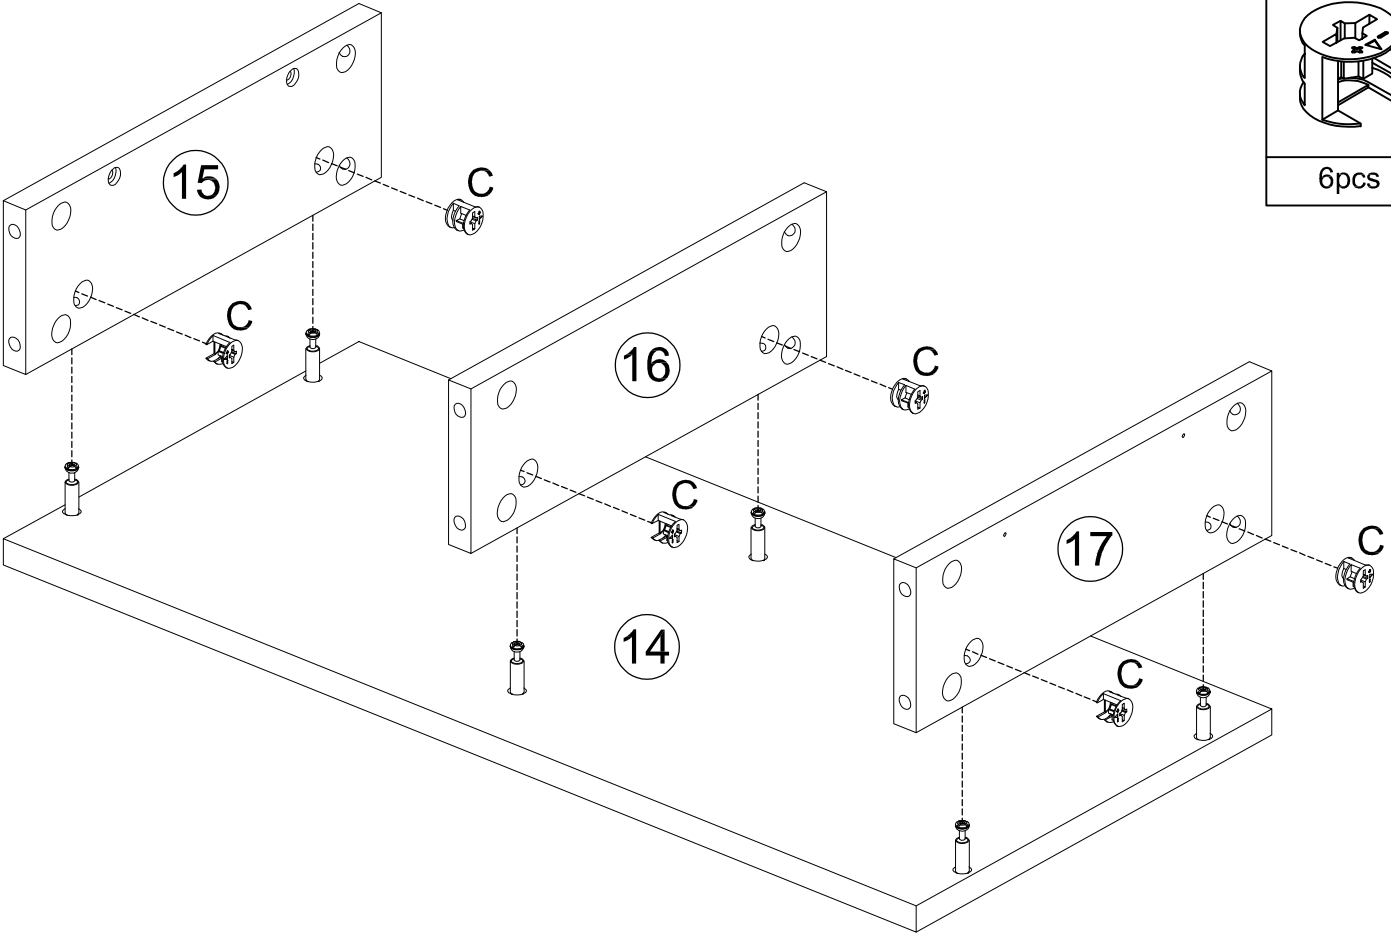


C



6pcs

STEP: 16

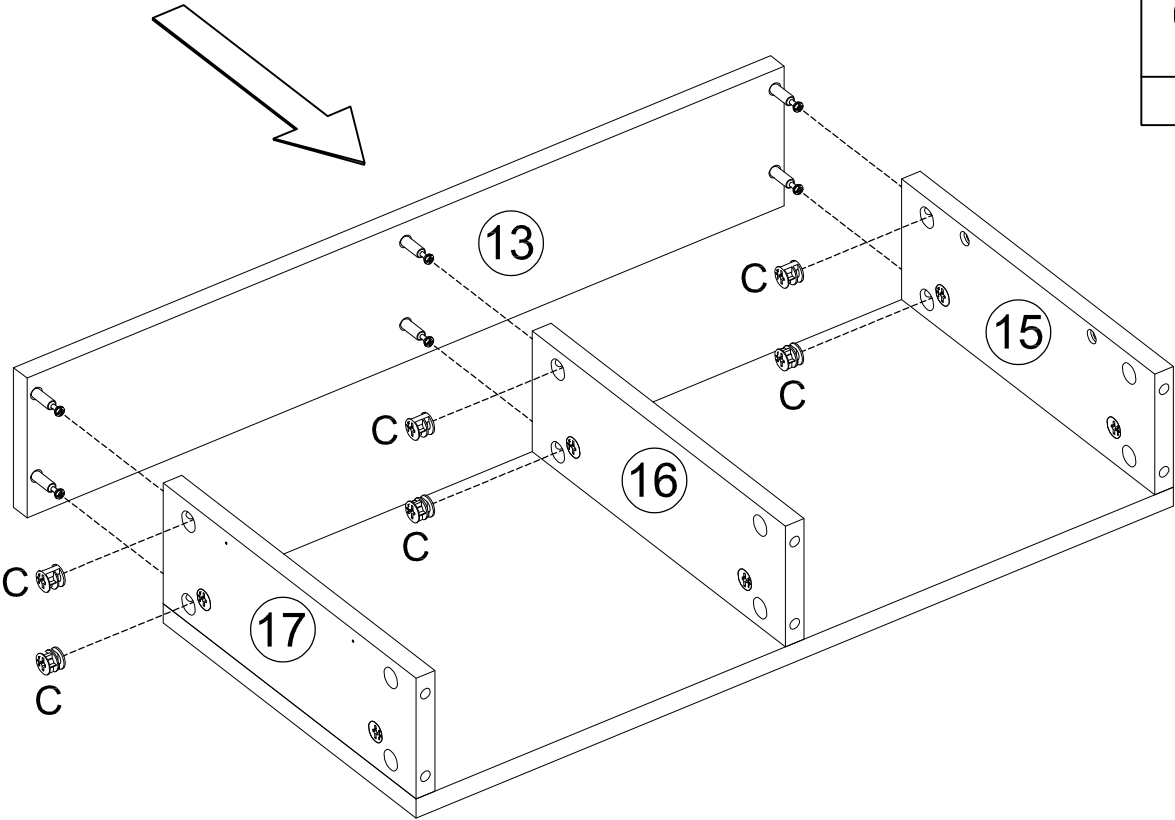


C



6pcs

STEP: 17

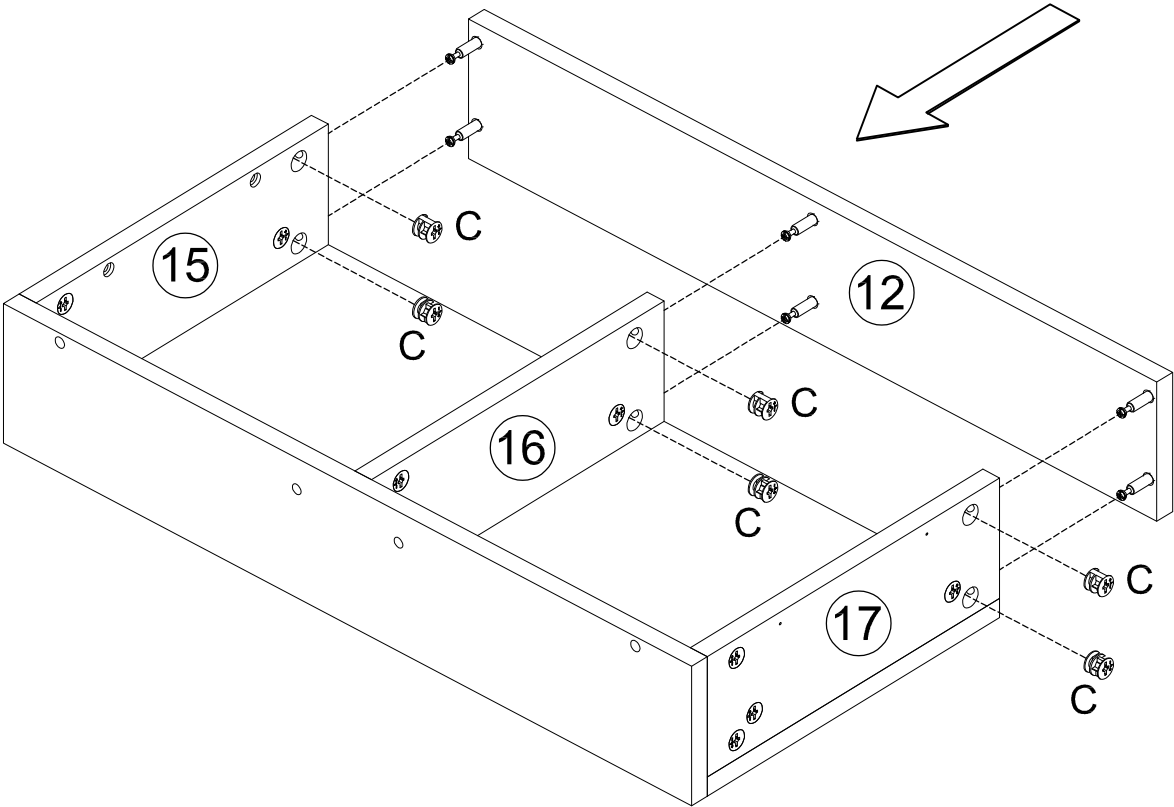


C



6pcs

STEP: 18

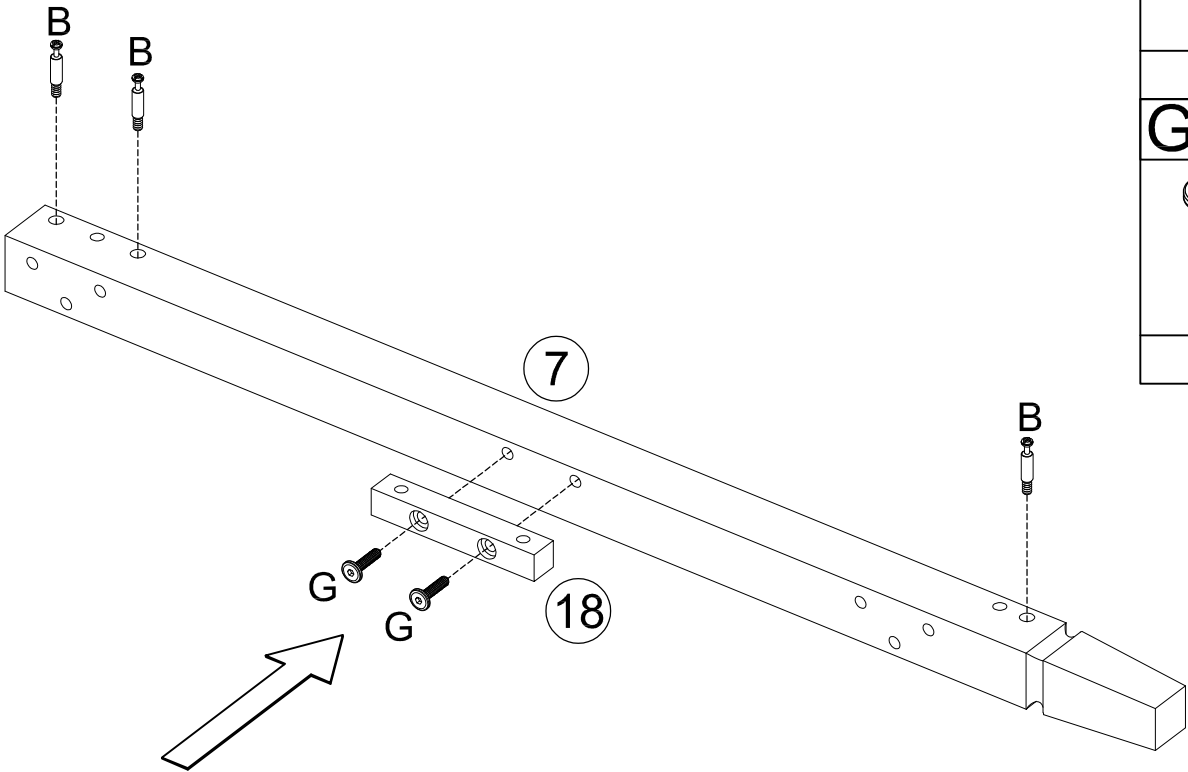


B



3pcs

G




2pcs

STEP: 19

B




5pcs

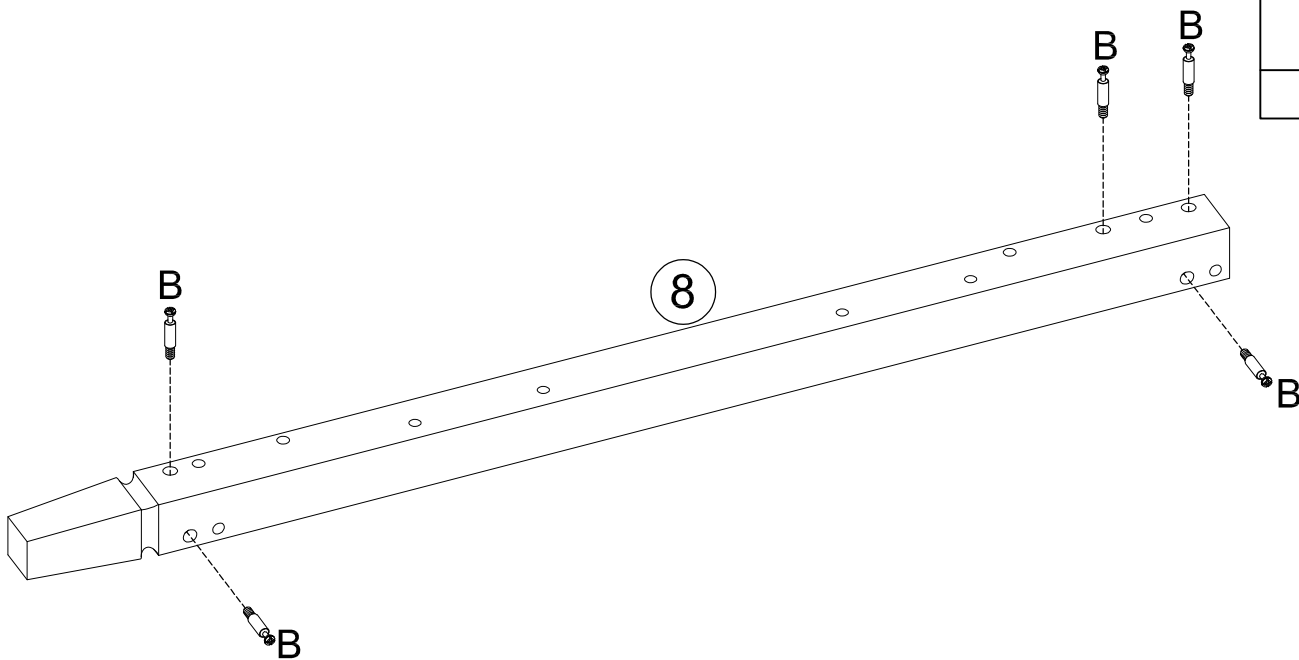


STEP: 20

G



6pcs

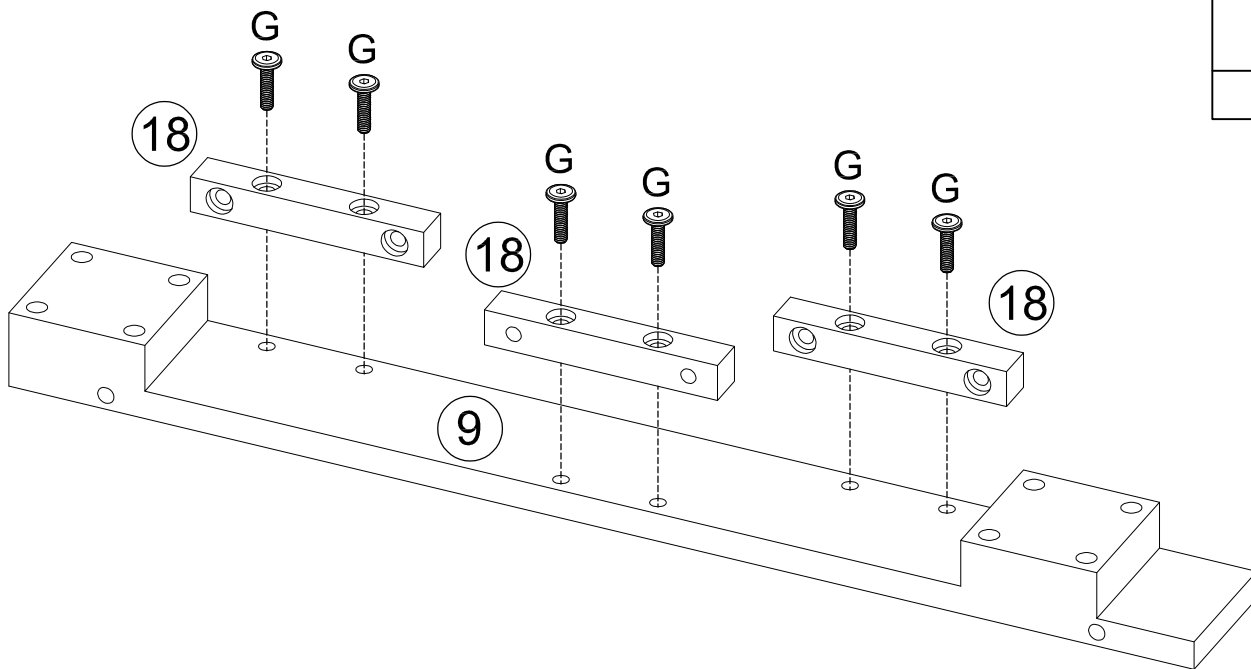


STEP: 21

A




2pcs

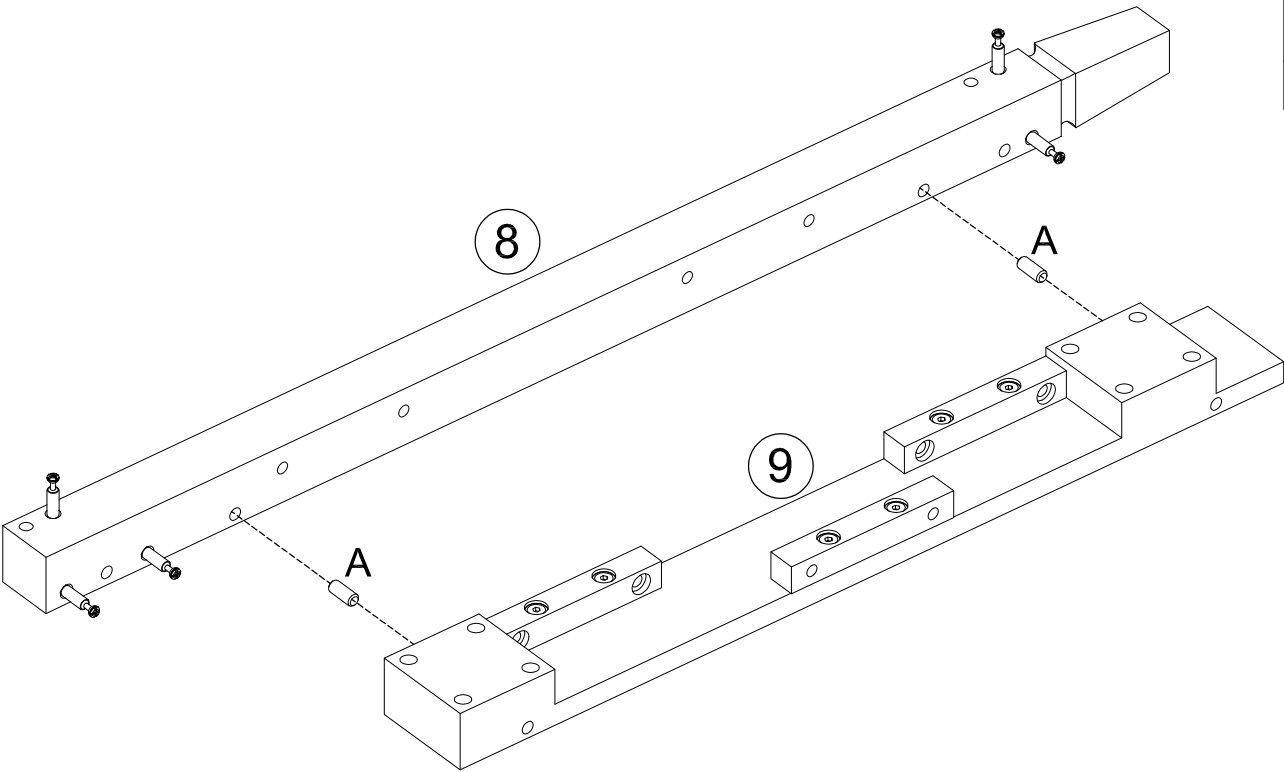


STEP: 22


G



4pcs

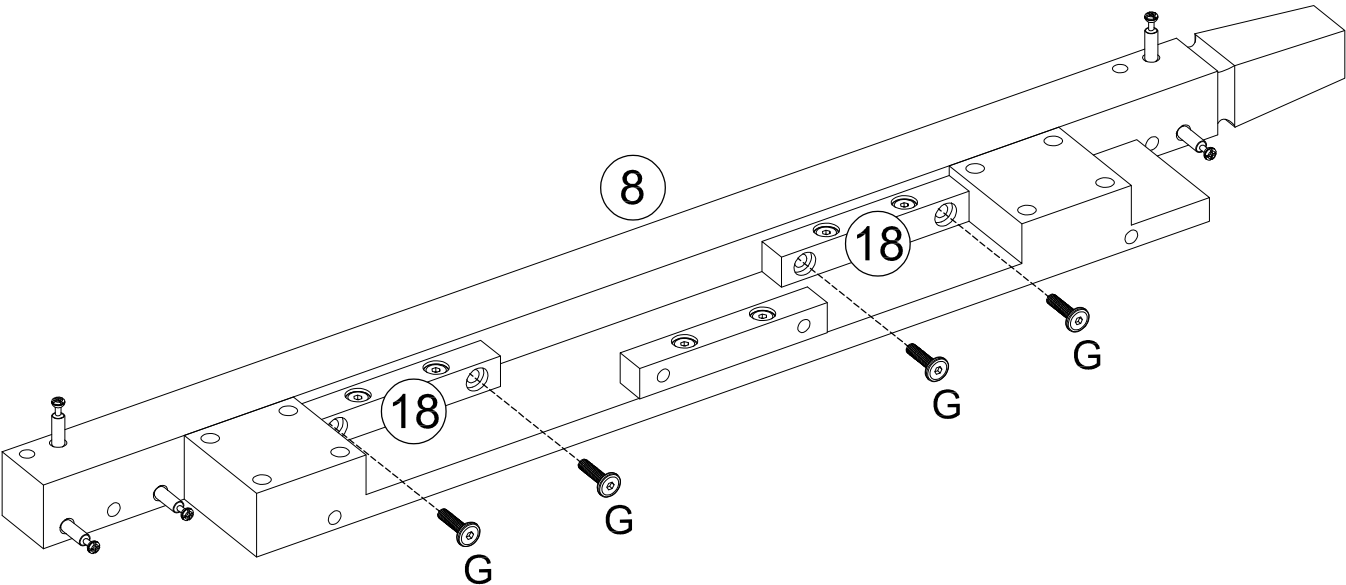

STEP: 23

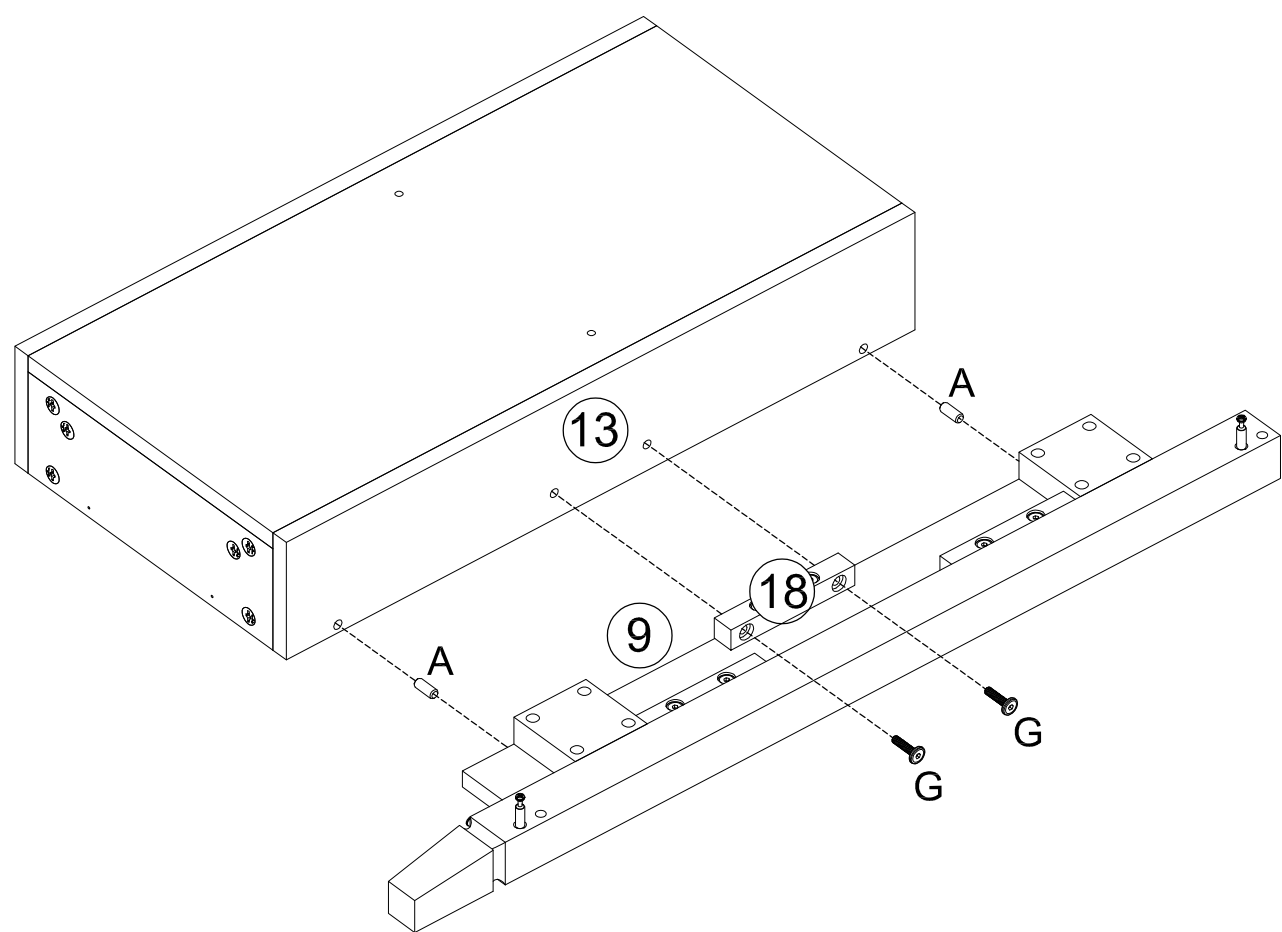


A




2pcs

G



2pcs

STEP: 24

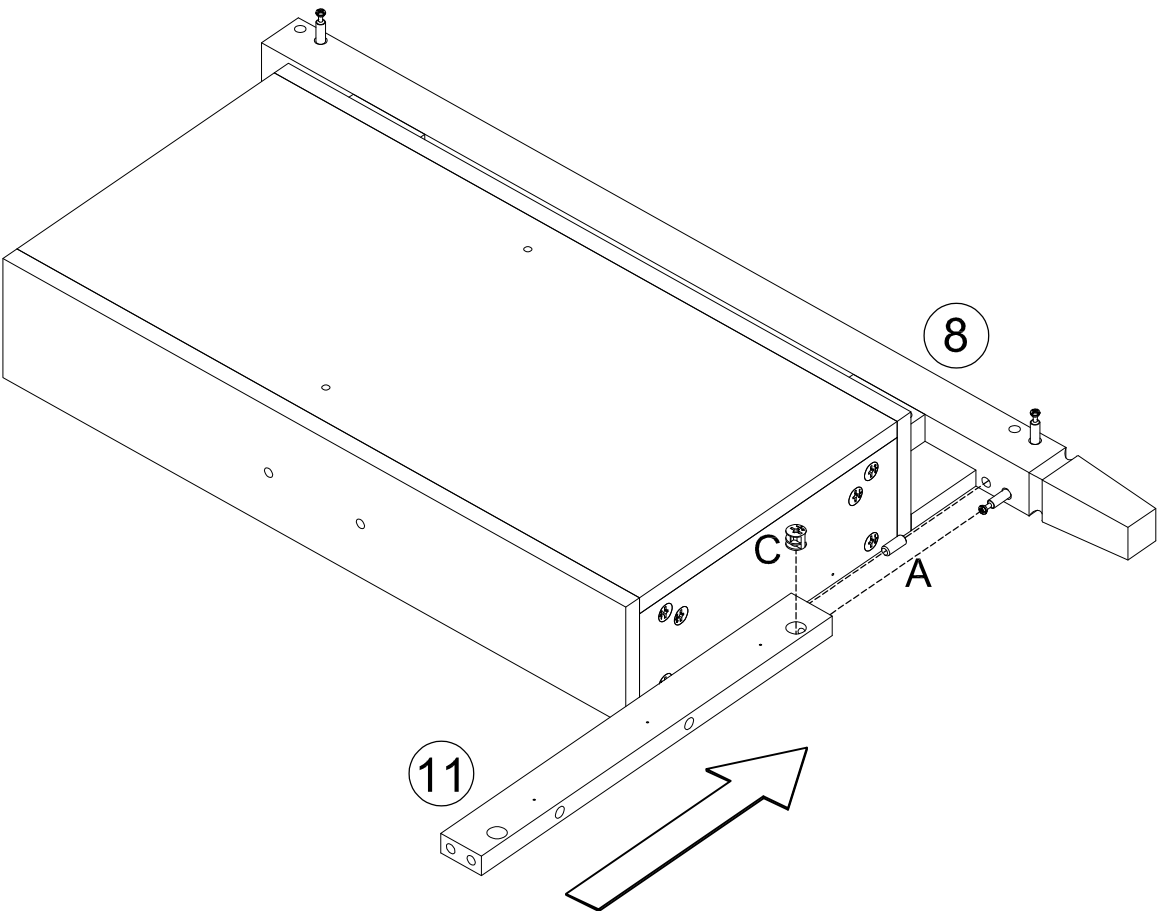

A




1pc

C



1pc

STEP: 25

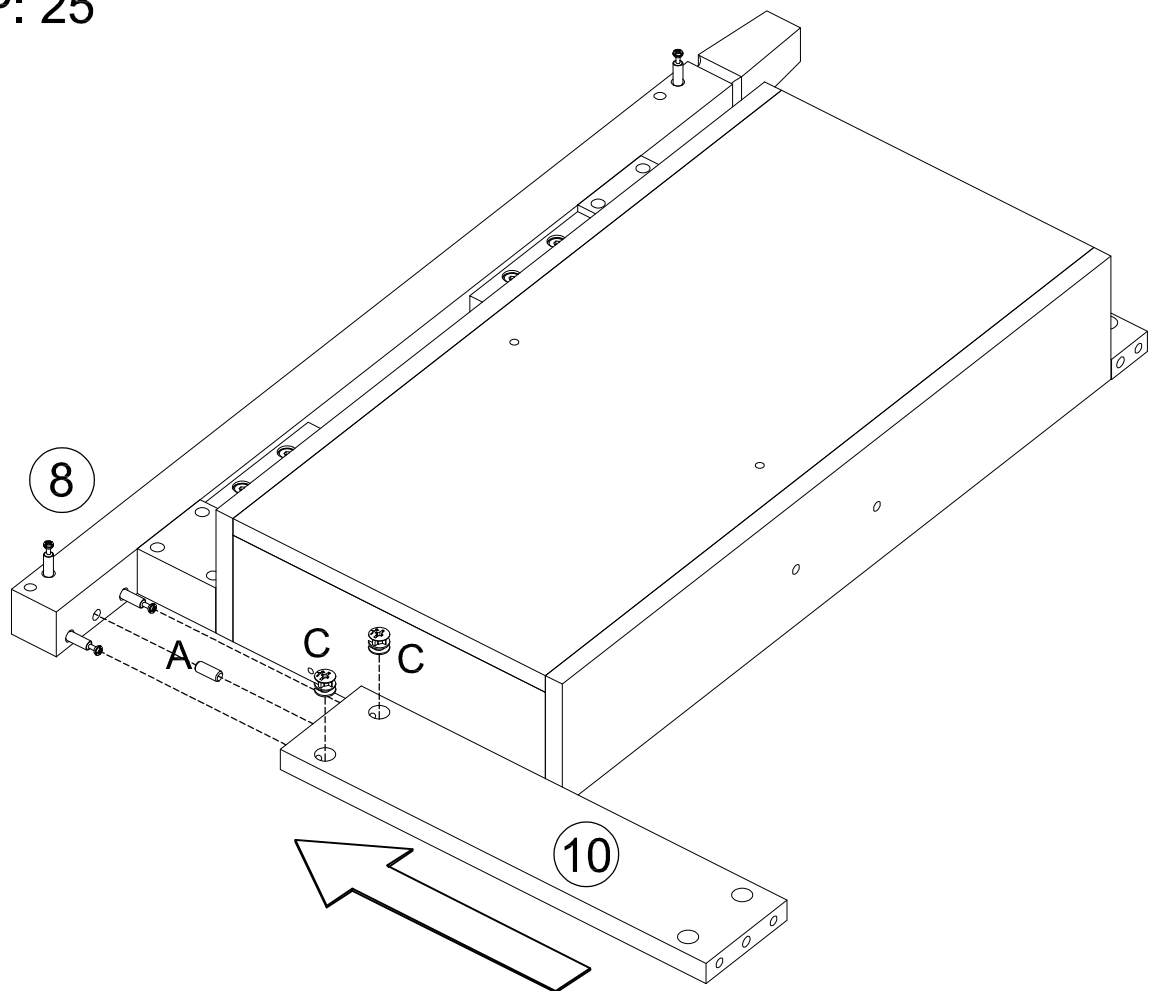

A




1pc

C



2pcs

STEP: 26

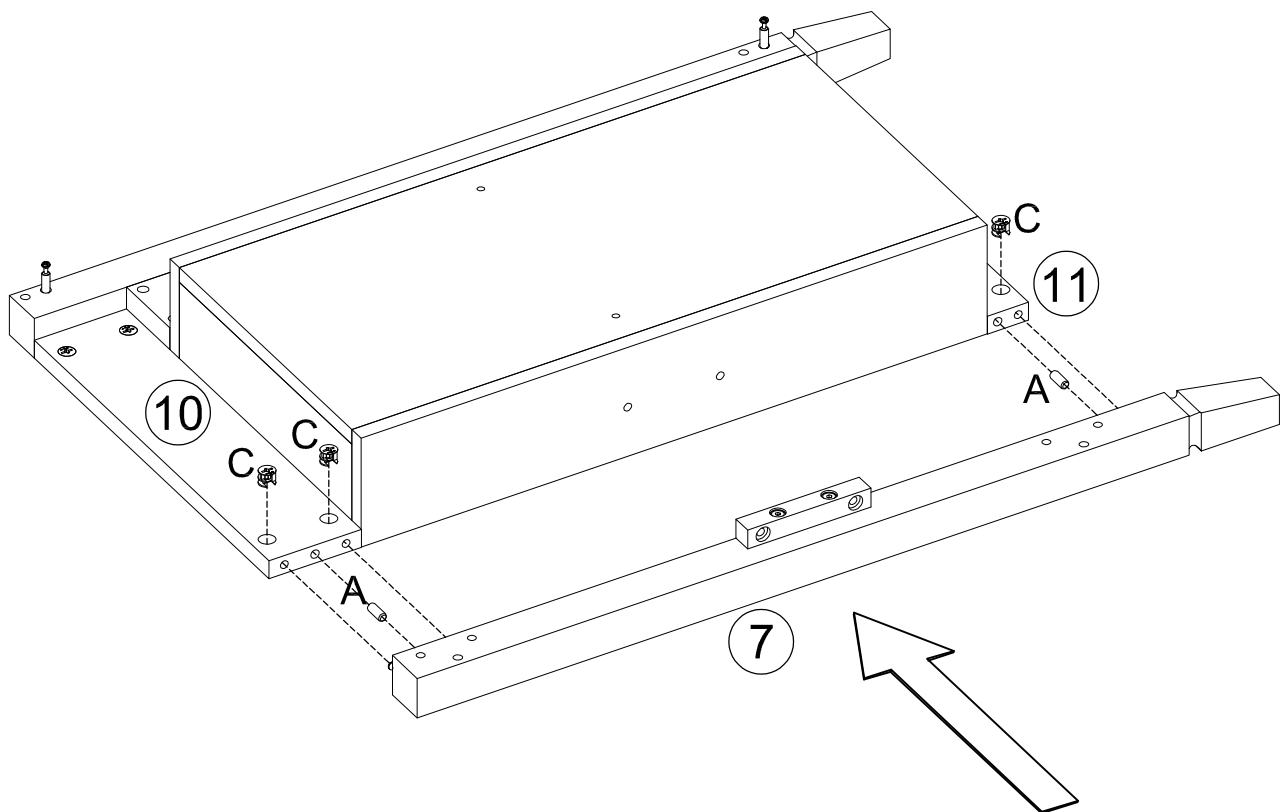

A



2pcs


C




3pcs

STEP: 27

G



2pcs

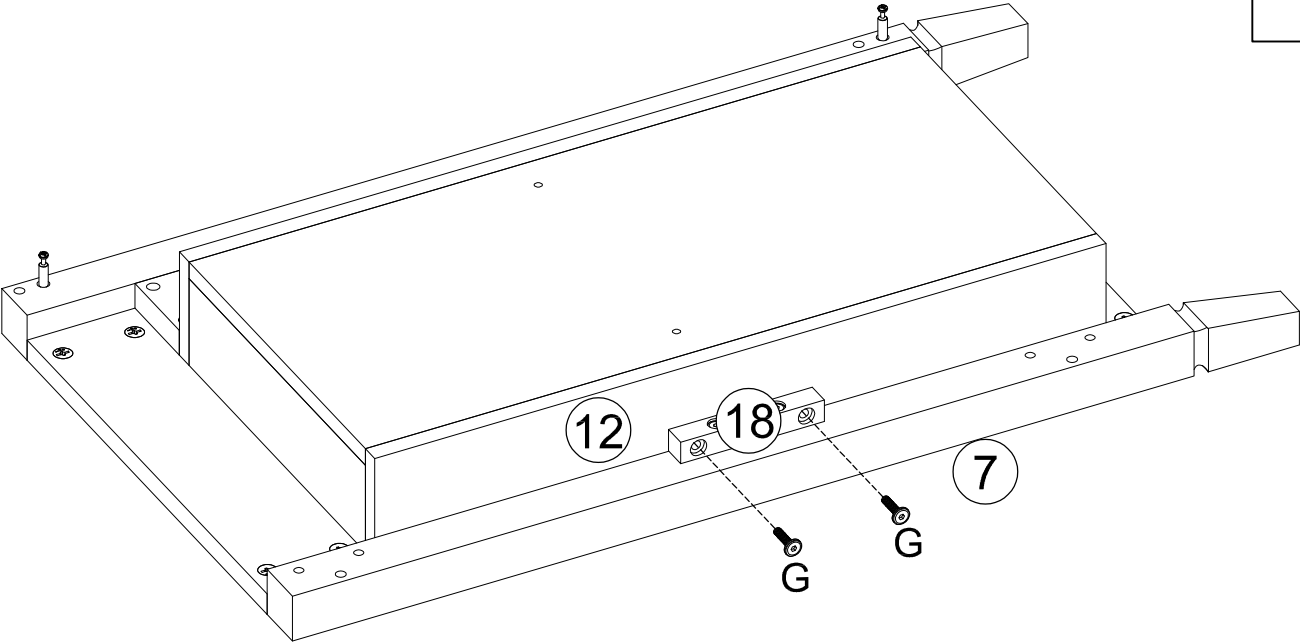


STEP: 28


D



4pcs

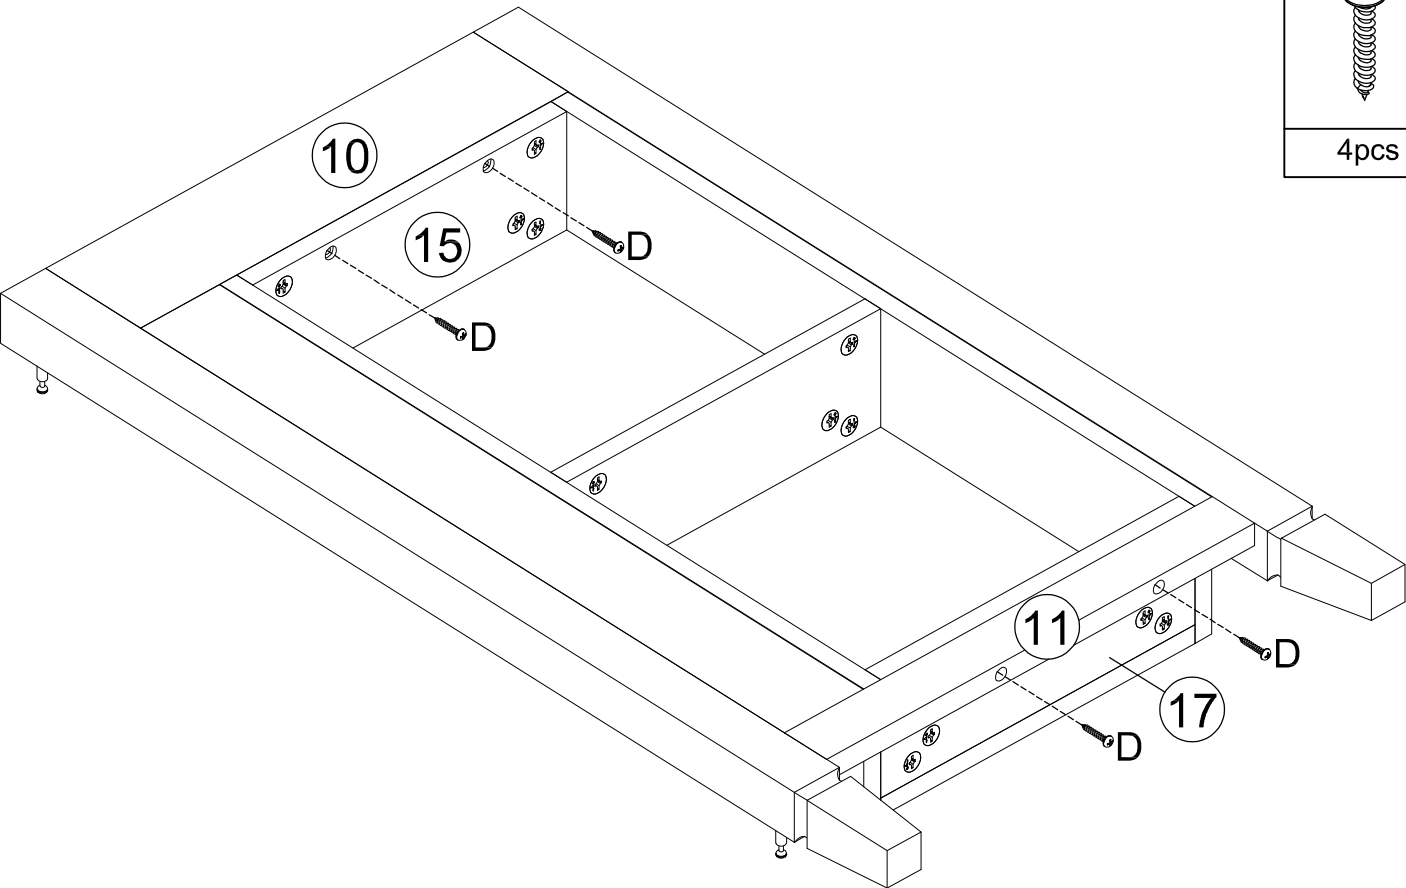

STEP: 29

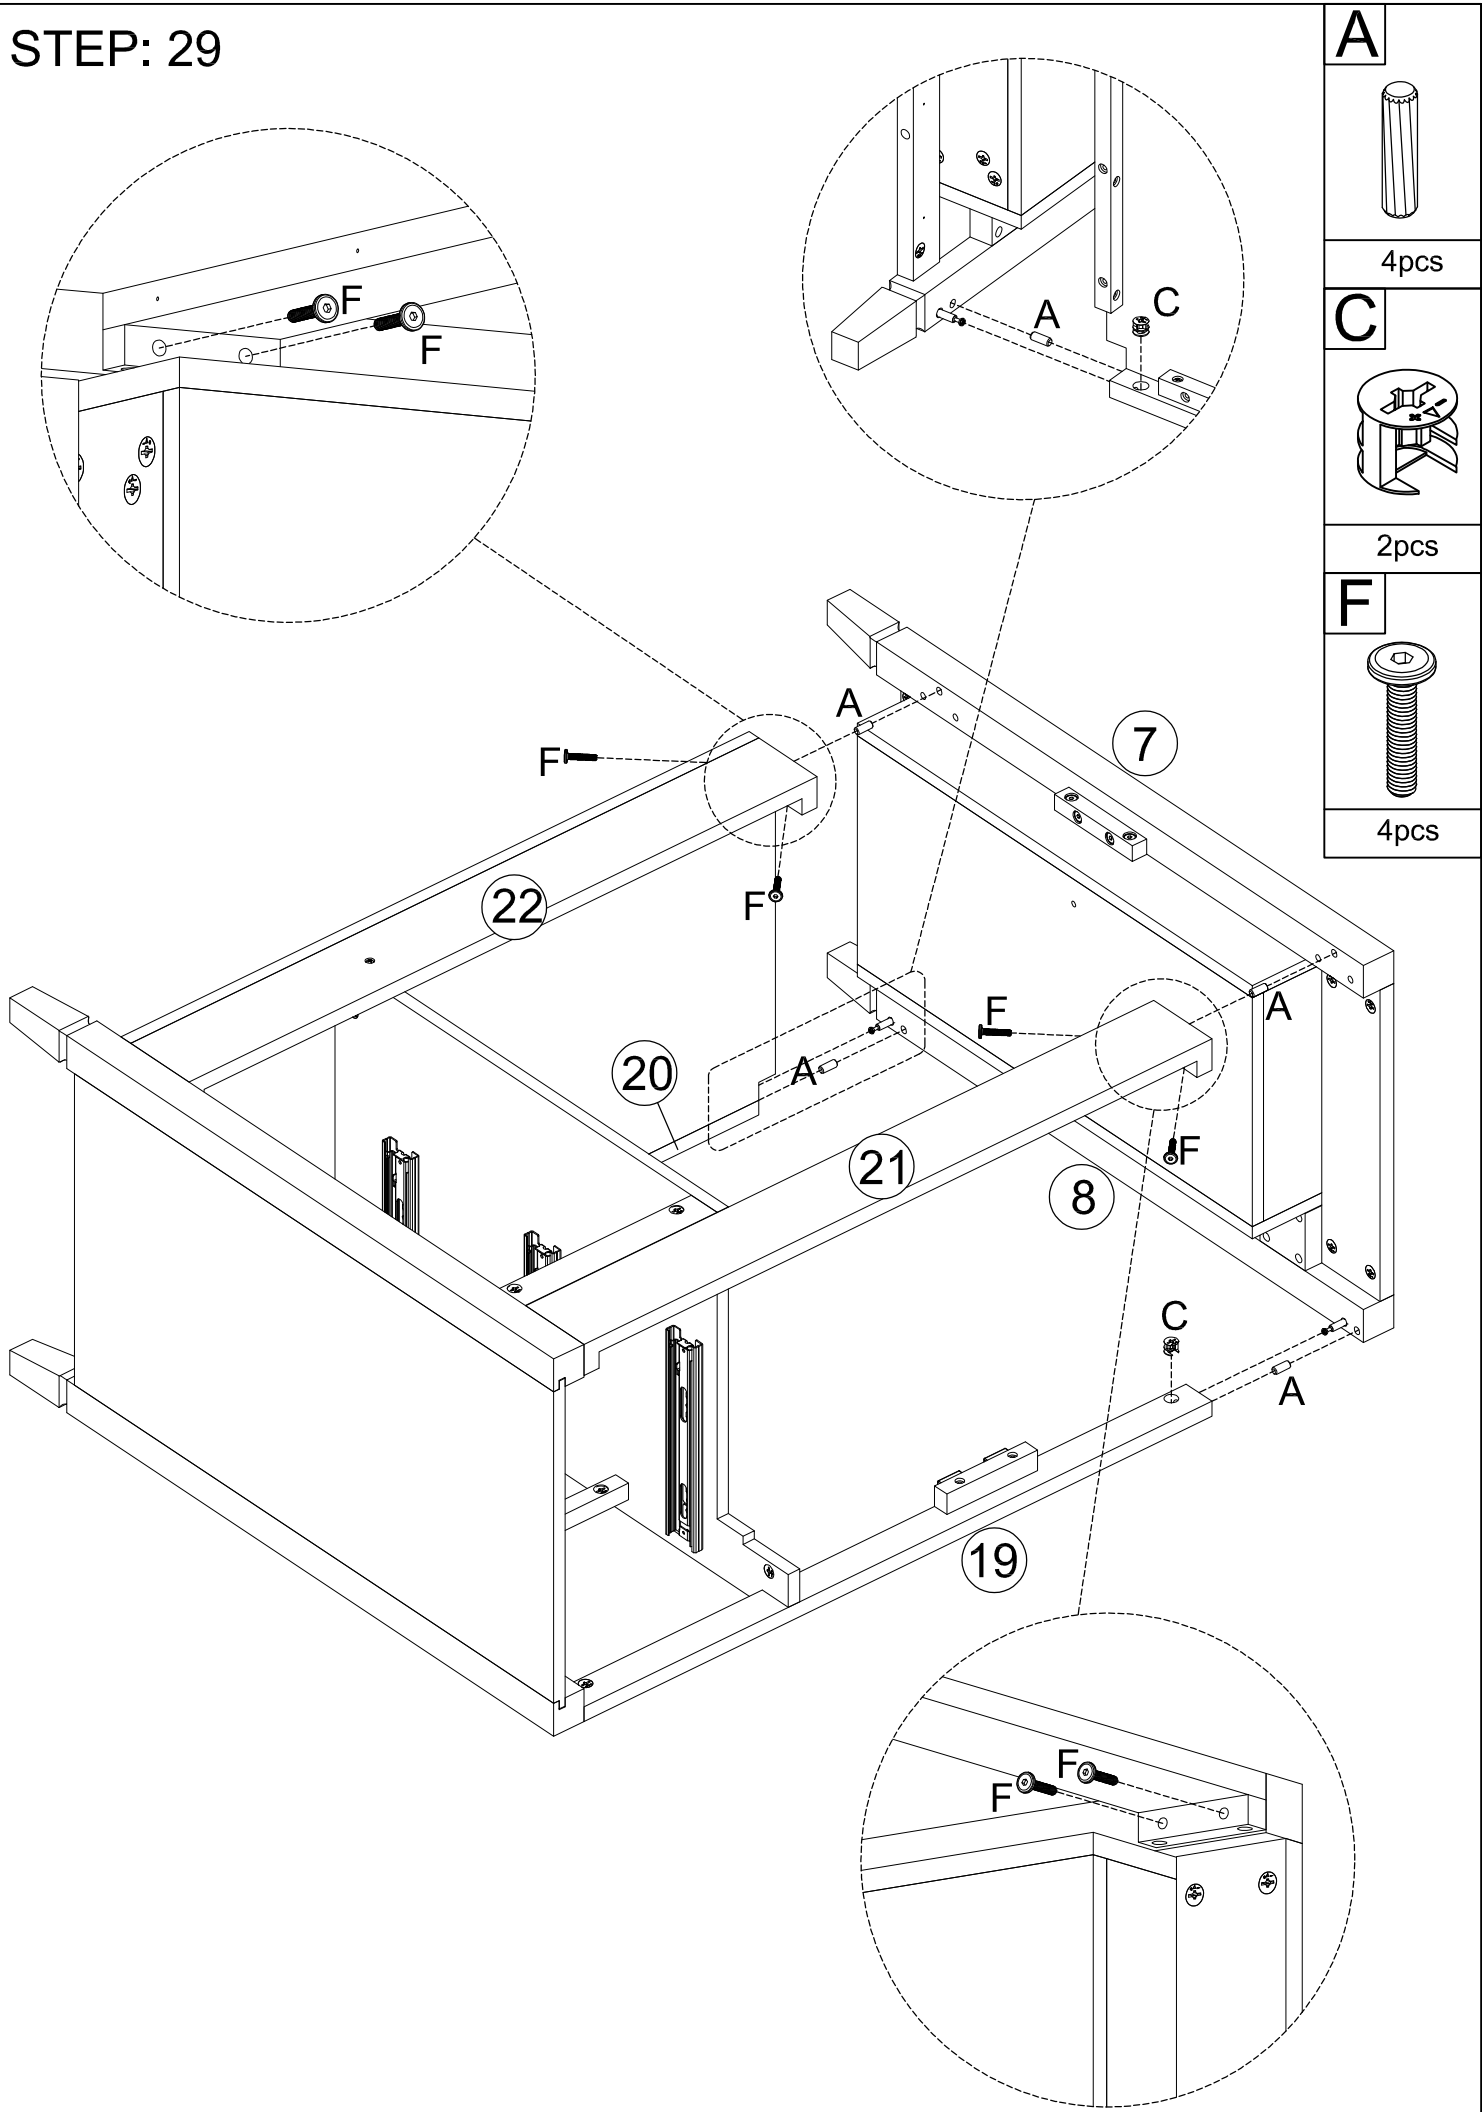


STEP: 30



D




3pcs

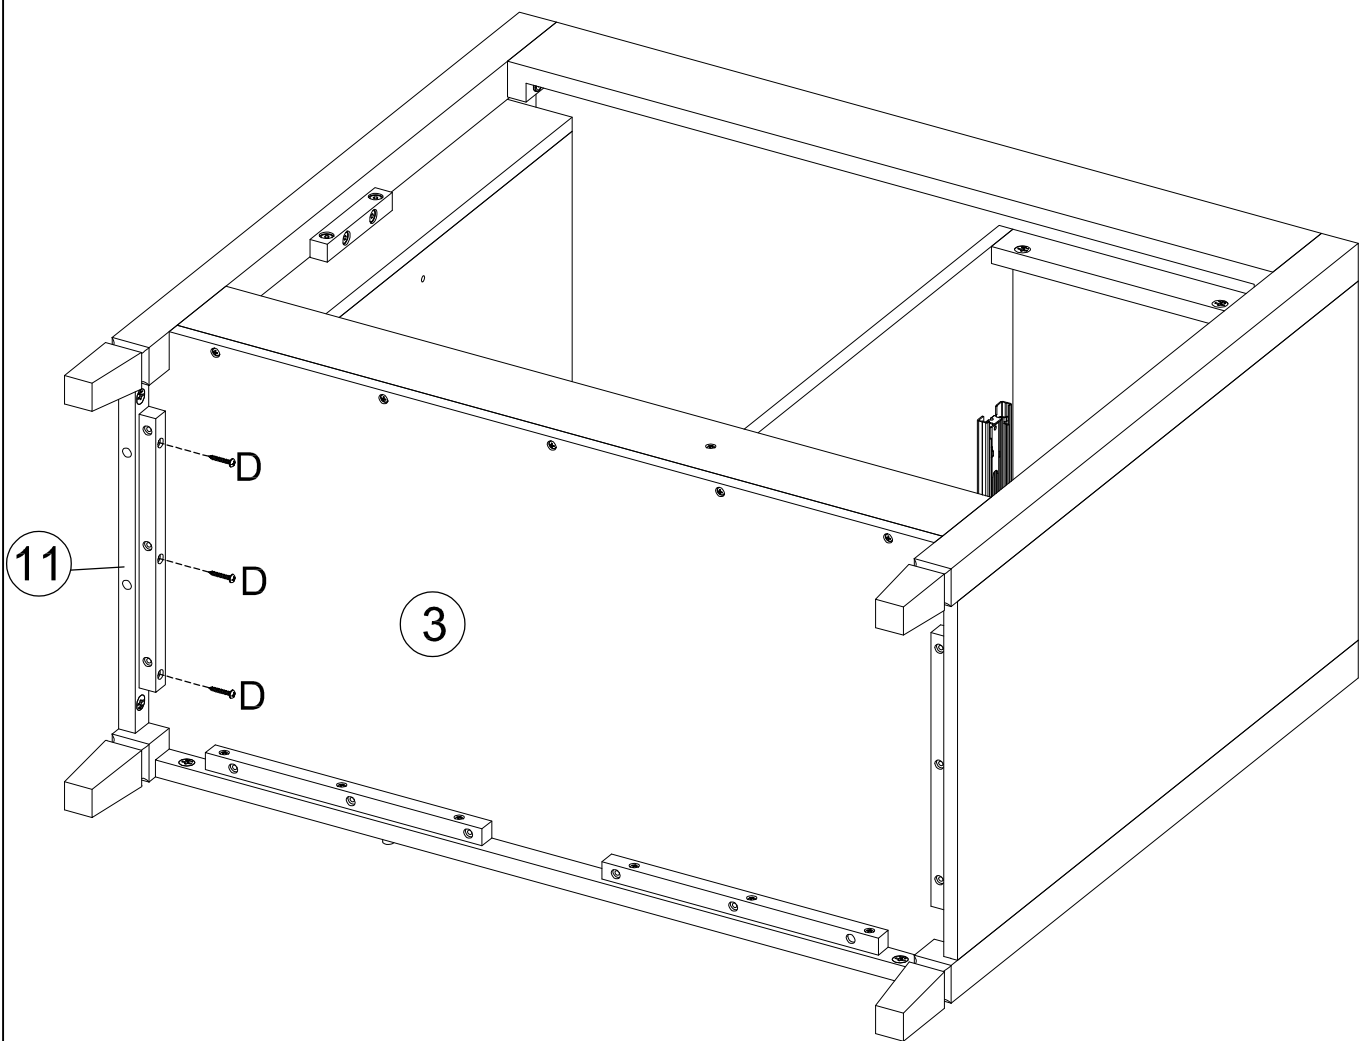


STEP: 31

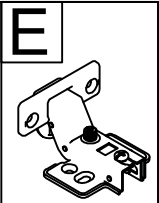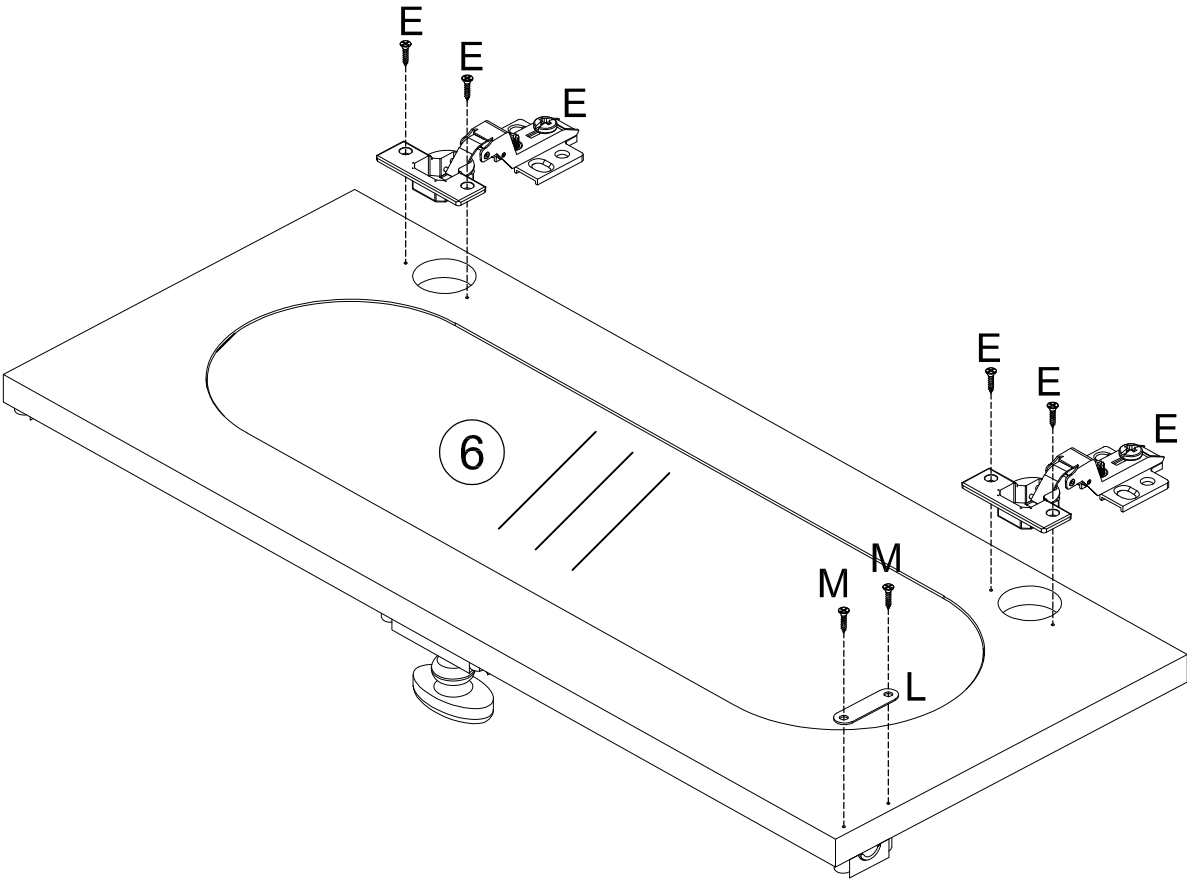


4pcs

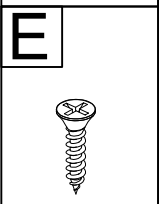


8pcs

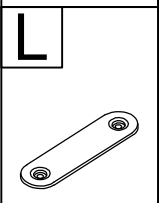

2pcs

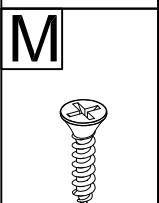

4pcs


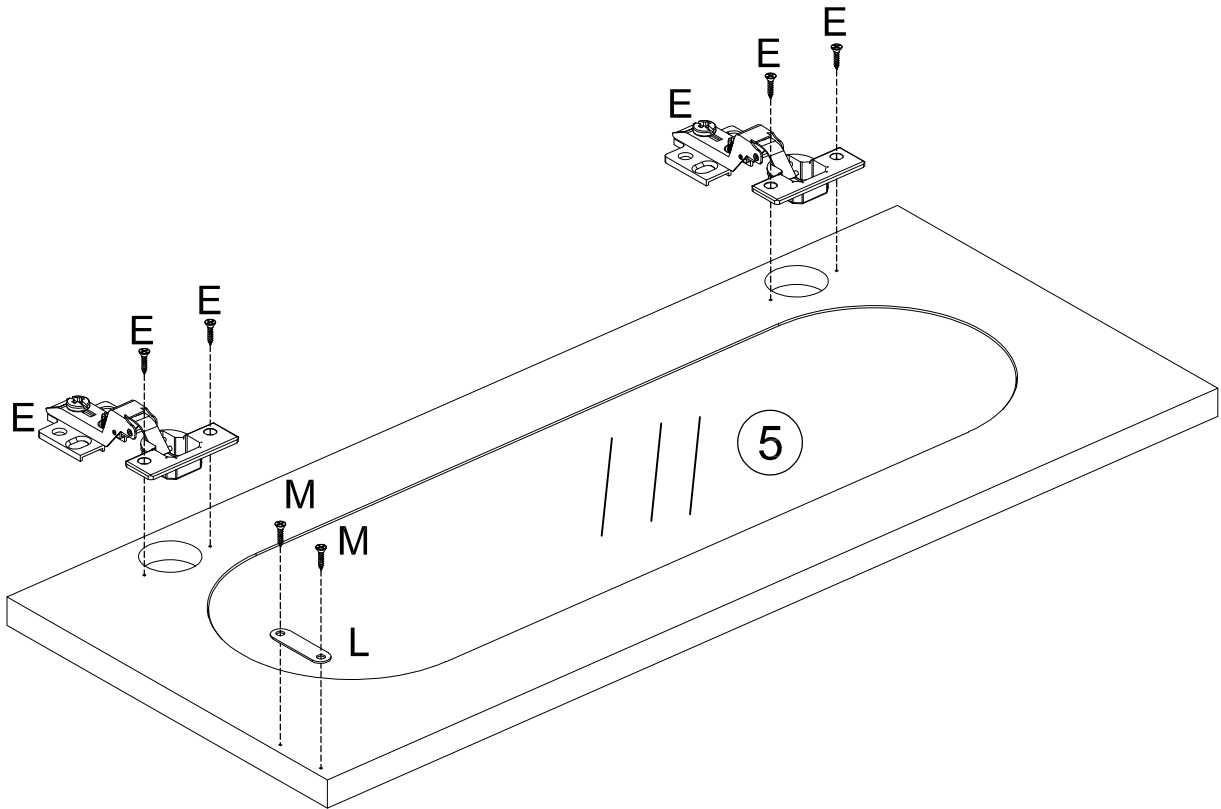


STEP: 32


E




16pcs

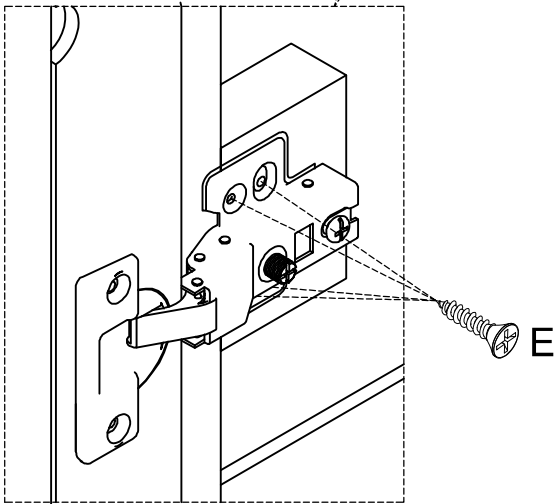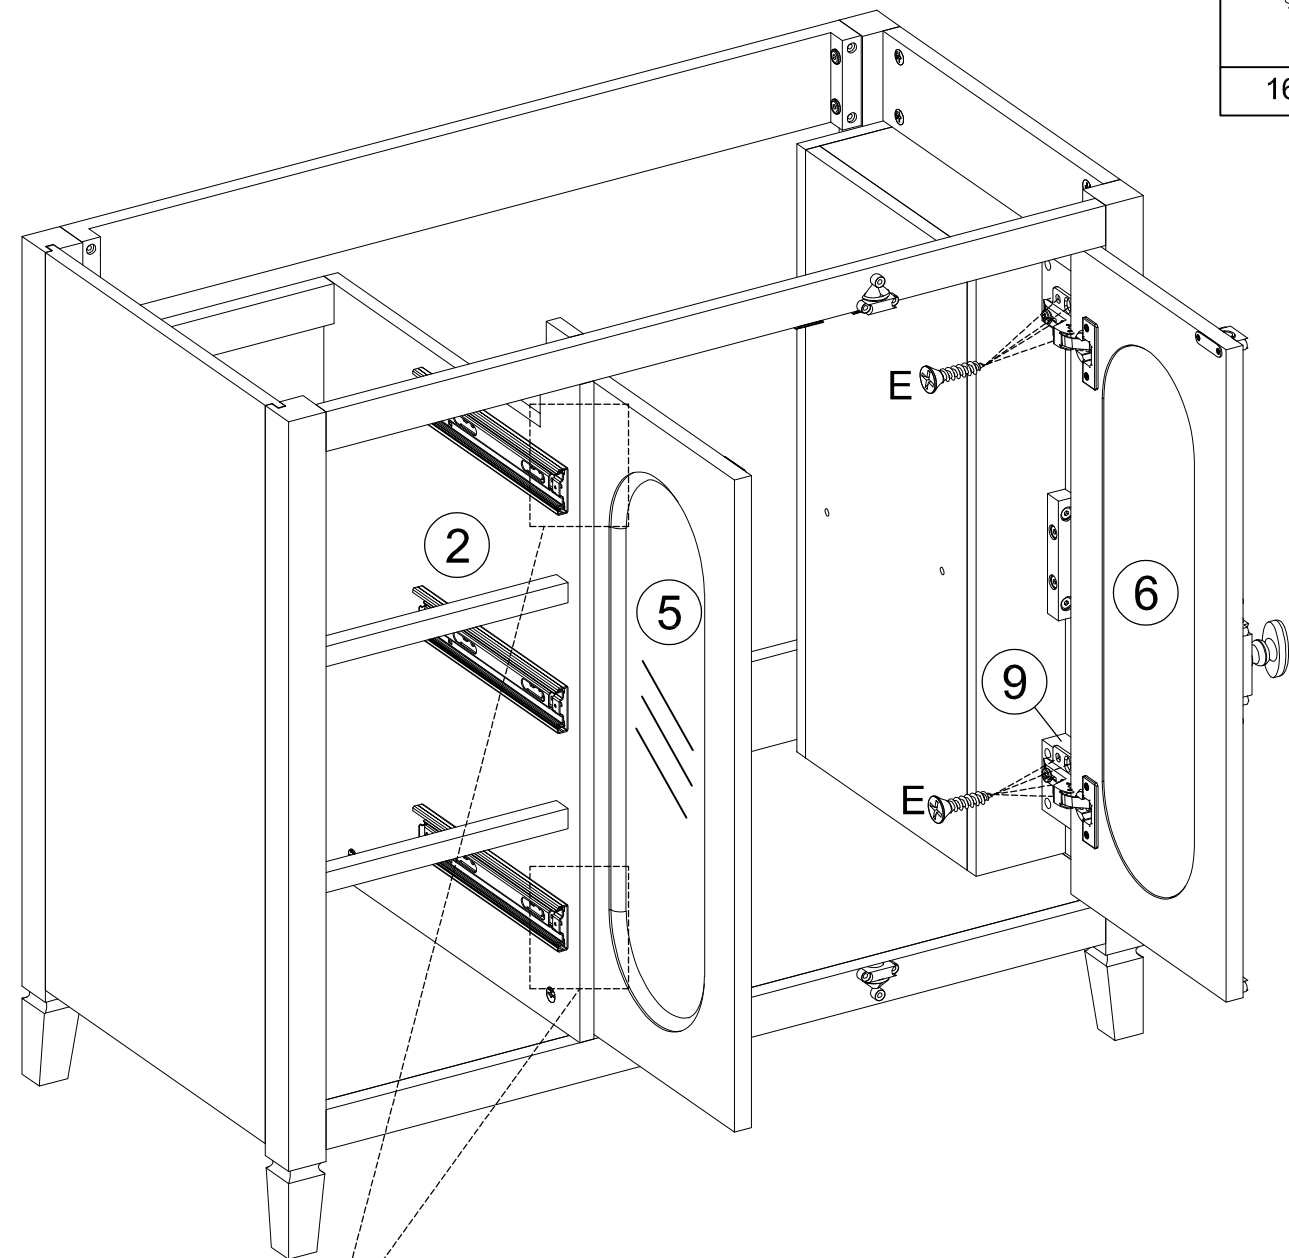


Use the screws to adjust up or down

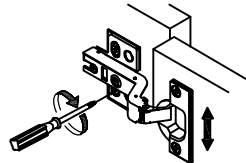


Use the screws to permanent

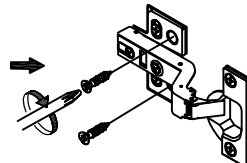



Use the screws to adjust left or right

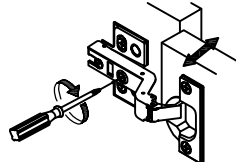

Use the screws to adjust in or out


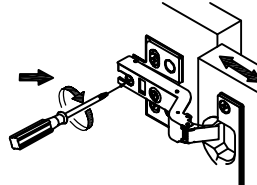


STEP: 33

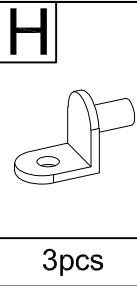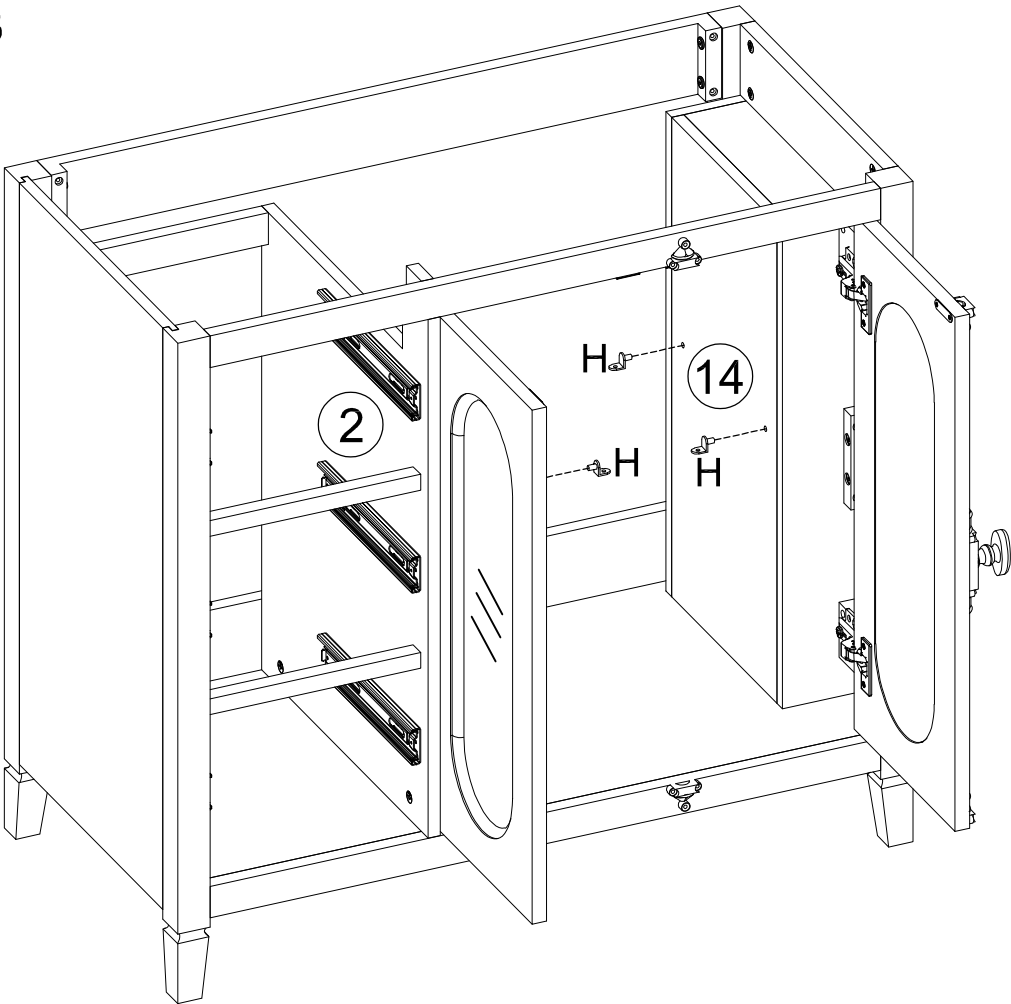


3pcs



STEP: 34

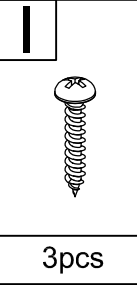
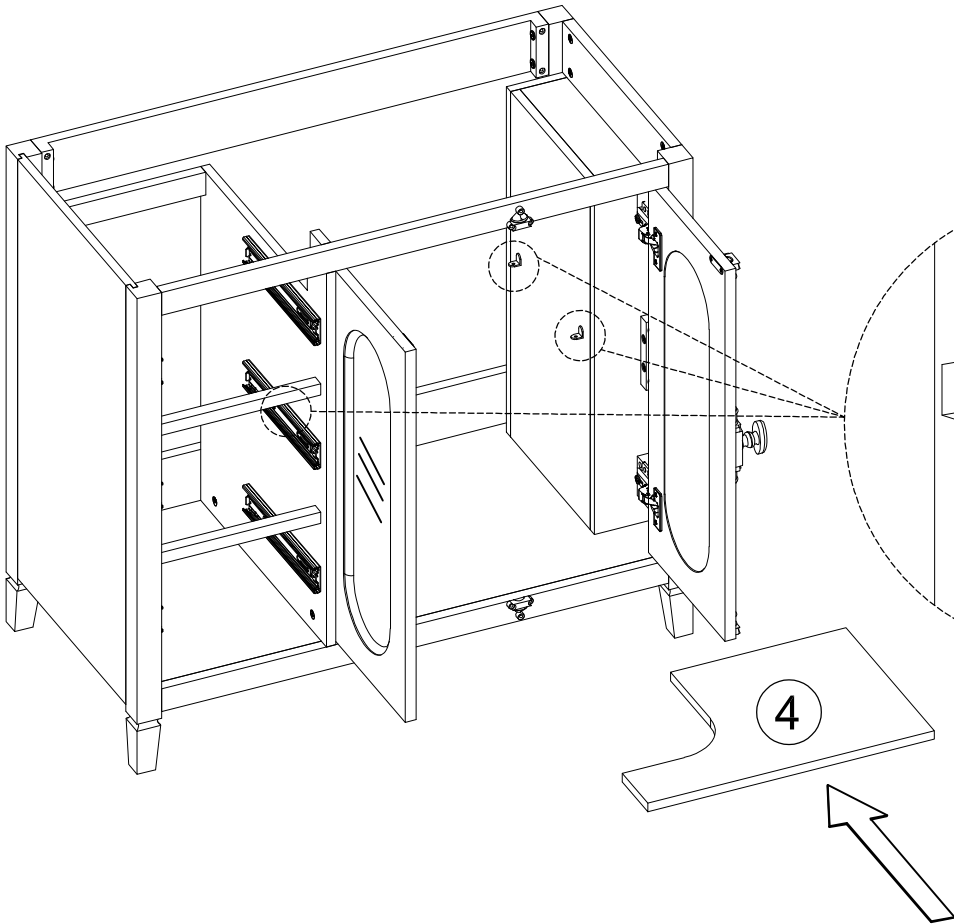


3pcs



STEP: 35

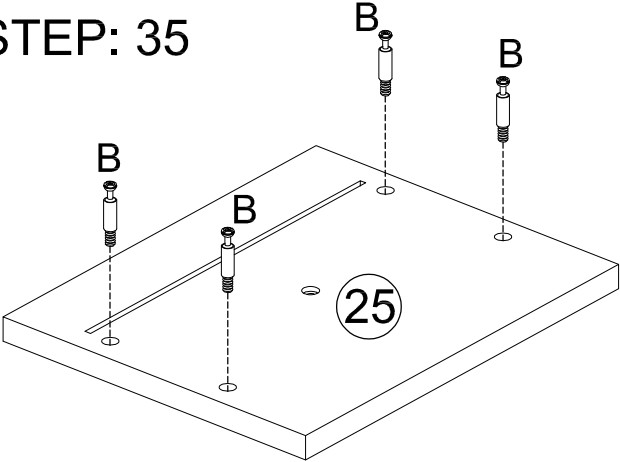


B	C	J
		
12pcs	12pcs	3pcs
K	N	O
		
3pcs	12pcs	12pcs

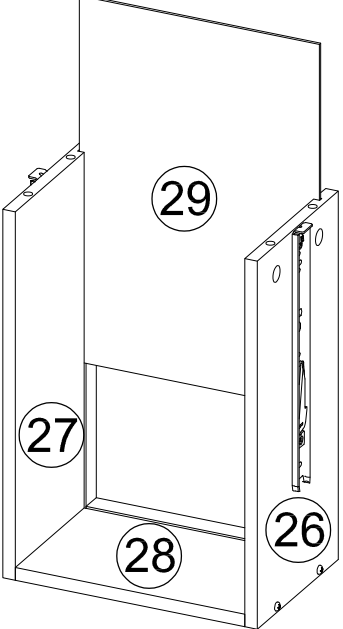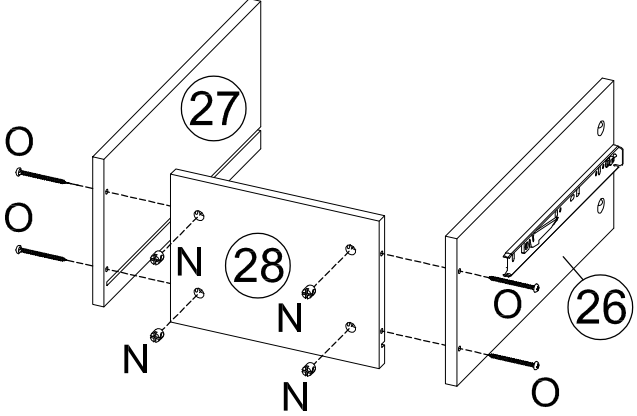


X3

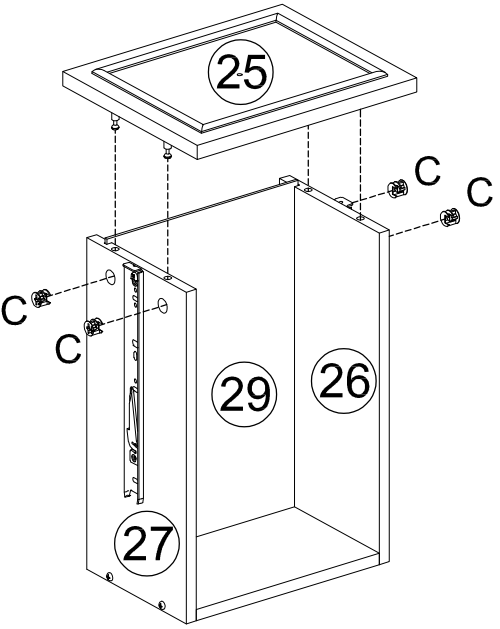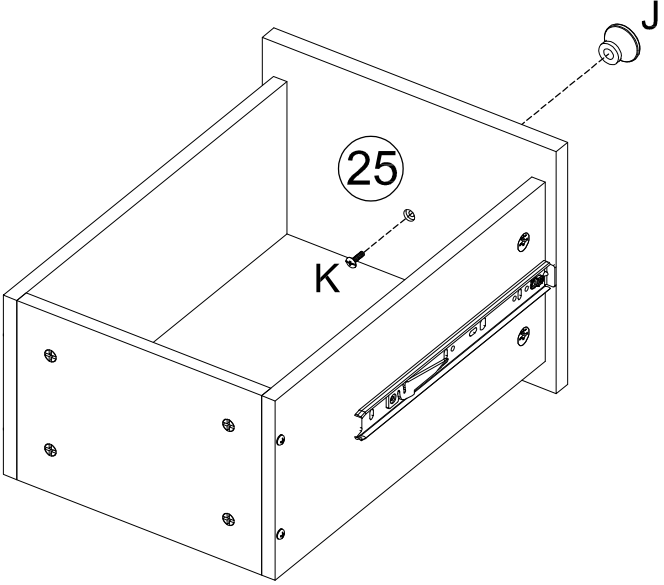

STEP: 36

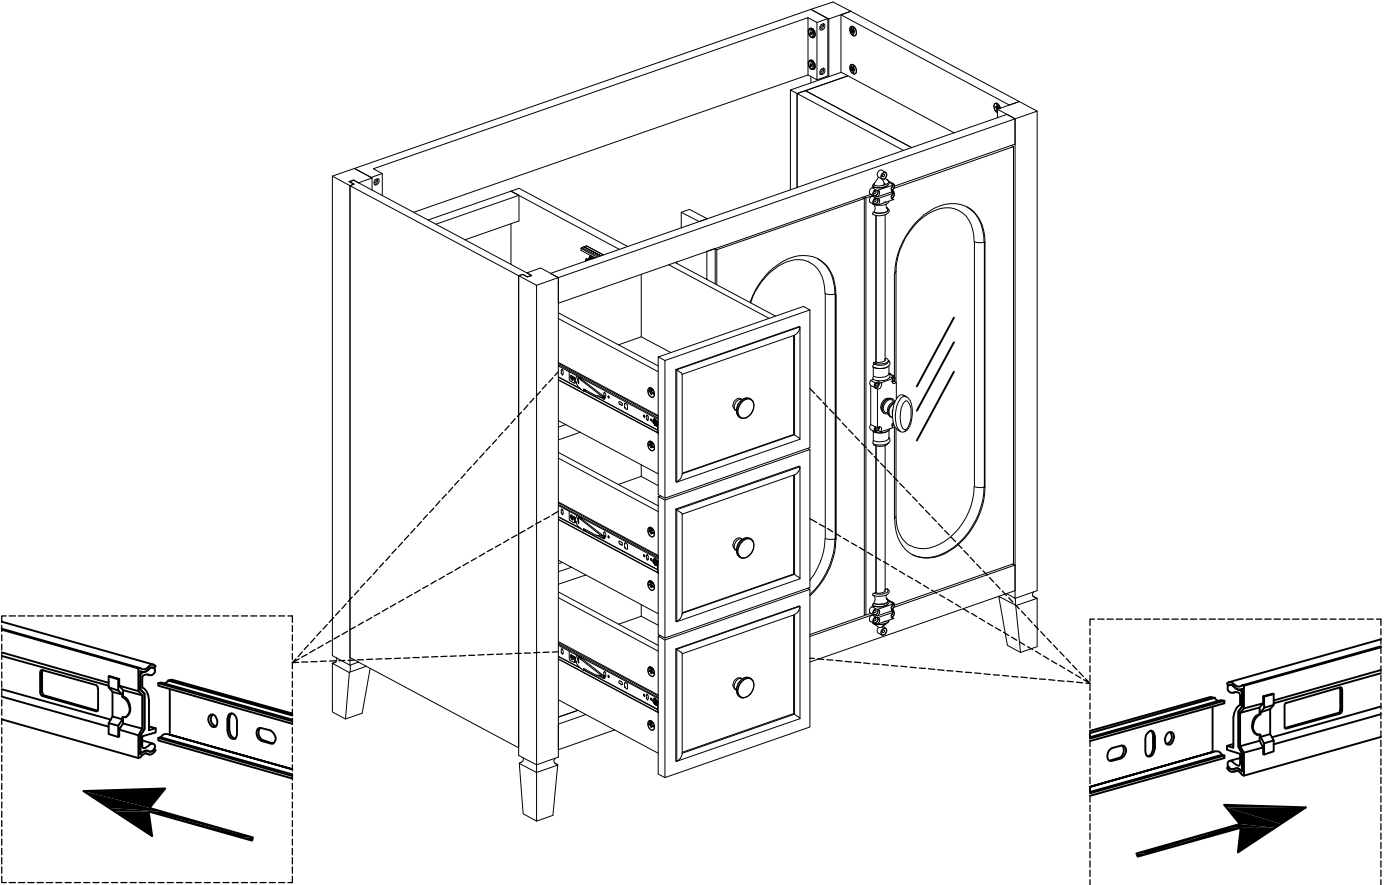

STEP: 37

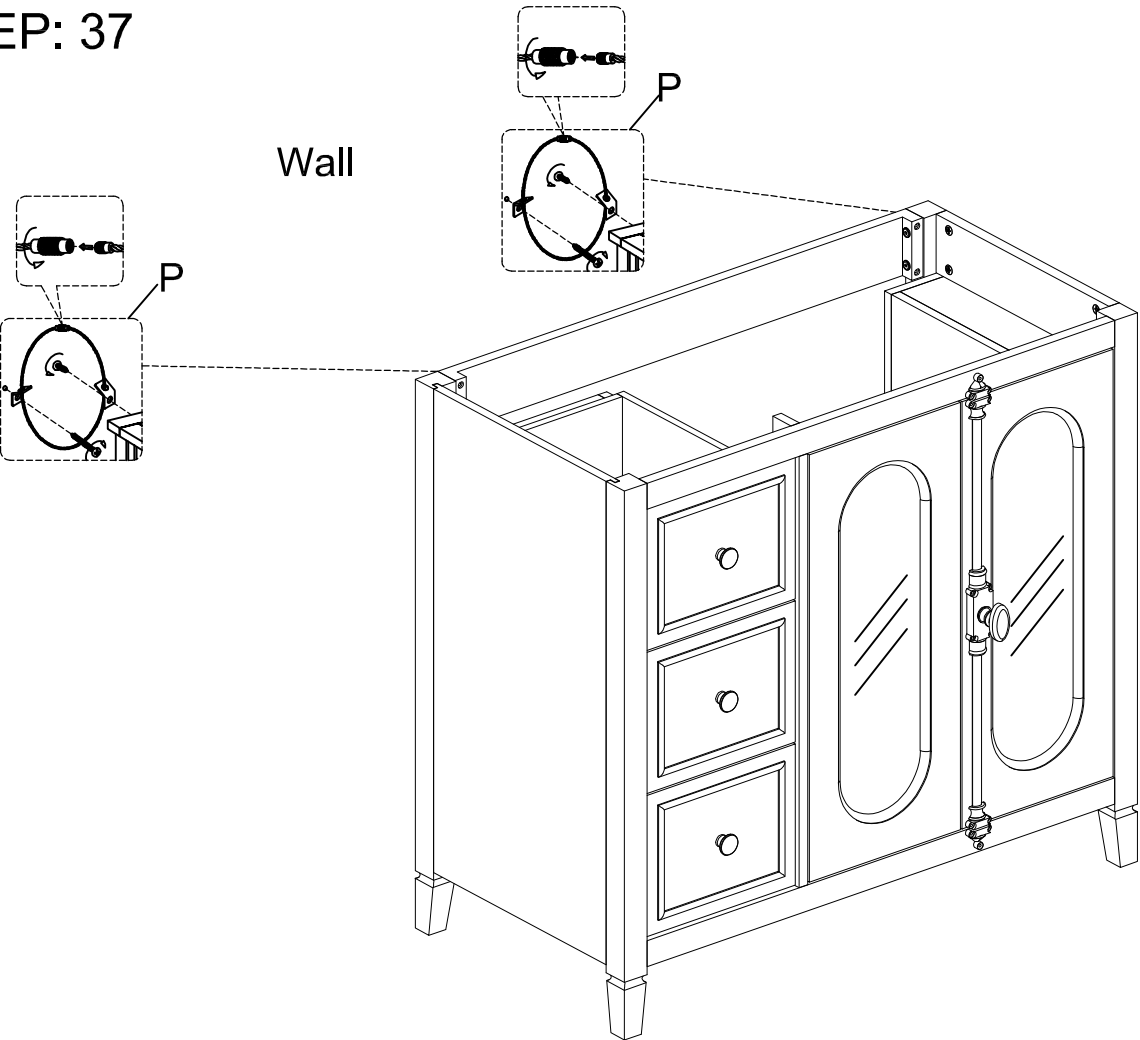


P

2SETS



STEP: 38

Install the sink on the cabinet with glue.
Let stand for 24 hours

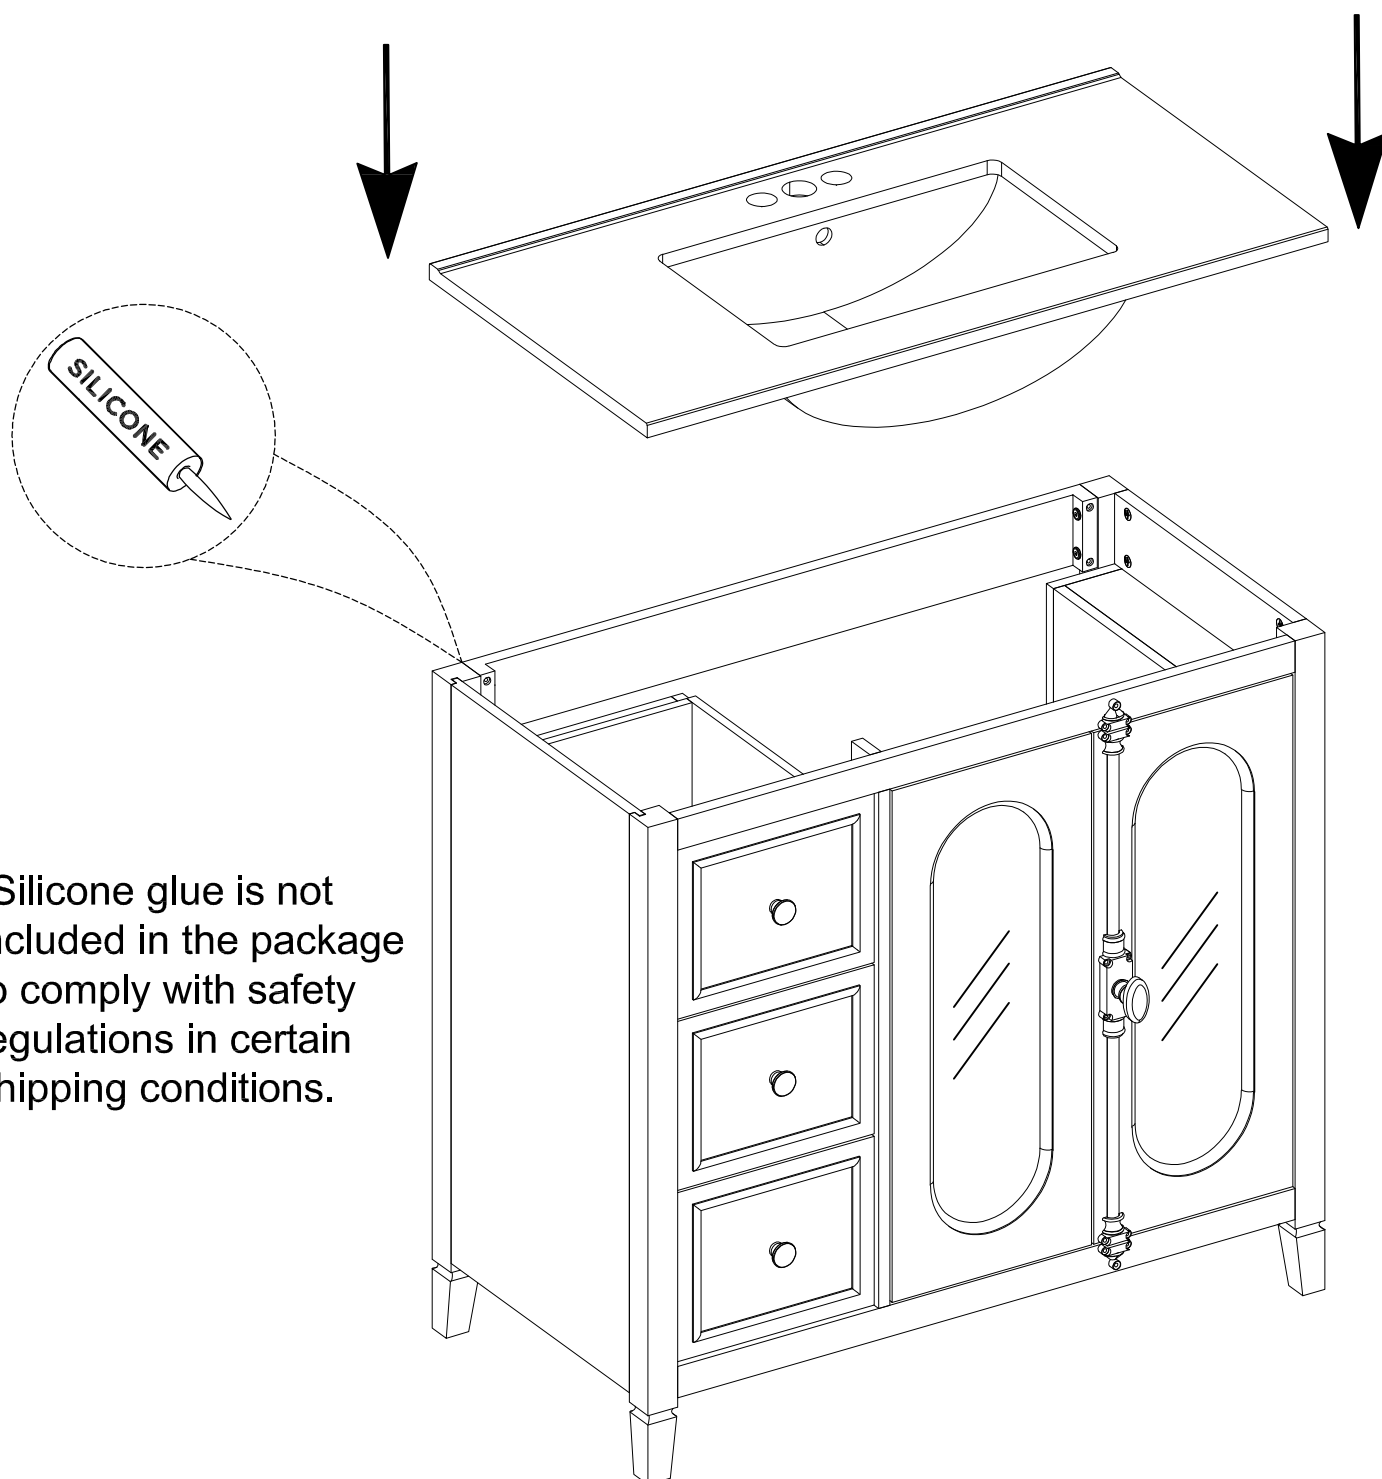


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 39

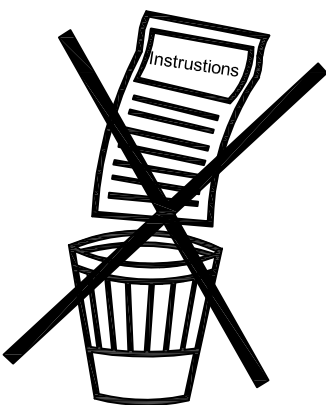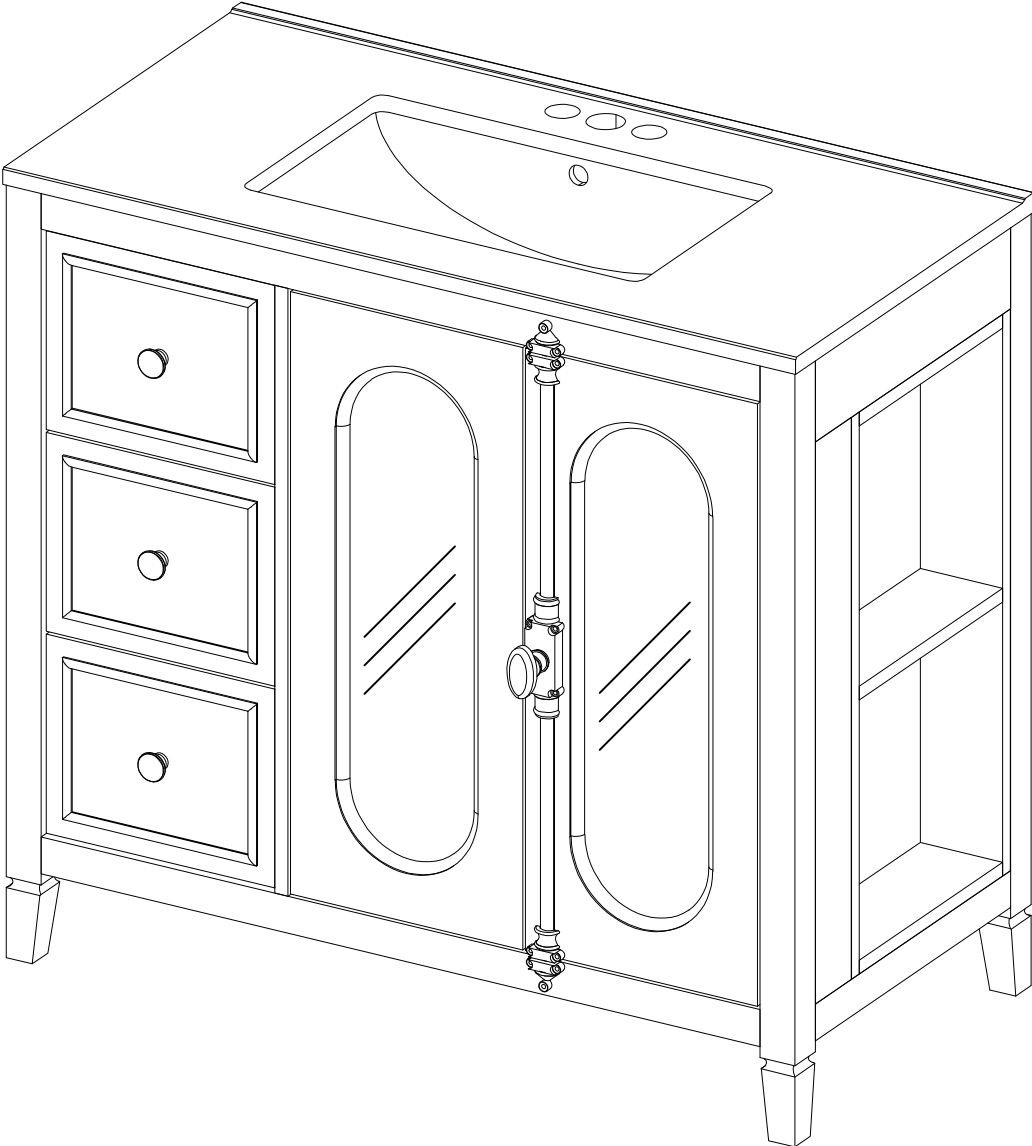


HINGE ADJUSTMENTS

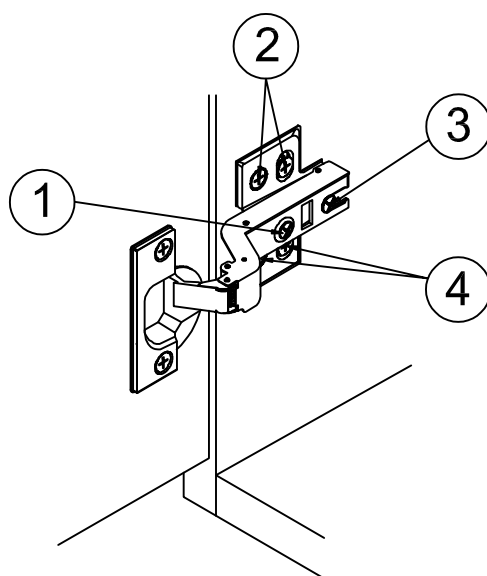


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

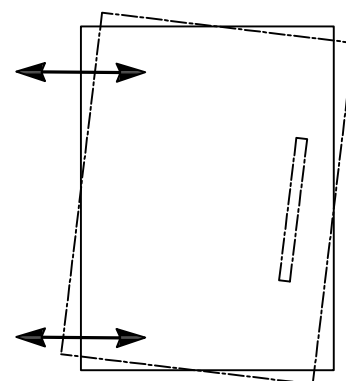

② ④ Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

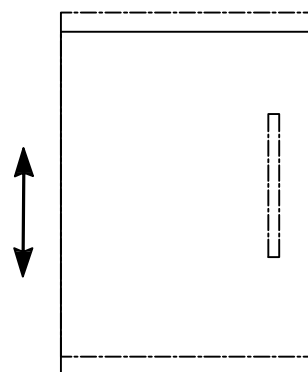

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

