














Assembly Instruction

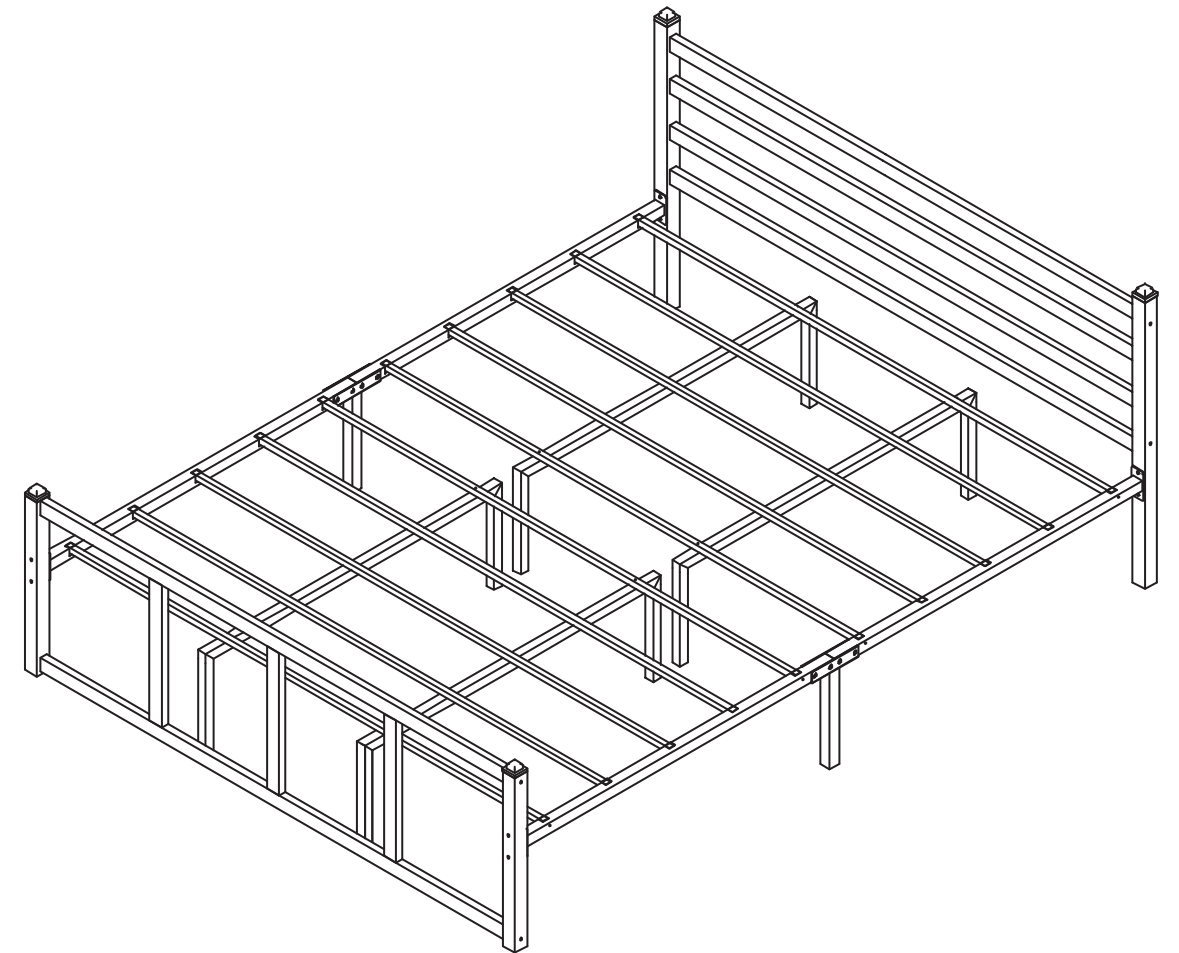


Assembly Instruction

PARTS LIST


B	M8×27  ×8	H	Plastic Cap  ×20
C	M8×30  ×8	I	M6×35  ×8
D	M6×27  ×8	K	 ×4
E	M6×25  ×12		 ×2
F	M6×45  ×8		

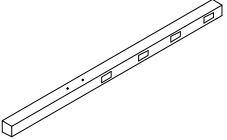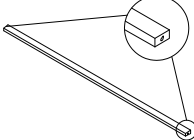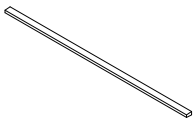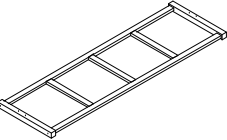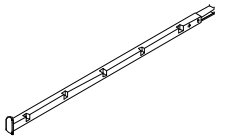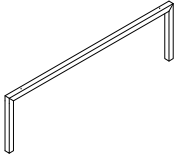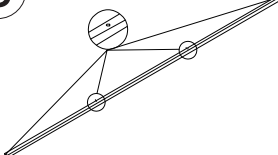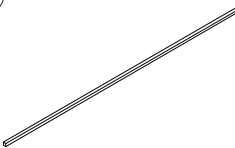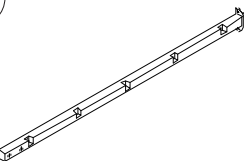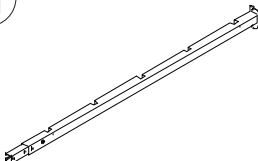
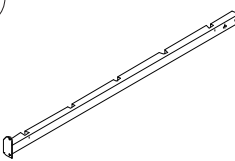
1  ×2	2  ×2	3  ×2
4  ×1	5  ×1	6  ×2
7  ×4	8  ×4	9  ×6
10  ×1	11  ×1	12  ×1

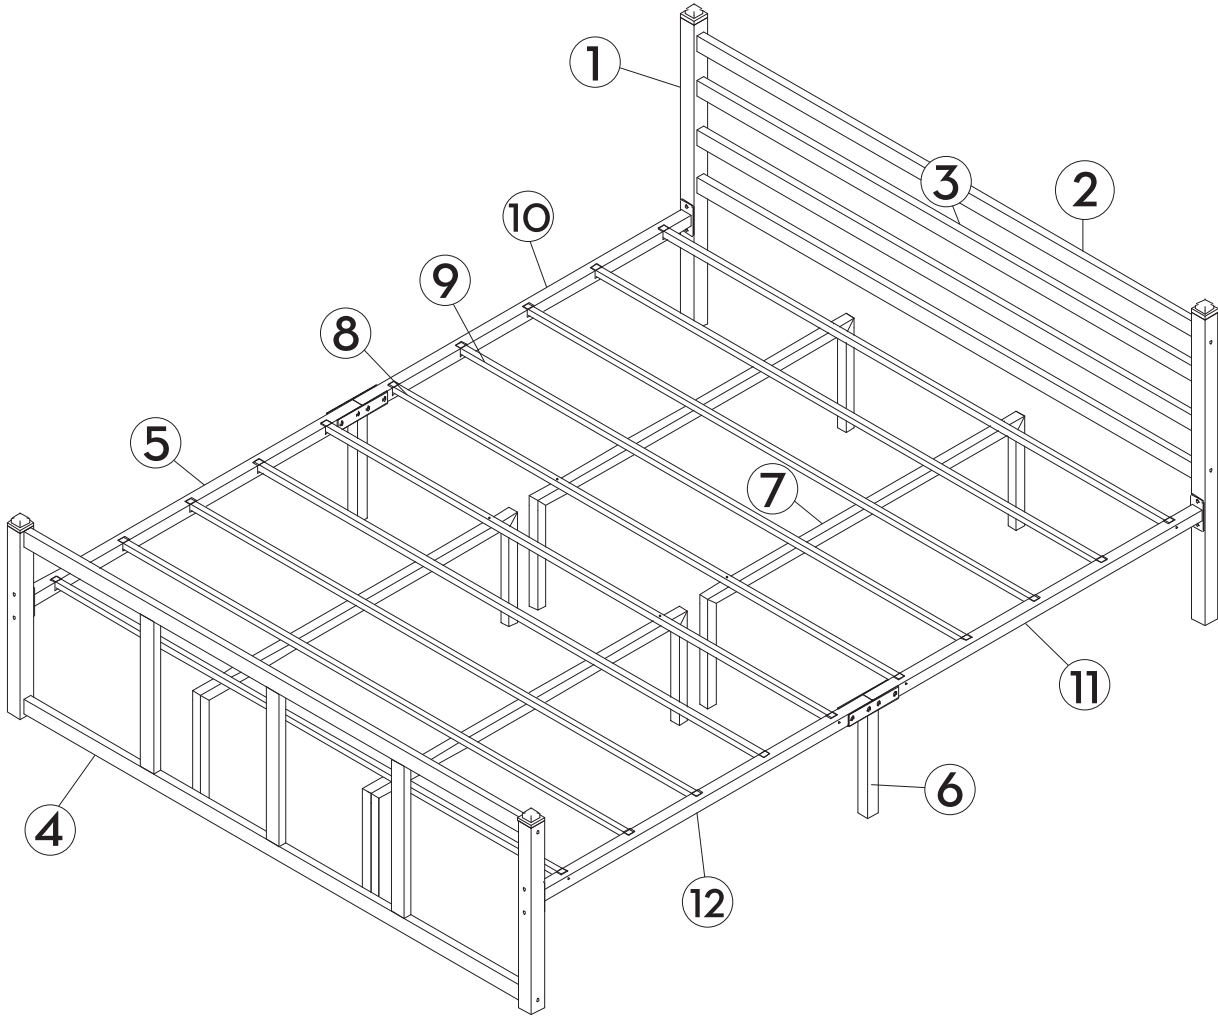


Assembly Instruction

Step 1.

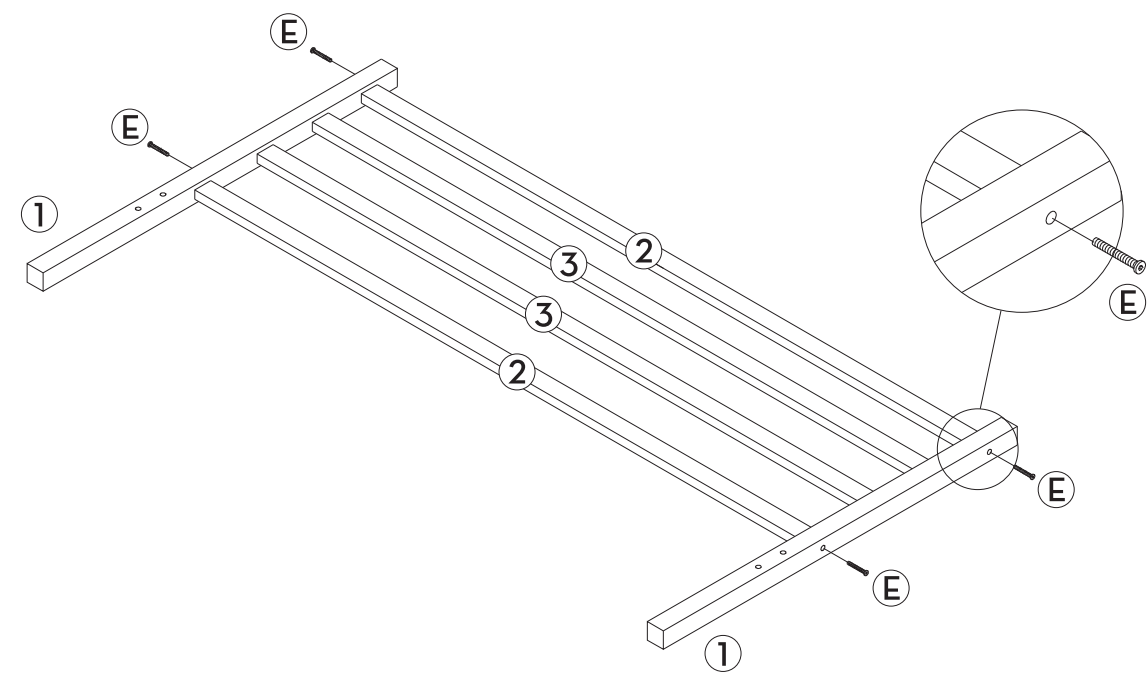


E	M6×25 	×4
1		×2
2		×2
3		×2

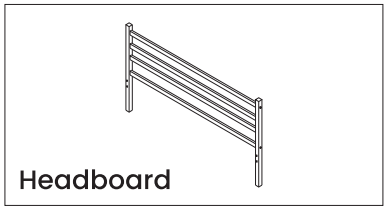


Step 2.

Attach headboard and #10/#11 with B and C, do not completely tighten B and C.
Pay attention and make sure the notches are all aligned inward.

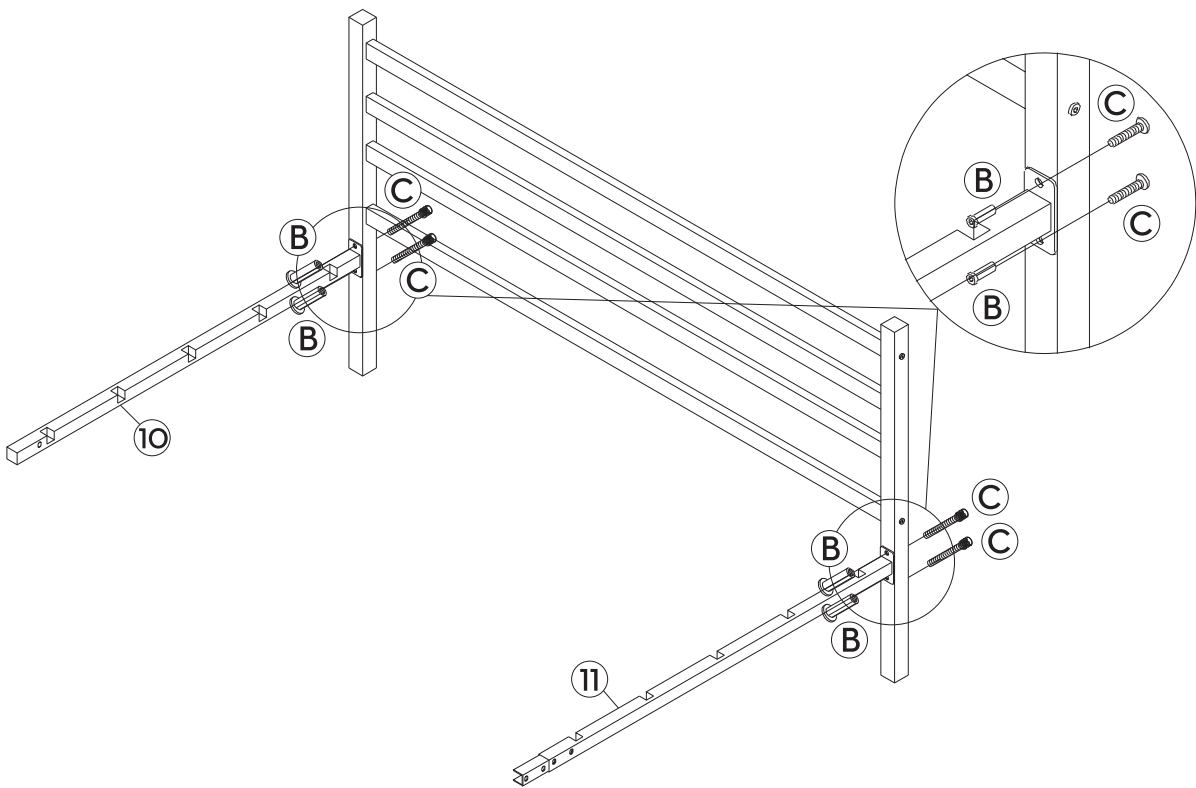


B	M8×27 	×4
C	M8×30 	×4
10		×1
11		×1



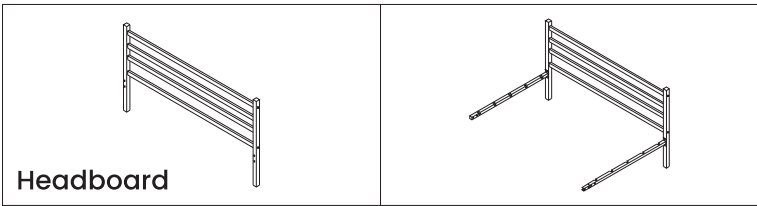



Assembly Instruction

Step 3 .

Attach footboard and #5/#12 with B and C, do not completely tighten B and C.
Pay attention and make sure the notches are all aligned inward.


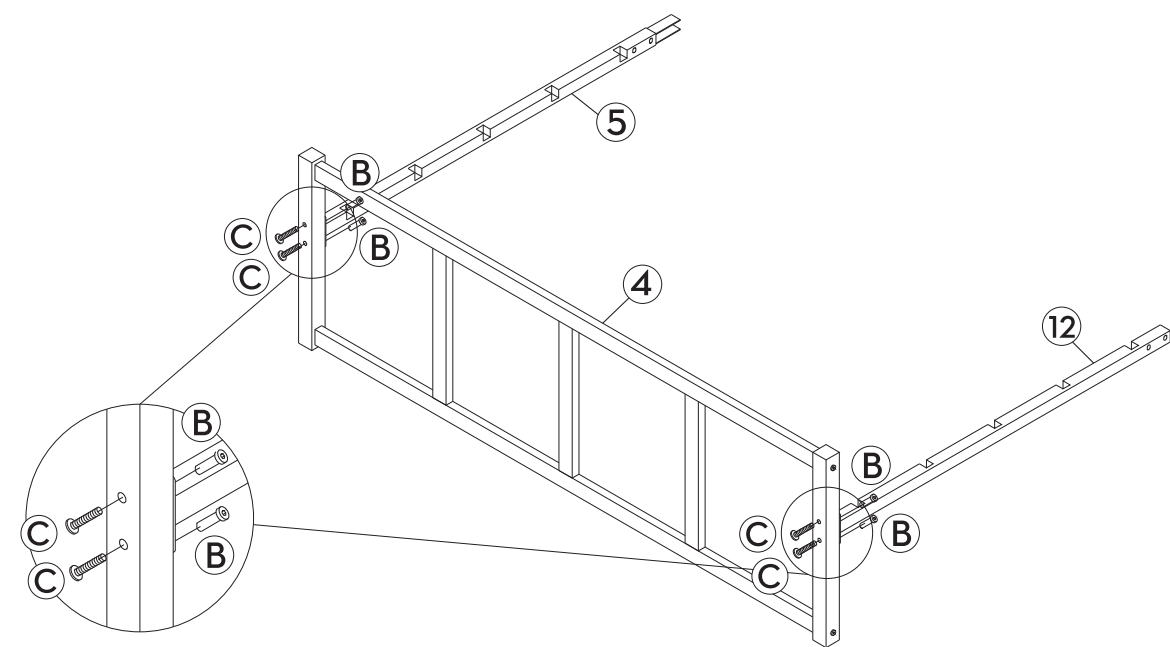


B	M8×27		×4
C	M8×30		×4
4			×1
5			×1
12			×1

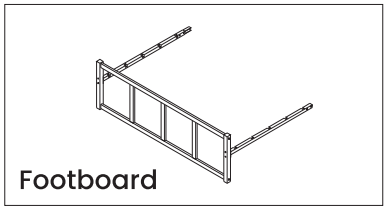


Footboard


Step 4 .

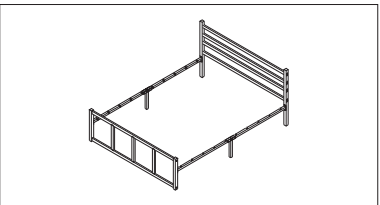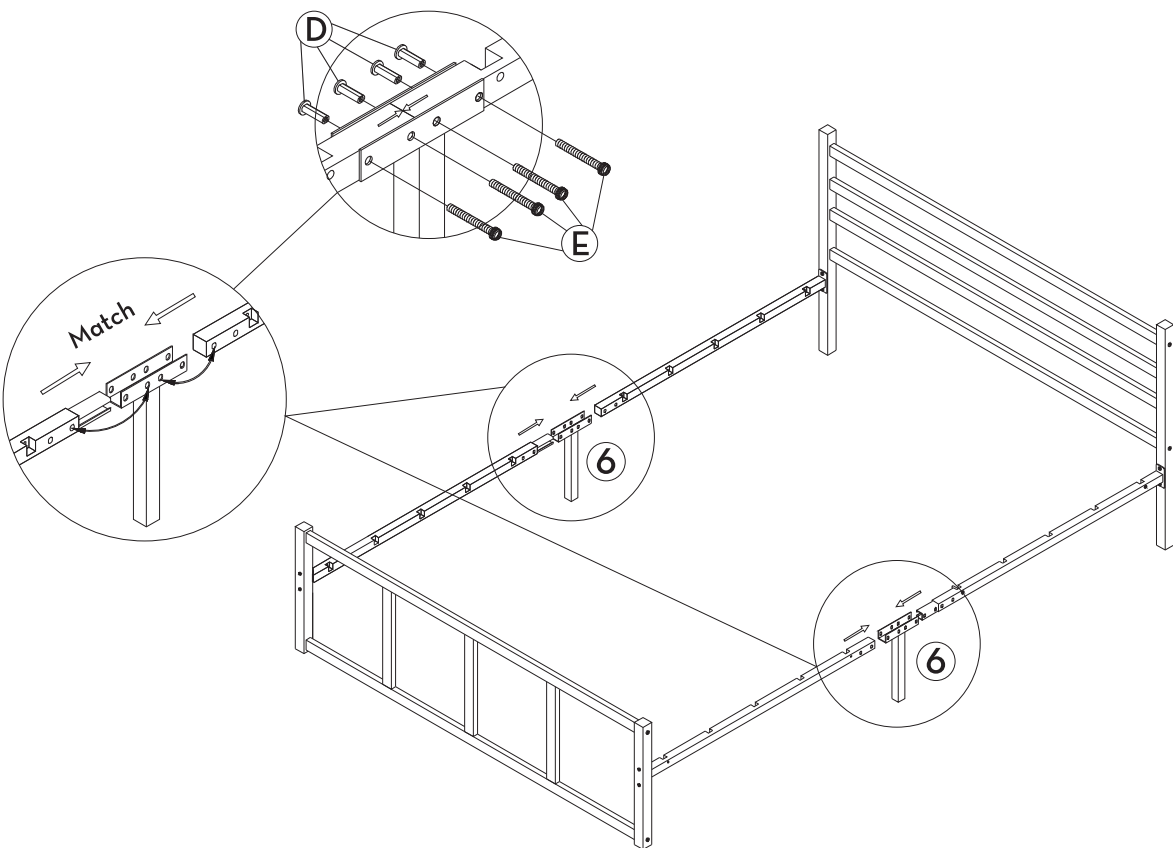

D	M6×27		×8
E	M6×25		×8
6			×2

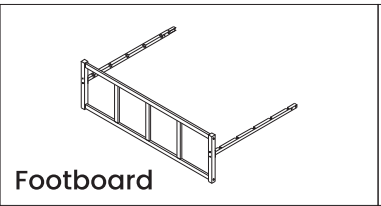

Footboard


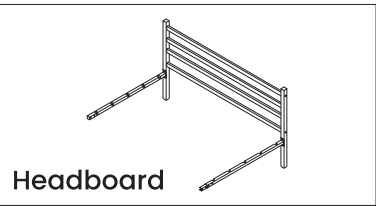



Headboard


Assembly Instruction

Step 5 .


Put plastic caps on #8 and then press the slats into frame, make sure plastic cap attaches the bottom of the rail tightly.

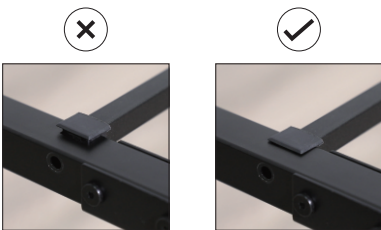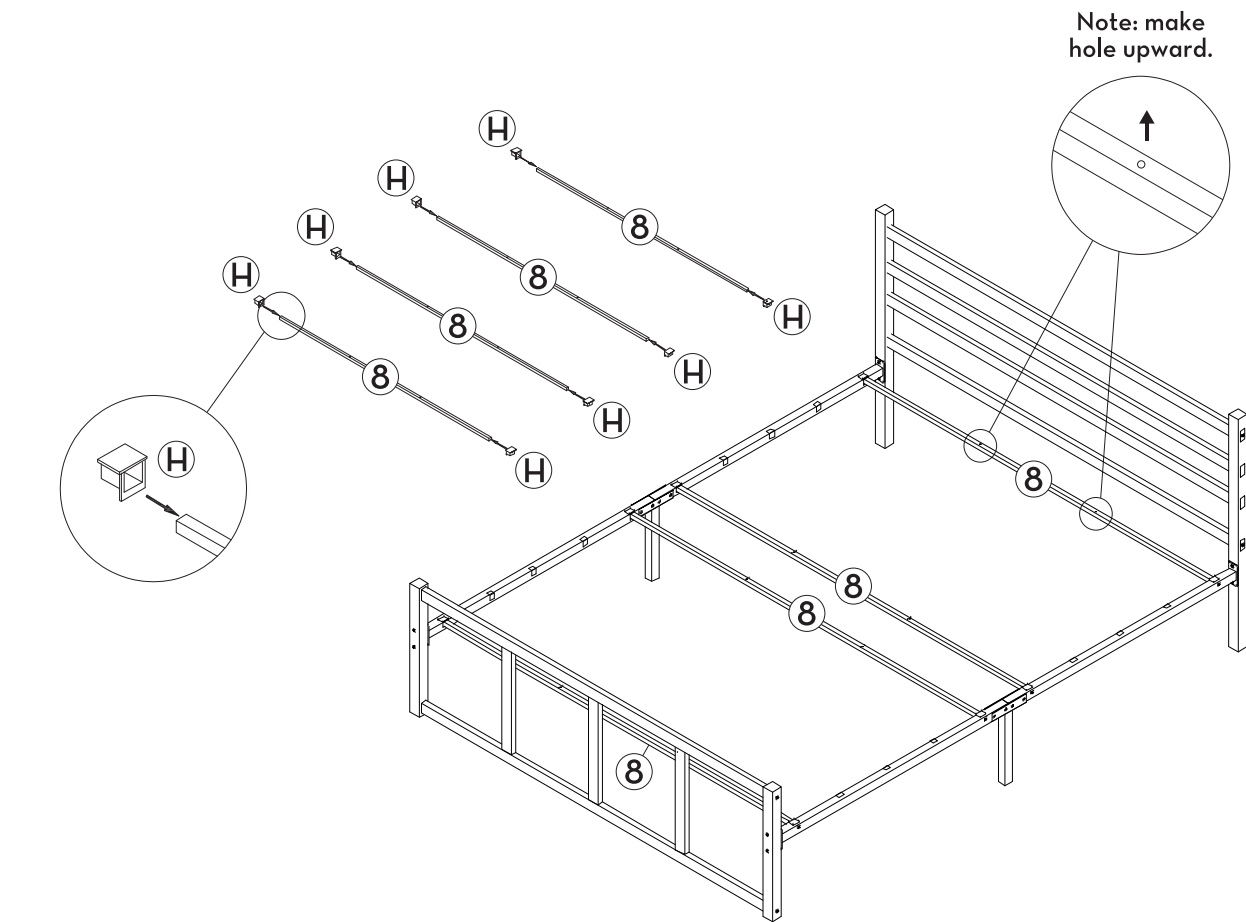


H	Plastic Cap  x8
8	 x4

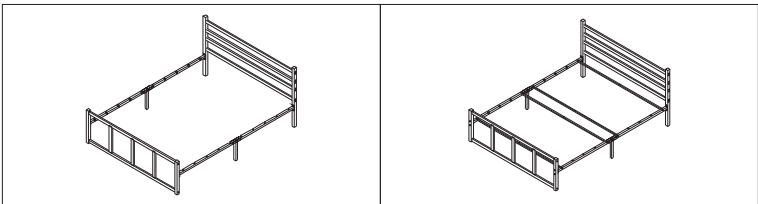

Step 6 .

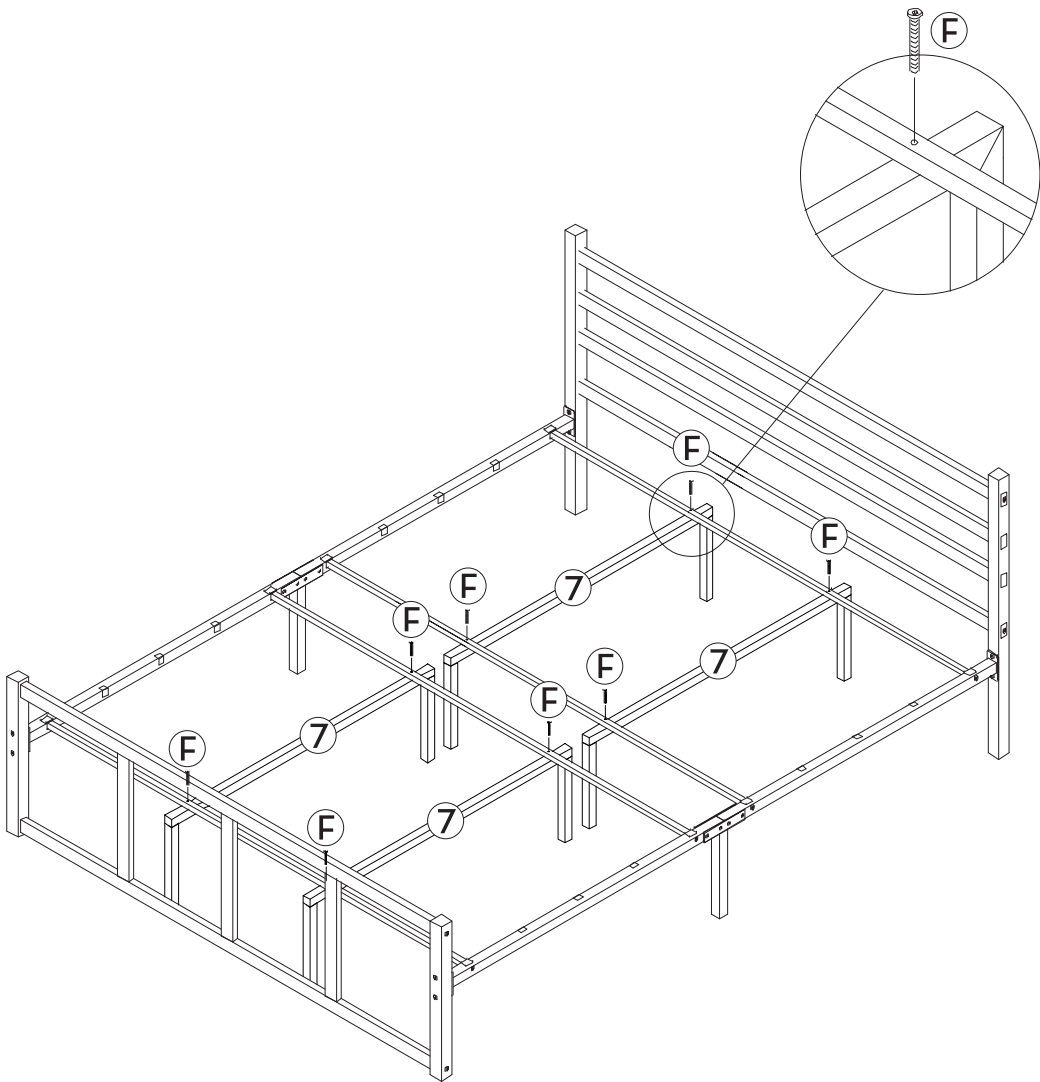


F	M6x45  x8
7	 x4

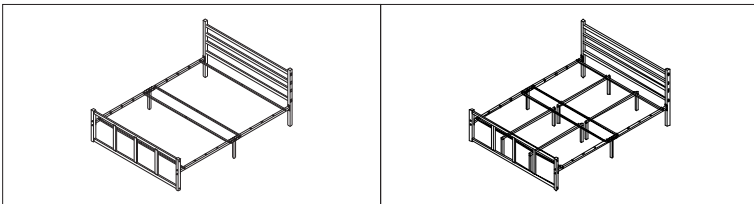


Assembly Instruction

Step 7 .

Put plastic caps on #9 and then press the slats into frame, make sure plastic cap attaches the bottom of the rail tightly.

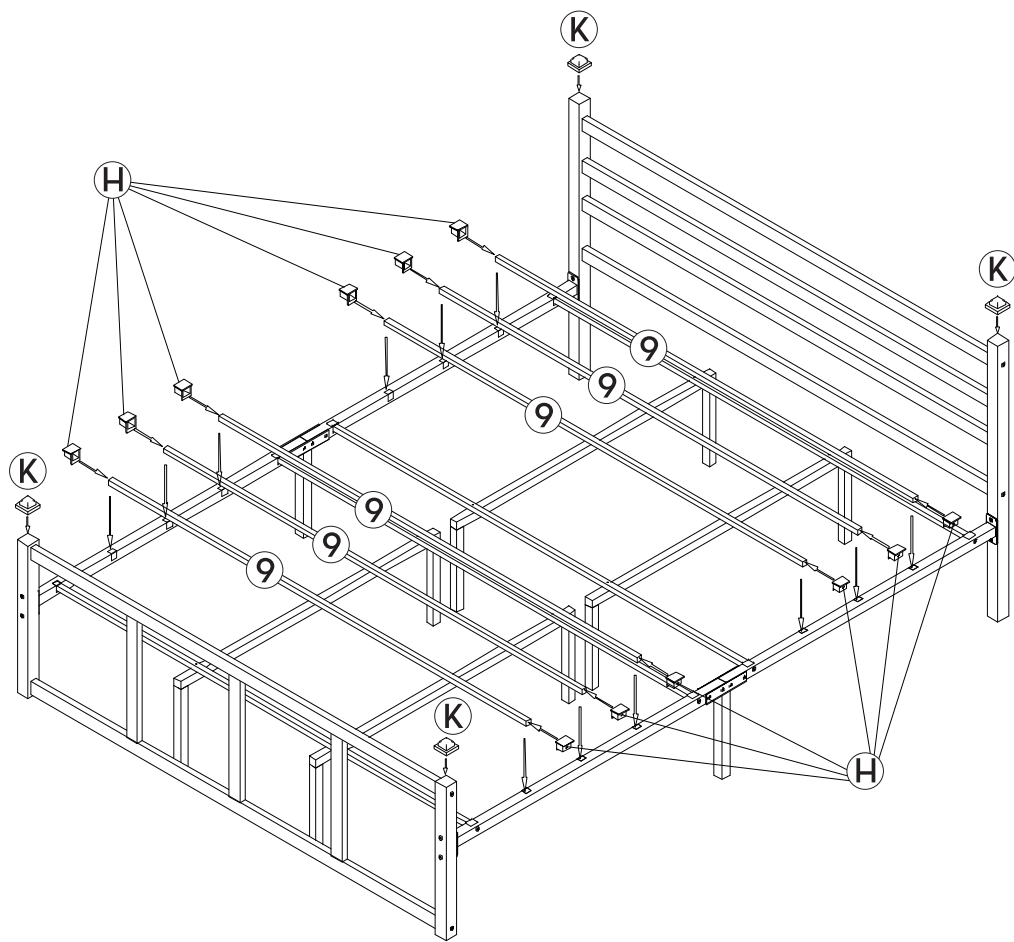


H	Plastic Cap  x12
K	 x4
9	 x6

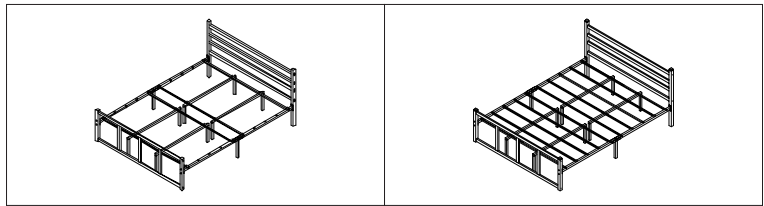

Step 8 .

Tighten the screw of 4 pcs #8 slats and then tighten all the rest screws.

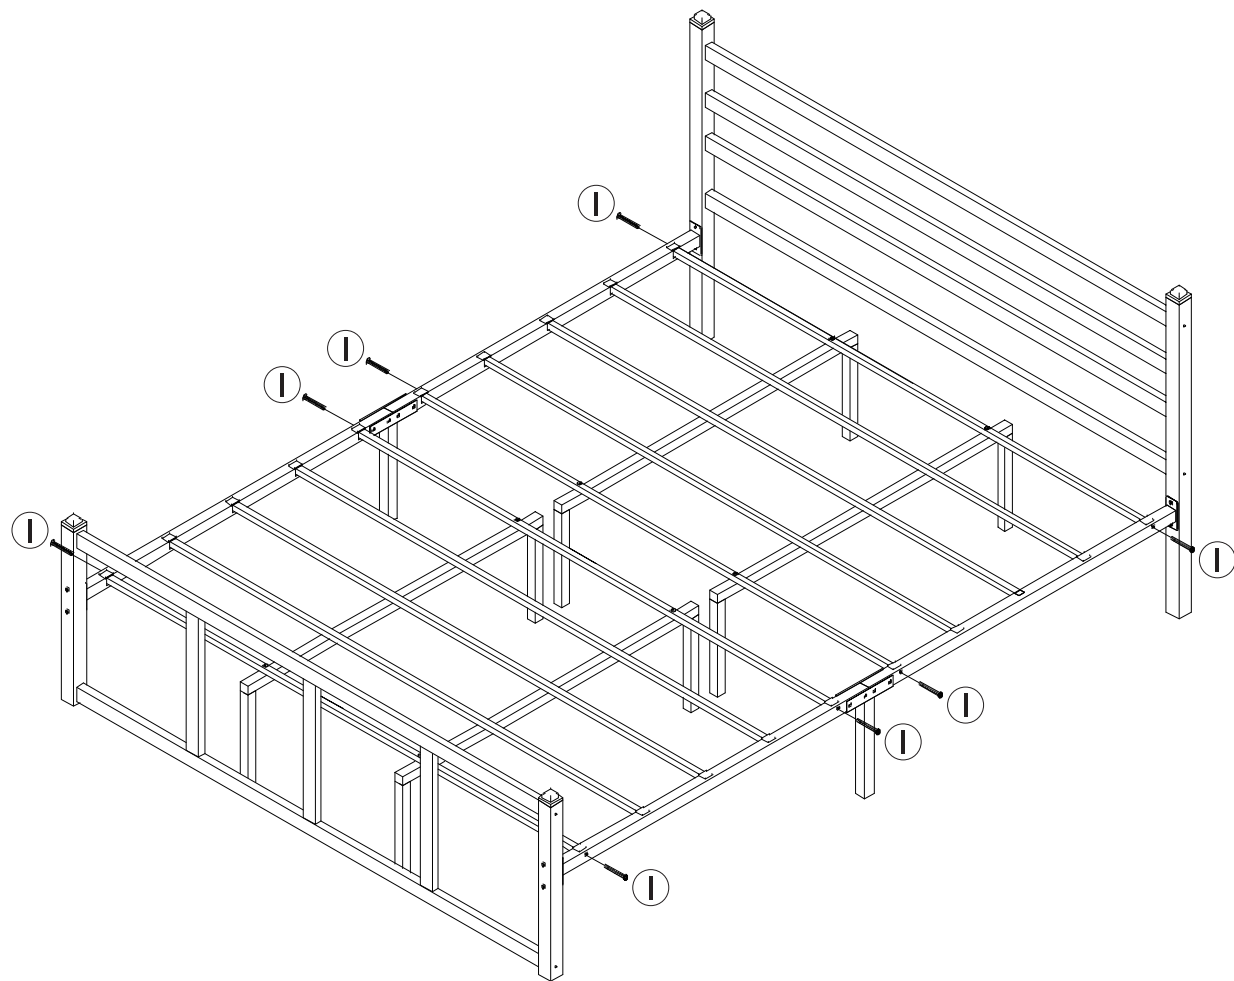

I	M6×35  x8
---	--