

Fixed Mount Instructions


Mounting Hardware included / Per Pair of Shutters

4 - PolyCarbonite “L” Brackets The Same Width As Shutters

4 - PolyCarbonite “L” Brackets 2” tall if shutters are over 55” in height.

8 - Stainless Steel 1” Screws (12 if shutters exceeds 55”)

8 - Stainless Steel 1.5” Screws (12 is shutter exceeds 55”)

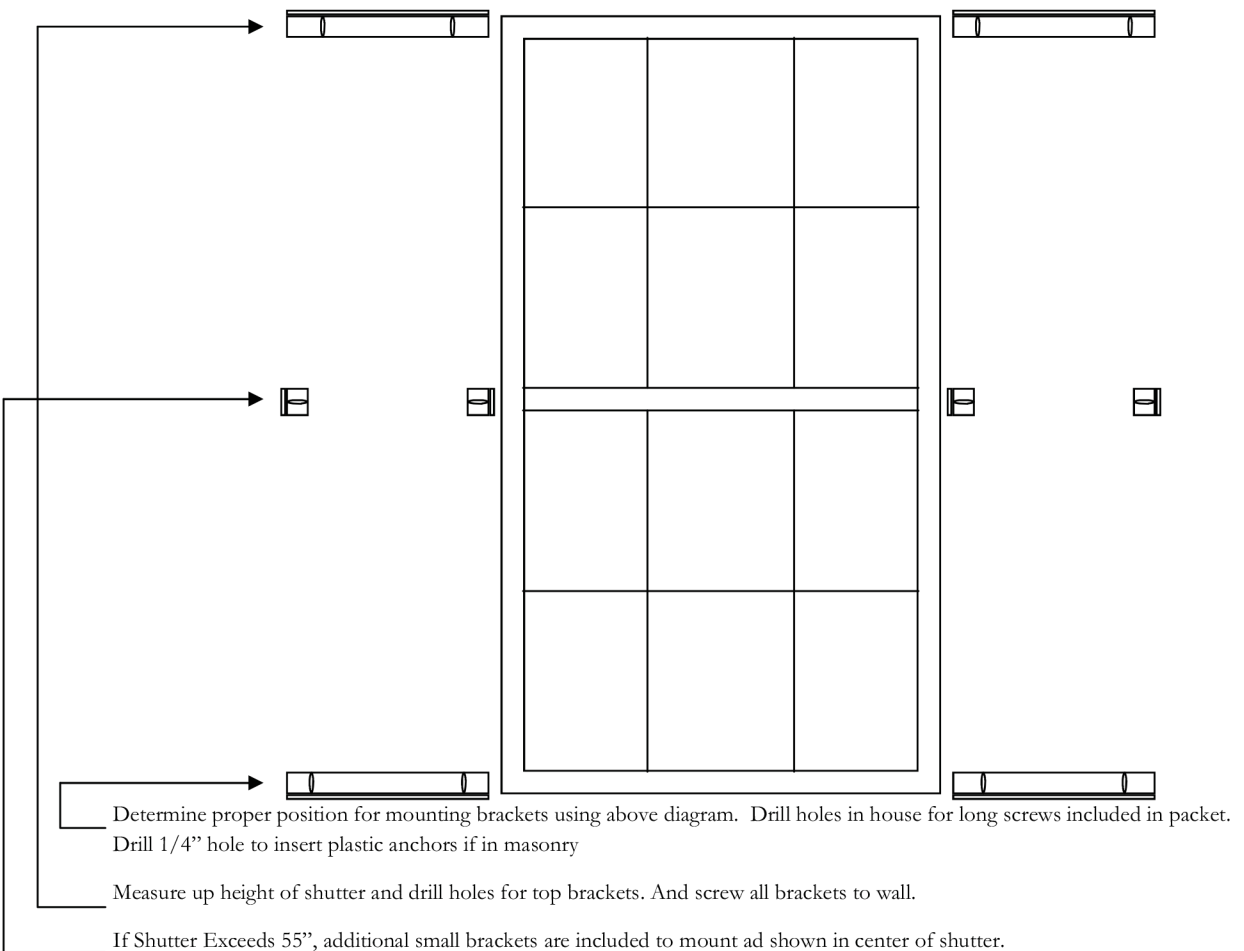

If Shutter is an Arch Top, an additional small bracket will be included to secure the arch. Install it mid point of arch.

Sit shutter on lip of bracket and push back as far as possible. Mark shutter to pre-drill holes into shutter from top and bottom of mounting brackets. Use a 1/8” bit for this step. You can also leave shutter in proper position and drill into shutter while it is sitting on bracket if you have someone to help you hold shutter panel.. Do not insert screws without pre-drilling. It will split the material.

Insert Short screws thru bracket and into shutter panel. Tighten screws snugly. Do not over-tighten.