


ASSEMBLY INSTRUCTIONS


FULL HOUSE LOFT BED

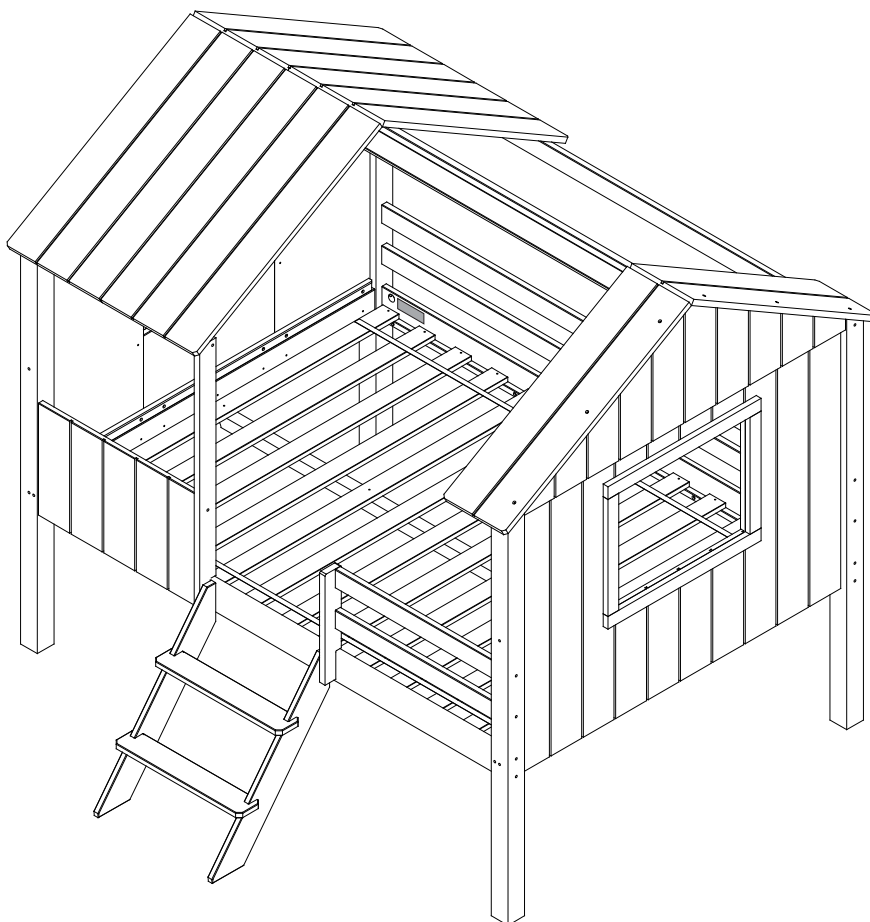



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

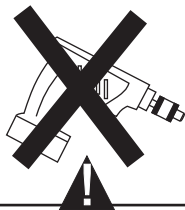


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

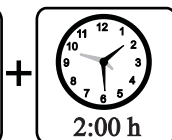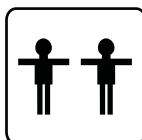

Tools Required



(Not included)




(Not included)

IMPORTANT:





PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Part List - FULL HOUSE LOFT BED




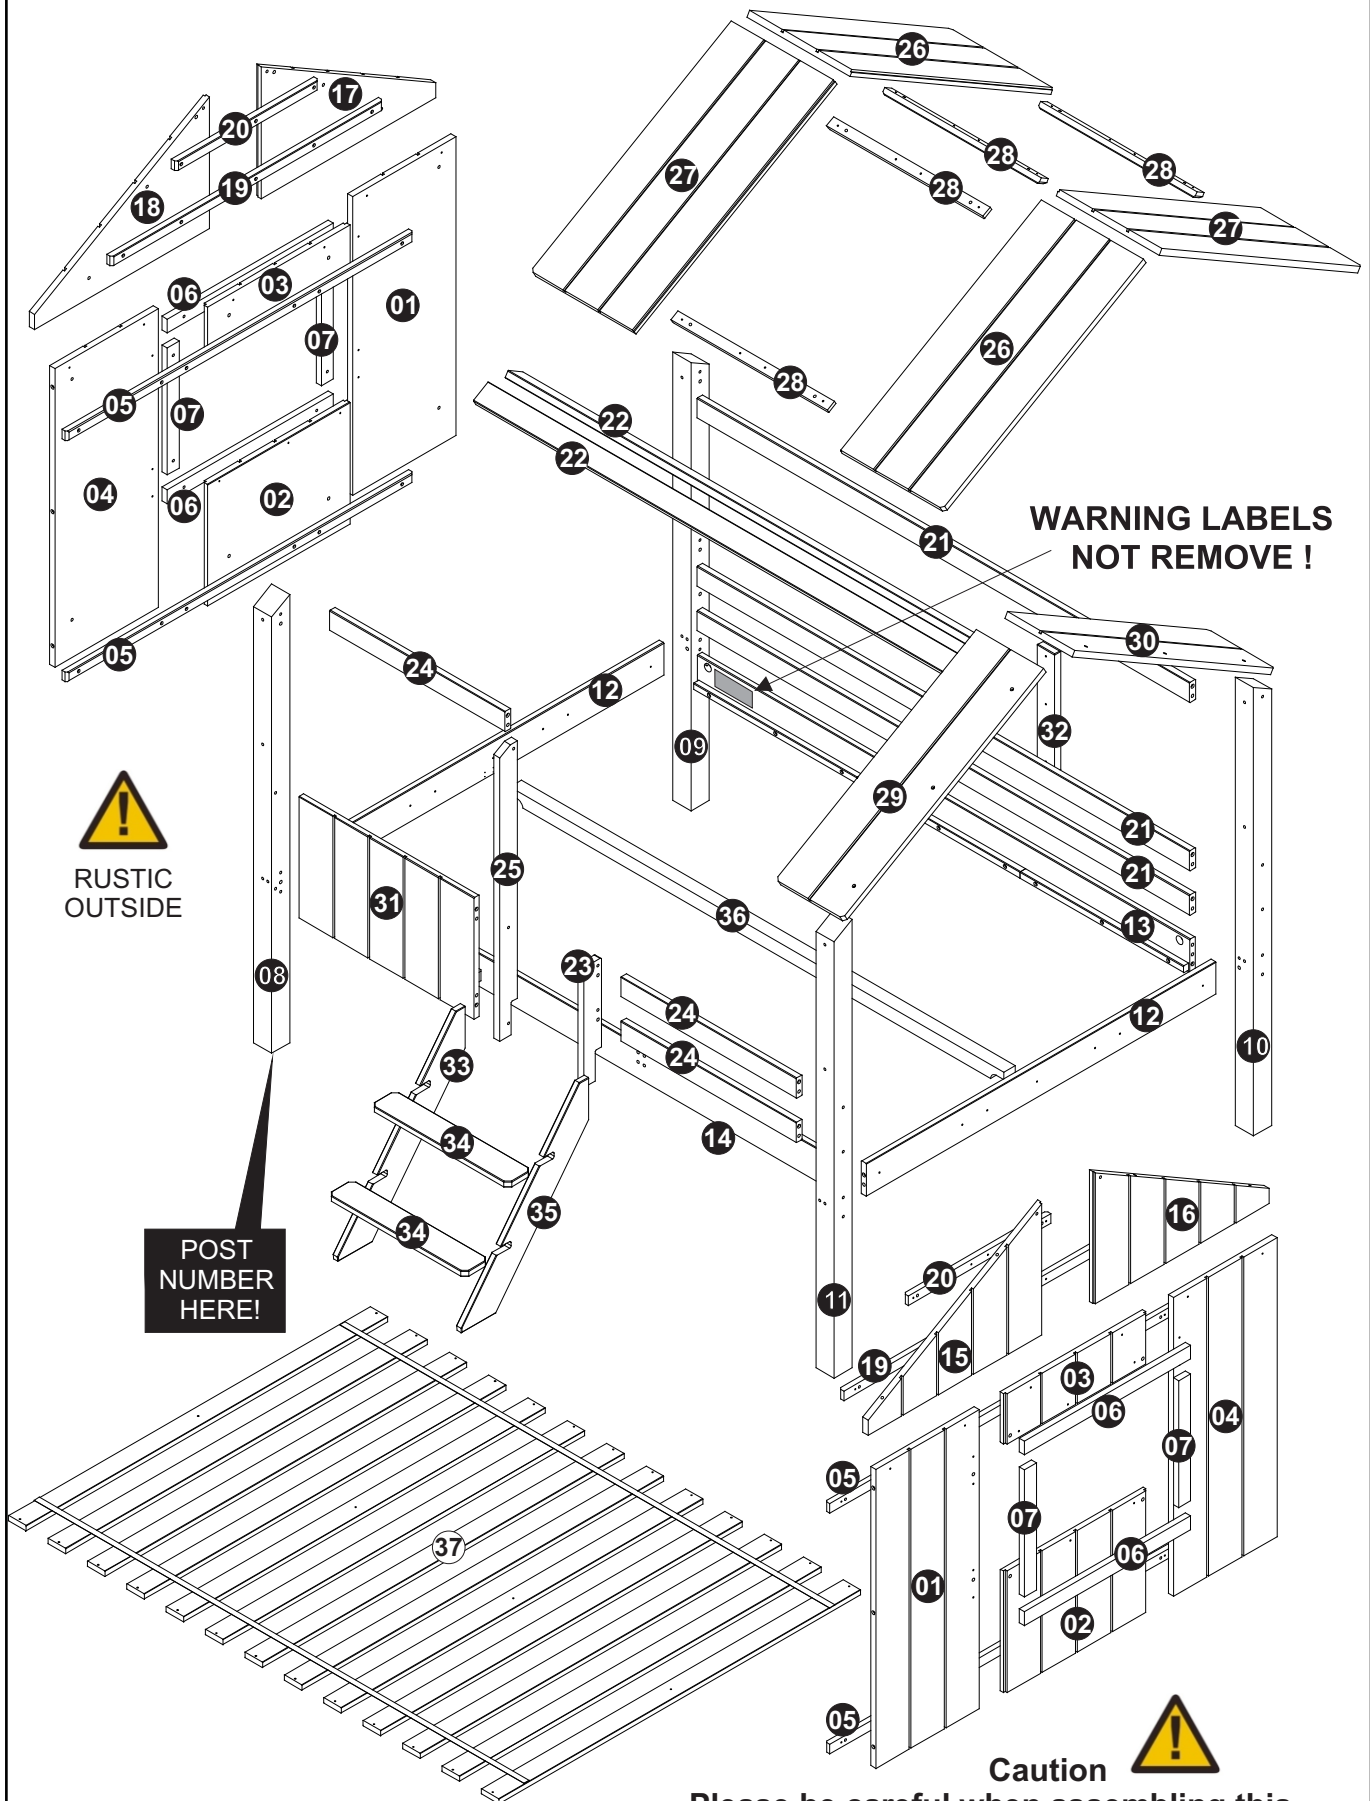


Please be careful when assembling this product due the parts are extremely heavy. Also, please do not allow kids around when assembling this bed to avoid injuries.

Identifying the Hardware-Identify the hardware using the illustrations below.

A	 Ø 10x40	26
B	 Ø 8x25	52
C	 Ø 3,5X16	22
D	 Ø 4X30	64
E	 Ø 1/4X110 Cab 17	04
F	 Ø 7X100 Cab 17	31
G		04
H		02
I	 Ø 7X50 Cab 17	17
J	 Ø 4X35	30
K		02
L	 Ø 4X35	75
M		05

01

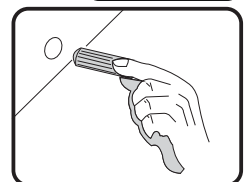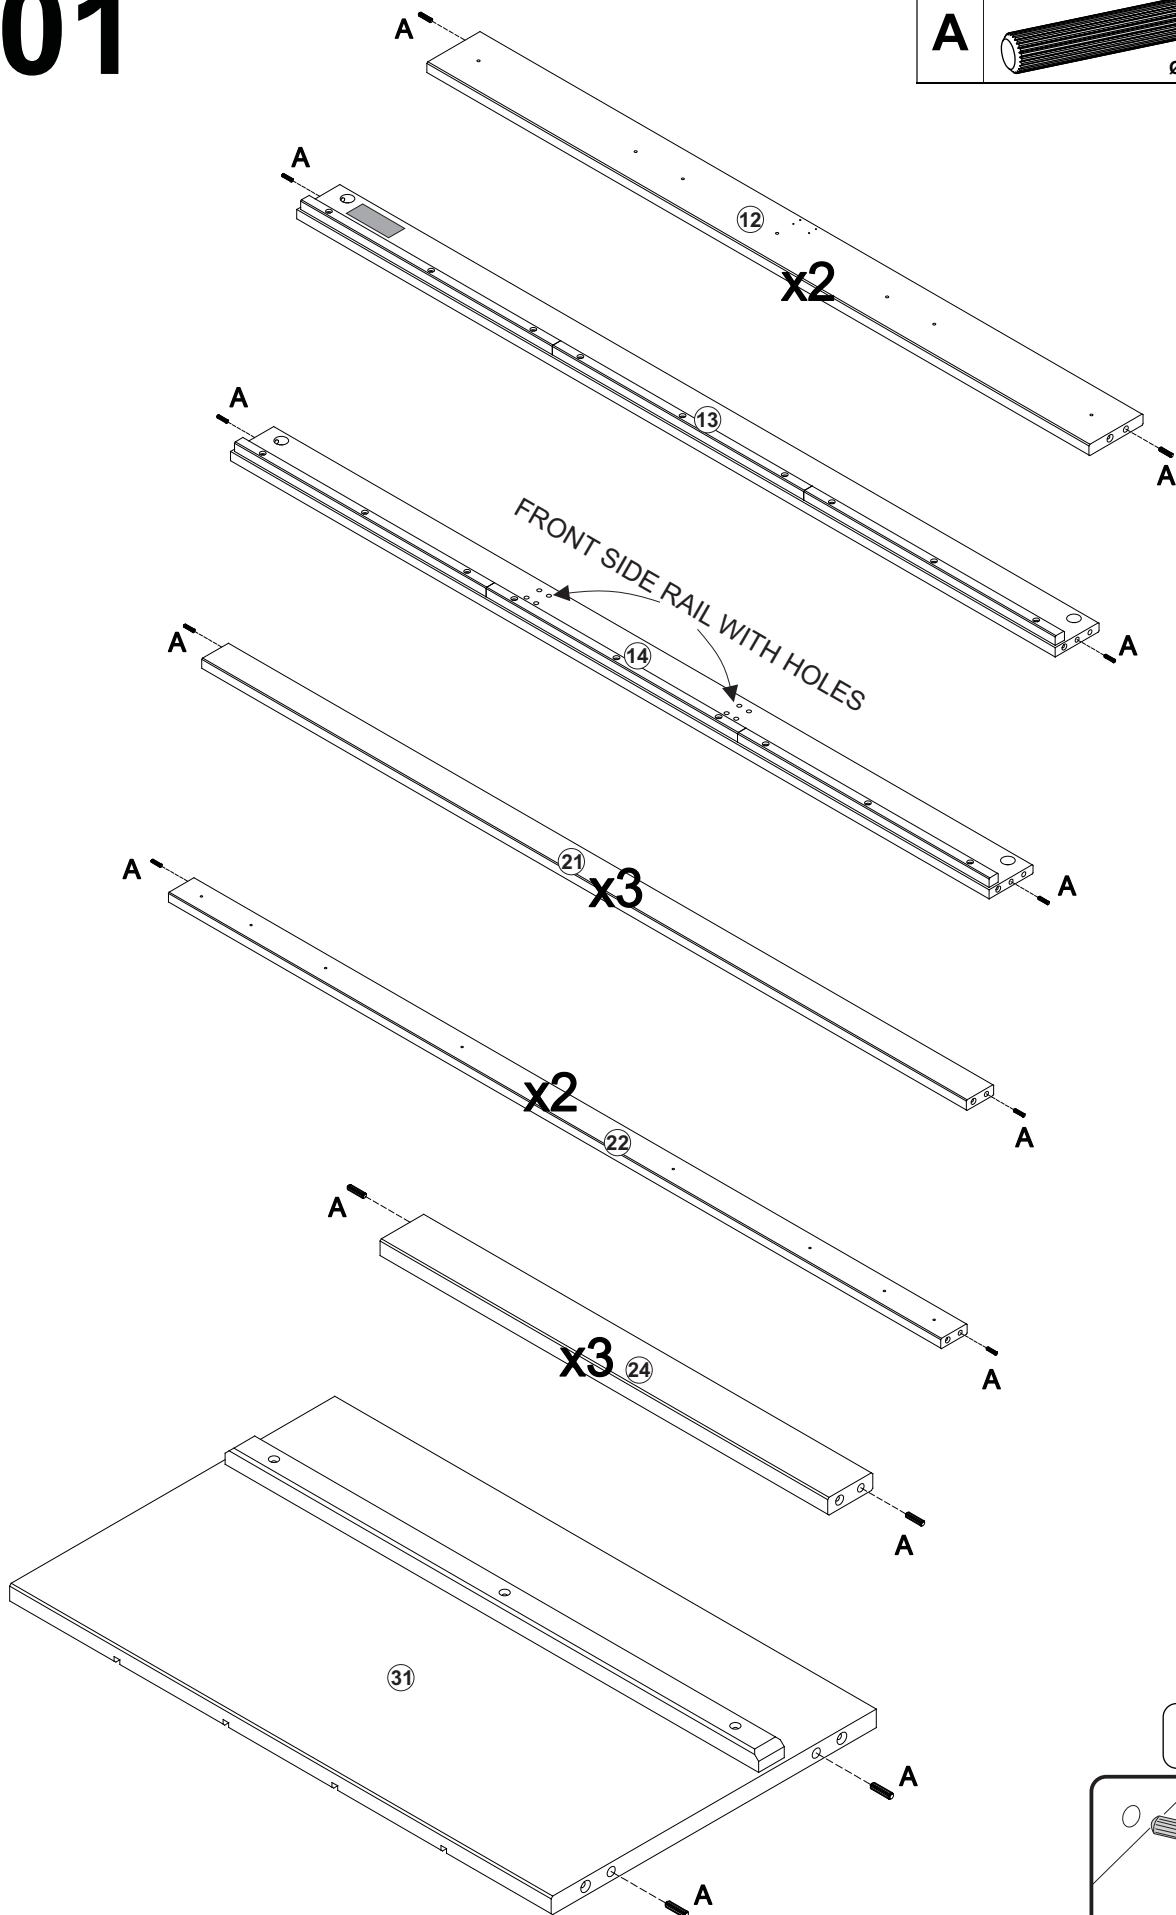


02

B





Ø 8x25

52

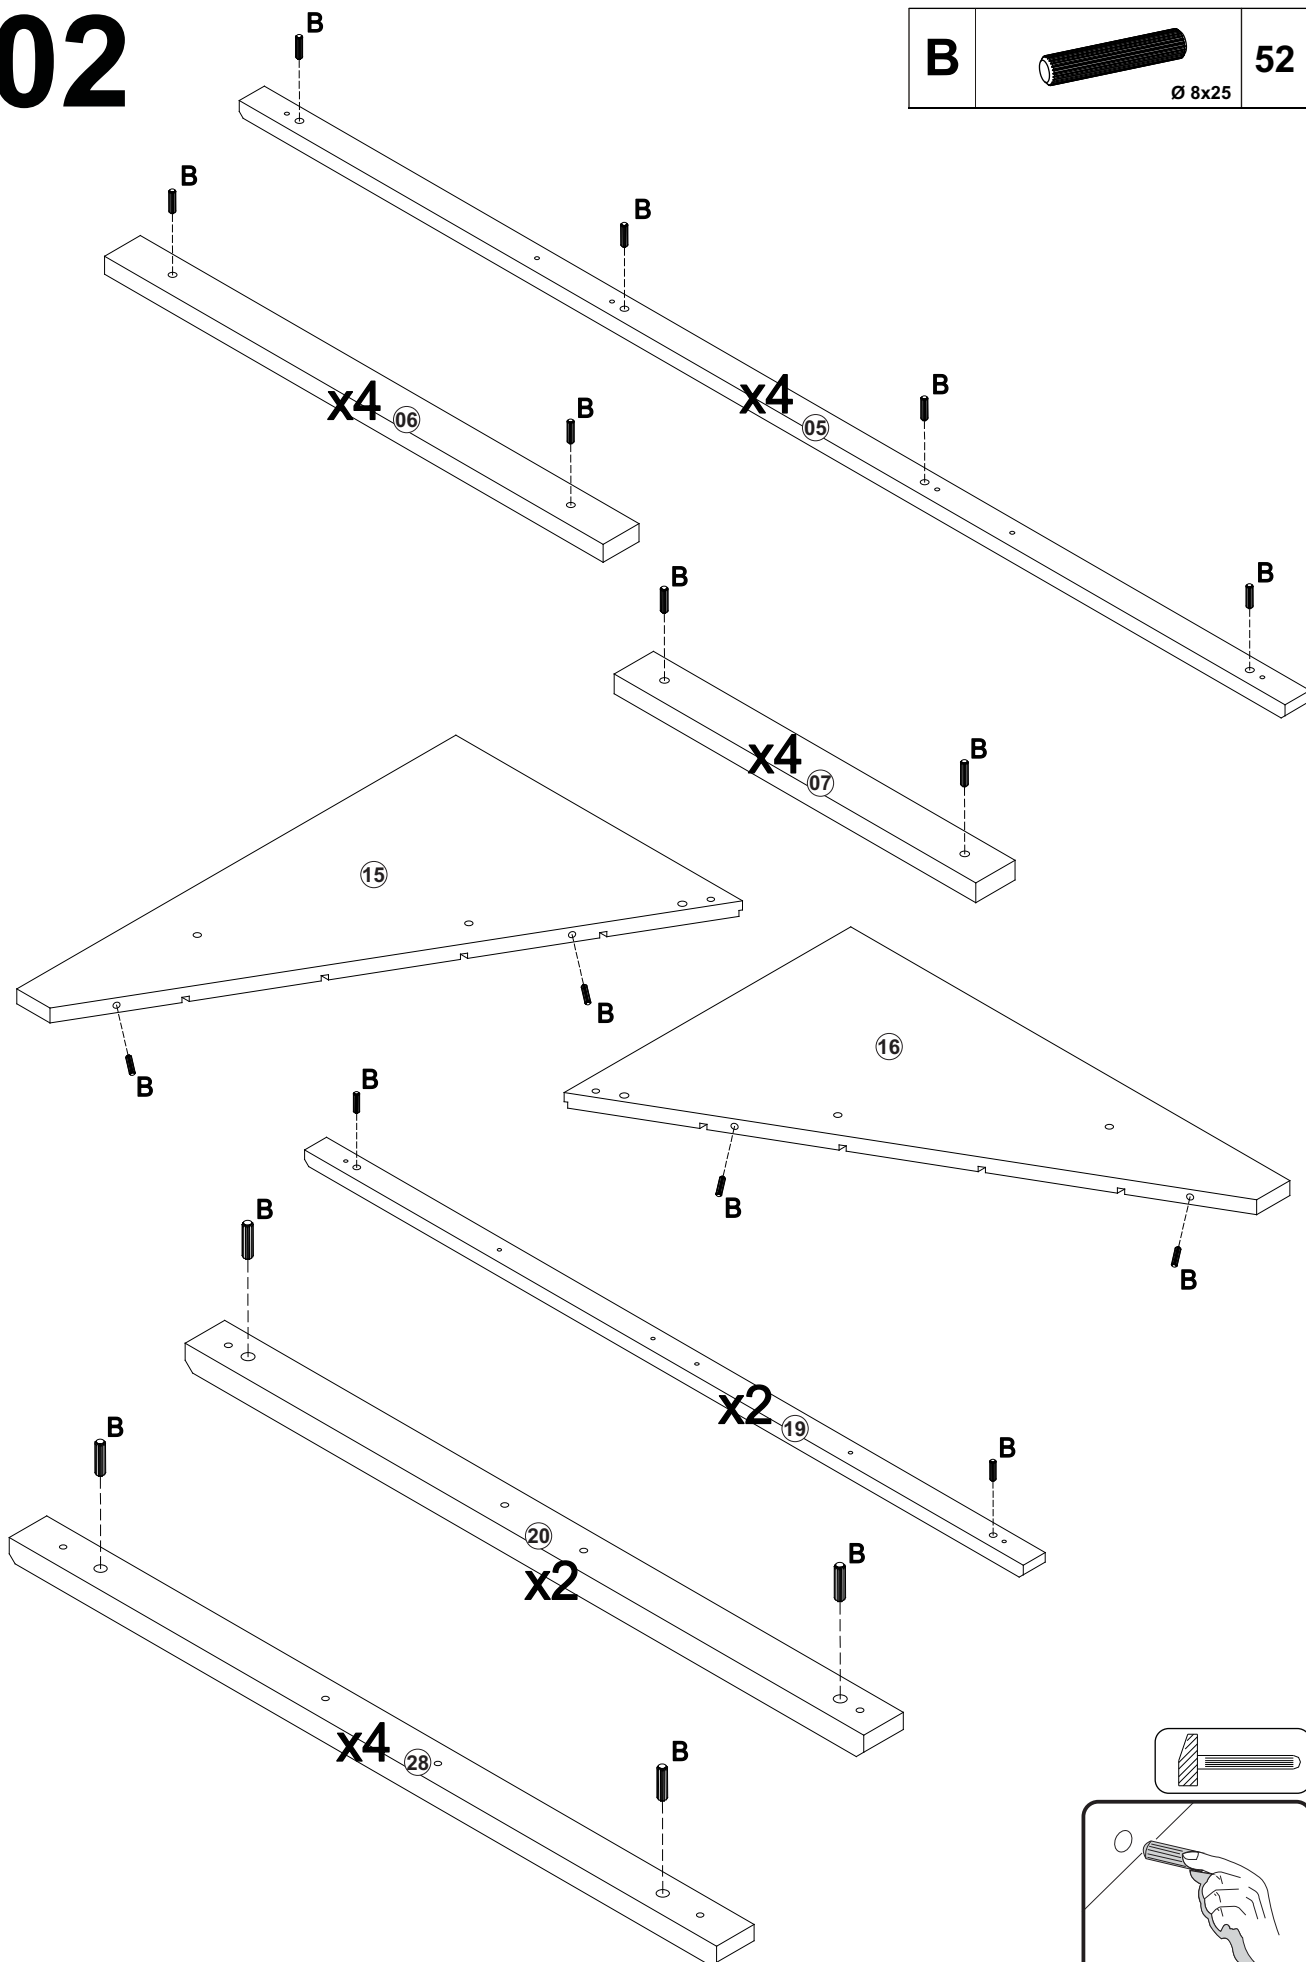


03

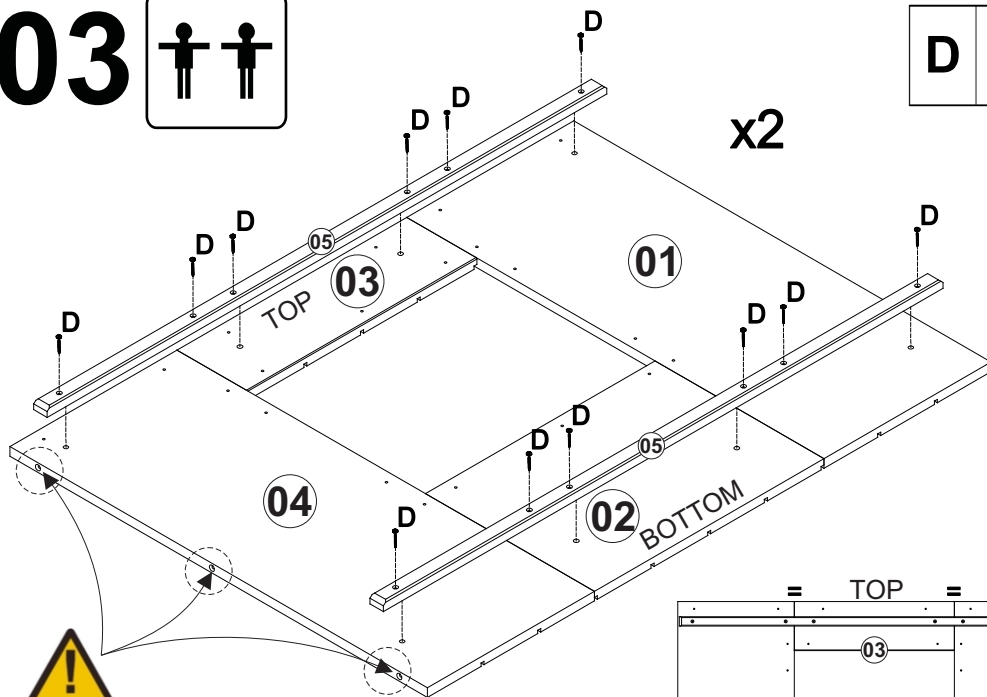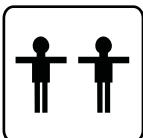


OUTSIDE

PLEASE ASSEMBLY THE
HEADBOARDS ON THE FLOOR

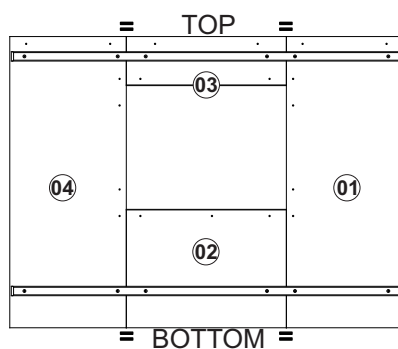

D



Ø 4X30


24




RUSTIC
OUTSIDE




SCREW

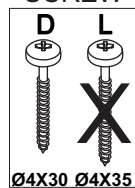

Ø4X30 Ø4X35




04

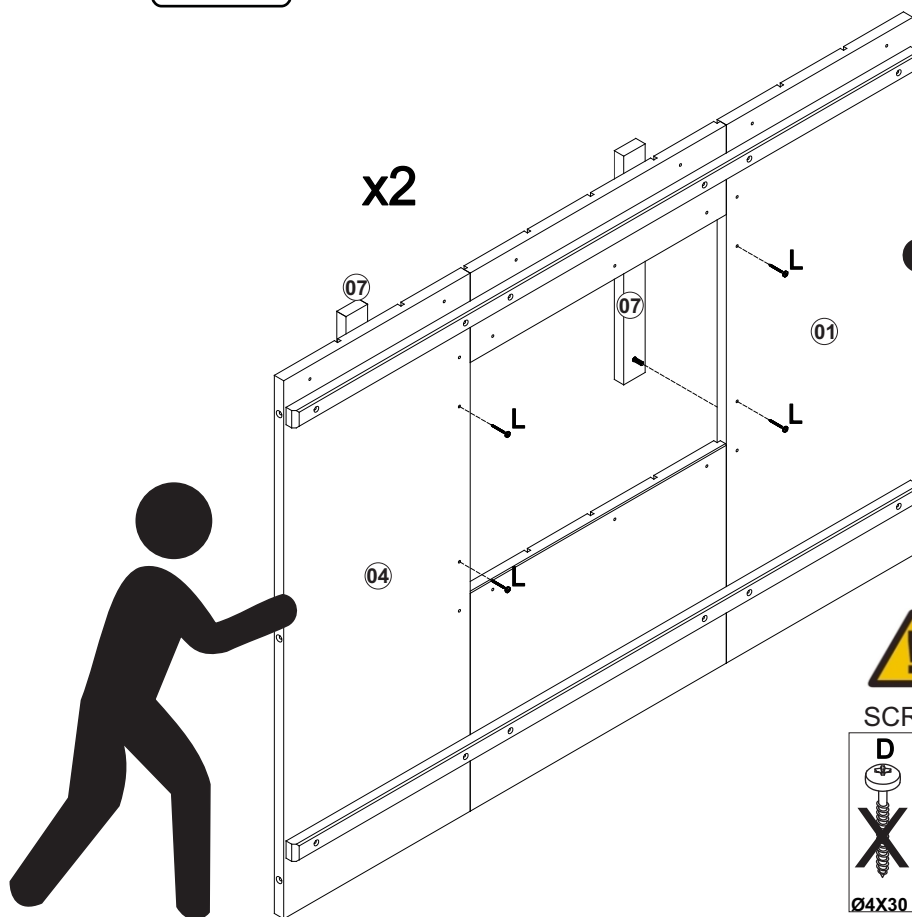

RUSTIC
OUTSIDE

L




Ø 4X35


08



SCREW

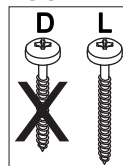





Ø4X30 Ø4X35



05



L	 Ø 4X35	20
----------	---	-----------

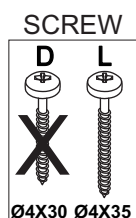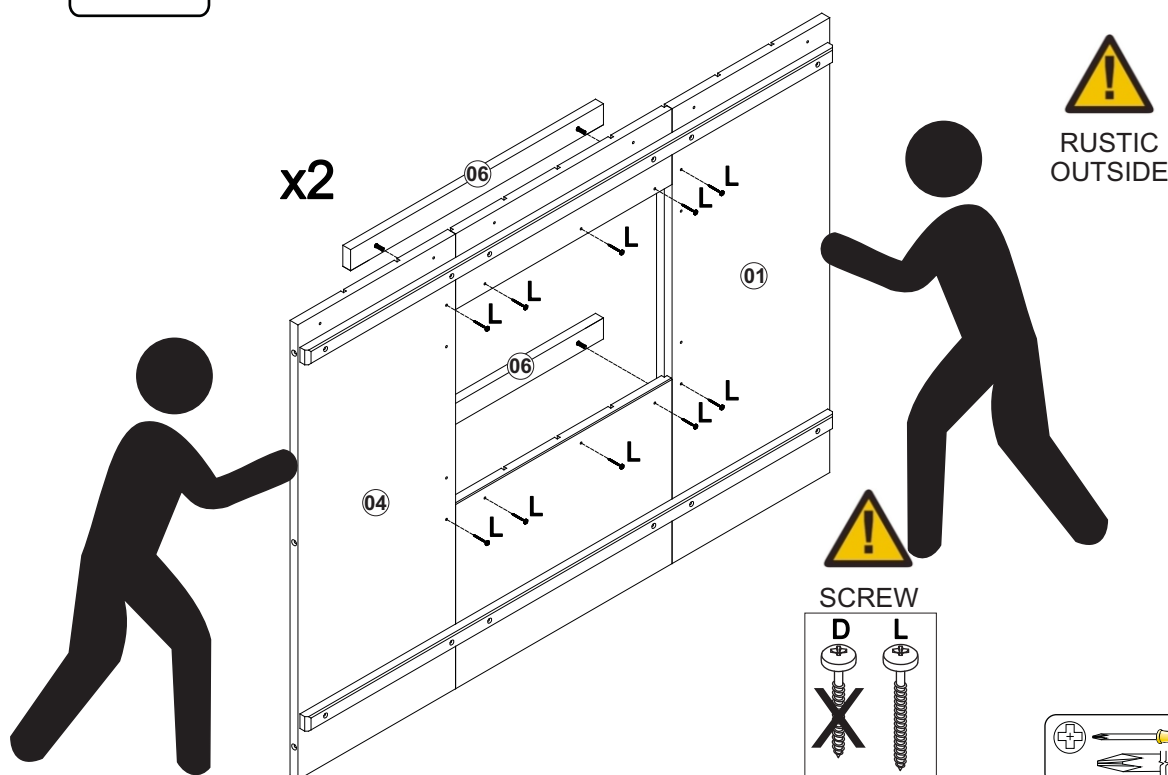

06



LEFT HEADBOARD




PLEASE ASSEMBLY THE
HEADBOARDS ON THE FLOOR





RUSTIC
OUTSIDE



PRE-HOLES INSIDE

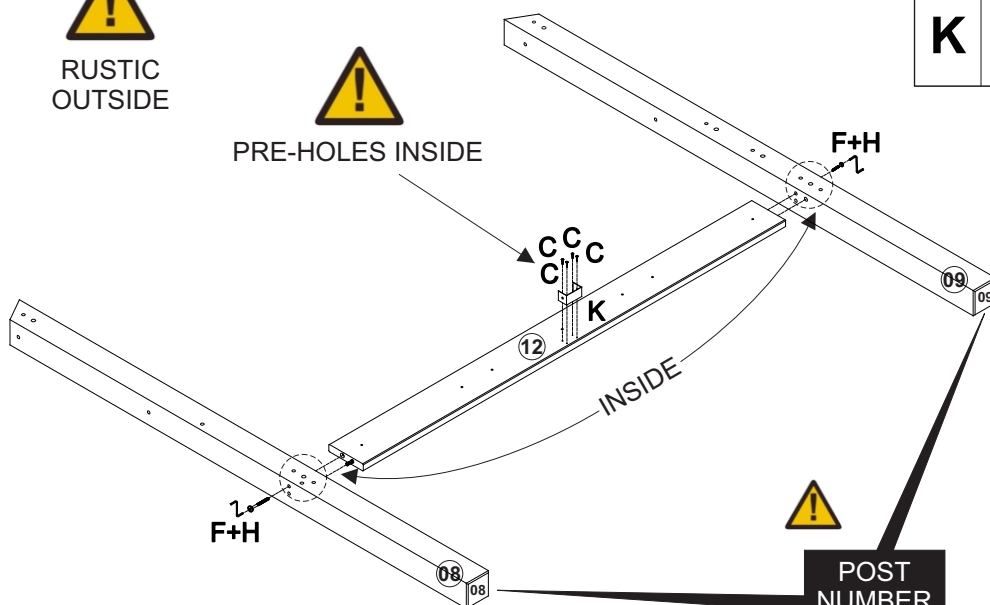

C	 Ø 3,5X16	04
F	 Ø 7X100 Cab 17	02
H		01
K		01




07



LEFT HEADBOARD



PLEASE ASSEMBLY THE HEADBOARDS ON THE FLOOR


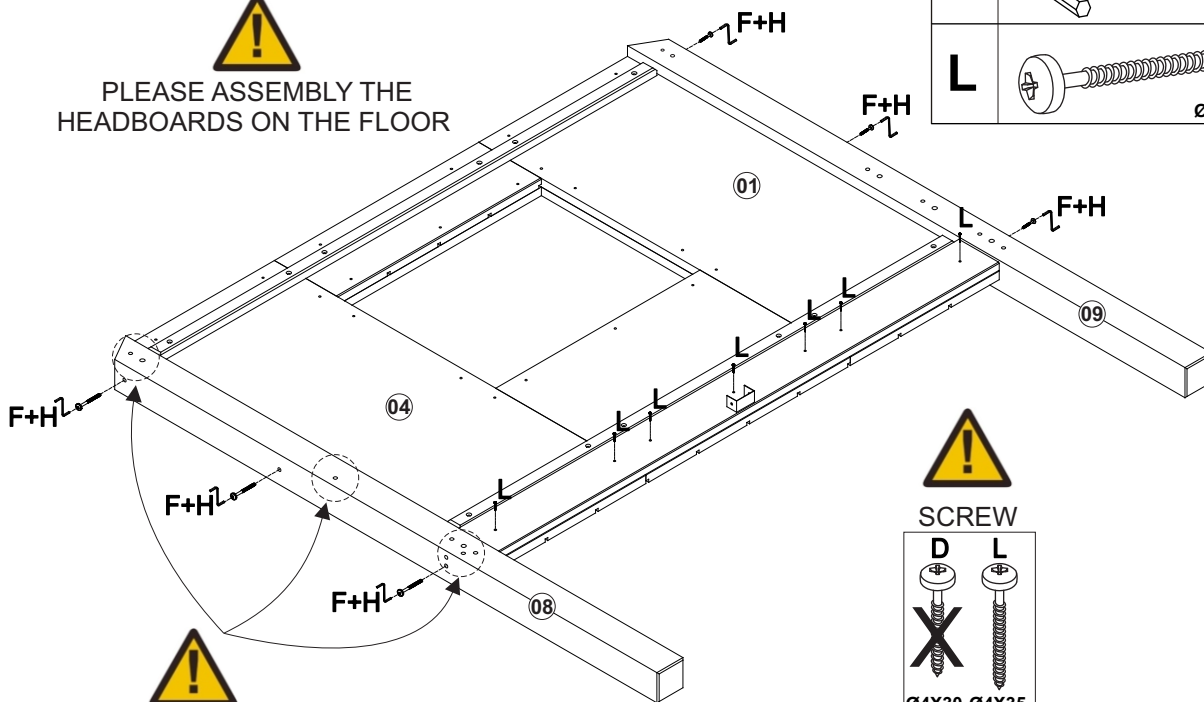


THE LEG WITH 7 HOLES IS THE LEFT SIDE FRONT.


F		06
H		01
L		07



SCREW

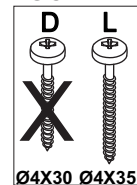

08

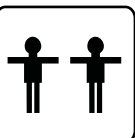

RIGTH HEADBOARD




PLEASE ASSEMBLY THE HEADBOARDS ON THE FLOOR



RUSTIC OUTSIDE




PRE-HOLES INSIDE

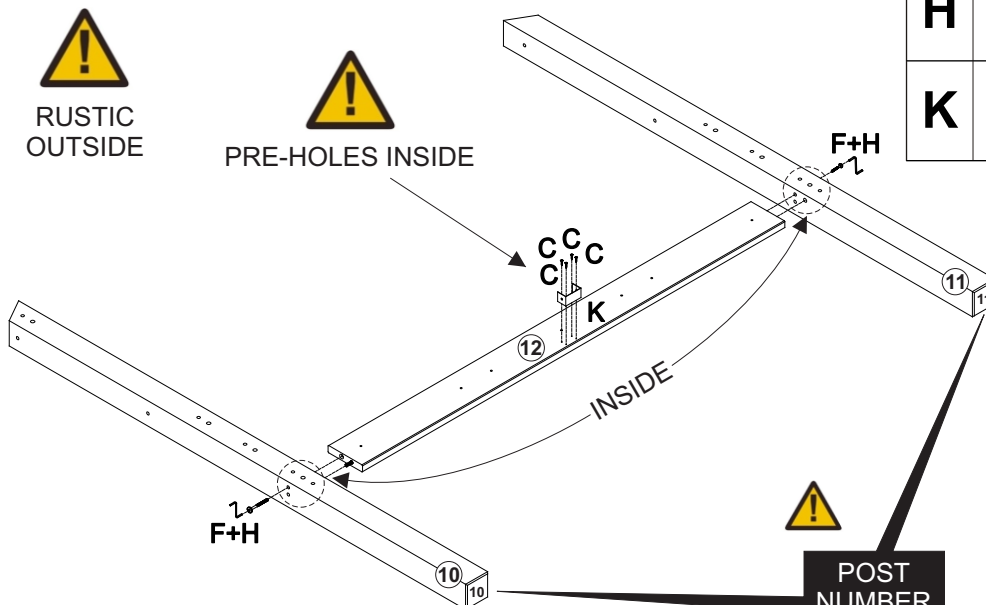

POST NUMBER HERE!

C		04
F		02
H		01
K		01




09



RIGTH HEADBOARD




PLEASE ASSEMBLY THE HEADBOARDS ON THE FLOOR

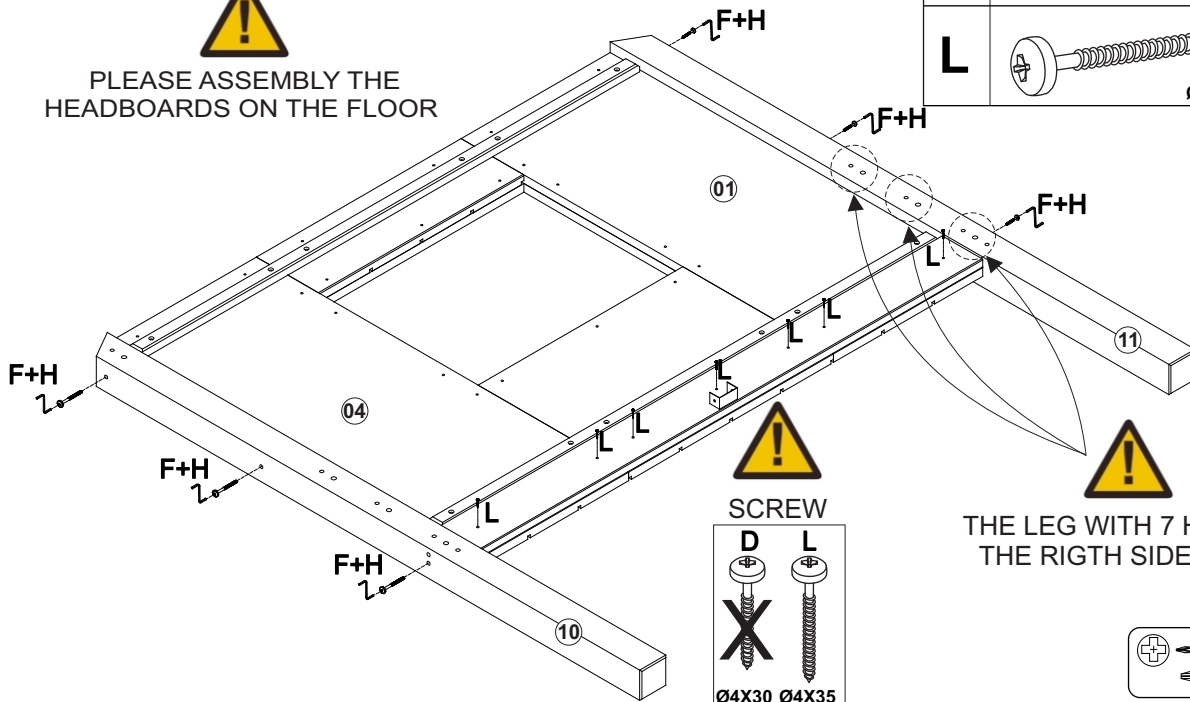

F		06
H		01
L		07

10

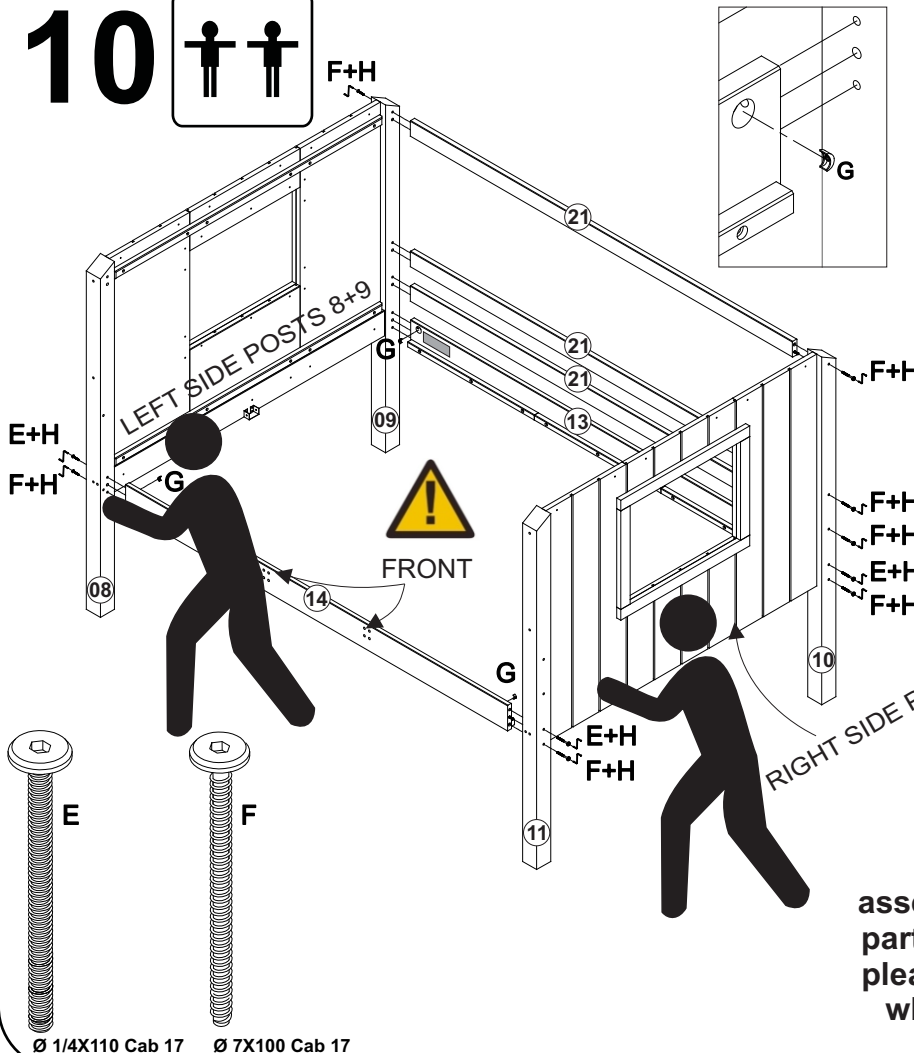

E		04
F		10
G		04
H		01


Caution



Please be careful when assembling this product due the parts are extremely heavy. Also, please do not allow kids around when assembling this bed to avoid injuries.


Ø 1/4X110 Cab 17 Ø 7X100 Cab 17

11

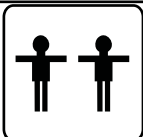



RUSTIC
OUTSIDE

D




Ø 4X30


20

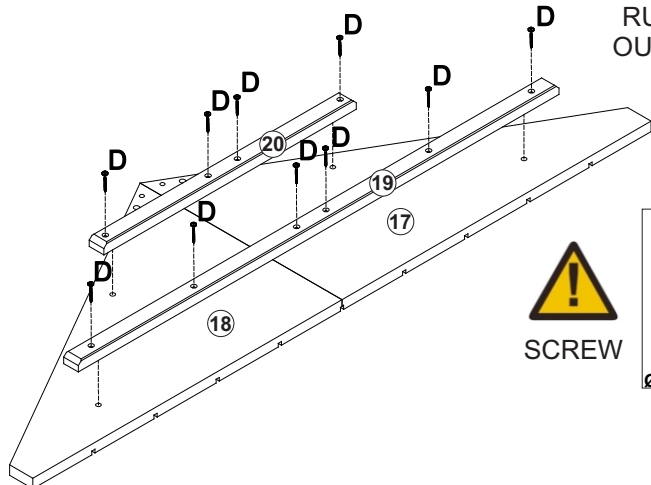



SCREW

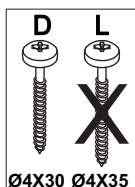

Ø4X30 Ø4X35

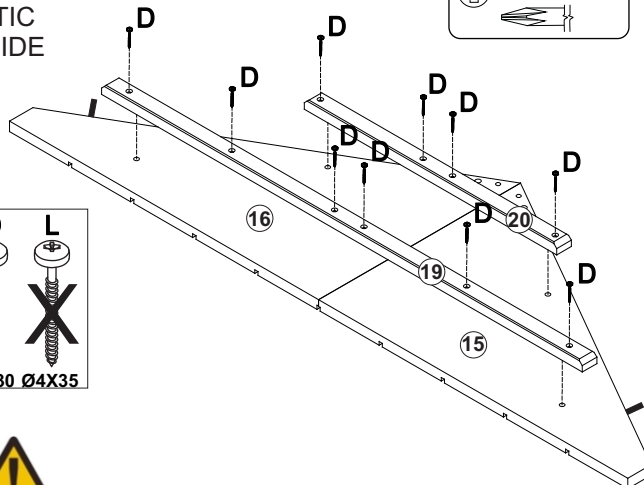


PLEASE ASSEMBLY THE TOP OF
HEADBOARDS ON THE FLOOR

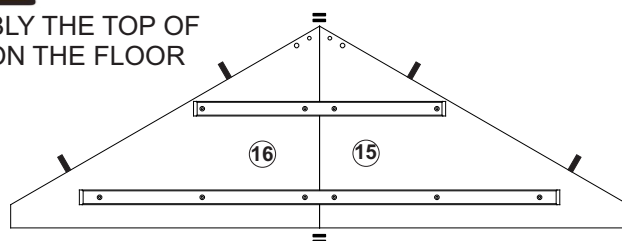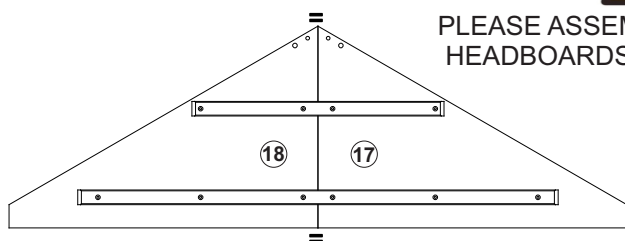


12

L



Ø 4X35

12

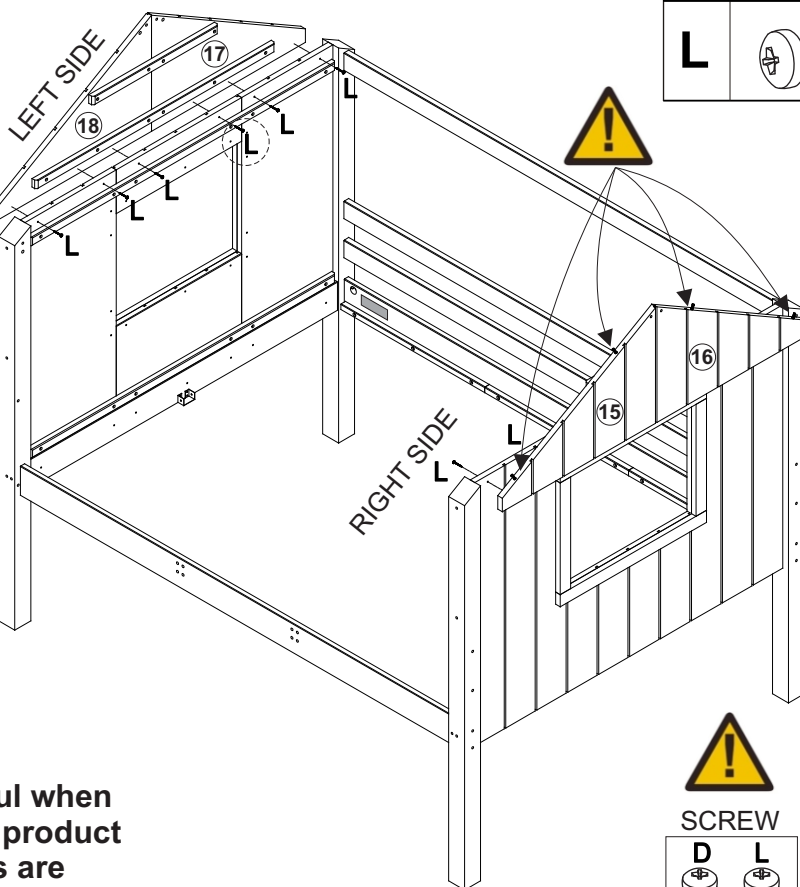


Caution


Please be careful when
assembling this product
due the parts are
extremely heavy. Also,
please do not allow kids
around when assembling
this bed to avoid injuries.






SCREW

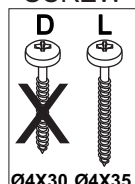

Ø4X30 Ø4X35





13

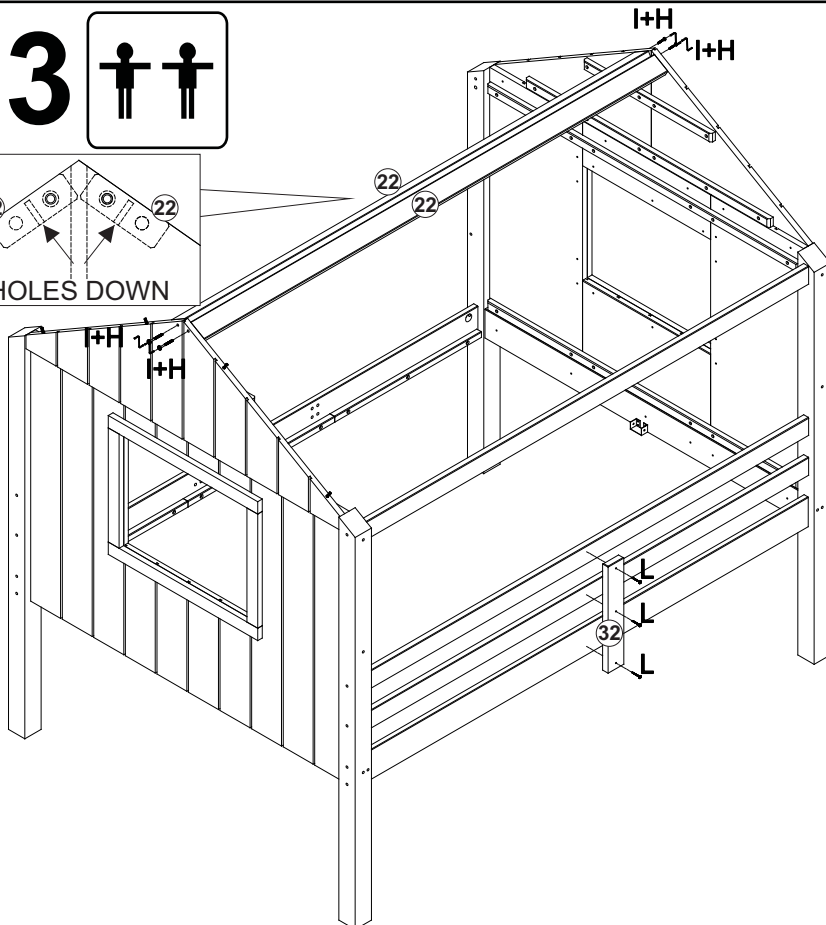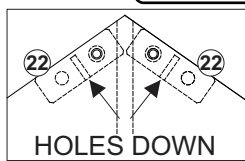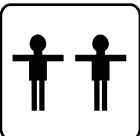



H		01
I		04
L		03



SCREW

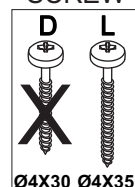

14

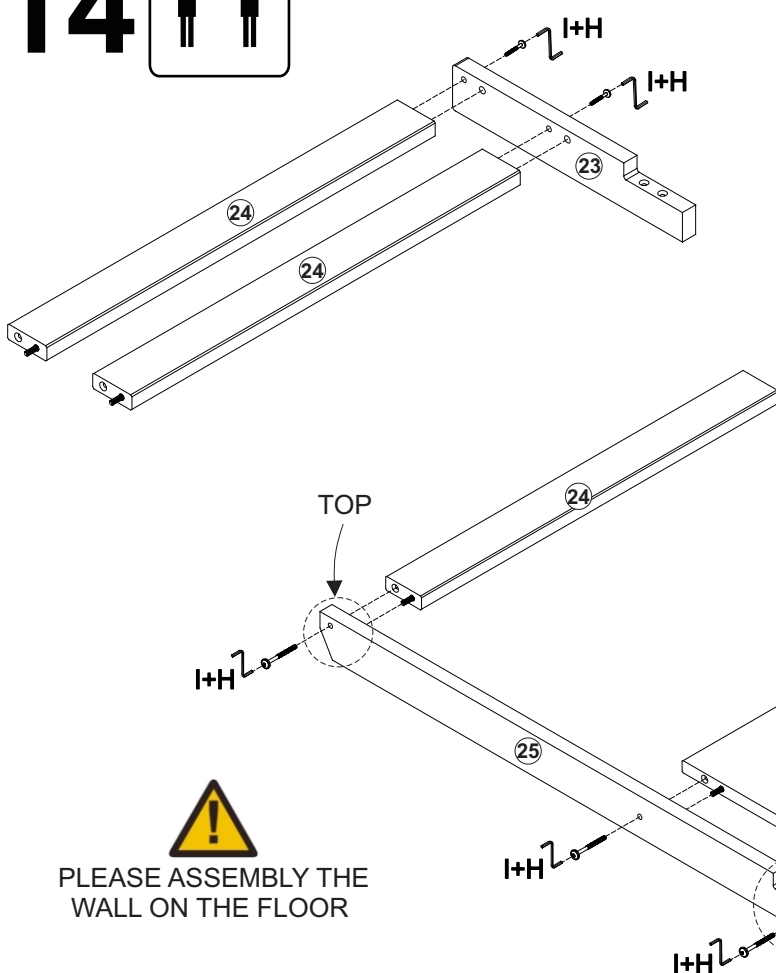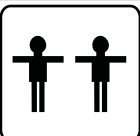



H		01
I		05



PLEASE ASSEMBLY THE
WALL ON THE FLOOR

15

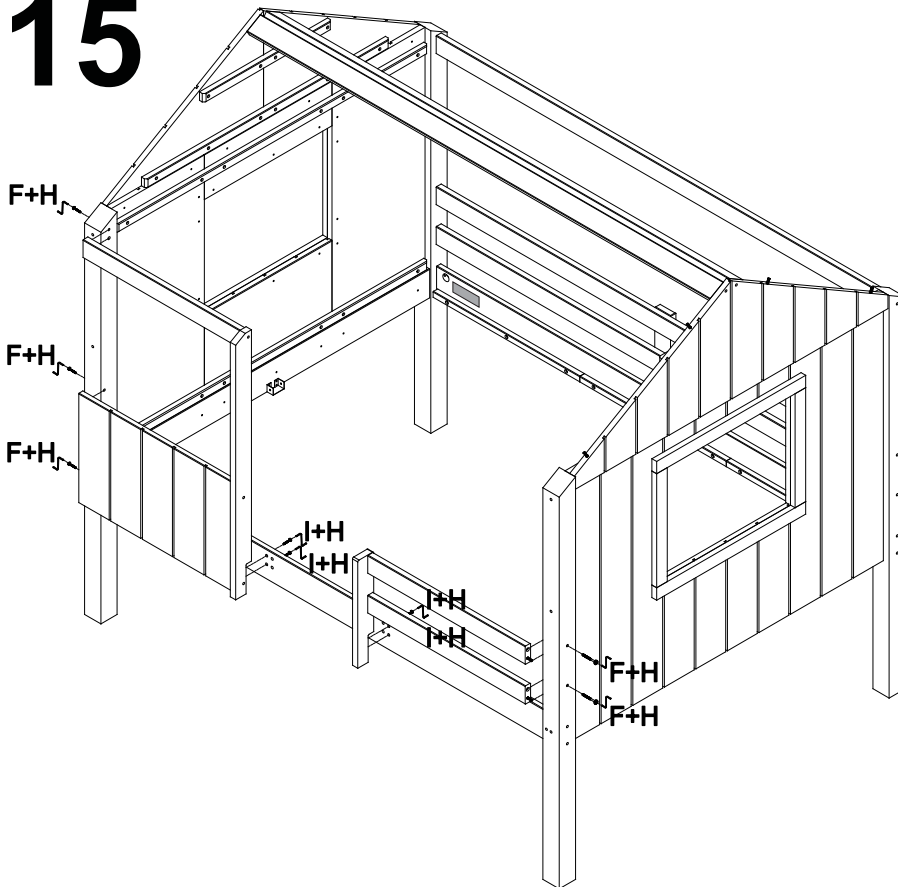

F	 Ø 7X100 Cab 17	05
H	 Ø 4X30	01
I	 Ø 7X50 Cab 17	04




16



ROOF


D	 Ø 4X30	16
----------	---	-----------

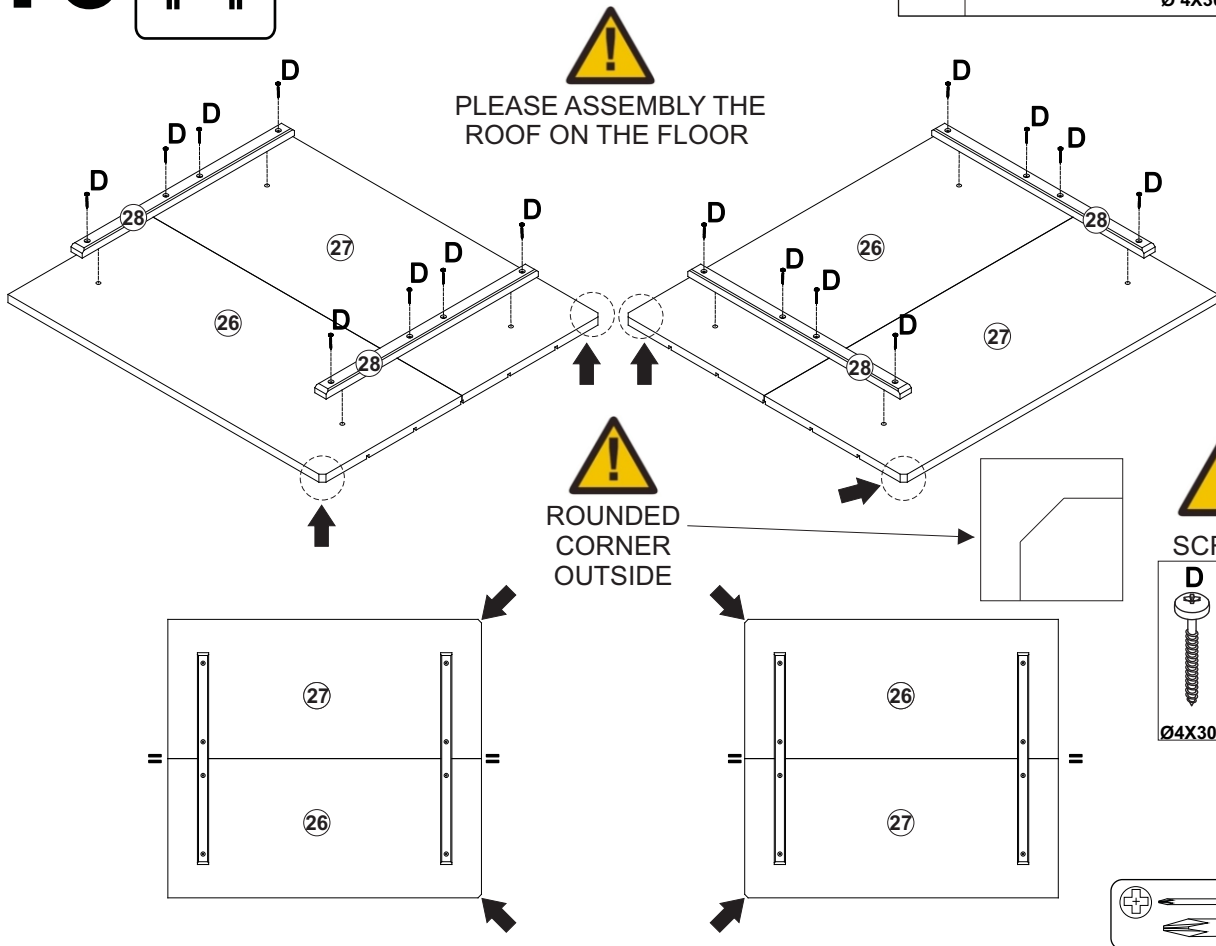


17




ROUNDED
SIDE BOTTOM

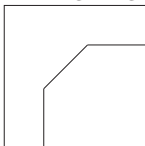

SCREW

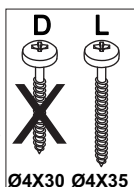


L





Ø 4X35

08



ALIGNMENT

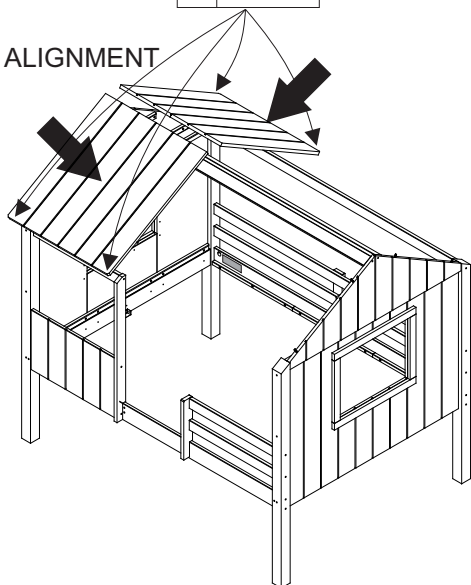


TOP INSIDE FIXING

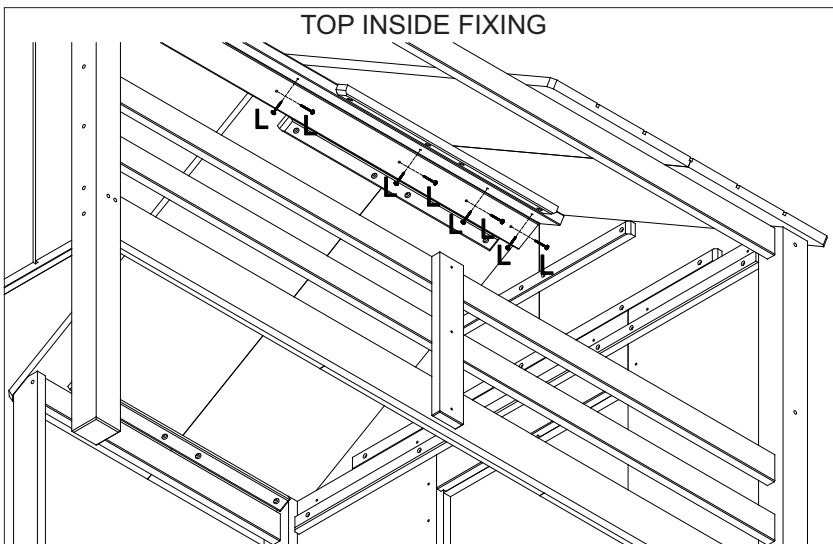

18

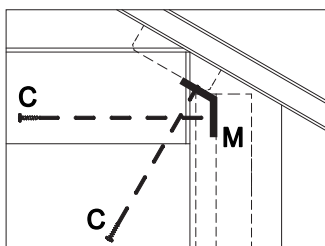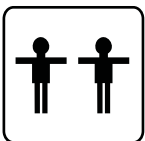

C



Ø 3,5X16



08

M






04


BOTTOM INSIDE FIXING

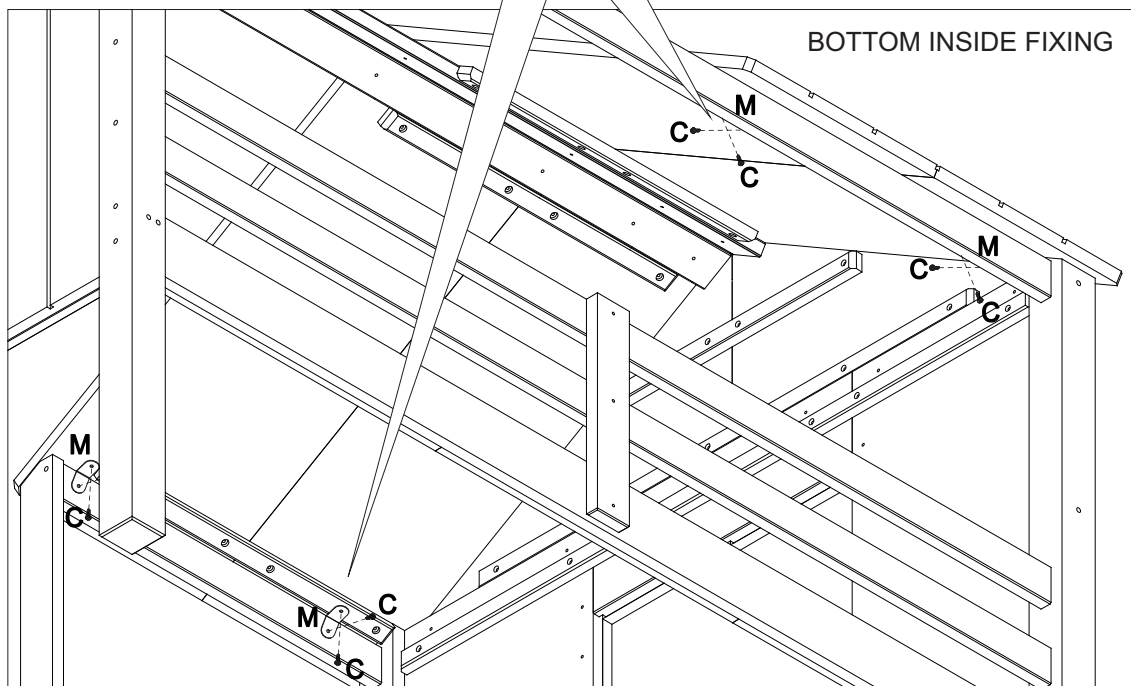


19

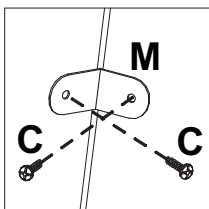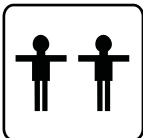

C	 Ø 3,5X16	02
M		01

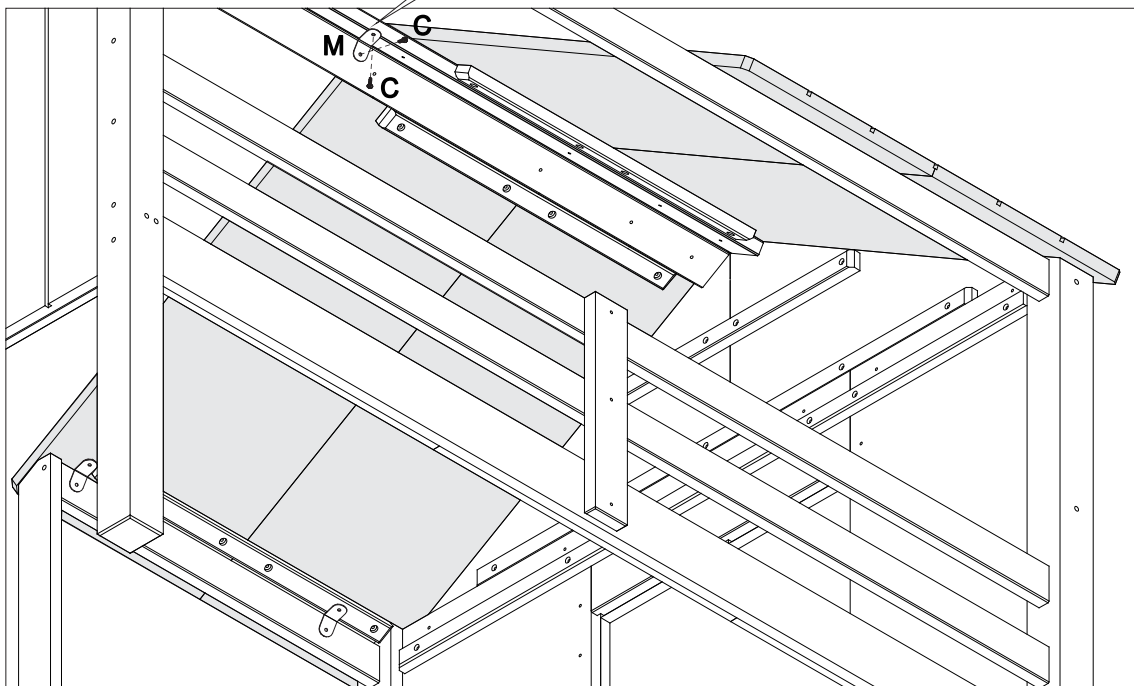




20

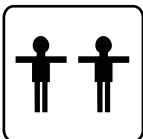


L	 Ø 4X35	10
----------	---	-----------




SCREW

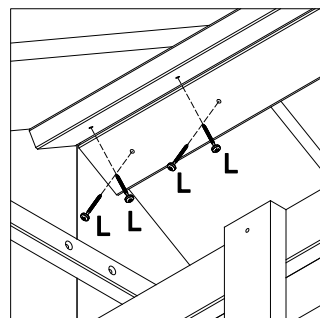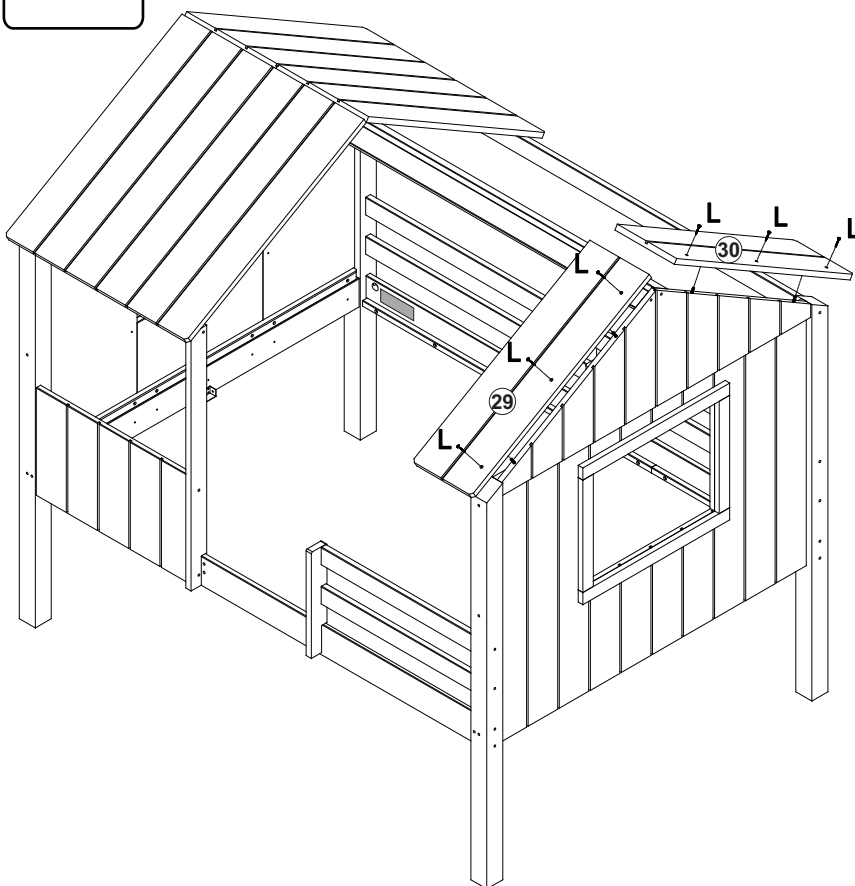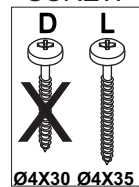

DOWN SIDE



21

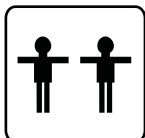

LADDER

D




Ø 4X30


04




HOLES TOP

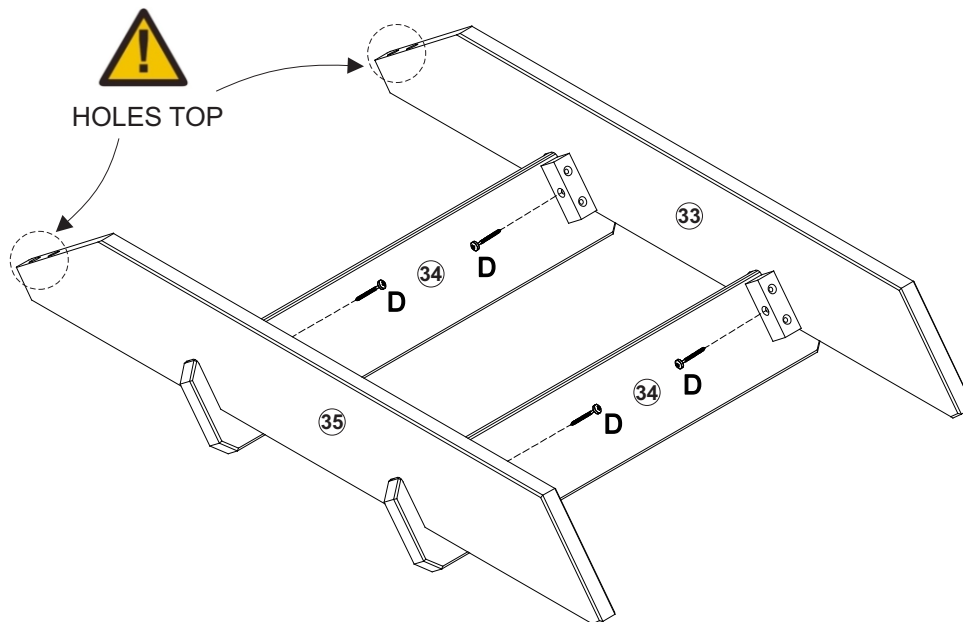

SCREW

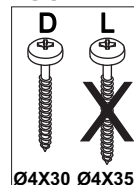


Ø 4X30 Ø 4X35



22


H



Ø 4X30


01

I




Ø 7X50 Cab 17


04

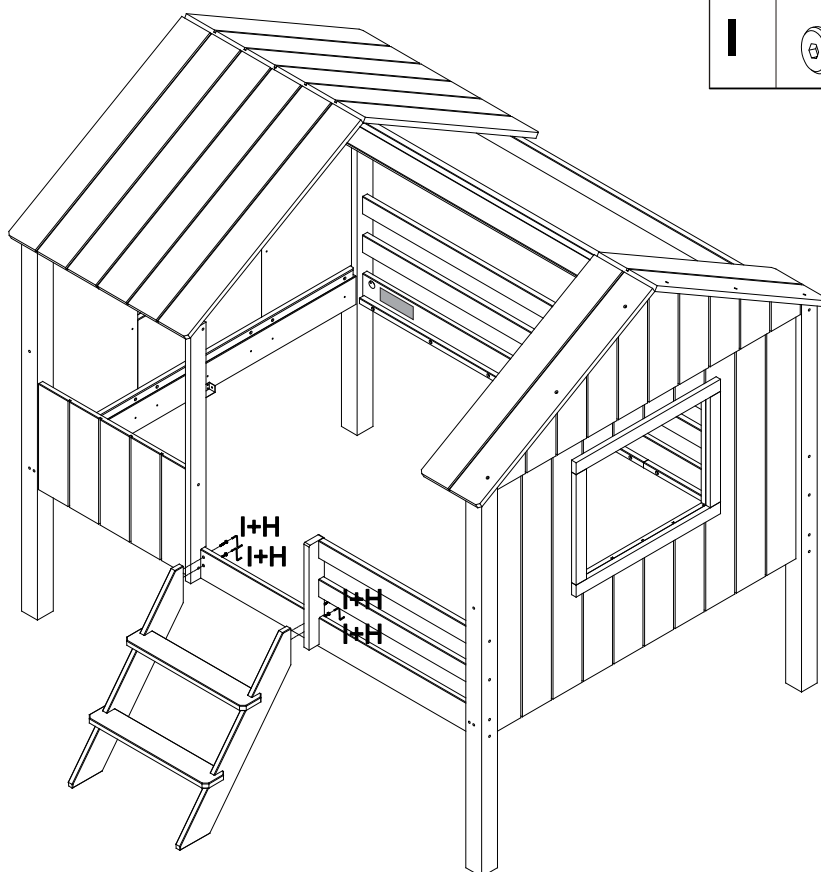

23

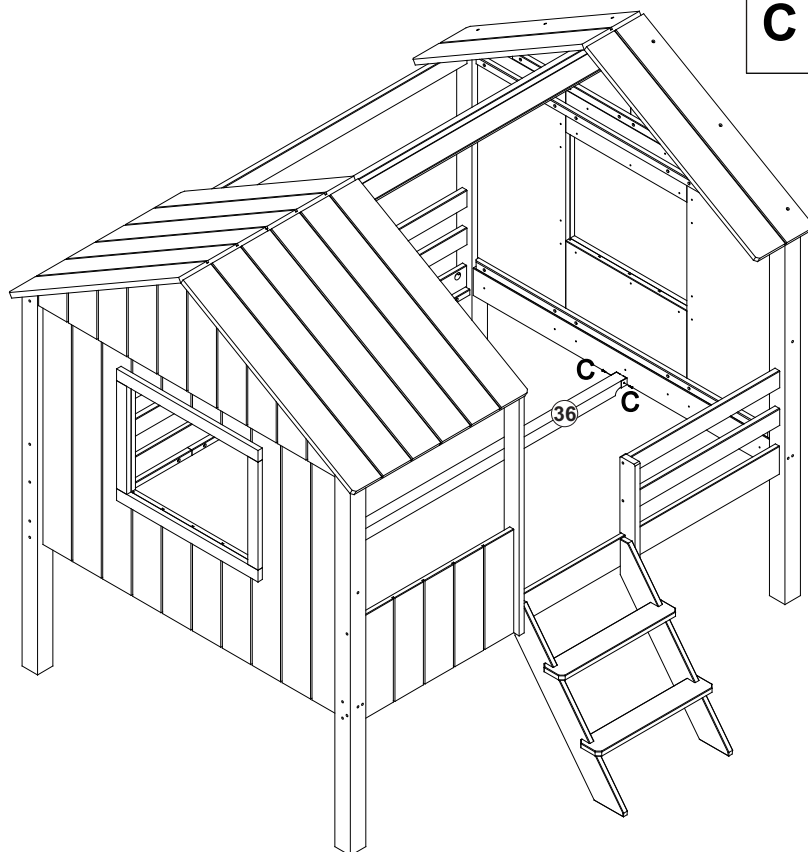


C





Ø 3,5X16

04



24

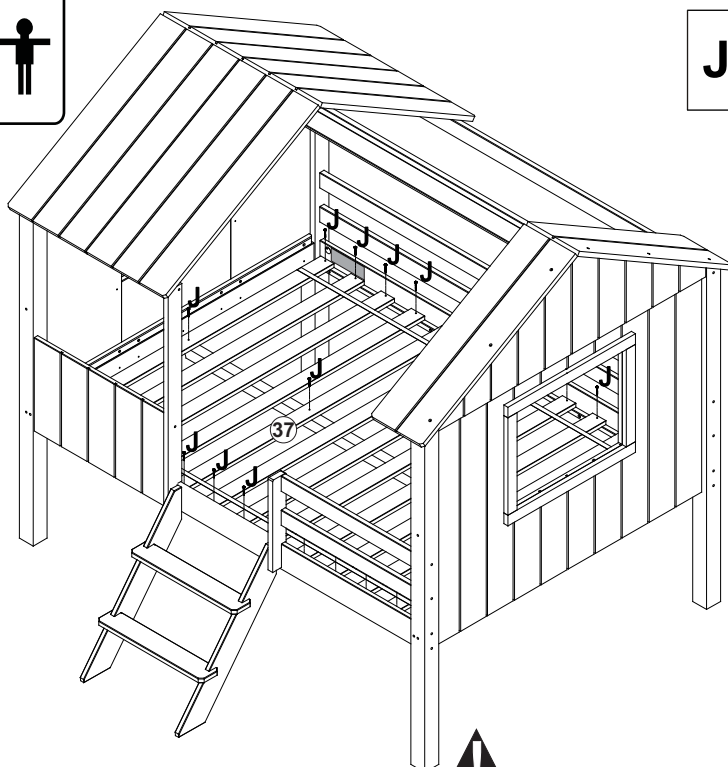

J



Ø 4X35

30

“INSTALL SLAT KIT WITH SPACER TAPE ON TOP (FACING UP)”

