



ASSEMBLY INSTRUCTION

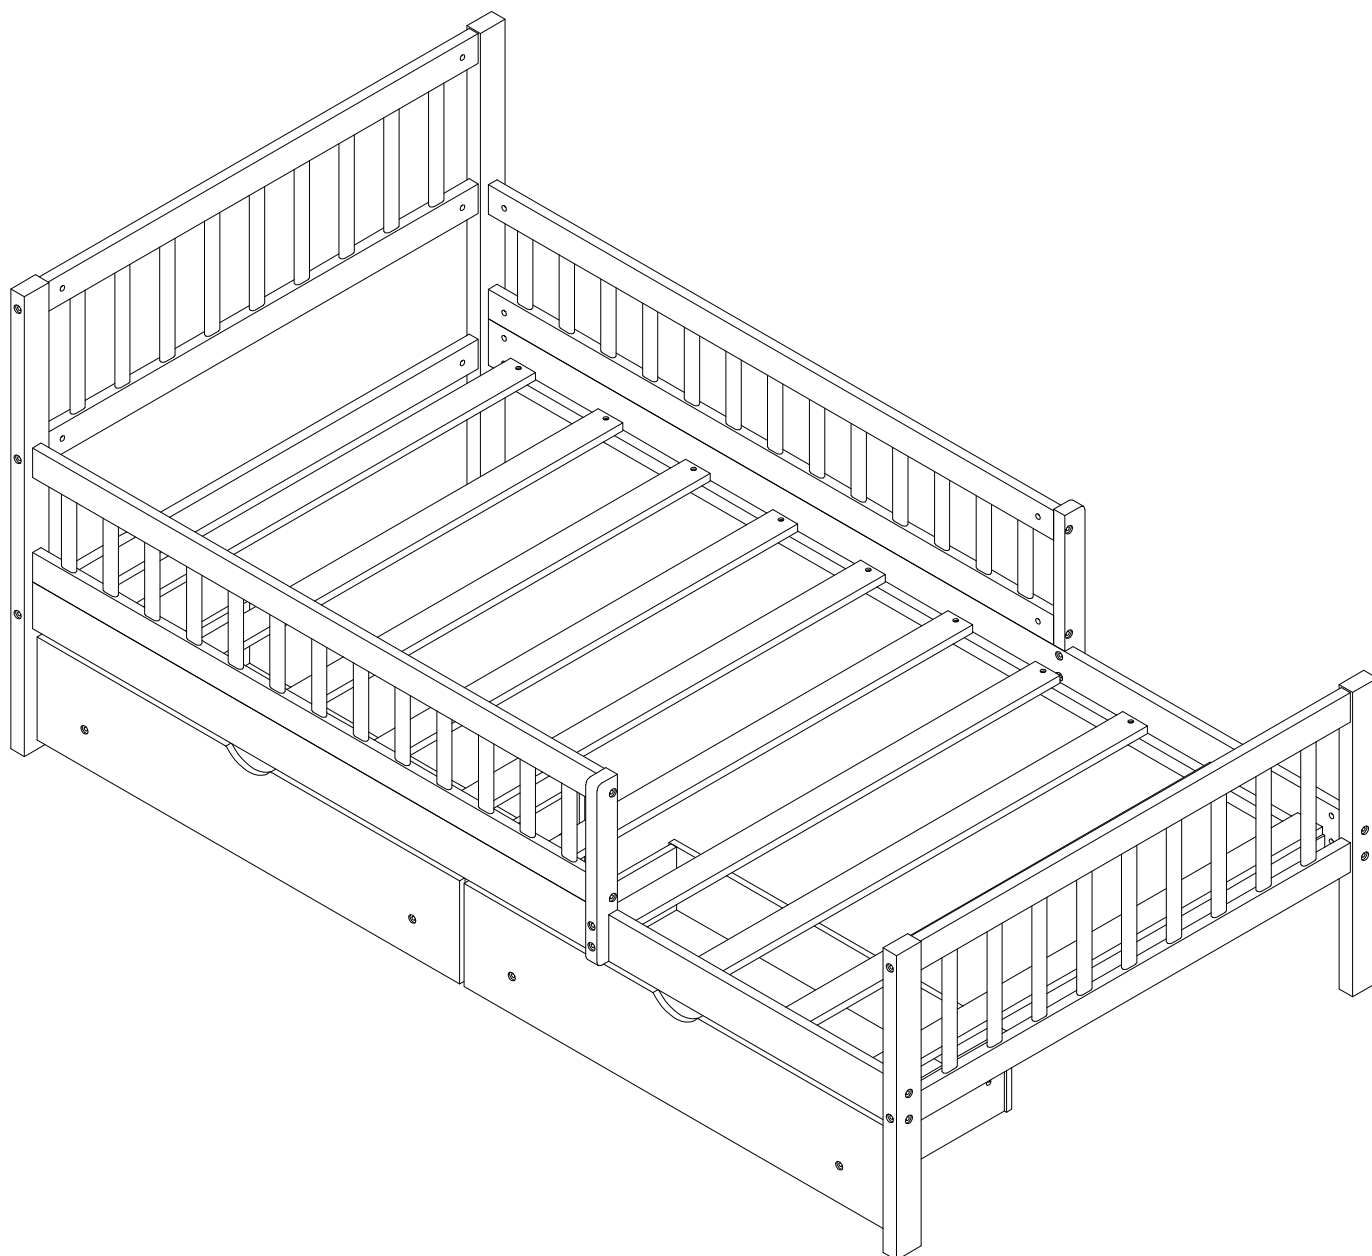






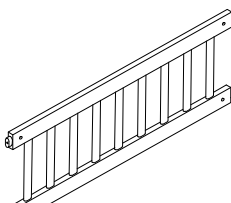
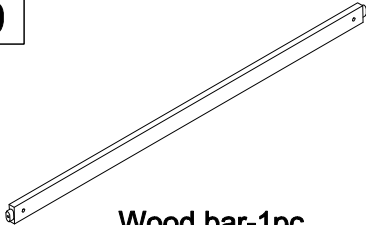
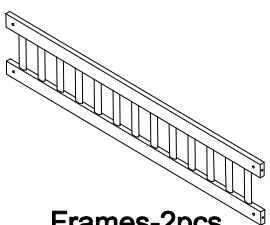
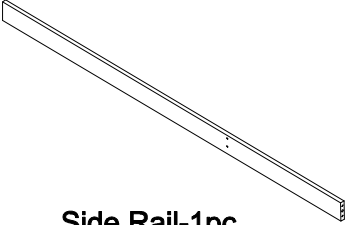
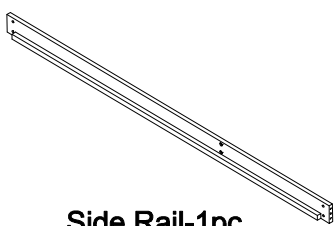







SAFETY WARNINGS AND GENERAL NOTES:

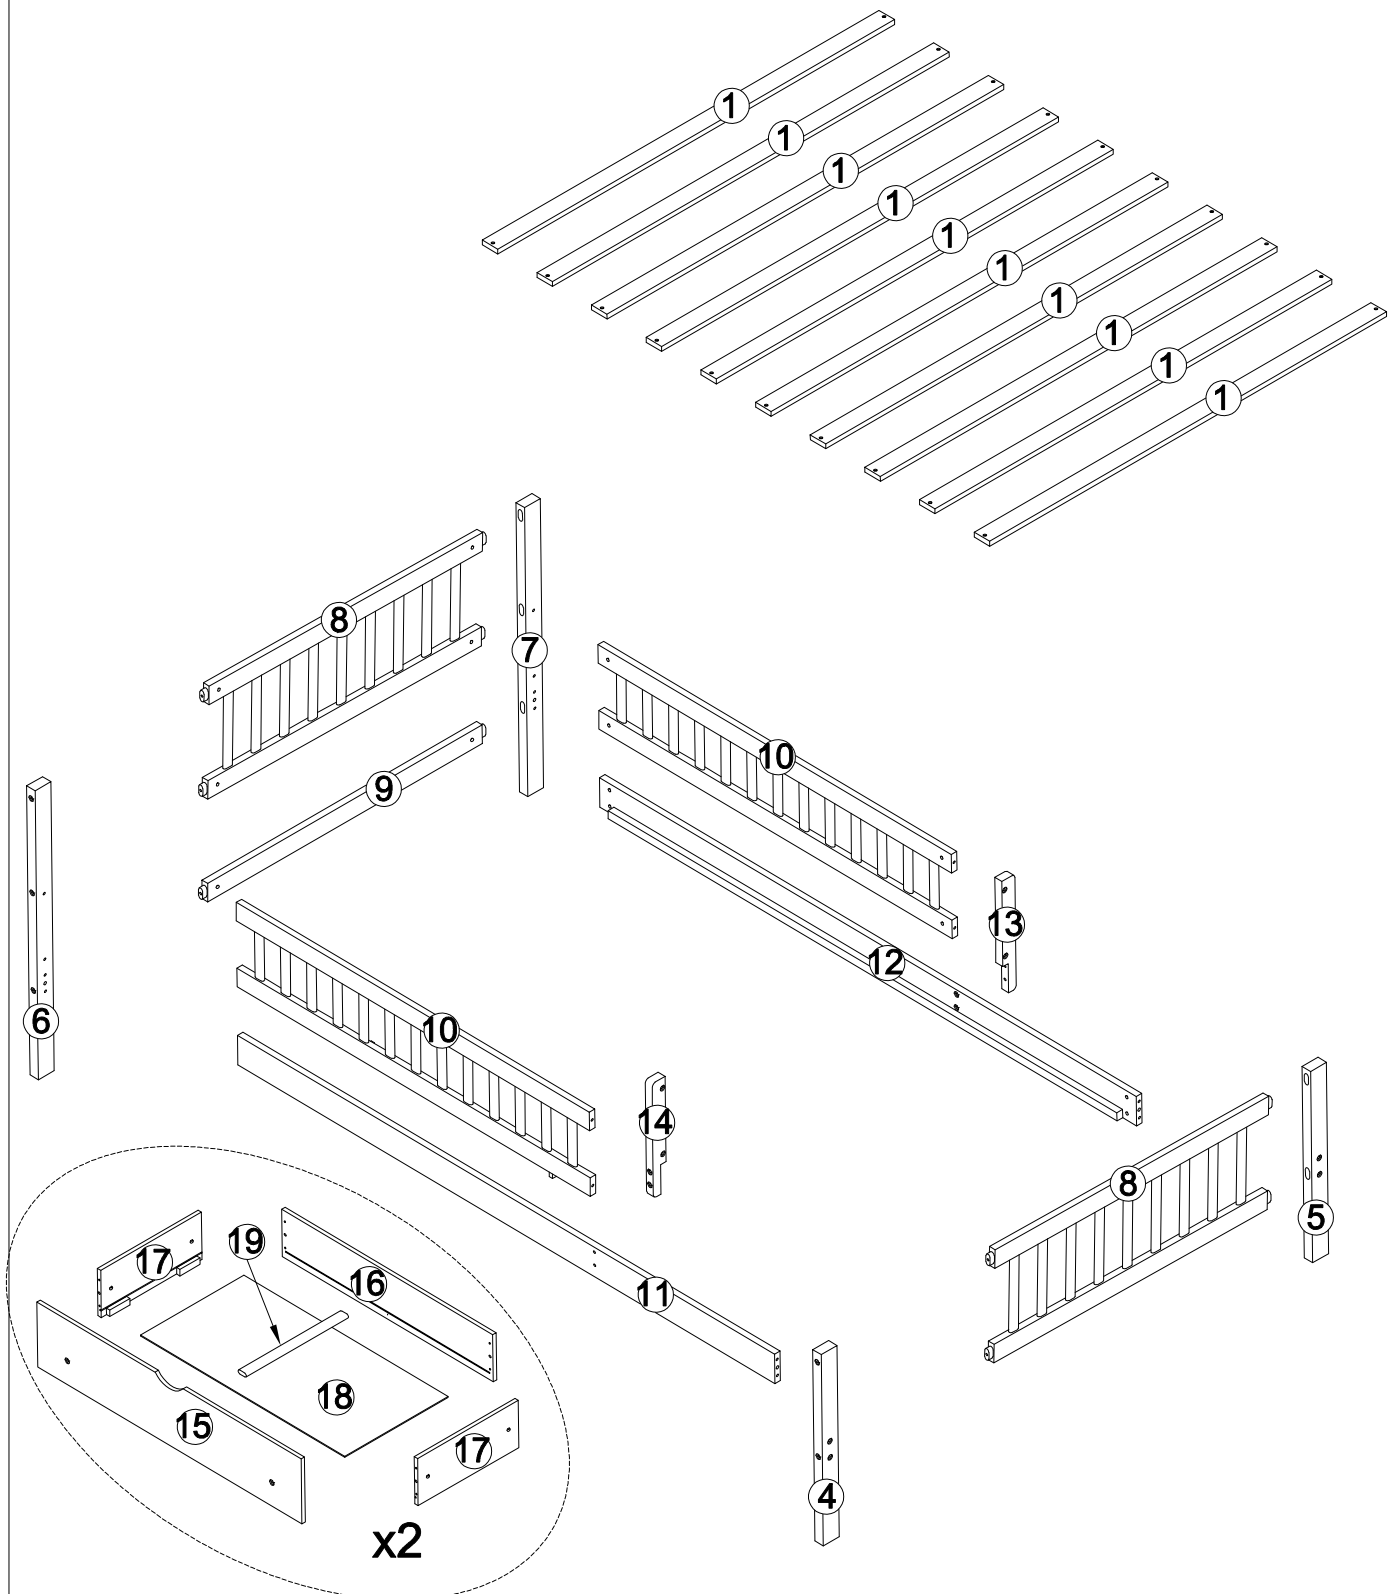1. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
2. Keep these instructions for future reference.
3. We recommend assembling your bed on the shipping carton to protect your floor.
4. Be certain all staples are out of the box before beginning assembly on the shipping carton.
5. Replacement Parts:
Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC.) dealers.





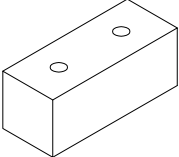







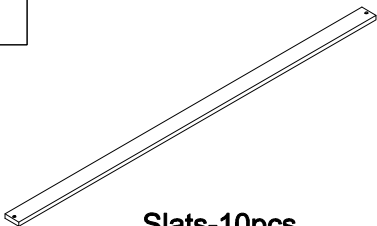

ASSEMBLY INSTRUCTION

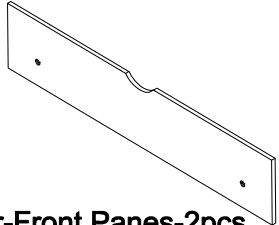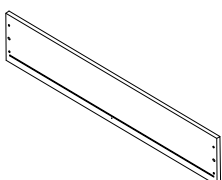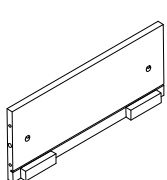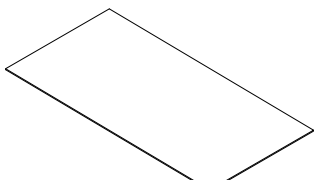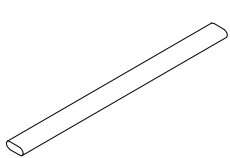


Part List

1		4		5	
	Slats-10pcs		Leg-1pc		Leg-1pc
6		7		8	
	Leg-1pc		Leg-1pc		Frames-2pcs
9		10		11	
	Wood bar-1pc		Frames-2pcs		Side Rail-1pc
12		13		14	
	Side Rail-1pc		Rail-1pc		Rail-1pc
15		16		17	
	Drawer-Front Panes-2pcs		Drawer-Back Panes-2pcs		Drawer-Side Panes-4pcs
18		19			
	Drawer-Bottom Panes-2pcs		Drawer-Sup Bottom Panes-2pcs		

Hardware List

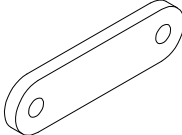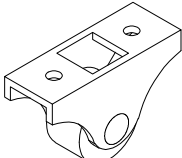A  <p>Ø1/4" x 100 mm Hex-Head bolts 10pcs</p>	B  <p>Ø1/4" x 13 mm Horizontal-Hole bolts 34pcs</p>	C  <p>Ø1/4" x 70 mm Hex-Head bolts 16pcs</p>
D  <p>Ø10 x 40 mm Wood dowel 4pcs</p>	E  <p>Stop Drawer-3pcs</p>	F  <p>M4 x 30 mm Wood Screws 28pcs</p>
G  <p>Ø1/4" x 35 mm Hex-Head bolts 4pcs</p>	H  <p>Ø1/4" x 15 mm Canopy head though - 4pcs</p>	K  <p>M4 x15 mm Wood Screws 20pcs</p>
L  <p>Steel Bracket -2pcs</p>	M  <p>Ø1/4" x 50 mm Hex-Head bolts 8pcs</p>	N  <p>Ø6 x 25 mm Wood dowel 16pcs</p>
P  <p>Wheels 8pcs (H=28mm)</p>	Q  <p>Allen Key 1pc</p>	




Assembly Tools Required (Not Included)

STEP 1: Following below illustration:

-Using HW #A,#B to connect 6 & 7 Legs with 8 Frame and 9 Wood Bar

-Using HW #A,#B to connect 4 & 5 Legs with 8 Frame



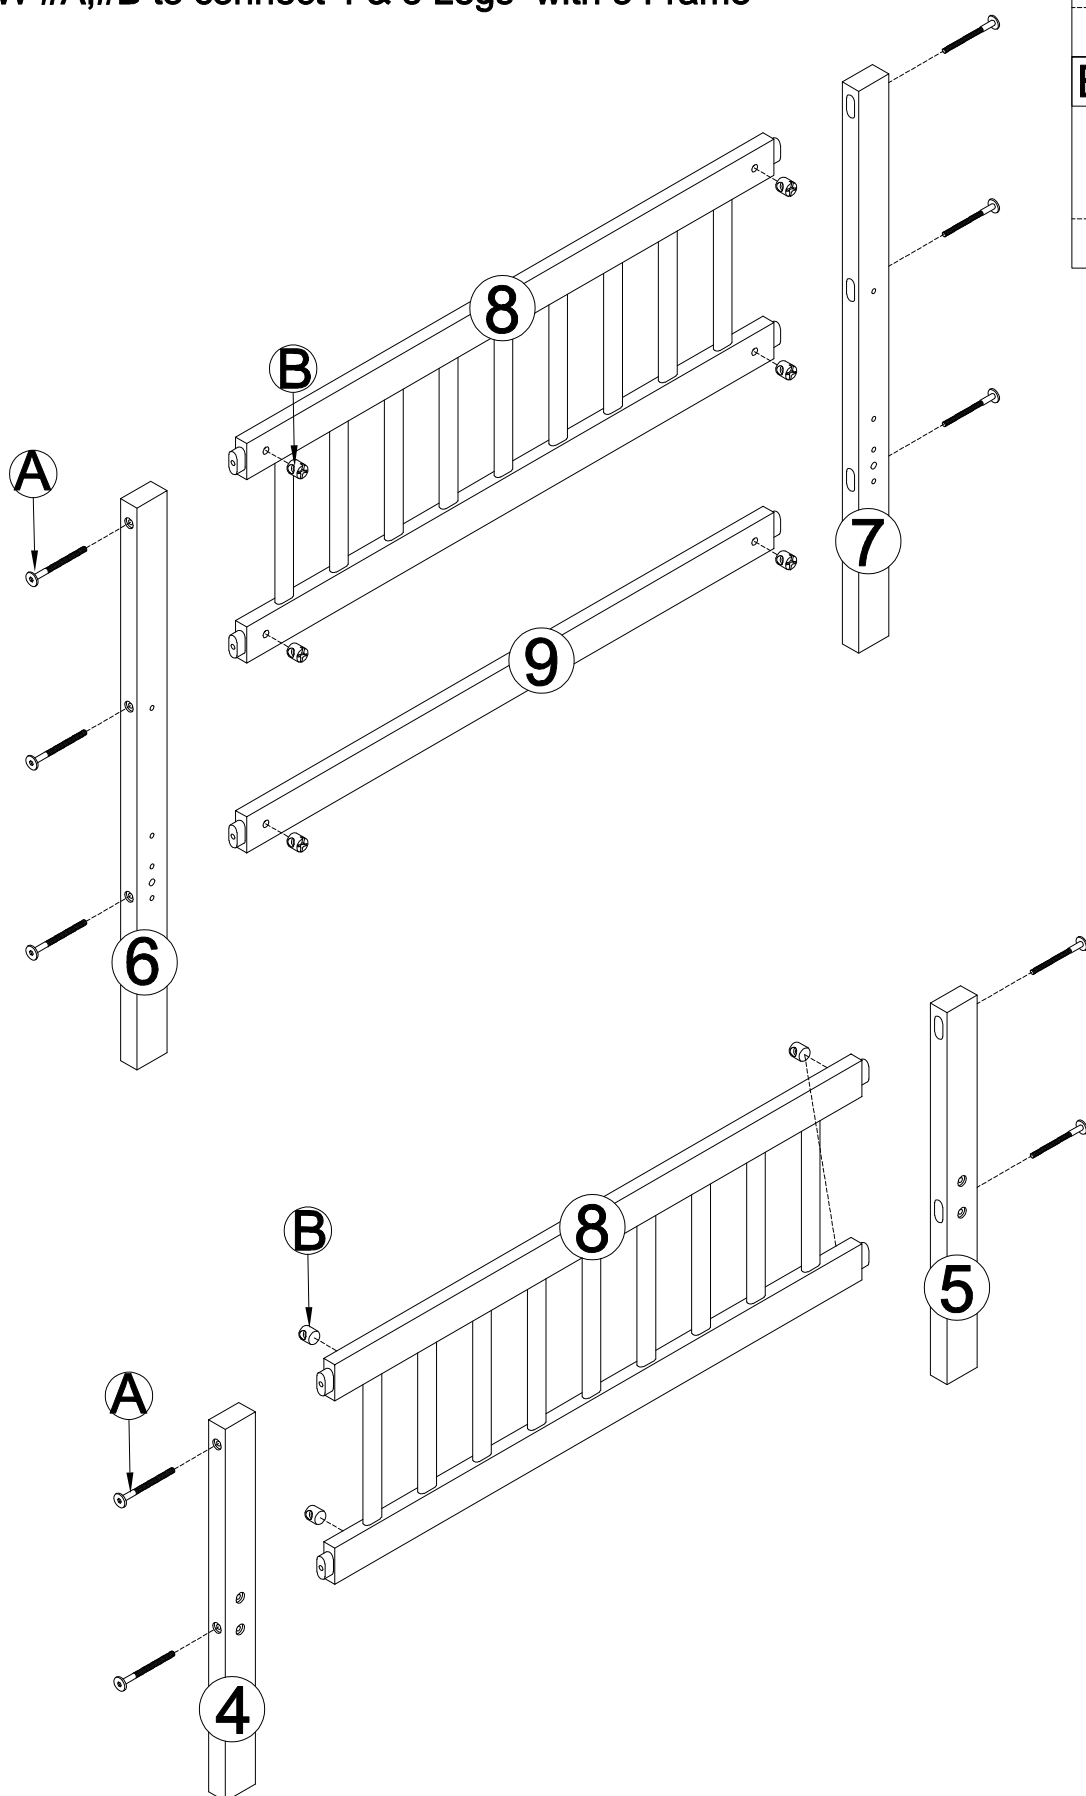





A	
	10pcs
B	
	10pcs

STEP 2: Following below illustration:







-Using HW #B,#C and Dowel D to connect 11 & 12 Side Rails with Frame (completed in step 1)

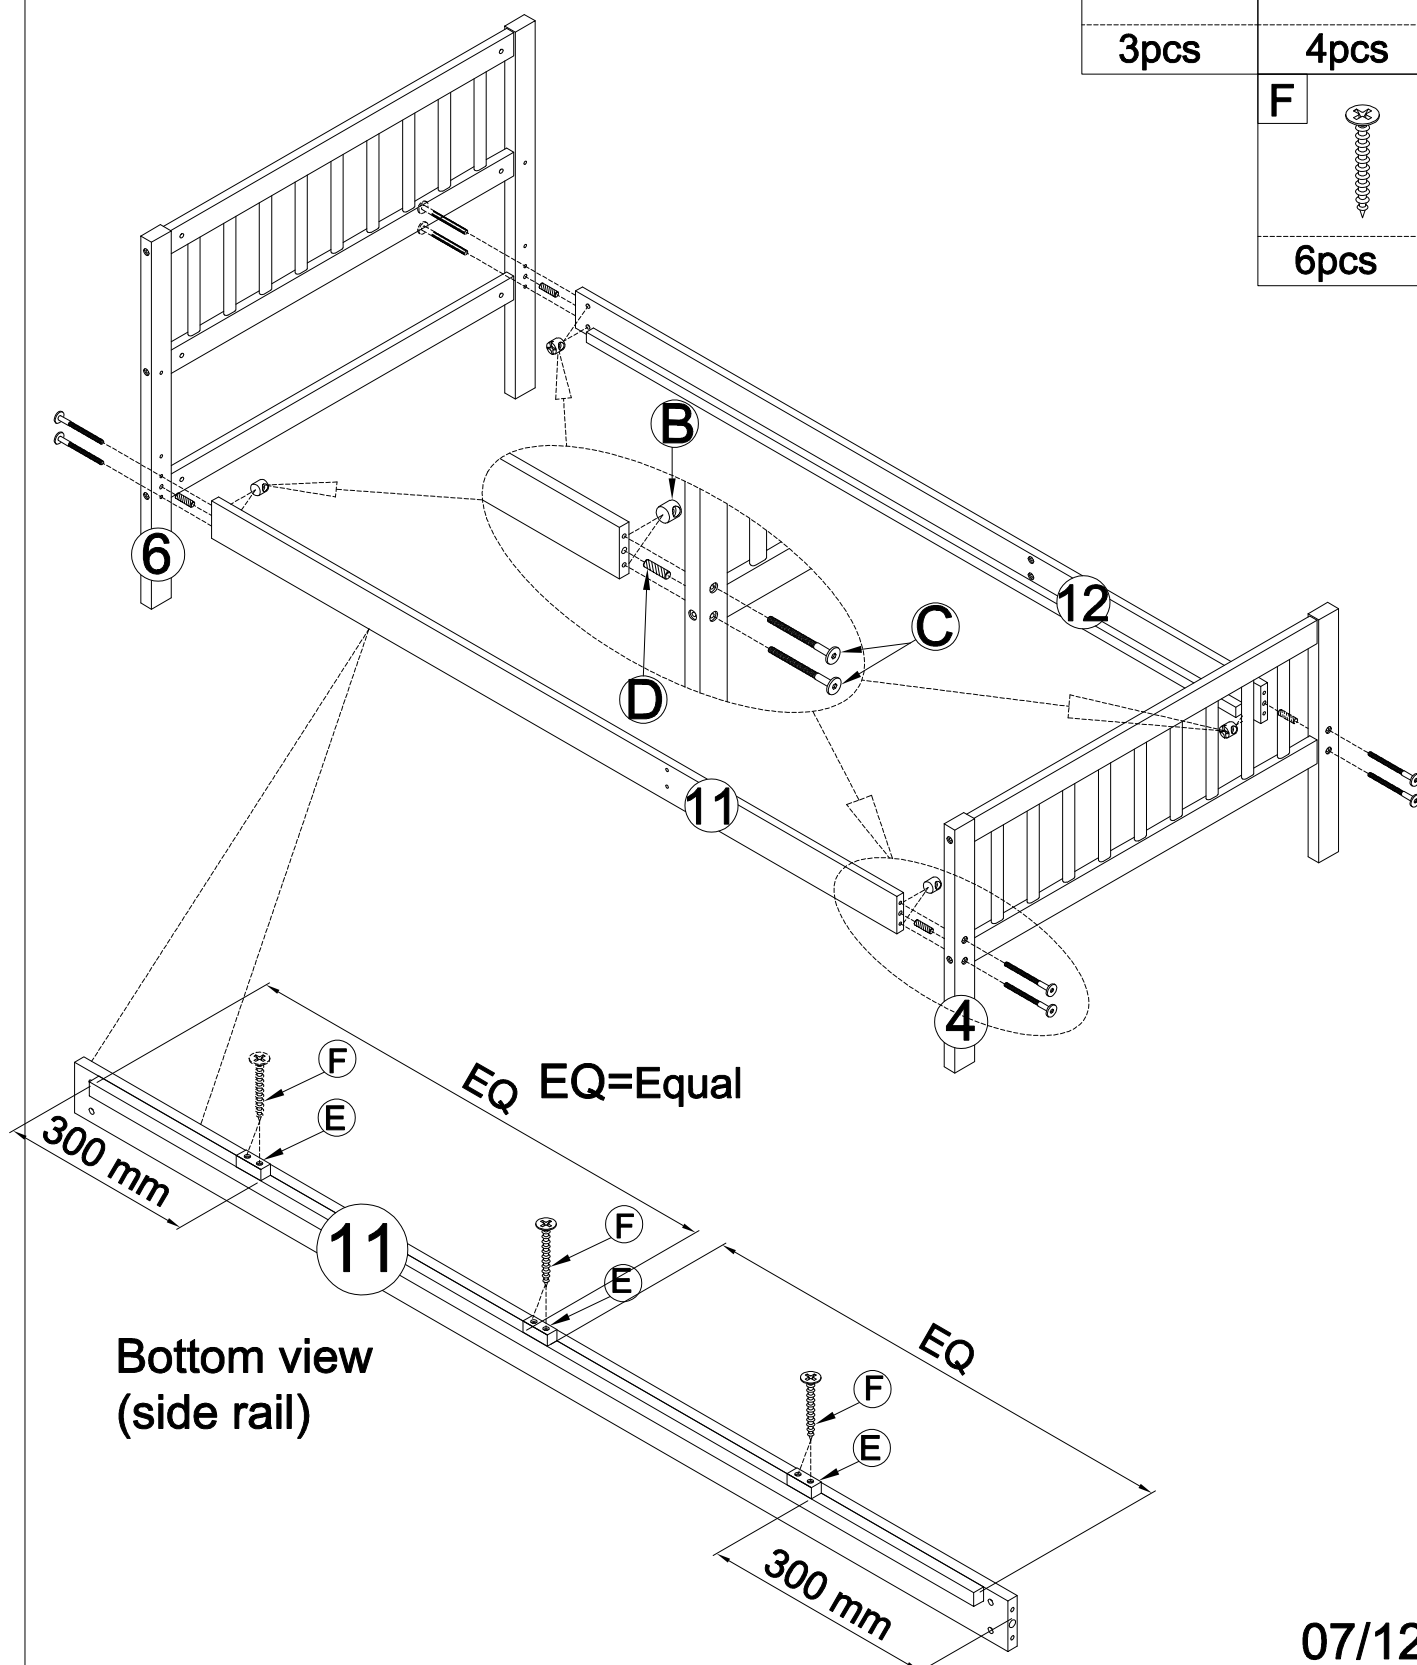
-Using HW #F to connect Stop Drawer E with 11 Side Rails

B		C	
	8pcs		8pcs
E		D	
	3pcs		4pcs
		F	
			6pcs




STEP 3: Following below illustration:

K		B		C	
4pcs		8pcs		8pcs	
L		H		G	
2pcs		4pcs		4pcs	

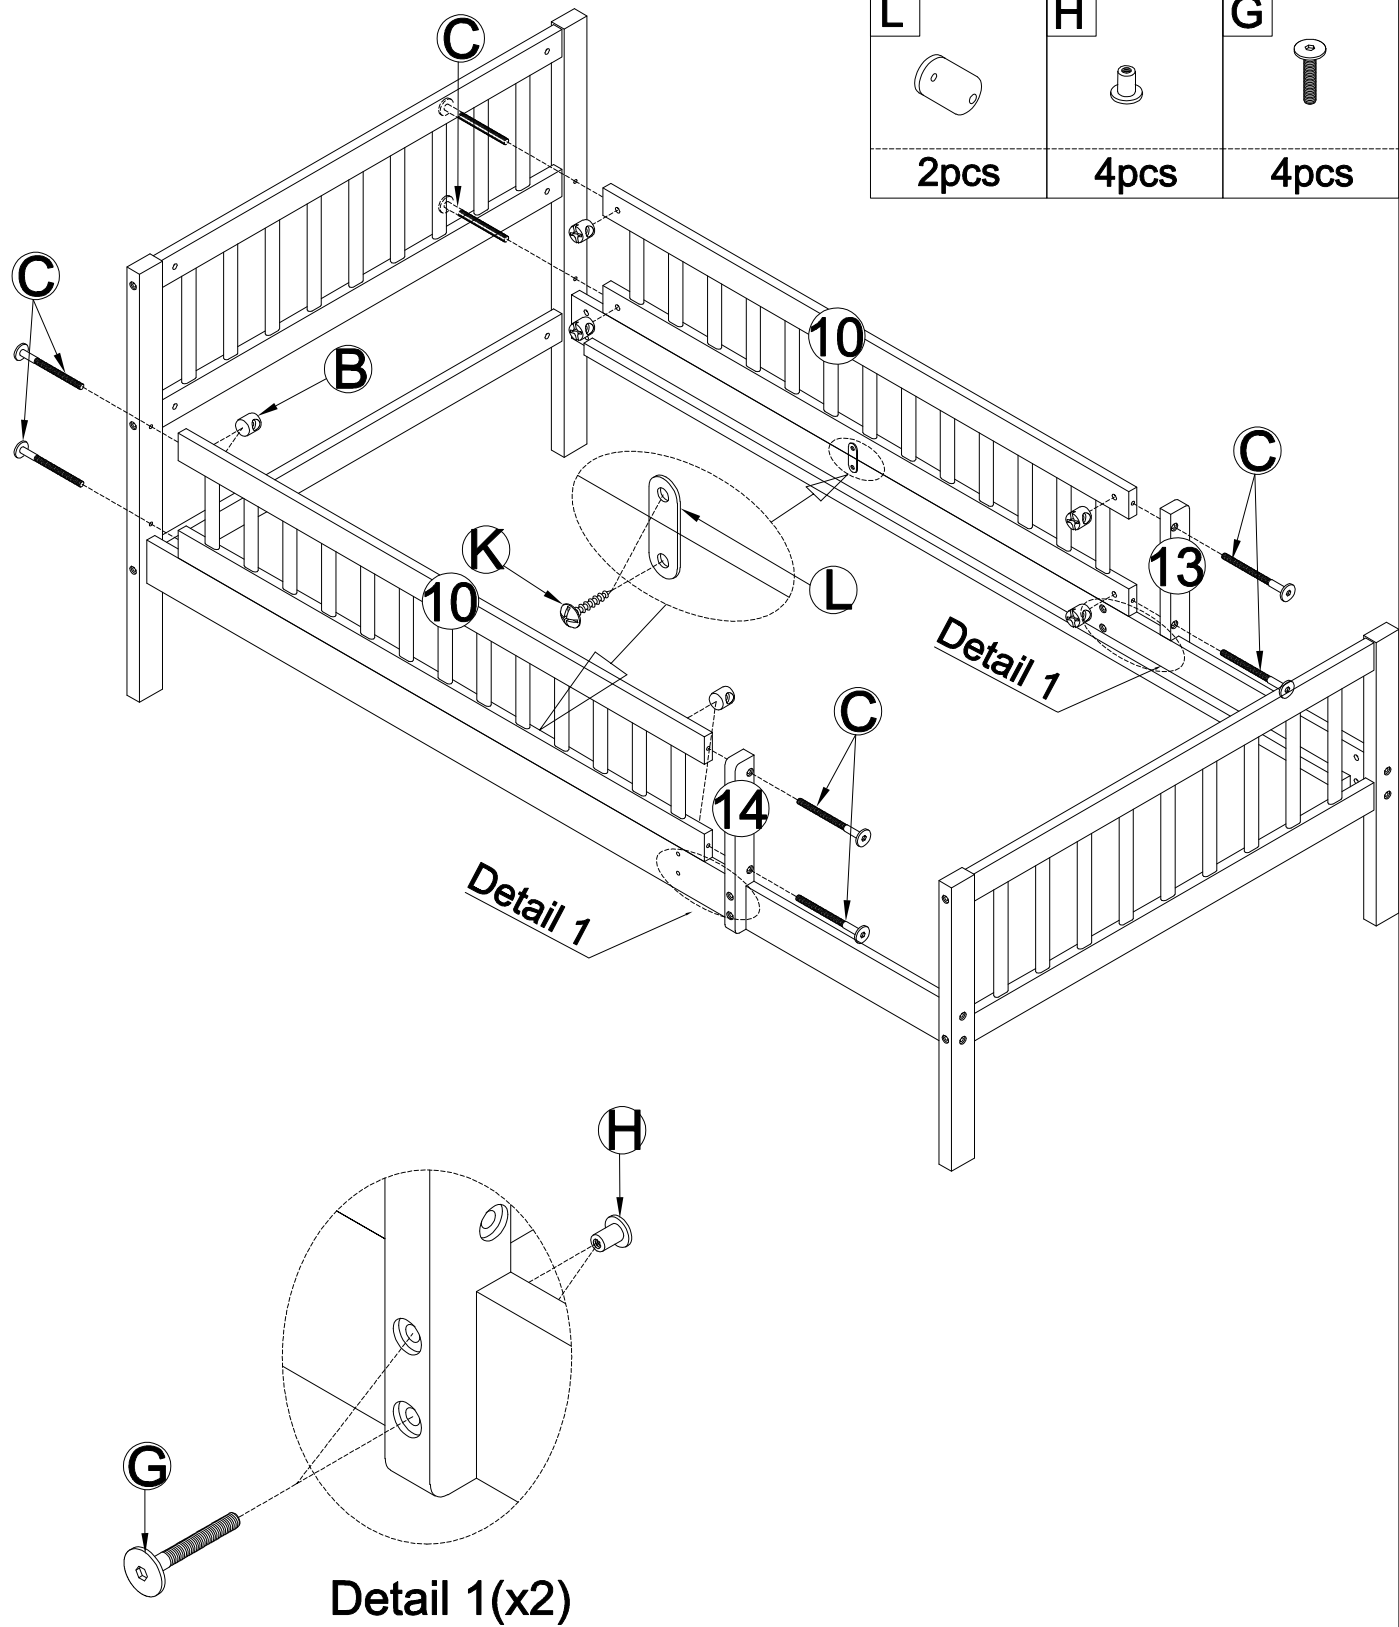


STEP 4: Following below illustration:


F



20pcs

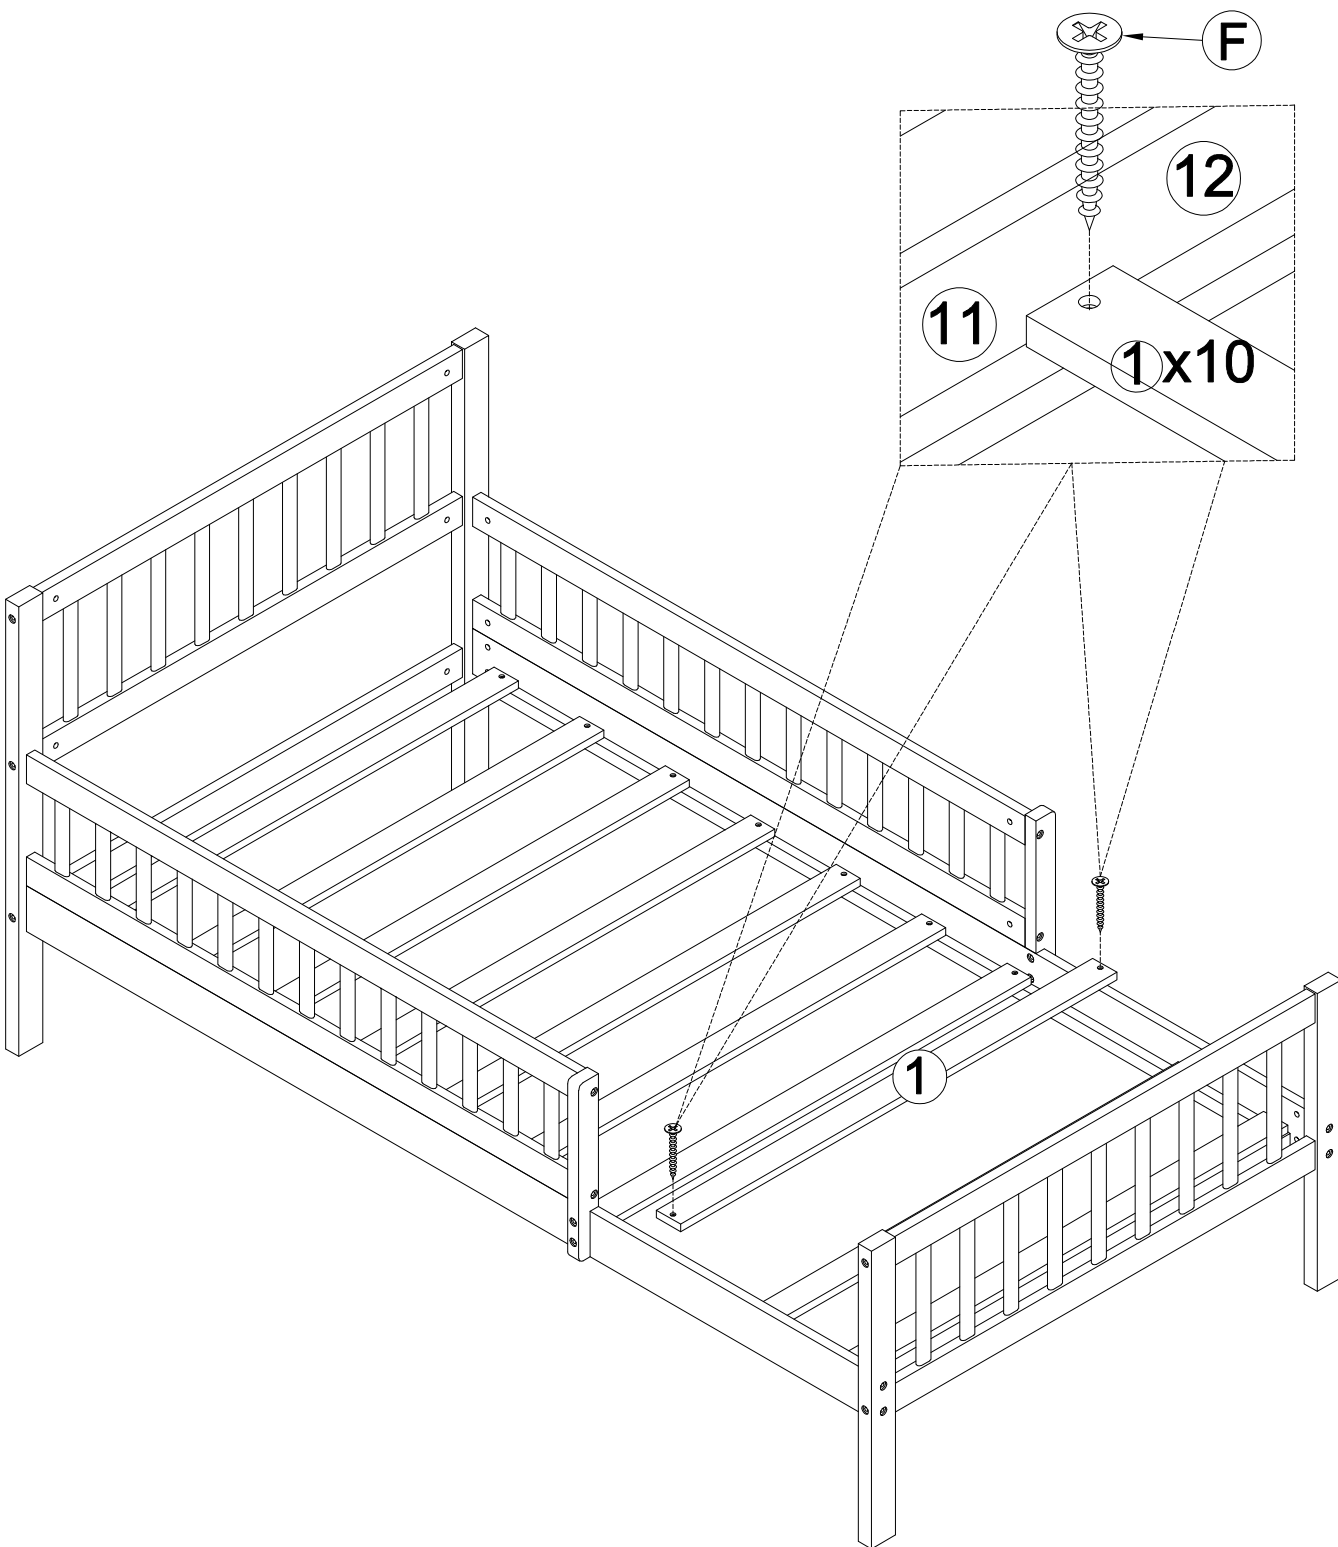


STEP 5-1: Following below illustration:

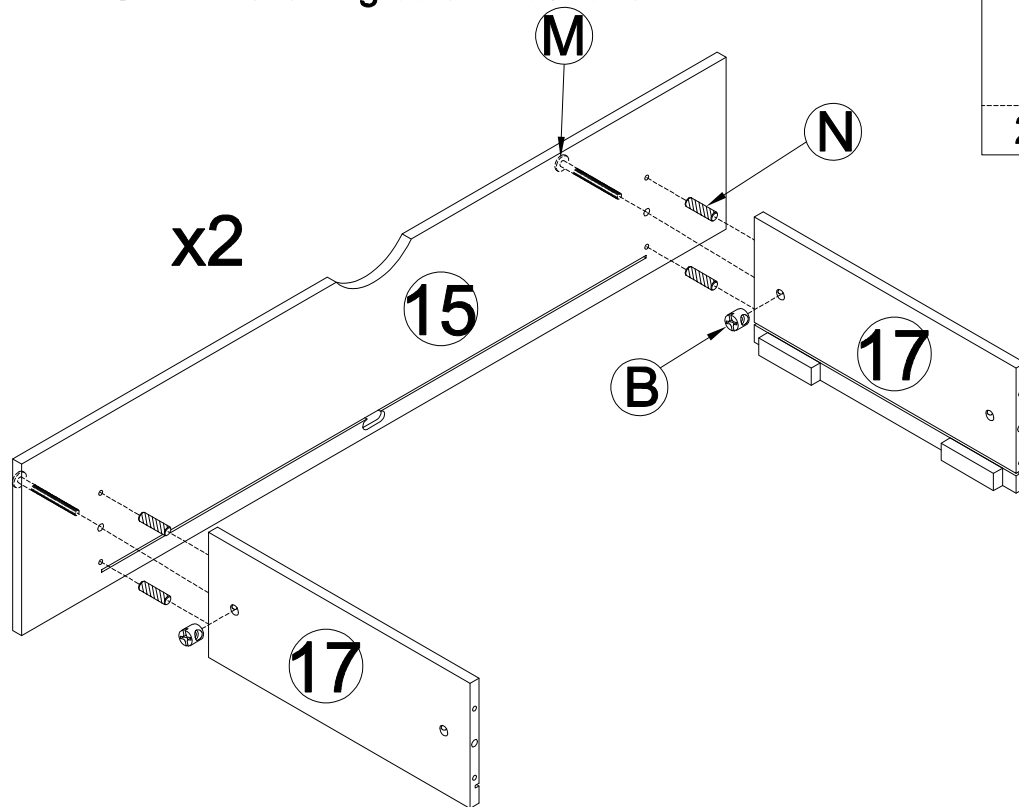


N	M
2x4pcs	2x2pcs
	B
	2x2pcs





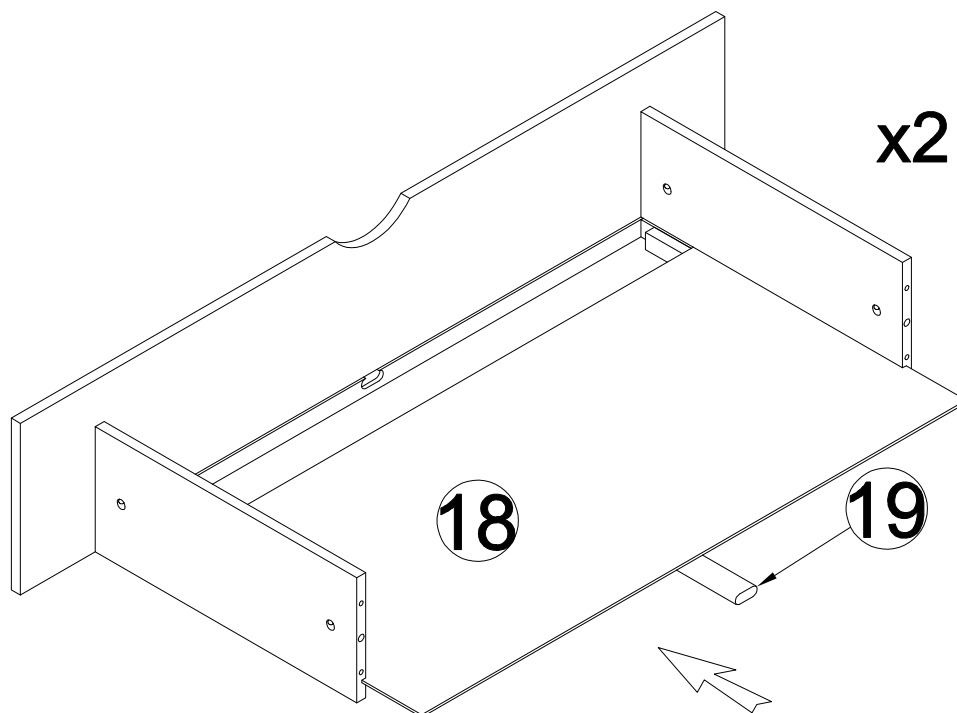STEP 5-2: Following below illustration:




Push detail 19 in first and then
push detail 18 into position


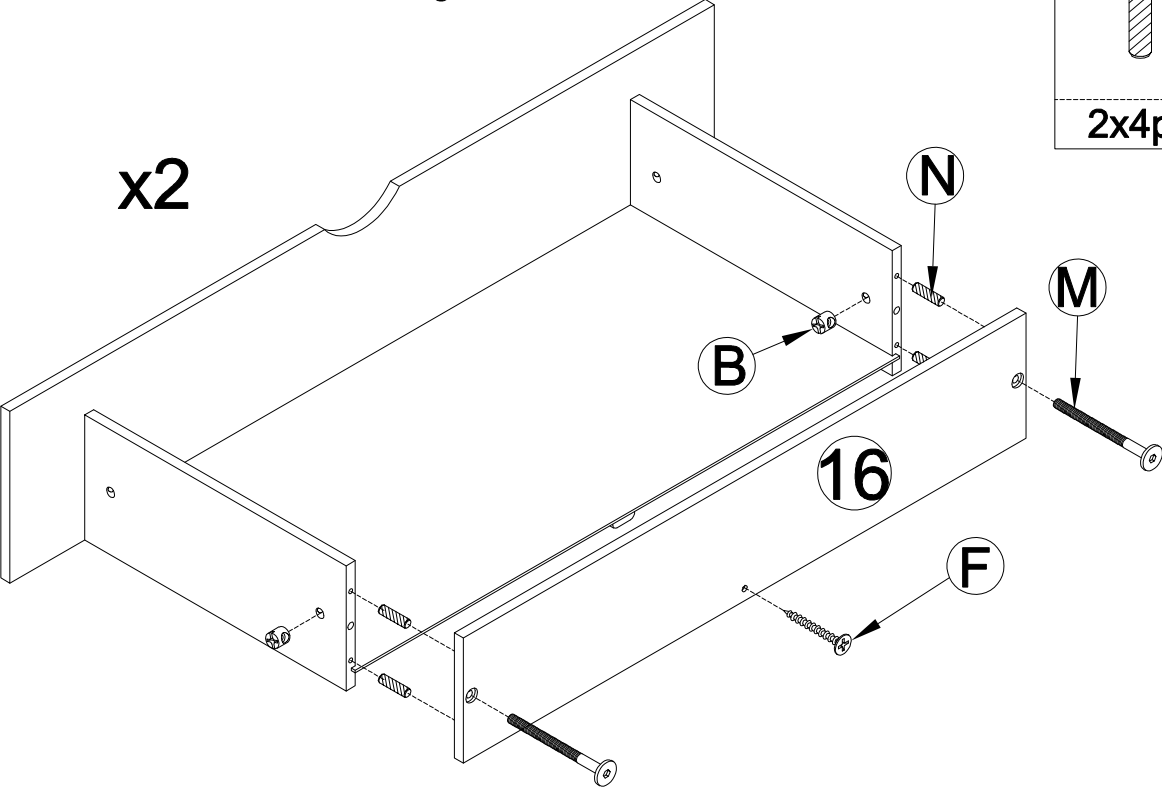
STEP 5-3: Following below illustration:



N		M	
2x4pcs		2x2pcs	
B		2x2pcs	
F		2x1pcs	

STEP 5-4: Following below illustration:

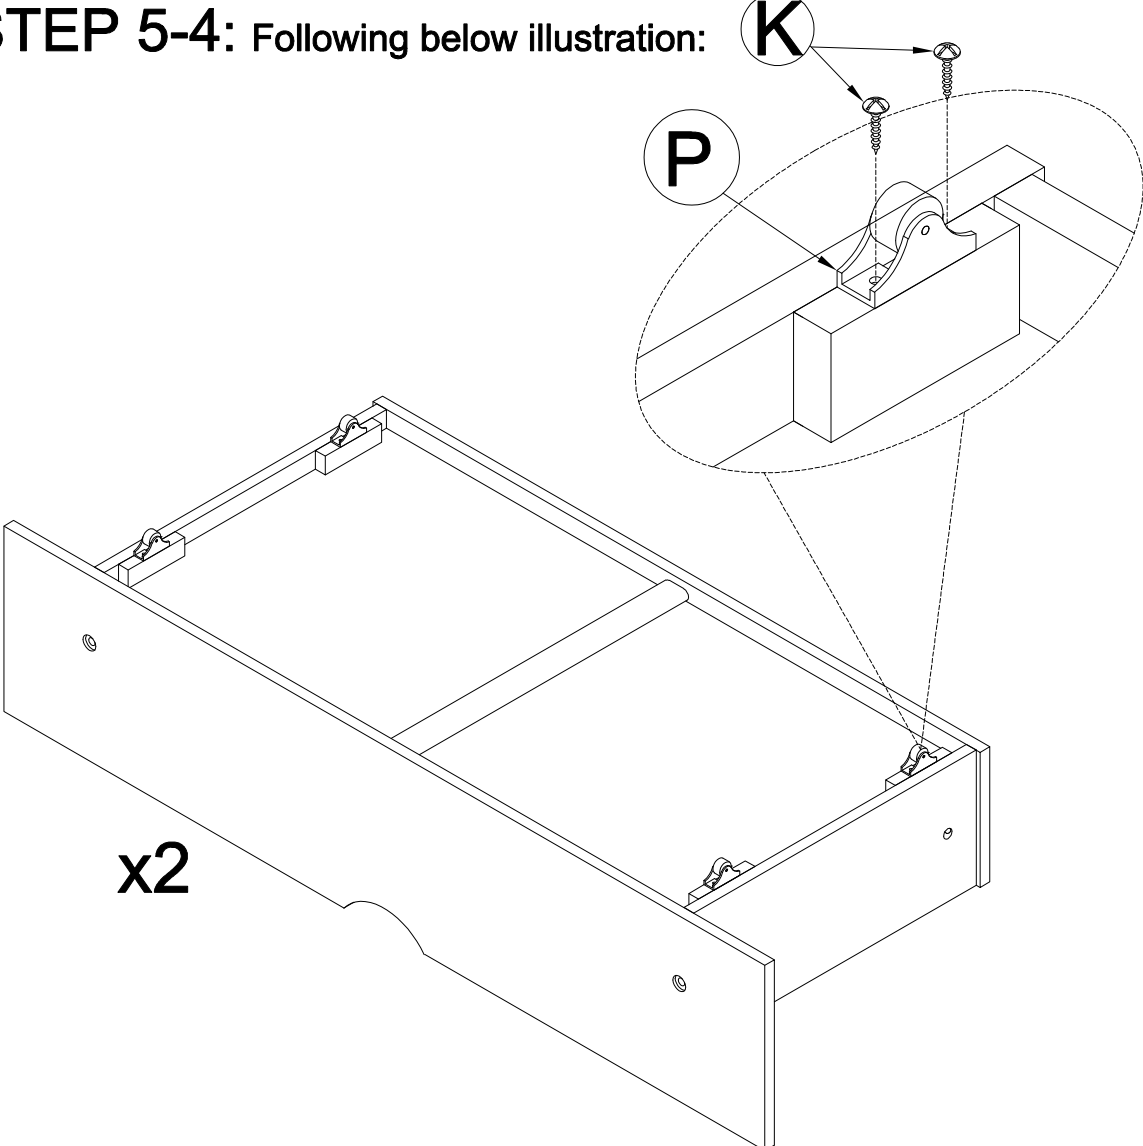

P	
2x4pcs	
K	
2x8pcs	

STEP 6: CONGRATULATION. YOU HAVE COMPLETED THE BED
Push 2 Drawers into position

