



Installation & Assembly

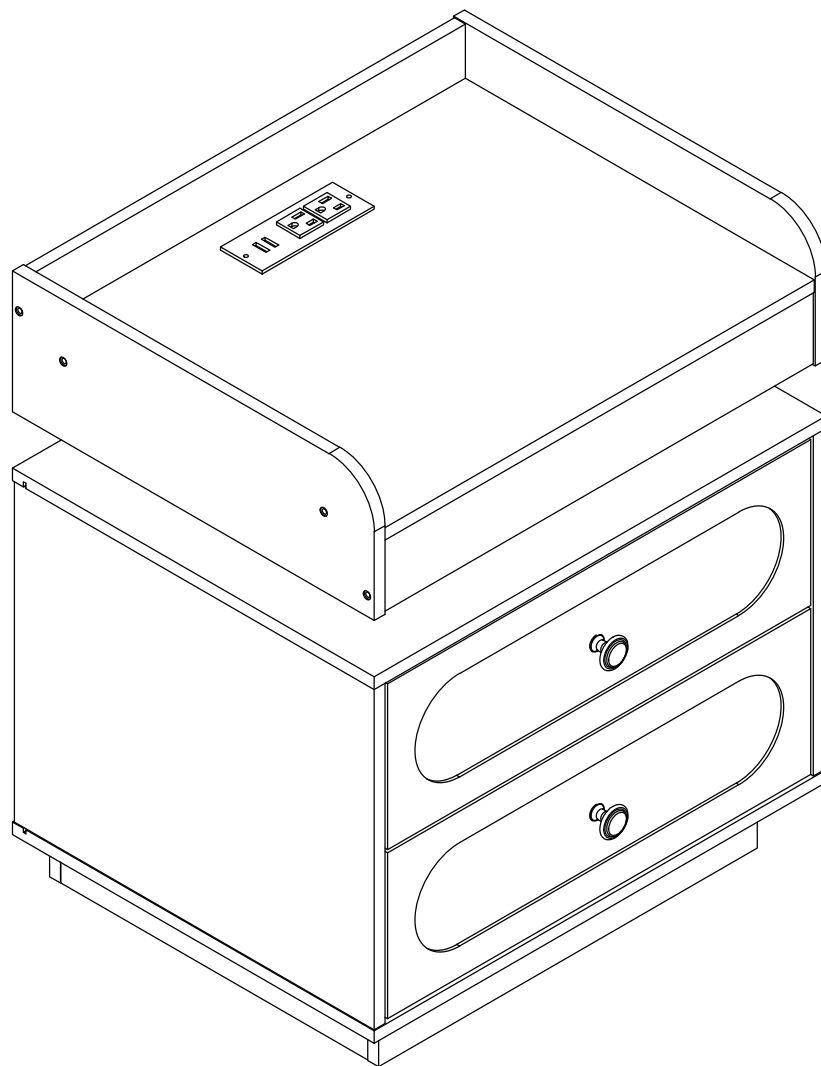

ASSEMBLY INSTRUCTIONS

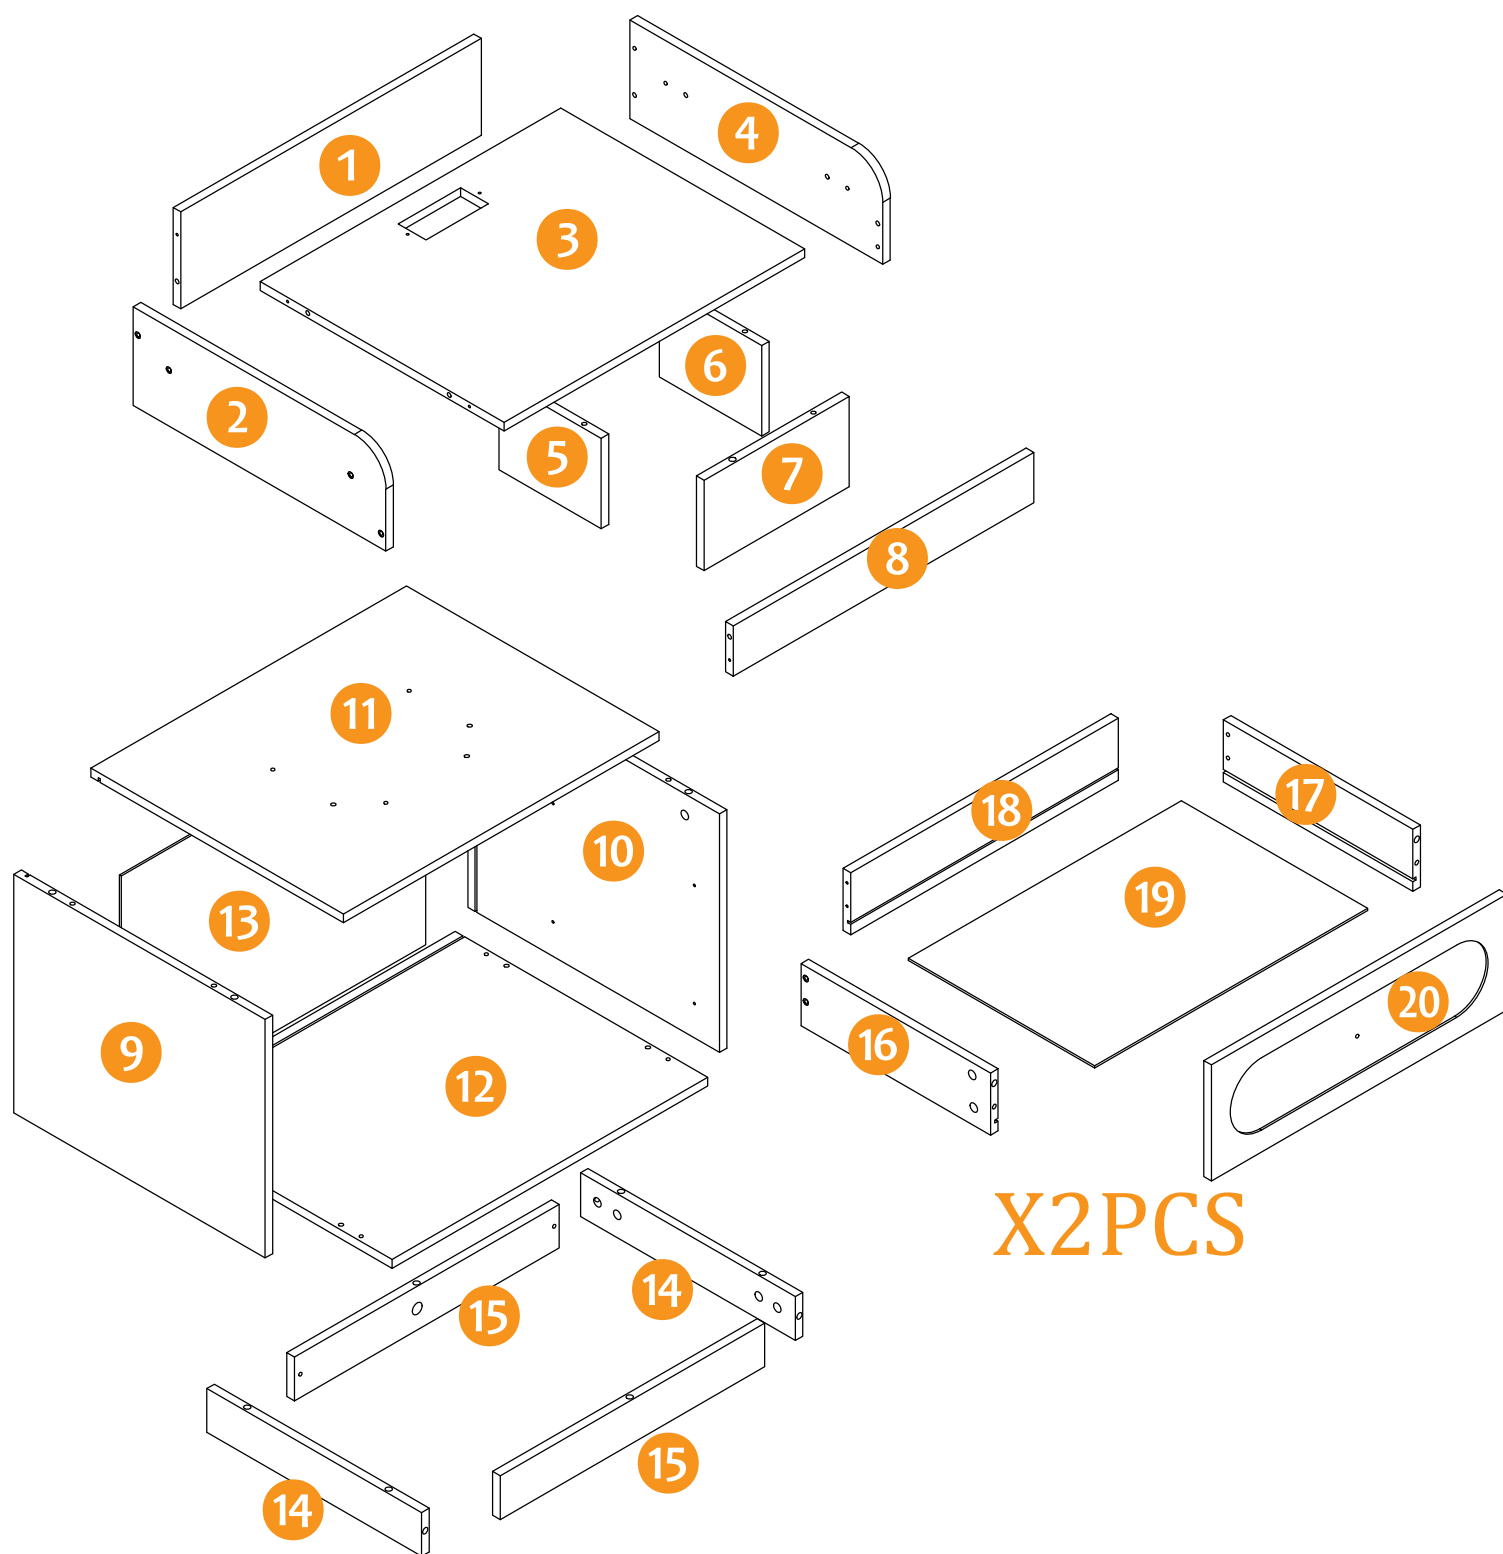

Trouble Shooting

Missing/Damaged pieces/
Wrong size and installation issues



Contact us with your problem,pic,
number and qty to the "Contact seller"
button in the detail page of your order







Respond with 24 hours to solve issue

Before You Start


1. Read through each step carefully and follow the proper order
2. Separate and count all your parts and hardware
3. Give yourself enough room for the assembly process
4. Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw

Cam Lock Fastening System

This Cam Lock Fastening System will be used throughout the assembly process

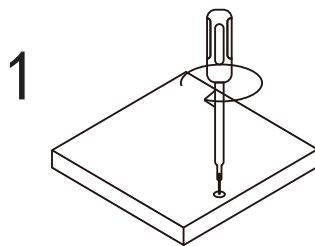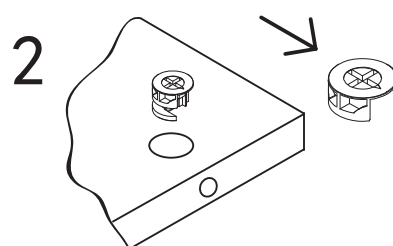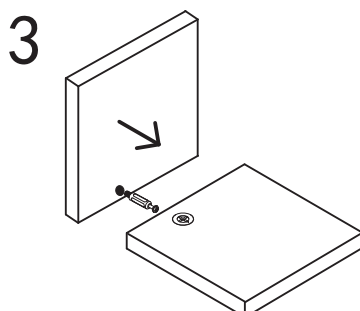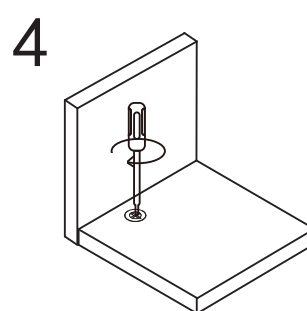


Parts List

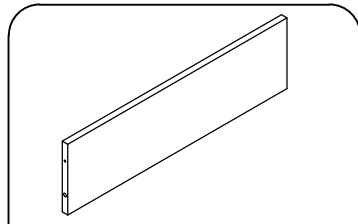


1

1PC

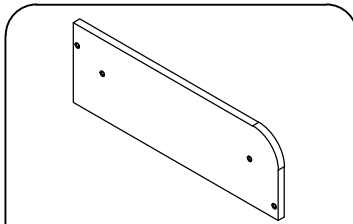


2

1PC

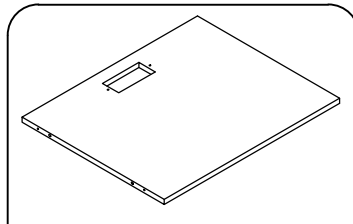


3

1PC

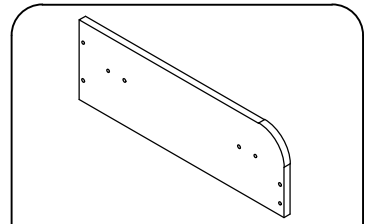


4

1PC

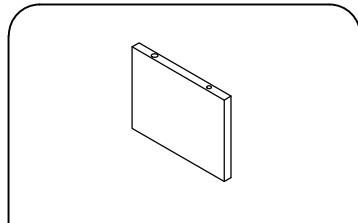


5

1PC

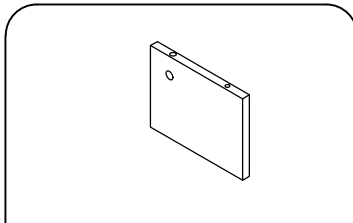


6

1PC

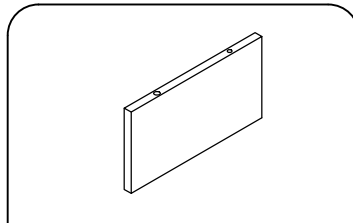


7

1PC

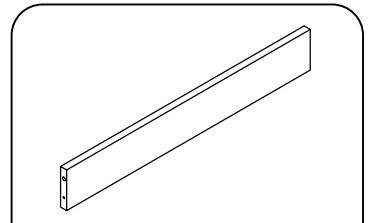


8

1PC

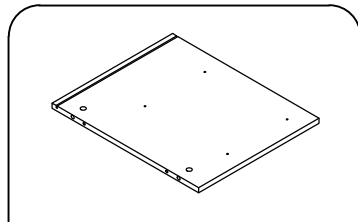


9

1PC

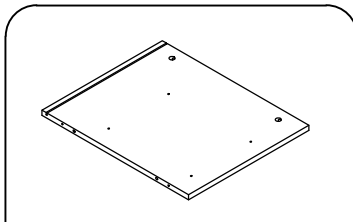


10

1PC

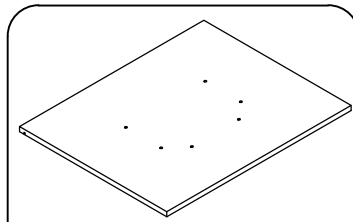


11

1PC

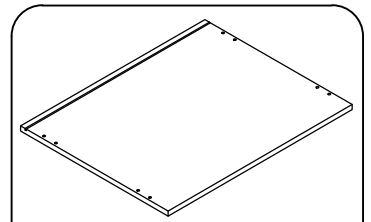


12

1PC

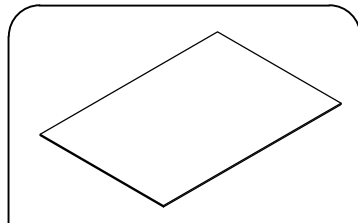


13

1PC

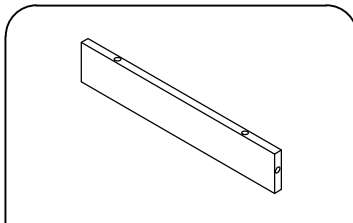


14

2PCS

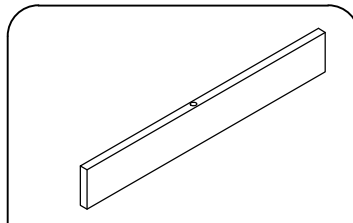


15

2PCS

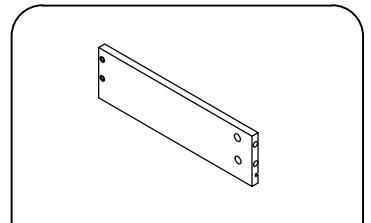


16

2PCS

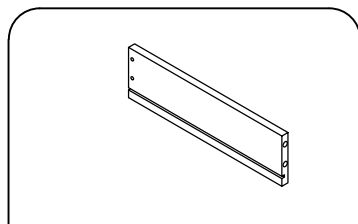


17

2PCS

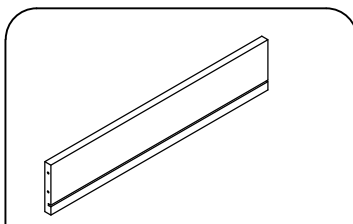


18

2PCS

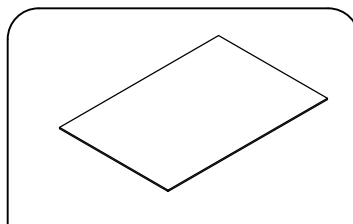

19







2PCS

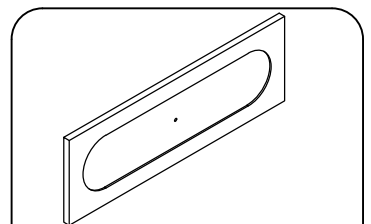














20

2PCS

Hardware List

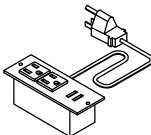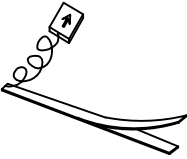	 ø12			 Ø6*30mm	 Ø4*40mm		
A	25PCS	B	25PCS	C	22PCS	D	23PCS
		 M4*16mm		 ø3*12mm			
E	2PCS	F	2PCS	G	16PCS	H	1PC
 L		 R		 L		 R	
I	2PCS	J	2PCS	K	2PCS	L	2PCS
		 ø3*14mm		 ø3*14mm		Hole Patch 	
M	4PCS	N	4PCS	O	2PCS	P	8PCS
							
Q	1PC						

STEP 1

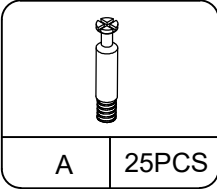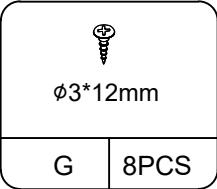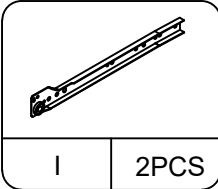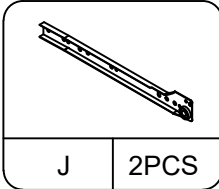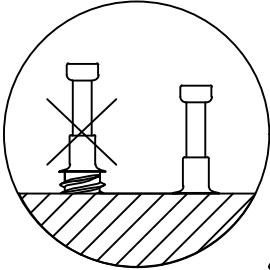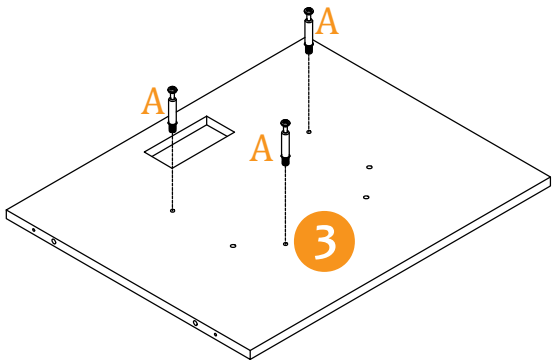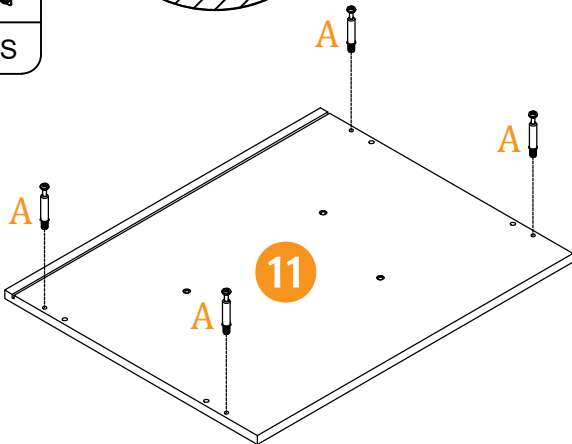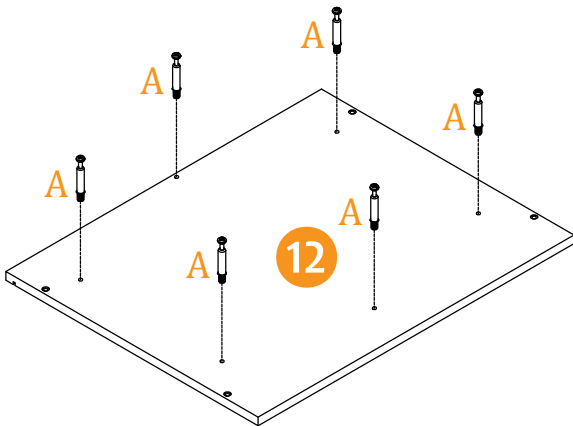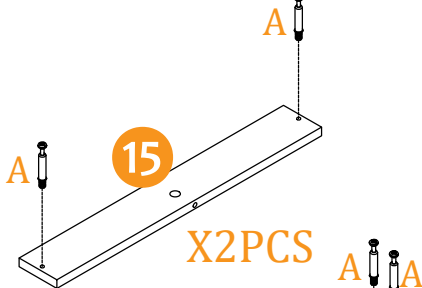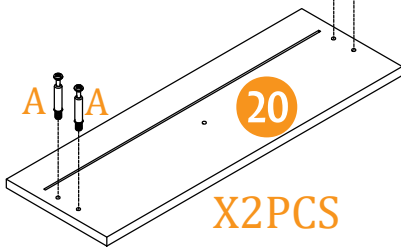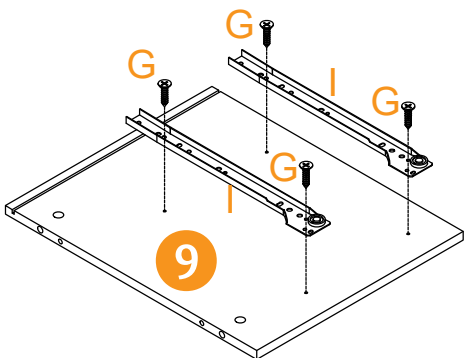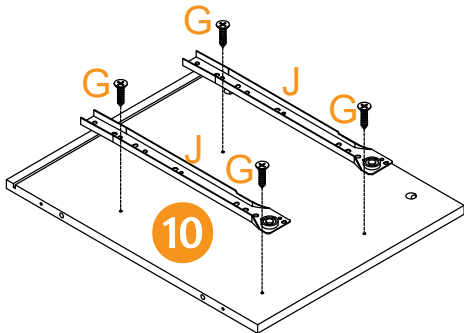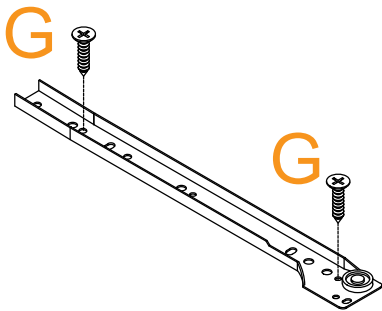

STEP 2




Ø12

B	3PCS
---	------



Ø6*30mm

C	3PCS
---	------

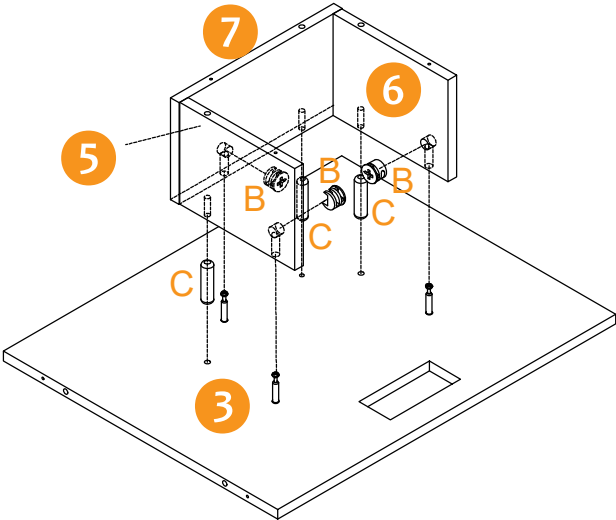


STEP3



Ø12

B	4PCS
---	------

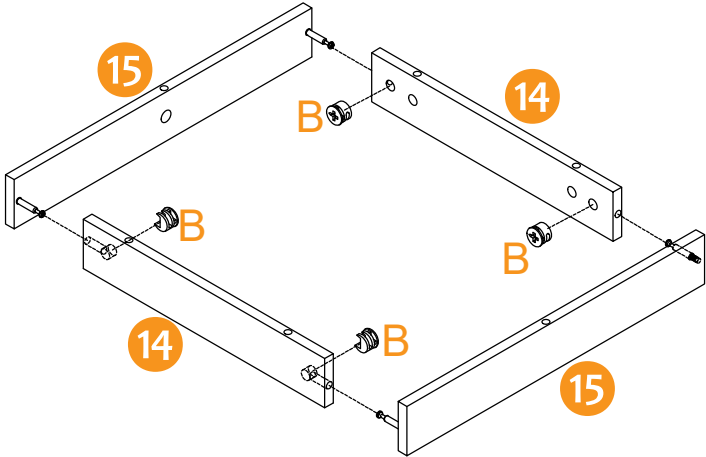

STEP 4




Ø6*30mm

C	8PCS
---	------



Ø4*40mm

D	8PCS
---	------

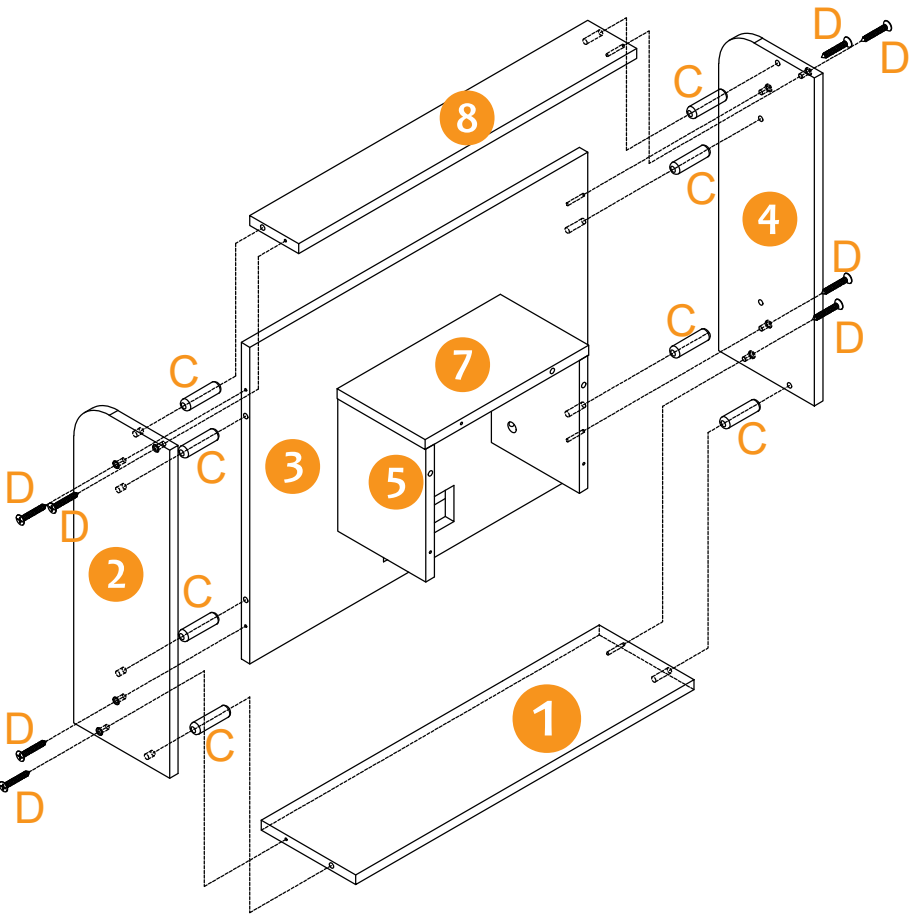

STEP 5




Ø6*30mm

C	3PCS
---	------




Ø4*40mm

D	3PCS
---	------

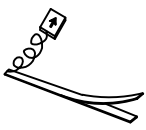

Q

Q	1PC
---	-----

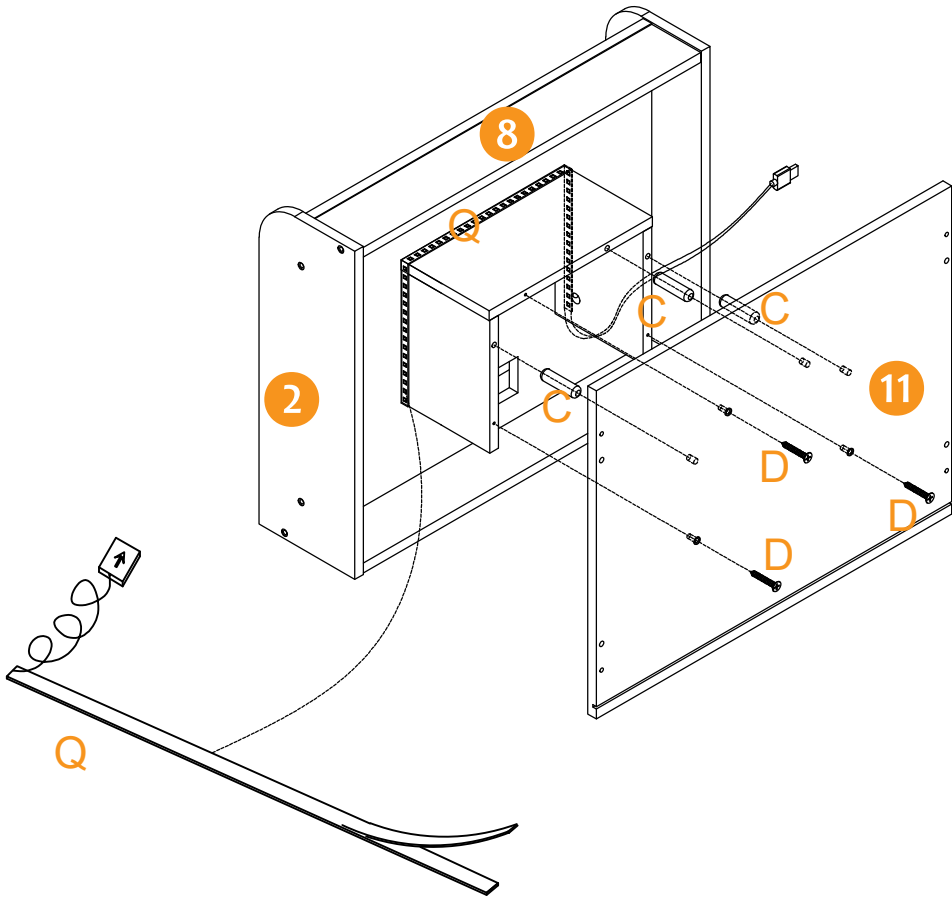

STEP 6




Ø6*30mm

C	4PCS
---	------




Ø4*40mm

D	4PCS
---	------

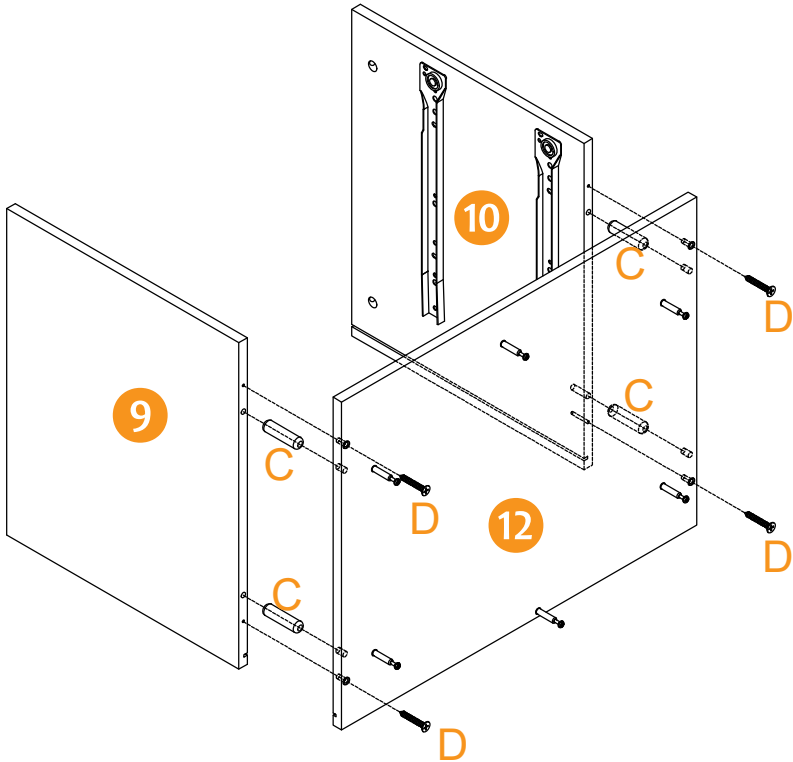

B	6PCS

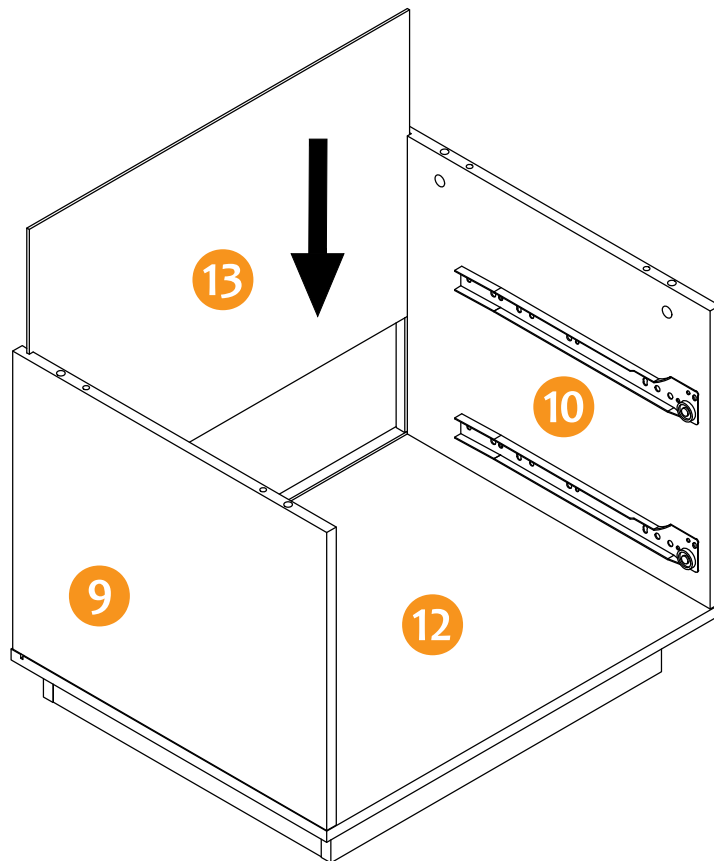

STEP 9




Ø12

B	4PCS
---	------



Ø6*30mm

C	4PCS
---	------

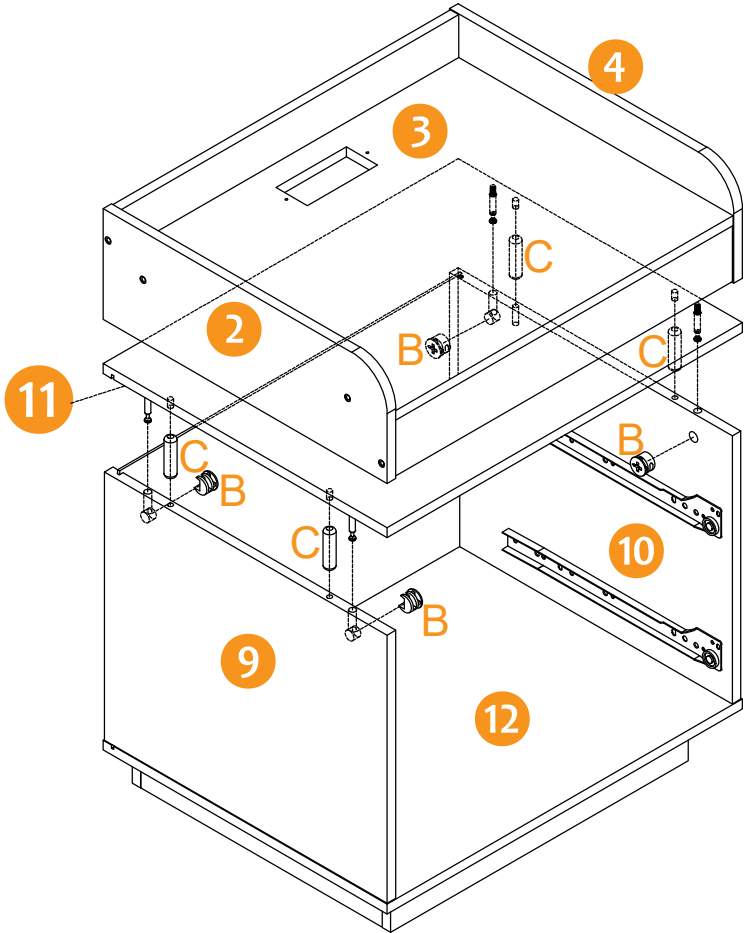


STEP 10




Ø4*40mm

D	8PCS
---	------

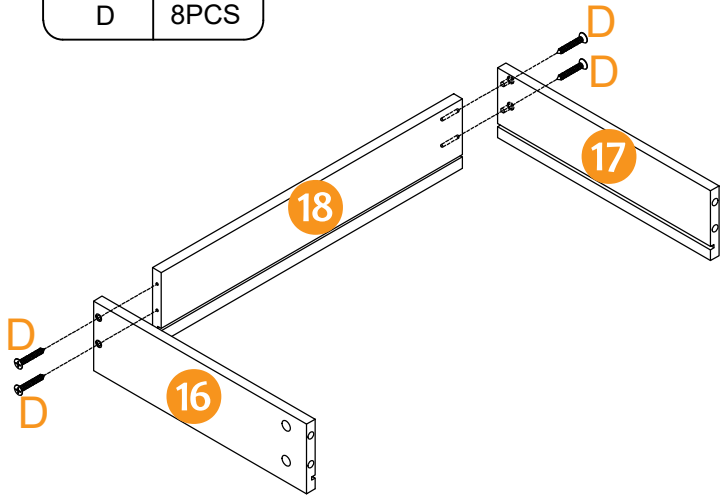

X2PCS

STEP 11

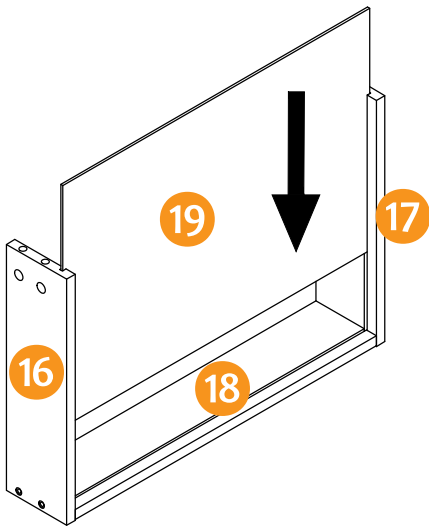

X2PCS

STEP 12



Ø12

B	8PCS
---	------




E	2PCS
---	------



M4*16mm

F	2PCS
---	------

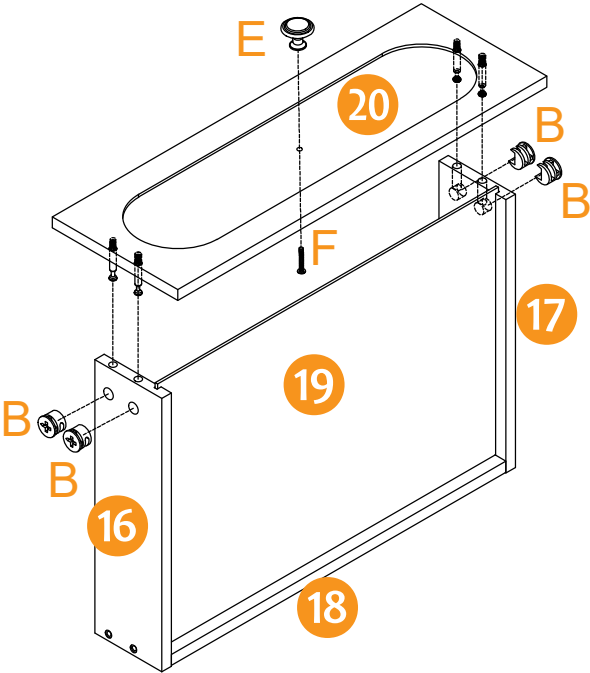

X2PCS

STEP 13



Ø3*12mm

G	8PCS
---	------




L

K	2PCS
---	------



R

L	2PCS
---	------

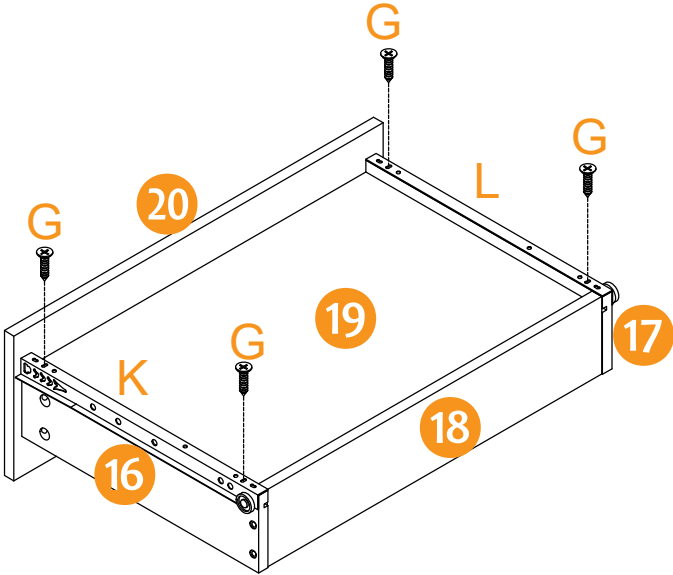

X2PCS

STEP 14




M	4PCS
---	------




Ø3*14mm

N	4PCS
---	------



H	1PC
---	-----

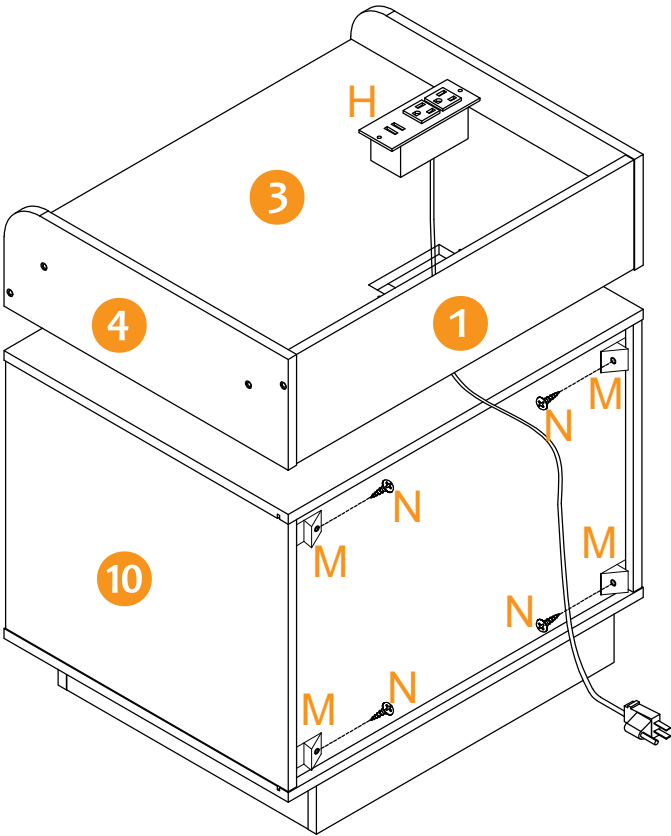

STEP 15



Ø3*14mm

O	2PCS
---	------

Hole Patch



P	8PCS
---	------

