

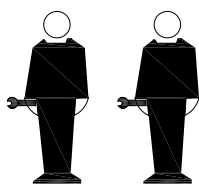



Installation & Assembly

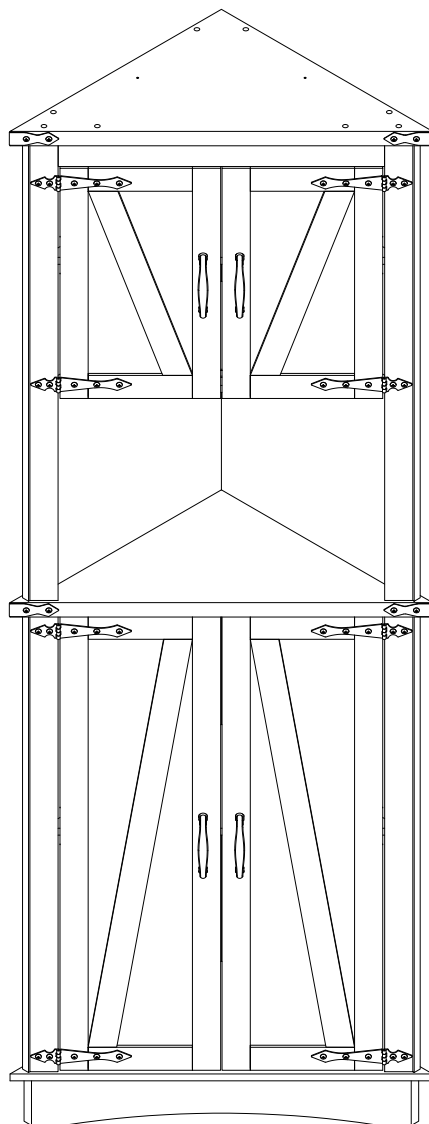

For convenience and safety, we recommend two people to assemble.
If you have any questions, please contact our customer service.

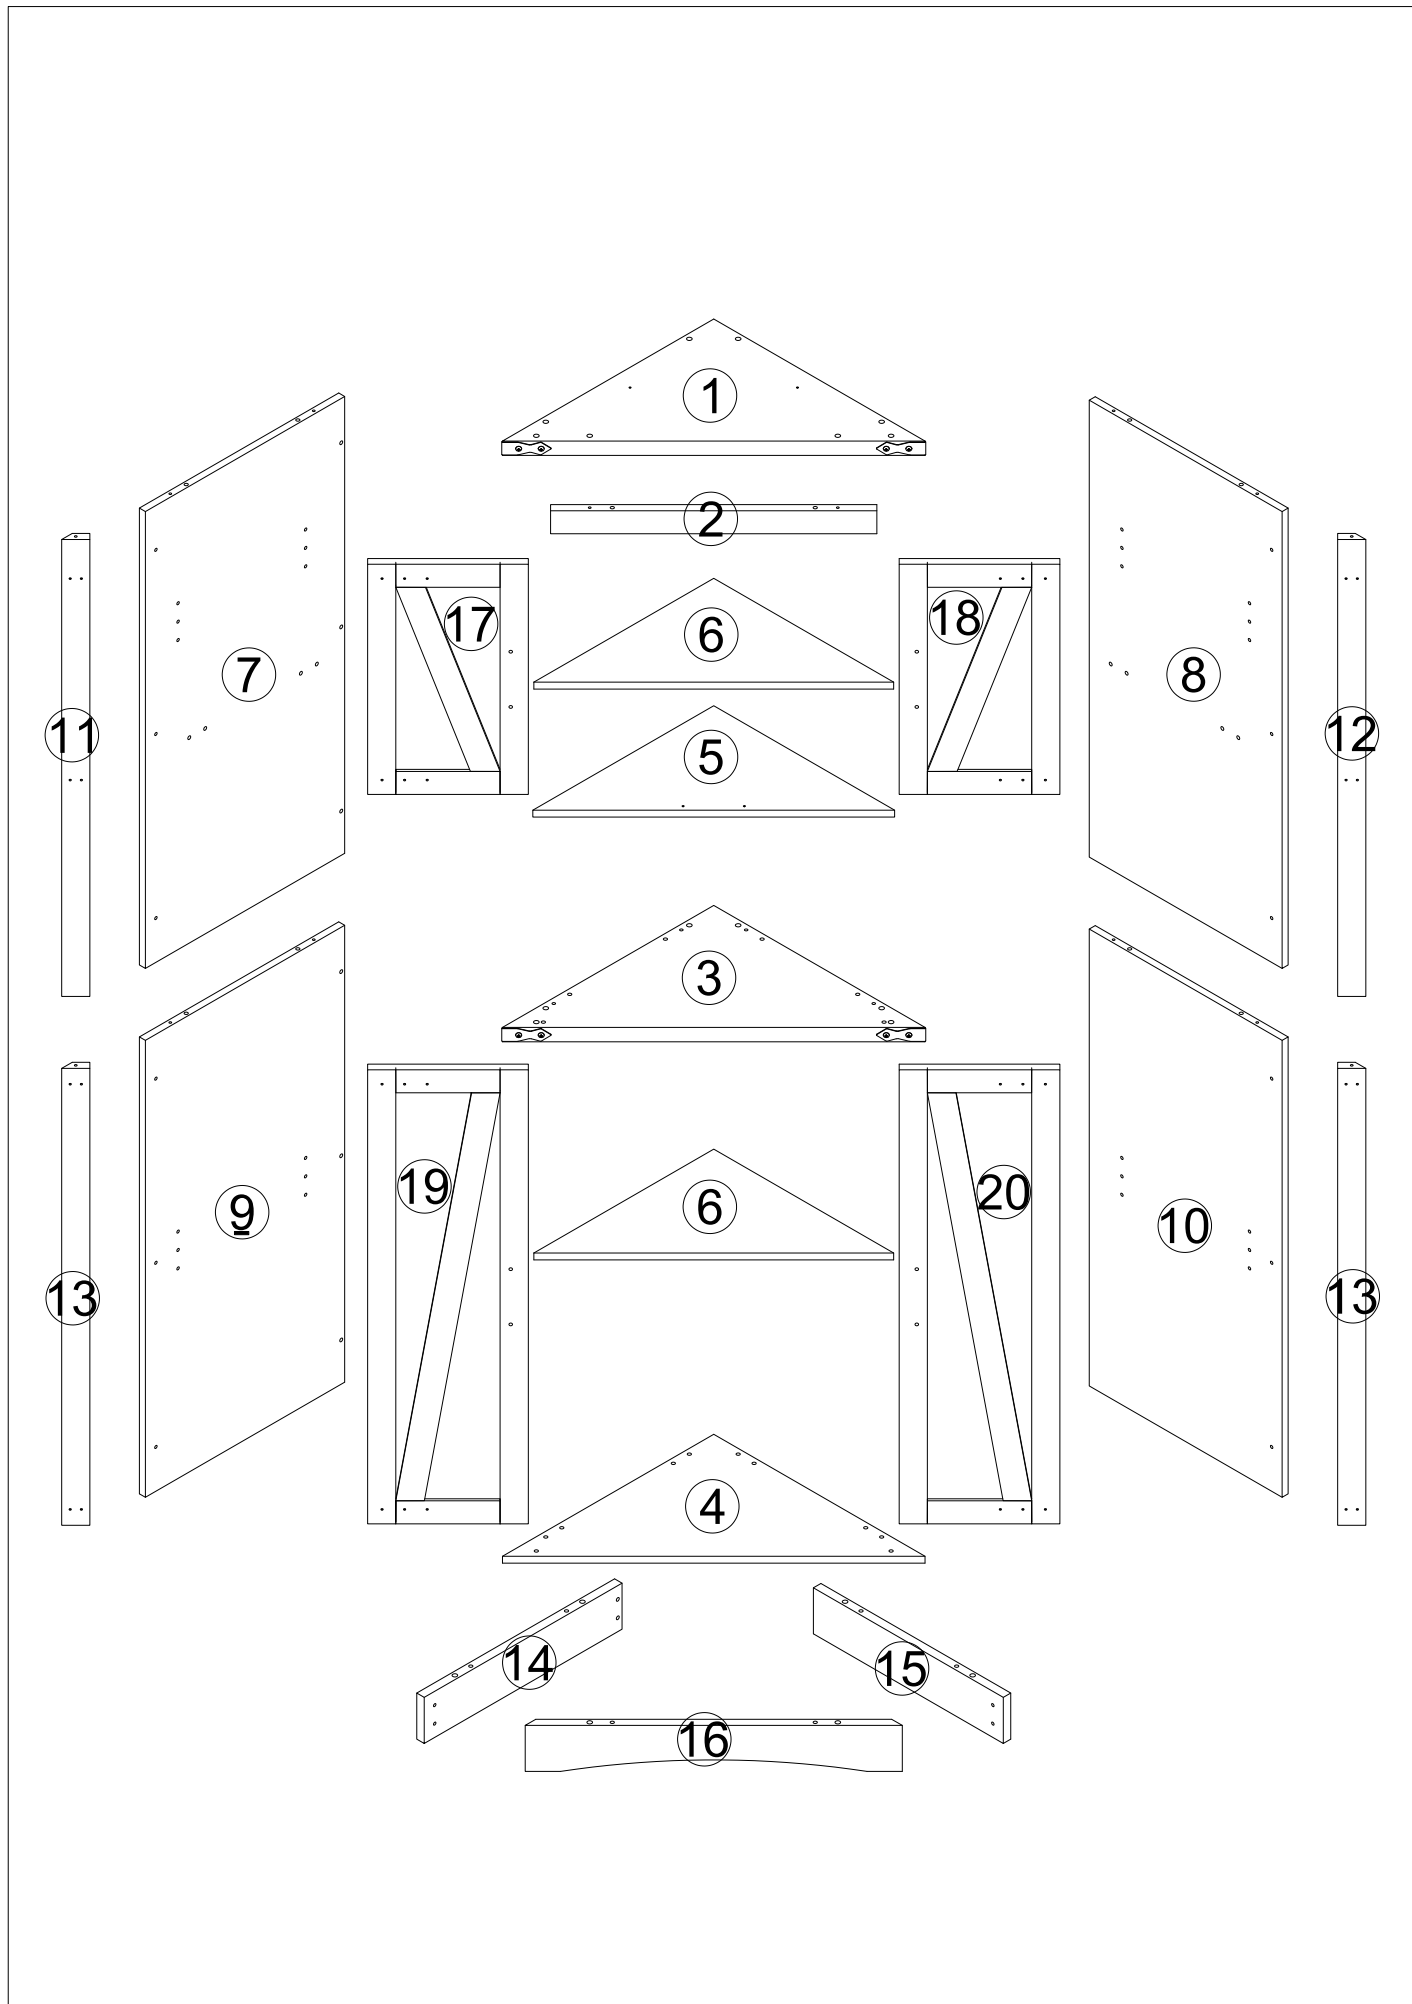


PARTS LIST




①X1




②X1




③X1




④X1




⑤X1



⑥X2



⑦X1



⑧X1



⑨X1




⑩X1




⑪X1




⑫X1




⑬X2




⑭X1




⑮X1




⑯X1




⑰X1




⑱X1




⑲X1



⑳X1

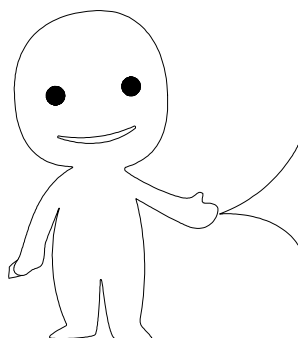

Please prepare the following tools

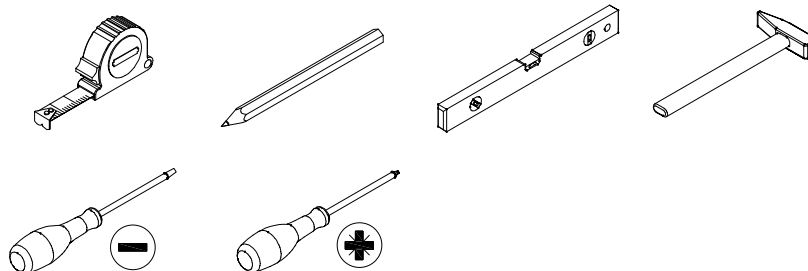

A x 10+2 Ø15 x 9.5 mm	B x 10+2 	C x 10+2 	D x 32+2 Ø6 x30 mm
E x 32+2 Ø5 x40 mm	F x 8 	G x 40+2 Ø3.5 x 12	H x 4
I x 8+2 M4 x 18	J x 8+2 Ø5 x 15	K x 2 K1 K2	L x 4+1 Ø3 x 12
M x 4+1 Ø3 x 16	N x 16+2 Ø3.5 x 25	O x 2 O1 O2 O3 O4 Ø4 x 15 Ø4 x 40	P x 4+1
 +2 SPARE BAG			



Tips: The number after "+" represents the spare hardware.

IMPORTANT NOTES:




The item you are purchasing is a large furniture product that requires a large number of components to assemble.

Please take all parts boxes out of the packaging and place them in order. So that you can follow the steps in the installation manual to find the corresponding parts box and quantity of need when installing. Please do not take too many parts to prevent the parts from scattering.



Please be patient and follow the instructions step by step for installation. If you have any problems during the installation process, you can ask our customer service to help you solve them!





SAFETY TIPS:

Static charge may cause dust on foam – clean with a dry or damp cloth.
Small foam strands may be present – handle gently and dispose of properly.
Do not burn or incinerate. Check local recycling guidelines.

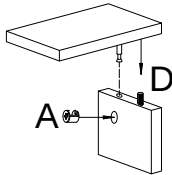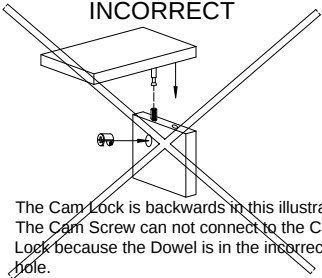Cam Lock/Dowel Placement Supplement		
CORRECT 1  When inserting the Cam lock, make sure that the open End of the cam Lock faces the Cam Screw Entry. The Dowel will be inserted in the hole NEXT to the Cam Lock/Cam Screw hole.	INCORRECT 2  The Cam Lock is backwards in this illustration. The Cam Screw can not connect to the Cam Lock because the Dowel is in the incorrect hole.	3  To tighten, turn the Cam Lock CLOCKWISE until the arrow or "△" signs point AWAY from the connected Panel. *NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS, DO NOT OVER-TIGHTEN.


1

B x 10 	K1 x 2 	M x 4 	
--	--	---	--

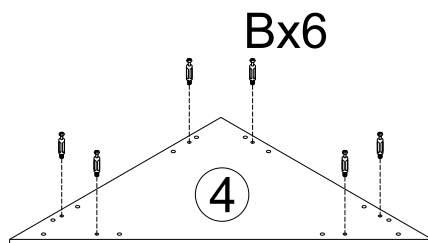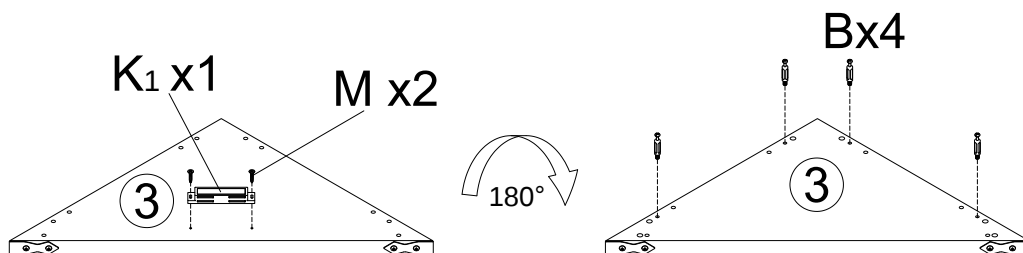
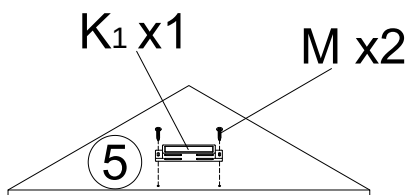
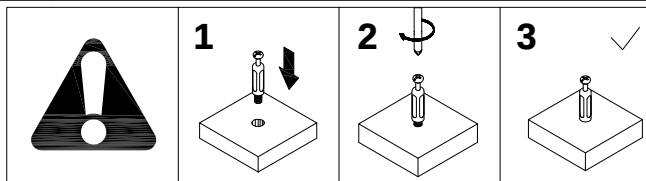


2


D x 4



E x 7

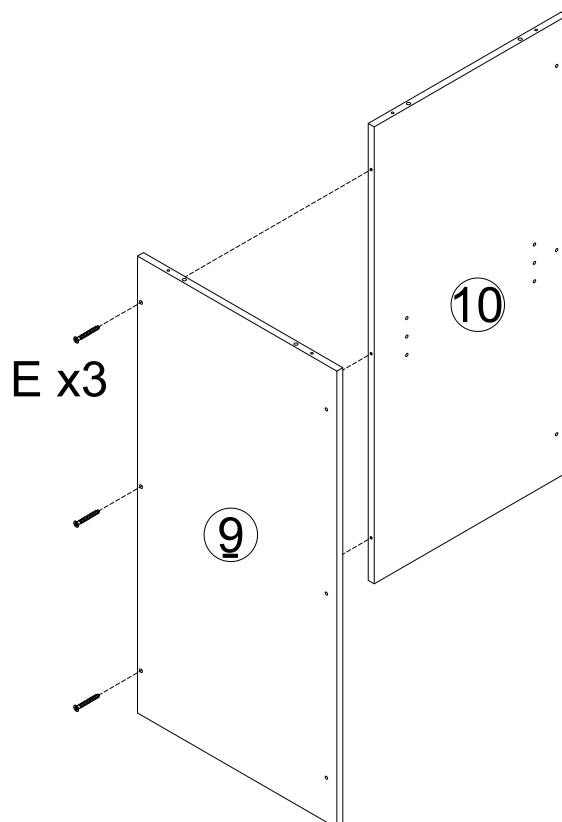
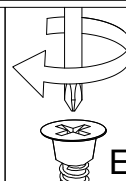



Align the screw with the pilot hole and then tighten it.

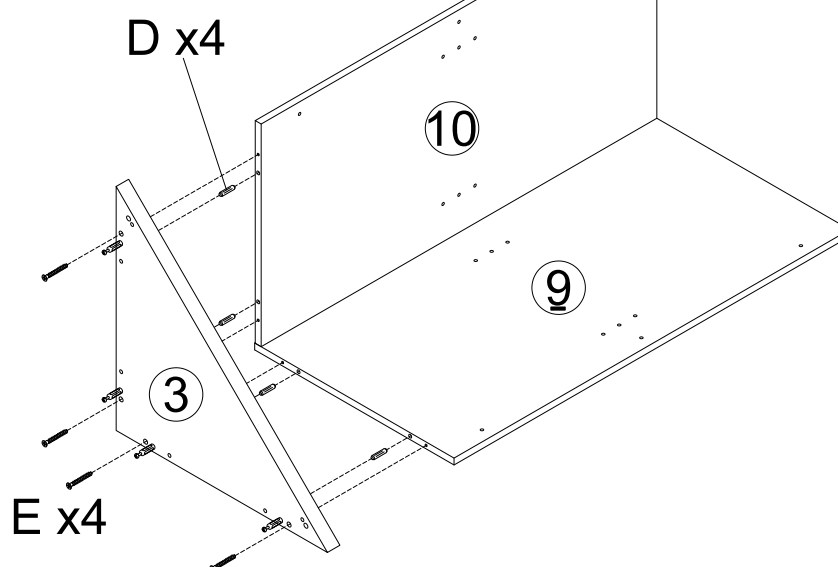


3

E x 2

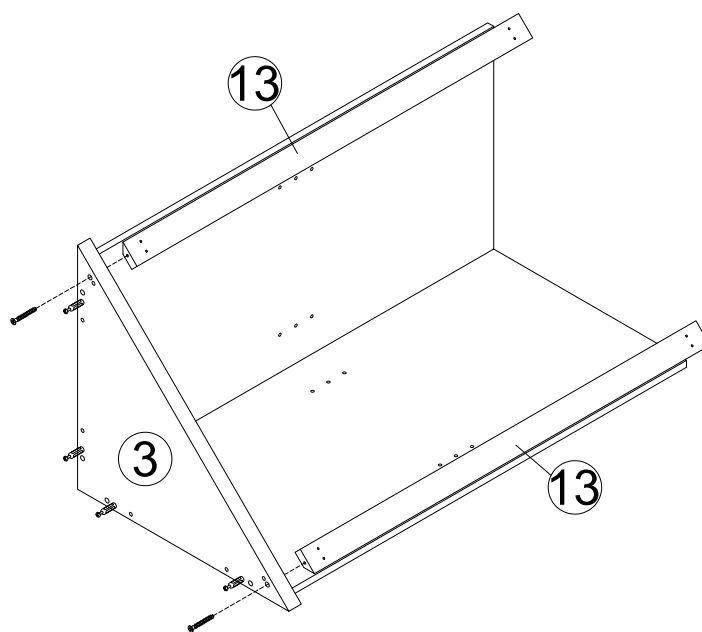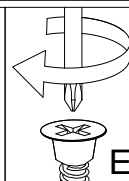


E x 2

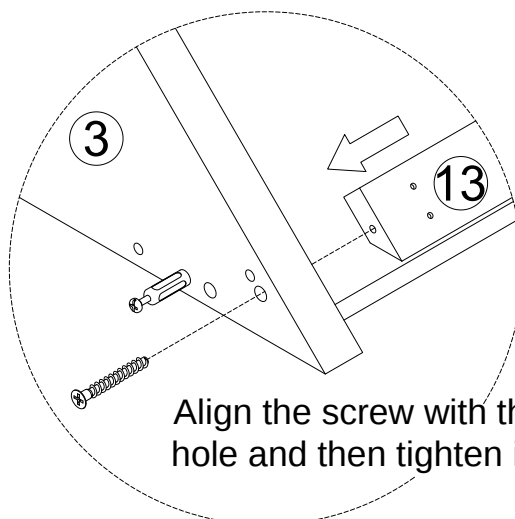




Align the screw with the pilot hole and then tighten it.

4

D x 4




E x 6

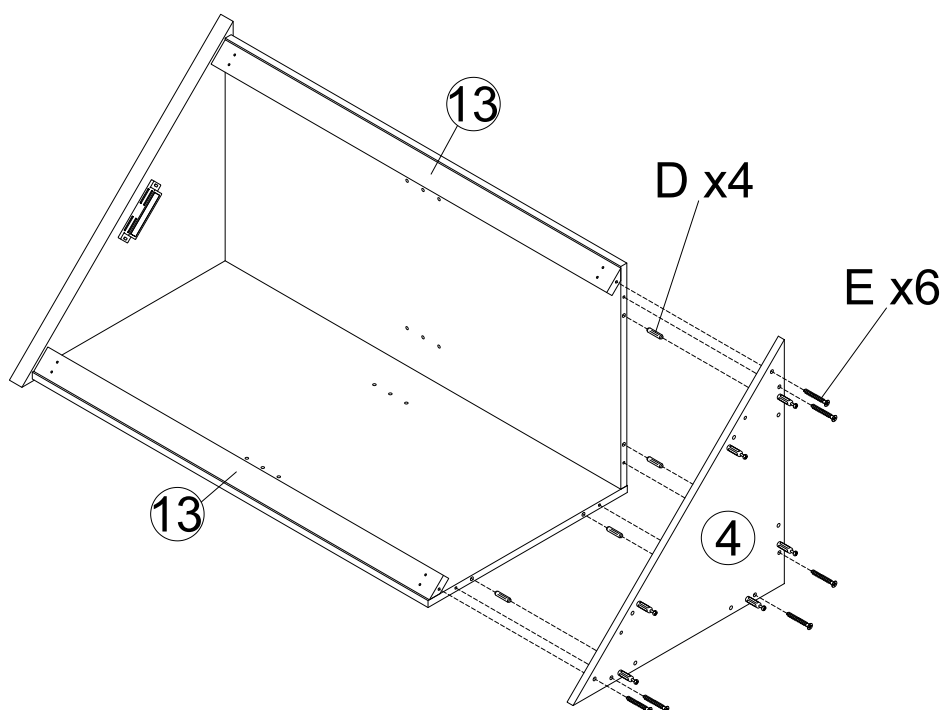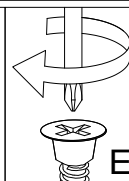



Align the screw with the pilot hole and then tighten it.

5


E x 2



N x 4

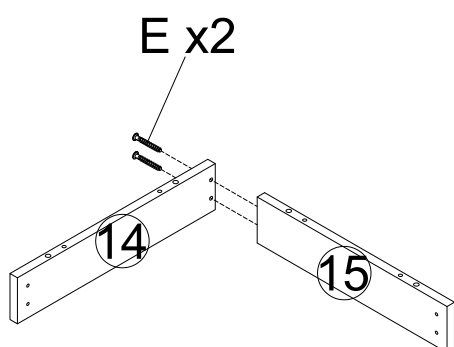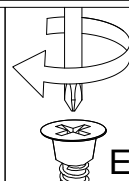


Align the screw with the pilot hole and then tighten it.

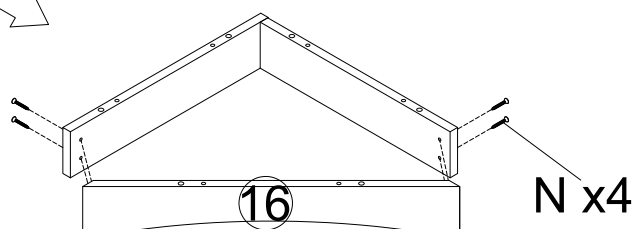




A x 6




D x 6




C x 6





P x 4



****Regarding the installation steps of Hardware A, refer to page 5.****

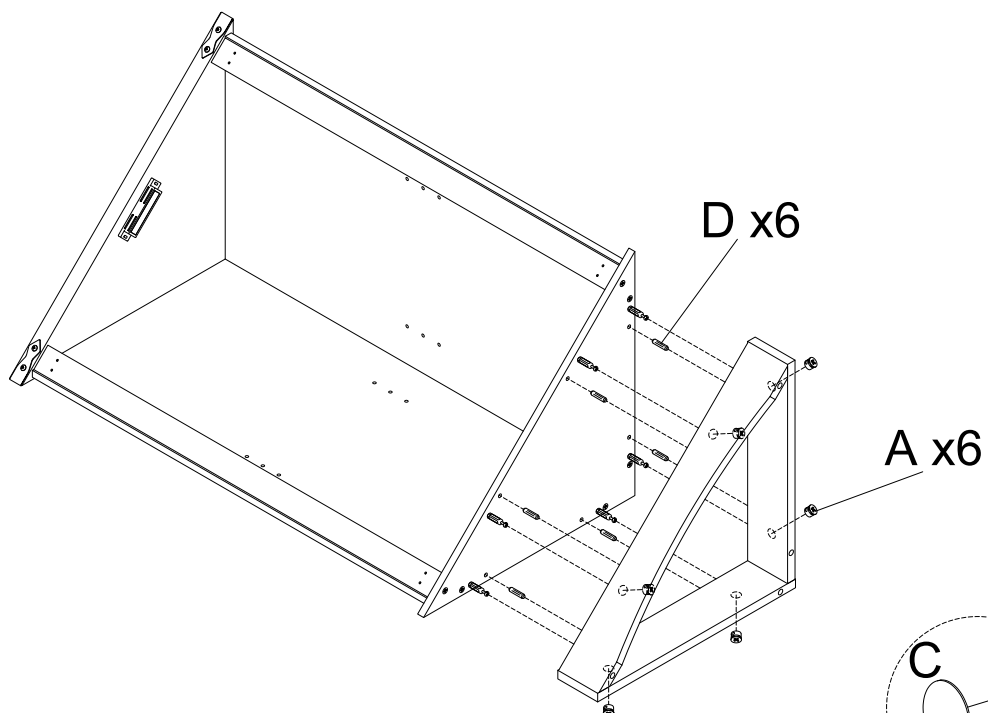


Tighten the three in one and apply the sticker (C) to the hole.

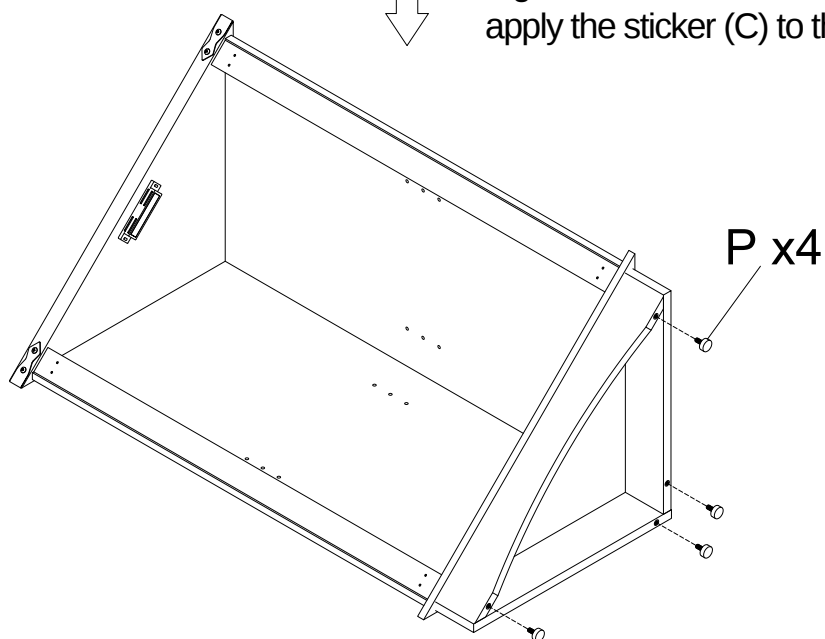
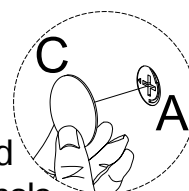


7



D x 4



E x 7

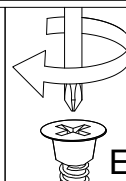


E


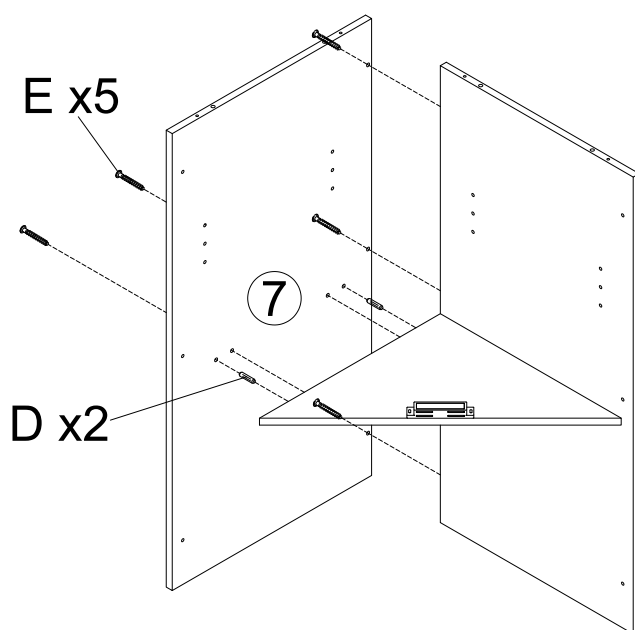
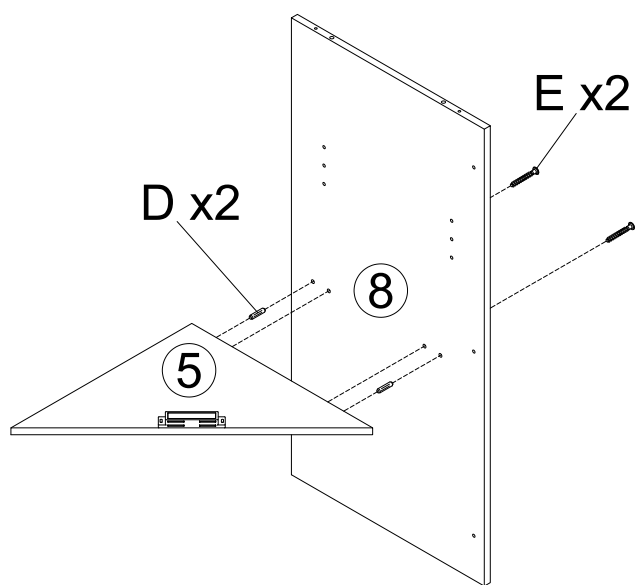





D x 8



E x 8

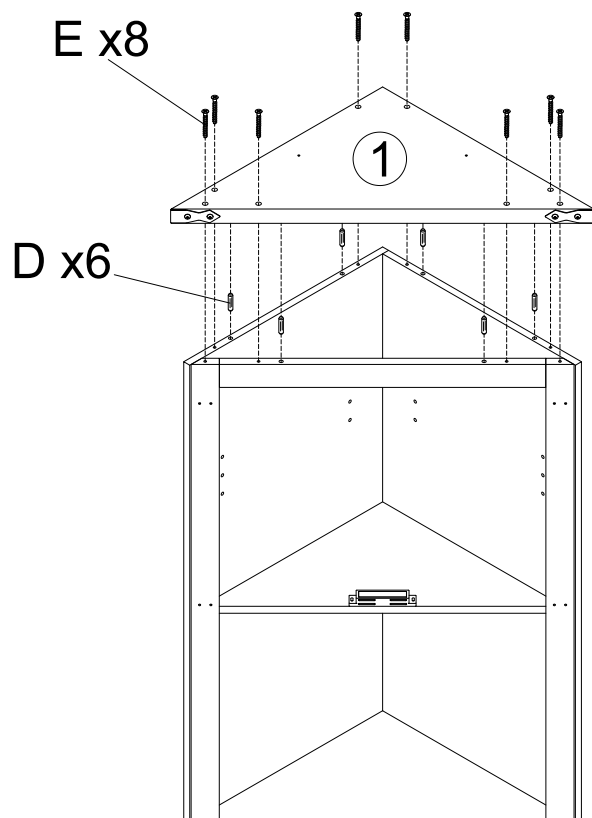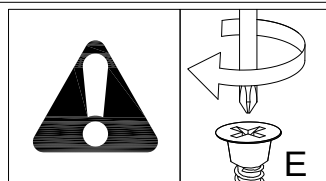


First, install components No. 2, 11, and 12. Then, place them against components No. 7 and 8. Finally, install component No. 1.

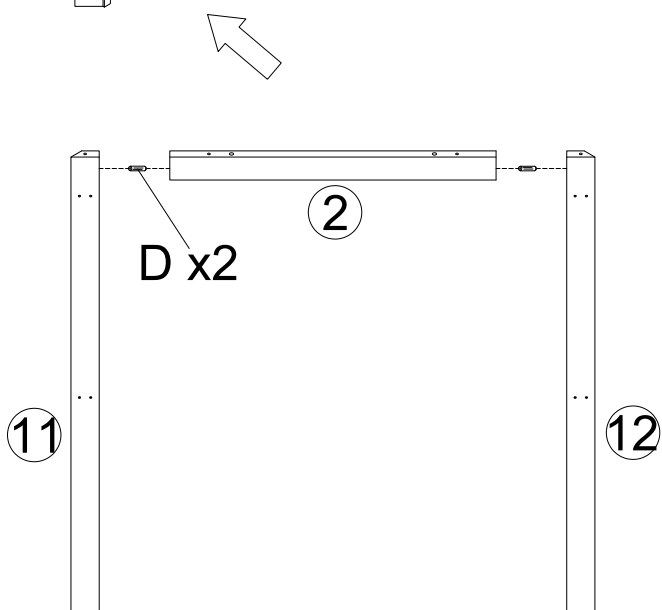





A x 4





D x 6



C x 4

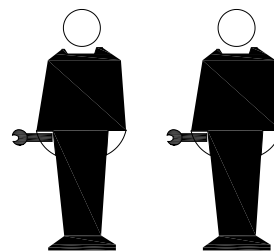

This step requires two people to complete

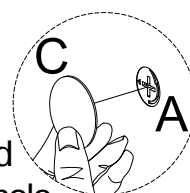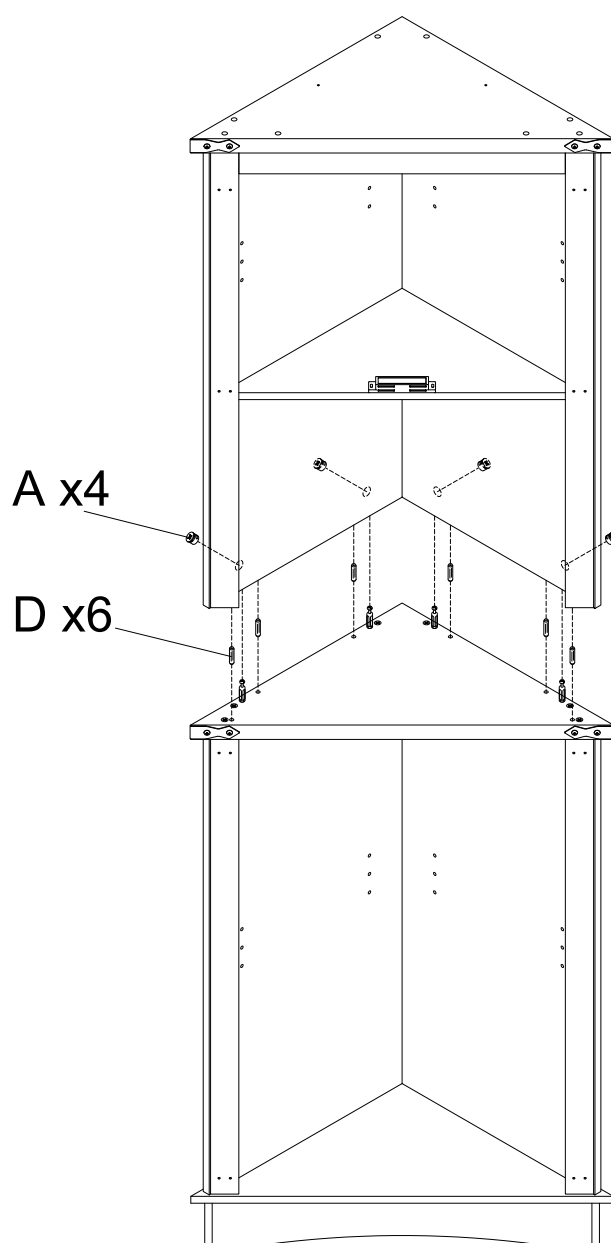



Tighten the three in one and apply the sticker (C) to the hole.

10

N x 12




Use your hands to press the sticker strip and the side plate firmly, align the screws with the pilot holes and then tighten them.

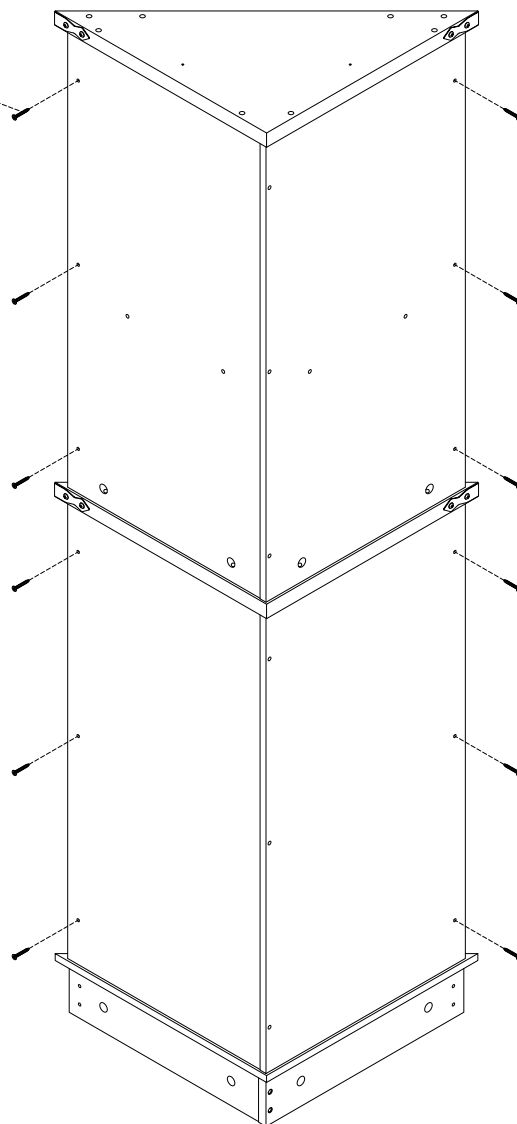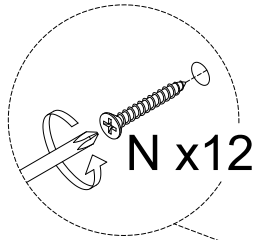


Back

1 1


J x 8

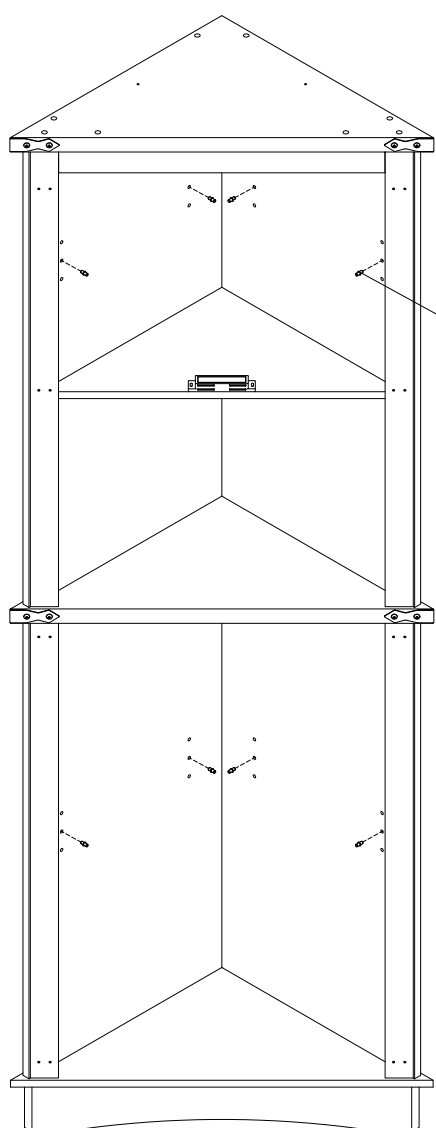


J x 8



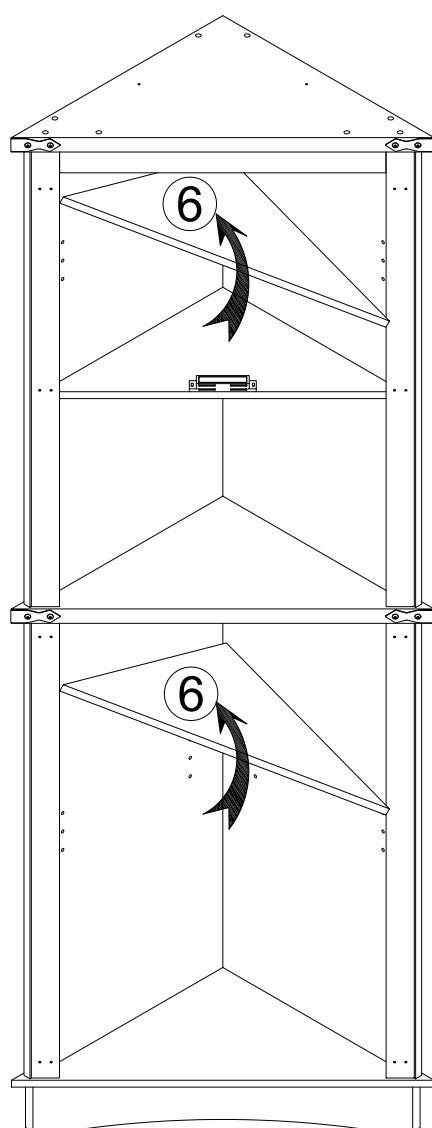


12

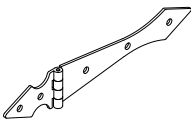
F x 8	G x 40	H x 4	I x 8	K2 x 4	L x 4
					

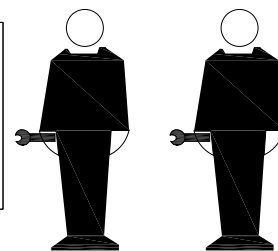


This step requires two people to complete

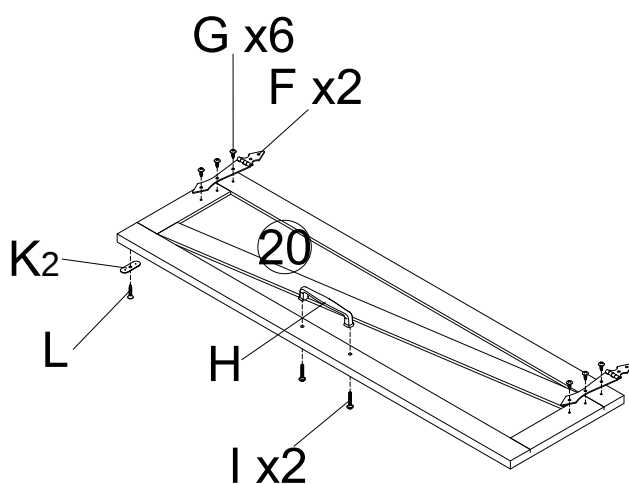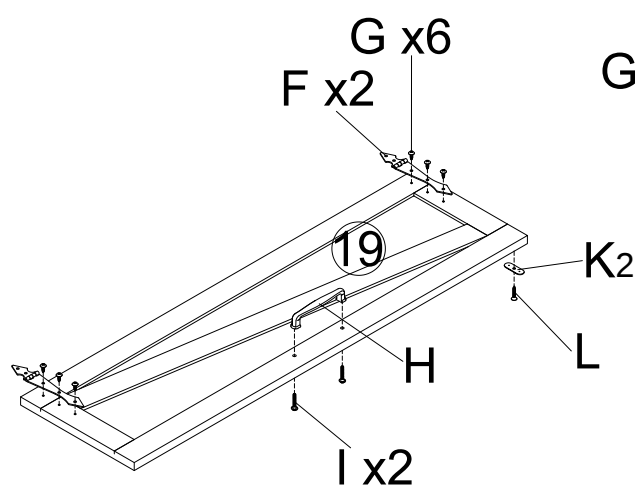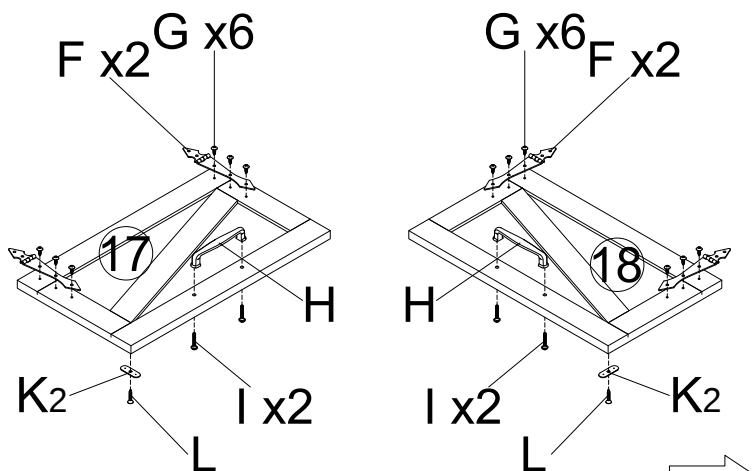

G x16


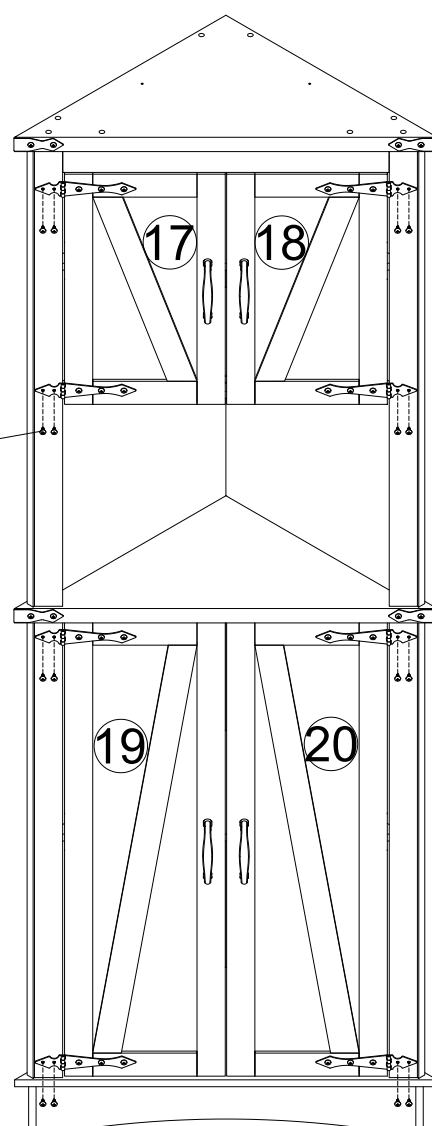


13

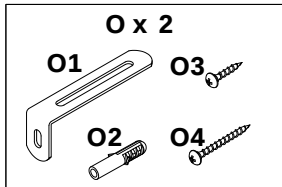

Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

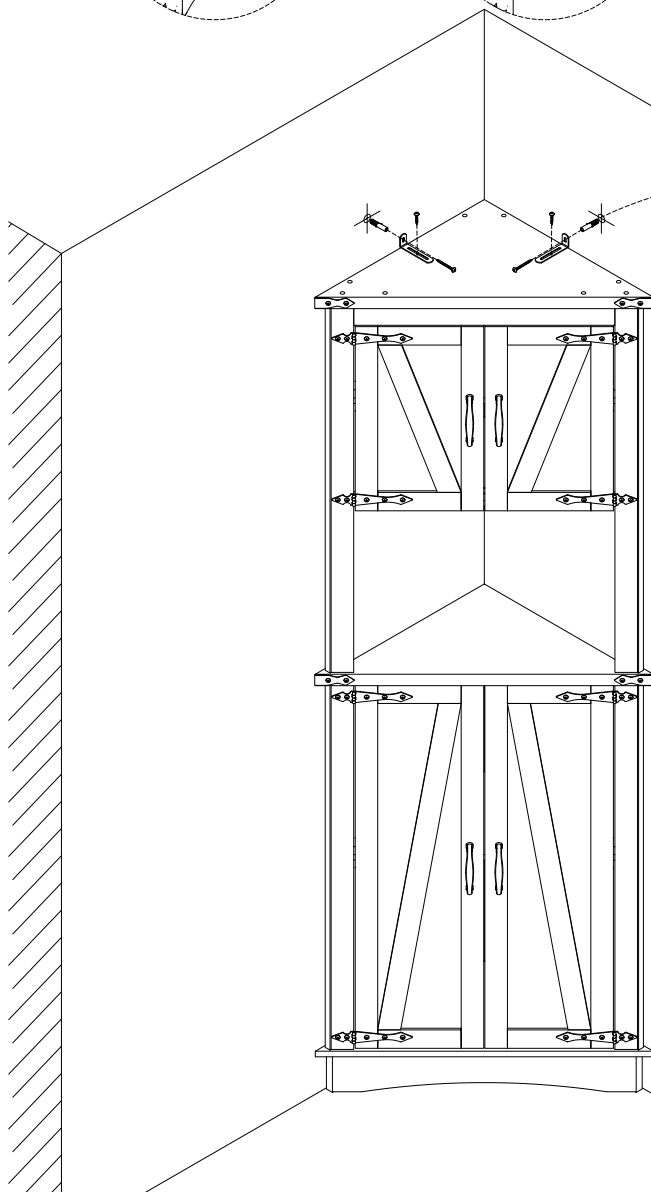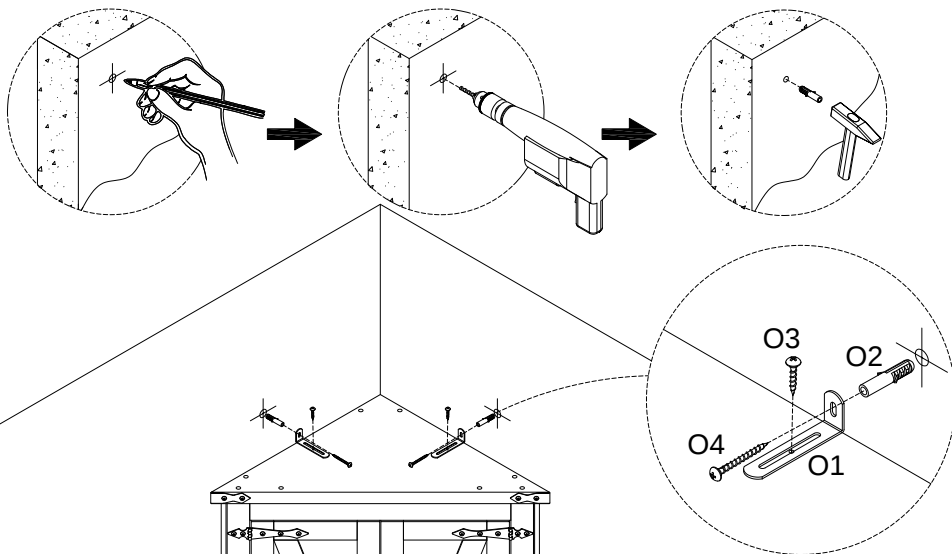

Final Assembly