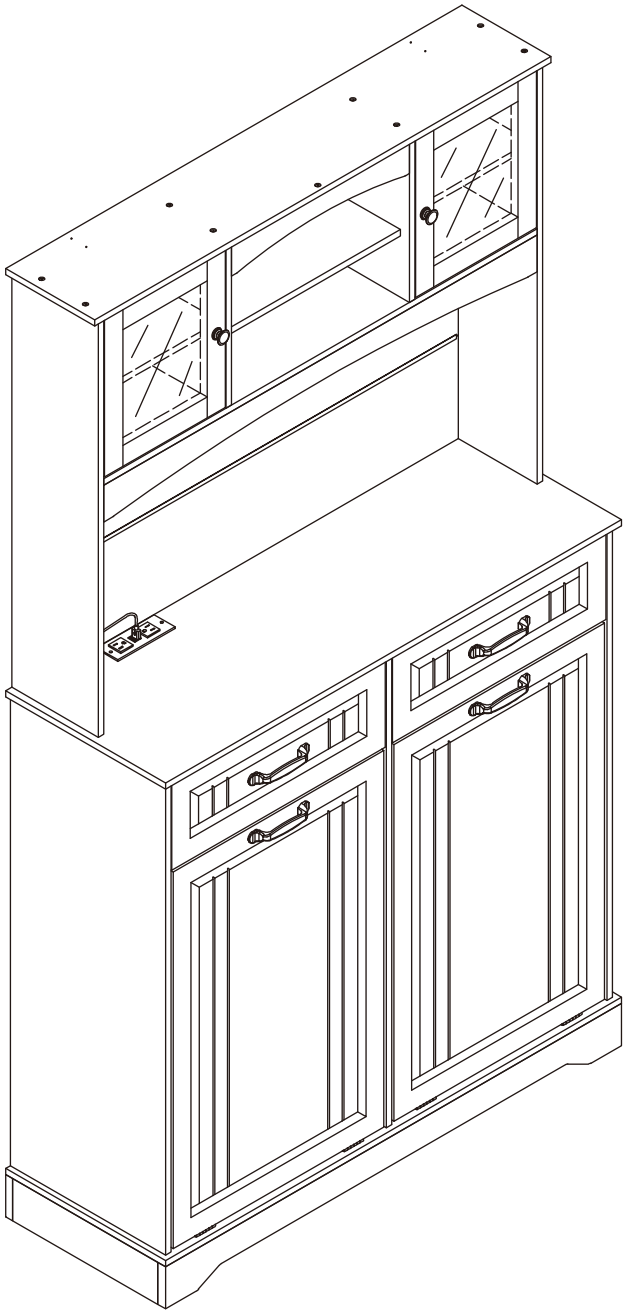
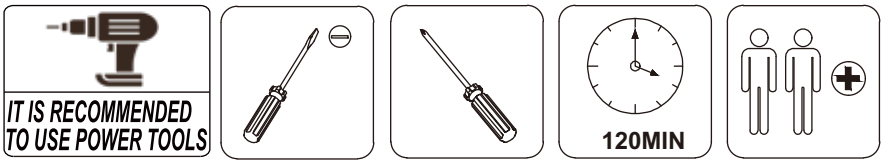
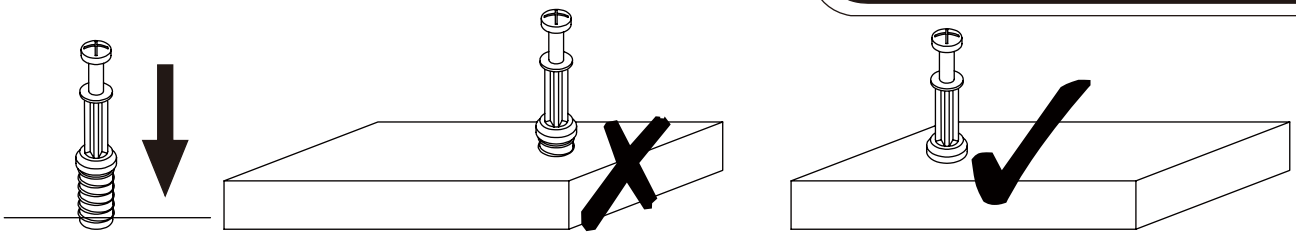
HLG225

Version:1.2

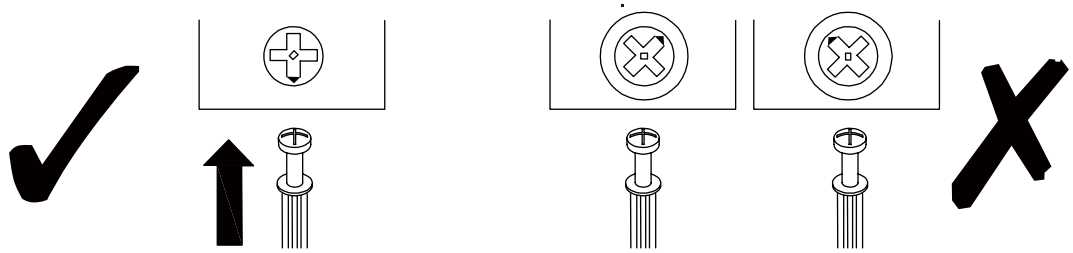




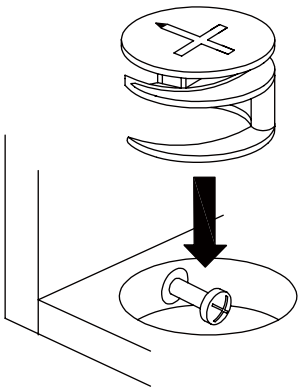
***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**



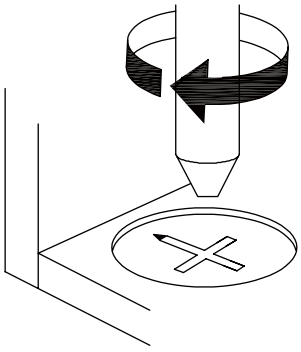
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.








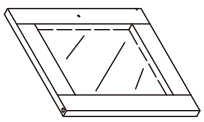
EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

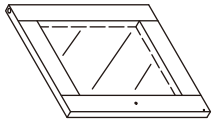









EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.









EN_ Turn cam lock clockwise to tighten.

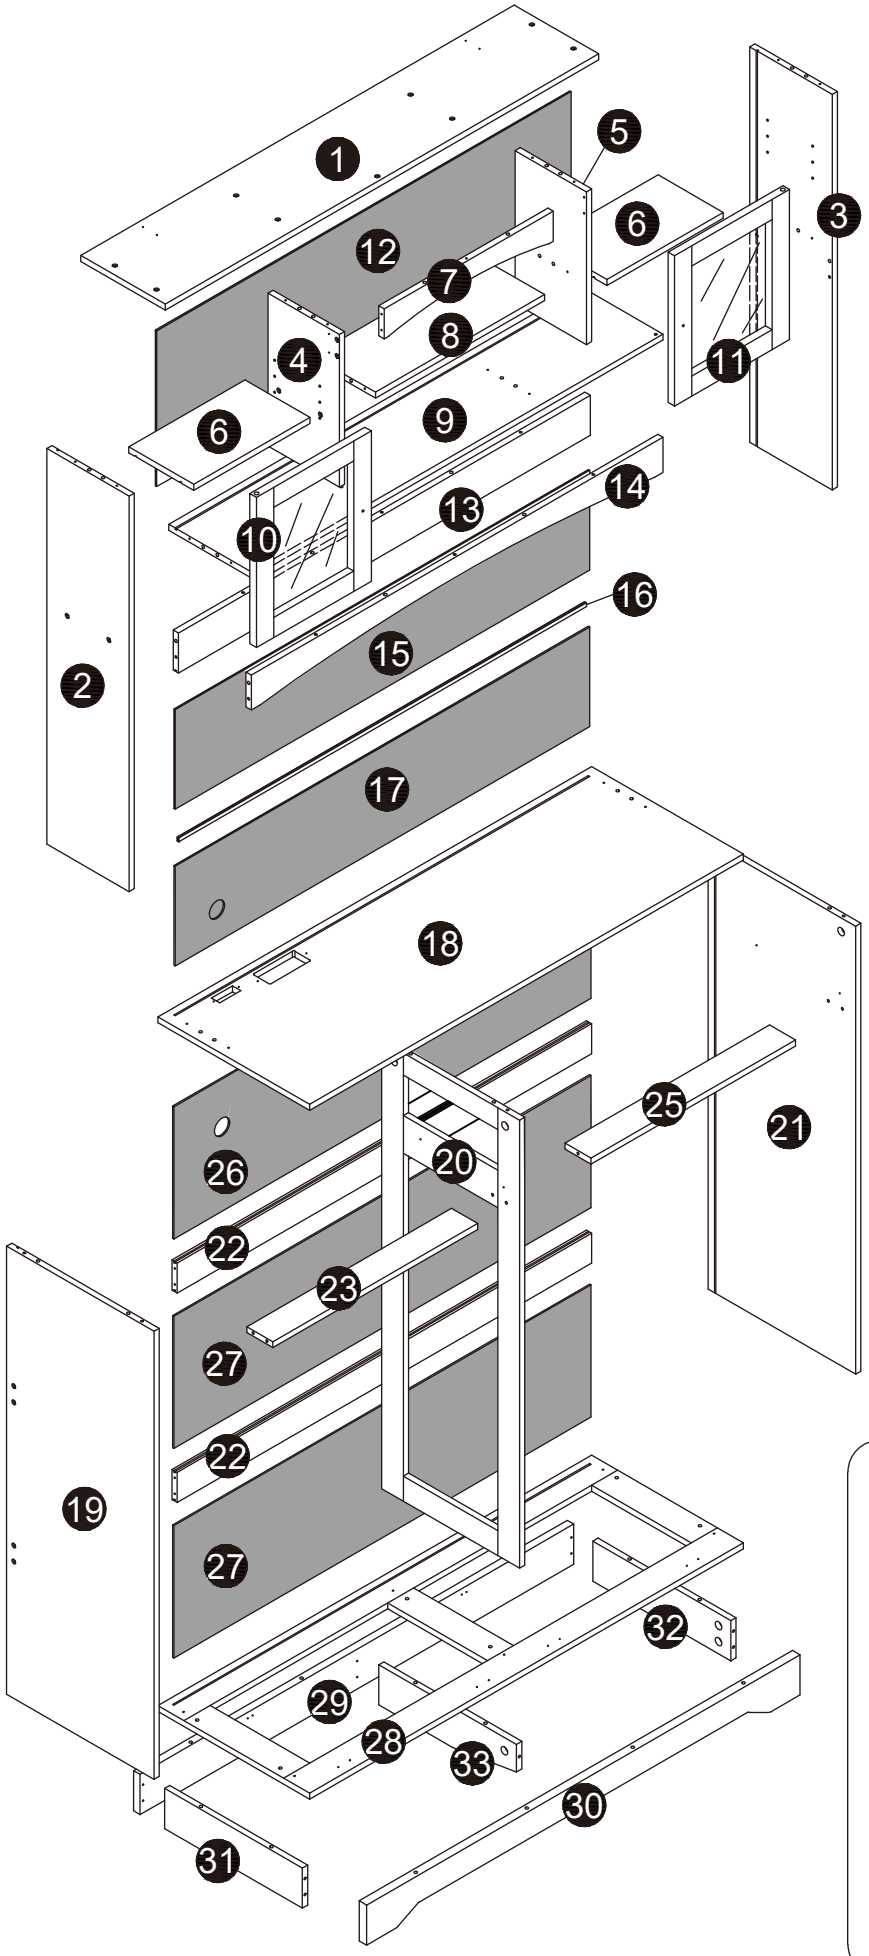
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x2	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	

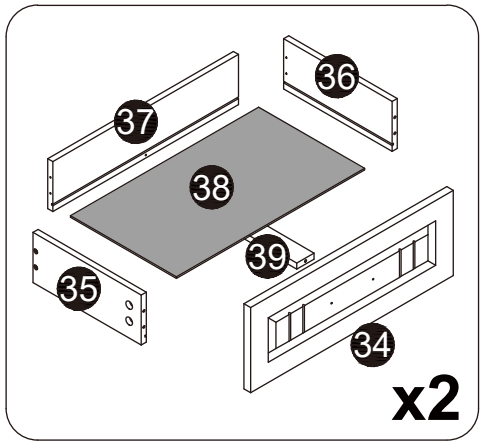
NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x1	
⑱		x1	
⑲		x1	
⑳		x1	

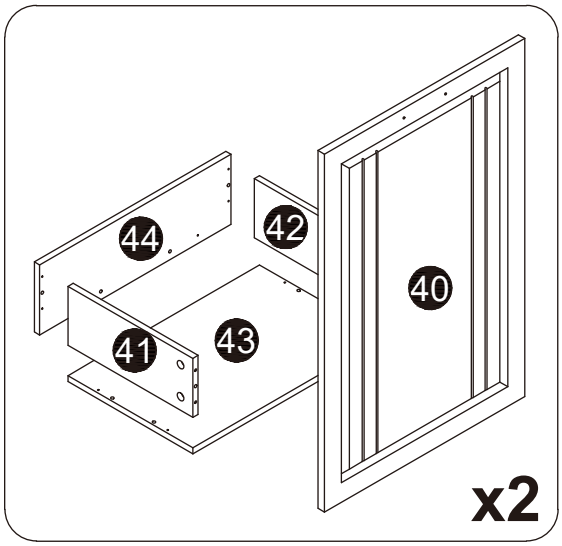
NO.	PARTS	QTY	SPARE
㉑		x1	
㉒		x2	
㉓		x1	
㉕		x1	
㉖		x1	
㉗		x2	
㉘		x1	
㉙		x1	
㉚		x1	
㉛		x1	













NO.	PARTS	QTY	SPARE
㉜		x1	
㉝		x1	
㉞		x2	
㉟		x2	
㊱		x2	
㊲		x2	
㊳		x2	
㊴		x2	
㊵		x2	
㊶		x2	

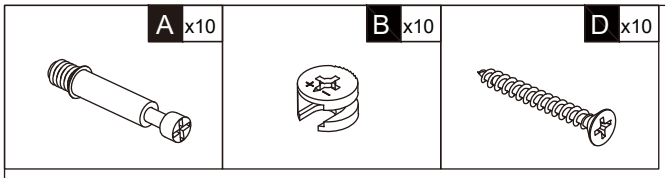
NO.	PARTS	QTY	SPARE
㊷		x2	
㊸		x2	
㊹		x2	
	 Hardware Kit	x1	


1
5
6
3
12
7
8
4
11
6
9
14
13
10
16
15
2
17
18
25
21
26
20
22
23
27
22
19
27
32
29
28
33
30
31


36
37
38
39
35
34
x2

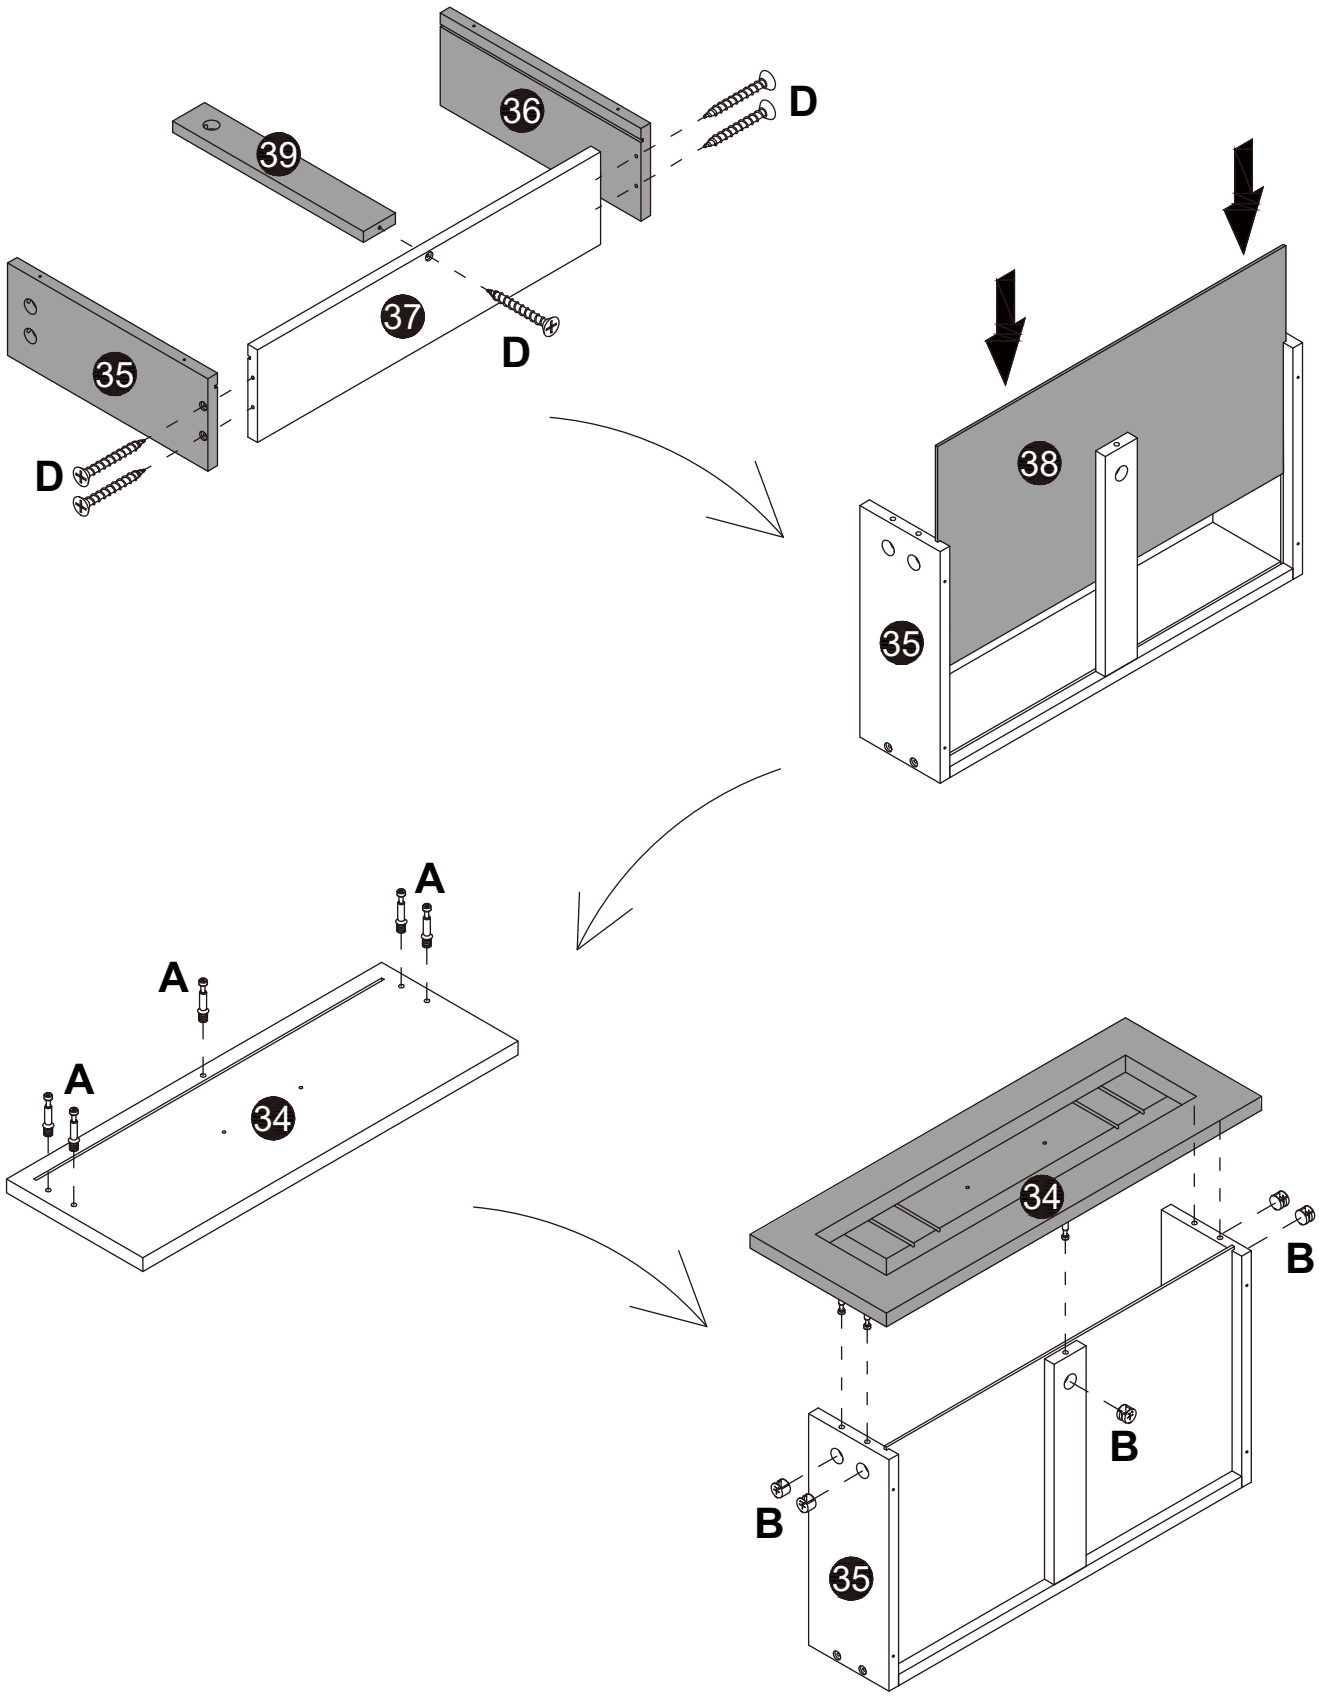

44
42
40
41
43
x2

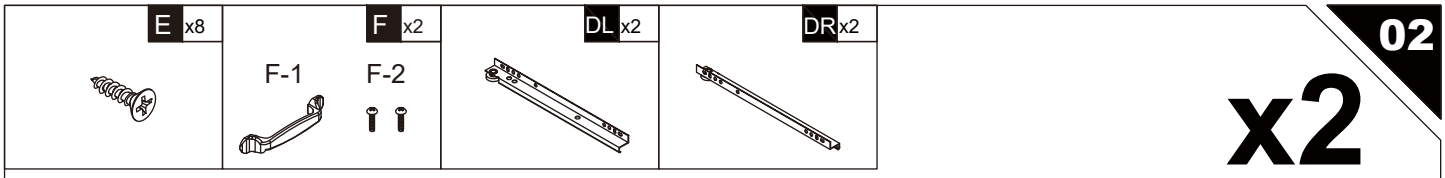
A x46 Ø6x35mm +3(spare) 	B x46 Ø15x10mm +3(spare) 	C x80 Ø6x30mm +3(spare) 	D x77 Ø4x35mm +3(spare) 	E x82 Ø3.5x12mm +5(spare) 	F x4 Ø4x18mm F-1 F-2 
G x2 	H x4 	I x2 I-2 I-1 	J x7 	K x2 Ø3x14mm K-1 K-2 	L x2 L-2 L-1 
M x1 M-1 M-2 M-3 	N x1 	O x2 Ø3.5x12mm 	P x8 	Q x4 	
R x2 Ø4x18mm R-1 R-2 	S x2 Ø3.5x12mm S-1 S-2 	T x20 Ø3x16mm +2(spare) T-1 T-2 	U x12 +3(spare) 	V x2 V-2 V-1 	W x4 
CL x2 L250mm 	CR x2 L250mm 	DL x2 L250mm 	DR x2 L250mm 		



01

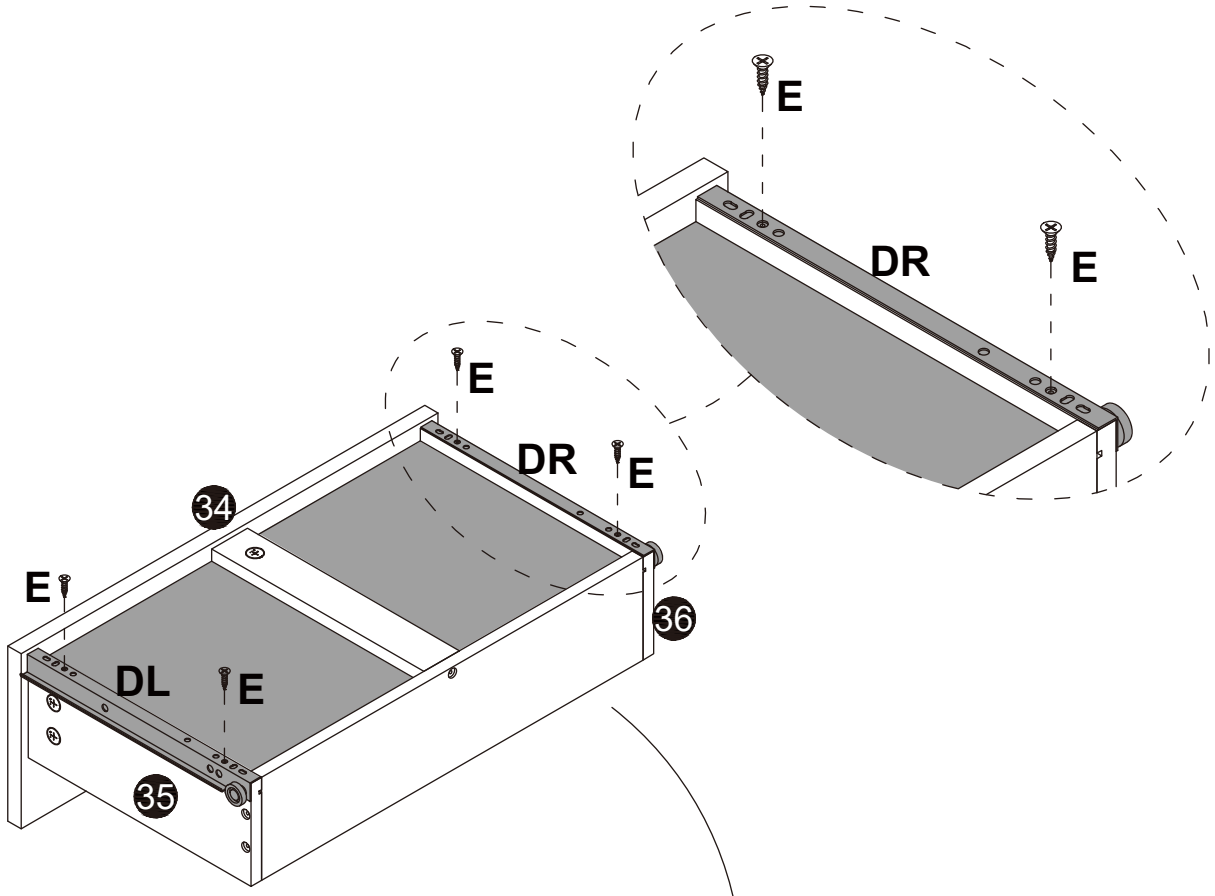
x2

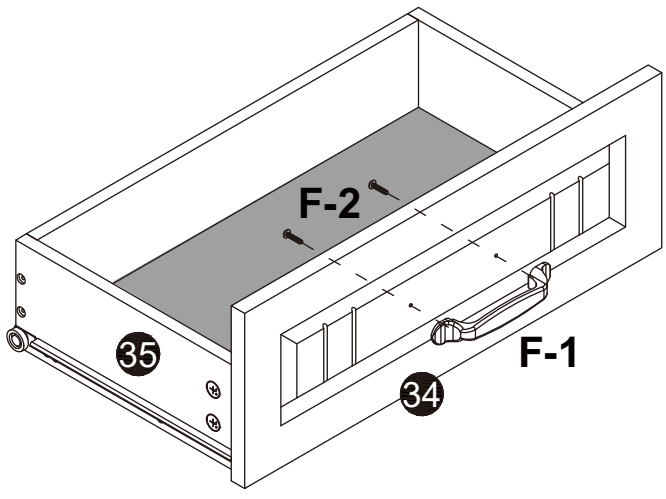


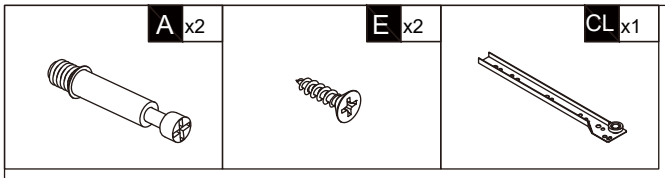


02

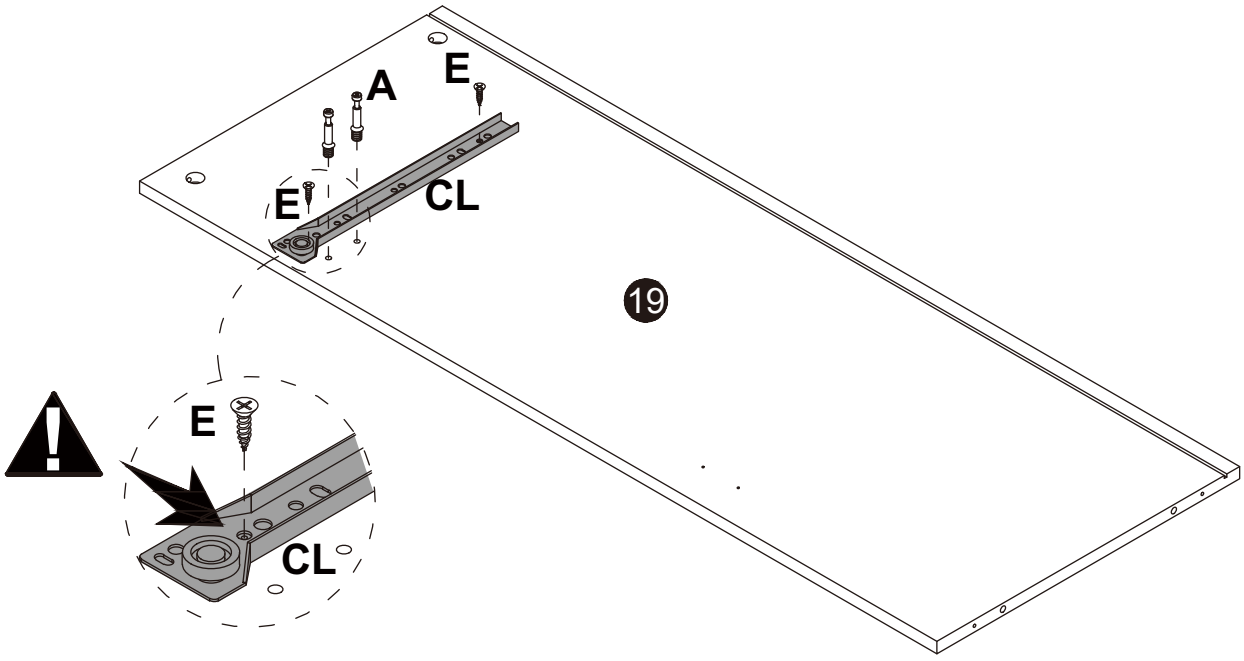
x2

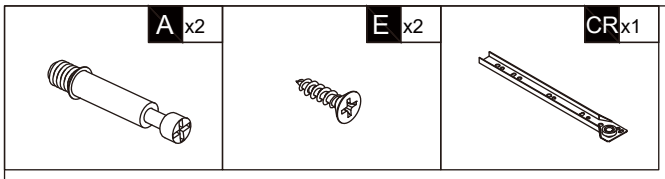




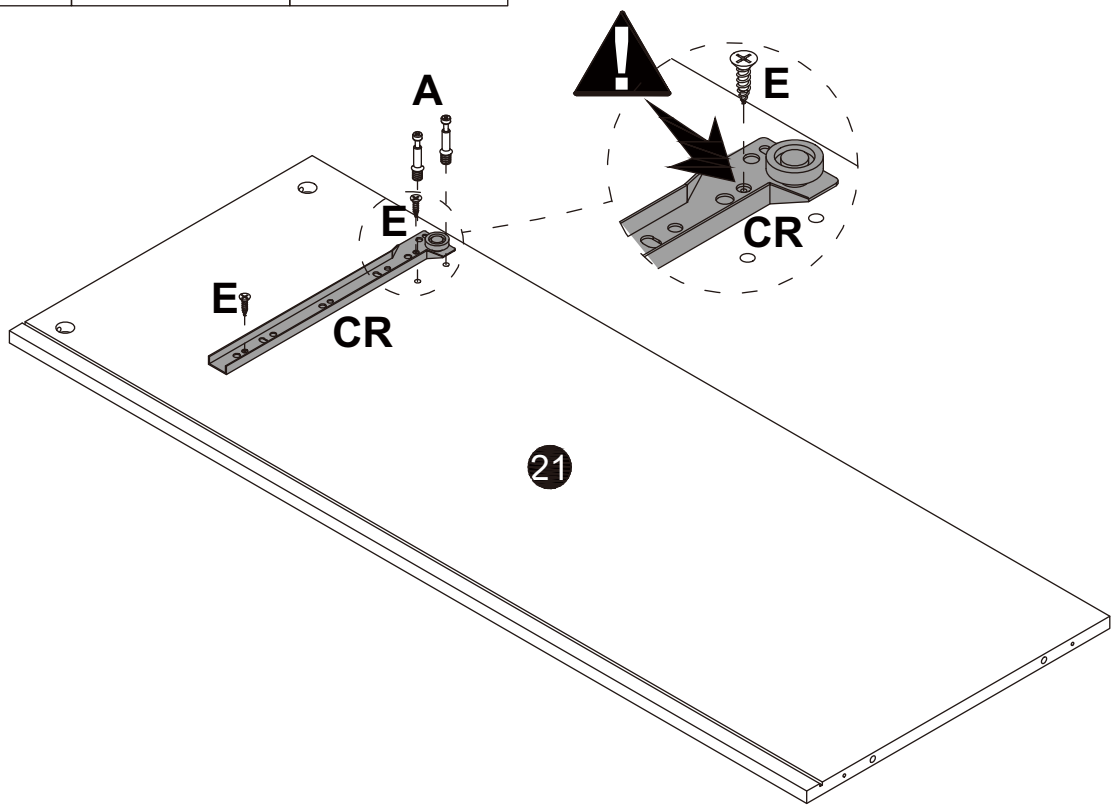


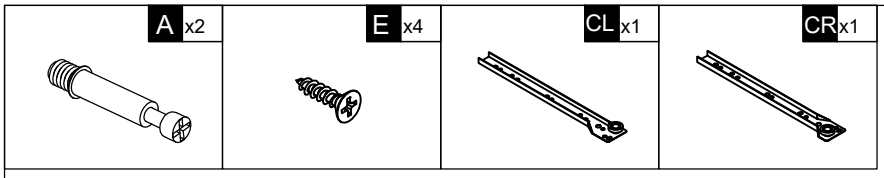
03

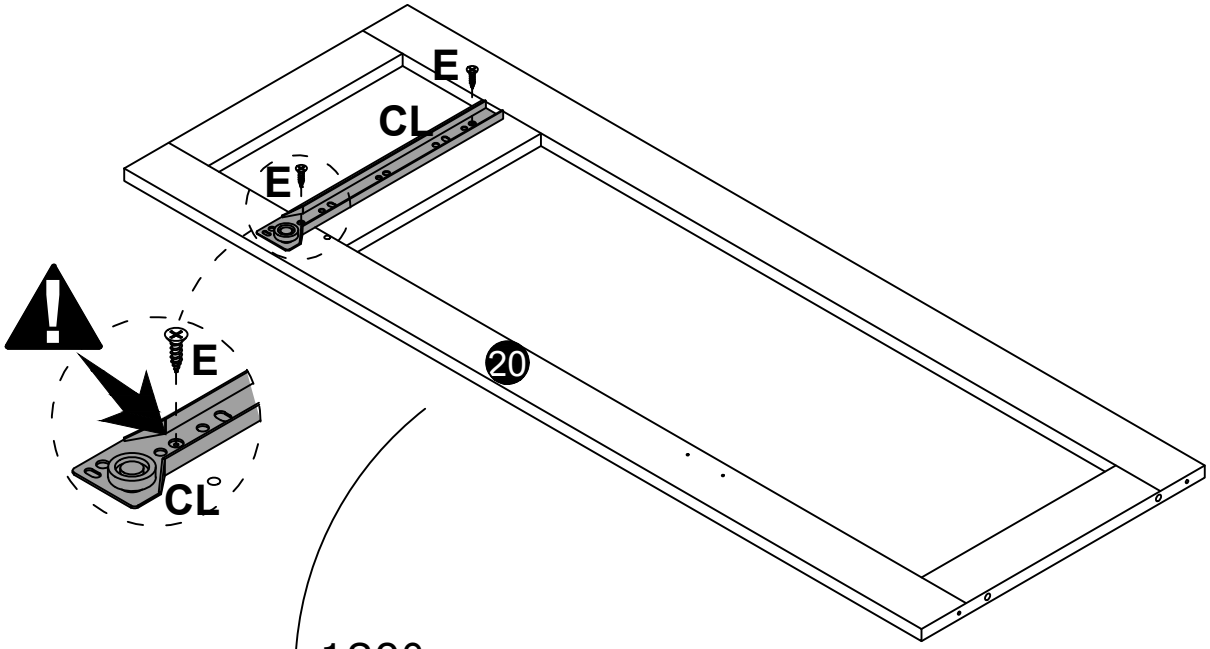




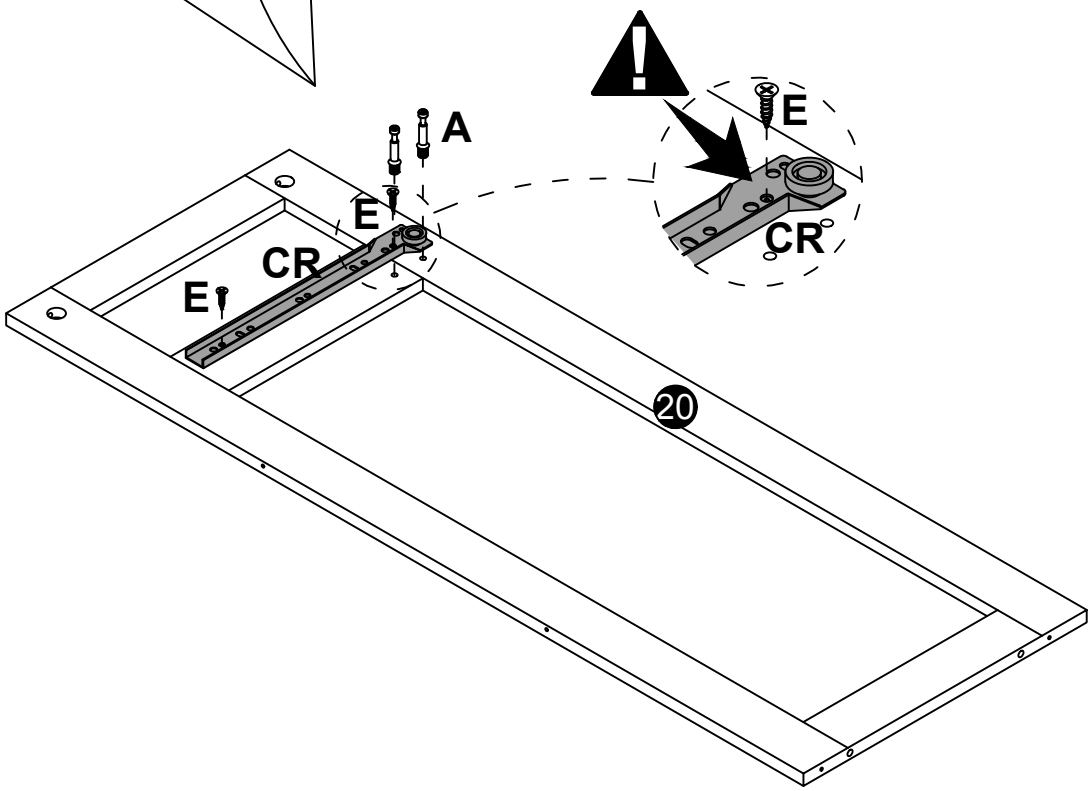
04







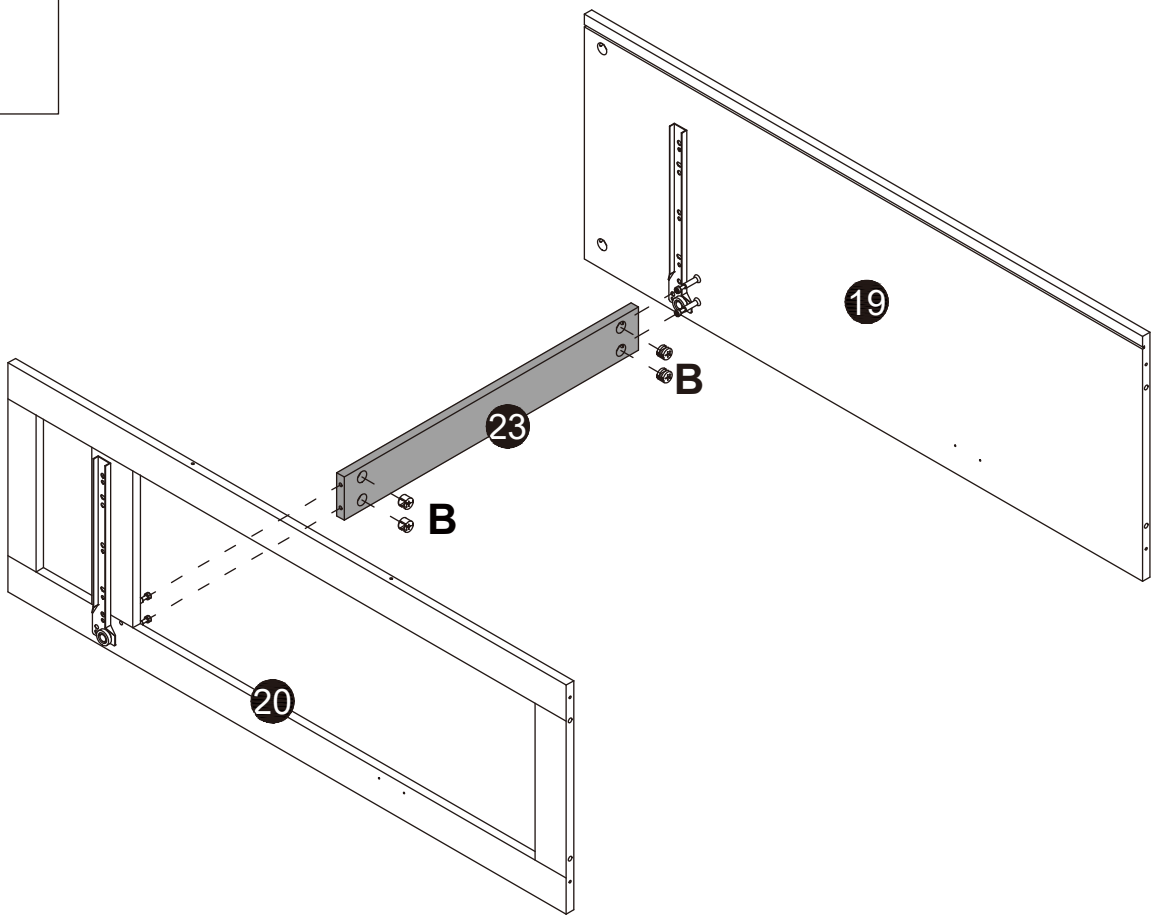
180°




B x4



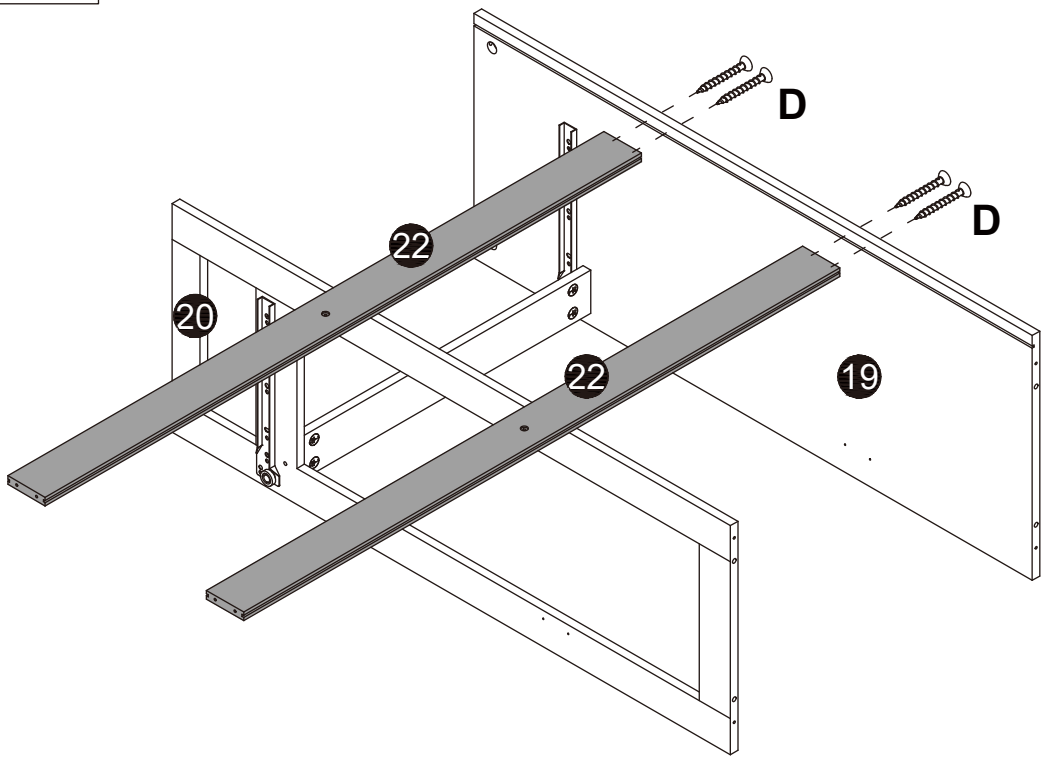
06

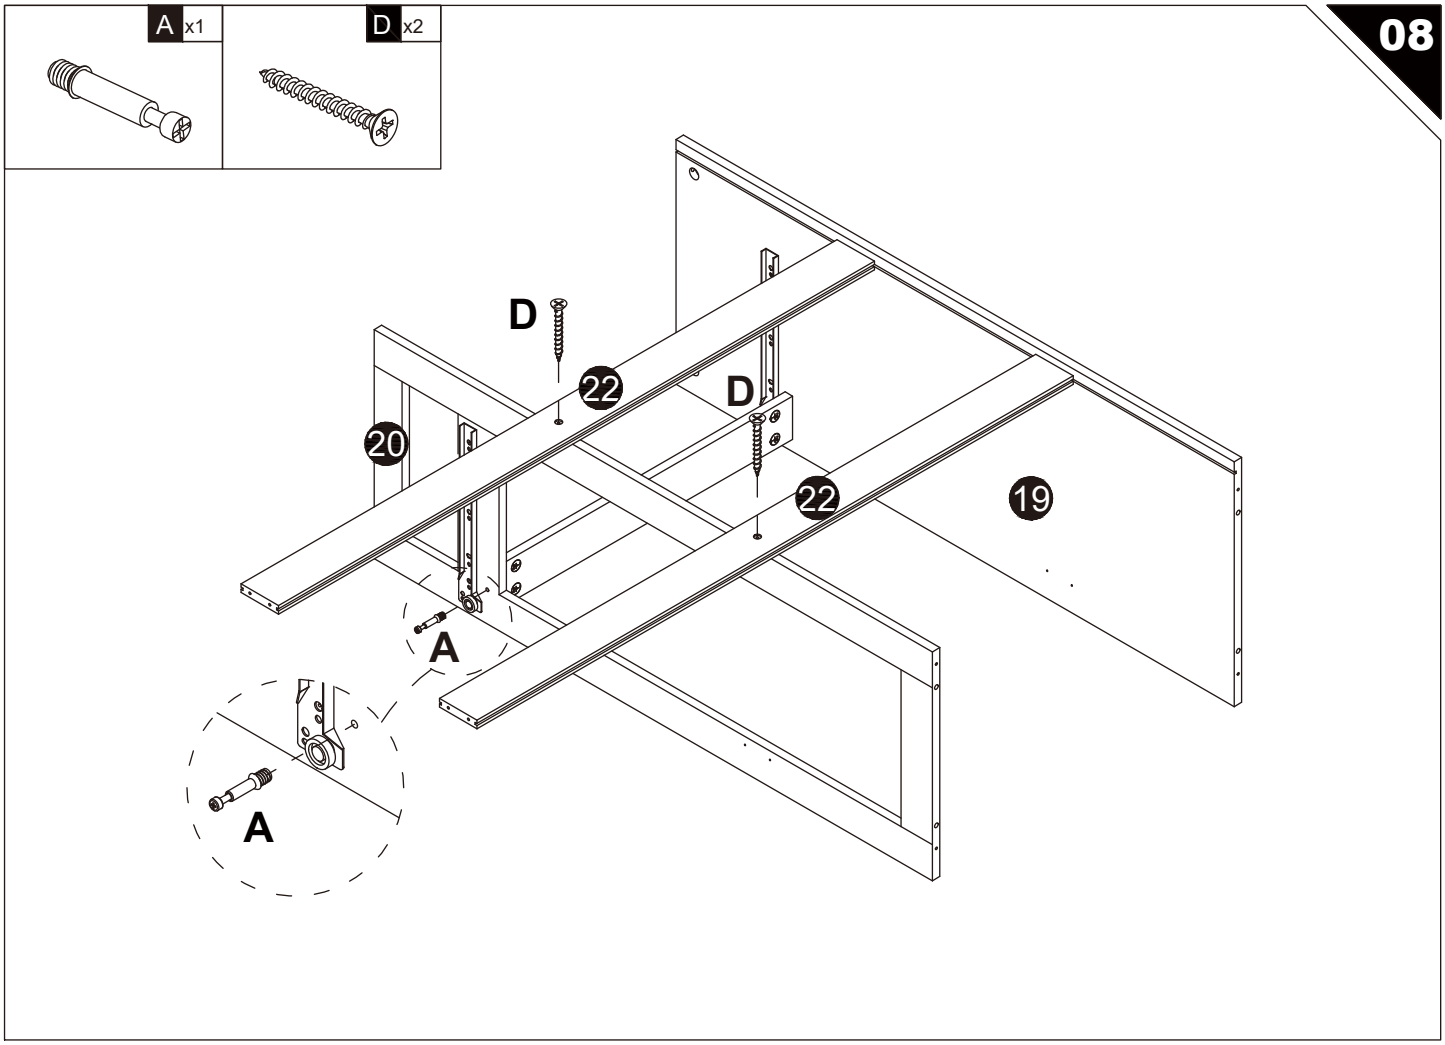


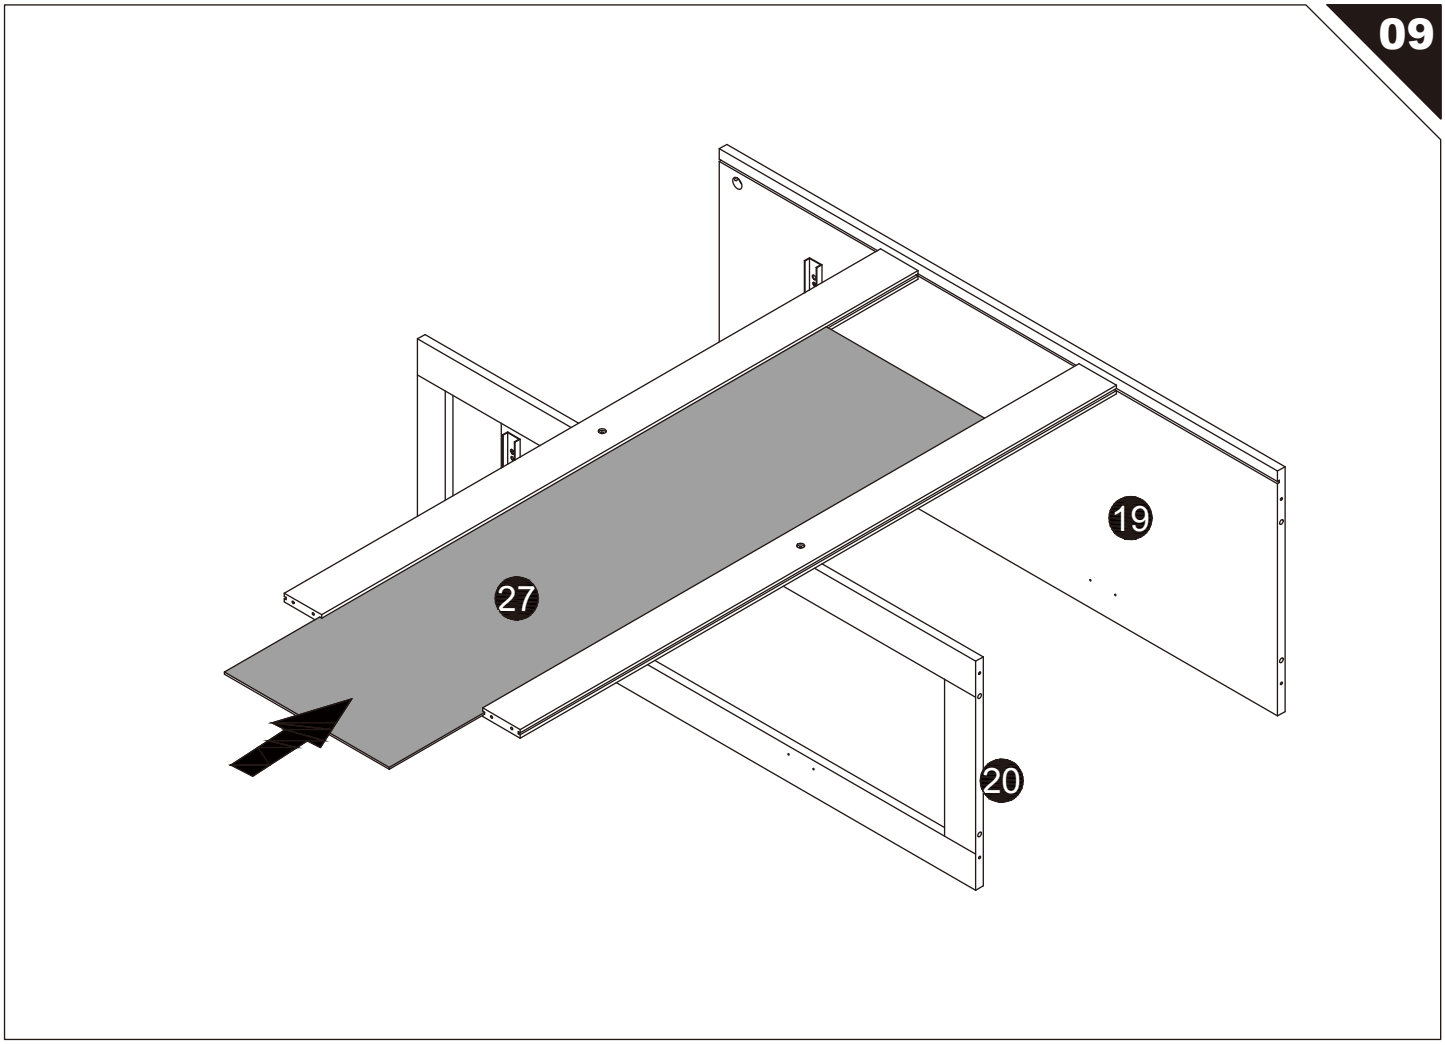
D x4



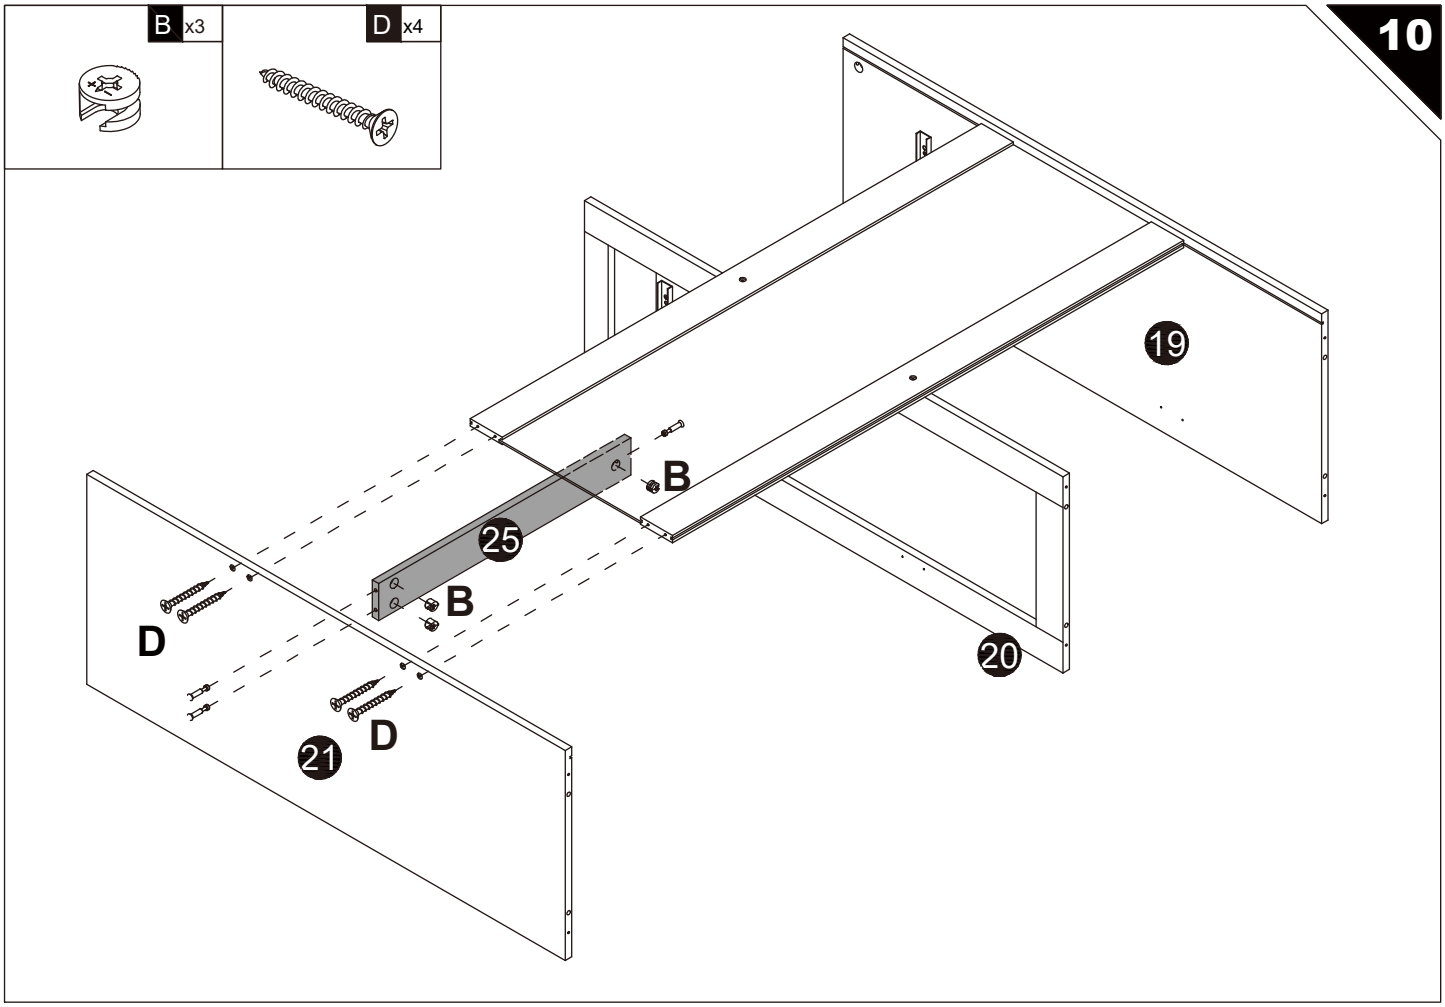
07



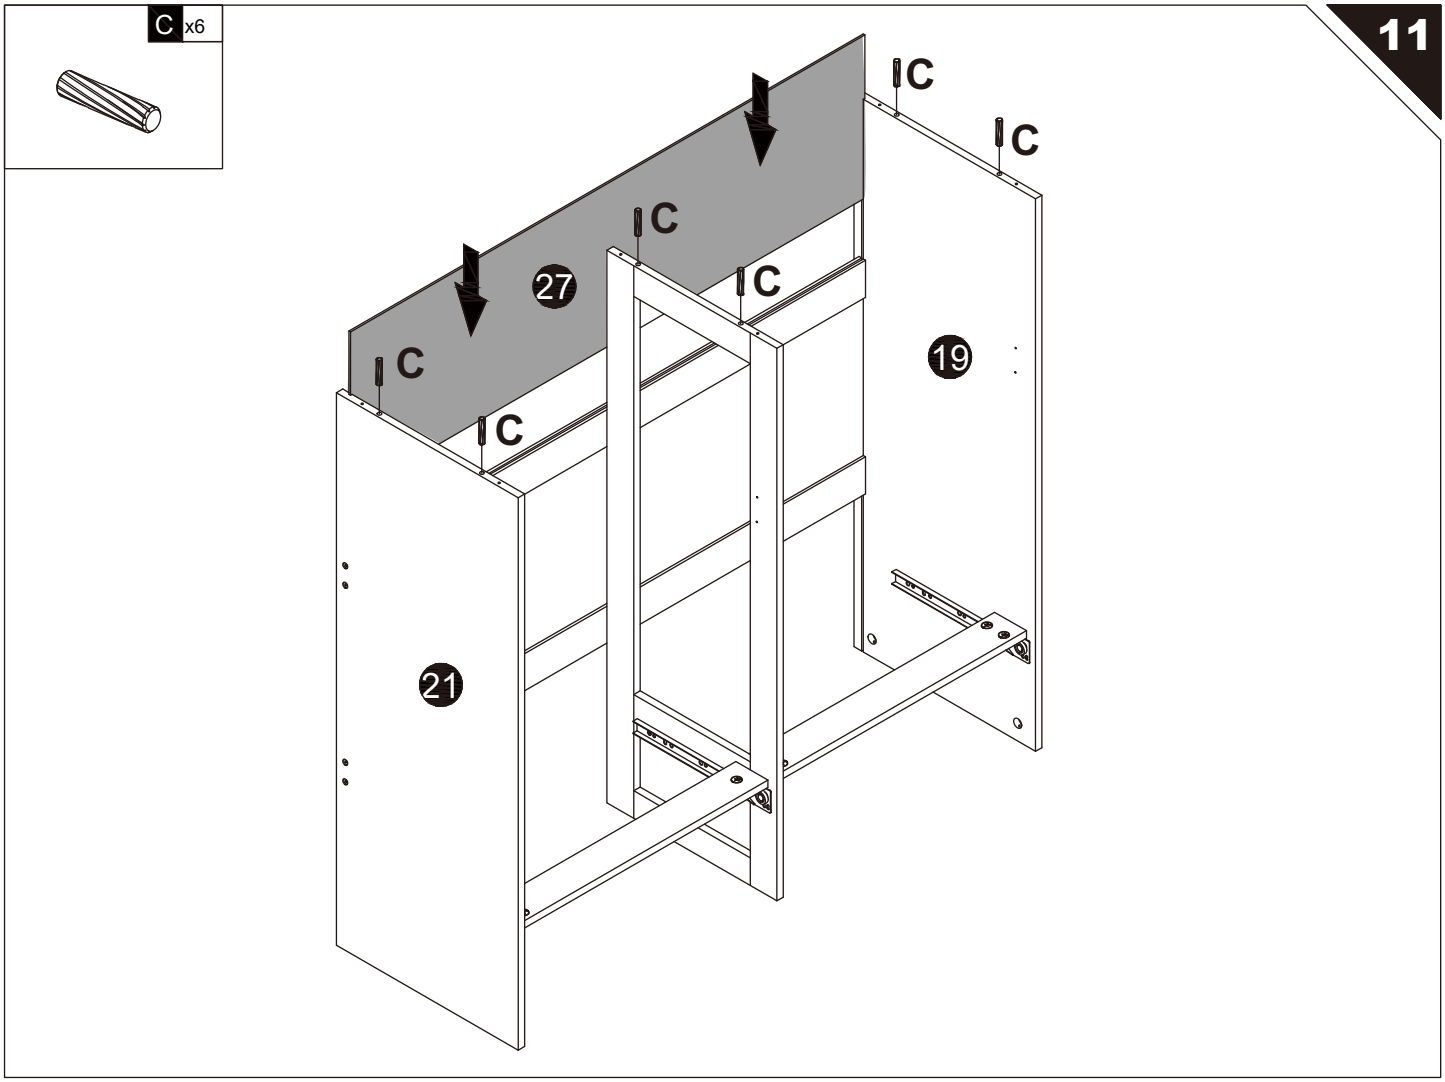

A x1
D x2
08
D
22
D
20
22
19
A
A


09
19
27
20


10

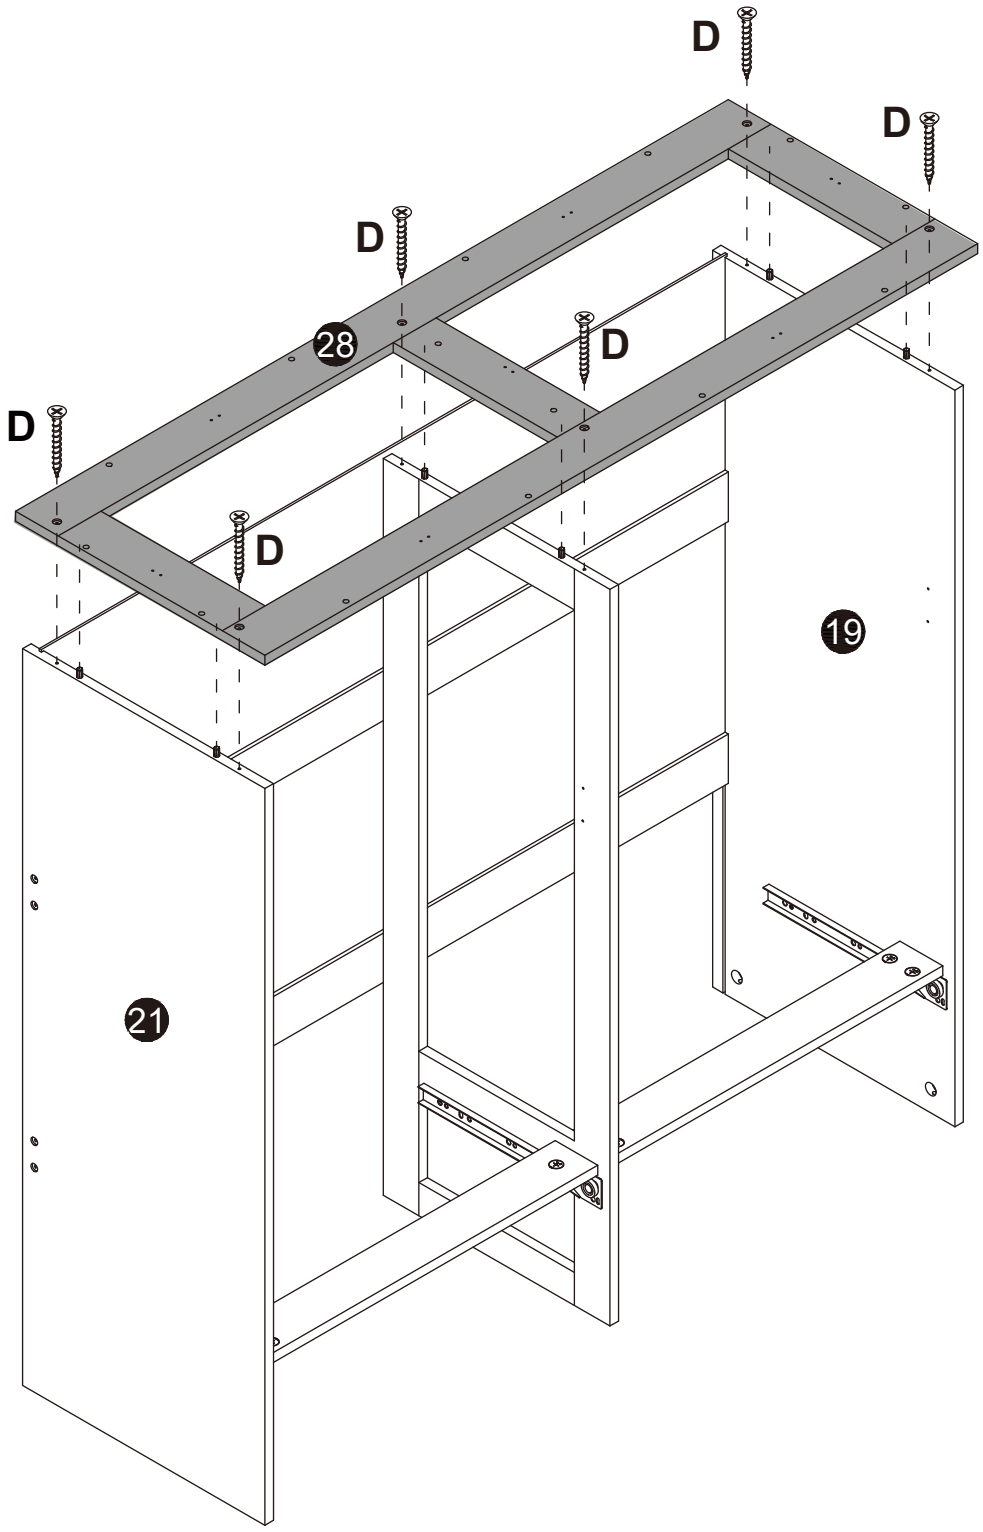


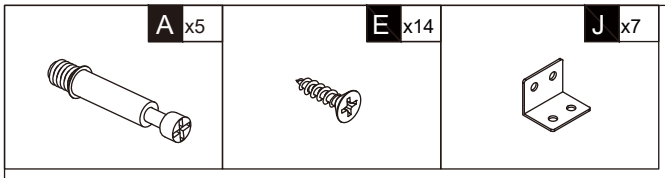
11

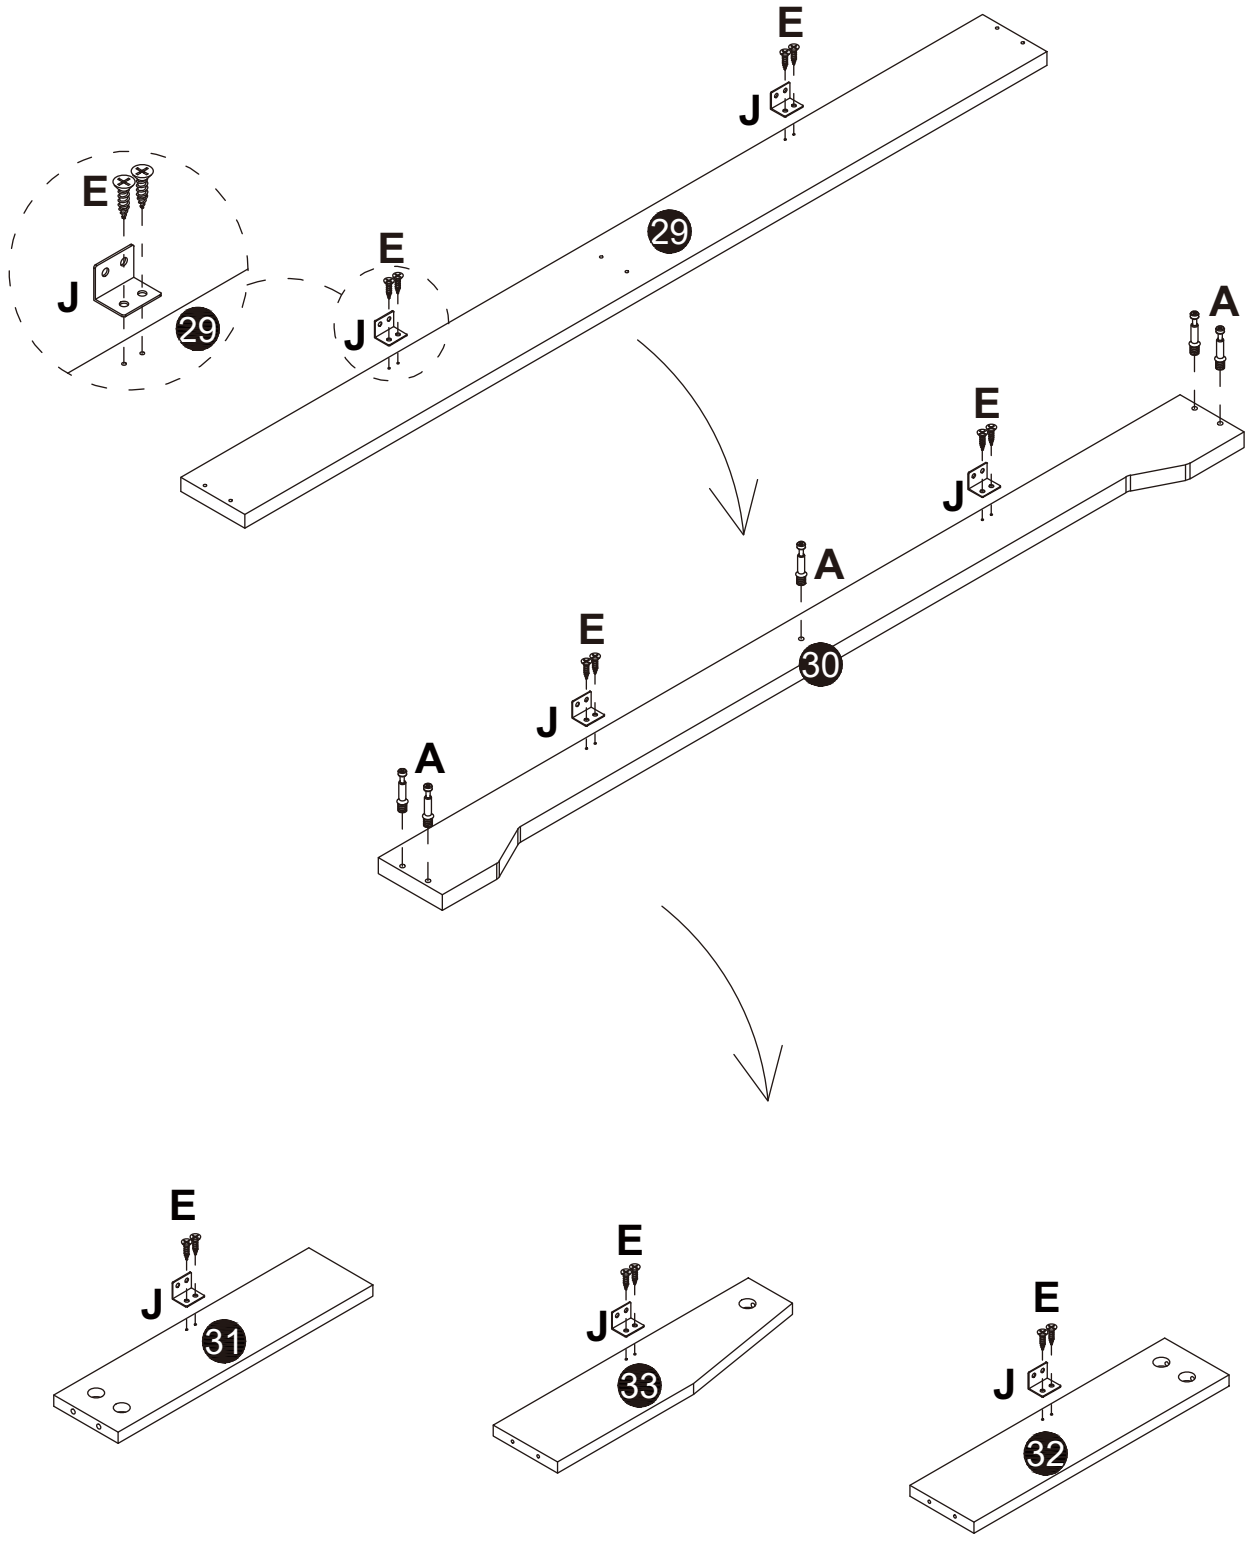


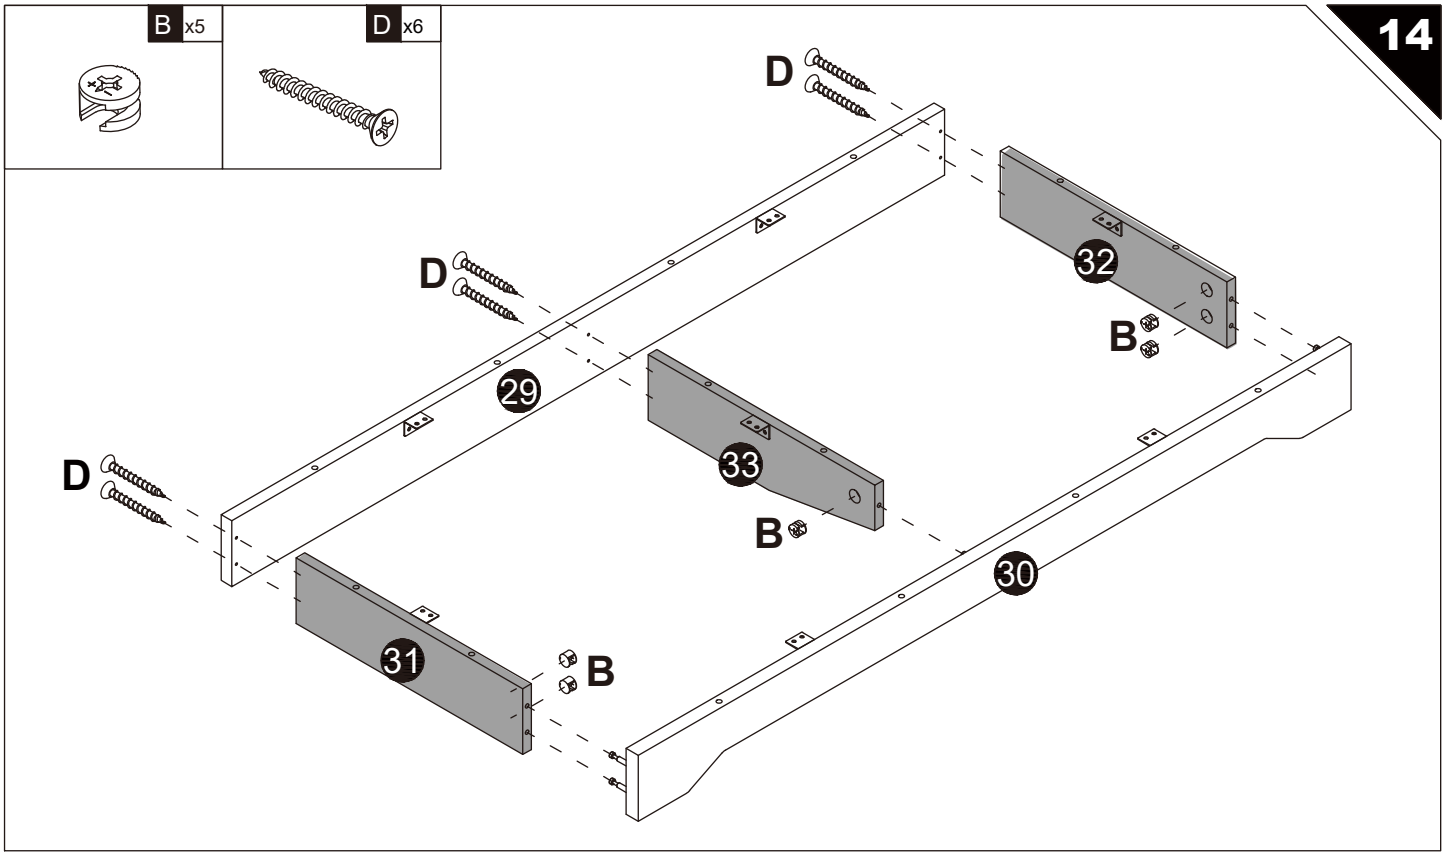
D x6

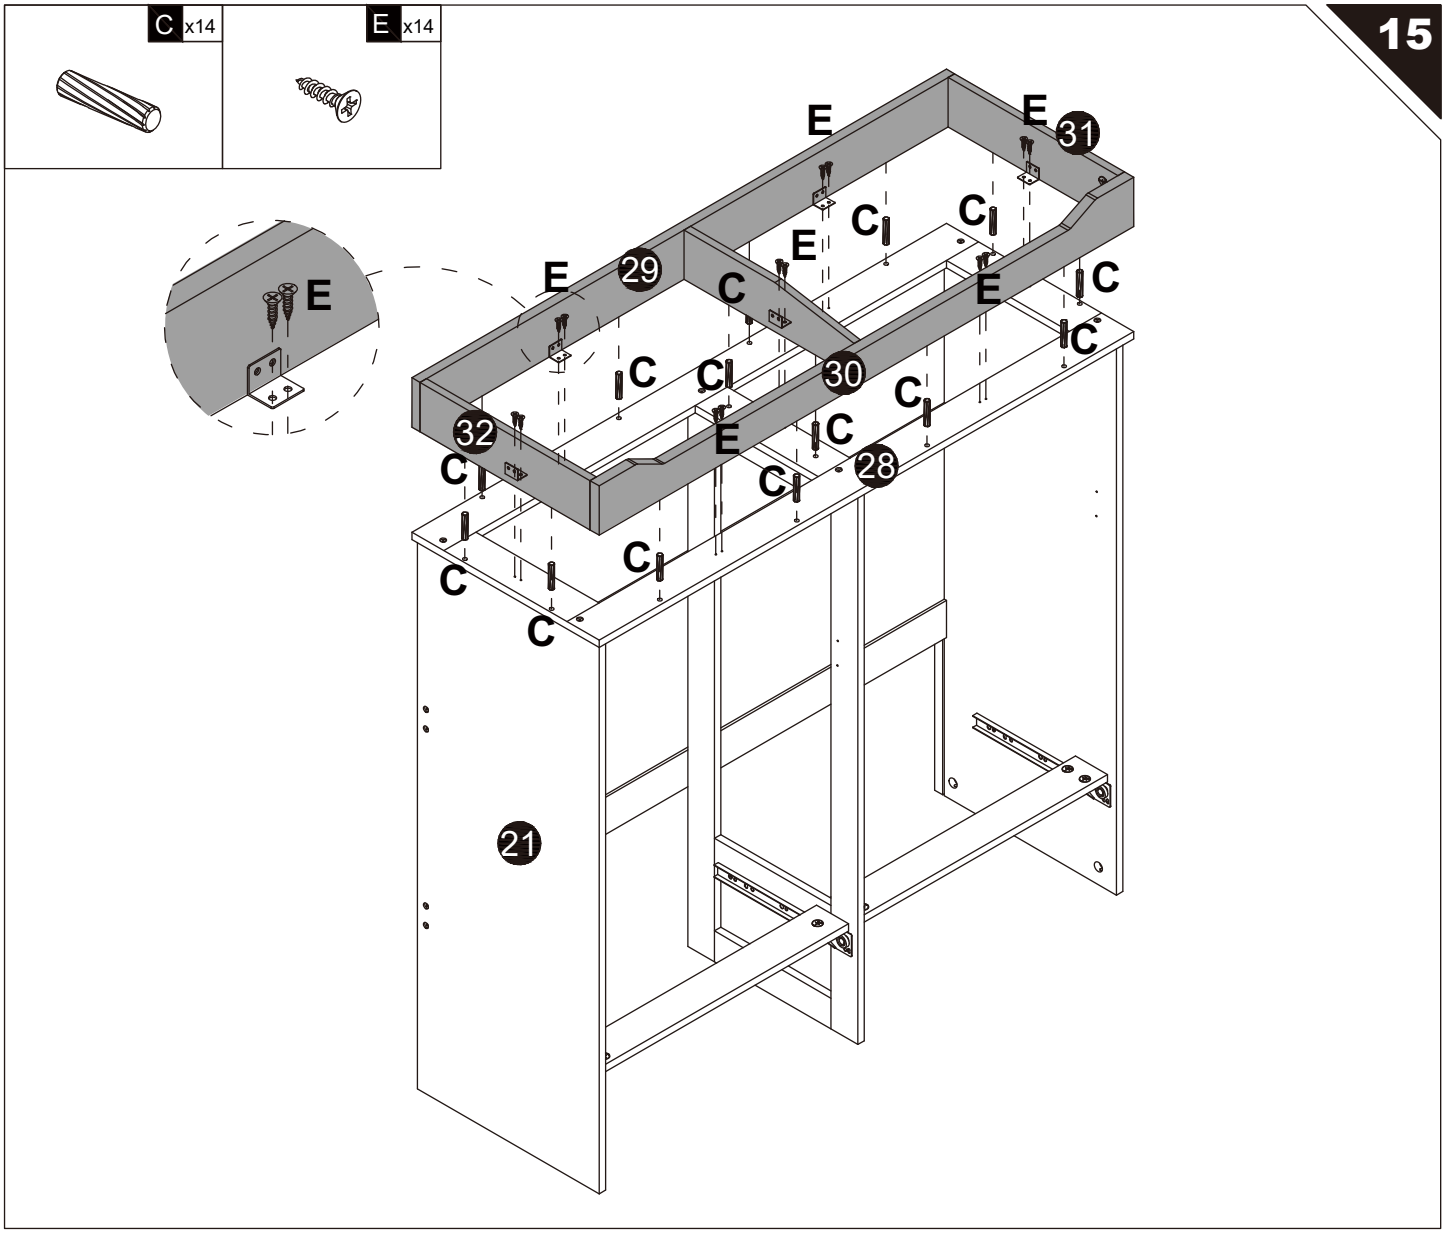


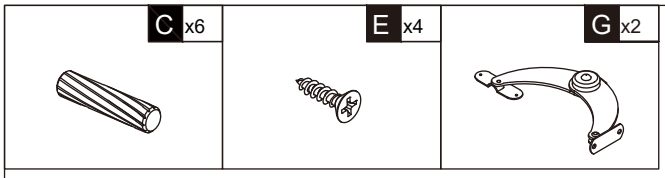


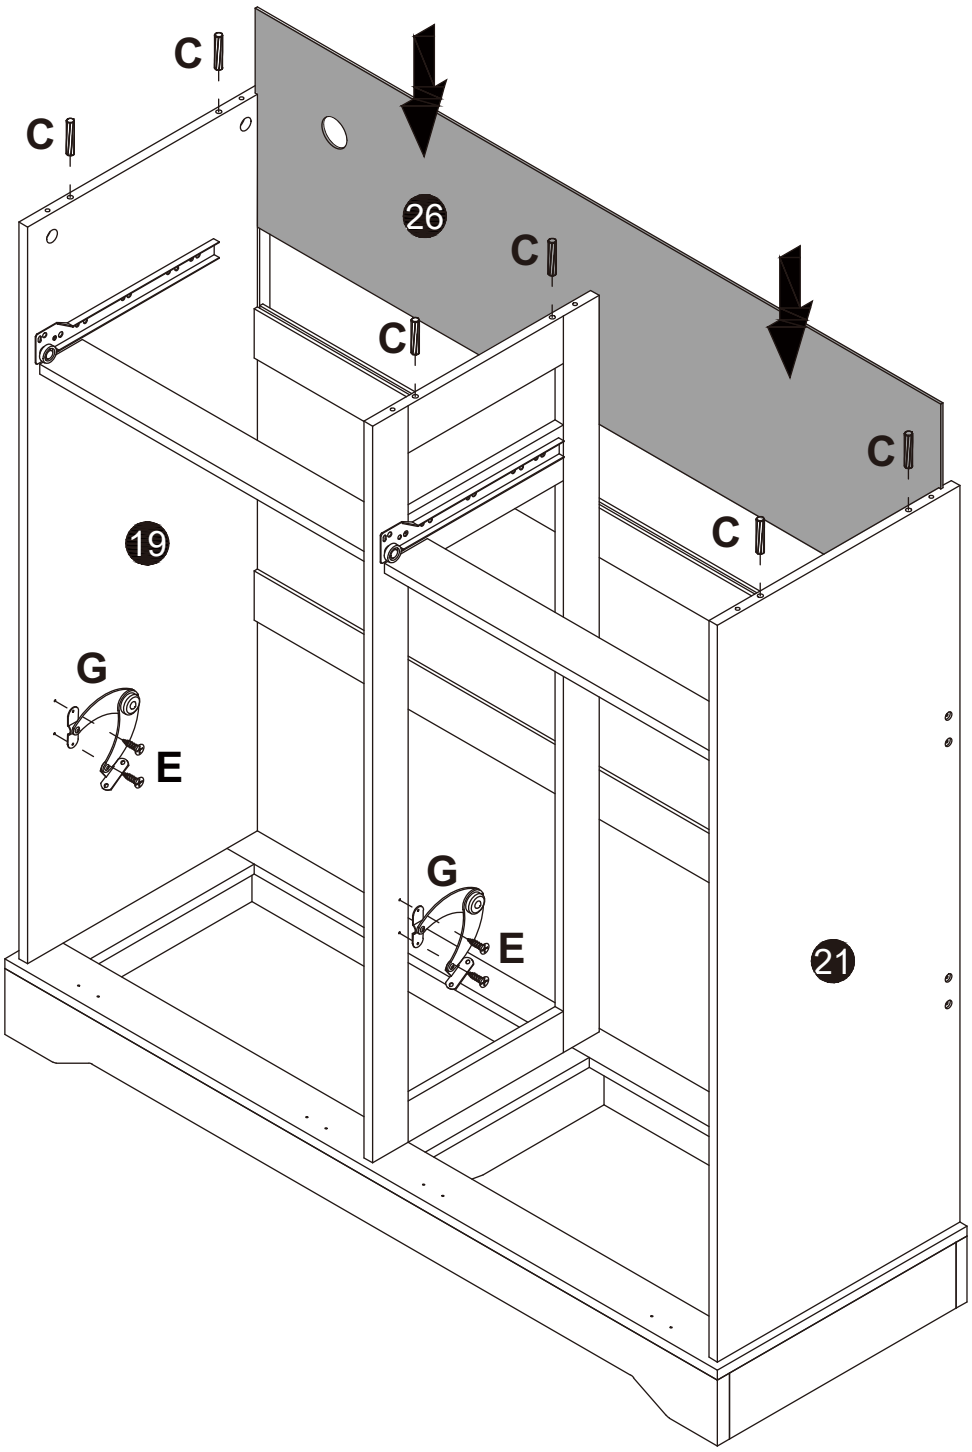

A x5
E x14
J x7

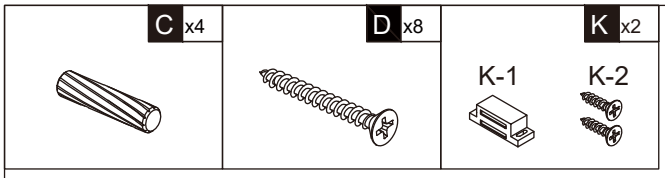

E
J
29
E
J
29
E
J
A
E
J
A
30
A
E
J
31
E
J
33
E
J
32

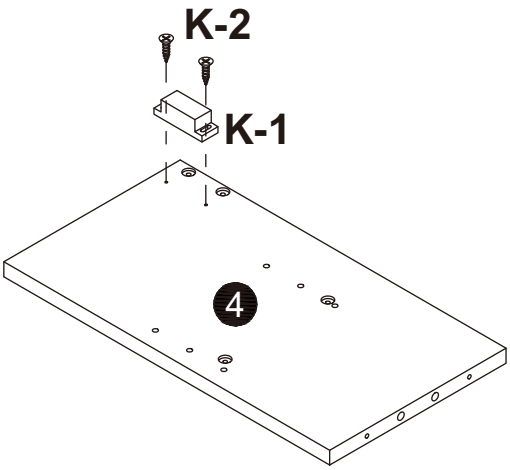

14
B x5
D x6
D
D
D
32
B
29
33
B
30
31
B

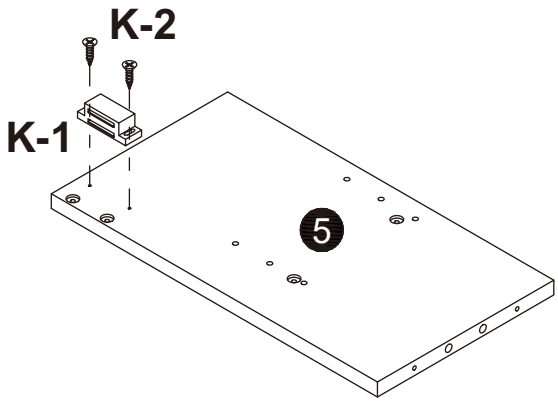

15
C x14
E x14
E
E
31
C
C
E
E
29
C
E
C
C
C
C
30
C
32
E
C
28
C
C
C
C
C
21

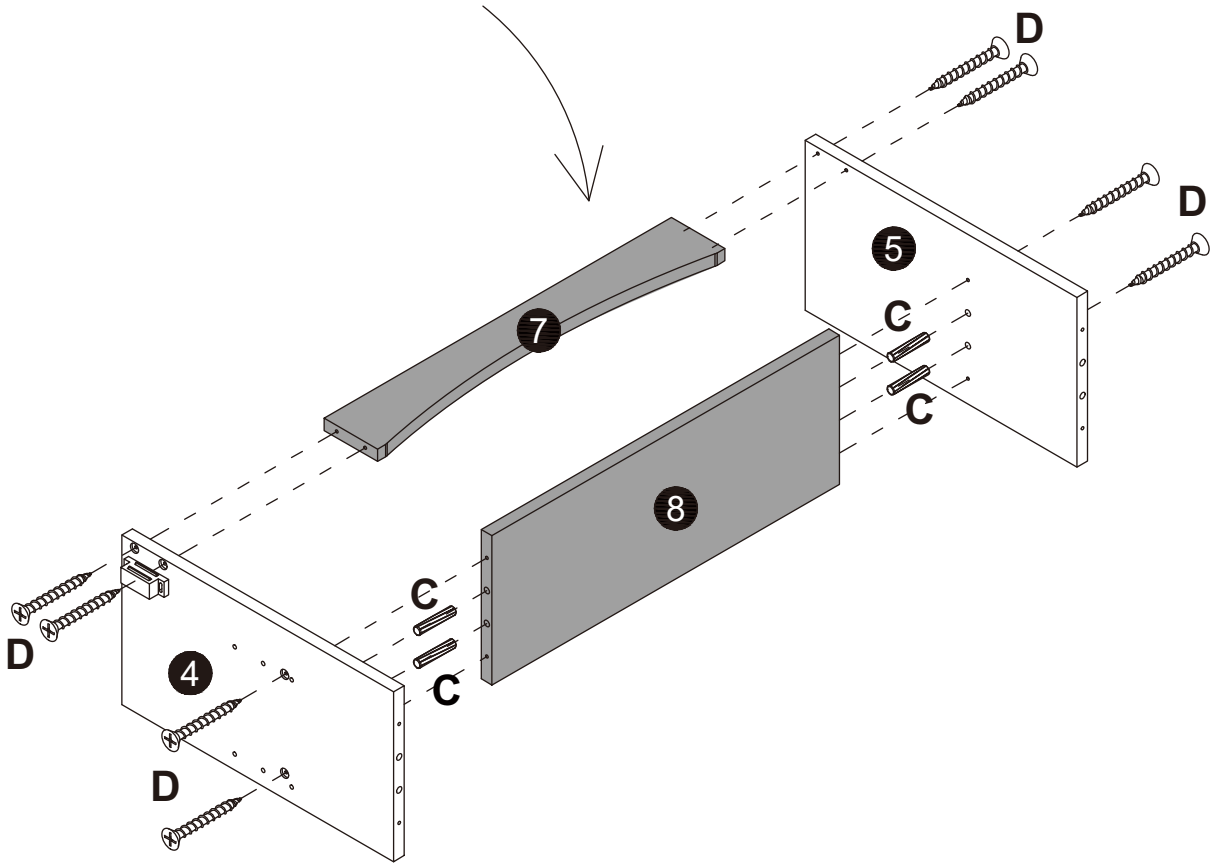

C x6
E x4
G x2

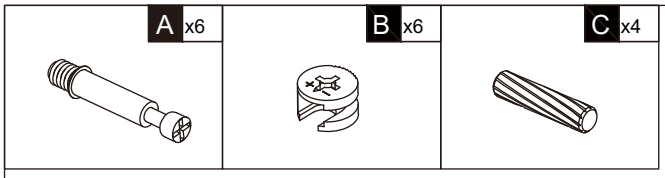

C
C
26
C
C
C
C
19
G
E
G
E
21

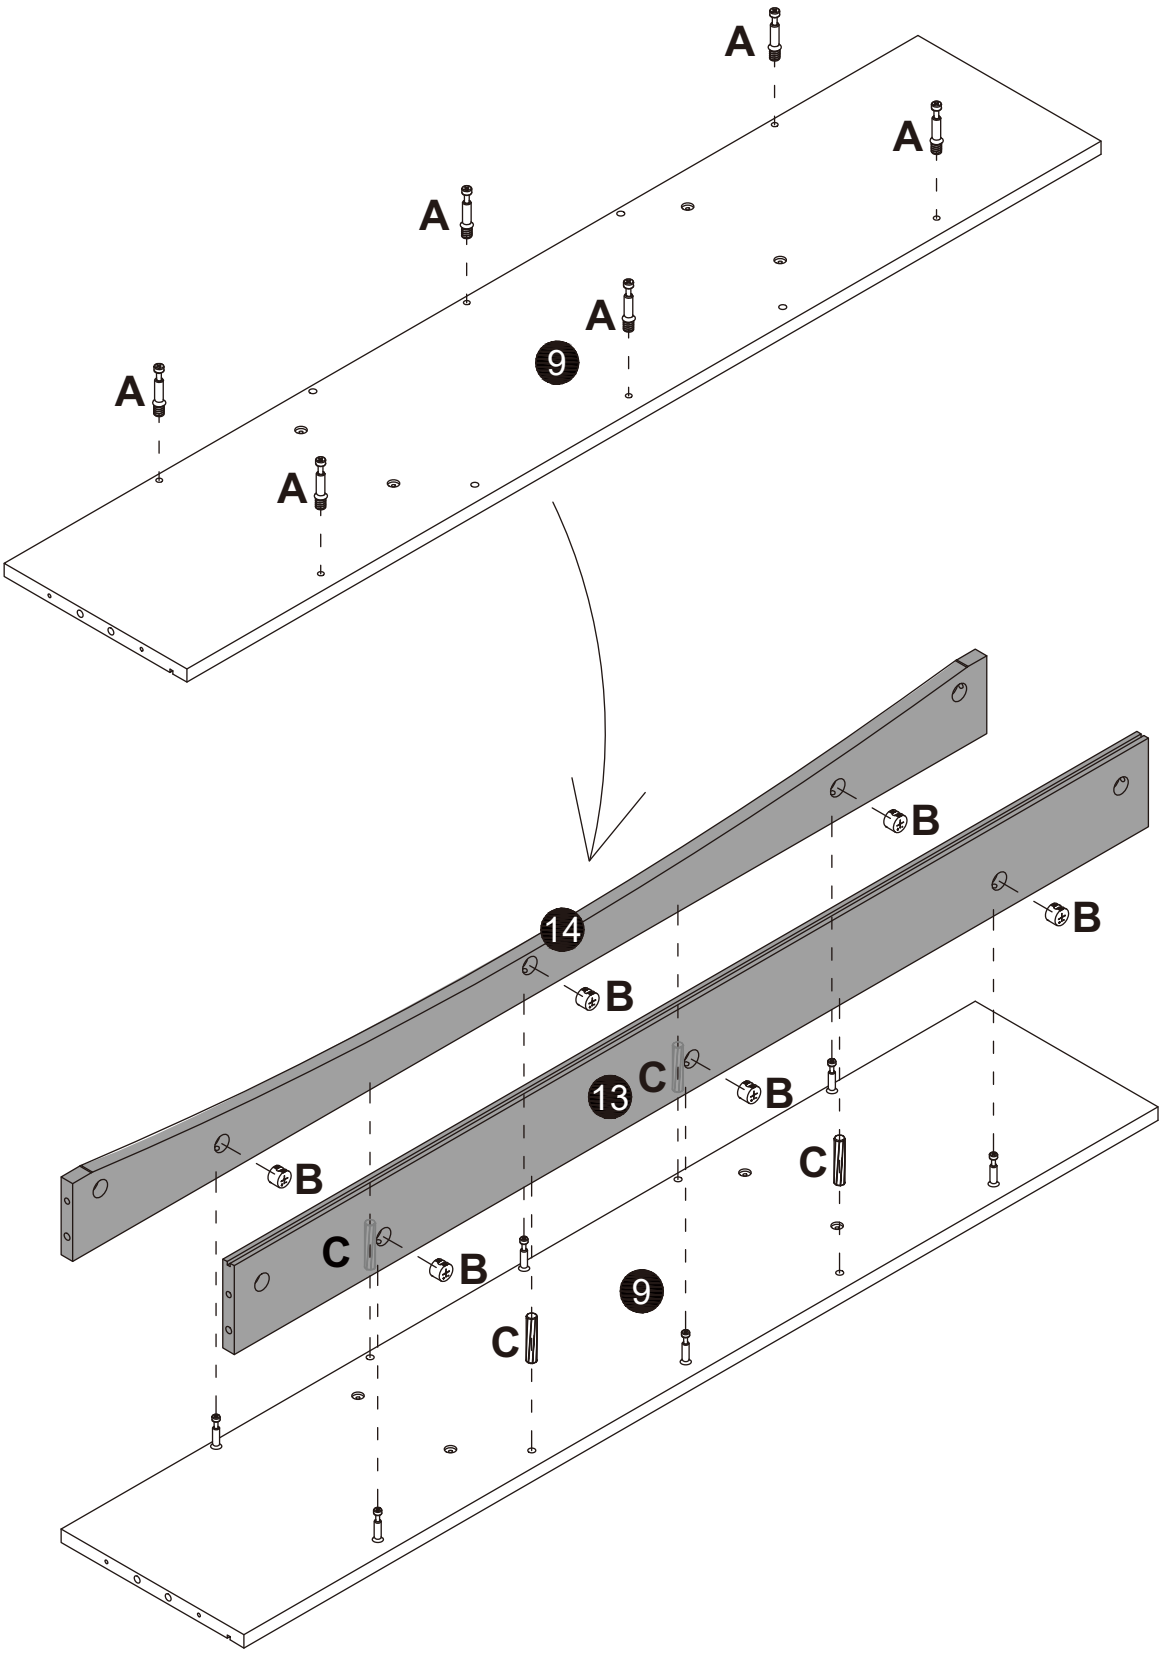

C x4
D x8
K x2
K-1
K-2

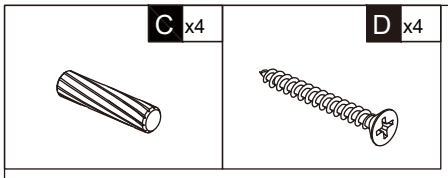

K-2
K-1
4

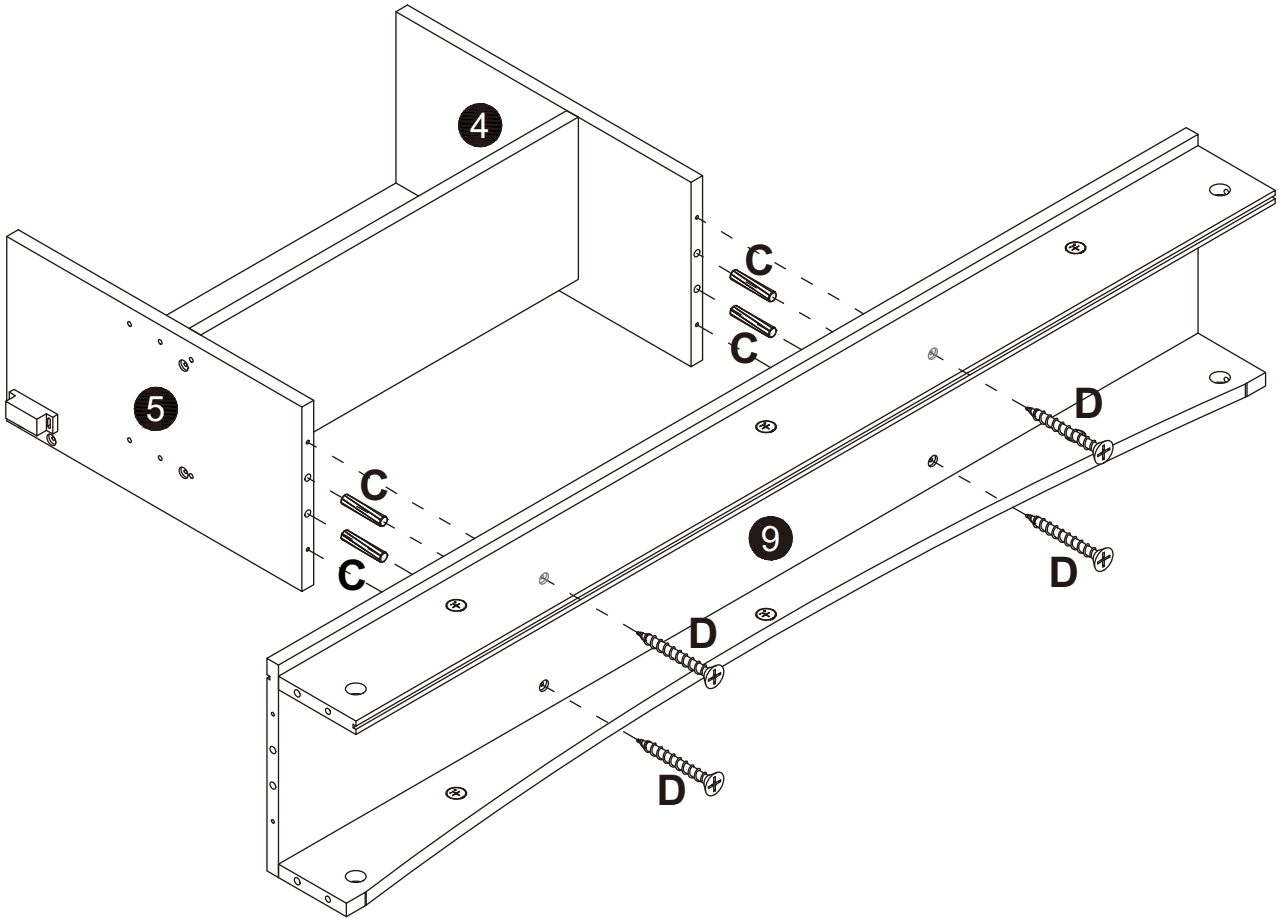

K-2
K-1
5

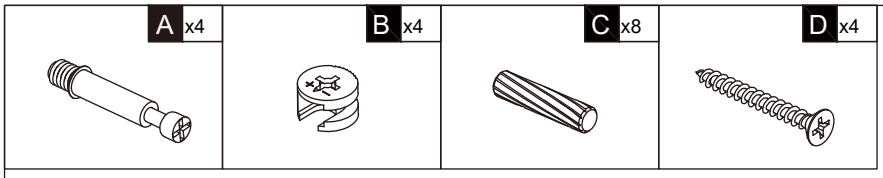

D
D
5
C
C
7
8
C
C
4
D
D

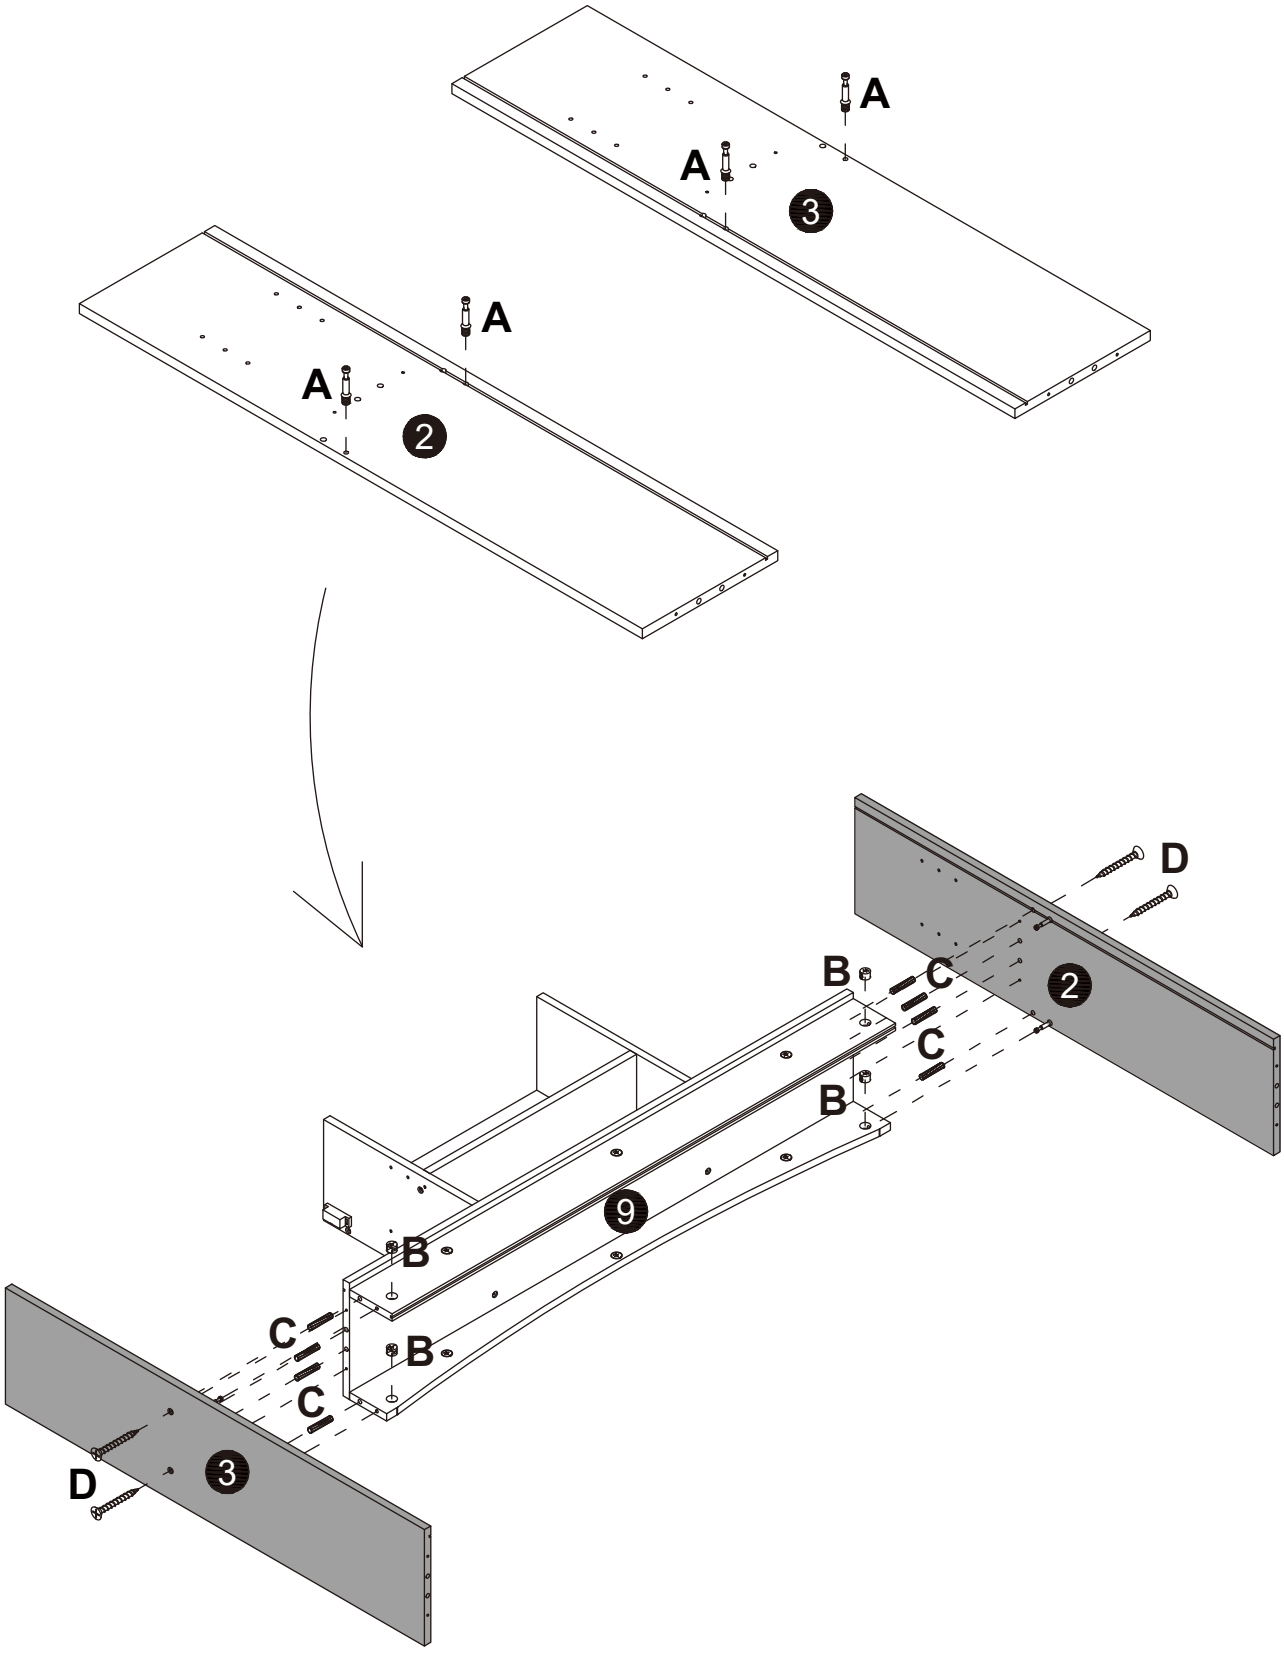

A x6
B x6
C x4

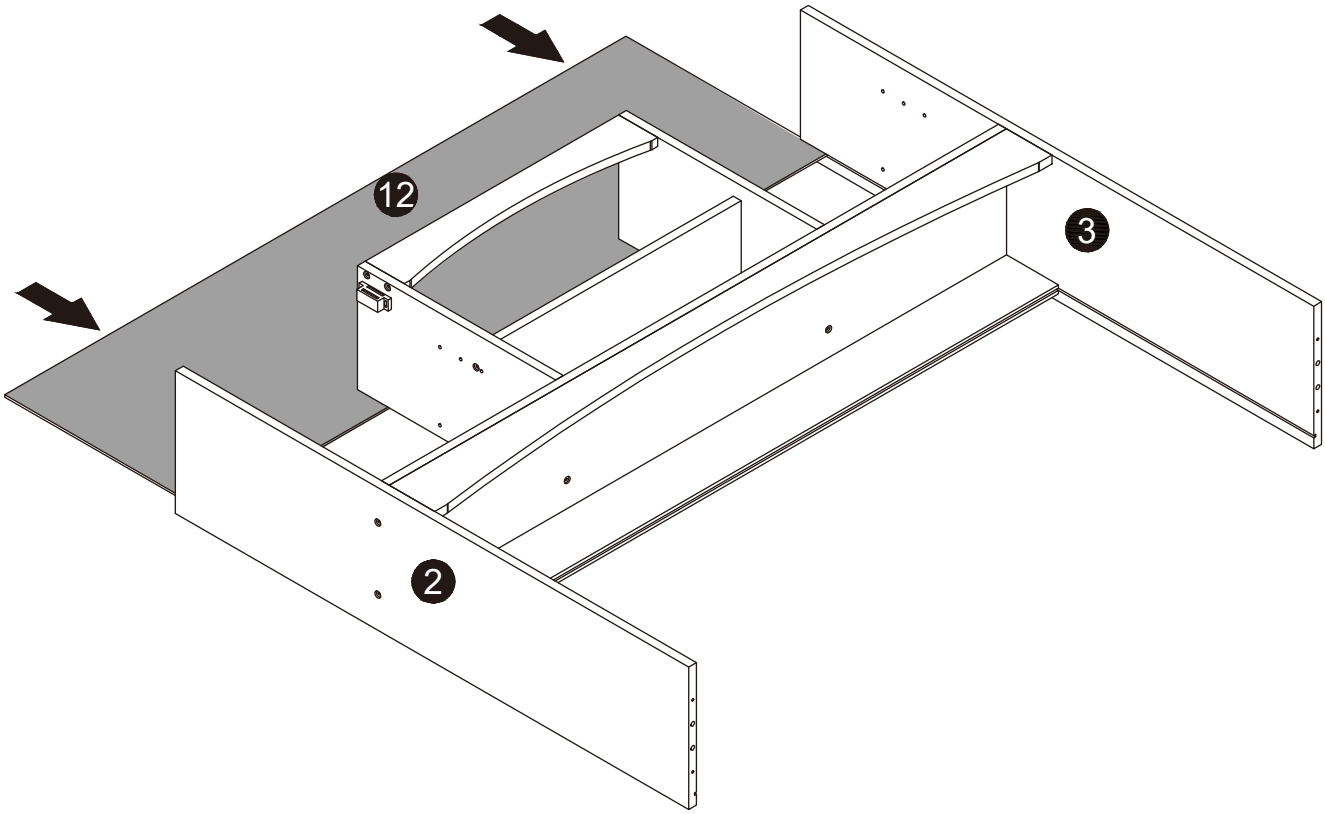

A
A
A
A
A
A
9
14
B
B
B
13
C
B
B
C
C
B
C
9

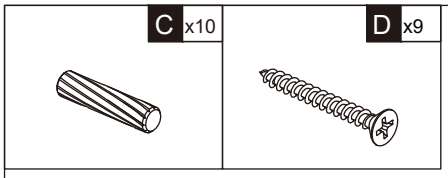

C x4
D x4

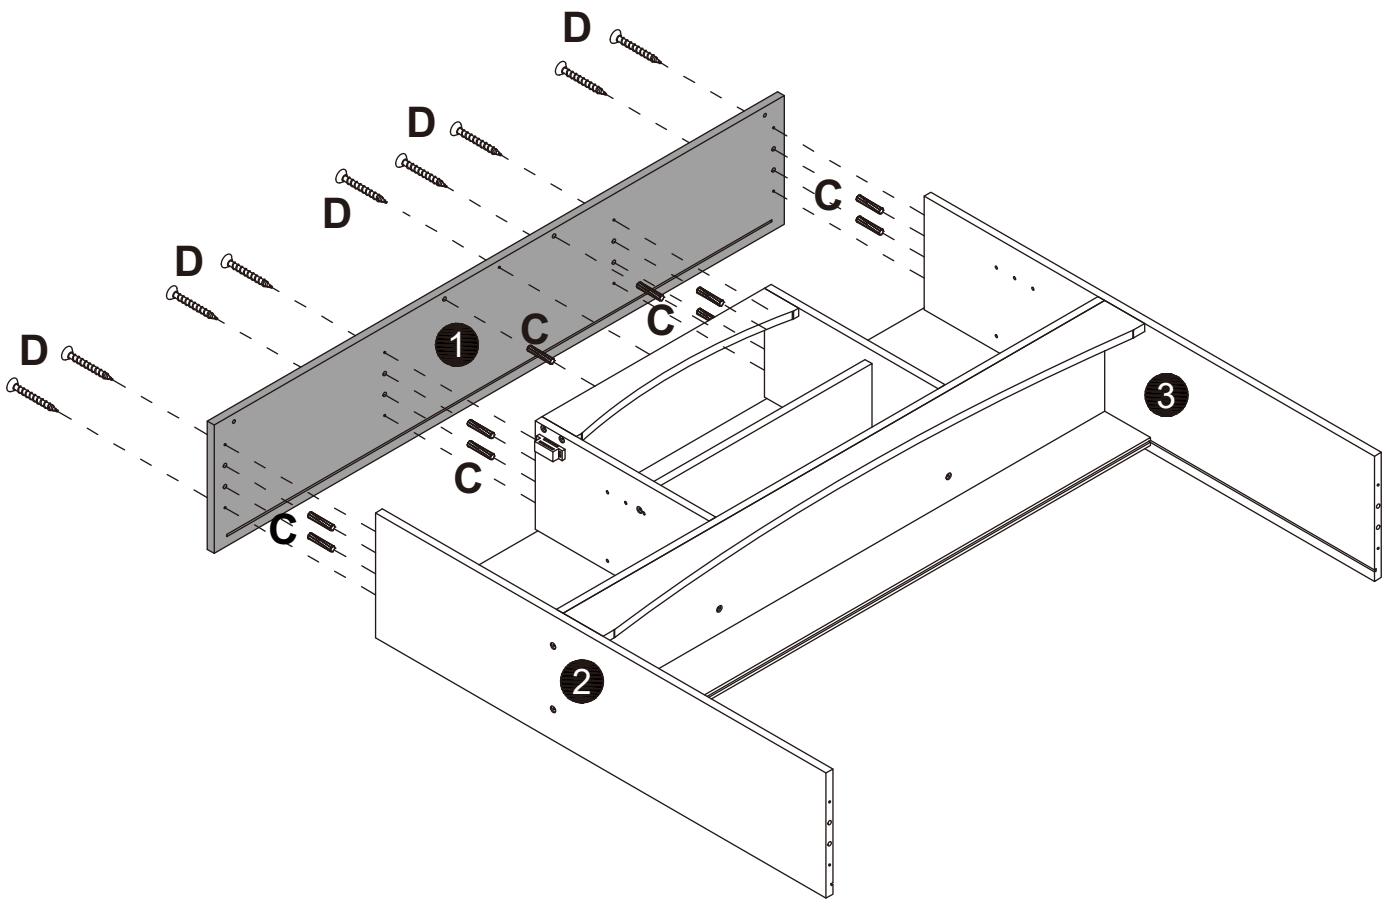

4
5
9
C
C
C
C
D
D
D
D

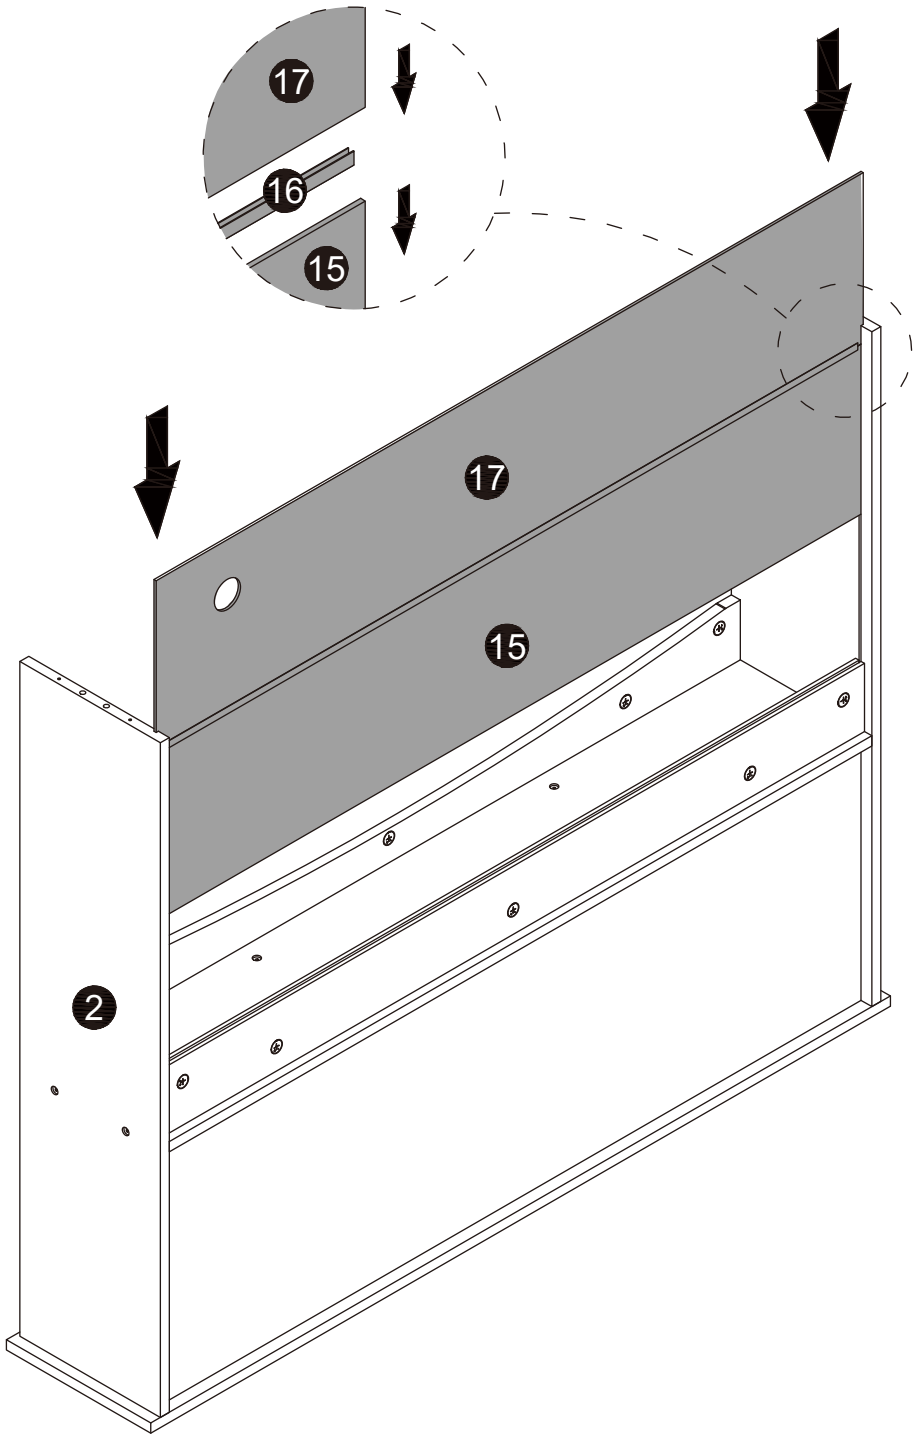

A x4
B x4
C x8
D x4

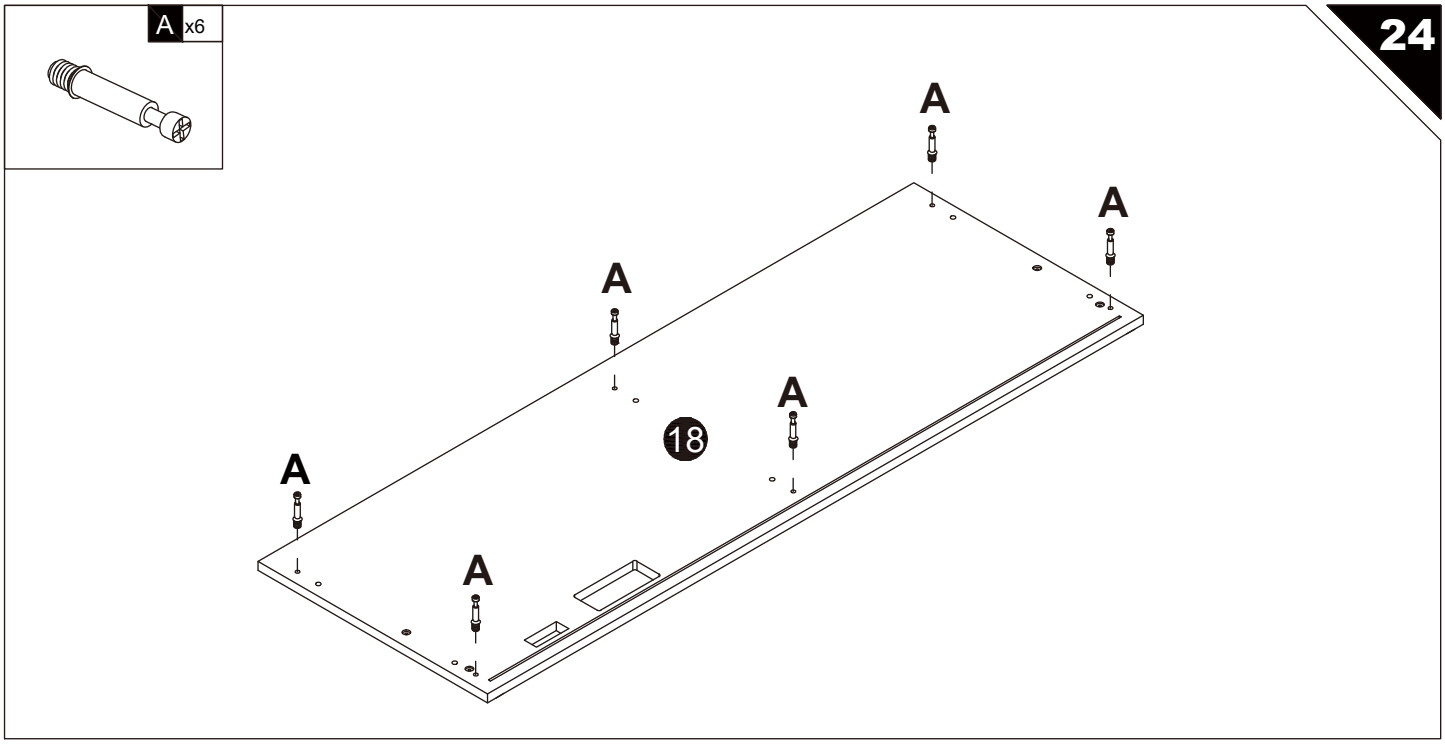

A
A
3
A
A
2
D
B
C
C
B
2
9
B
C
B
C
D
3

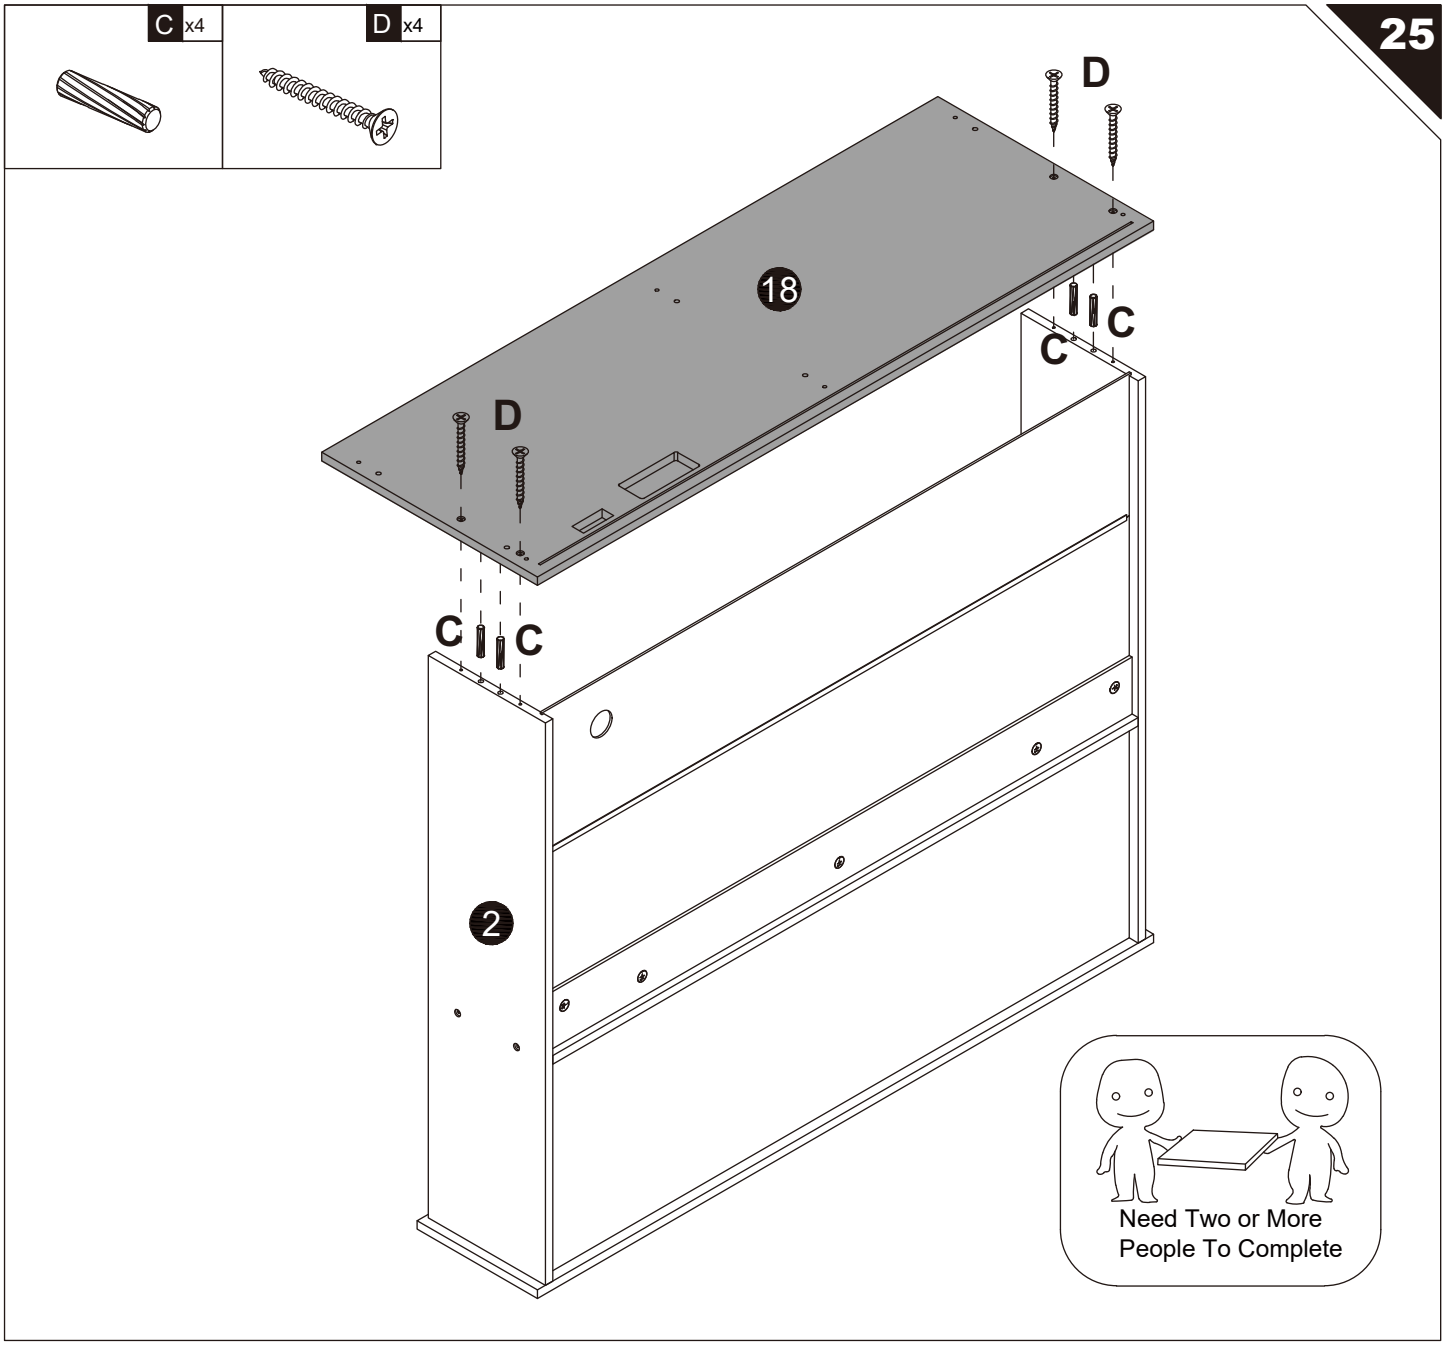

12
3
2


C x10
D x9


D
D
D
D
D
C
C
C
C
C
1
2
3

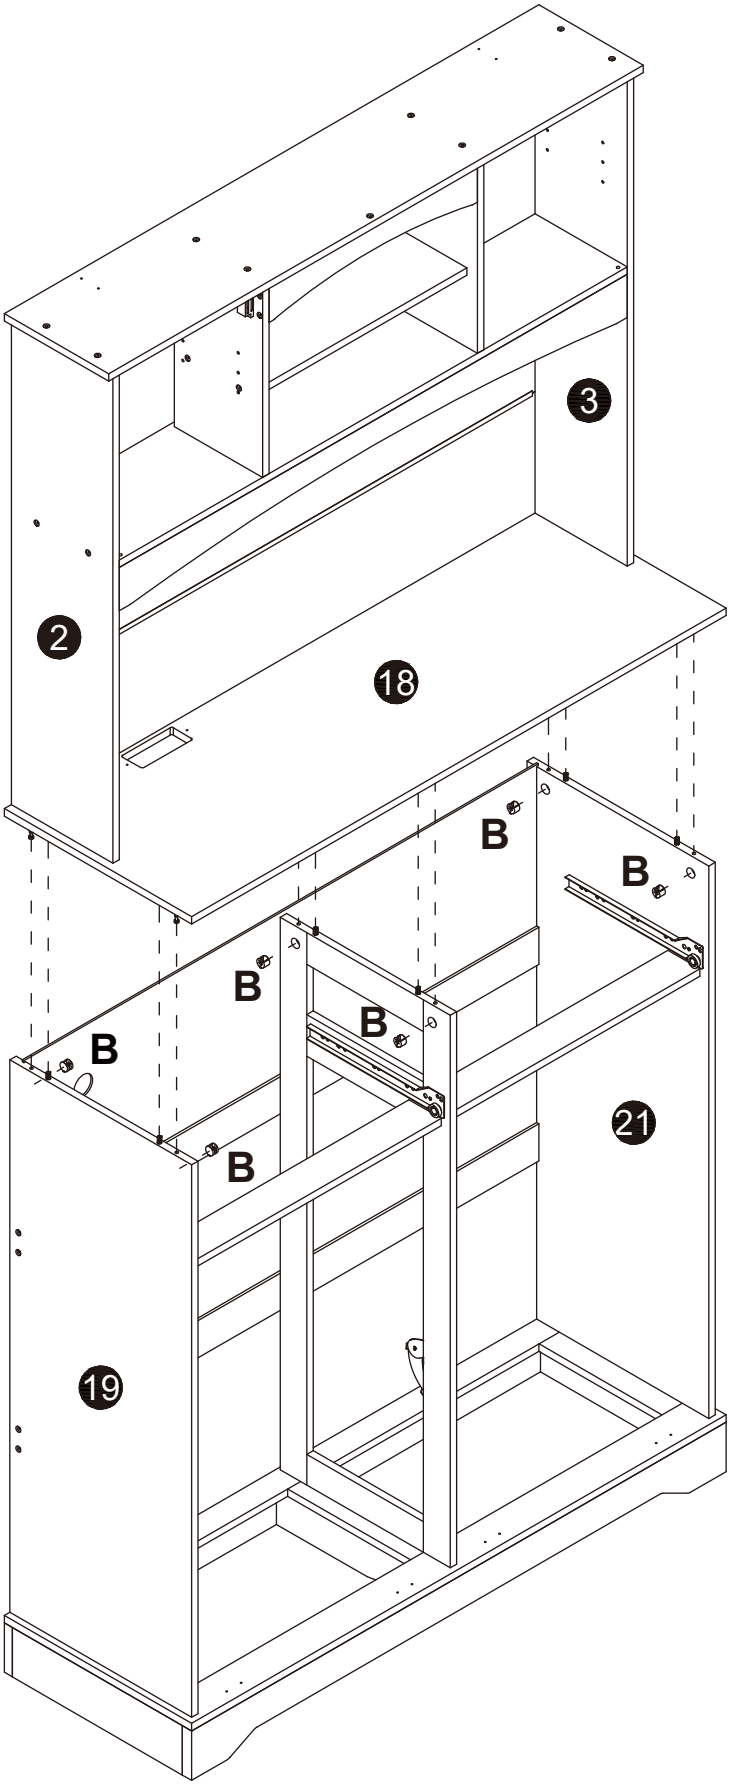

17
16
15
17
15
2

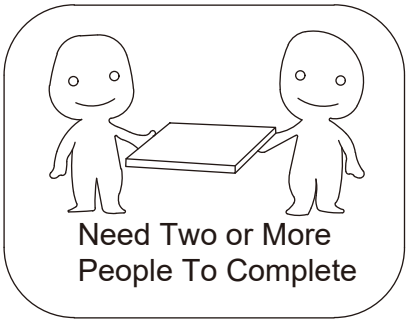

A x6
24
A
A
A
A
A
A
18


C x4
D x4
25
D
18
C
C
D
C
C
2
Need Two or More
People To Complete

B x6



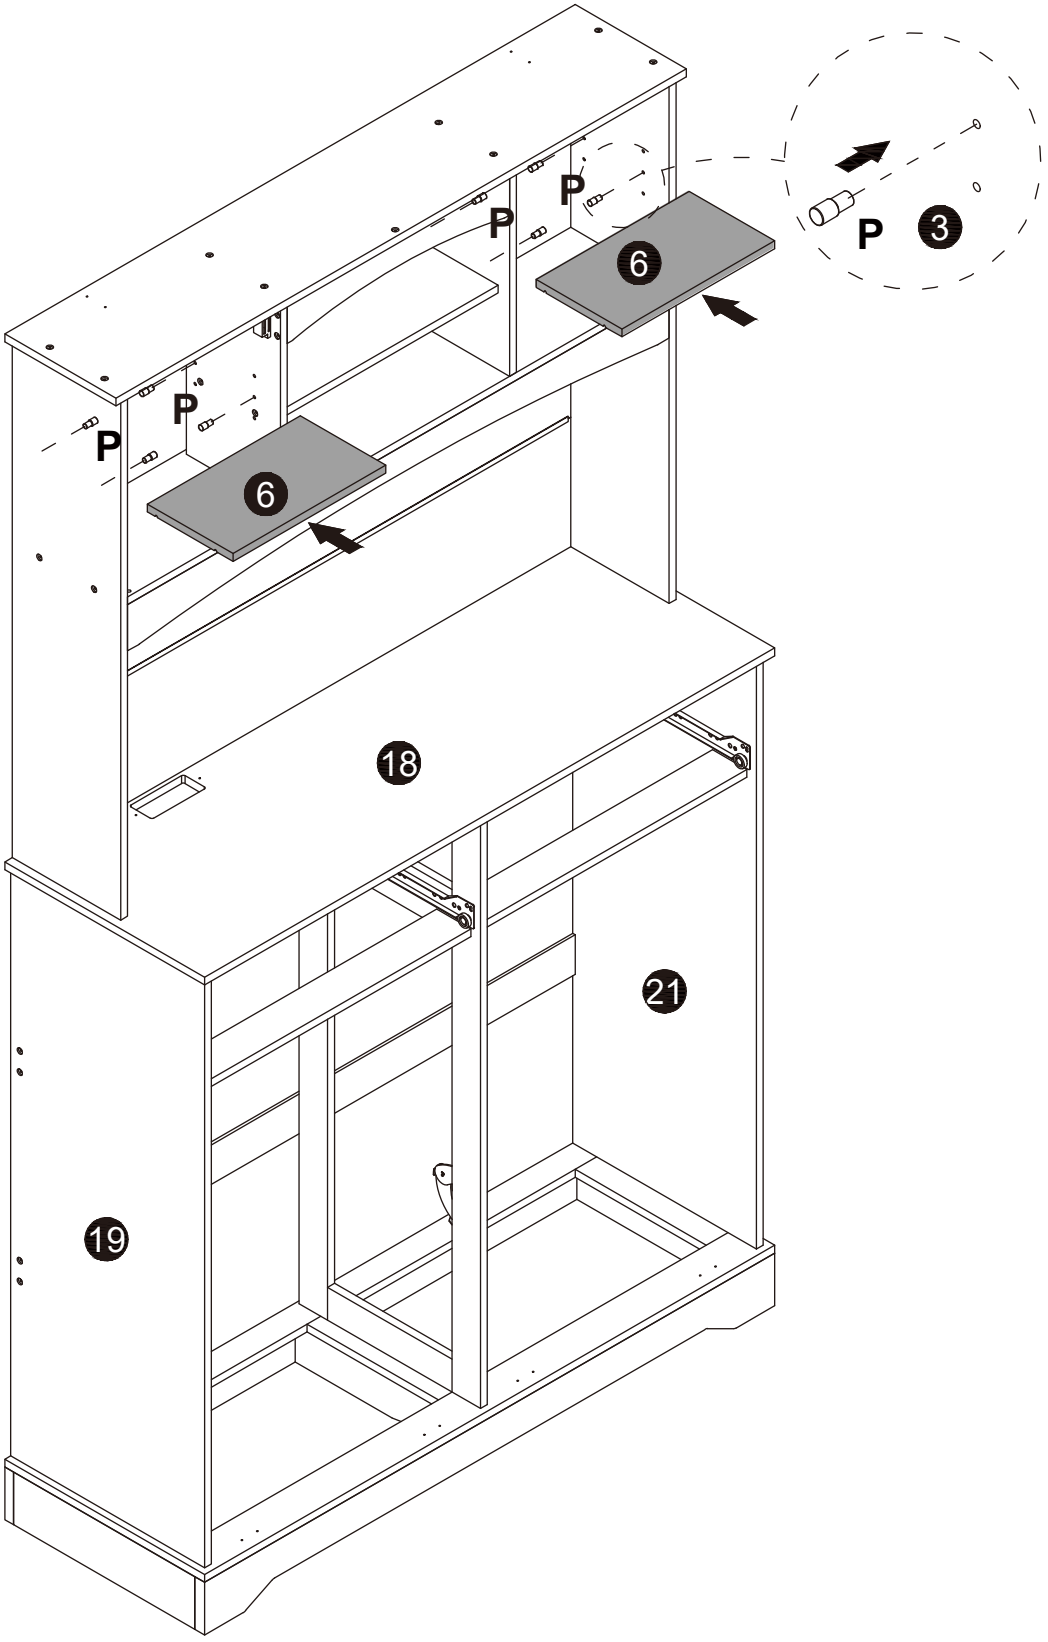




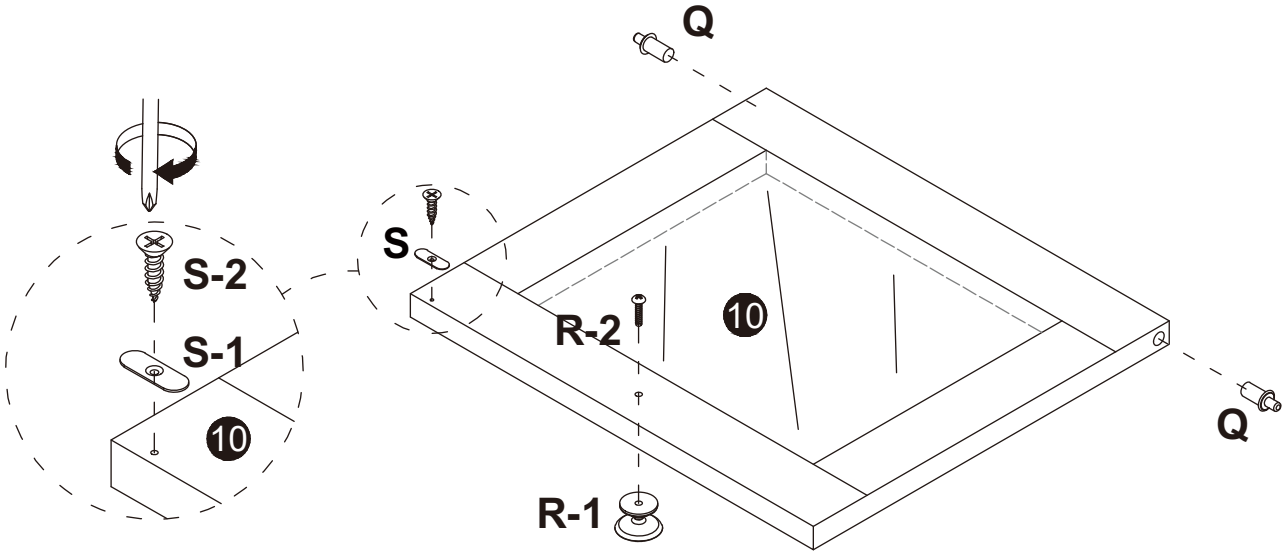
Need Two or More
People To Complete

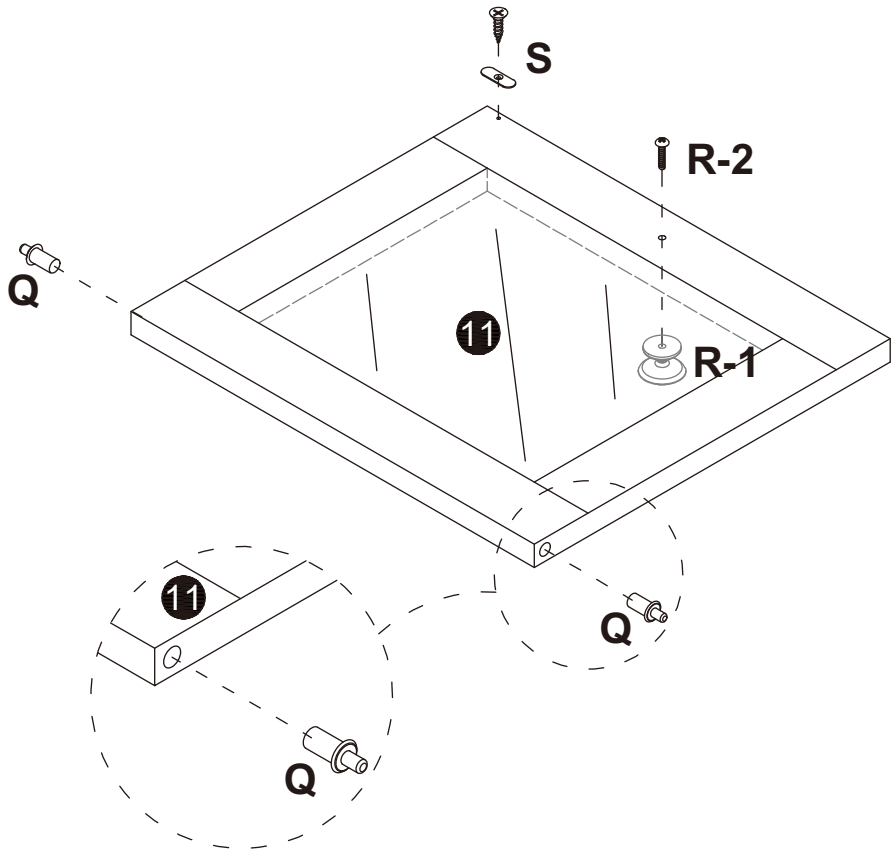
P x8

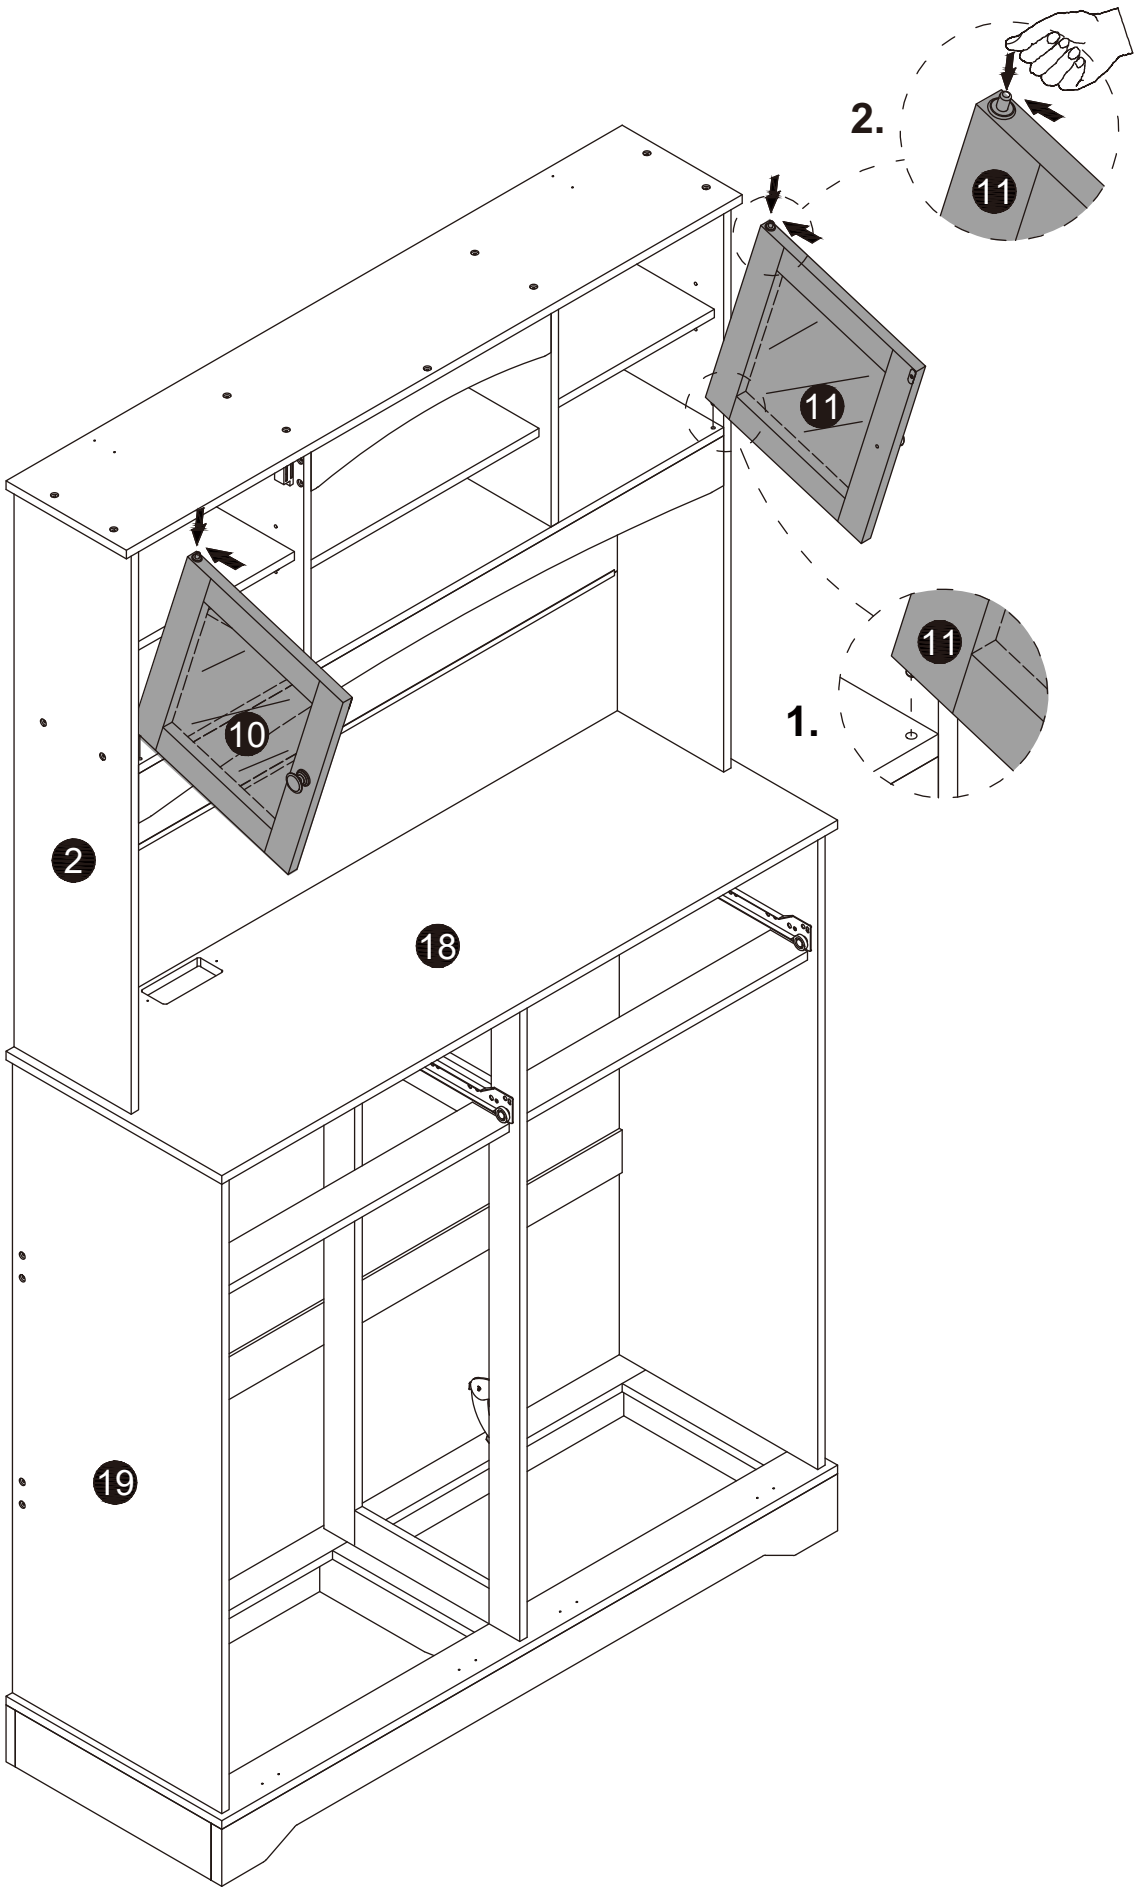


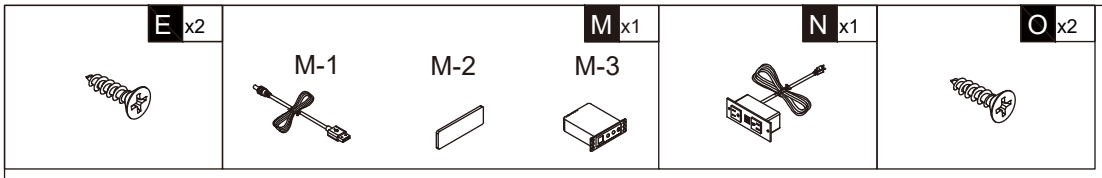


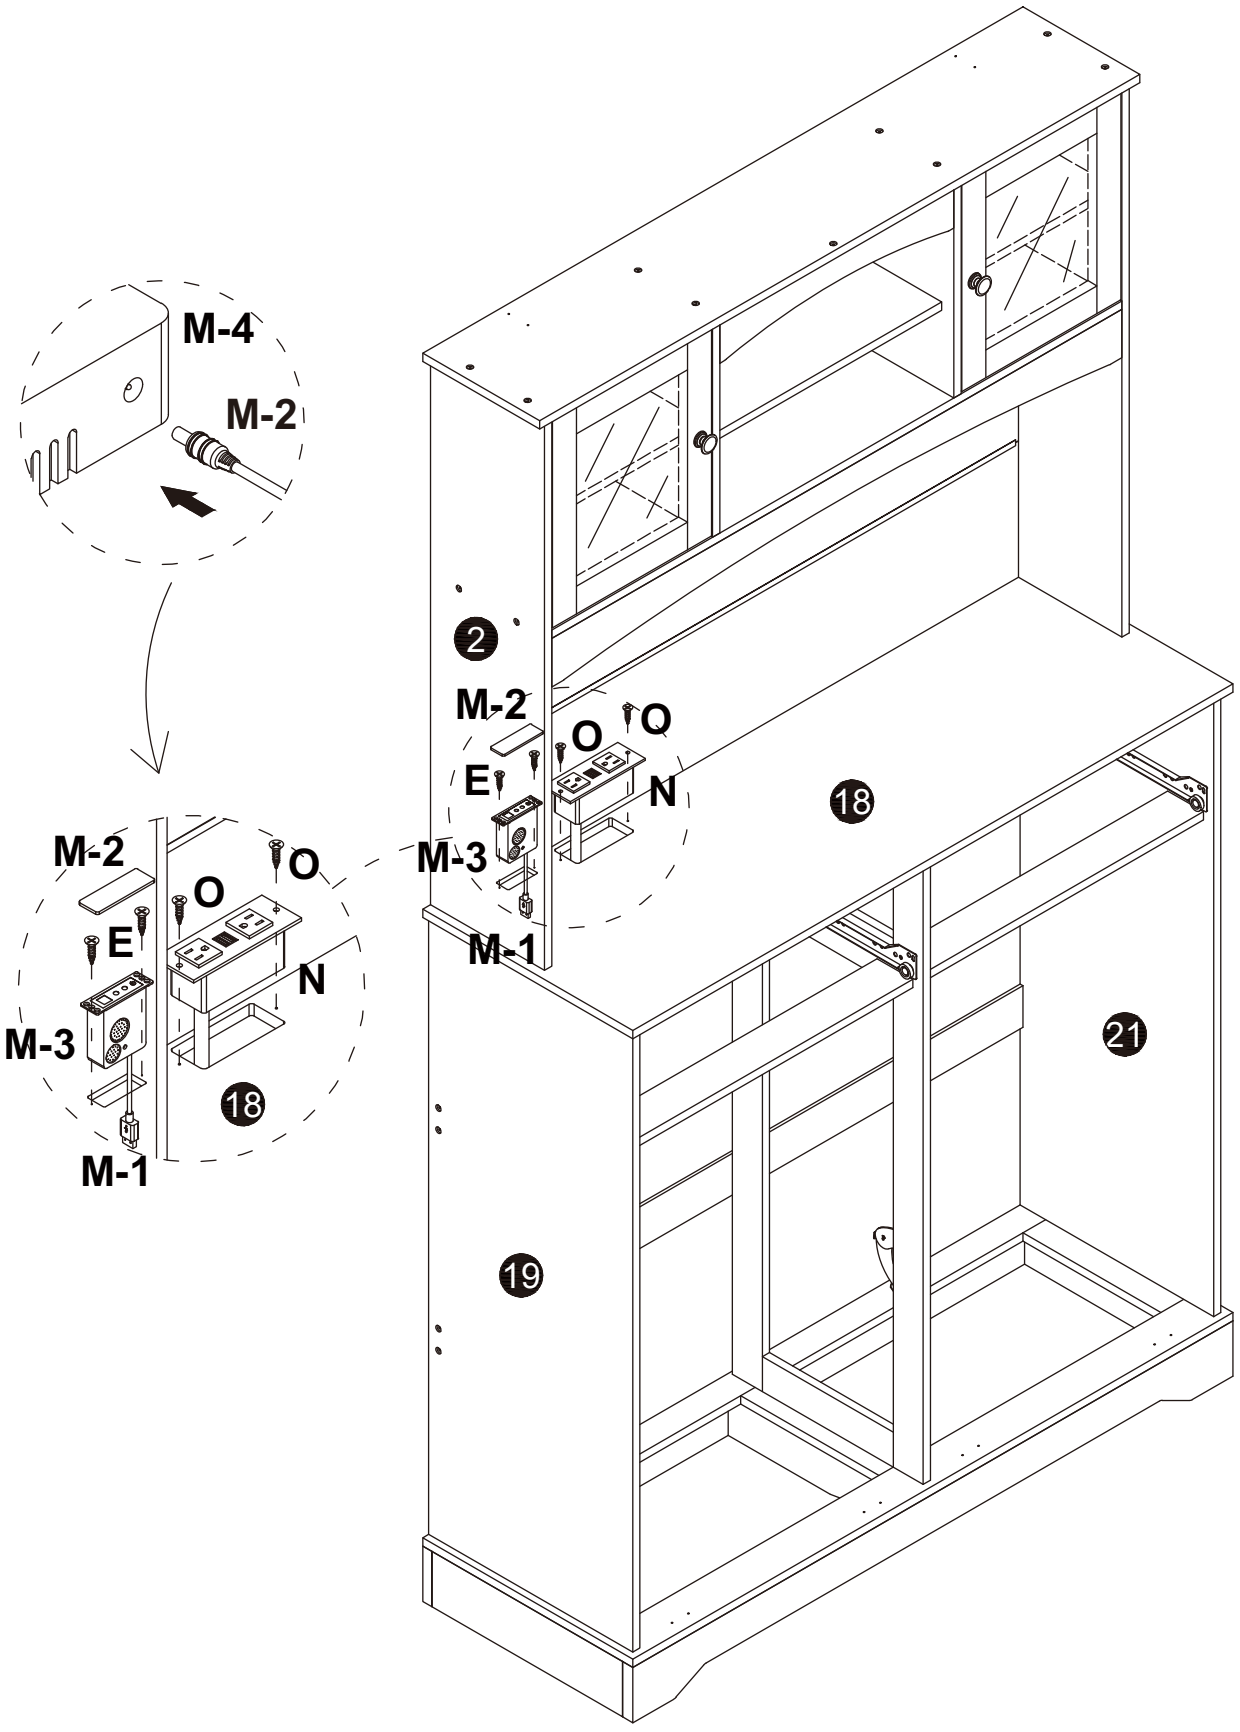
Q x4	R x2		S x2	
	R-1	R-2	S-1	S-2

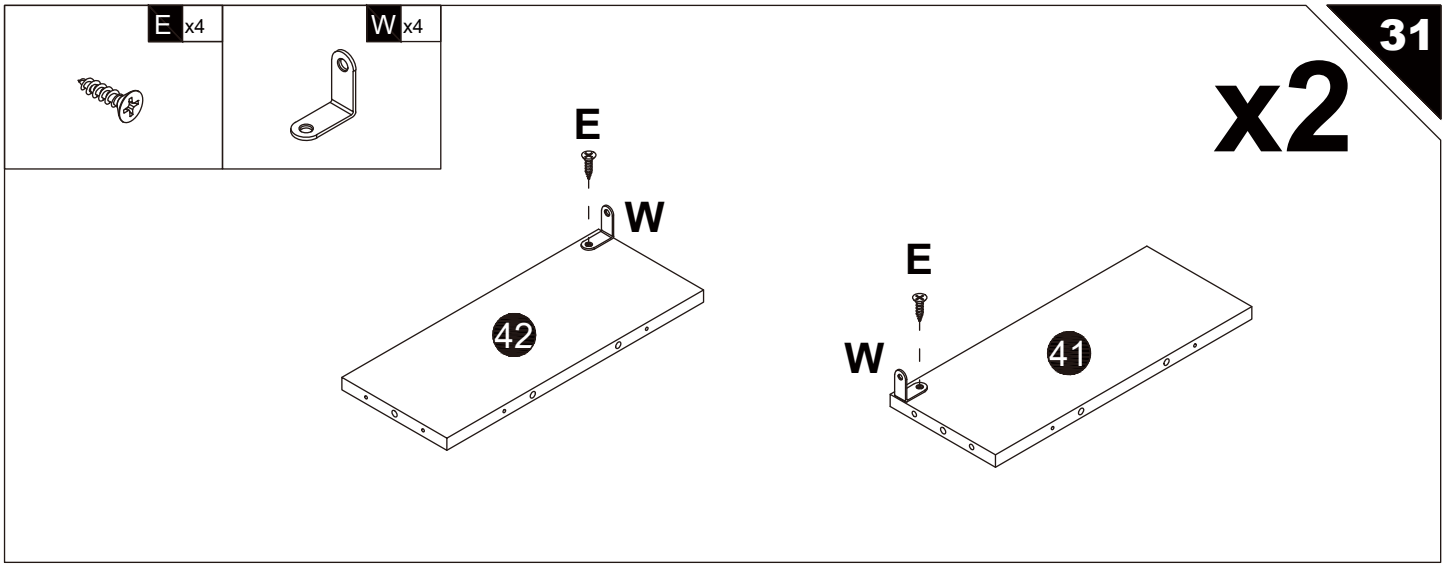


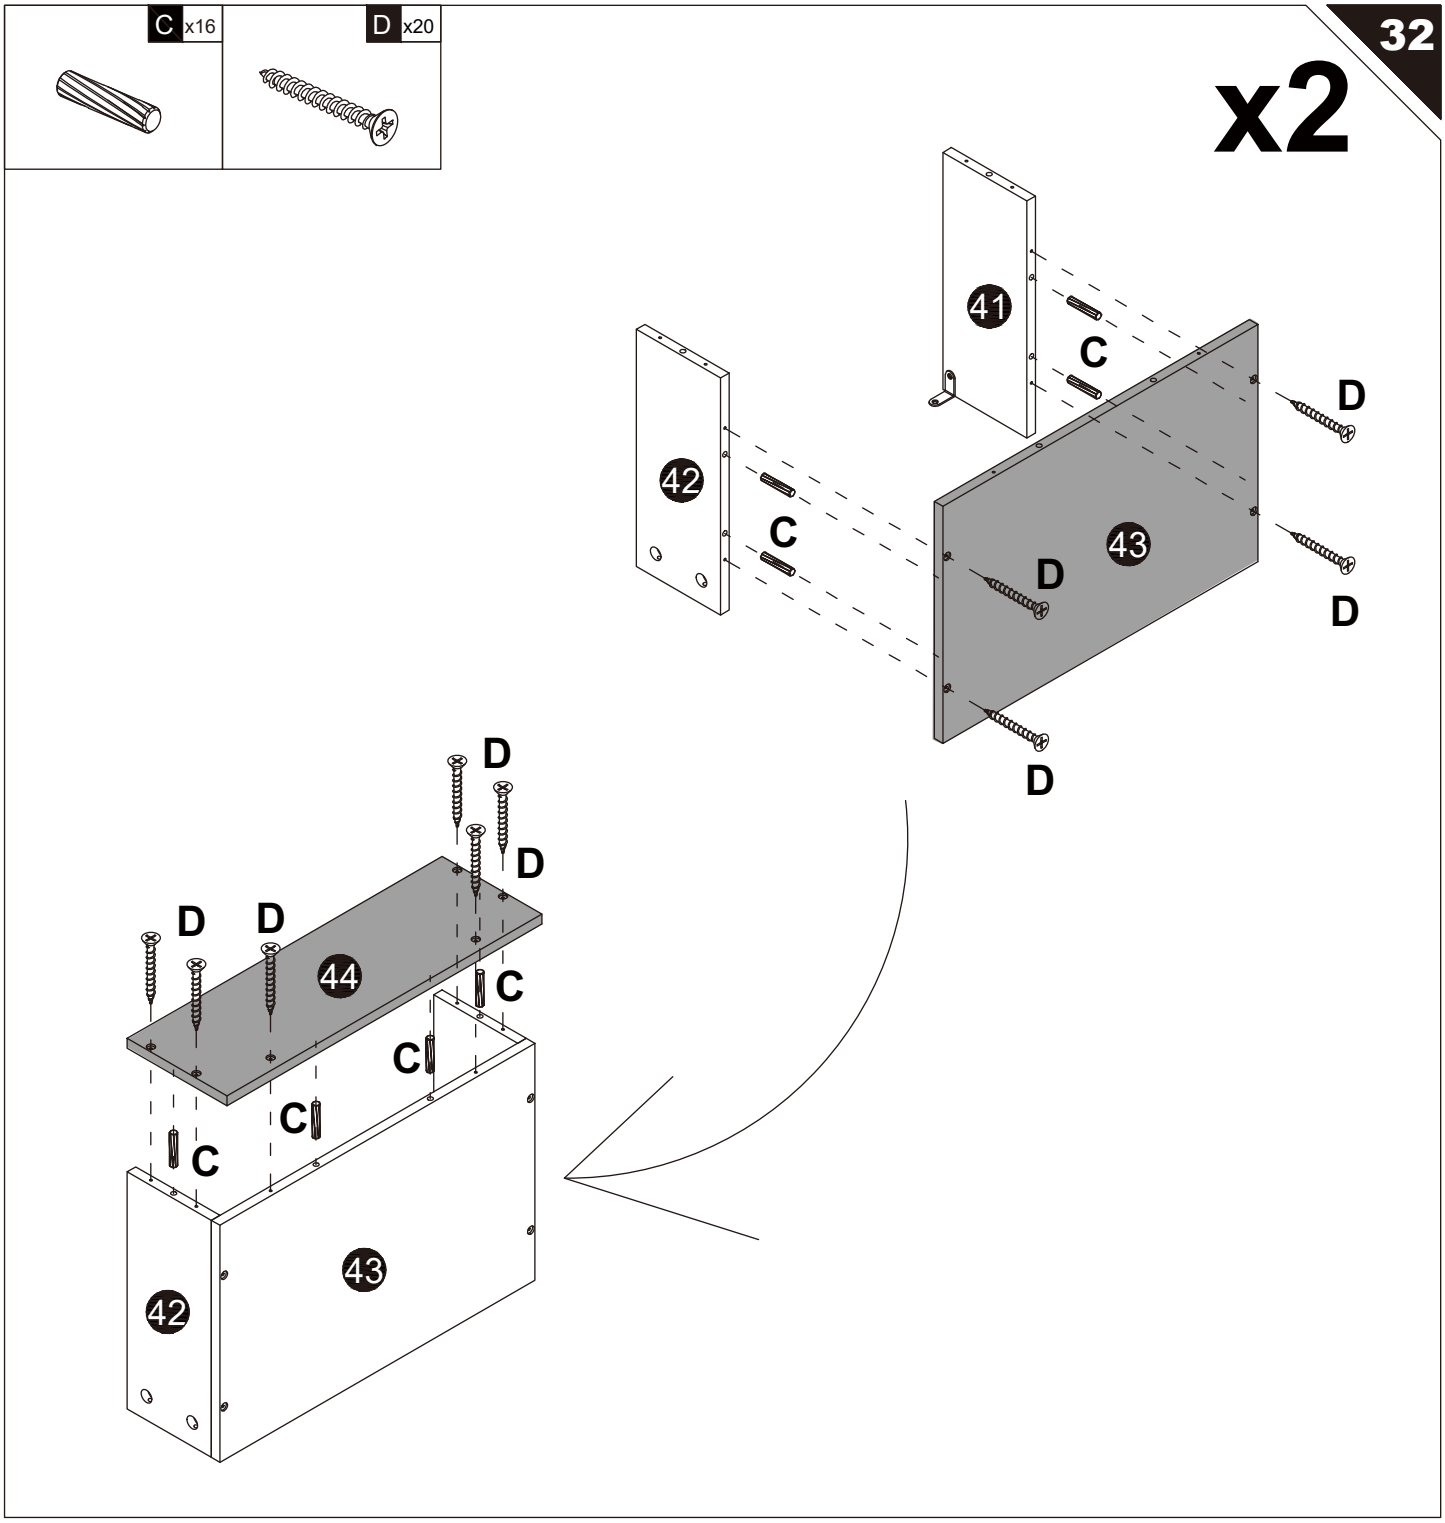




2.
11
11
11
1.
10
2
18
19


E x2
M x1
M-1
M-2
M-3
N x1
O x2

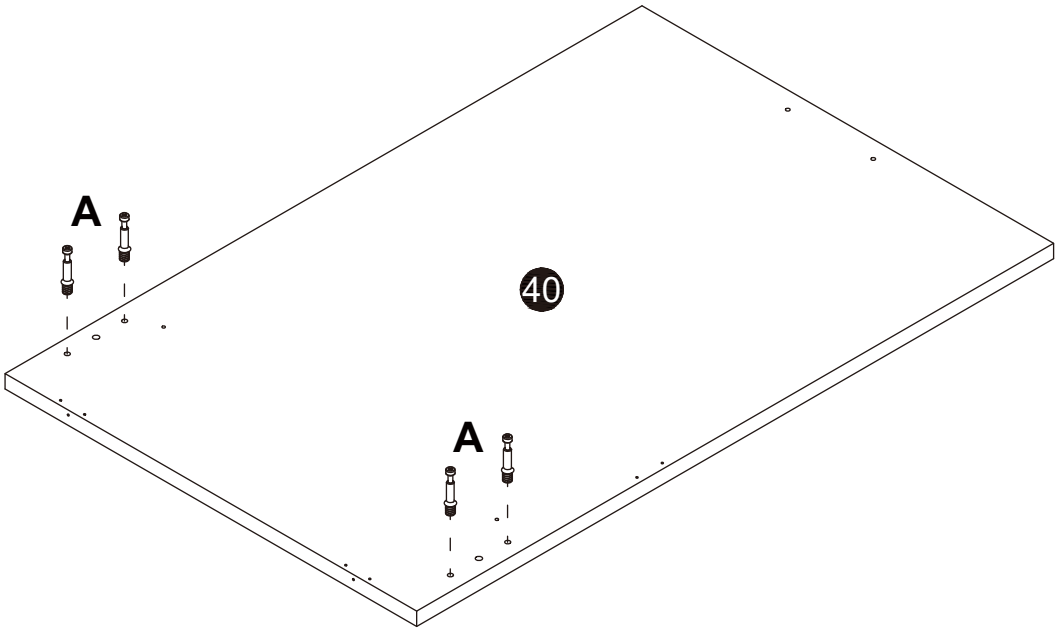

M-4
M-2
M-2
O
O
E
N
M-3
M-1
18
2
M-2
O
O
E
N
M-3
M-1
18
21
19

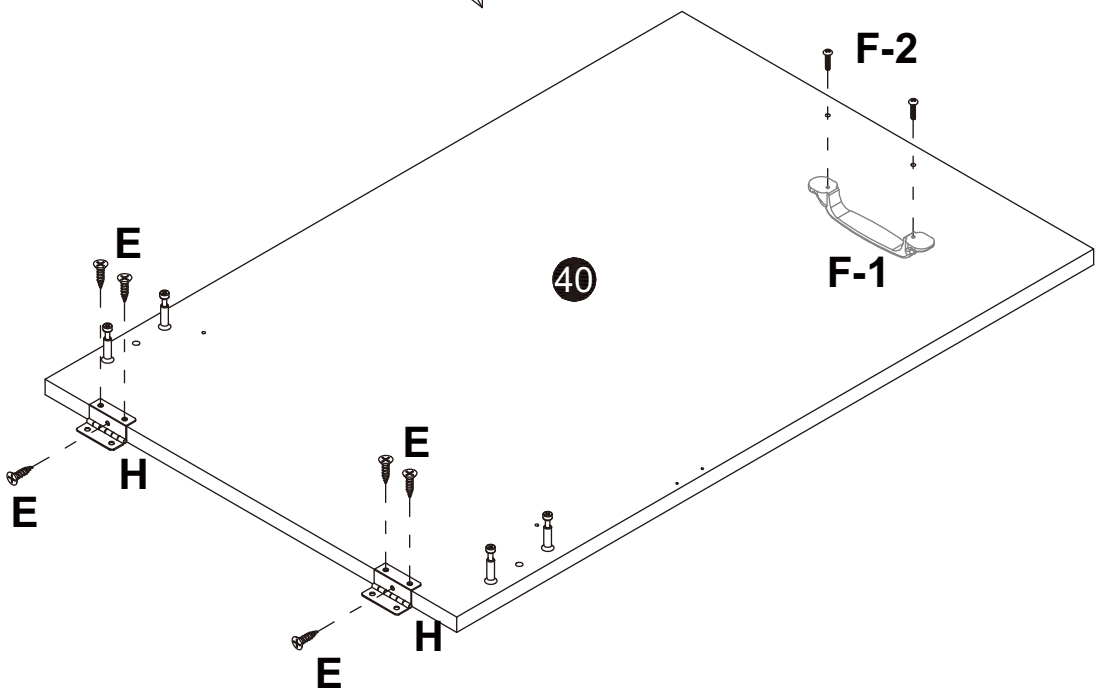

E x4
W x4
31
x2
E
W
42
E
W
41


C x16
D x20
32
x2
41
C
D
42
C
43
D
D
D
D
D
D
D
44
C
C
C
C
43
42

A x8	E x12	F x2	H x2
		F-1 F-2 	

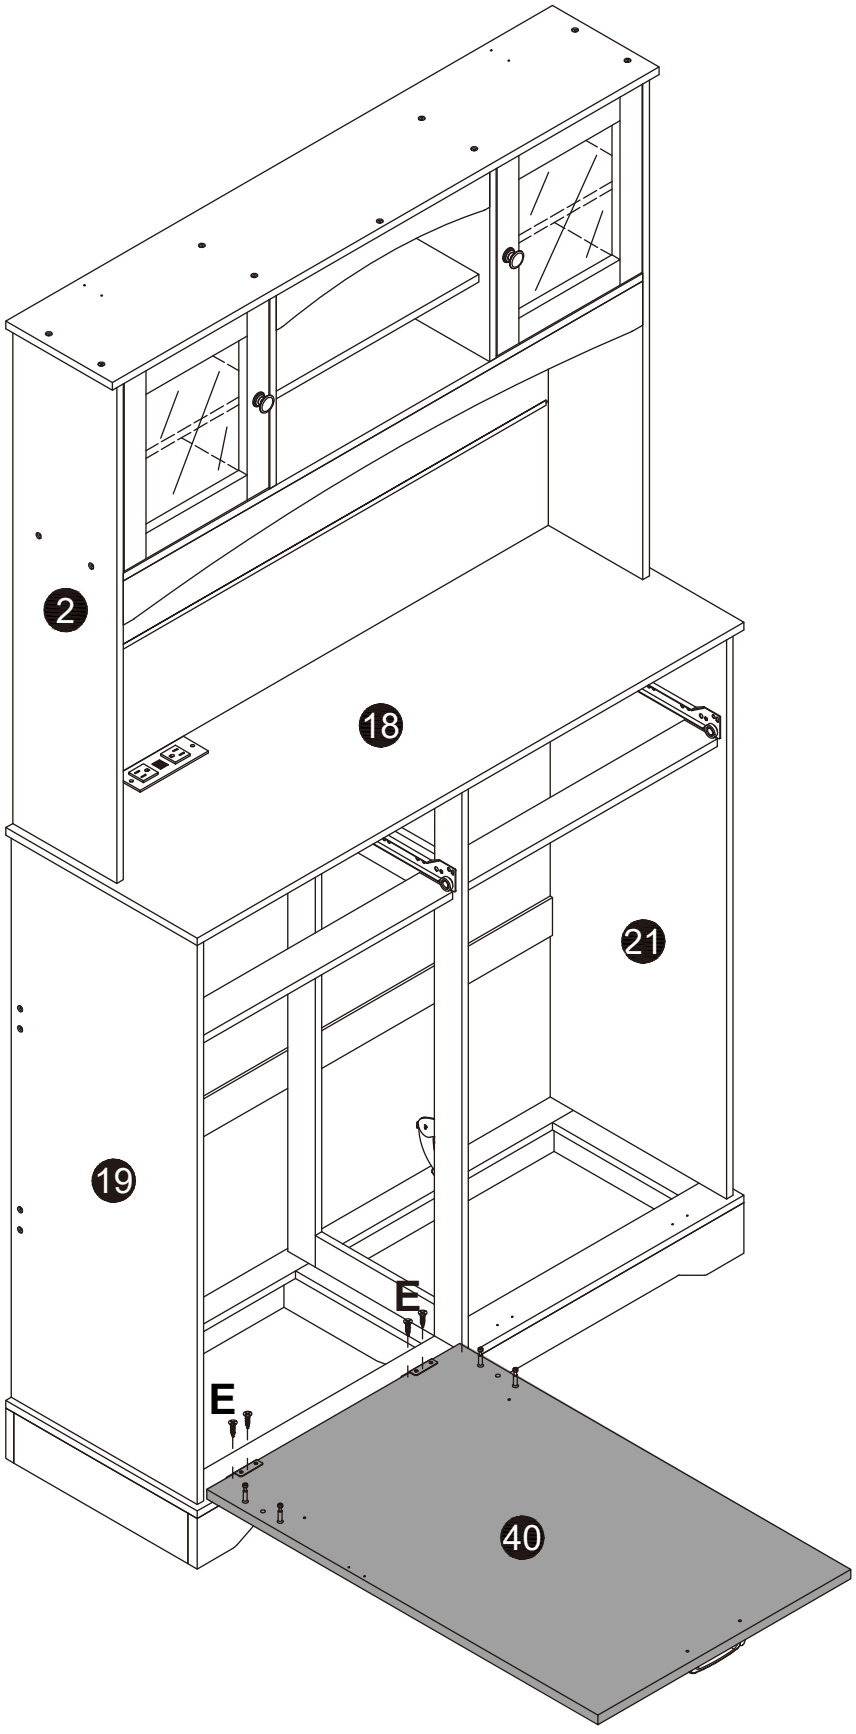
x2

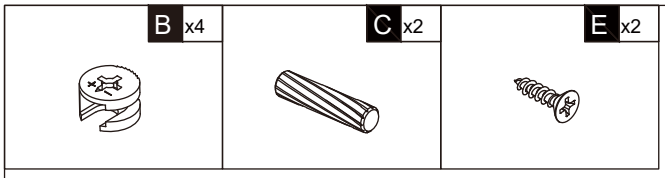


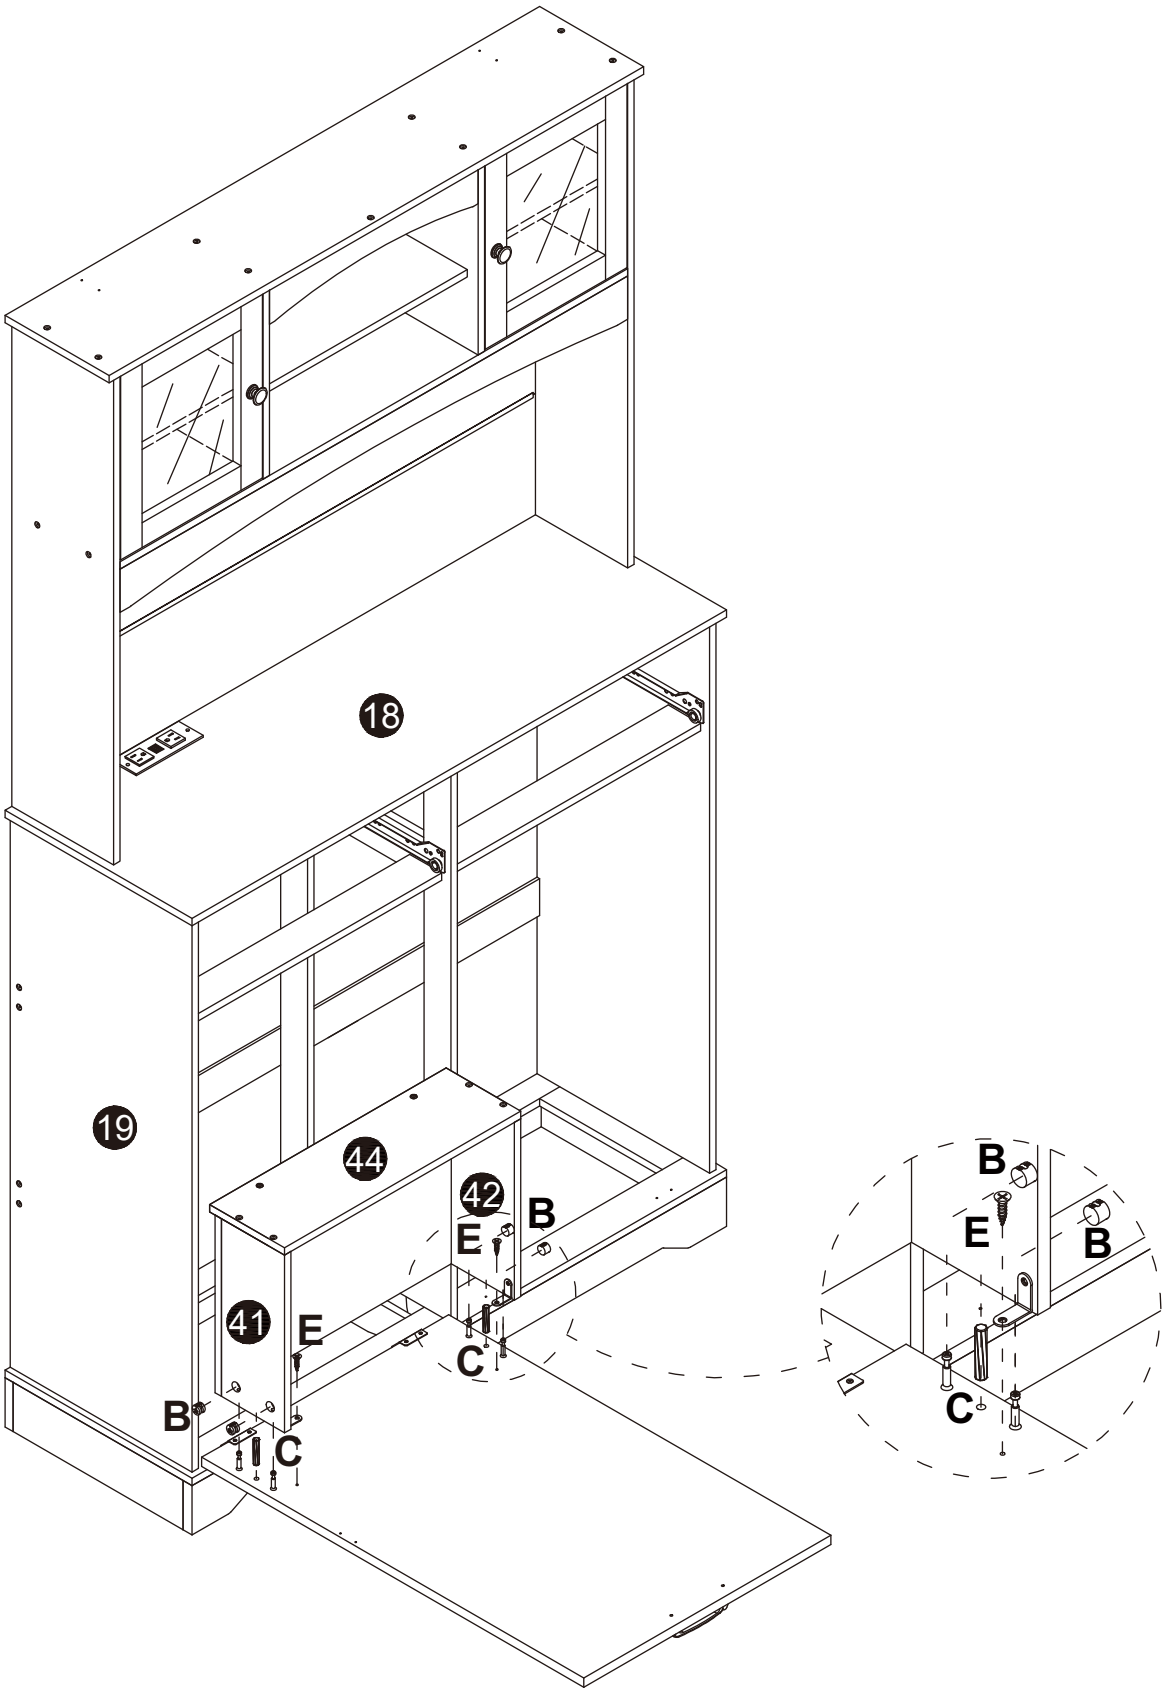


E x4



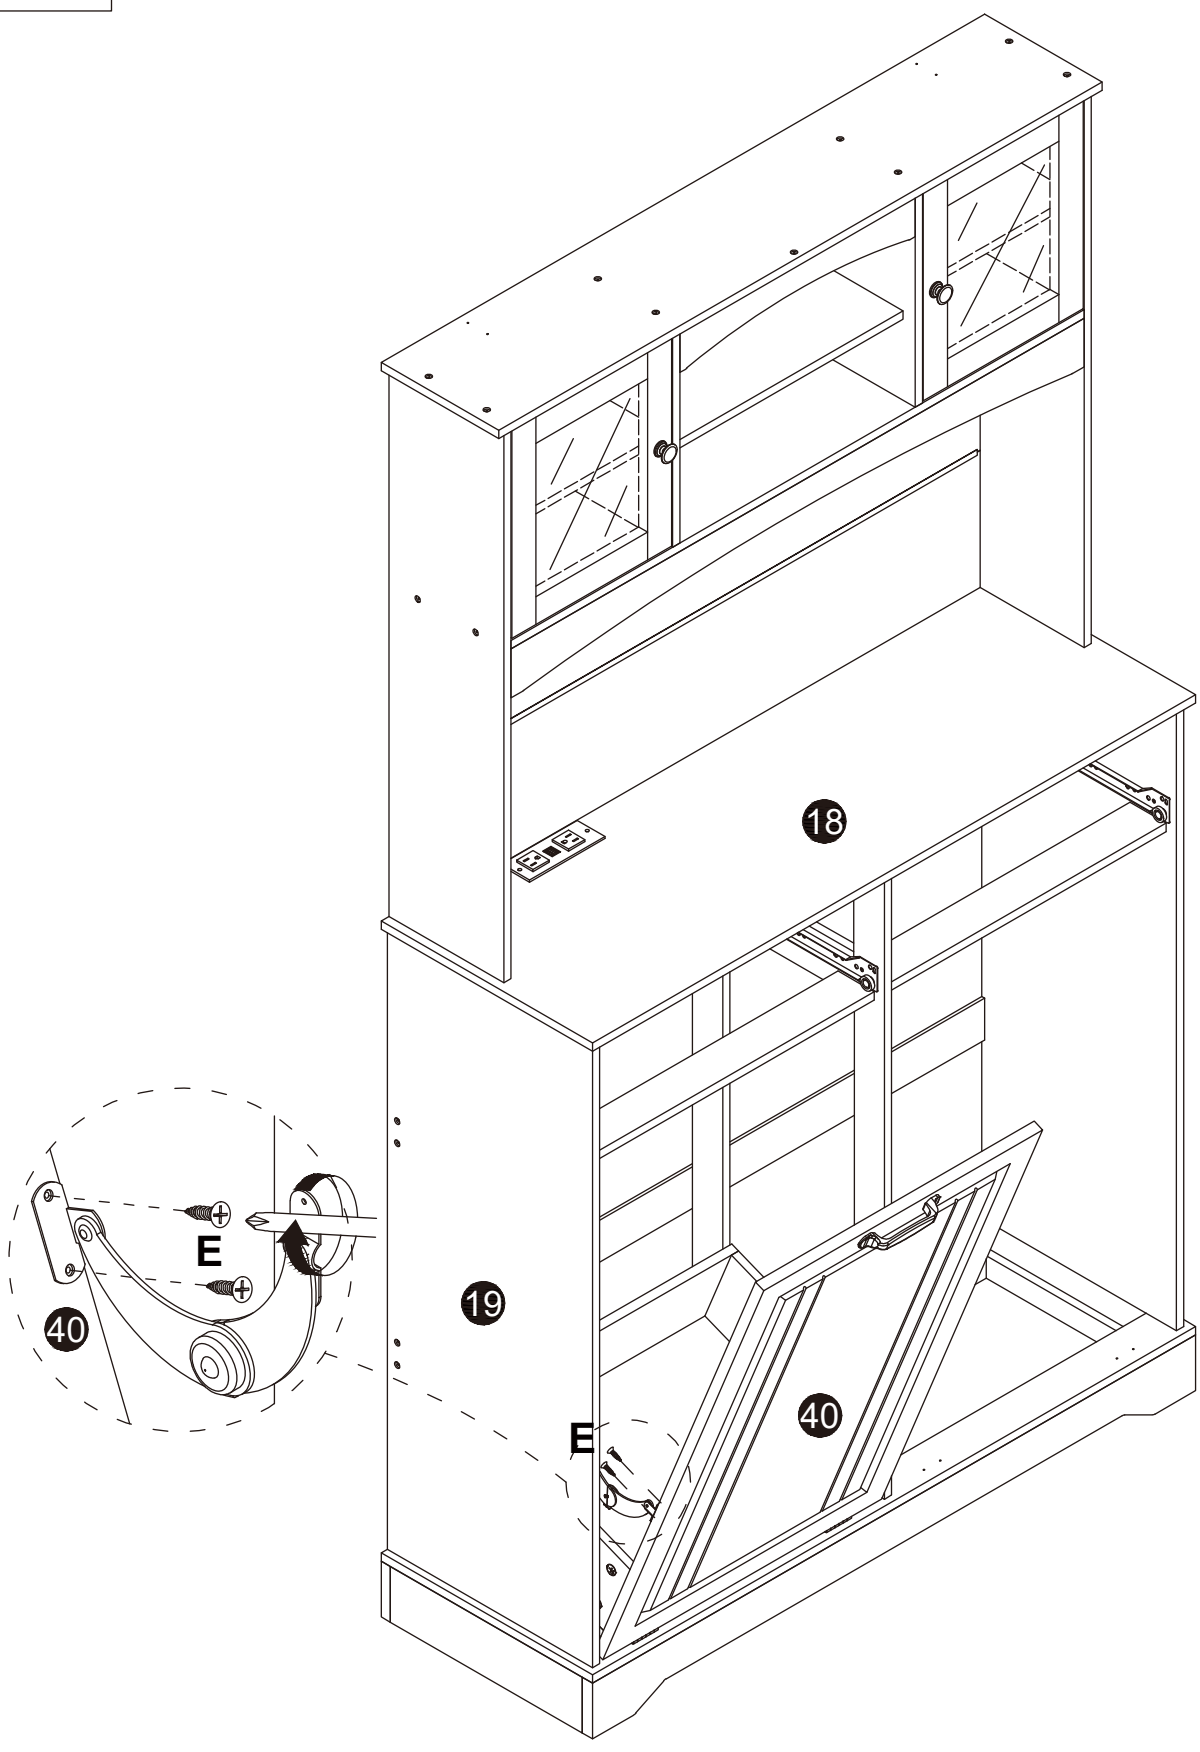



B x4
C x2
E x2


18
19
44
42
B
E
41
E
C
B
C
B
E
B
C

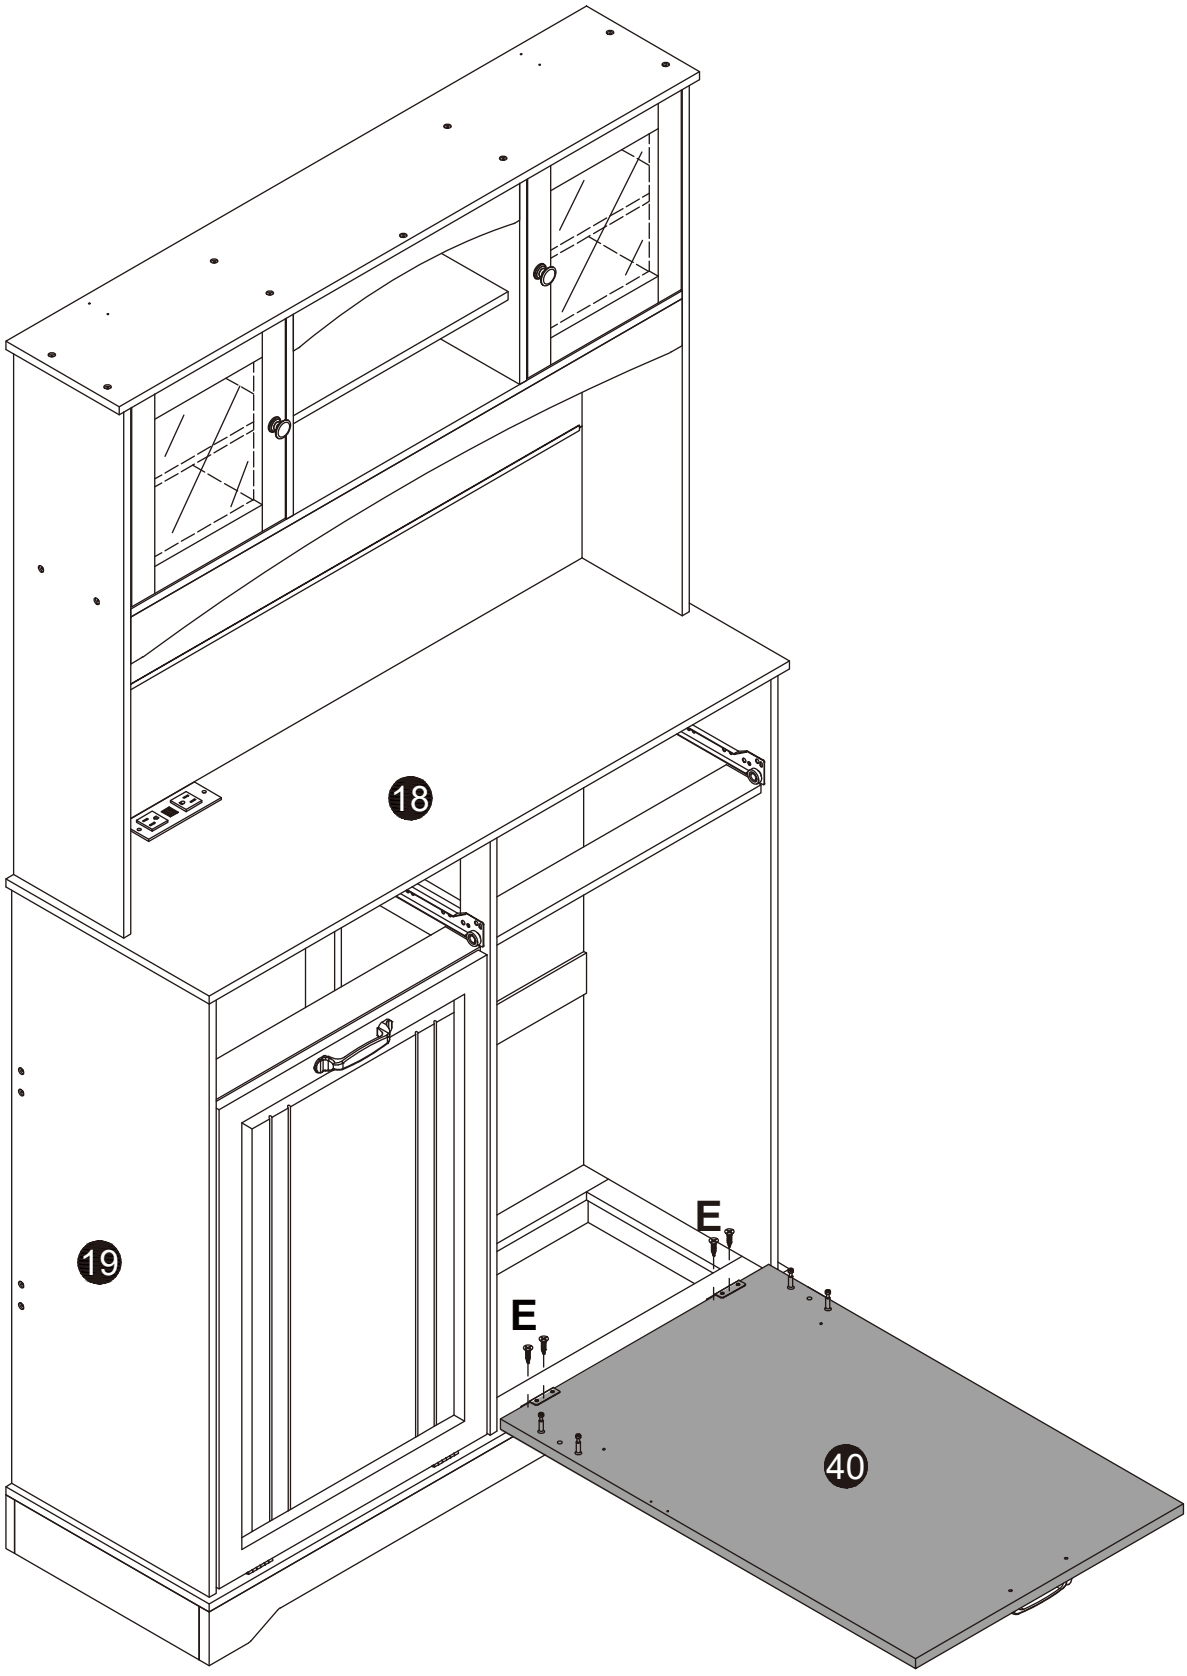
E x2



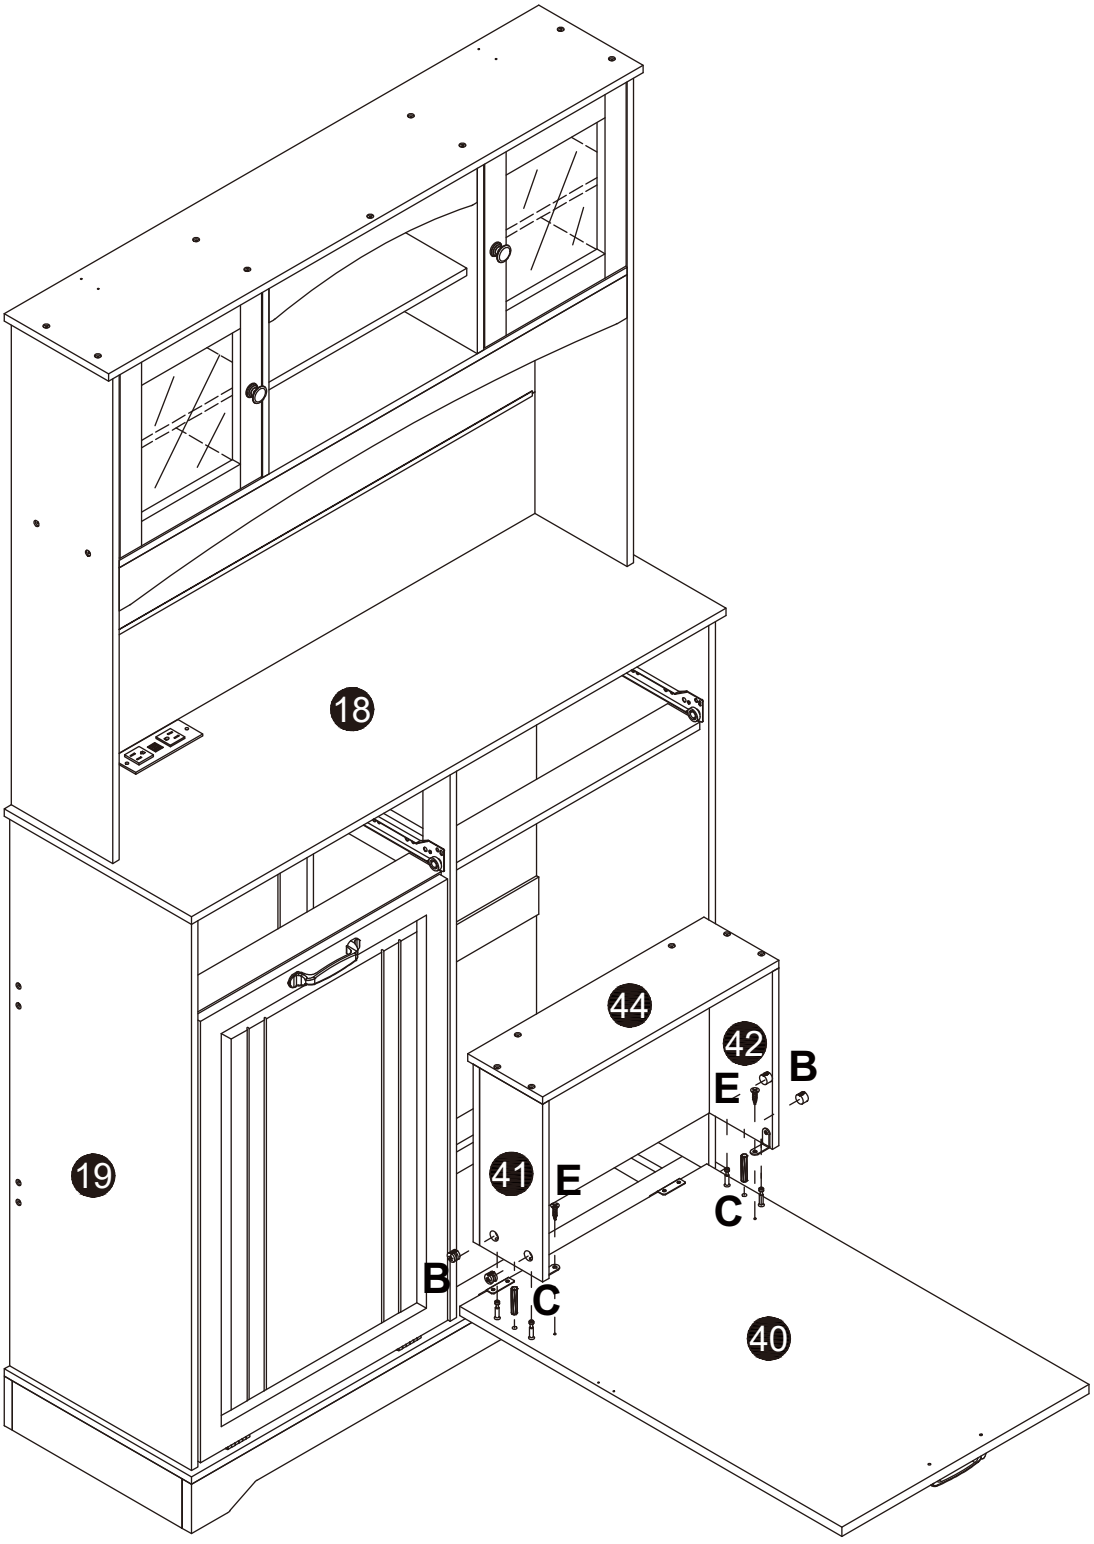


E x4



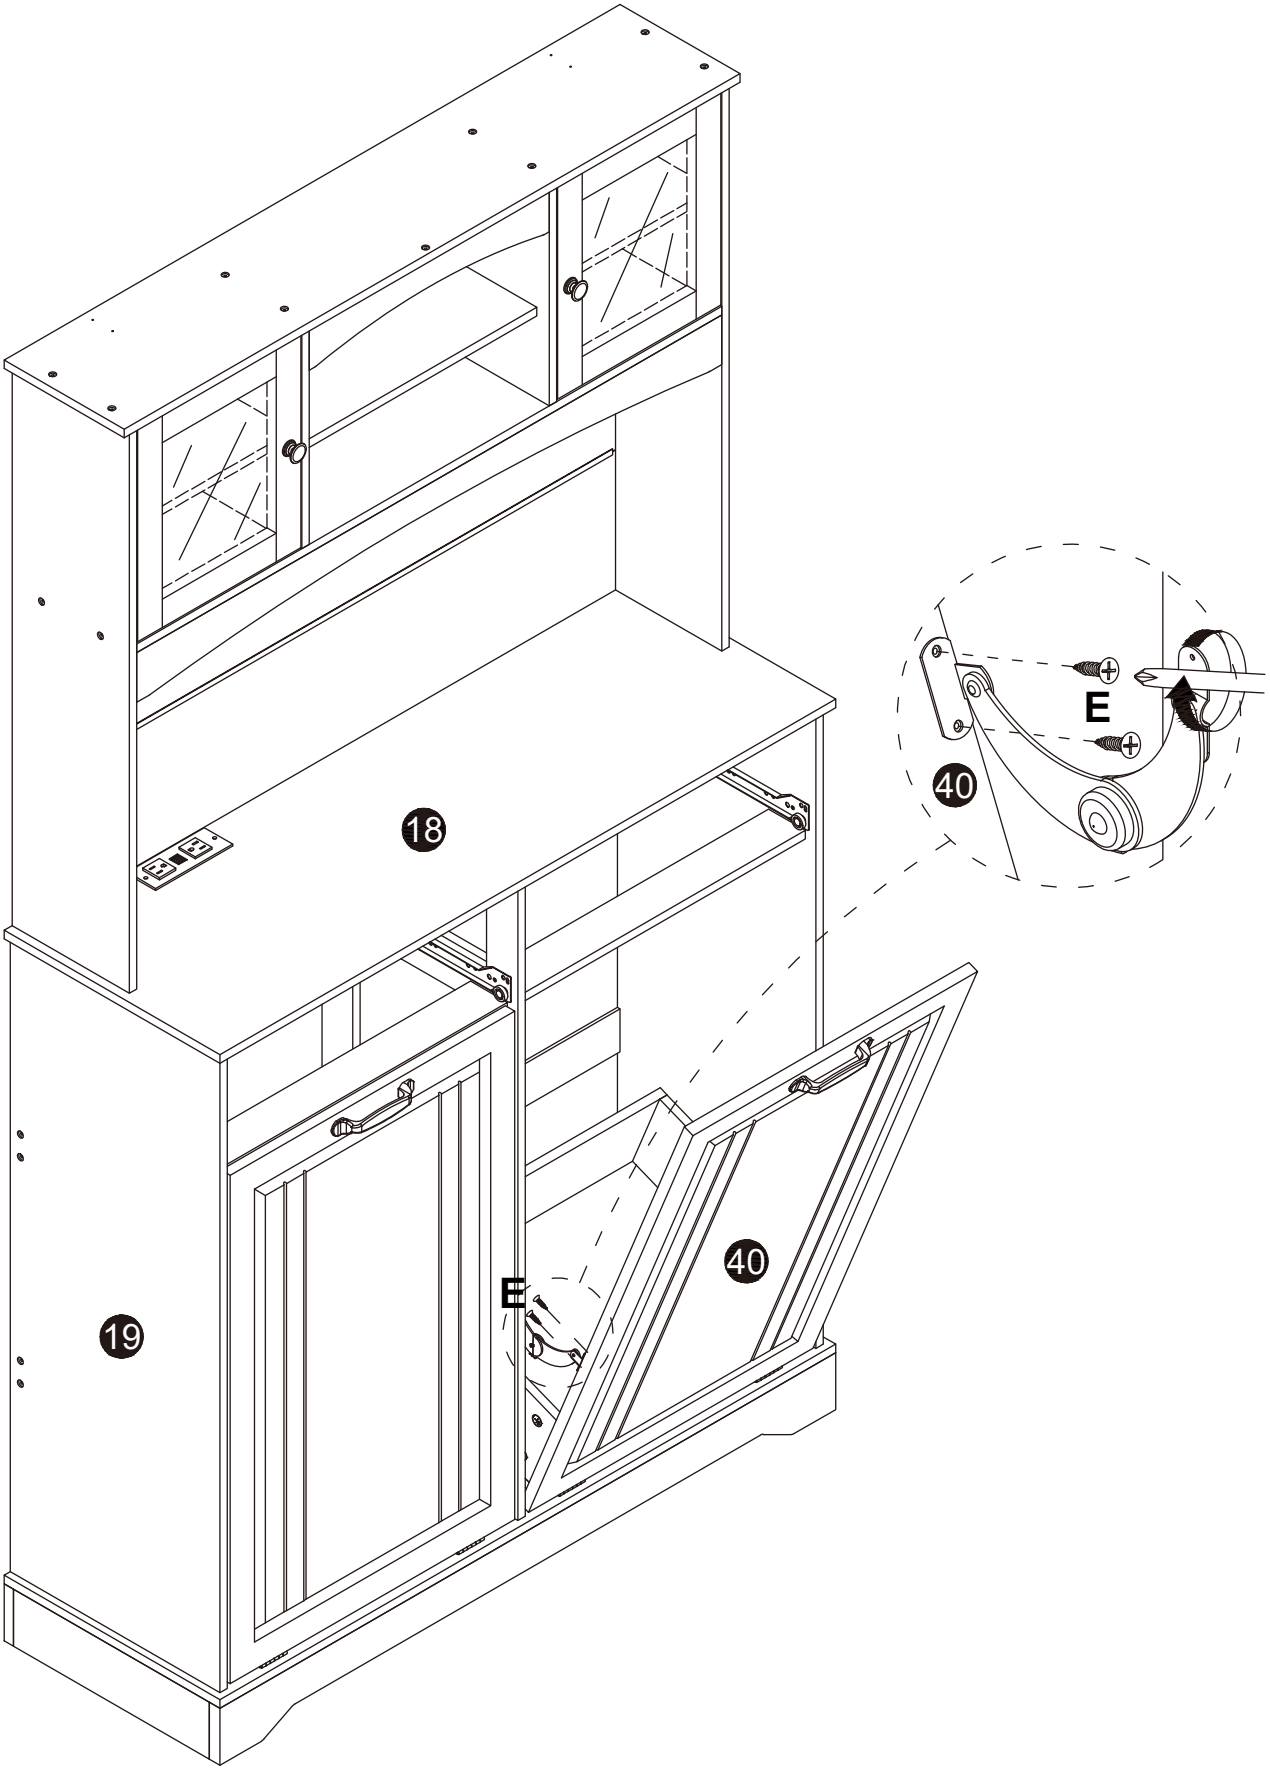


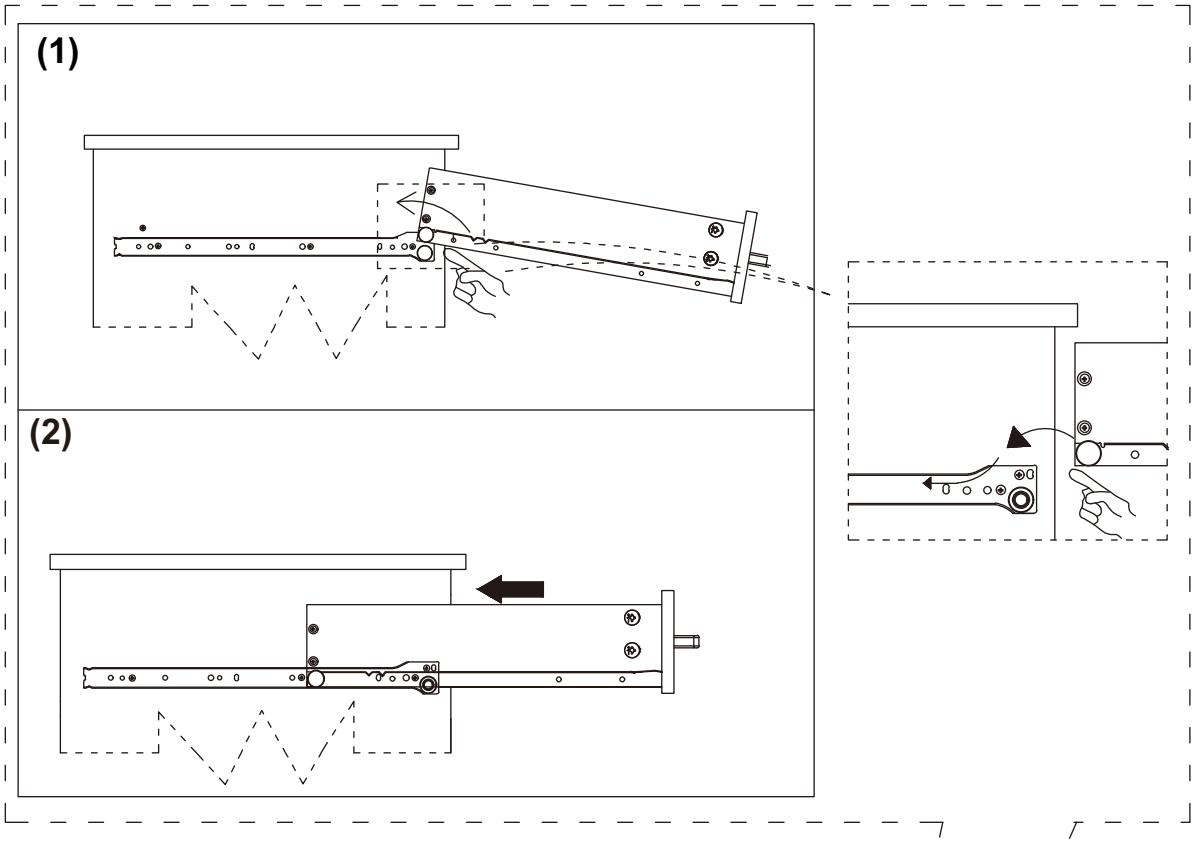
B x4	C x2	E x2
		

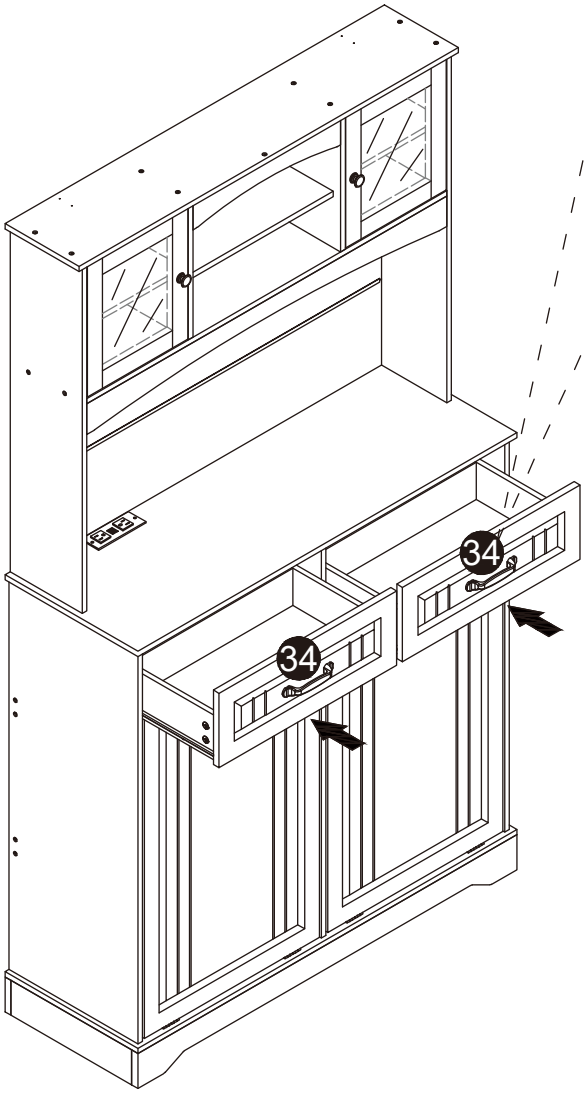


E x2



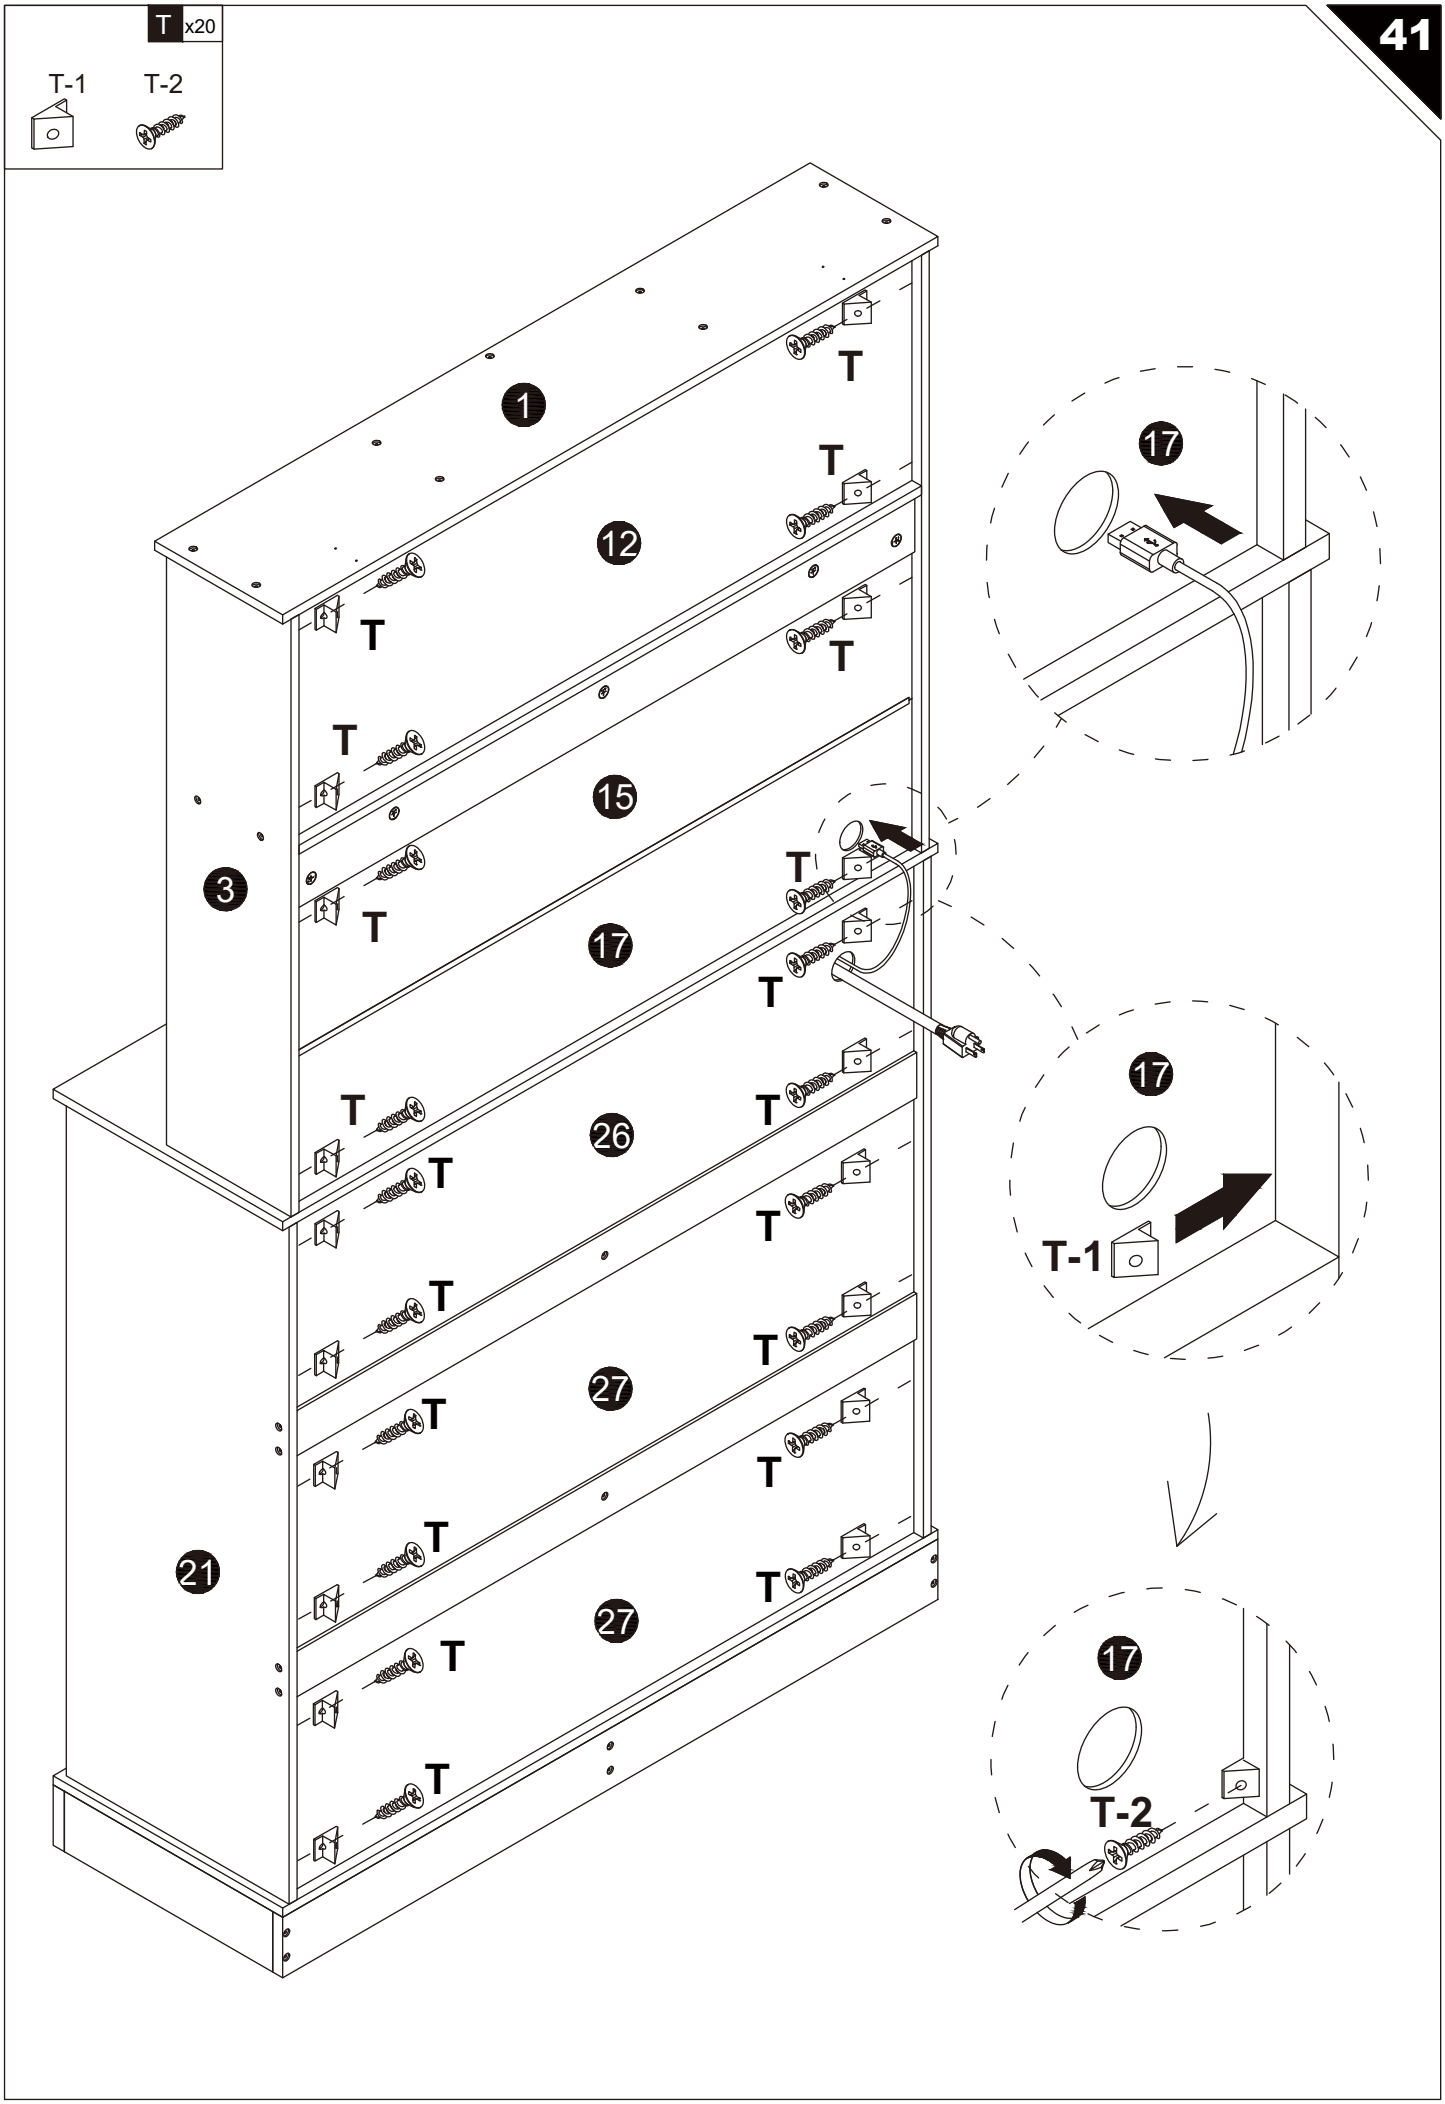


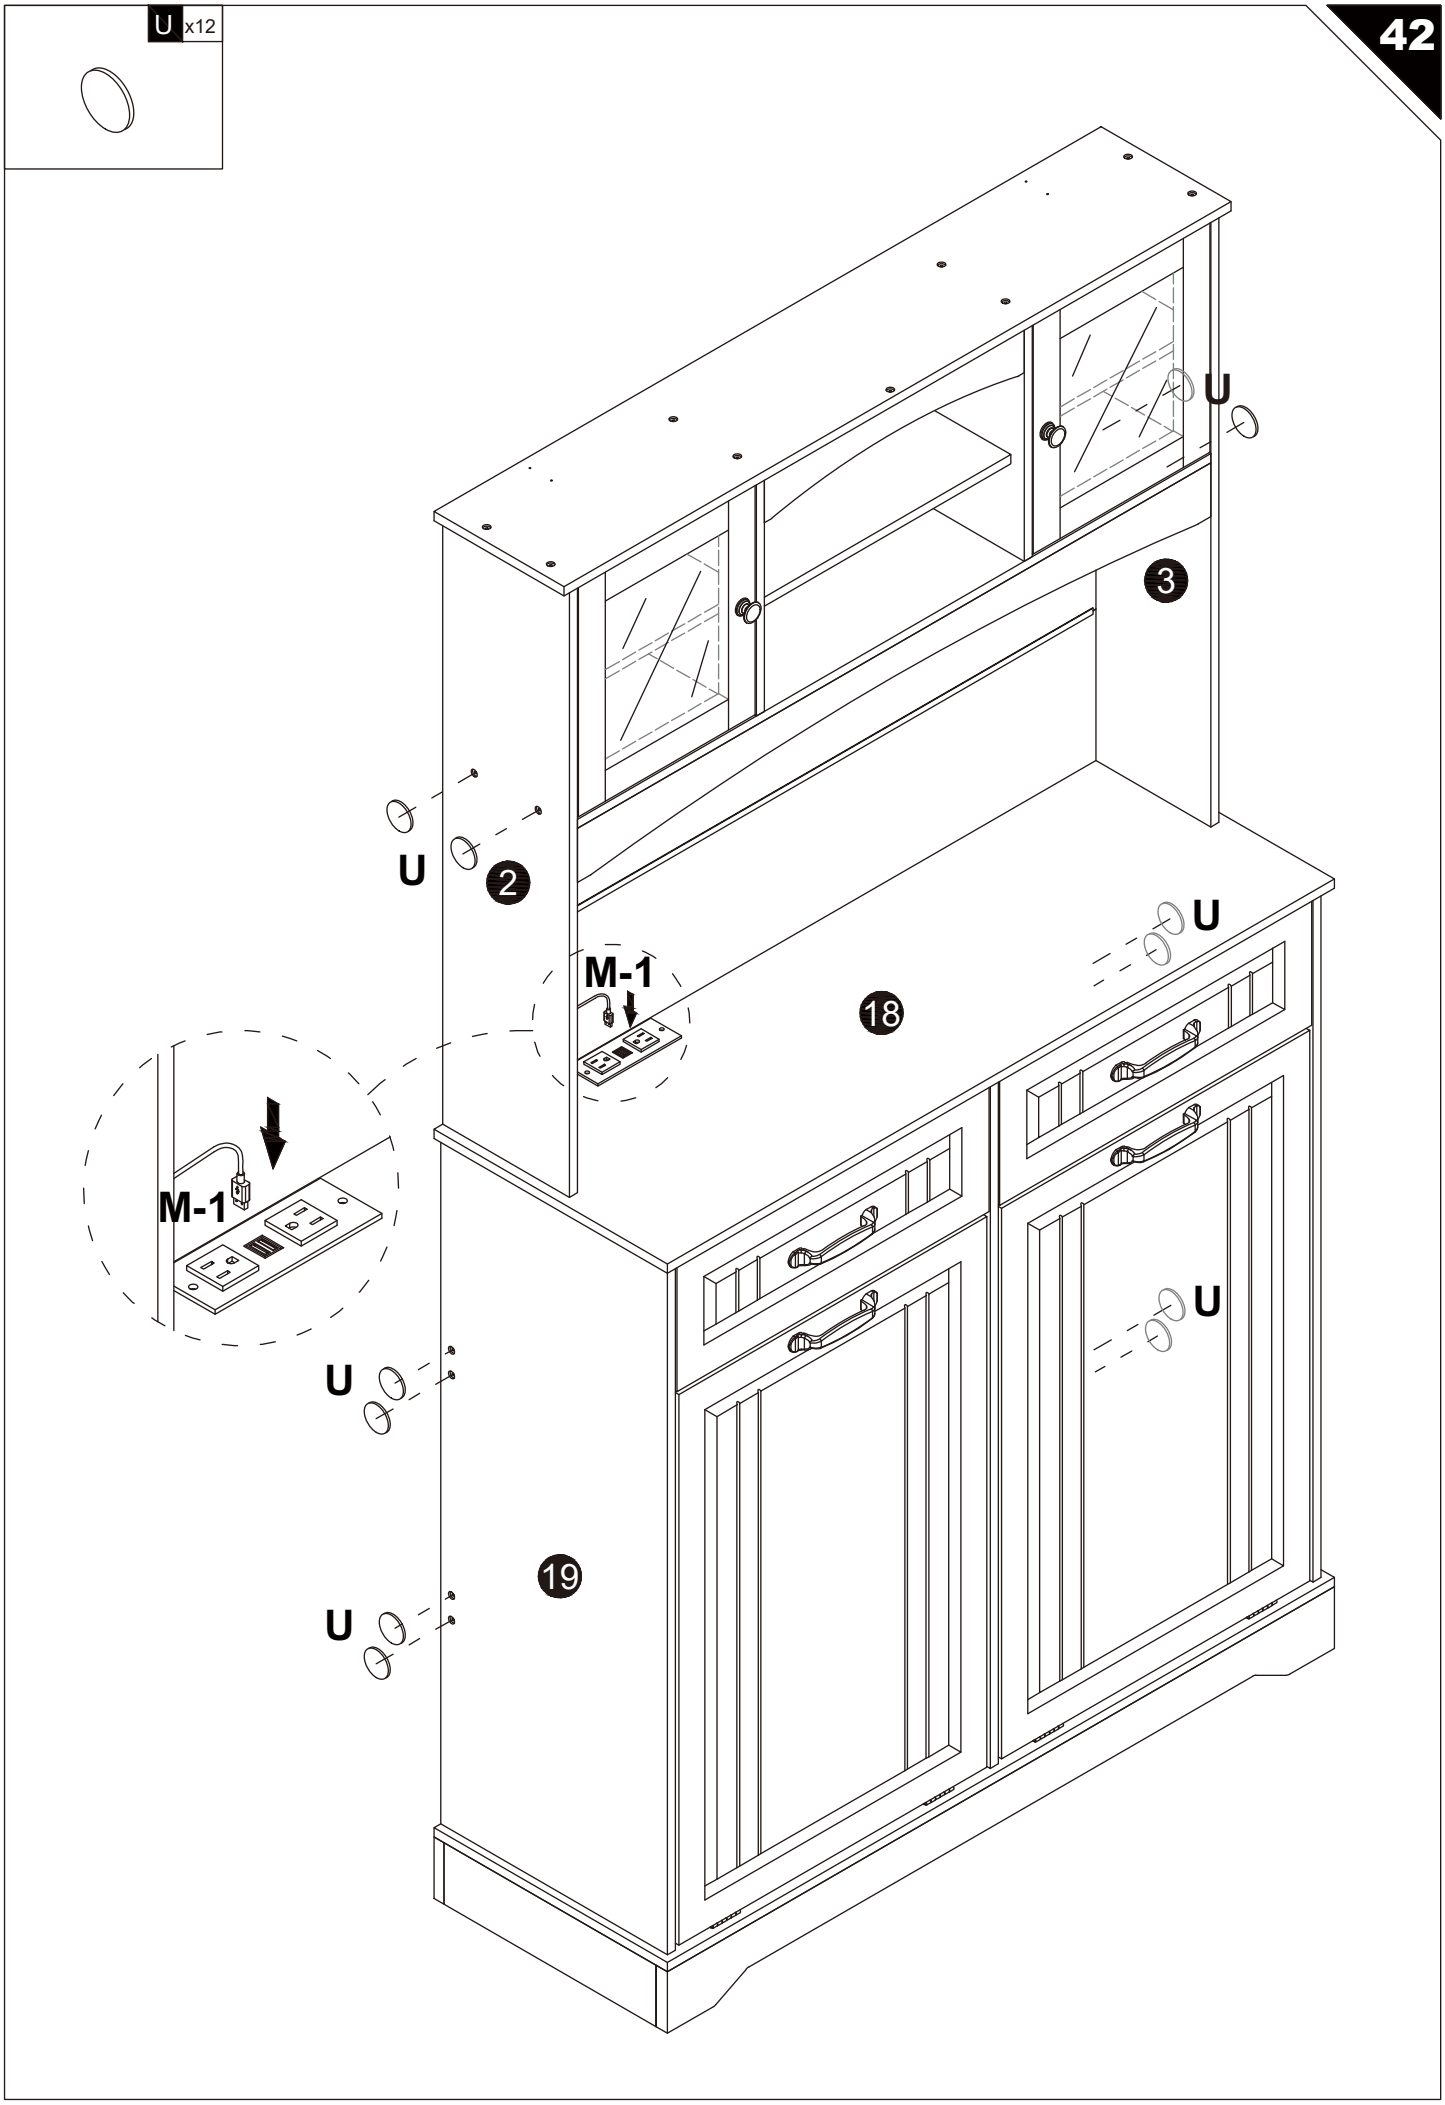

(1)
(2)

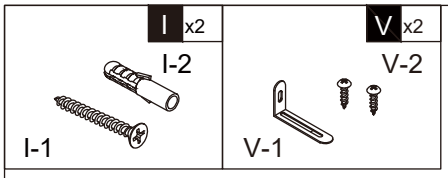

34
34

T x20

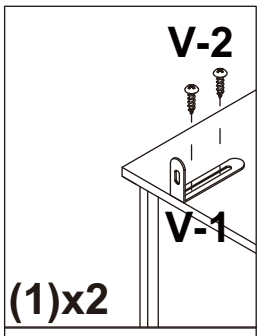
T-1 T-2



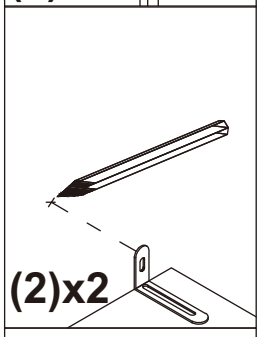

U x12
U
3
U
2
M-1
18
U
M-1
U
U
19
U



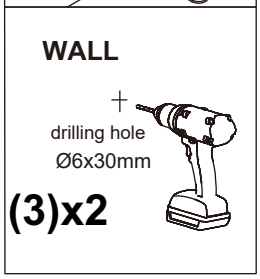
Done



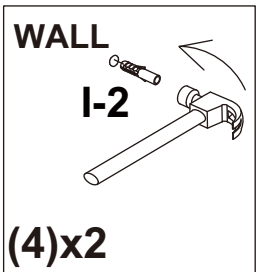
First fix the anti-rewind screw in the reserved hole of the product.



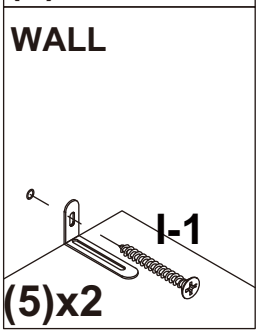
then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.



Then use a tape drill to make holes in the wall that are suitable for the product screws.



Then,put the expansion bolt into the hole



Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

