


ASSEMBLY INSTRUCTION




ASSEMBLY INSTRUCTION

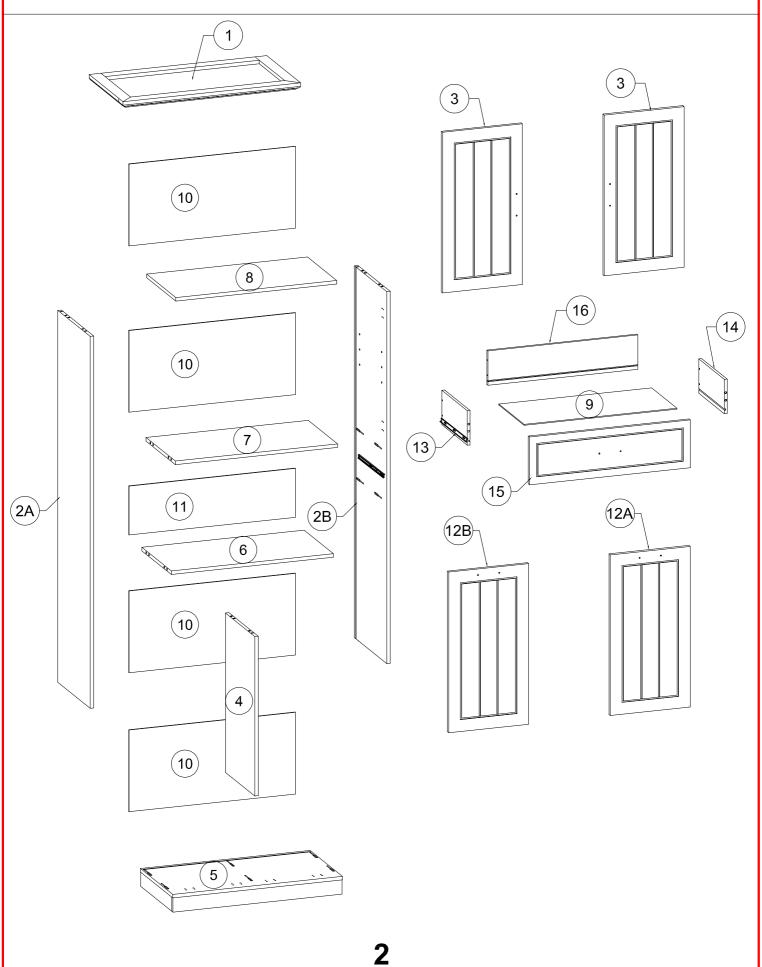

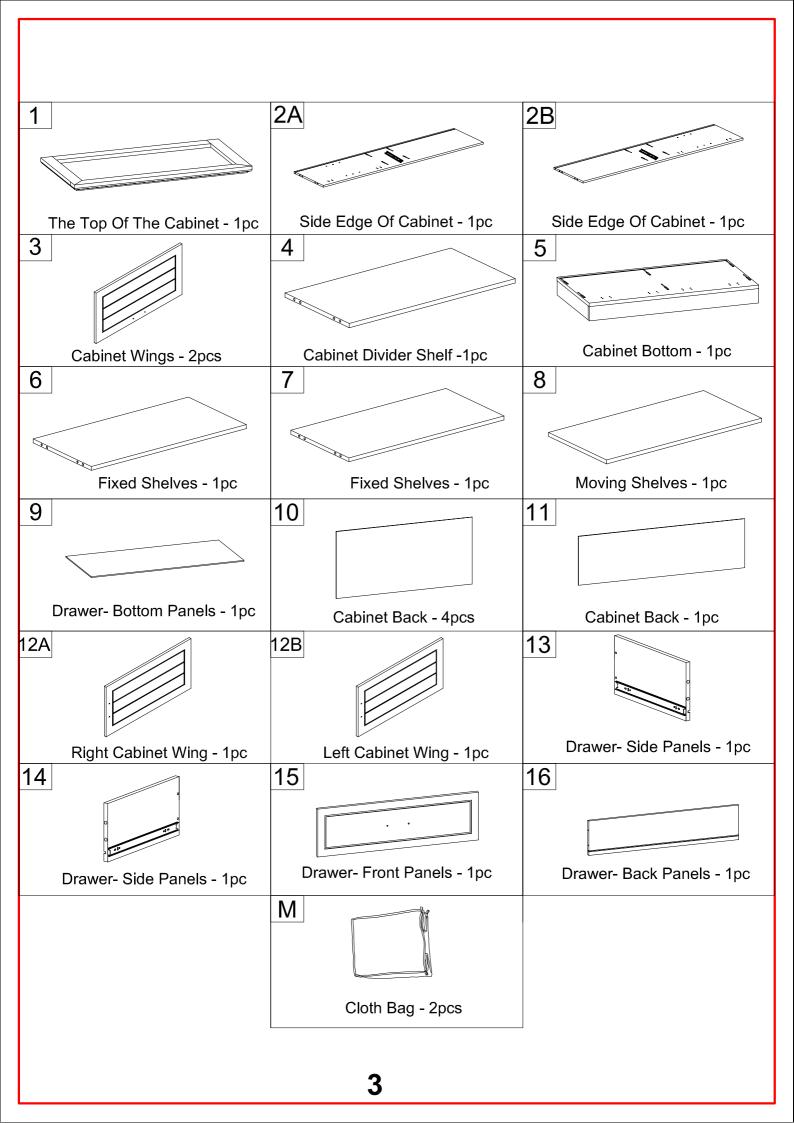


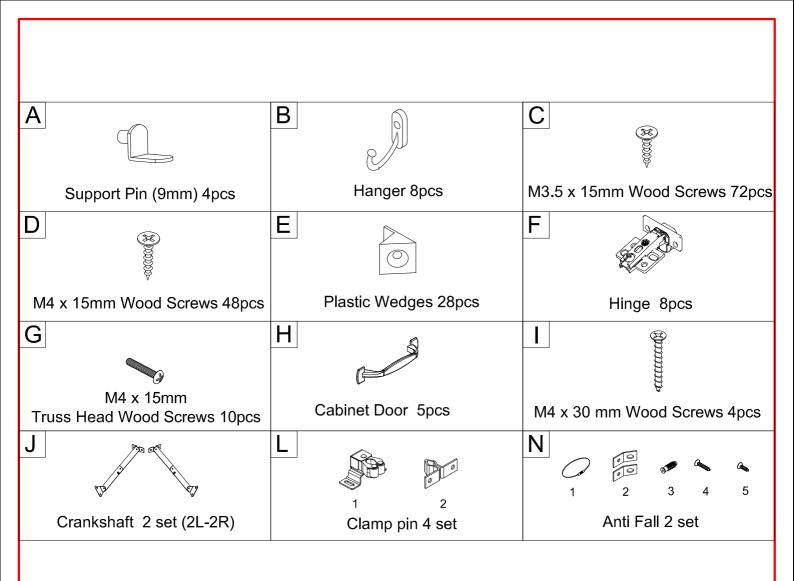




Assembly Tools Required (Not Included)

STEP 1.1: Following below illustration:

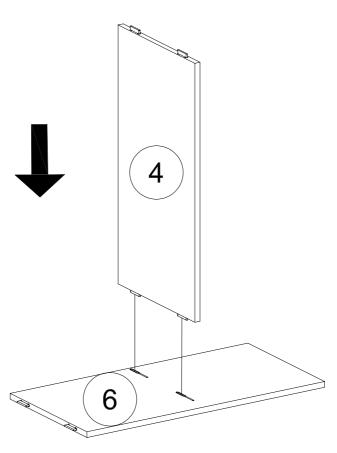


STEP 1.2: Following below illustration:

Check all joints are level and the rear groove is straigh

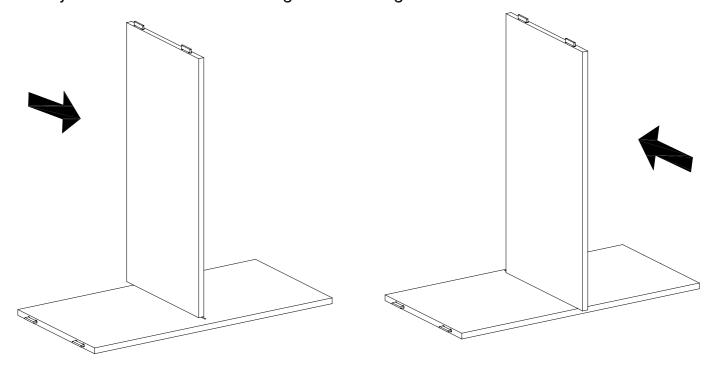


View From The Front


View From The Back

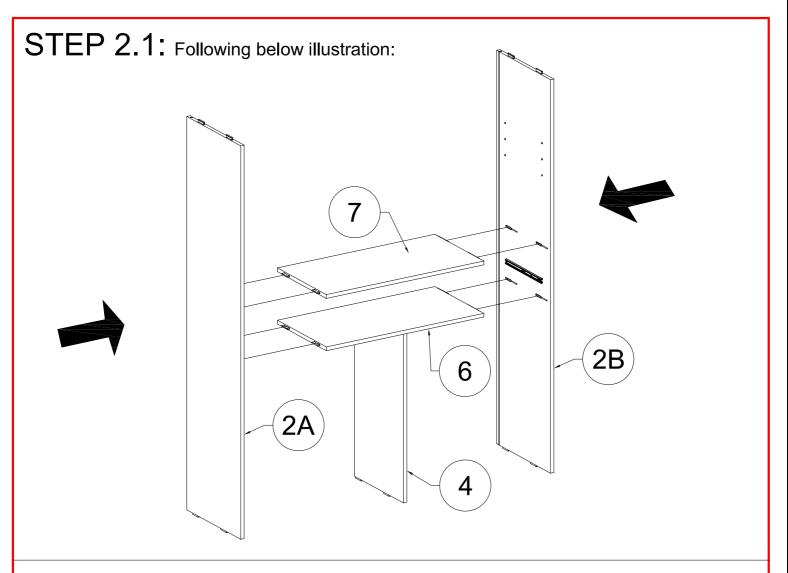

STEP 2.2: Following below illustration:

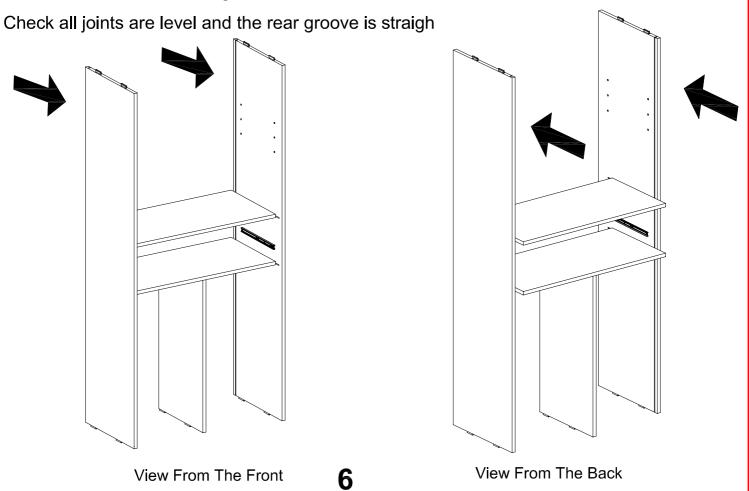


STEP 3.1: Following below illustration:

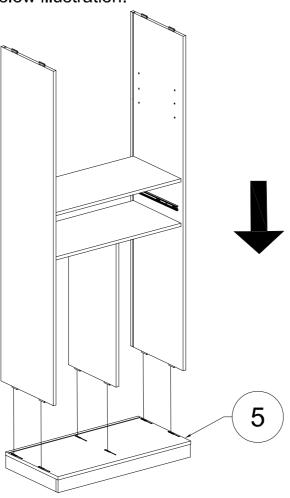


STEP 3.2: Following below illustration:


Check all joints are level and the rear groove is straigh

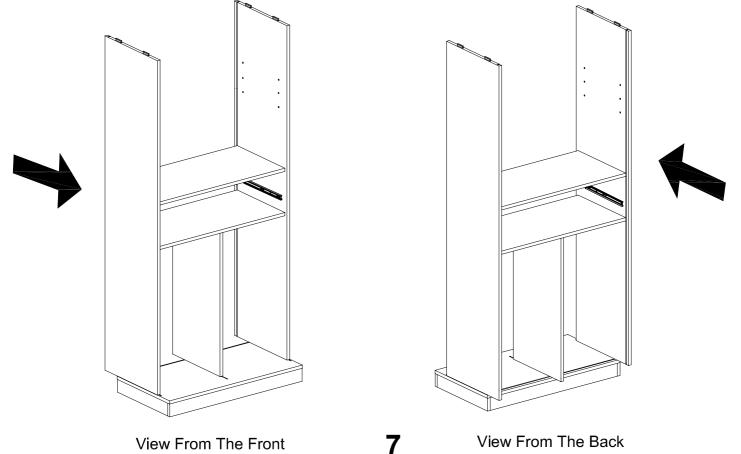


STEP 4: Following below illustration:

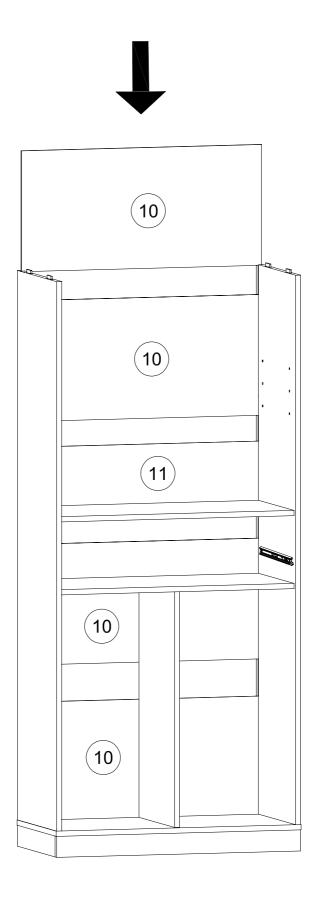


STEP 5.1: Following below illustration:

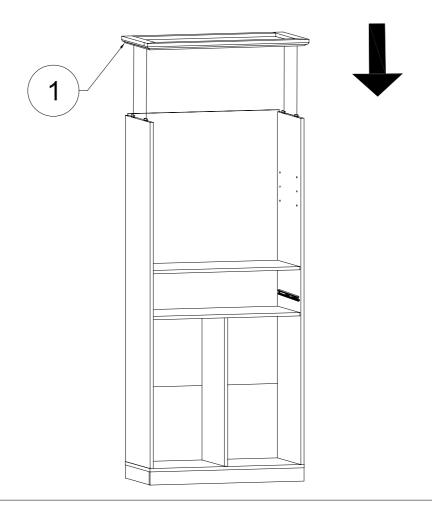


STEP 5.2: Following below illustration:

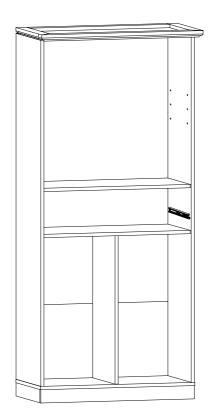





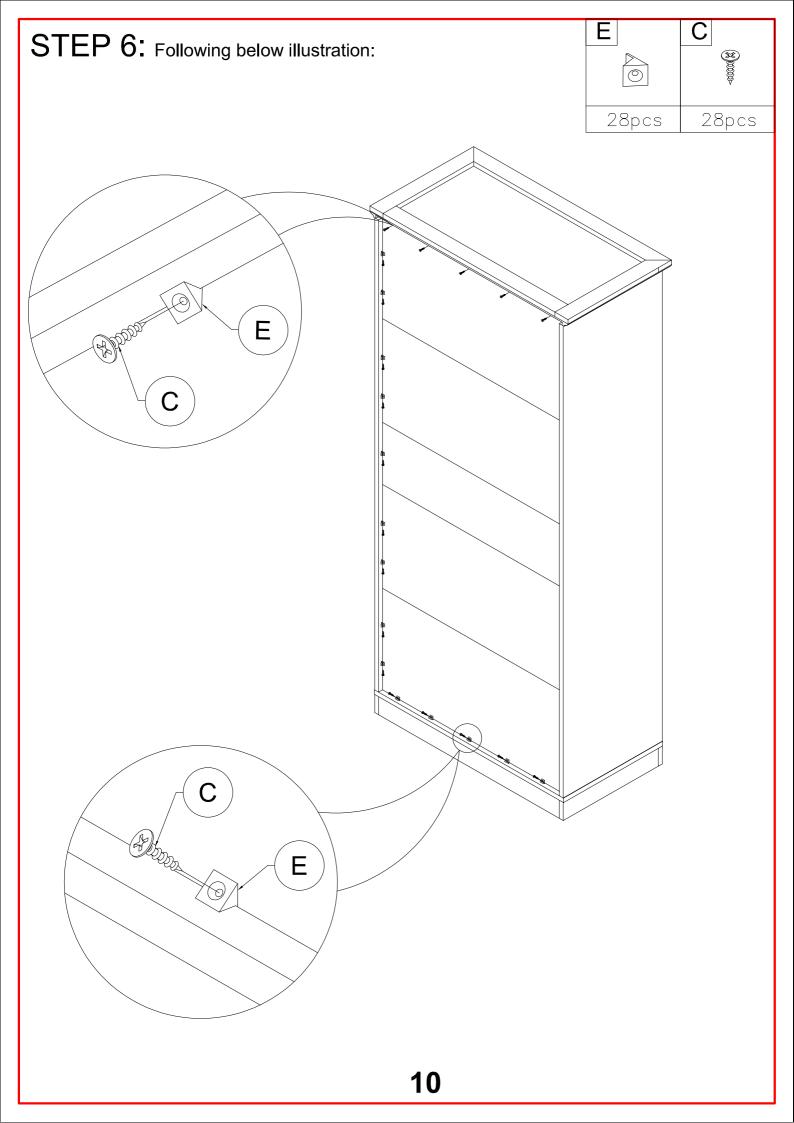


STEP 7: Following below illustration:

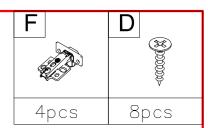


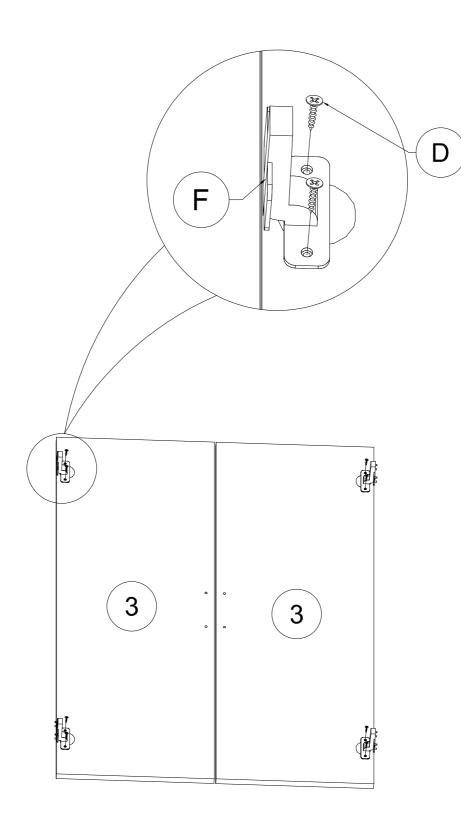

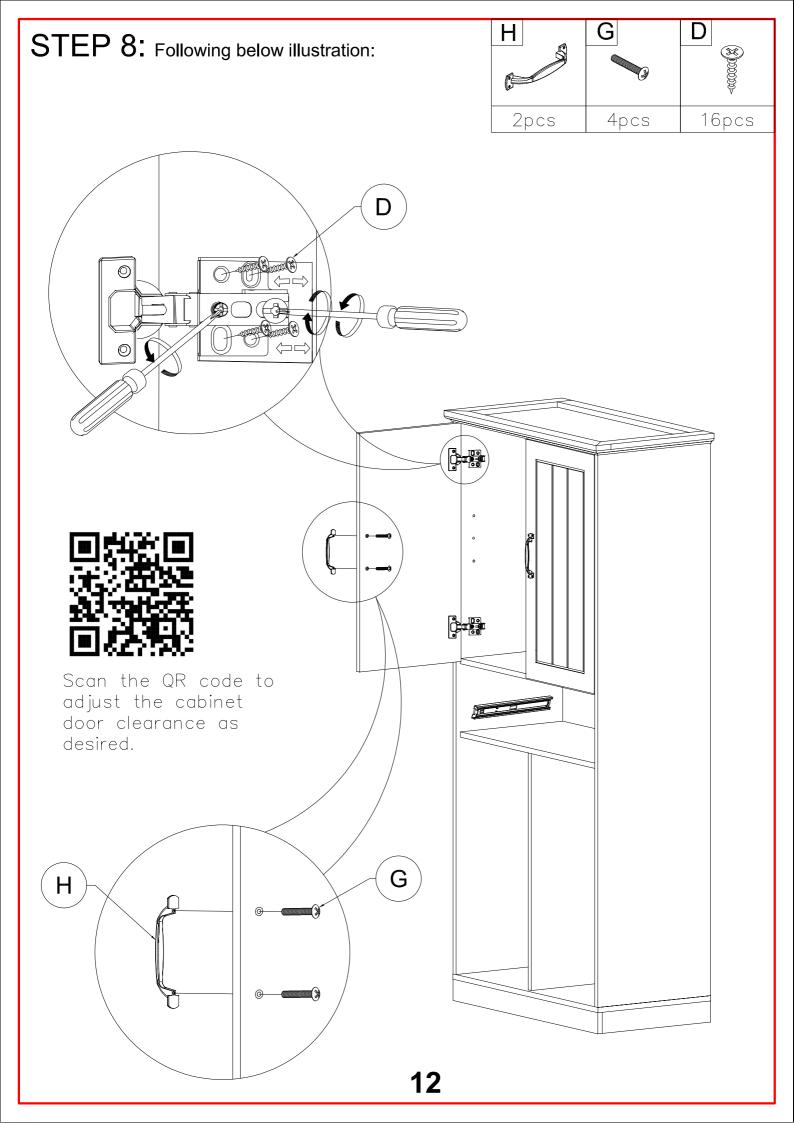


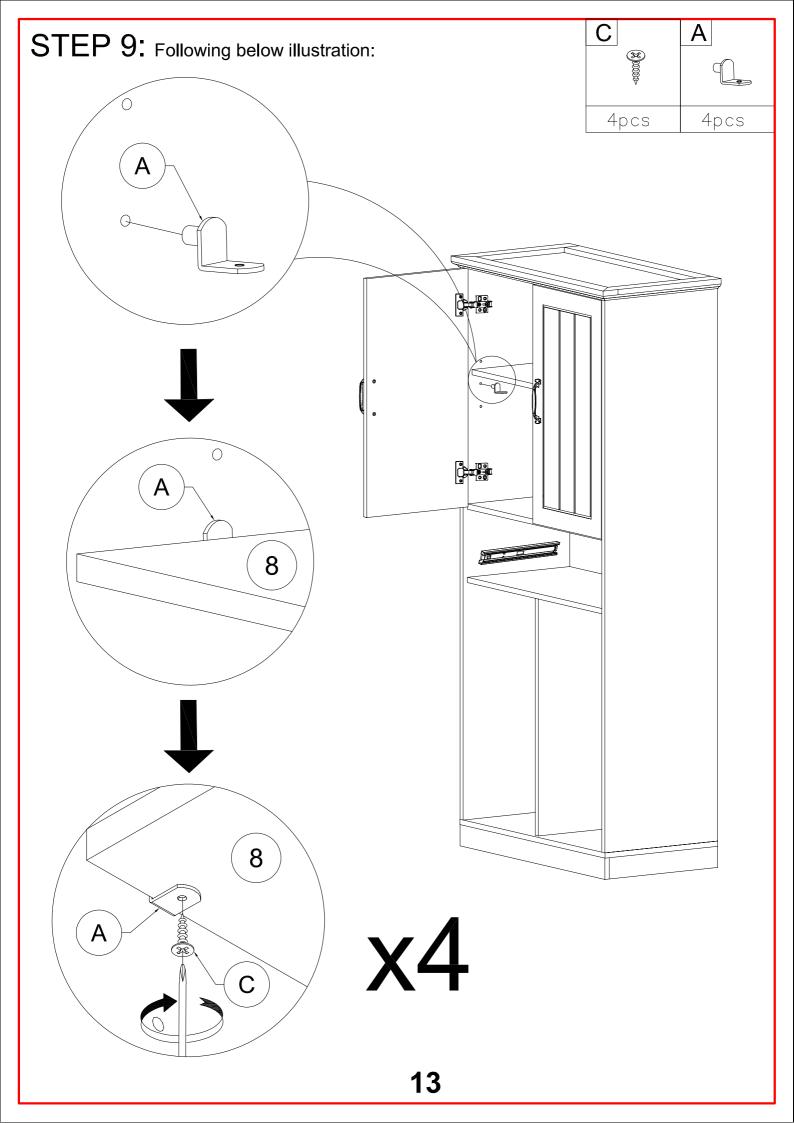


STEP 10.1: Following below illustration:

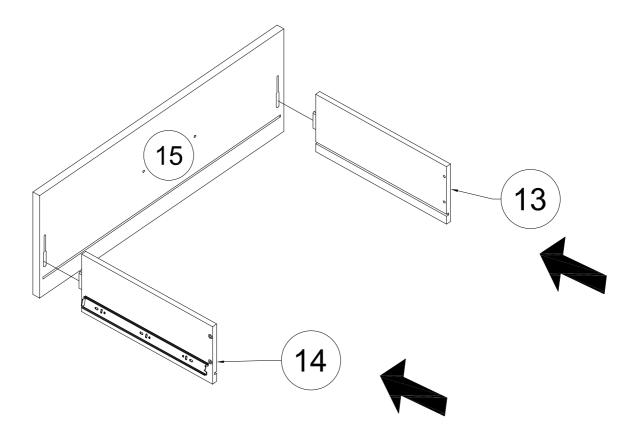


STEP 10.2: Following below illustration:

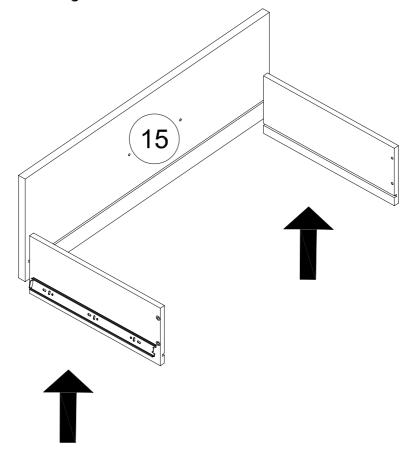



STEP 10.3: Following below illustration:

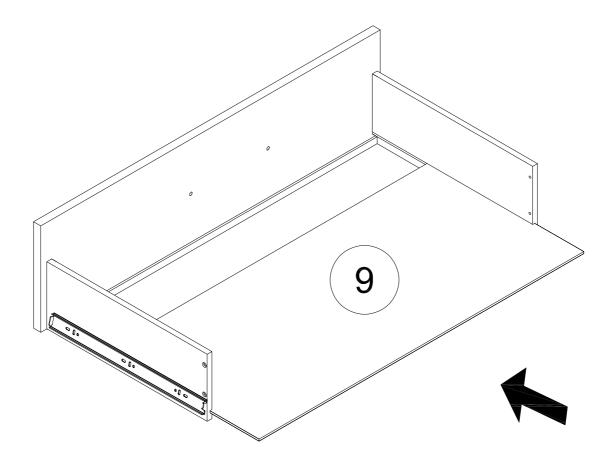

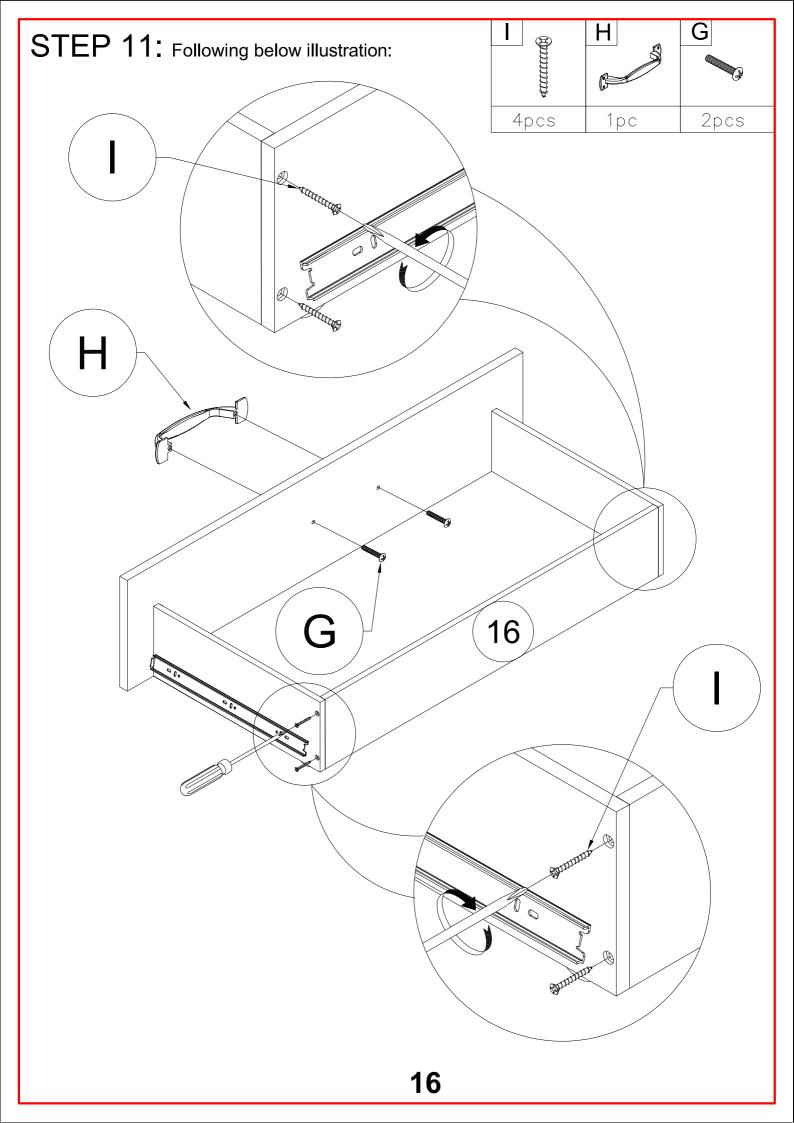



STEP 12: Following below illustration:

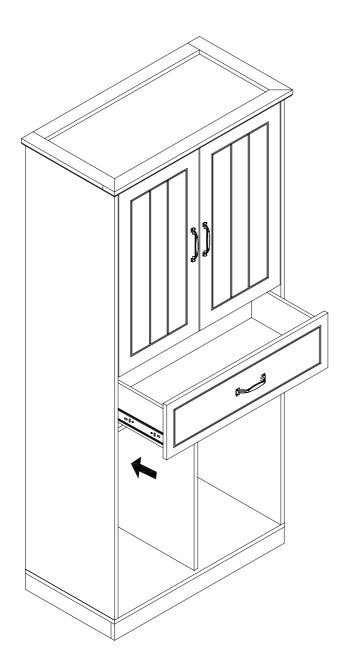


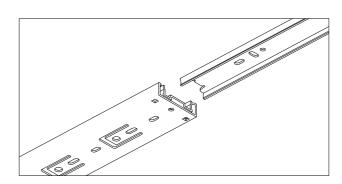





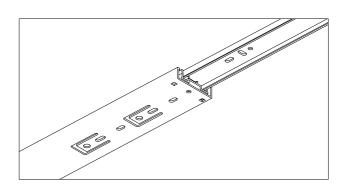


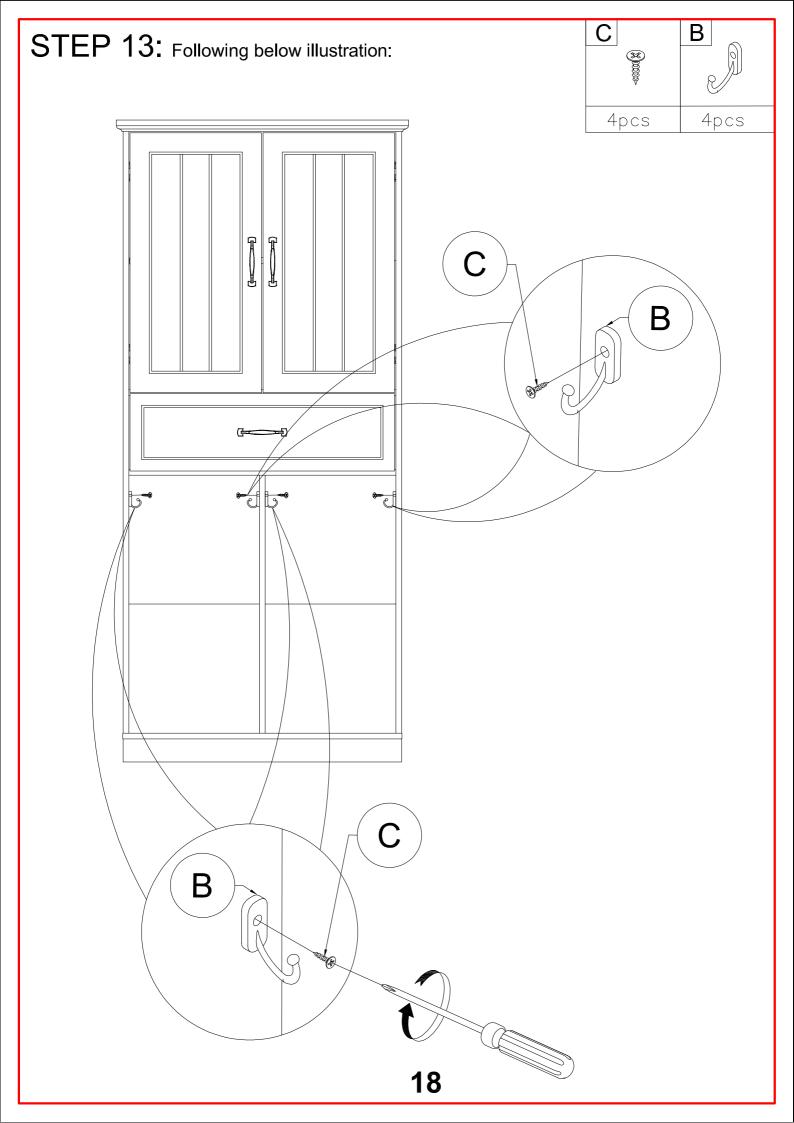

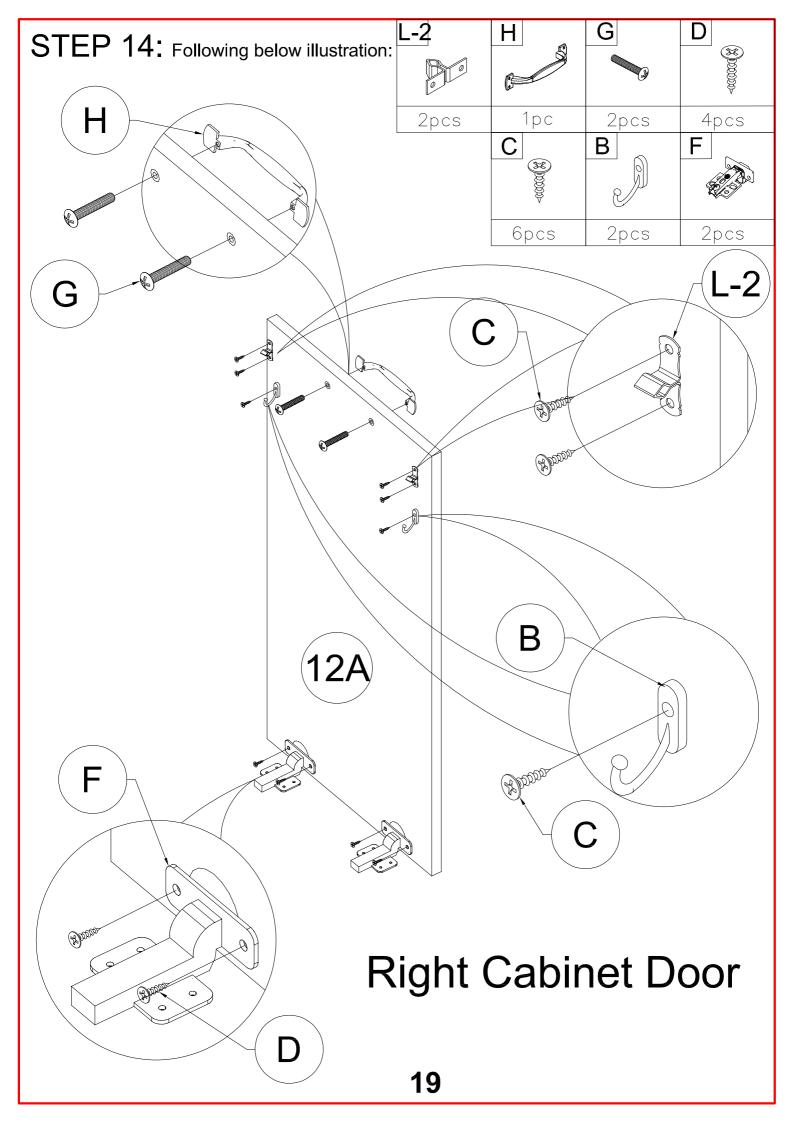


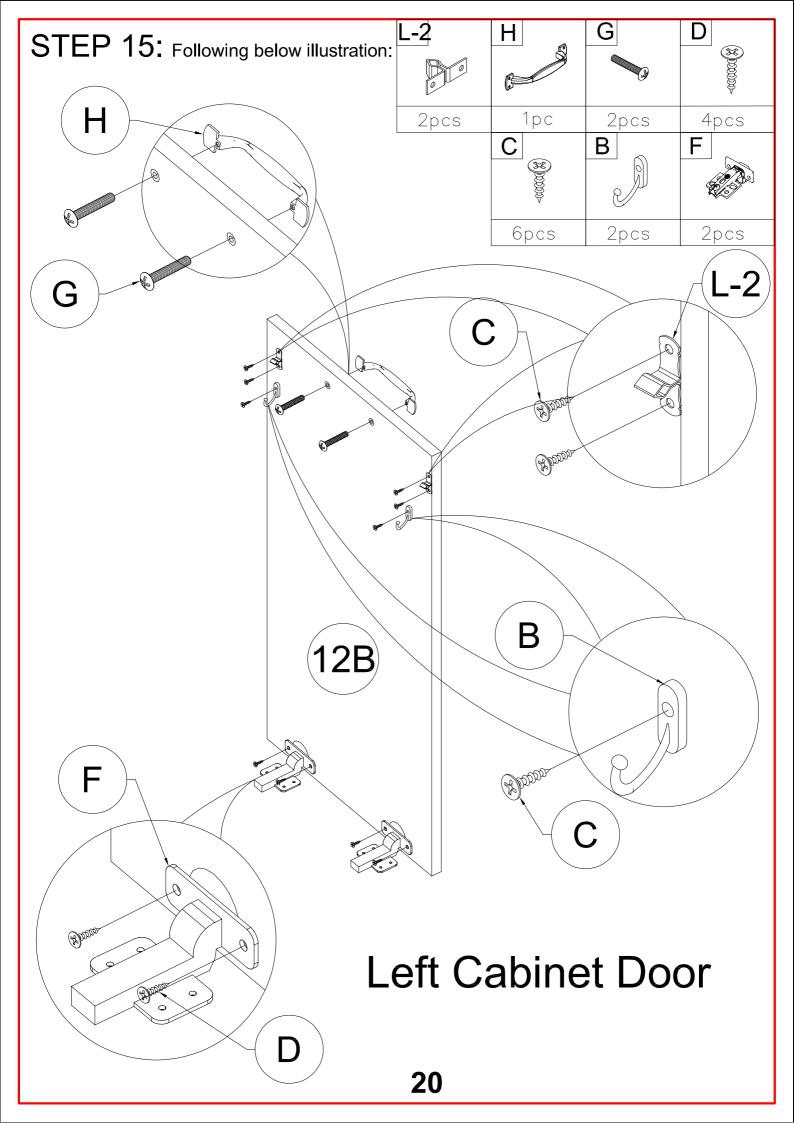


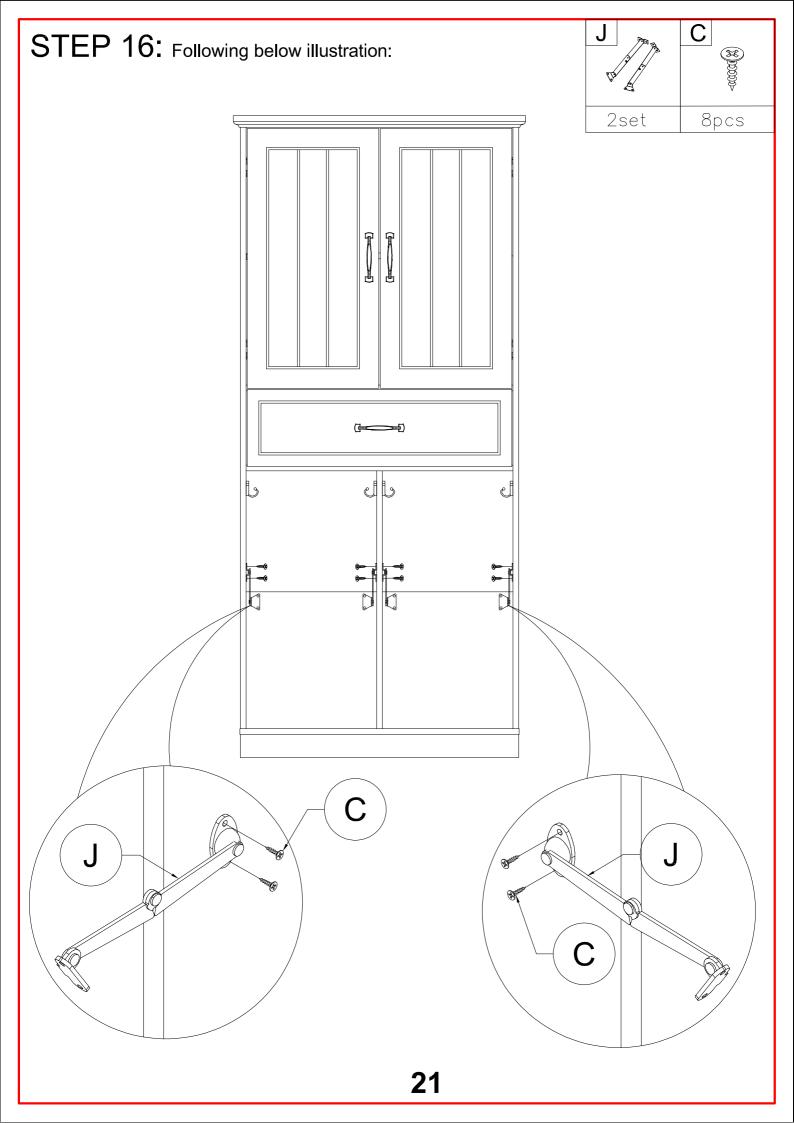

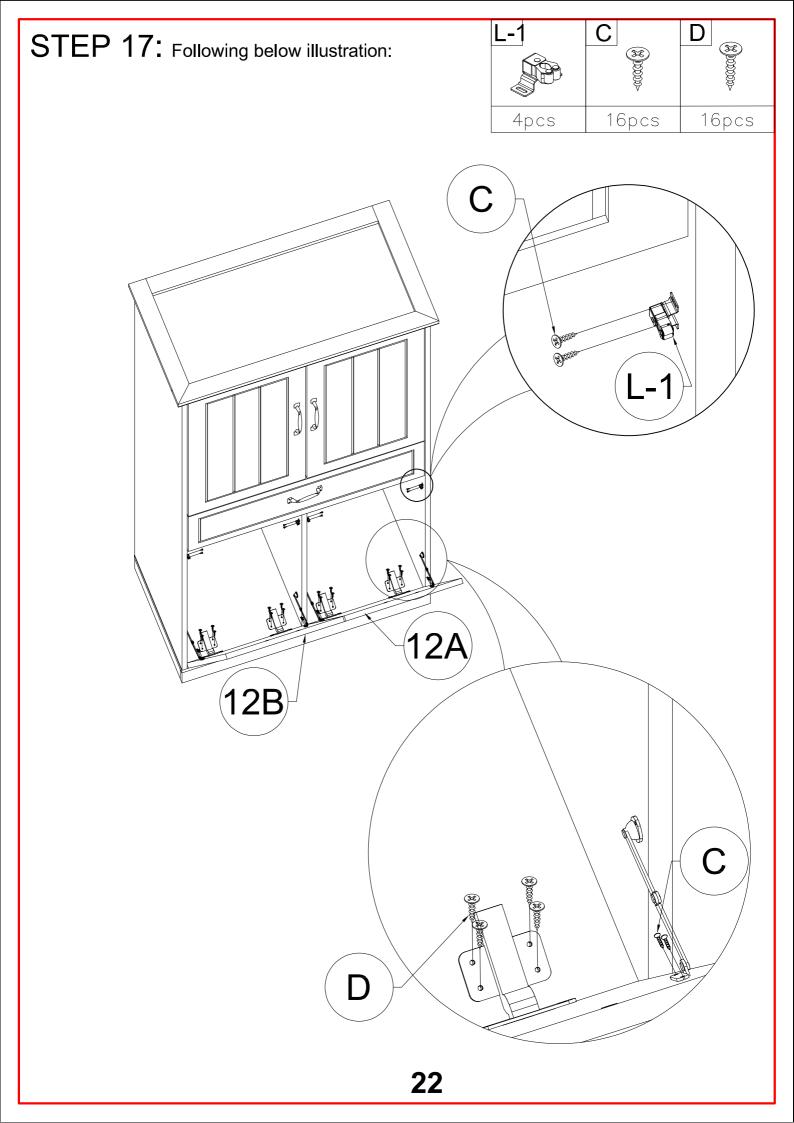

M STEP 18: Following below illustration: 2pcs M **23**

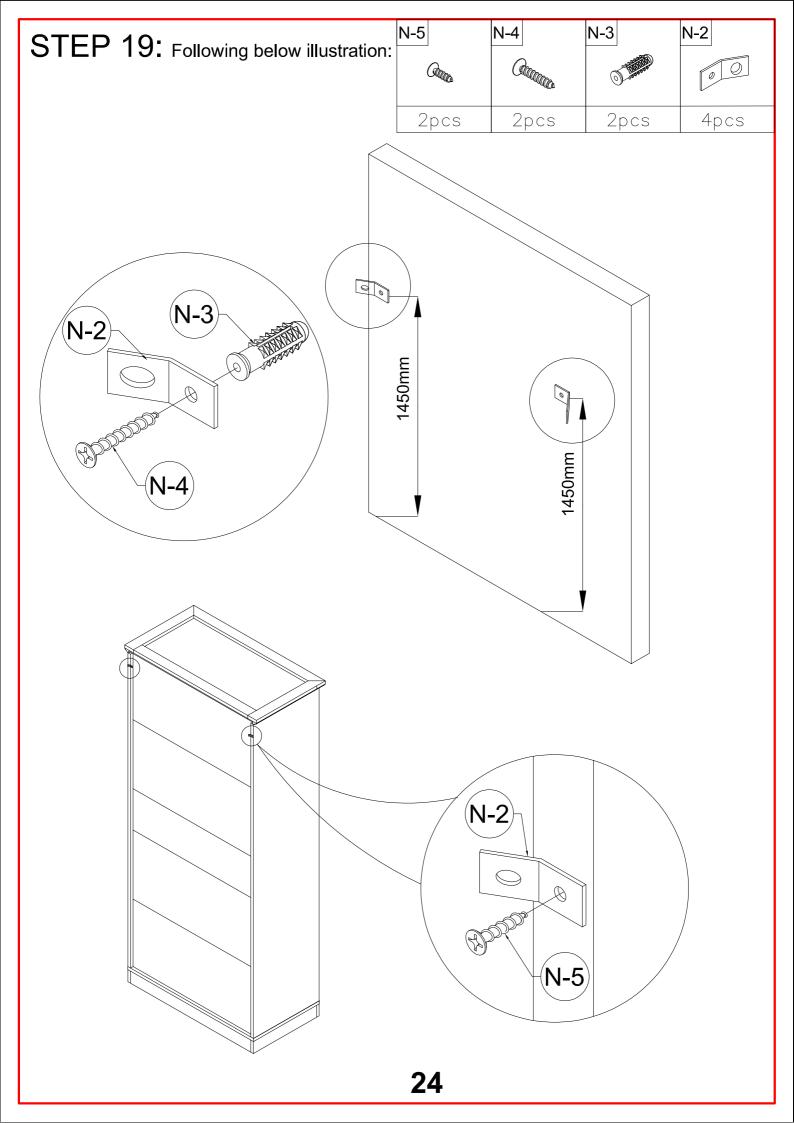

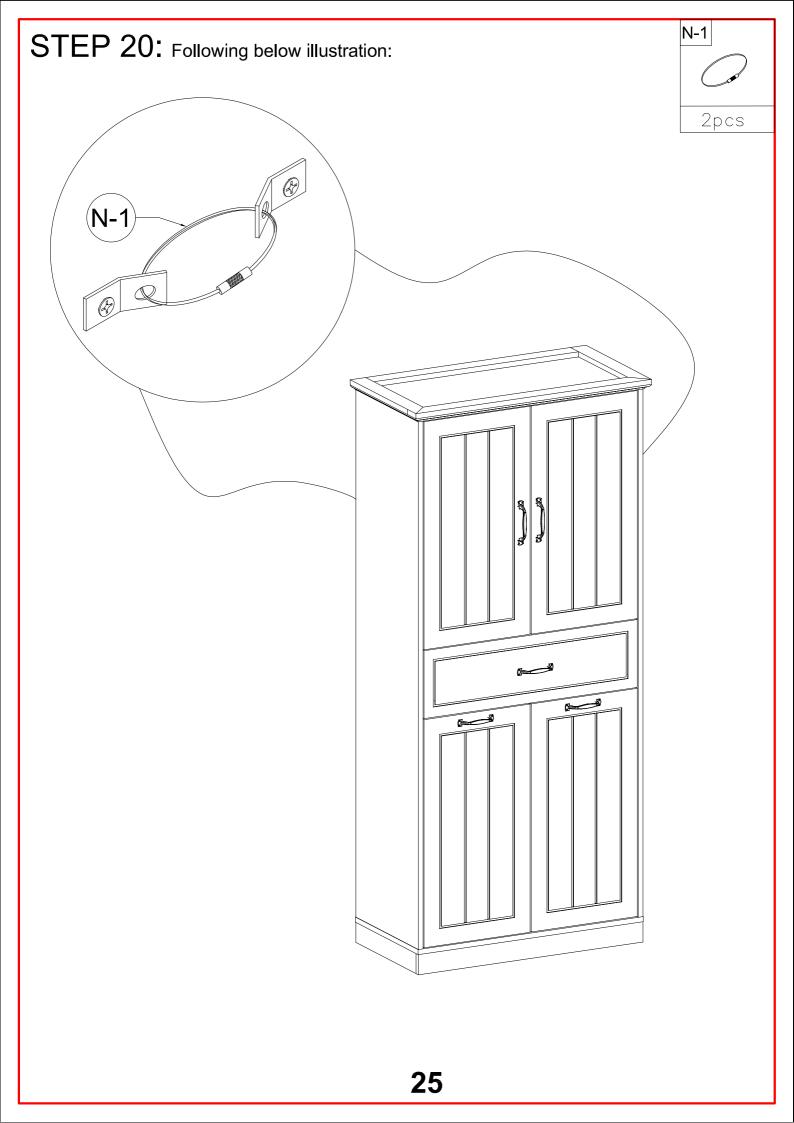

FINISH

