

wayfair® ASSEMBLY INSTRUCTIONS

CHAIR, 1 PILLOW

Thank you for choosing our product. Please inspect all packing materials carefully, as small parts may have become loose inside the carton during shipment. Identify and count all items against the parts list provided to ensure everything is accounted for.


CAUTION: Read all instructions thoroughly before beginning assembly.

1. We recommend assembling this product with the assistance of another person to prevent damage during the assembly process.

2. When repositioning the product, please always "LIFT & MOVE" instead of dragging to avoid damaging the legs or flooring.

NOTE: Do not use power tools for assembly. Power tools increase the risk of over-tightening, which may lead to splitting or cracking the wood.


PARTS LIST

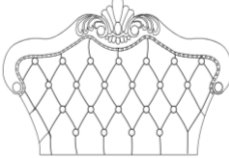NO.	DESCRIPTION	PART NAME	Q'TY (PC)
①	SEAT FRAME		1
②	LEFT ARM		1
③	RIGHT ARM		1
④	BACK REST		1
⑤	SEAT CUSHION		1
⑥	POLY LEG		4
⑦	PILLOW 1		1

HARDWARE LIST

NO.	PART NAME	SKETCH	Q'TY (PC)
Ⓐ	ALLEN KEY Ø5/16"		1


HARDWARE LIST

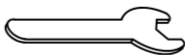NO.	PART NAME	SKETCH	Q'TY (PC)
Ⓑ	BOLT Ø5/16"x2 ½"		8
Ⓒ	FLAT WASHER Ø5/16"x7/8"		14
Ⓓ	LOCK WASHER Ø5/16"x1/2"		14
Ⓔ	THREAD BOLT Ø 5/16 x 3¼"		6
Ⓕ	HEX NUT Ø5/16 x 1/2"		6
Ⓖ	WRENCH 1/2" x 3½"		1

How to assemble:


STEP 1:

Turn the chair seat upside down. Align and attach the legs (6) to the seat frame (1) using bolts (B) with lock washers (D) and flat washers (C). Tighten each bolt by hand first, then fully secure all connections using the Allen key (A).

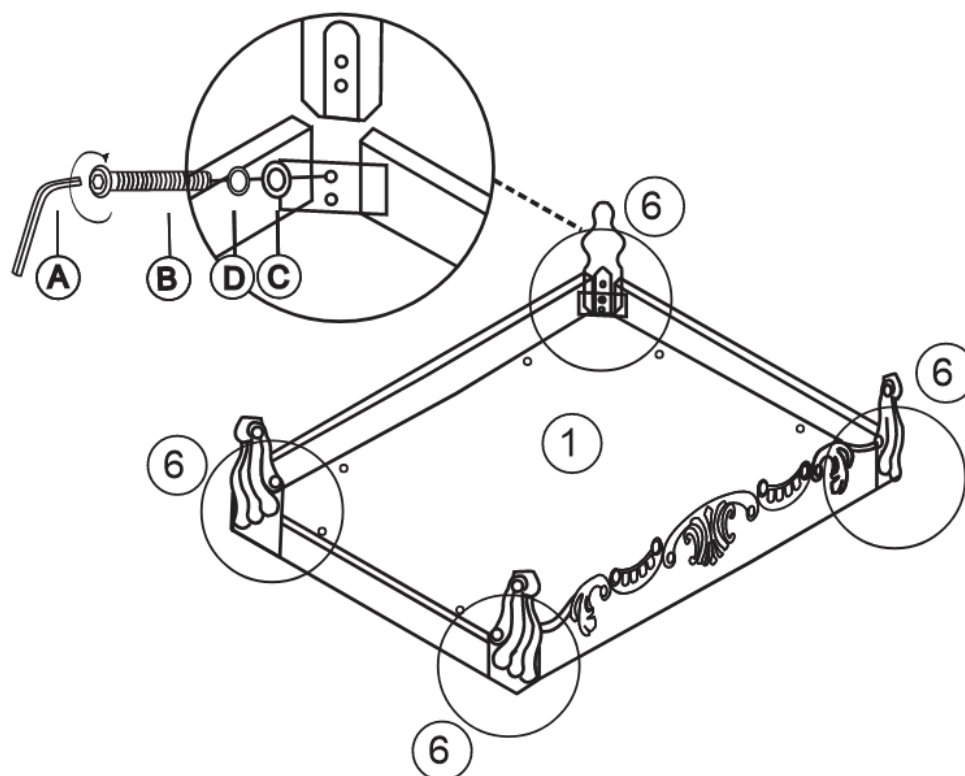


STEP 2:

Thread the bolts (E) into the pre-drilled holes at the bottom of the left arm (2) and right arm (3). Hand-tighten each bolt to a depth of approximately 25 mm.

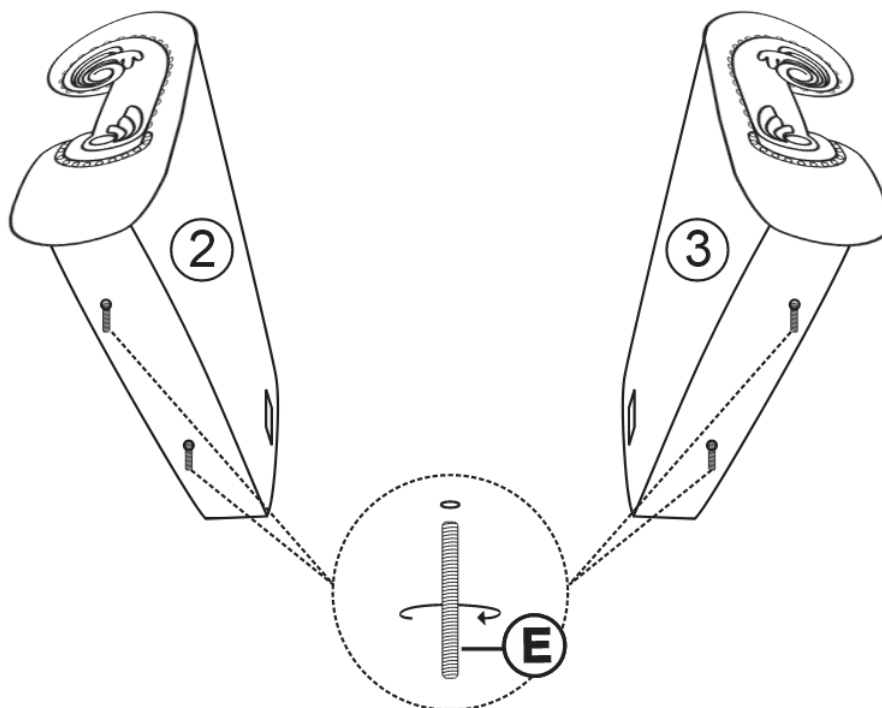


STEP 3:

Align the left arm (2) and right arm (3) with the pre-drilled holes on the seat frame (1), then secure them using the provided hardware.

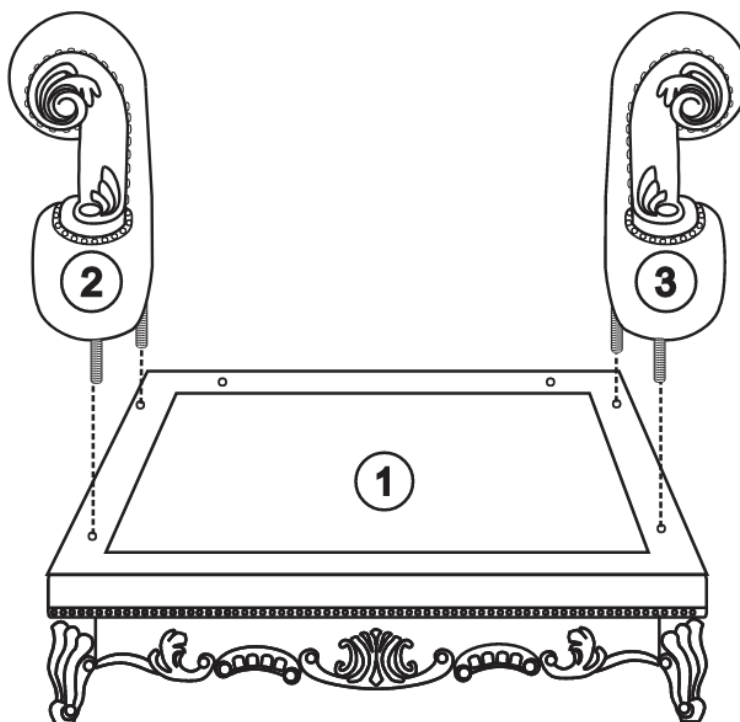


STEP 4:

Lay the chair on its back on a clean, protected surface to access the threaded bolts (6). Secure the backrest, left arm (2) and right arm (3) to the seat frame (1) using the wrench (G) along with hardware C, D, and F.

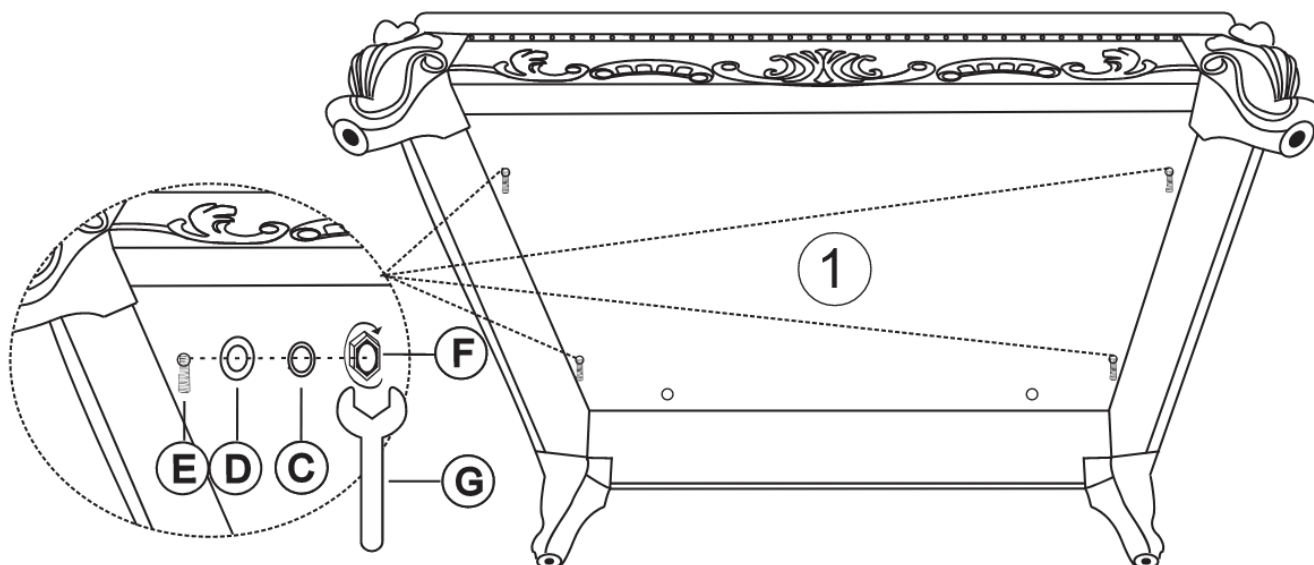


STEP 5:

Place the backrest (4) face down on a protected surface. Thread the bolts (E) into the pre-drilled holes at the bottom of the backrest (4). Hand-tighten each bolt to a depth of approximately 25 mm, leaving enough thread exposed for later assembly.

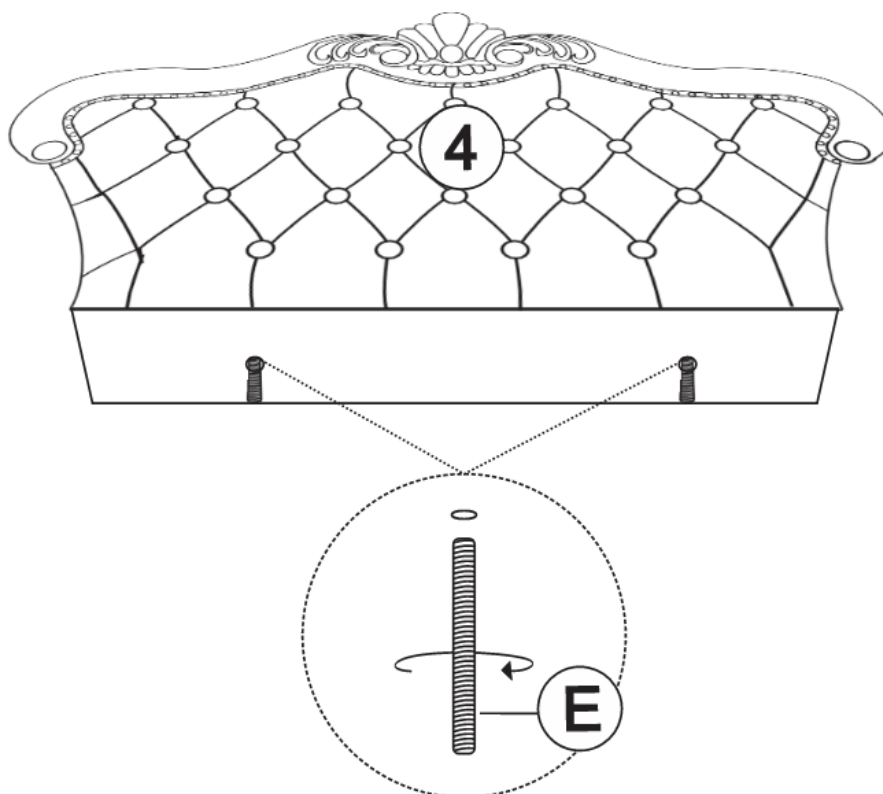


STEP 6:

Slide the brackets on the backrest (4) into the corresponding slots on the left arm (2) and right arm (3). Push down firmly until the backrest 'clicks' into place or is fully seated and secured.

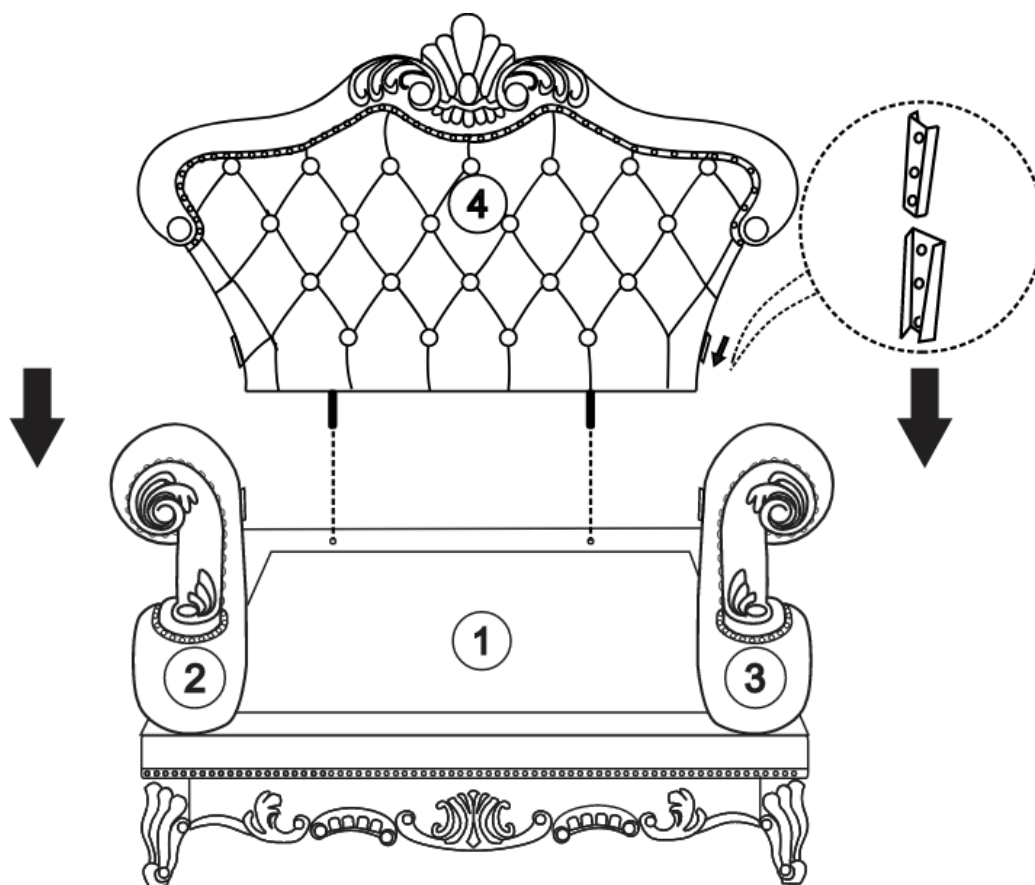


STEP 7:

Lay the chair on its back on a clean, soft surface to access the threaded bolts (E). Secure the backrest (4) to the seat frame (1) using the wrench (G) along with hardware C, D, and F.

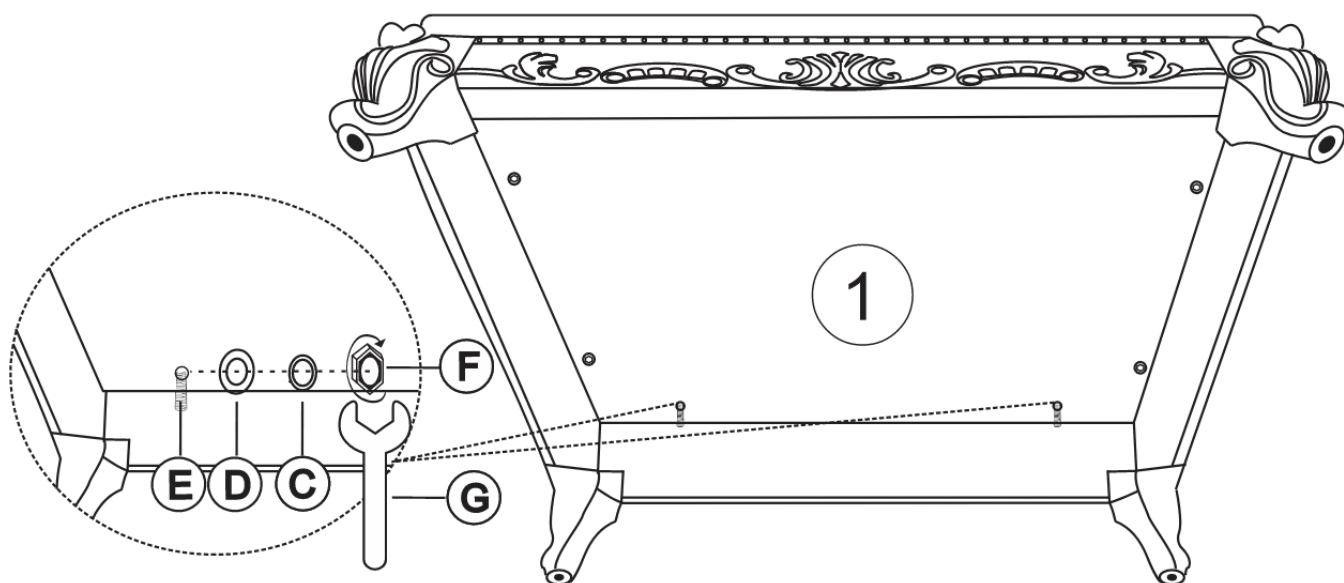


STEP 8:

Place the seat cushion (5) on to the seat frame (1).

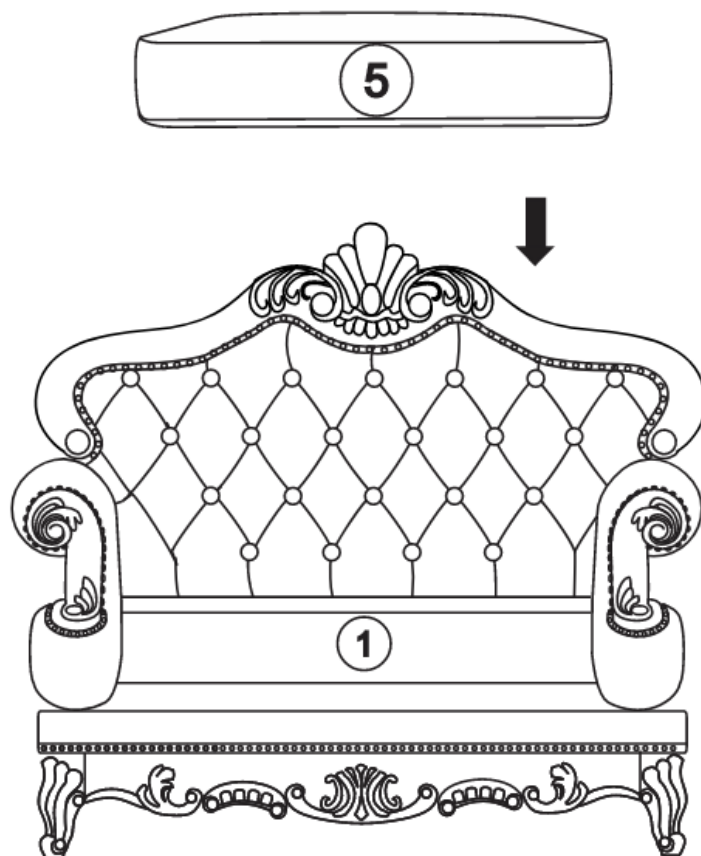

COMPLETED

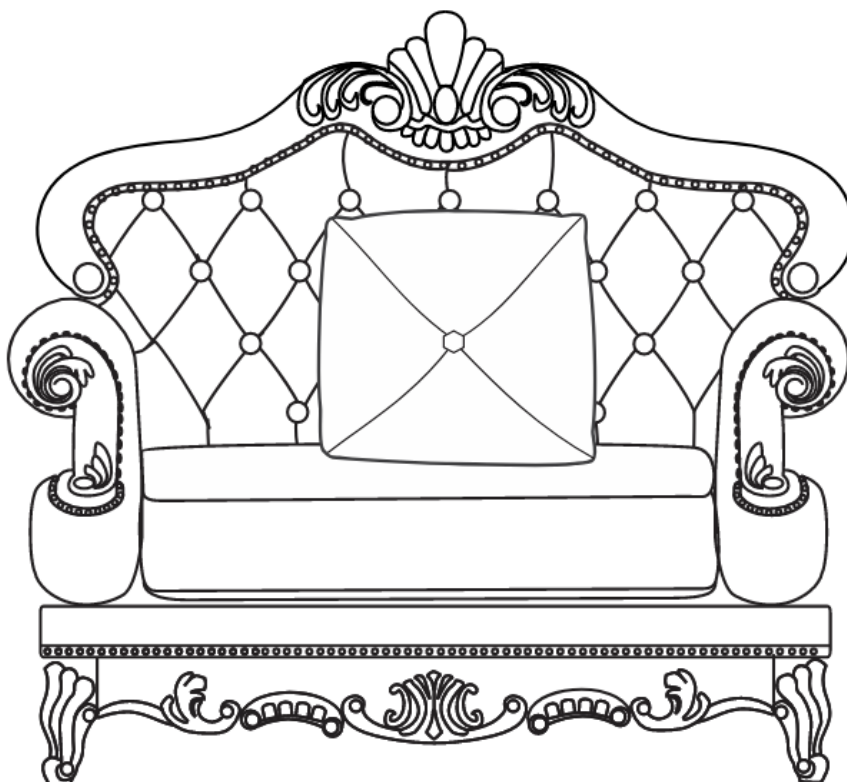

CARE INSTRUCTIONS FOR POLYESTER:

To maintain the original appearance of your polyester furniture, please follow these simple care procedure:

- Avoid exposing furniture directly to sunlight or heating and air conditioning vents. Prolonged exposure to sunlight or heating and air conditioning outlets will cause polyester to fade or deteriorate.
- Gently wipe with a damp, soft cloth to remove dust, dirt and any grime build-up.
- Hardware may loosen over time. Periodically check all connections to ensure they are tight. Re-tighten if necessary.



ASSEMBLY INSTRUCTIONS

LOVESEAT, 4 PILLOWS

Thank you for choosing our product. Please inspect all packing materials carefully, as small parts may have become loose inside the carton during shipment. Identify and count all items against the parts list provided to ensure everything is accounted for.



CAUTION: Read all instructions thoroughly before beginning assembly.

1. We recommend assembling this product with the assistance of another person to prevent damage during the assembly process.


2. When repositioning the product, please always "LIFT & MOVE" instead of dragging to avoid damaging the legs or flooring.

NOTE: Do not use power tools for assembly. Power tools increase the risk of over-tightening, which may lead to splitting or cracking the wood.

PARTS LIST

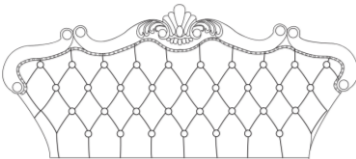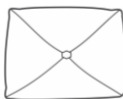NO.	DESCRIPTION	PART NAME	Q'TY (PC)
①	SEAT FRAME		1
②	LEFT ARM		1
③	RIGHT ARM		1
④	BACK REST		1
⑤	SEAT CUSHION		2
⑥	POLY LEG		4
⑦	PILLOW 1		2
⑧	PILLOW 2		2


HARDWARE LIST

NO.	PART NAME	SKETCH	Q'TY (PC)
Ⓐ	ALLEN KEY Ø5/16"		1
Ⓑ	BOLT Ø5/16"x2 1/2"		8
Ⓒ	FLAT WASHER Ø5/16"x7/8"		15
Ⓓ	LOCK WASHER Ø5/16"x1/2"		15
Ⓔ	THREAD BOLT Ø 5/16 x 3 1/4"		7
Ⓕ	HEX NUT Ø5/16 x 1/2"		7
Ⓖ	WRENCH 1/2" x 3 1/2"		1

How to assemble:


STEP 1:

Turn the chair seat upside down. Align and attach the legs (6) to the seat frame (1) using bolts (B) with lock washers (D) and flat washers (C). Tighten each bolt by hand first, then fully secure all connections using the Allen key (A).

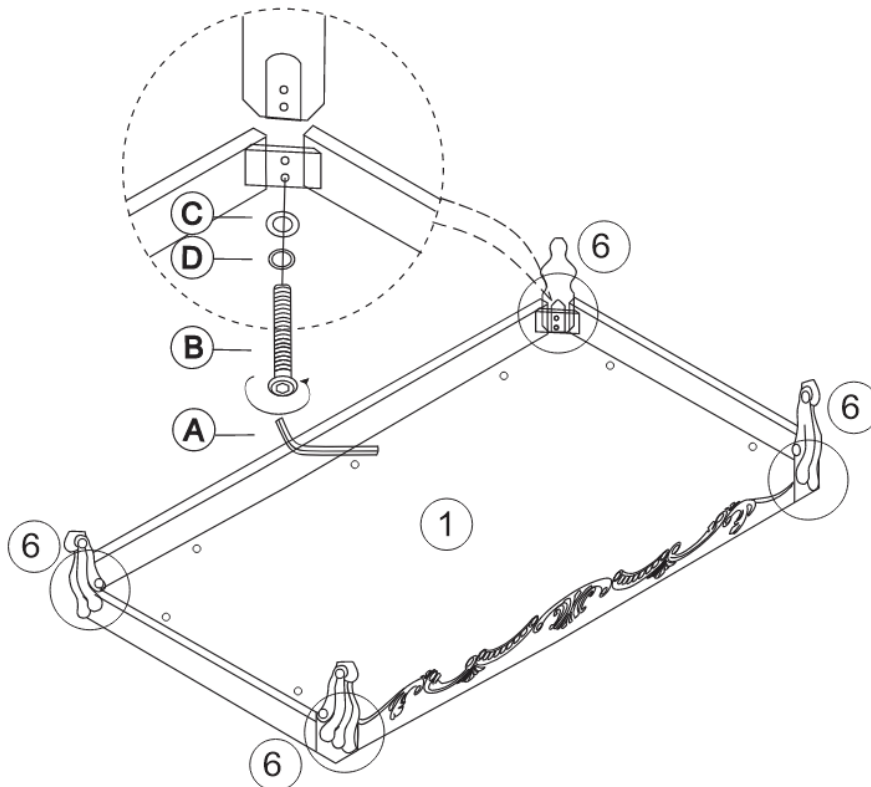


STEP 2:

Thread the bolts (E) into the pre-drilled holes at the bottom of the left arm (2) and right arm (3). Hand-tighten each bolt to a depth of approximately 25 mm.

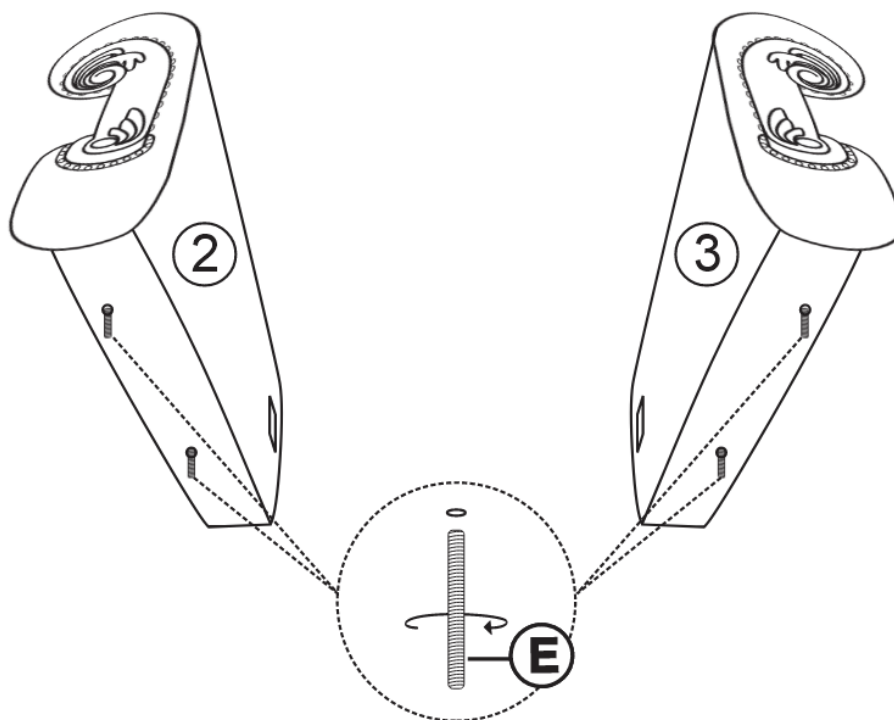


STEP 3:

Align the left arm (2) and right arm (3) with the pre-drilled holes on the seat frame (1), then secure them using the provided hardware.

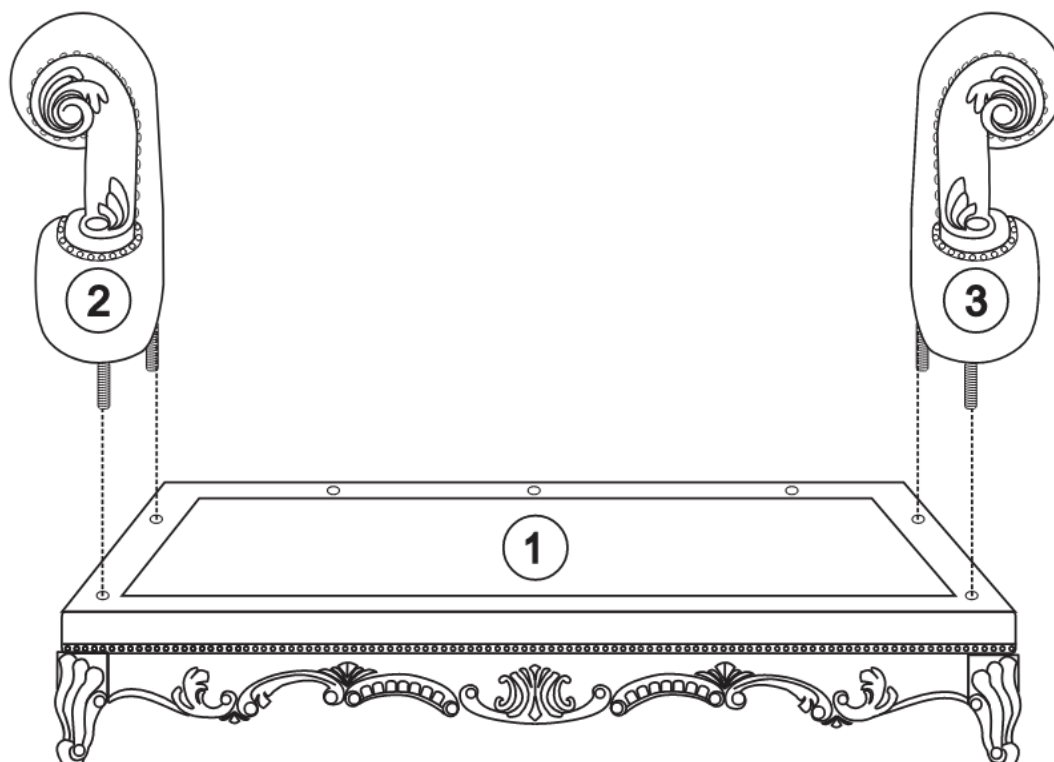


STEP 4:

Lay the chair on its back on a clean, protected surface to access the threaded bolts (6). Secure the backrest, left arm (2) and right arm (3) to the seat frame (1) using the wrench (G) along with hardware C, D, and F.

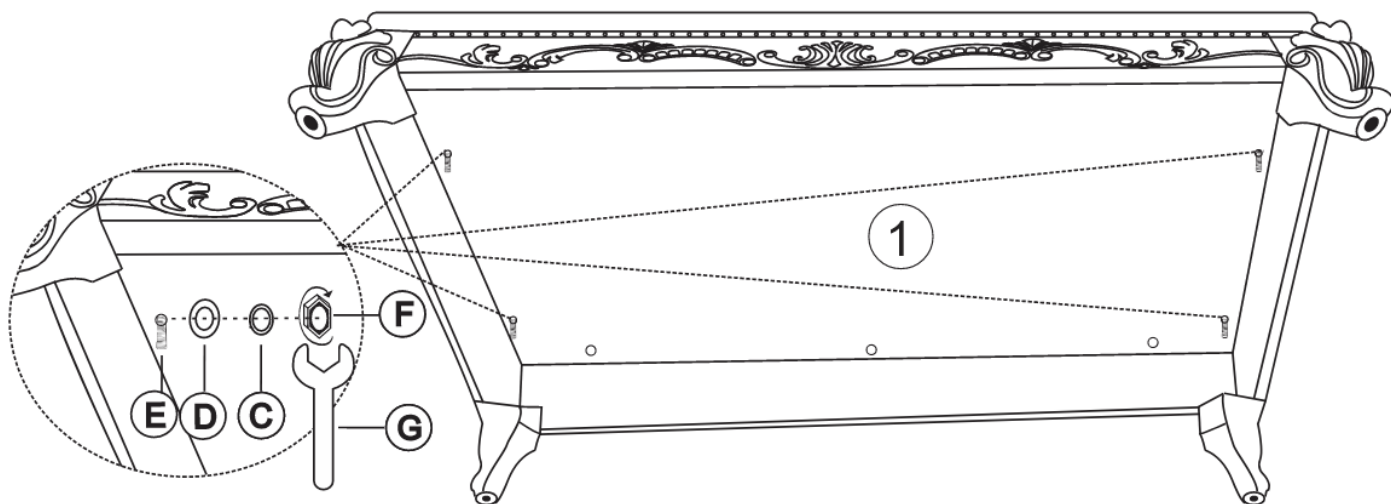


STEP 5:

Place the backrest (4) face down on a protected surface. Thread the bolts (E) into the pre-drilled holes at the bottom of the backrest (4). Hand-tighten each bolt to a depth of approximately 25 mm, leaving enough thread exposed for later assembly.

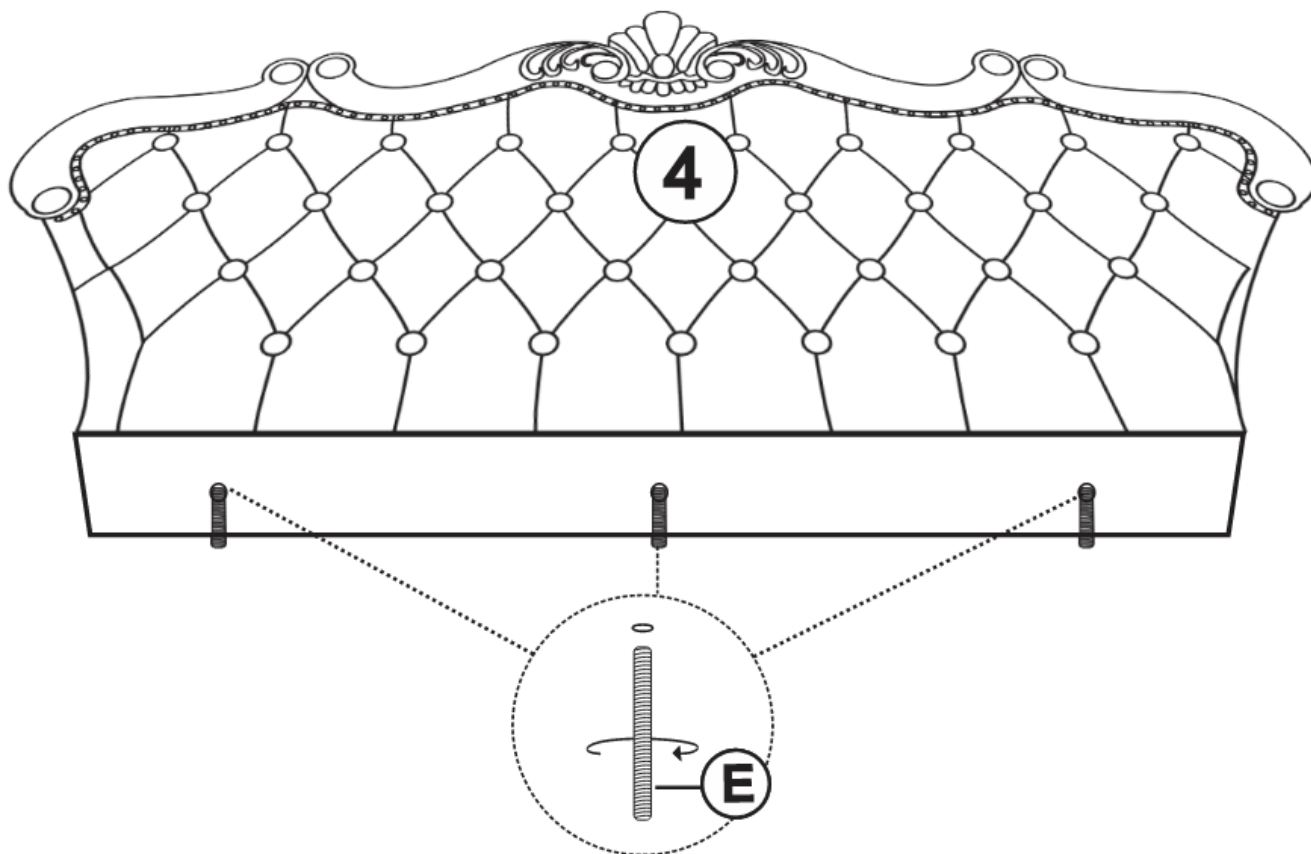


STEP 6:

Slide the brackets on the backrest (4) into the corresponding slots on the left arm (2) and right arm (3). Push down firmly until the backrest 'clicks' into place or is fully seated and secured.

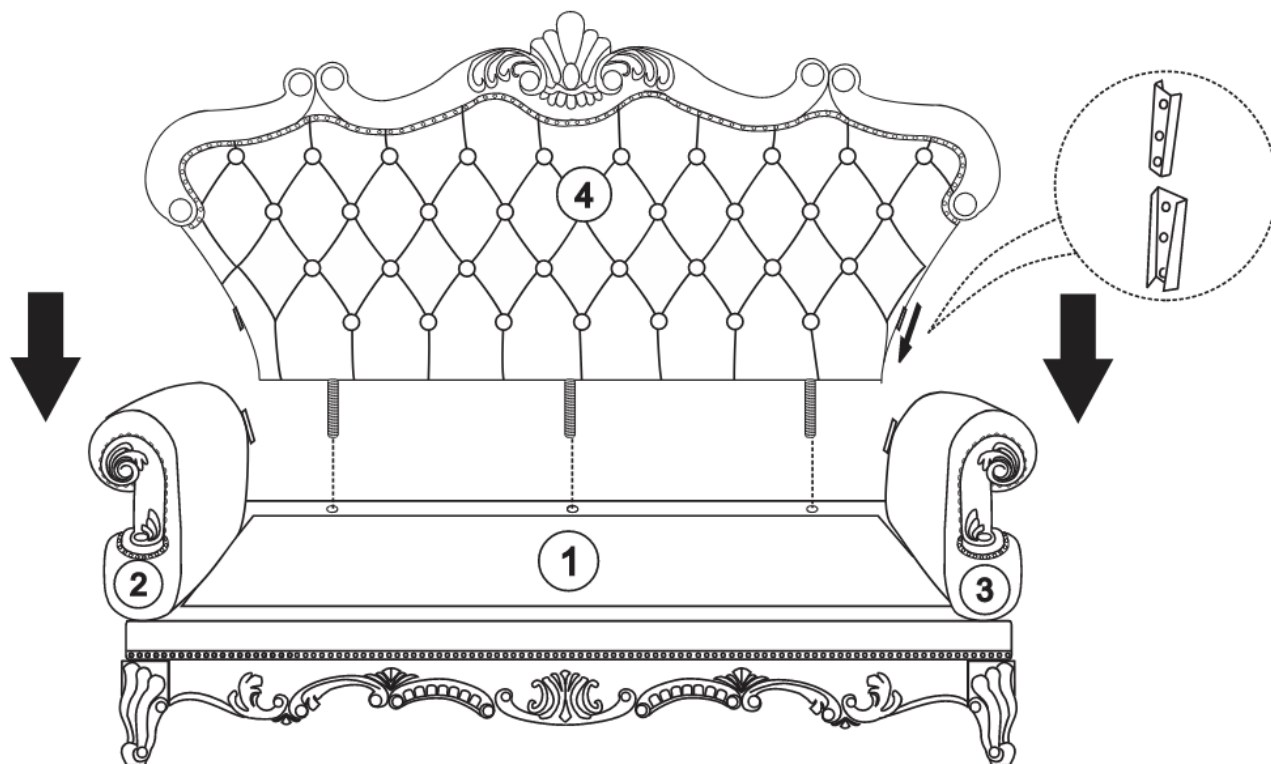


STEP 7:

Lay the chair on its back on a clean, soft surface to access the threaded bolts (E). Secure the backrest (4) to the seat frame (1) using the wrench (G) along with hardware C, D, and F.

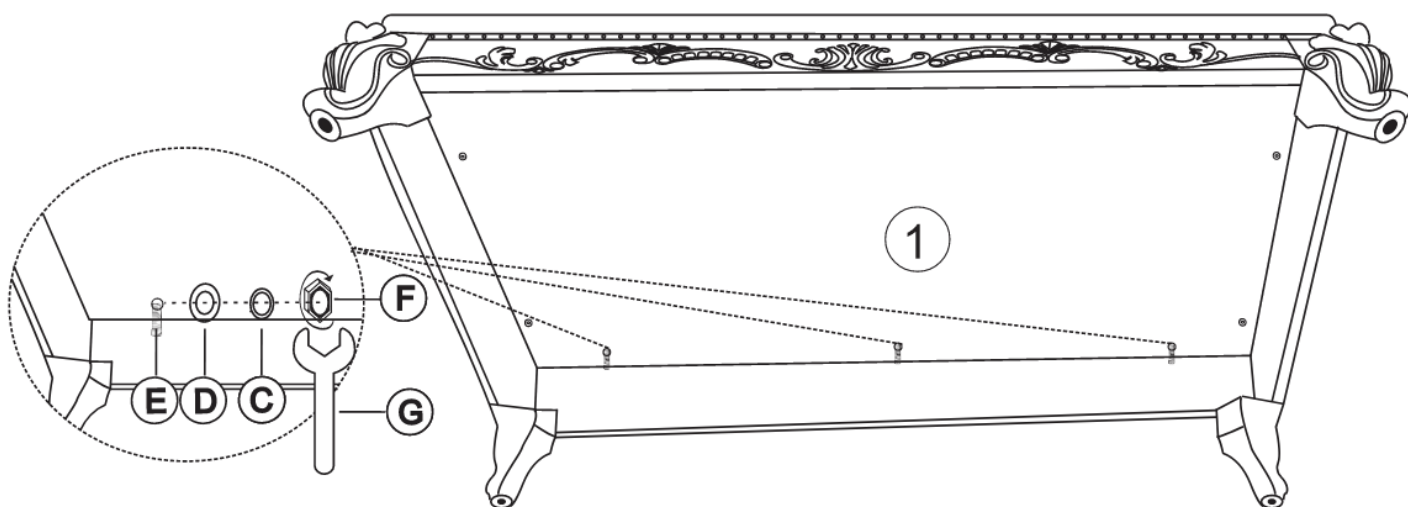


STEP 8:

Place the Seat cushion (5) on to the Seat frame (1).

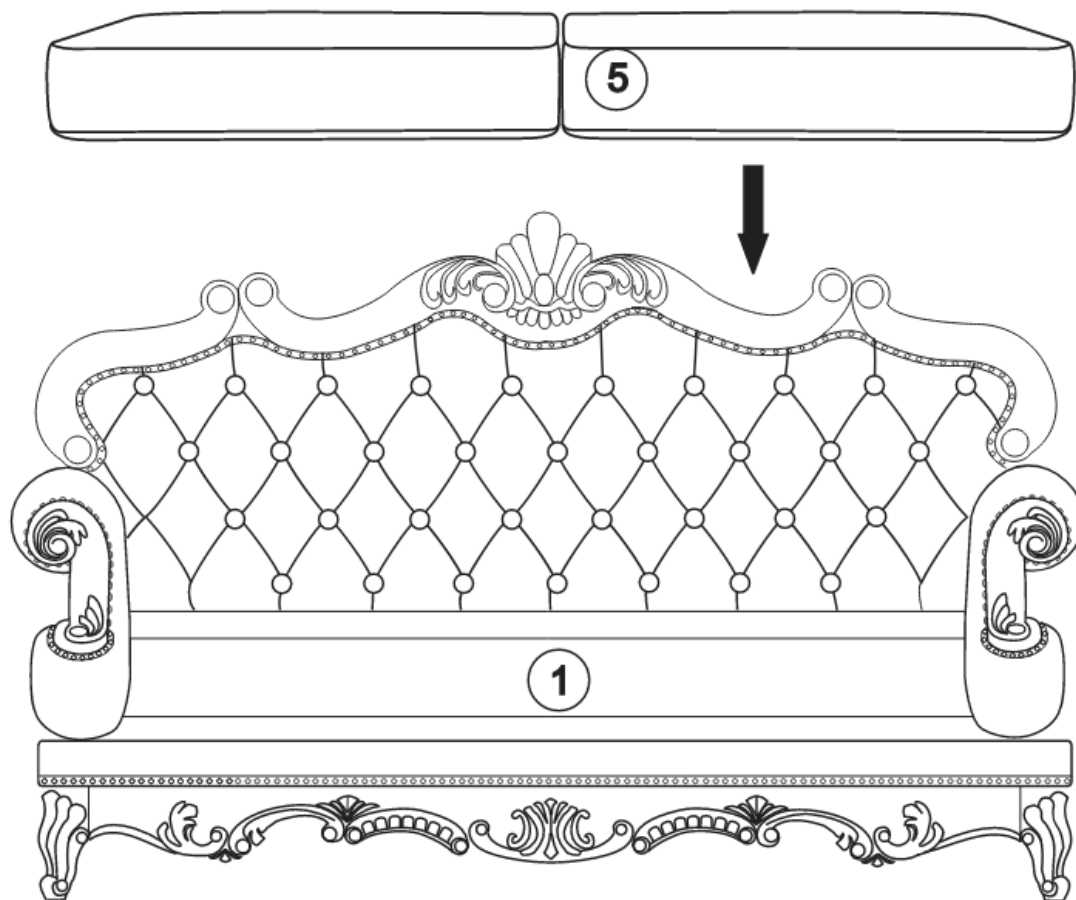

COMPLETED

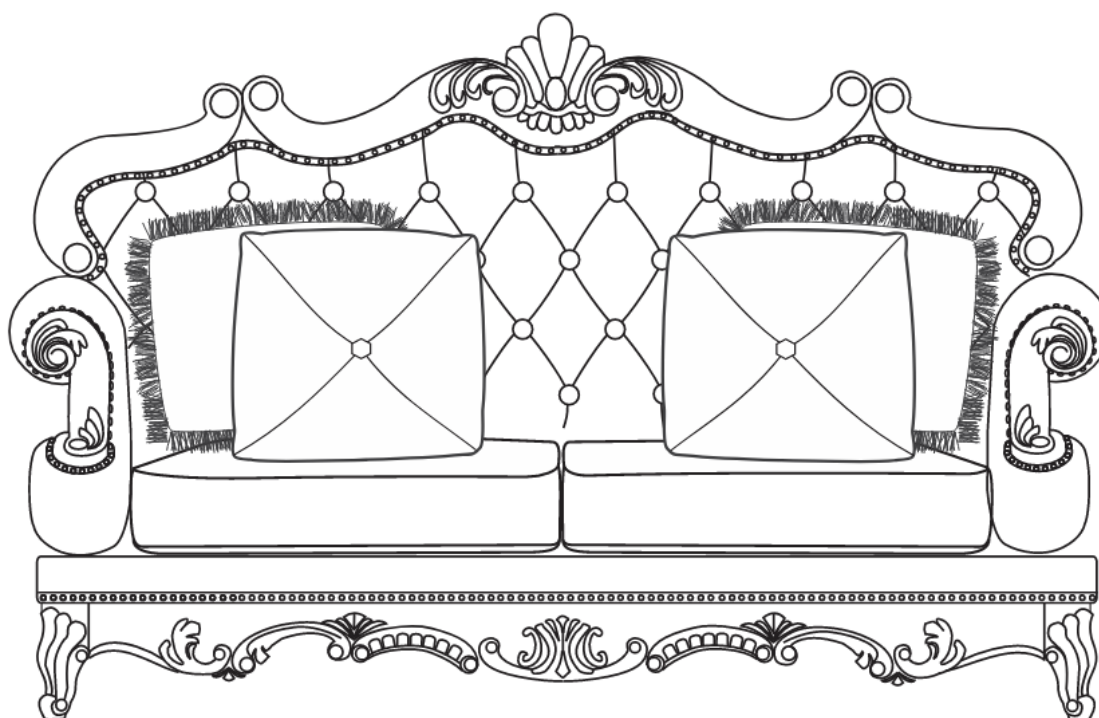

CARE INSTRUCTIONS FOR POLYESTER:

To maintain the original appearance of your polyester furniture, please follow these simple care procedure:

- Avoid exposing furniture directly to sunlight or heating and air conditioning vents. Prolonged exposure to sunlight or heating and air conditioning outlets will cause polyester to fade or deteriorate.
- Gently wipe with a damp, soft cloth to remove dust, dirt and any grime build-up.
- Hardware may loosen over time. Periodically check all connections to ensure they are tight. Re-tighten if necessary.



ASSEMBLY INSTRUCTIONS

SOFA, 5 PILLOWS

Thank you for choosing our product. Please inspect all packing materials carefully, as small parts may have become loose inside the carton during shipment. Identify and count all items against the parts list provided to ensure everything is accounted for.




CAUTION: Read all instructions thoroughly before beginning assembly.

1. We recommend assembling this product with the assistance of another person to prevent damage during the assembly process.

2. When repositioning the product, please always "LIFT & MOVE" instead of dragging to avoid damaging the legs or flooring.

NOTE: Do not use power tools for assembly. Power tools increase the risk of over-tightening, which may lead to splitting or cracking the wood.

PARTS LIST

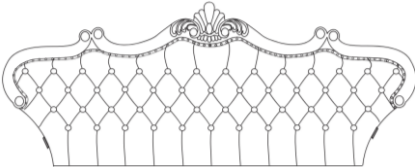NO.	DESCRIPTION	PART NAME	Q'TY (PC)
①	SEAT FRAME		1
②	LEFT ARM		1
③	RIGHT ARM		1
④	BACK REST		1
⑤	SEAT CUSHION		2
⑥	POLY LEG		4
⑦	PILLOW 1		2
⑧	PILLOW 2		2
⑨	KIDNEY PILLOW		1
⑩	WOODEN SUPPORT LEG		1


HARDWARE LIST

NO.	PART NAME	SKETCH	Q'TY (PC)
Ⓐ	ALLEN KEY Ø5/16"		1
Ⓑ	BOLT Ø5/16"x2 1/2"		8
Ⓒ	FLAT WASHER Ø5/16"x7/8"		15
Ⓓ	LOCK WASHER Ø5/16"x1/2"		15
Ⓔ	THREAD BOLT Ø 5/16 x 3 1/4"		7
Ⓕ	HEX NUT Ø5/16 x 1/2"		7
Ⓖ	WRENCH 1/2" x 3 1/2"		1

How to assemble:


STEP 1:

Turn the chair seat upside down. Align and attach the legs (6) to the seat frame (1) using bolts (B) with lock washers (D) and flat washers (C). Tighten each bolt by hand first, then fully secure all connections using the Allen key (A). Attach the support leg (10) to the seat frame (1) by screwing it anti-clockwise until secure.

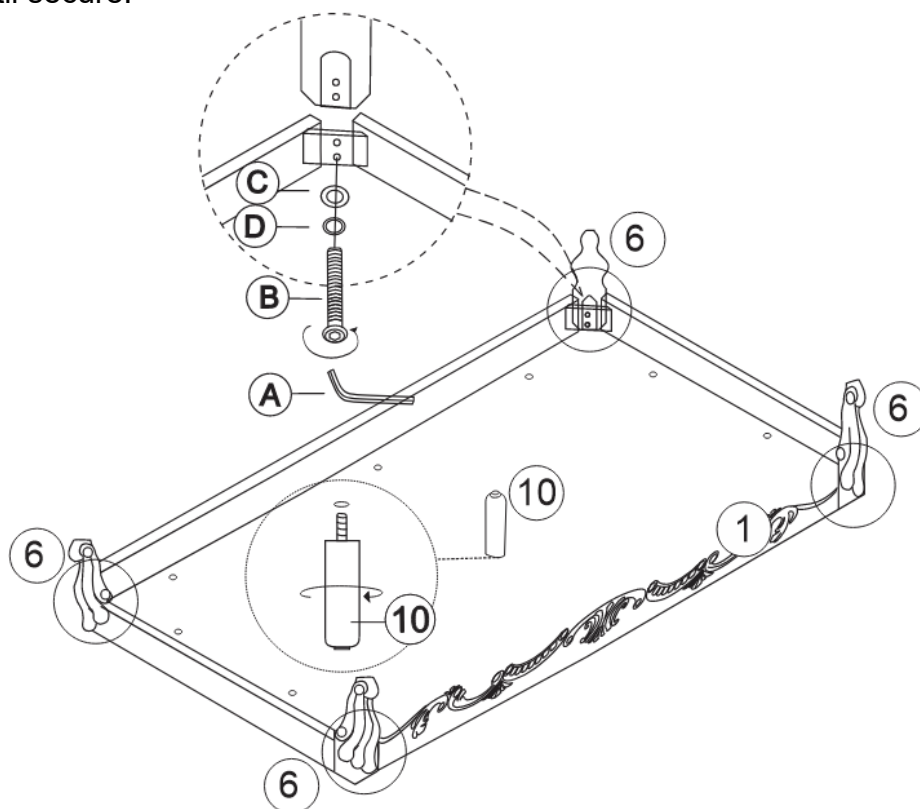


STEP 2:

Thread the bolts (E) into the pre-drilled holes at the bottom of the left arm (2) and right arm (3). Hand-tighten each bolt to a depth of approximately 25 mm.

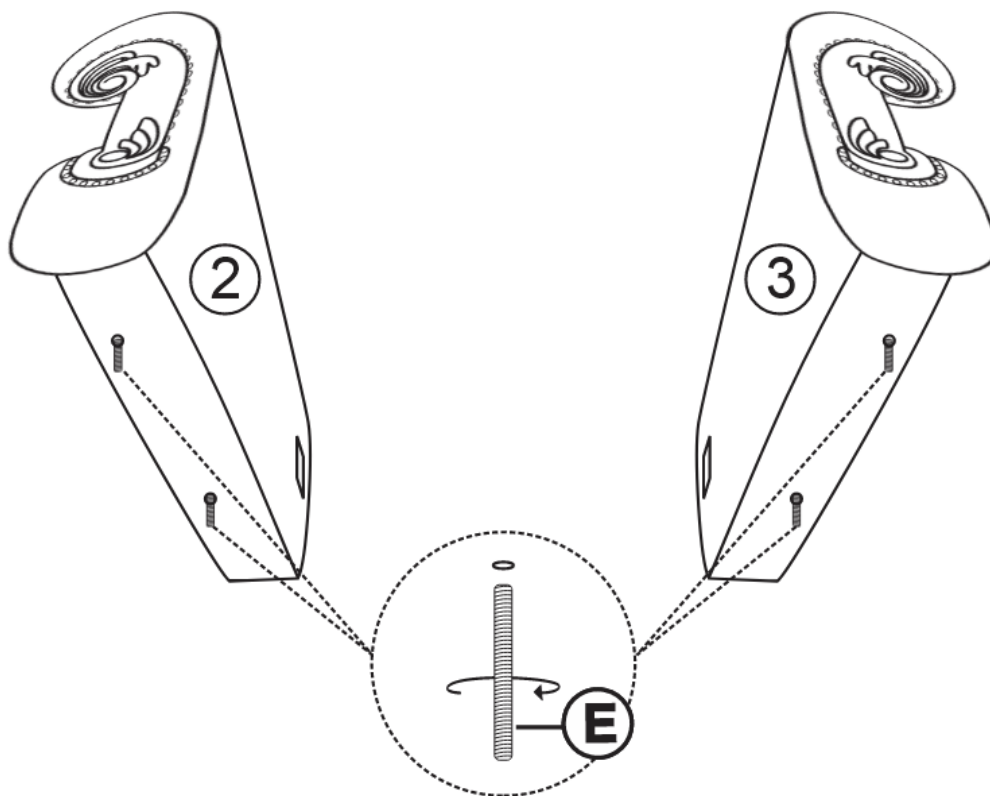


STEP 3:

Align the left arm (2) and right arm (3) with the pre-drilled holes on the seat frame (1), then secure them using the provided hardware.

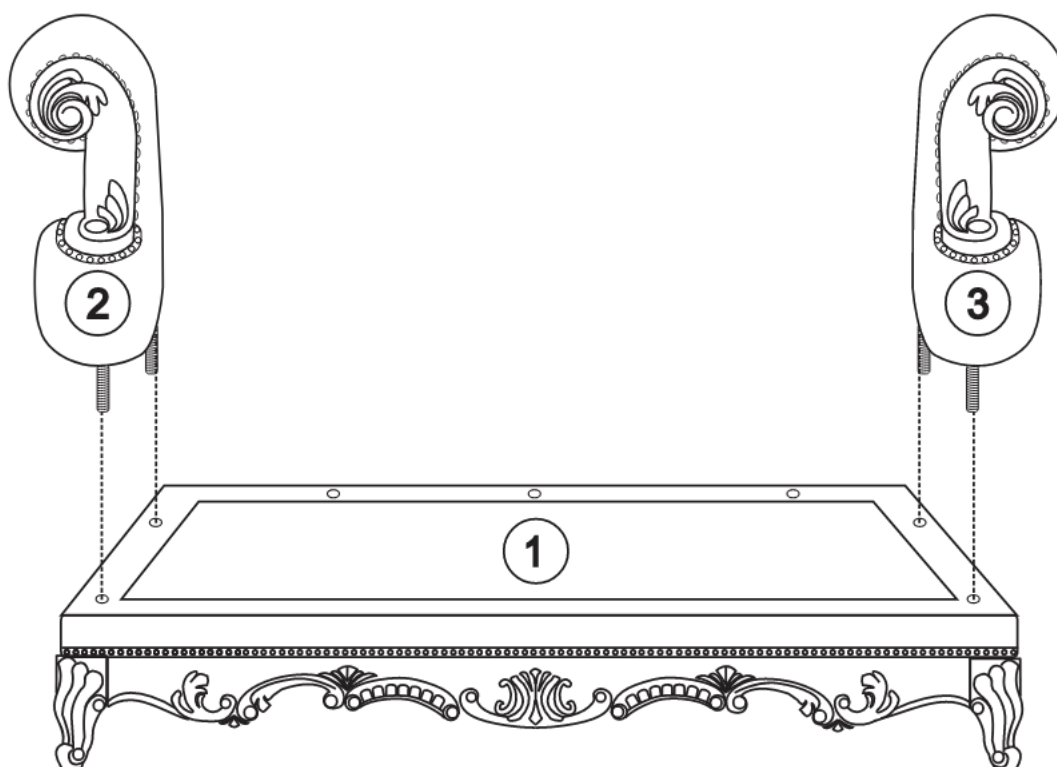


STEP 4:

Lay the chair on its back on a clean, protected surface to access the threaded bolts (6). Secure the backrest, left arm (2) and right arm (3) to the seat frame (1) using the wrench (G) along with hardware C, D, and F.

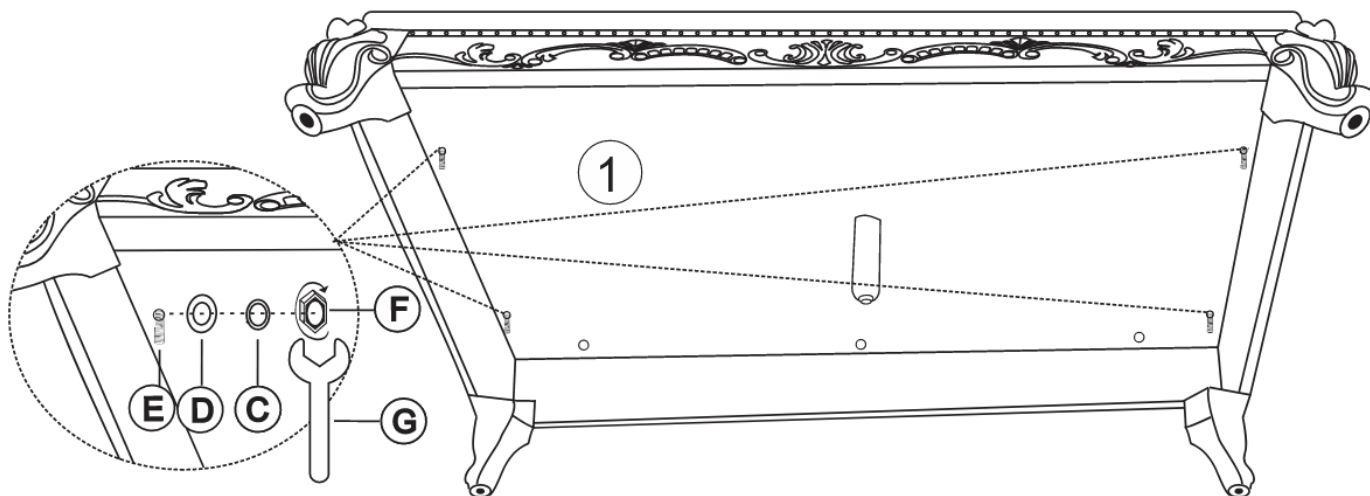


STEP 5:

Place the backrest (4) face down on a protected surface. Thread the bolts (E) into the pre-drilled holes at the bottom of the backrest (4). Hand-tighten each bolt to a depth of approximately 25 mm, leaving enough thread exposed for later assembly.

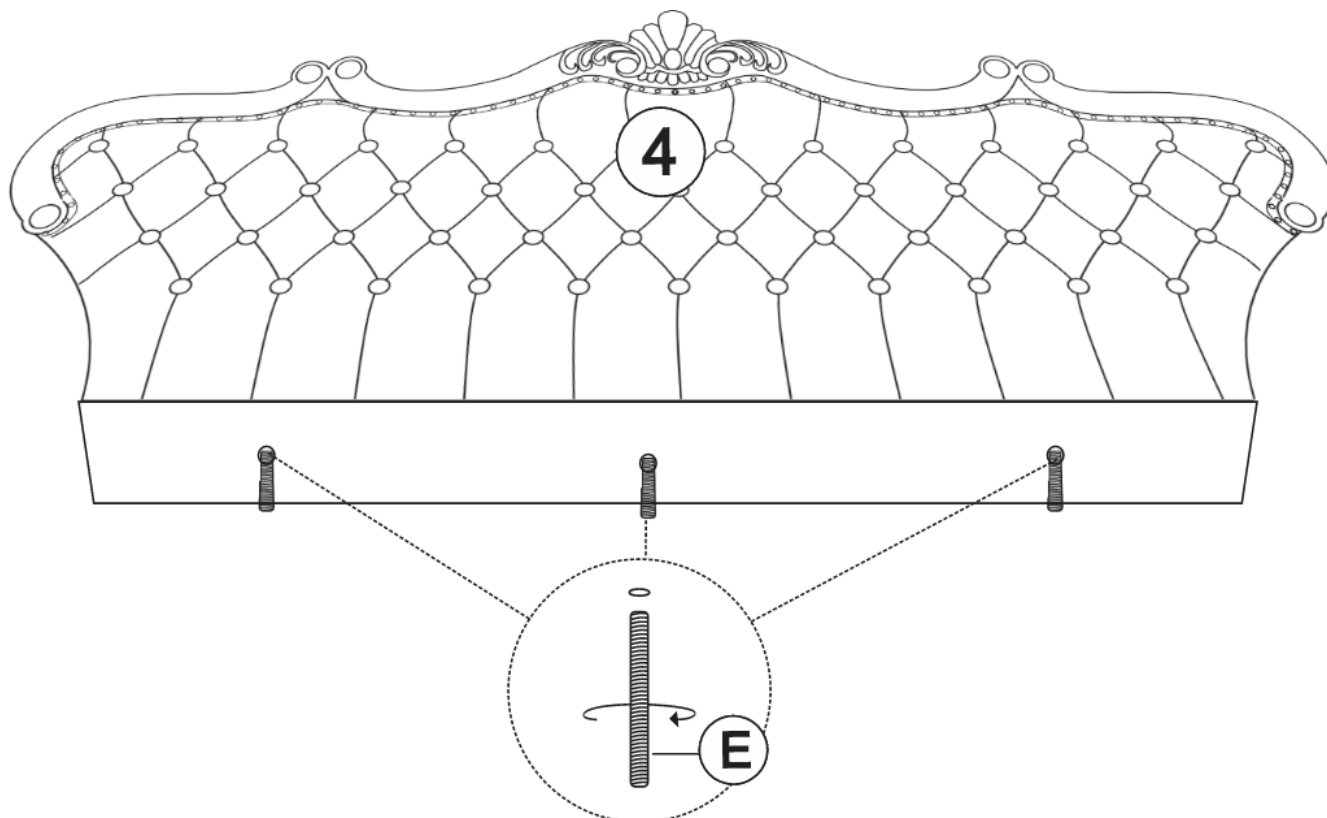


STEP 6:

Slide the brackets on the backrest (4) into the corresponding slots on the left arm (2) and right arm (3). Push down firmly until the backrest 'clicks' into place or is fully seated and secured.

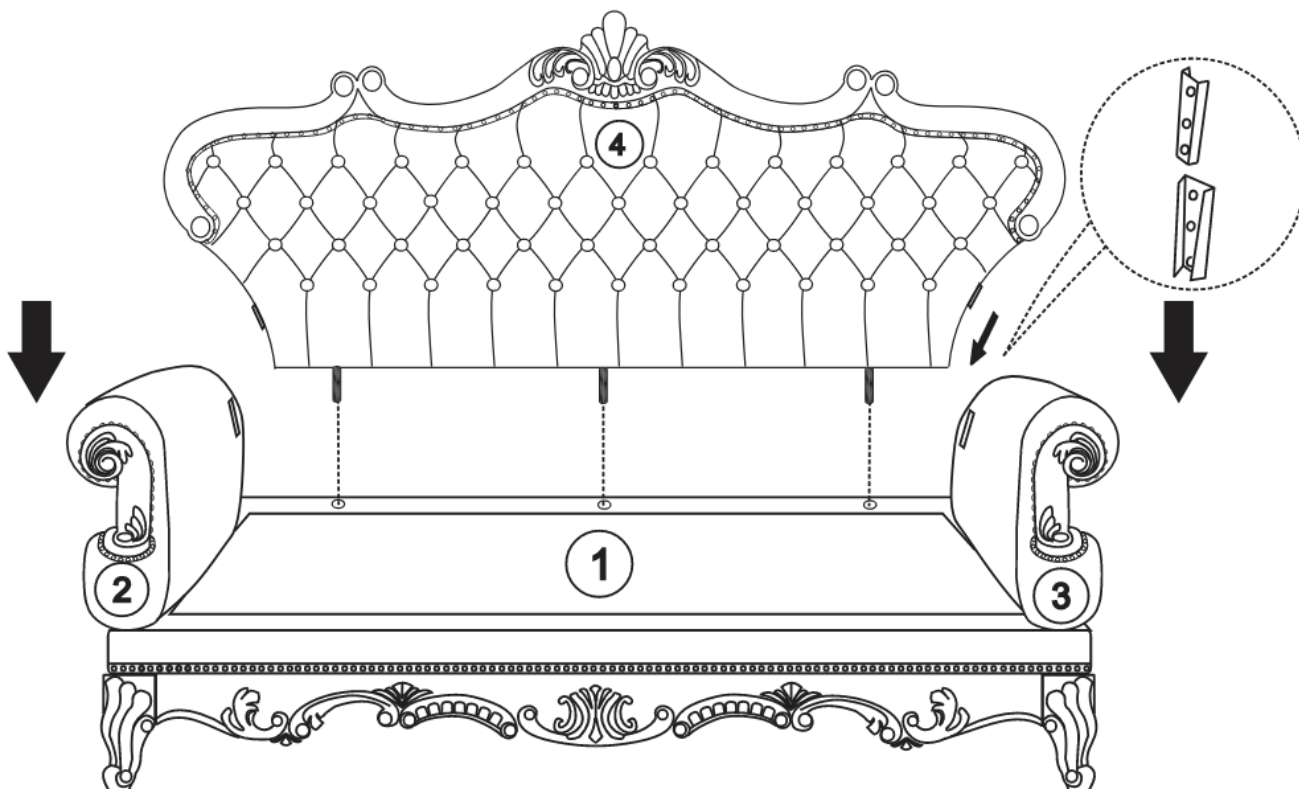


STEP 7:

Lay the chair on its back on a clean, soft surface to access the threaded bolts (E). Secure the backrest (4) to the seat frame (1) using the wrench (G) along with hardware C, D, and F.

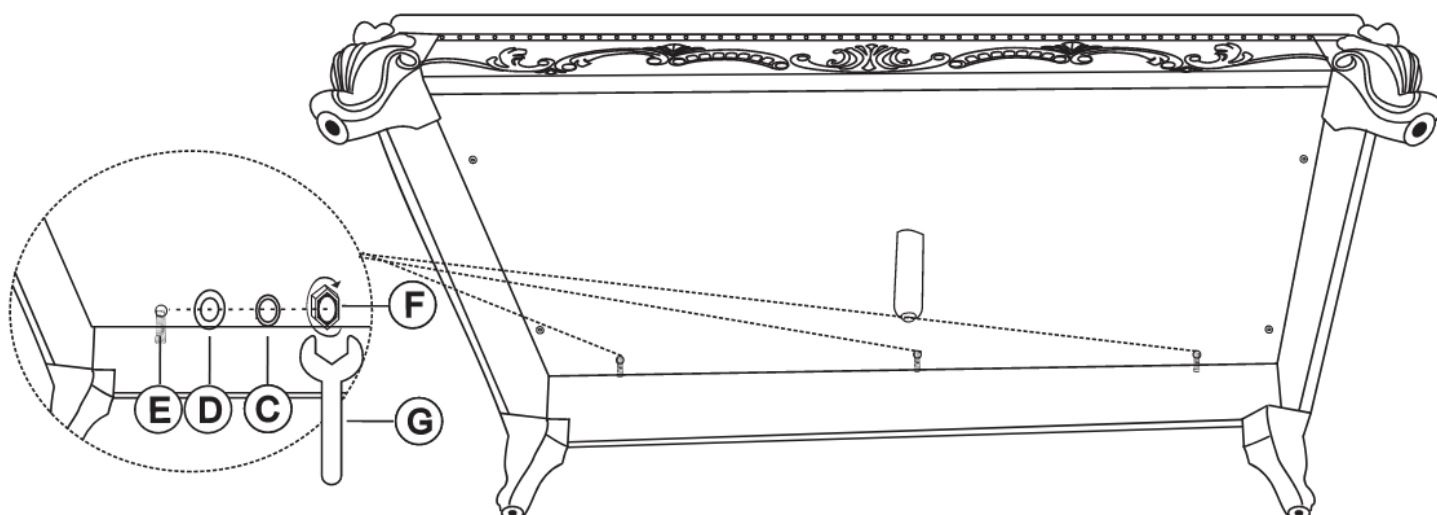


STEP 8:

Place the Seat cushion (5) on to the Seat frame (1).

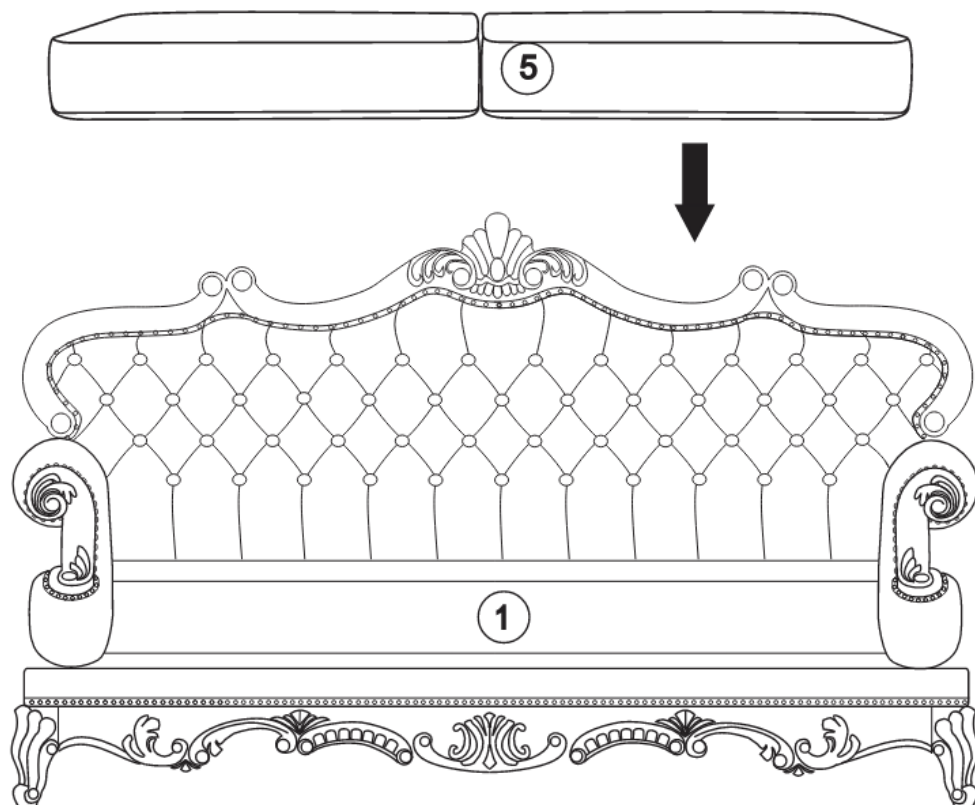

COMPLETED

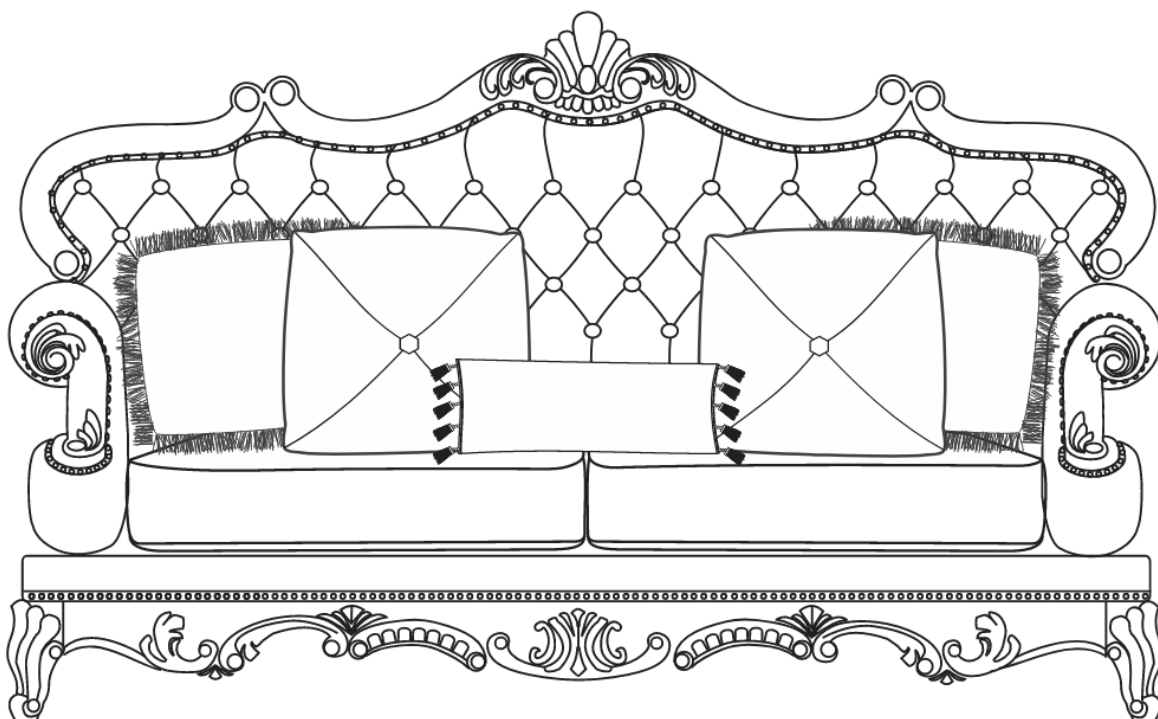

CARE INSTRUCTIONS FOR POLYESTER:

To maintain the original appearance of your polyester furniture, please follow these simple care procedure:

- Avoid exposing furniture directly to sunlight or heating and air conditioning vents. Prolonged exposure to sunlight or heating and air conditioning outlets will cause polyester to fade or deteriorate.
- Gently wipe with a damp, soft cloth to remove dust, dirt and any grime build-up.
- Hardware may loosen over time. Periodically check all connections to ensure they are tight. Re-tighten if necessary.