



A\*1


B\*1

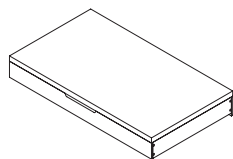

C\*1

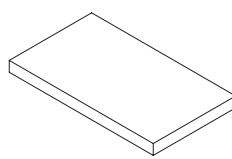

D\*1

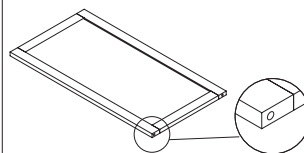

E\*1

Note: this screw hole is more close to the edge than the other side.




JX2



MX4




②x4




N\*2




O\*4

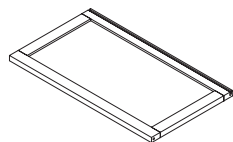

F\*1



G\*2

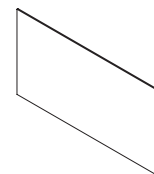

H\*1



KX8




①x12



③x16

# Instruction Manual HW1100

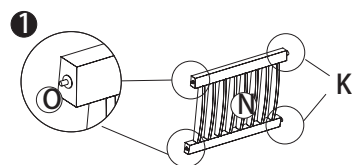

Insert the wooden pin(K) on one side of N and insert O on the other side, and install it on A/B

