
SKU:NYX08-169



As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.

Before You Start

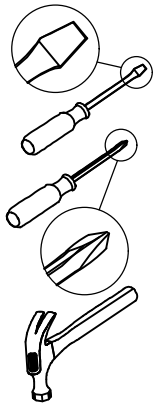

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.




-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.

- Do NOT use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

Board Identification


Not actual size

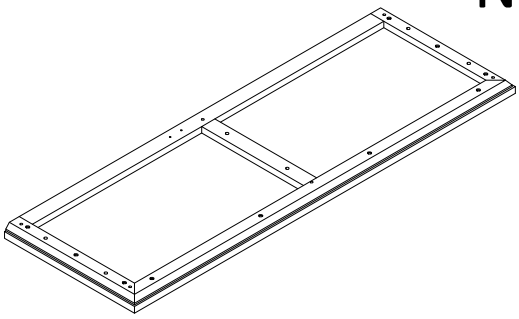


Ⓐ
TOP
Qty:1

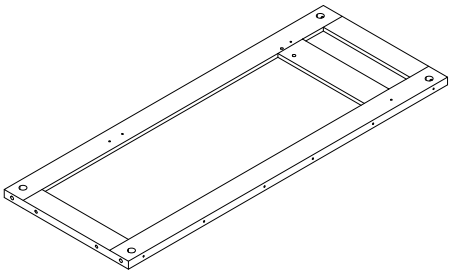


Ⓑ
LEFT SIDE PANEL
Qty:1

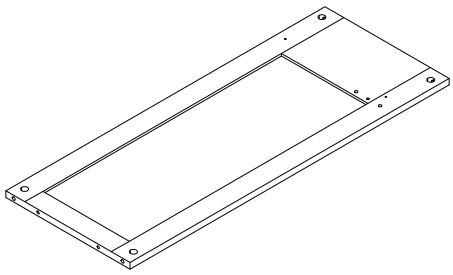


Ⓒ
PARTITION
Qty:1

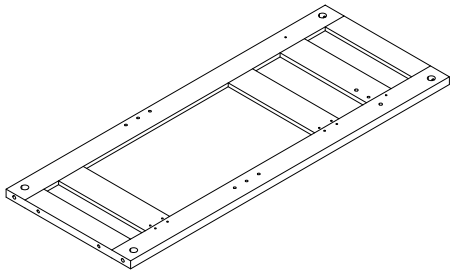


Ⓓ
RIGHT SIDE PANEL
Qty:1

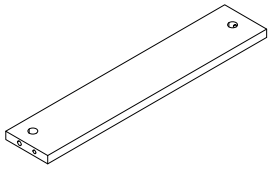


Ⓔ
RAIL
Qty:2

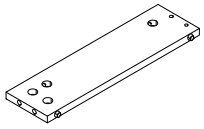


Ⓕ
LEFT BASE PANEL
Qty:1

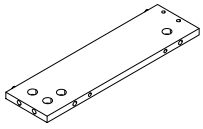


Ⓖ
RIGHT BASE PANEL
Qty:1

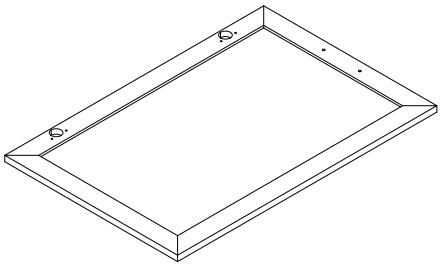


Ⓗ
RIGHT DOOR
Qty:1

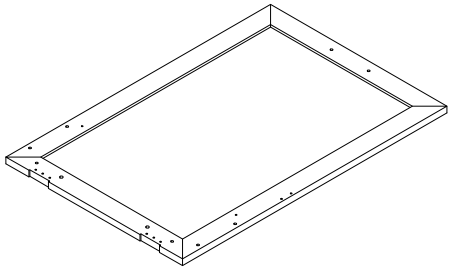


Ⓘ
LEFT DOOR
Qty:1

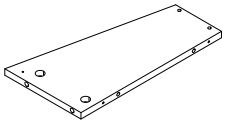

Ⓙ
INNER LEFT SIDE PANEL
Qty:1

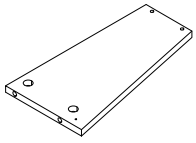


Ⓚ
INNER RIGHT SIDE PANEL
Qty:1

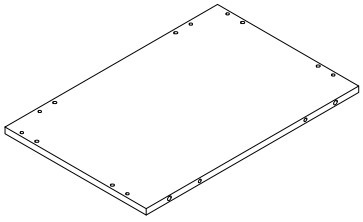

Ⓛ
INNER BOTTOM
Qty:1


Board Identification

Not actual size

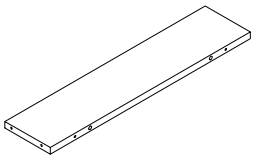


Ⓜ

INNER BACK PANEL
Qty:1

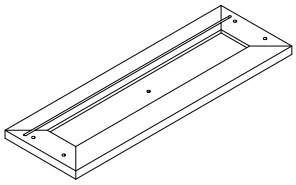


Ⓝ

DRAWER FRONT
Qty:2

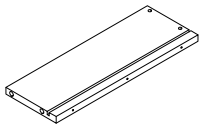


Ⓞ

LEFT DRAWER SIDE
Qty:2

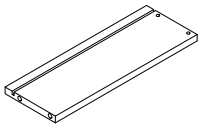


Ⓟ

RIGHT DRAWER SIDE
Qty:2

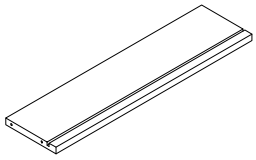


Ⓠ

DRAWER BACK
Qty:2

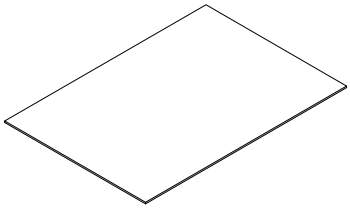


Ⓡ

DRAWER BOTTOM
Qty:2

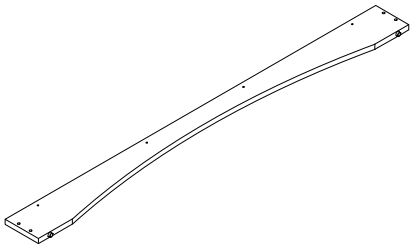


Ⓢ

FRONT RAIL
Qty:1

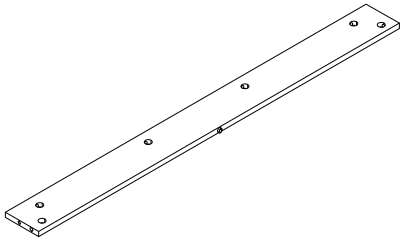


Ⓣ

BACK RAIL
Qty:1

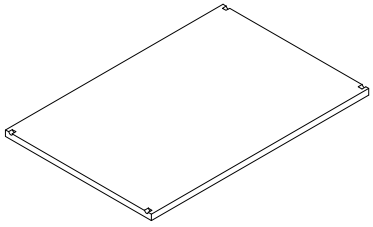


Ⓤ

ADJUSTABLE SHELF
Qty:1

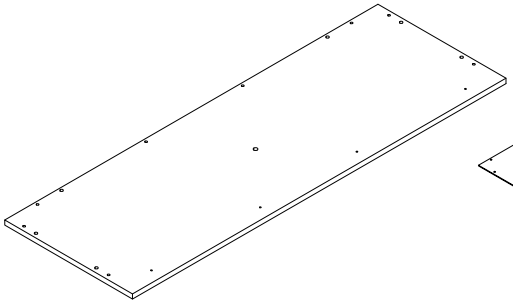


Ⓥ

BOTTOM
Qty:1

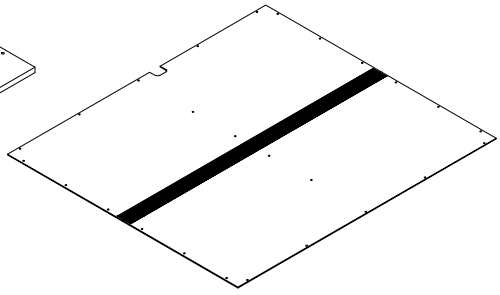

Ⓦ


BACK PANEL
Qty:1

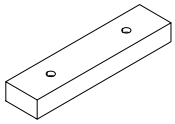

Ⓨ


SUPPORT BLOCK
Qty:1

Part List



Ⓩ
FOOT
Qty:1


Part List



Ø15X9.5mm

①	X44


CAM LOCK
spare:2



Ø6.5X35mm

②	X44


CAM BOLT
spare:2



Ø6X30mm

③	X34


WOODEN DOWEL
spare:2



Ø4X35mm

④	X18


SCREW
spare:1



Ø3.5X14mm

⑤	X48

SCREW
spare:2



Ø3X14mm

⑥	X26

SCREW
spare:2



M4X19mm

⑦	X4

BOLT



M4X6mm

⑧	X2


BOLT



Ø29X24mm

⑨	X2


HANDLE



127X24mm

⑩	X2


HANDLE



50X24X1.2mm

⑪	X2


HINGLE

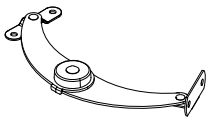


⑫	X1

LEFT HINGE


Part List

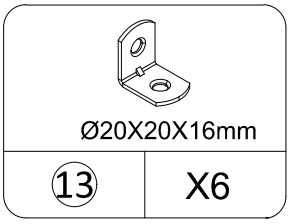


L -SHAPED IRON

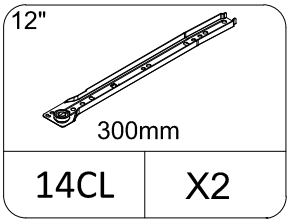


LEFT CABINET MEMBER

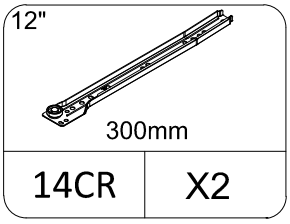


RIGHT CABINET MEMBER

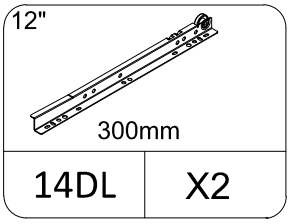


LEFT DRAWER RUNNER

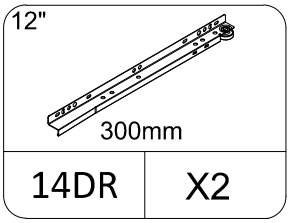


RIGHT DRAWER RUNNER

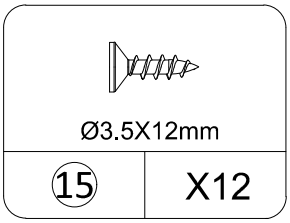


SCREW
spare:1

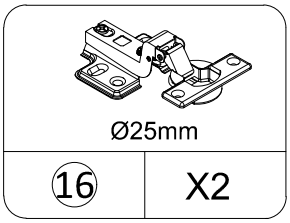


HINGE

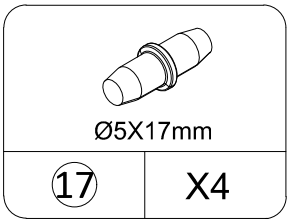

SHELF SUPPORT
spare:1

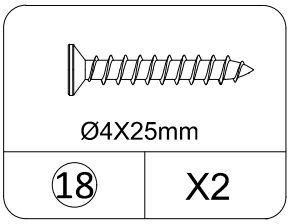

SCREW

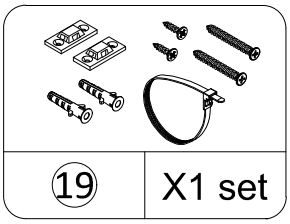


ANTI-TIPPING HARDWARE


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

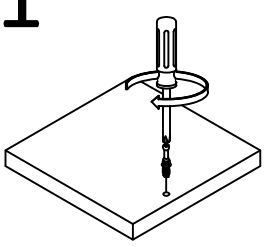

2

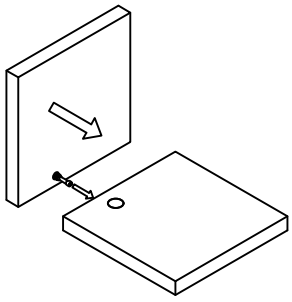


3

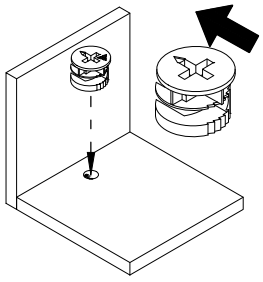


The opening must point toward the edge of the board

4

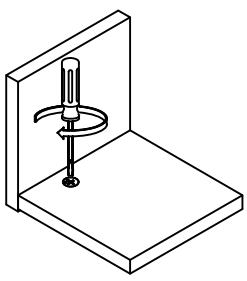



Board Identification


Not actual size

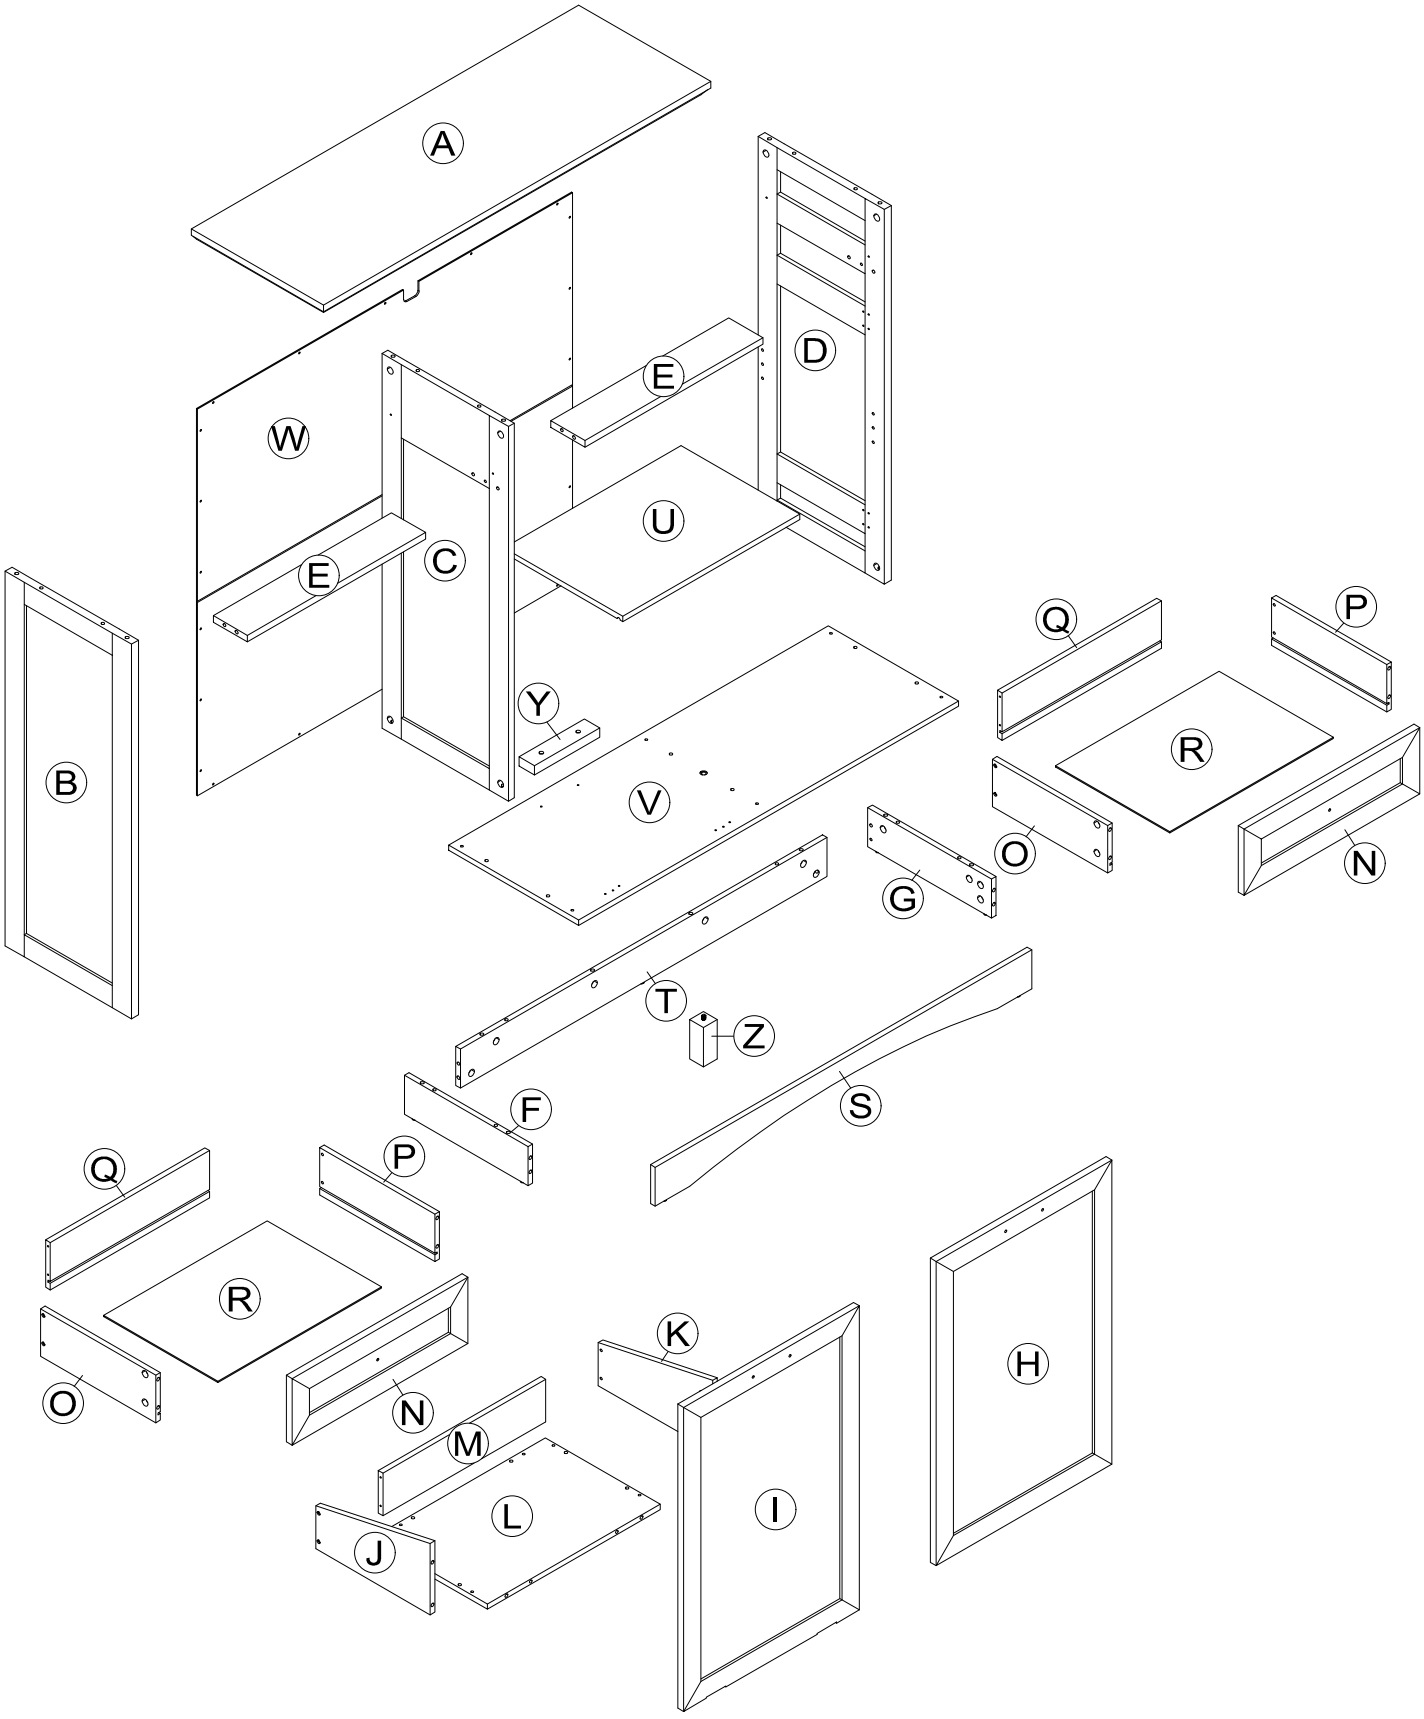


STEP1

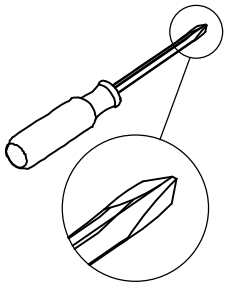

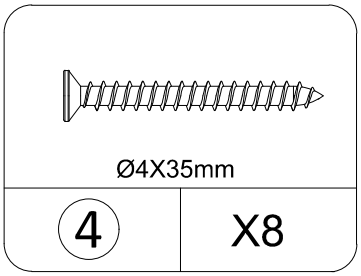


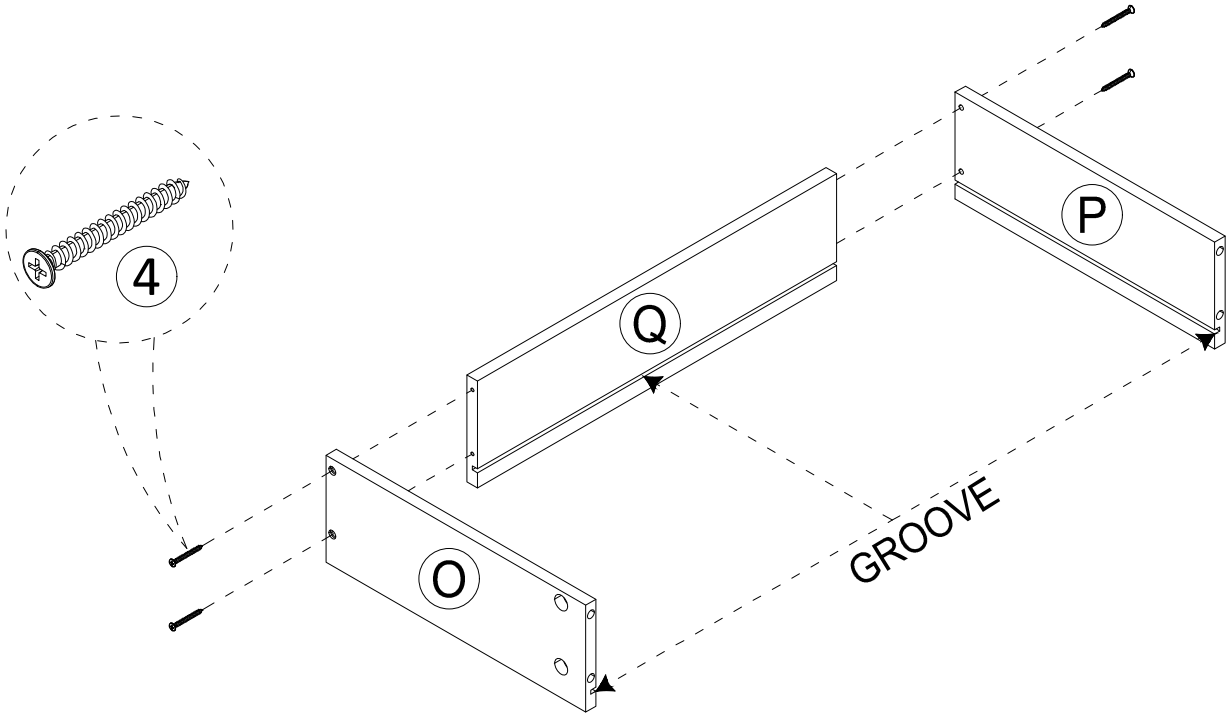


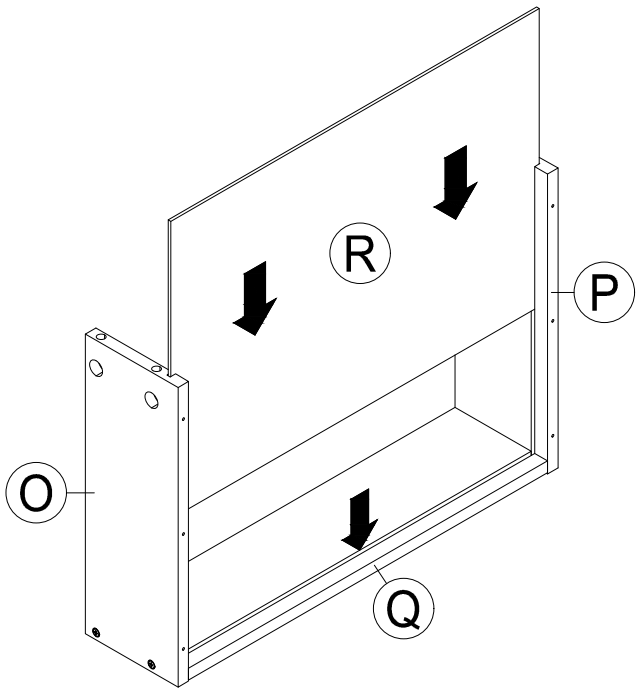



x 2


STEP2

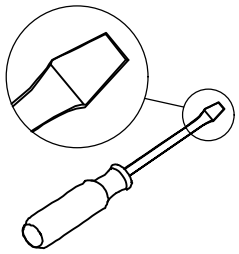


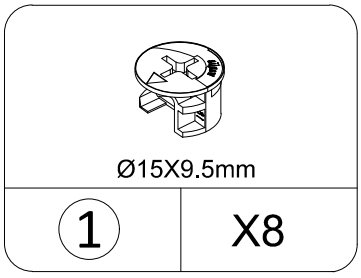

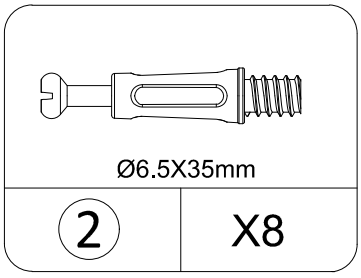


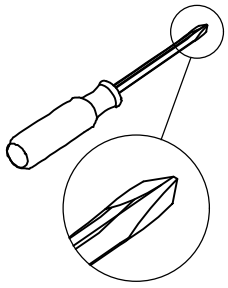

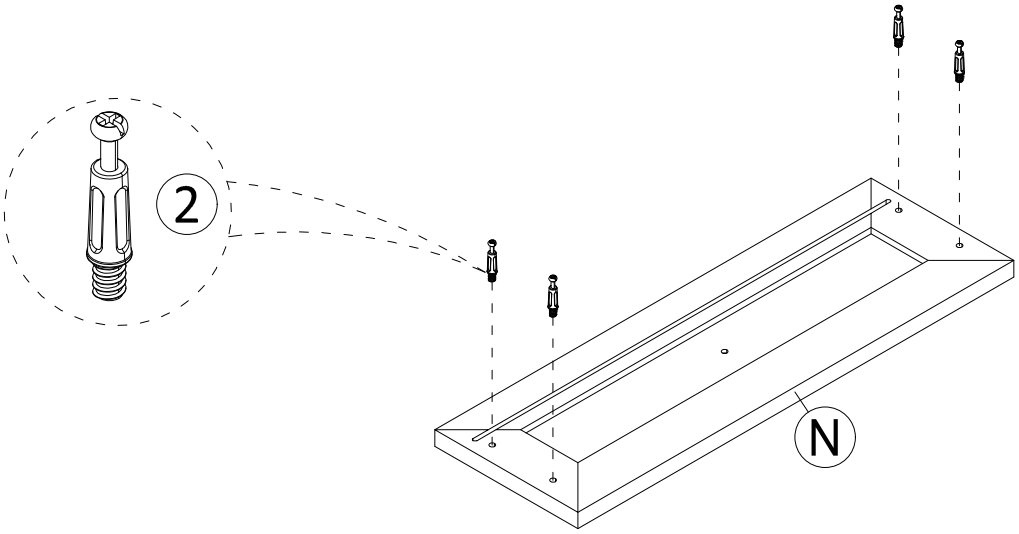

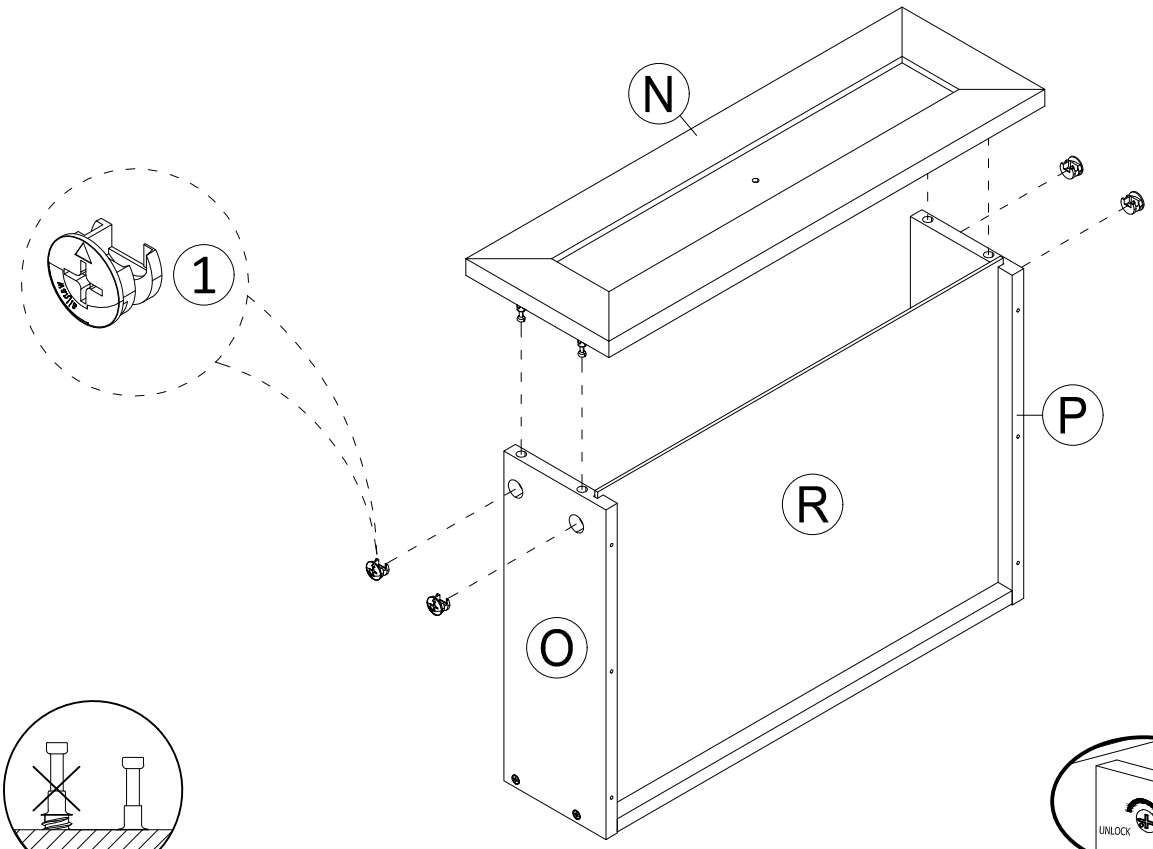



x 2

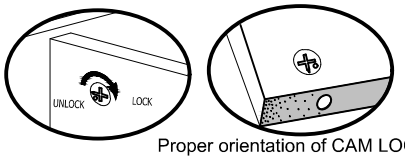


Proper orientation of CAM LOCK

STEP3

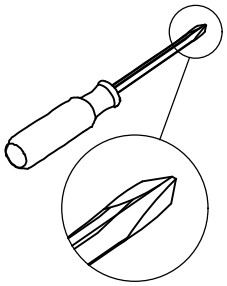


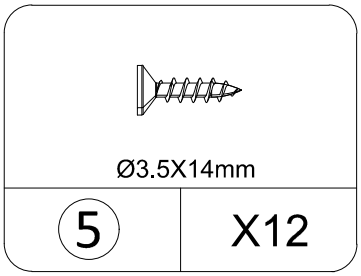


5	X12

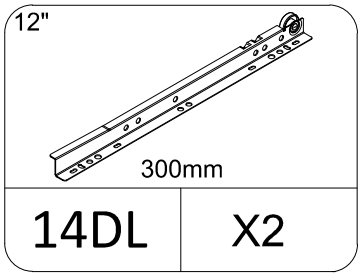

14DL	X2

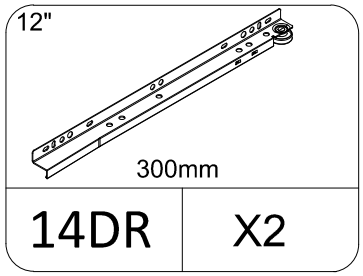



14DR	X2

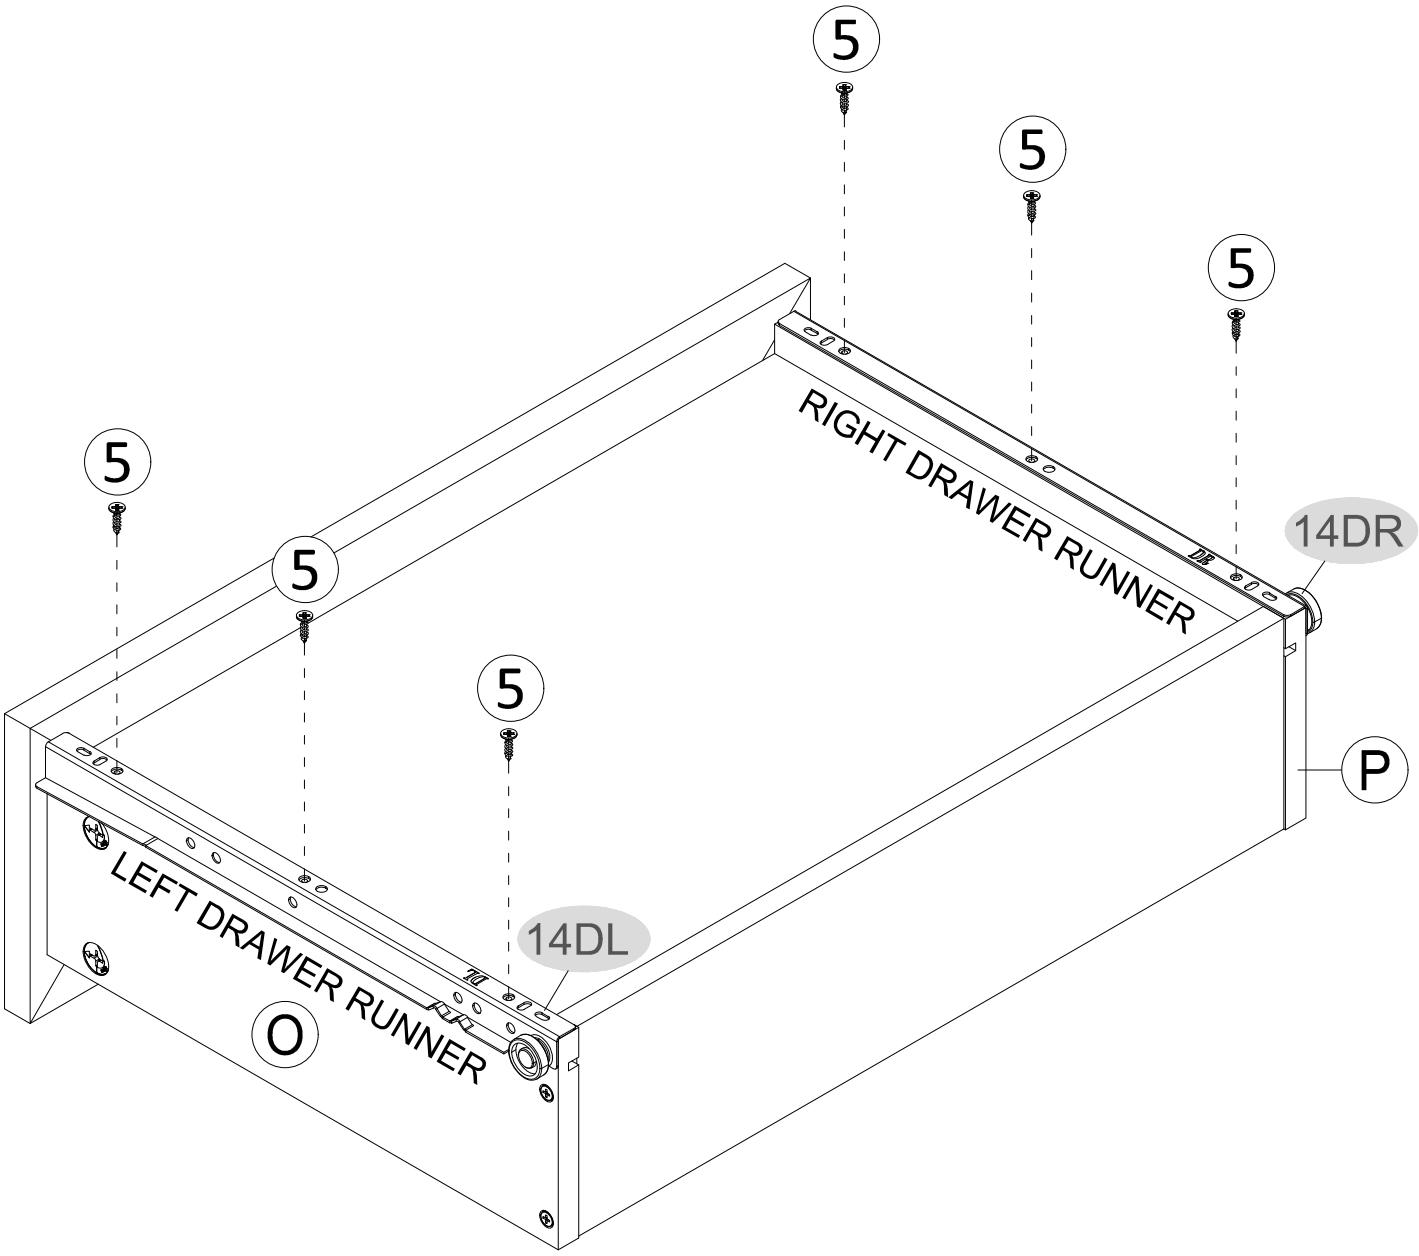



x 2


STEP4

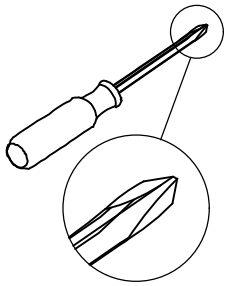


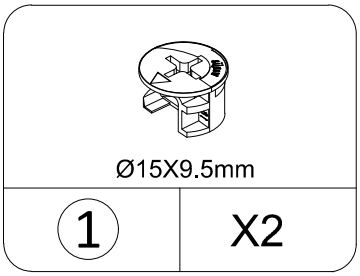


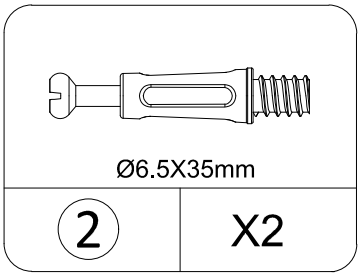


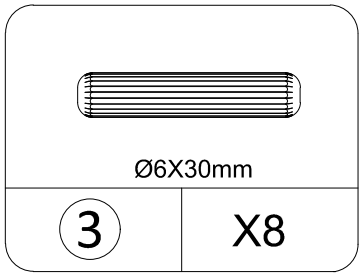


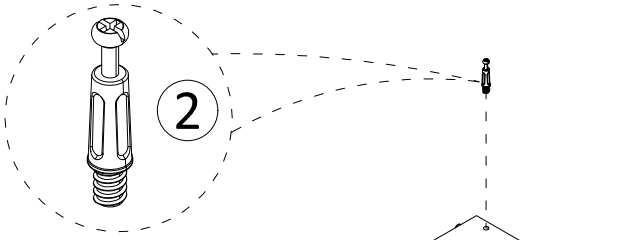


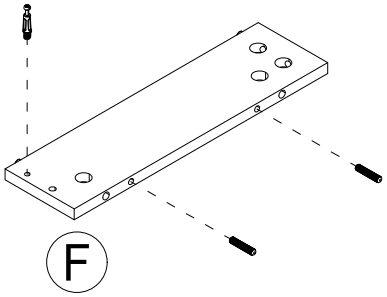


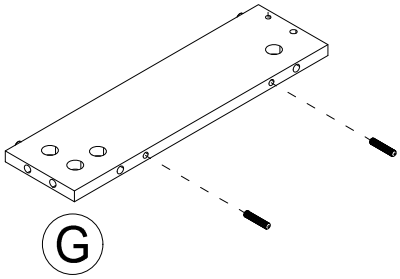


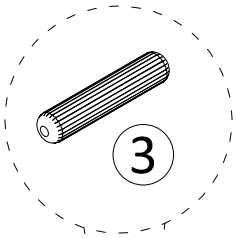


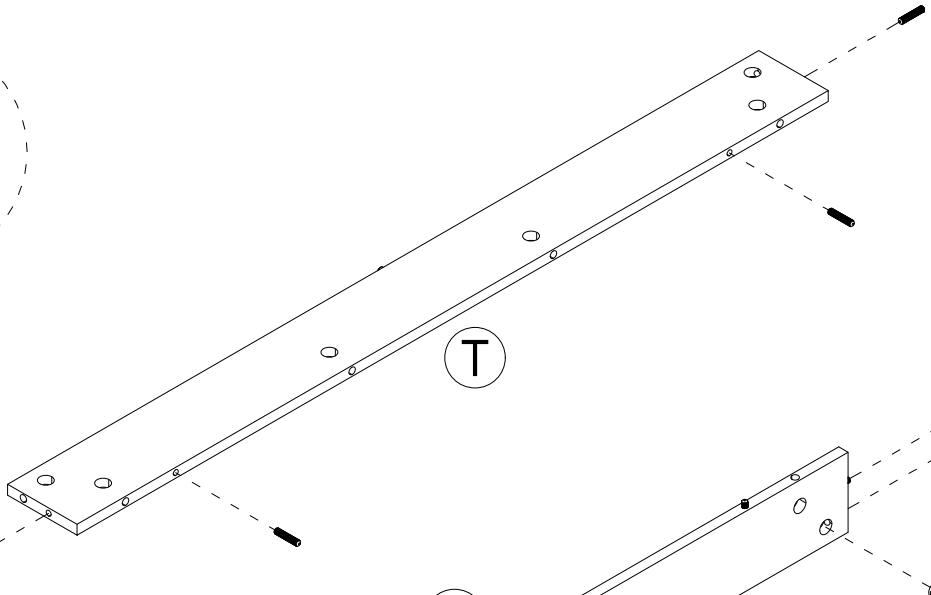

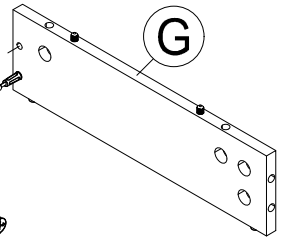

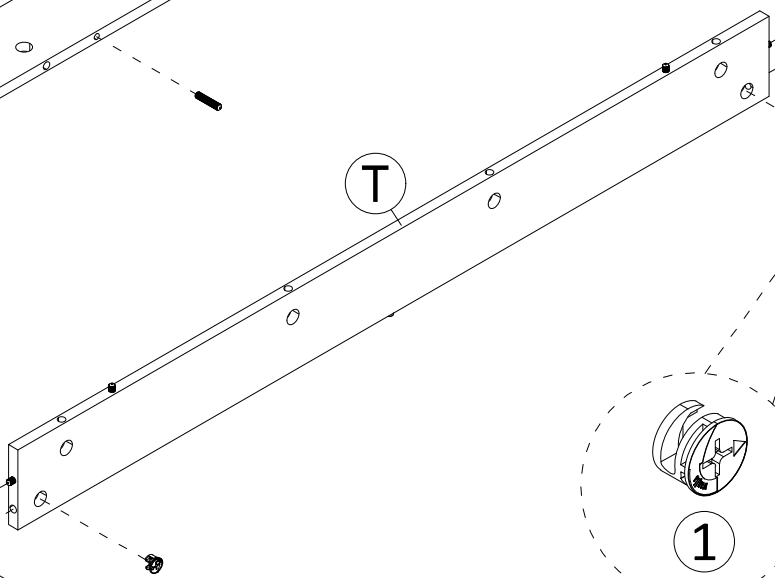


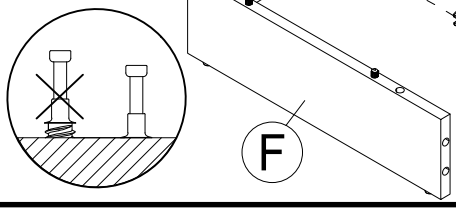


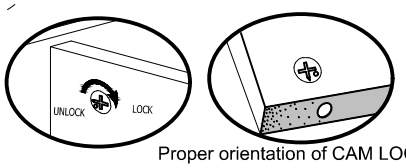



Proper orientation of CAM LOCK


STEP5

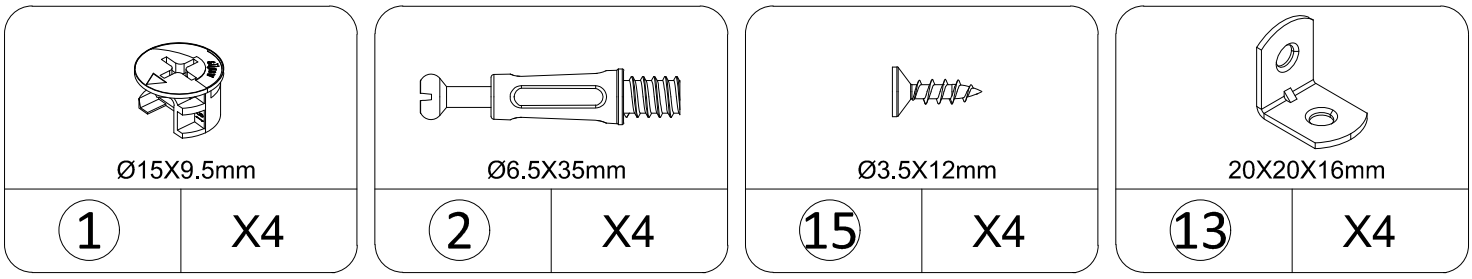

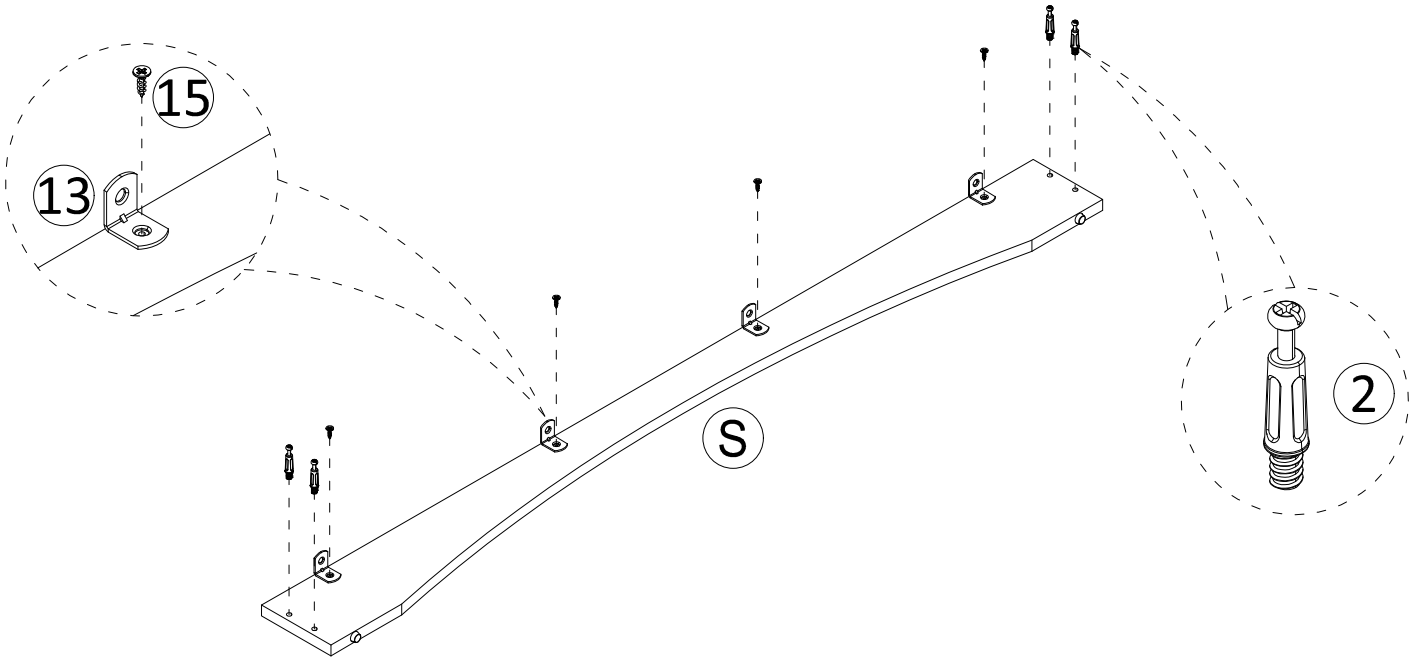

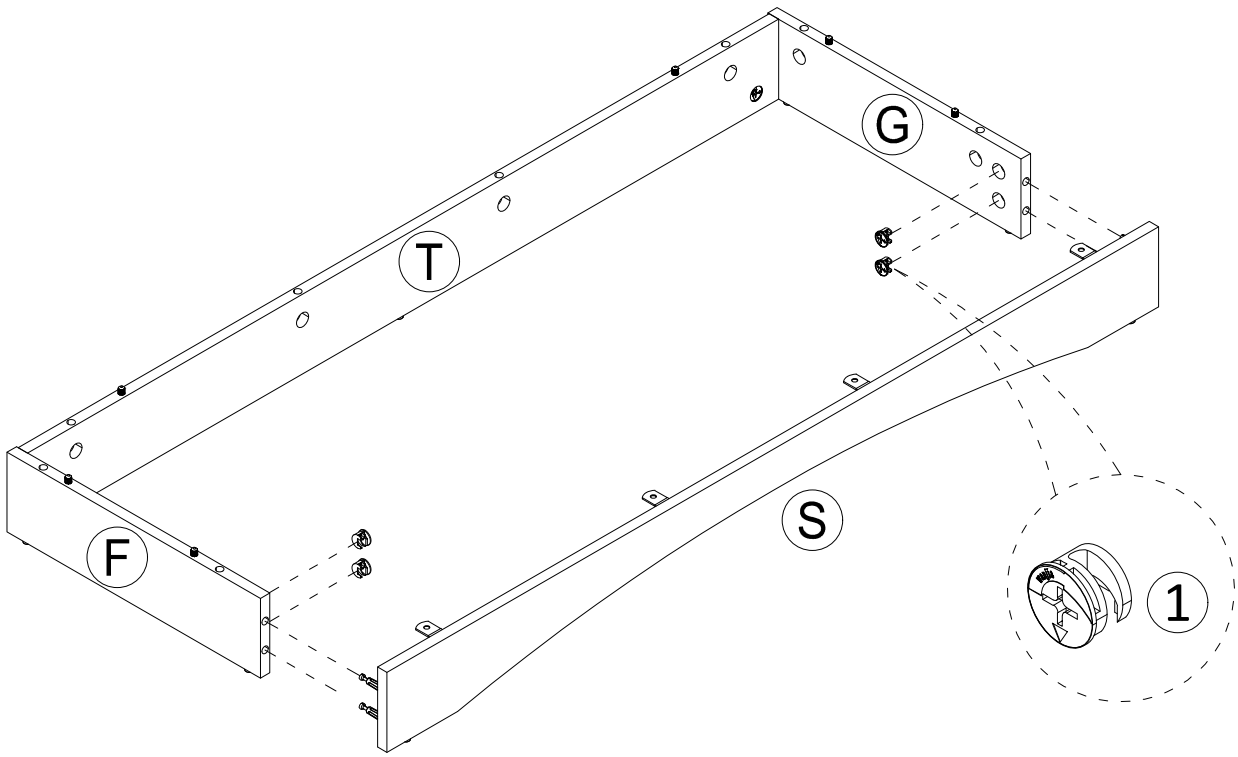


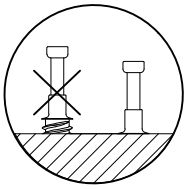


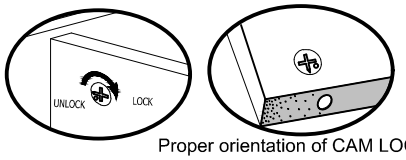



Proper orientation of CAM LOCK


STEP6

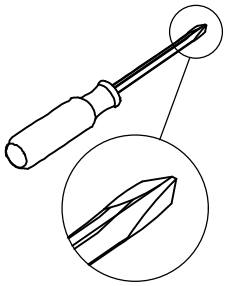

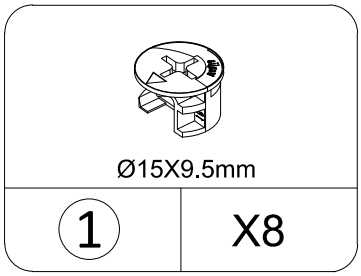

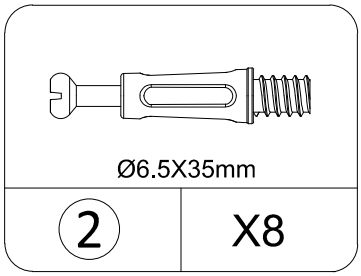


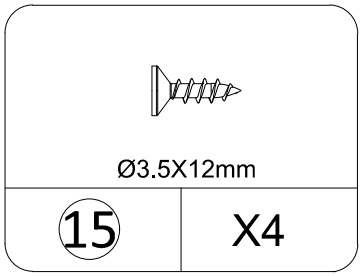


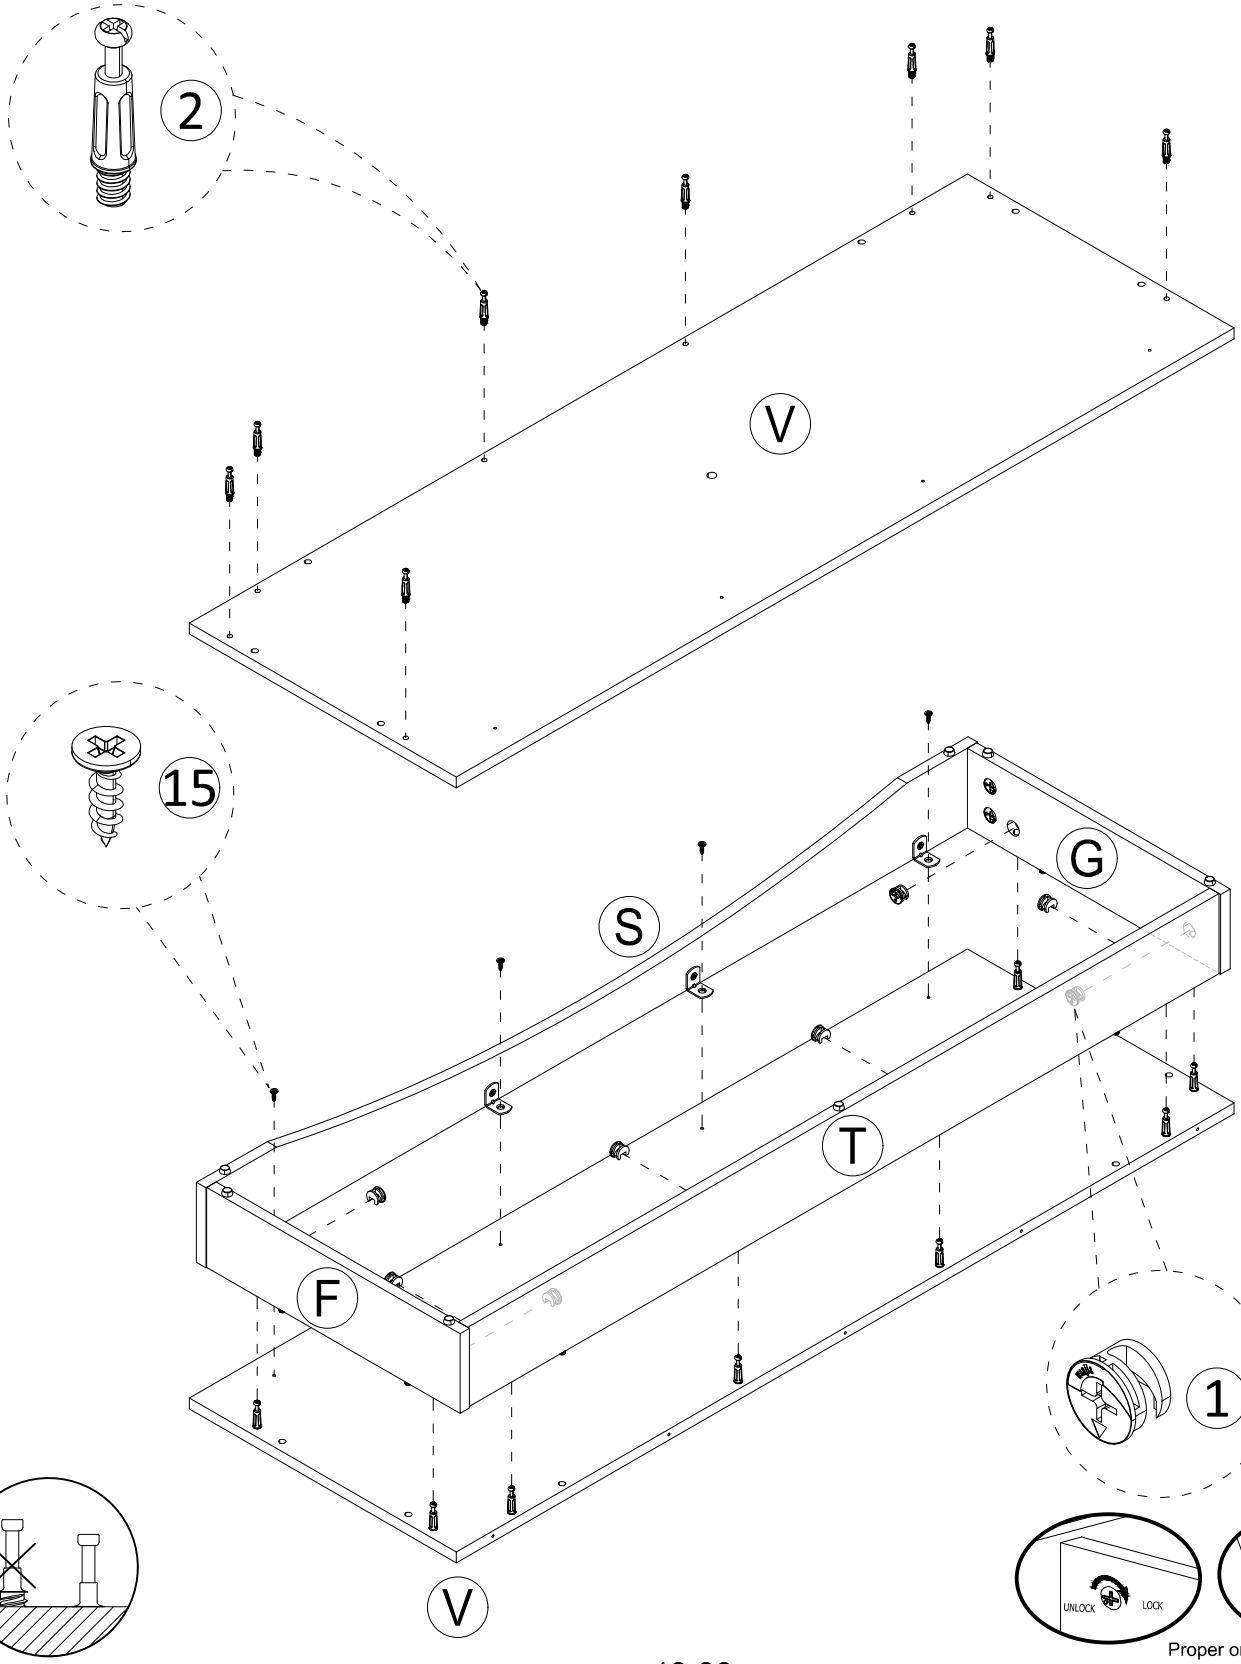


Proper orientation of CAM LOCK

STEP7

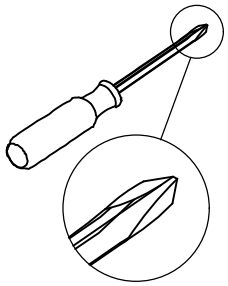


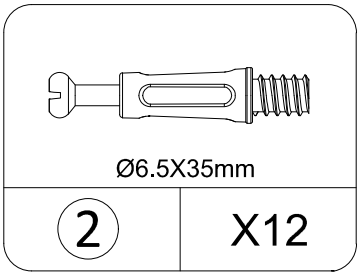


2	X12

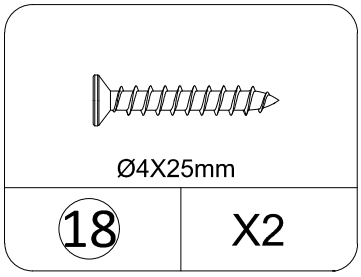


18	X2

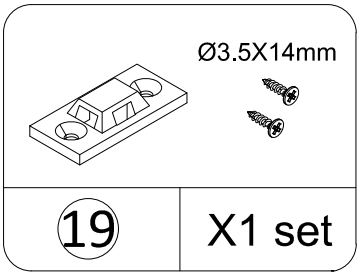



19	X1 set

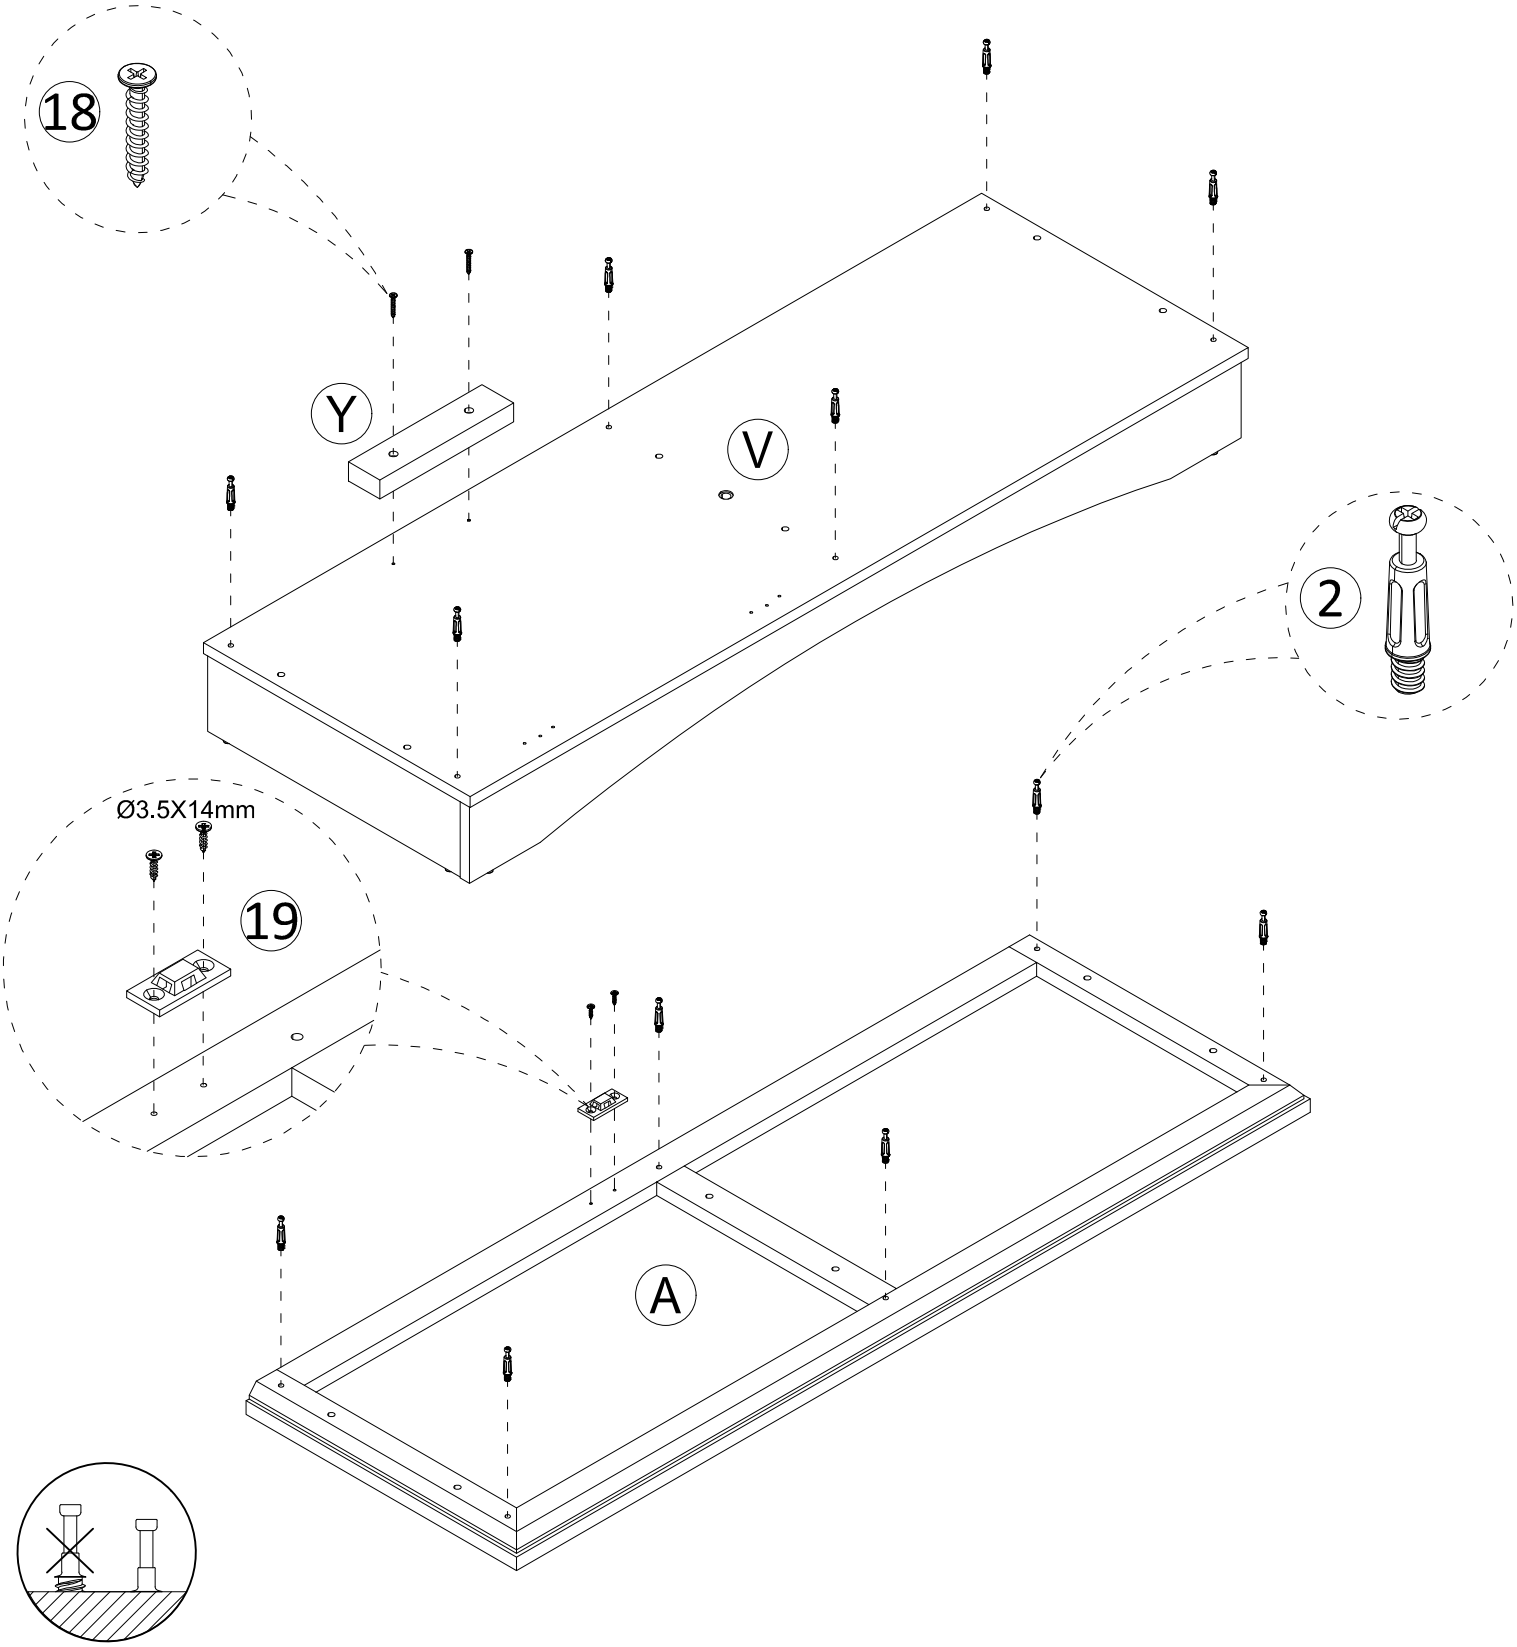



STEP8

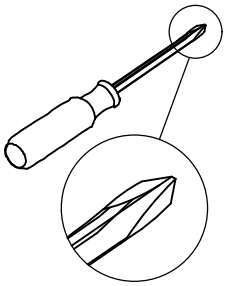


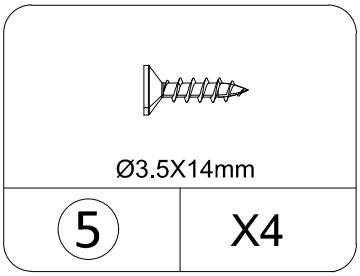
Ø3.5X14mm
5
X4

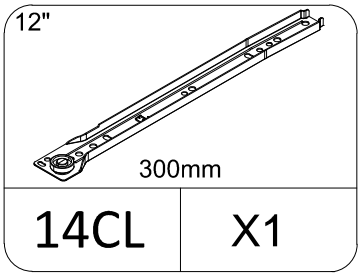

12"
300mm
14CL
X1

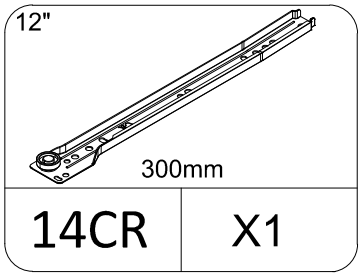

12"
300mm
14CR
X1

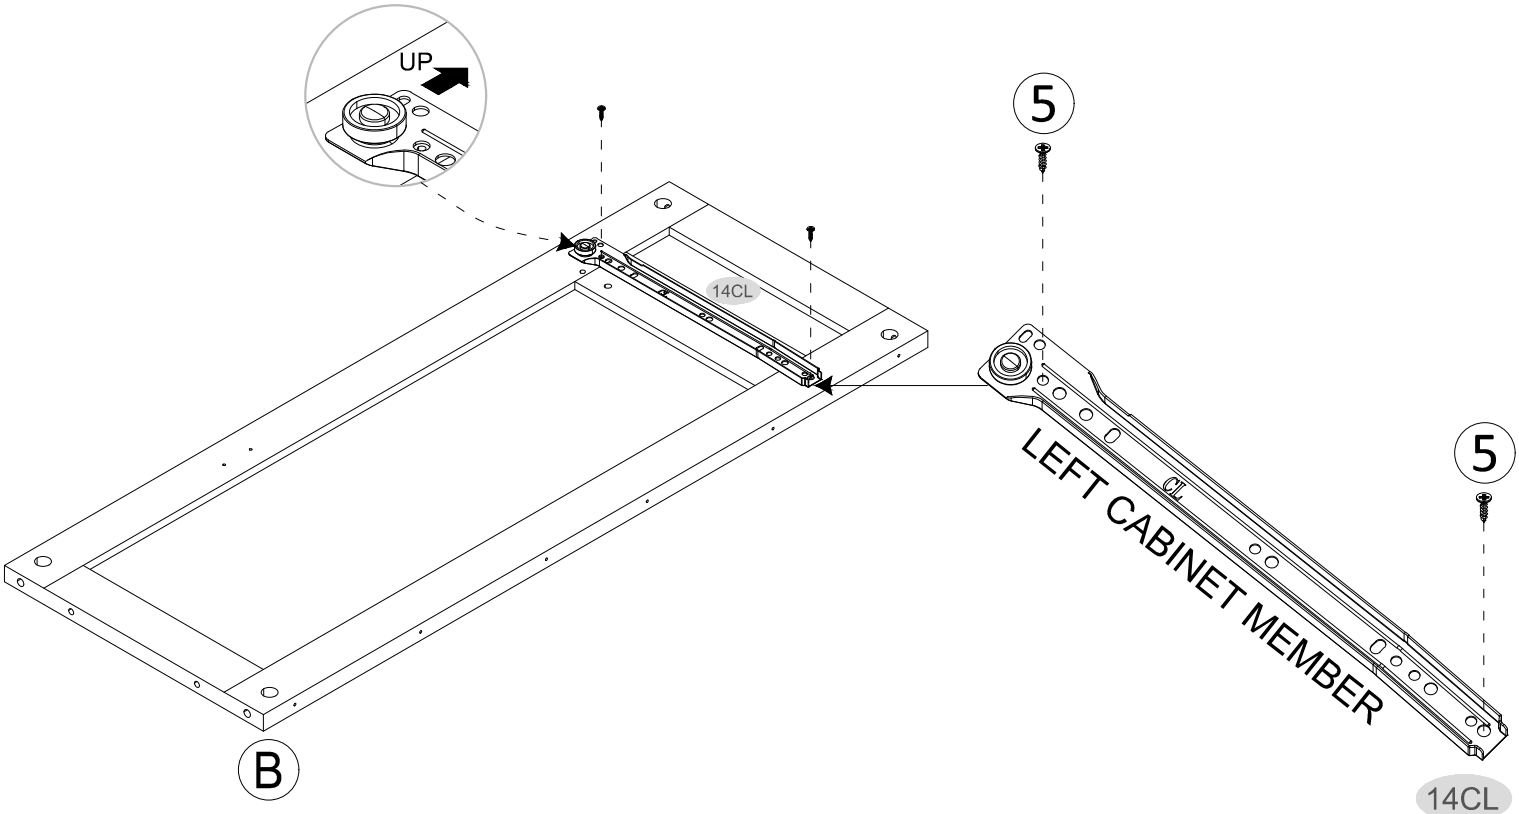

UP
5
14CL
LEFT CABINET MEMBER
5
14CL
B

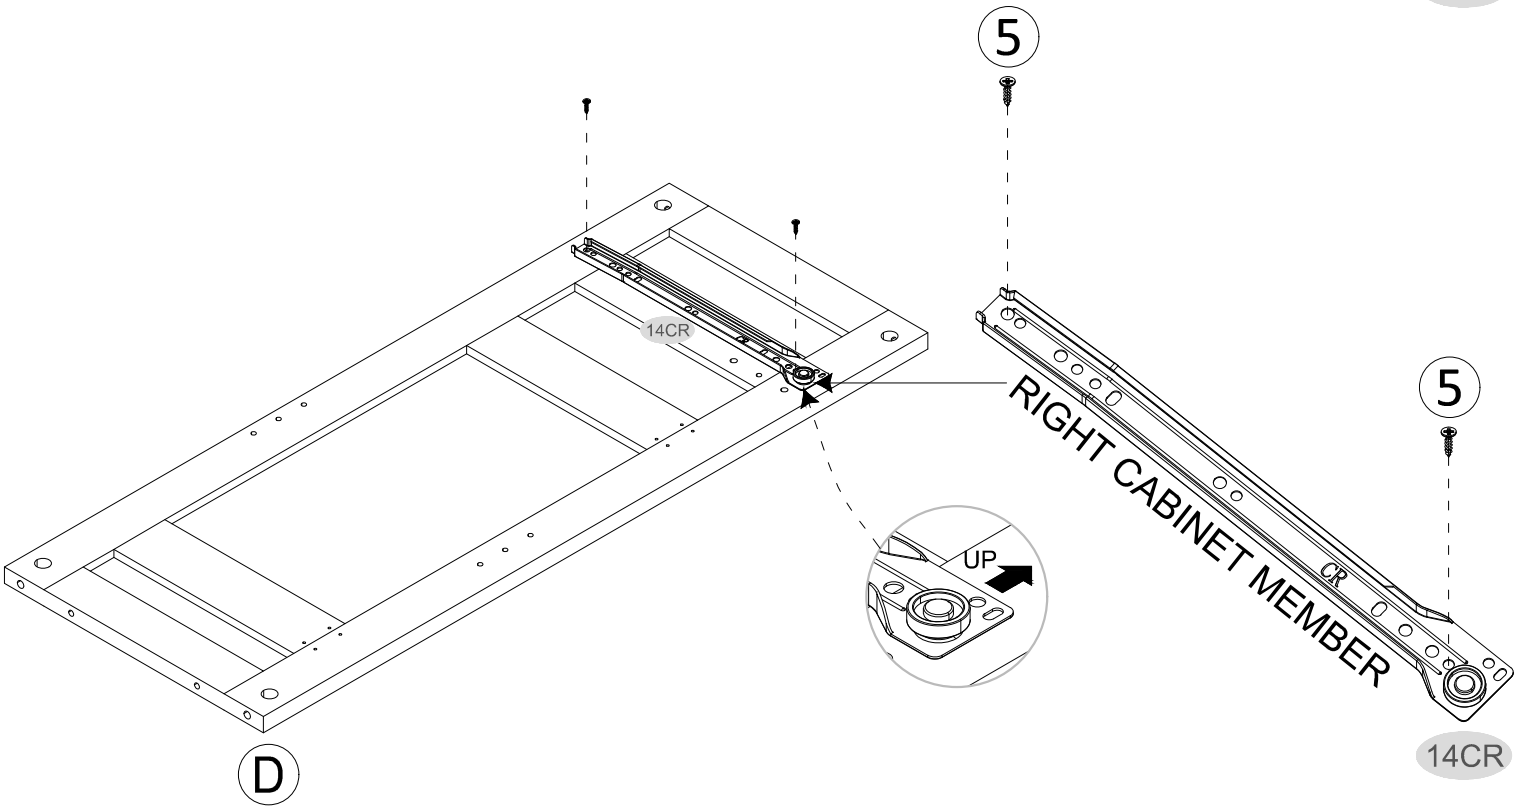

5
14CR
RIGHT CABINET MEMBER
5
UP
14CR
D


STEP9

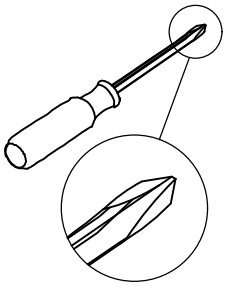

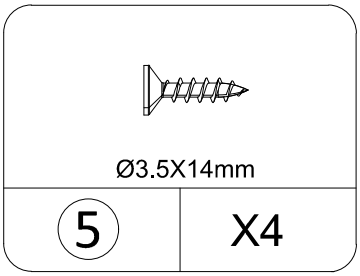


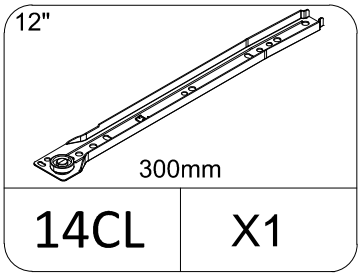

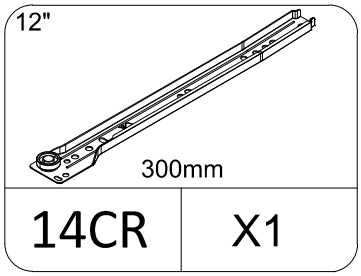


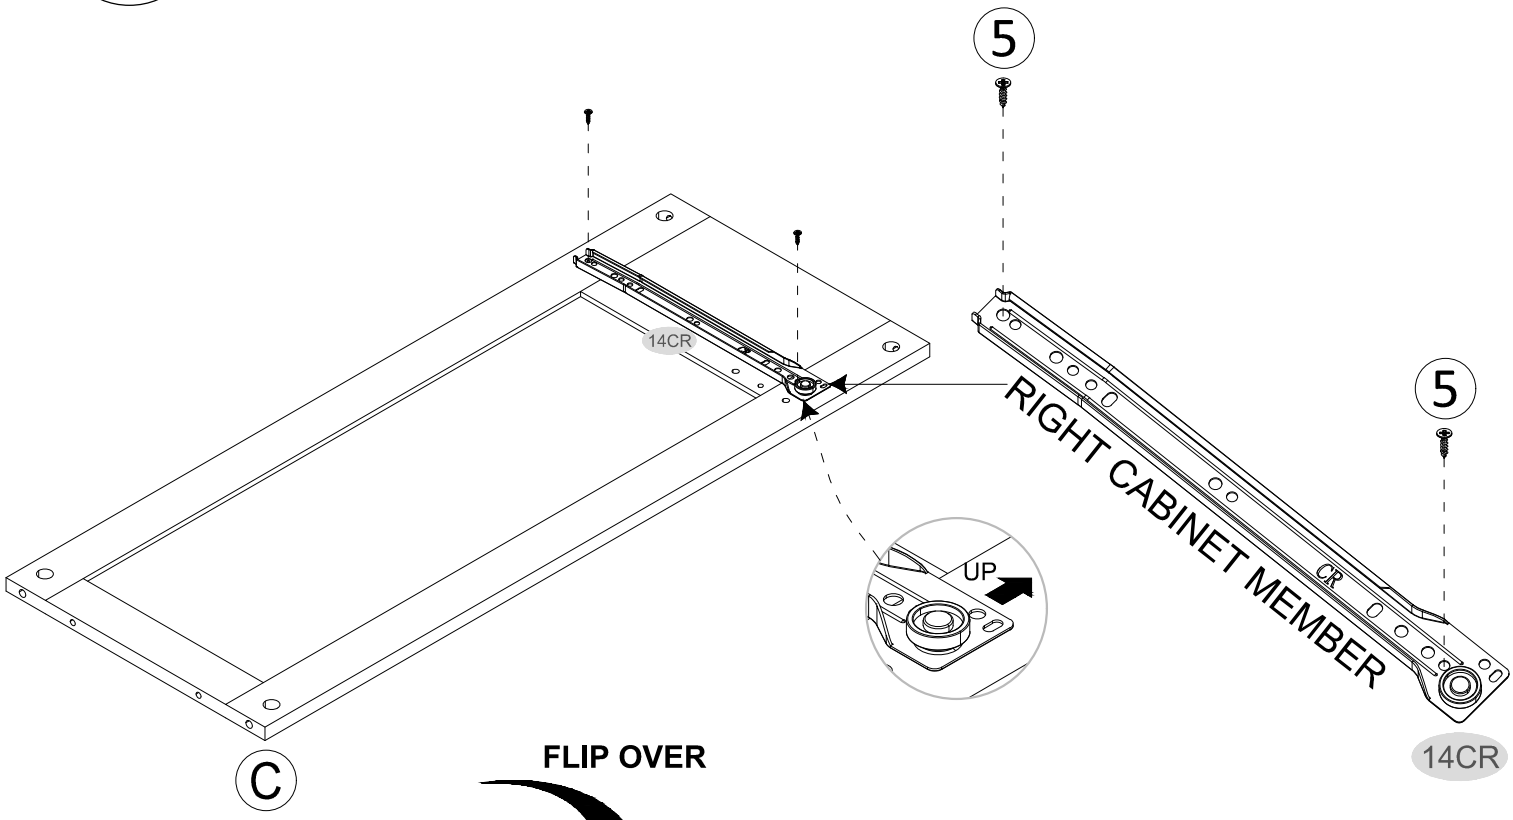



FLIP OVER

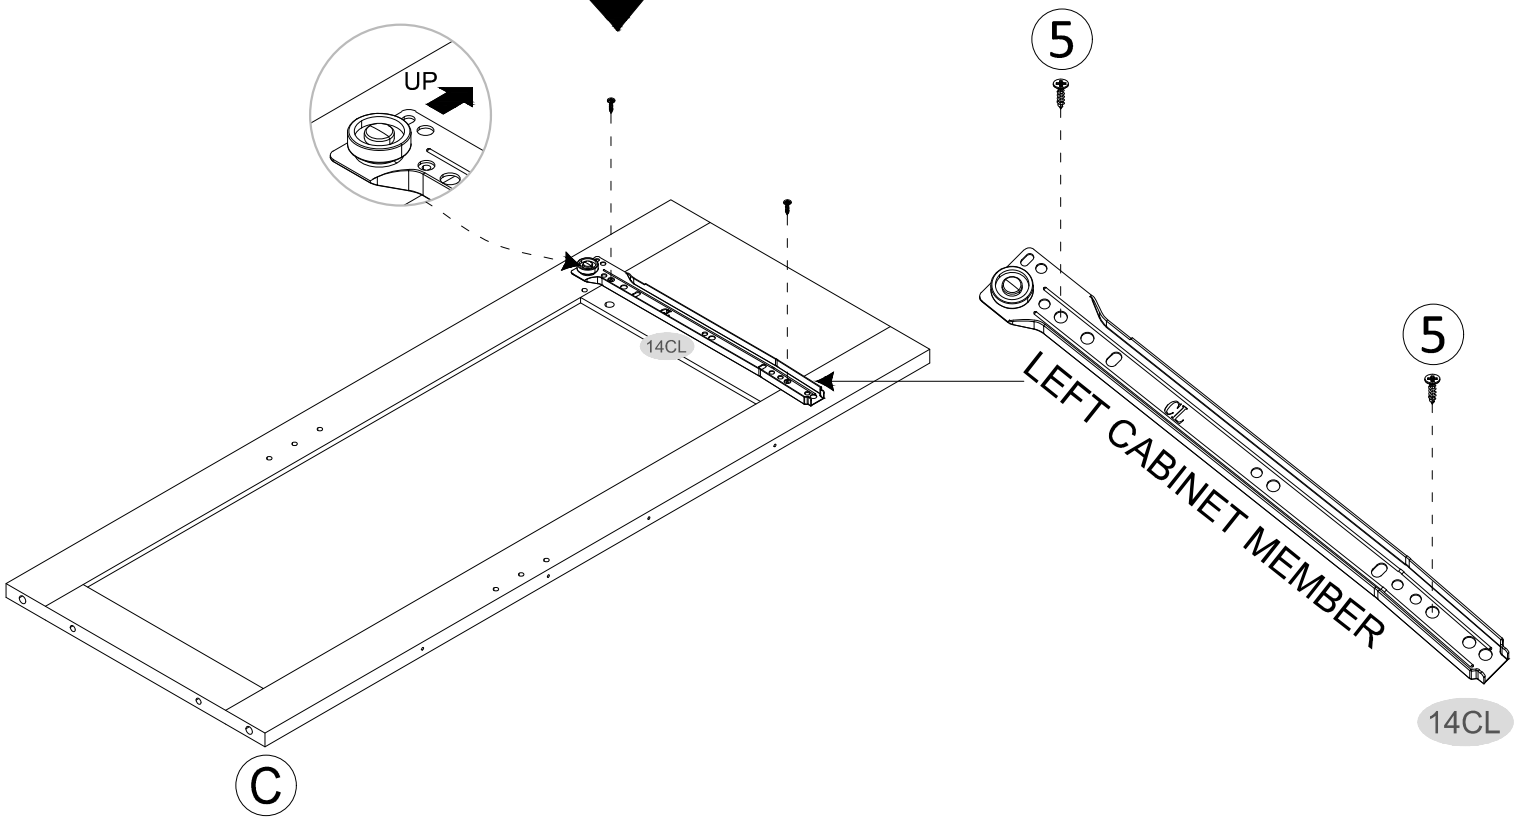



STEP10

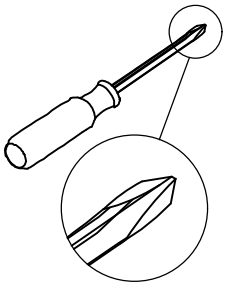

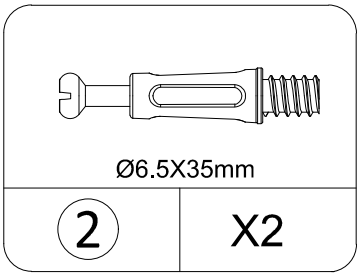


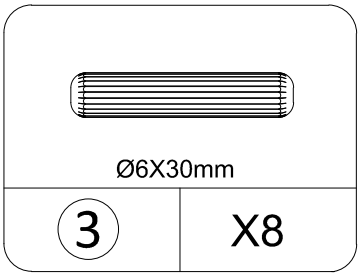


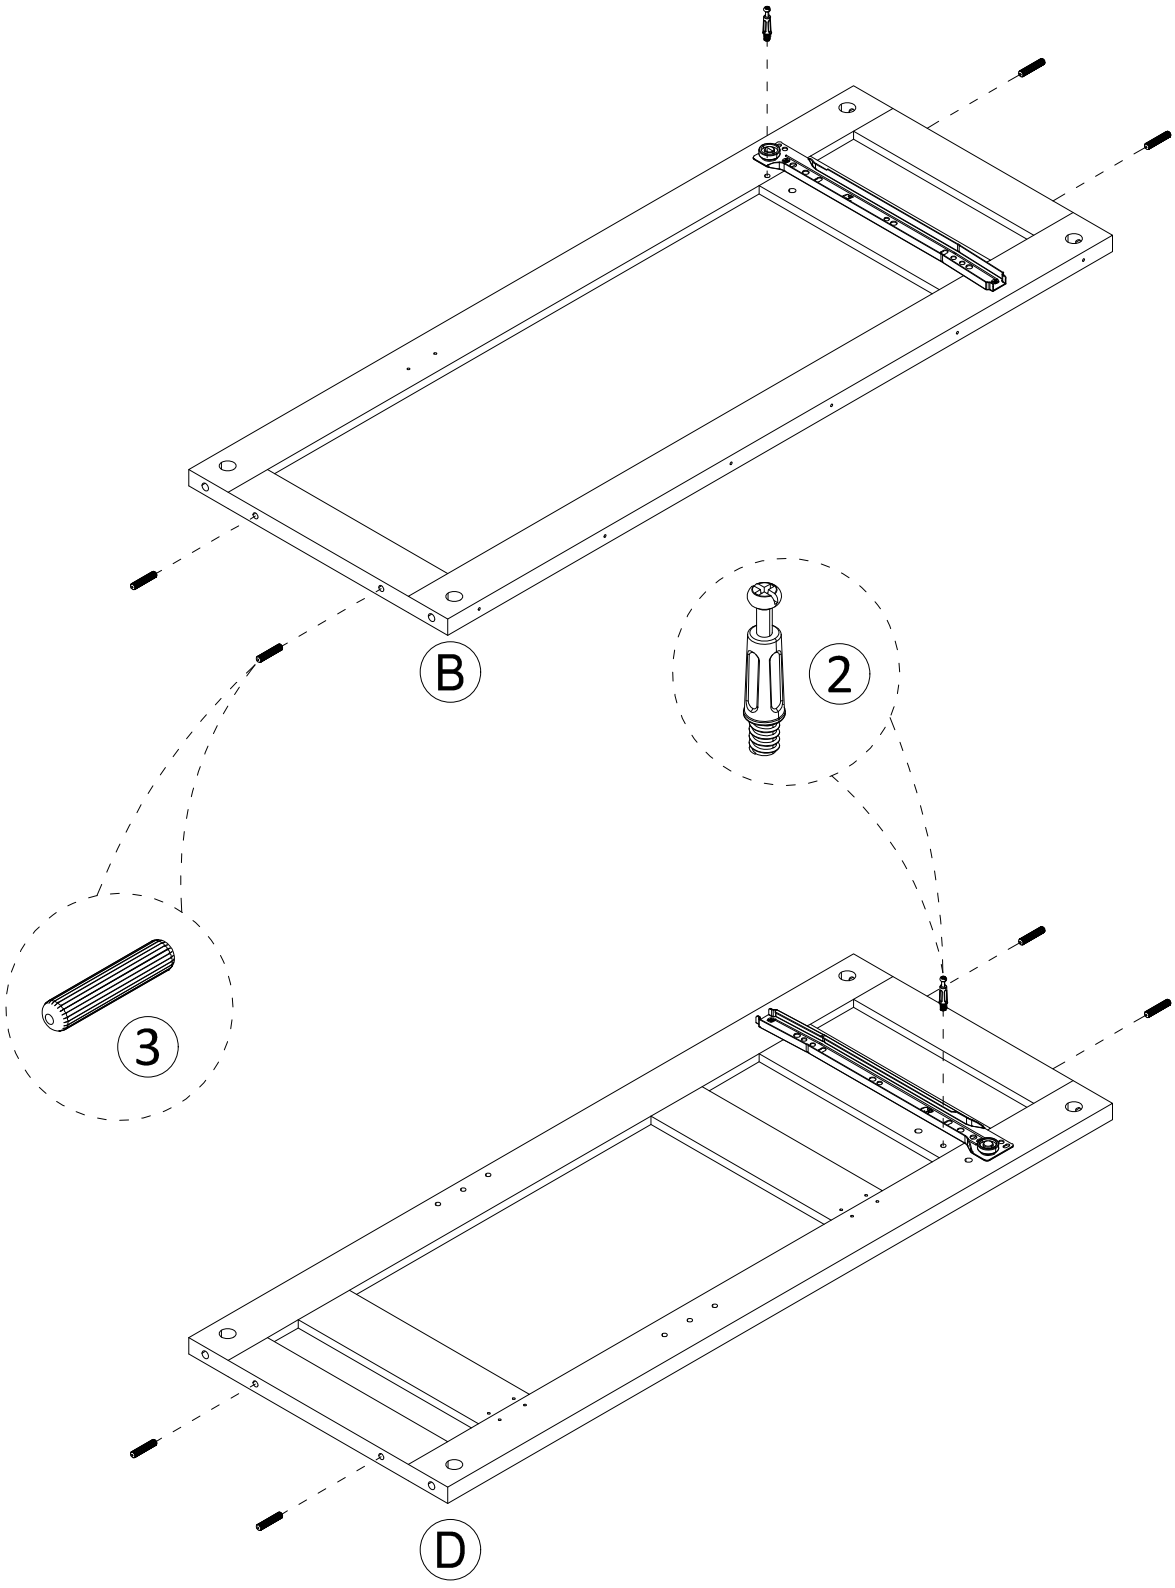


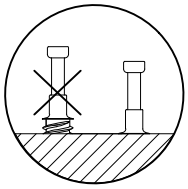



STEP11

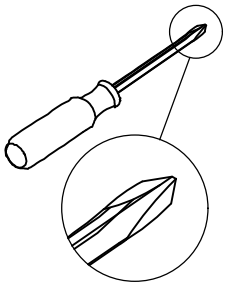

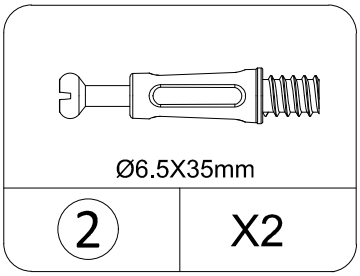


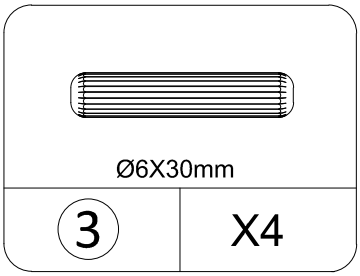


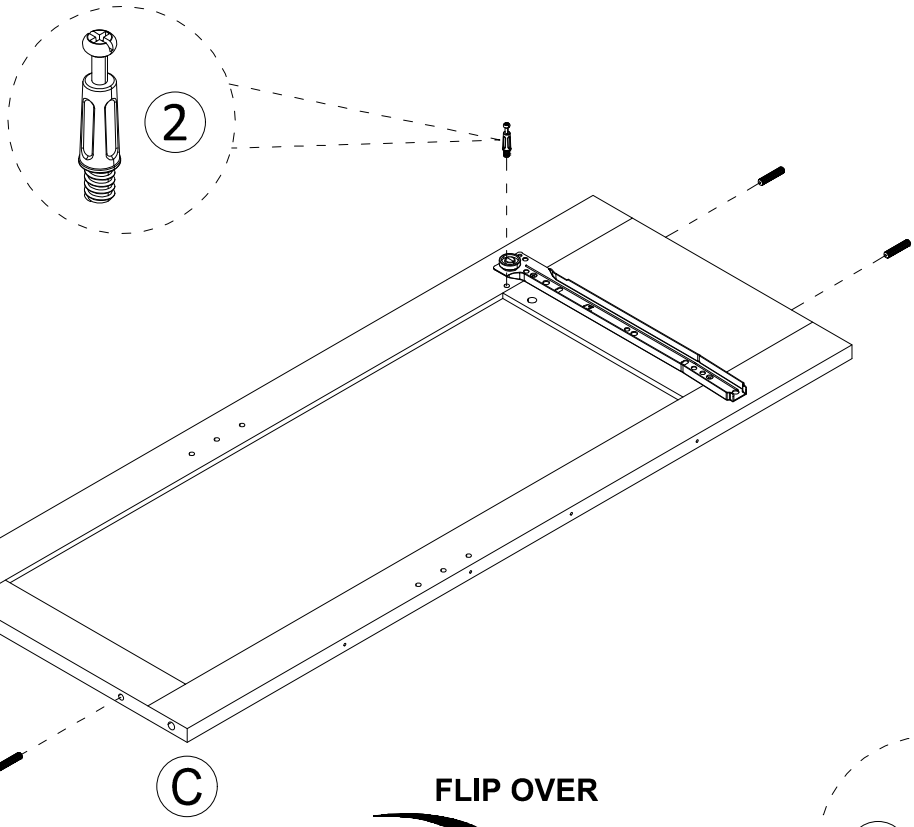


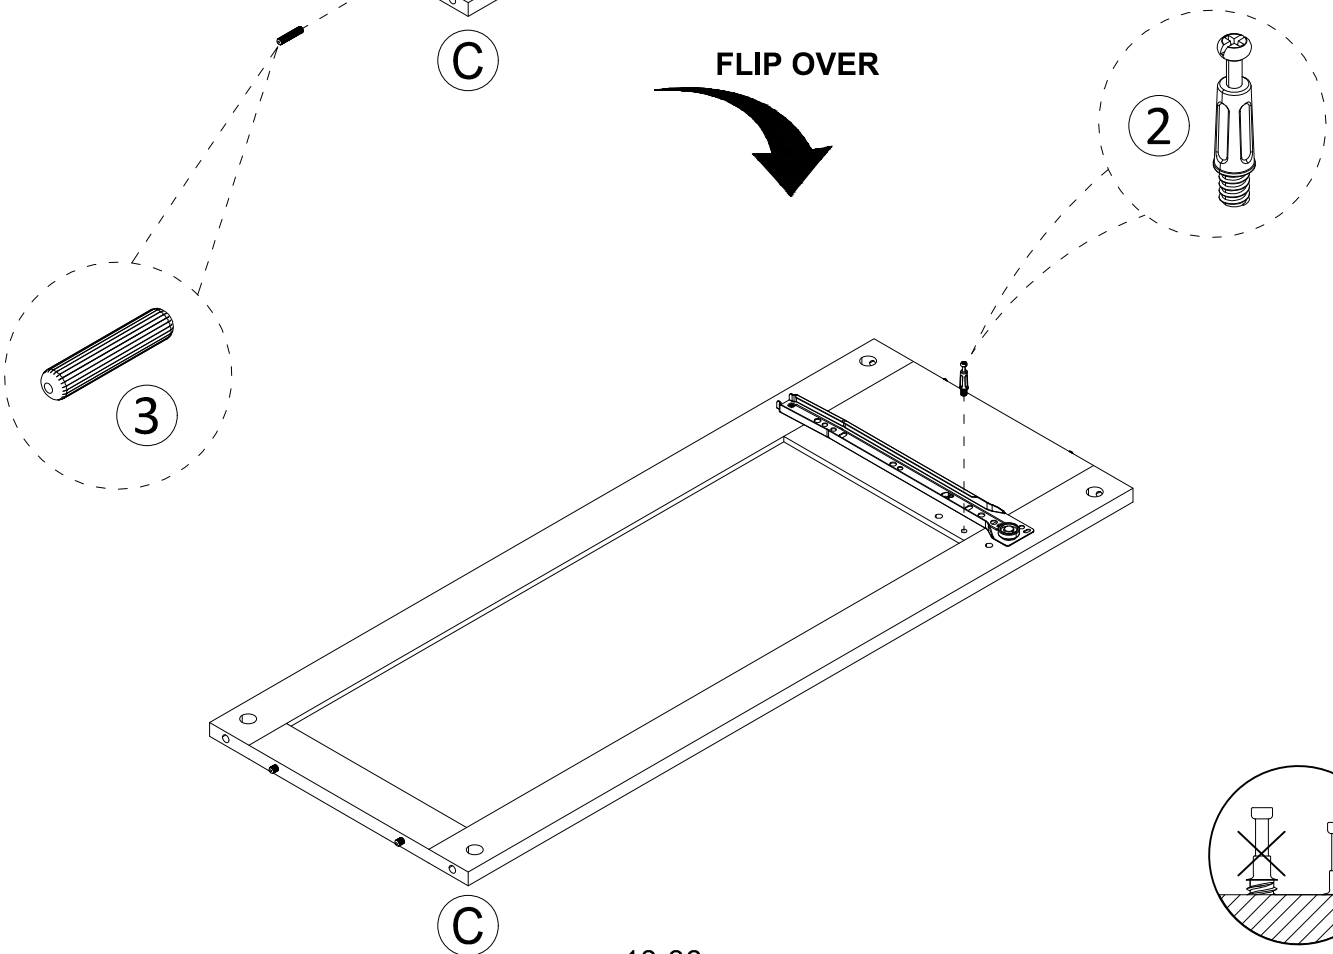



STEP12

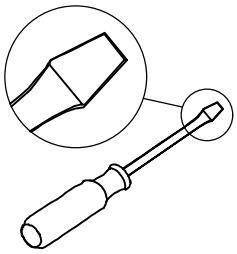


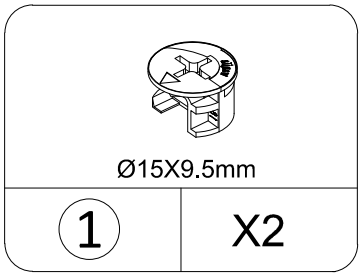


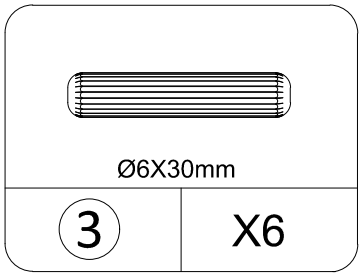

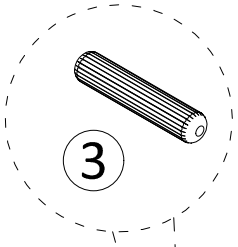

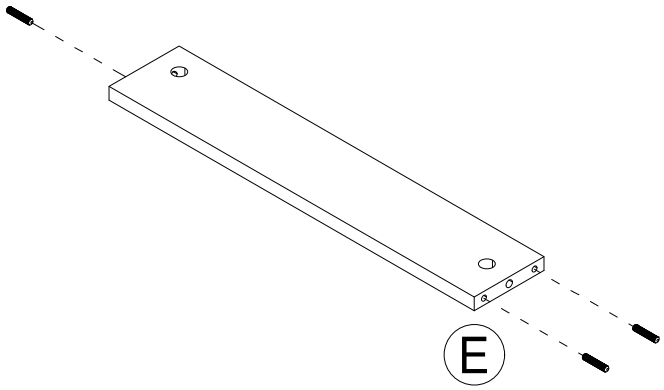


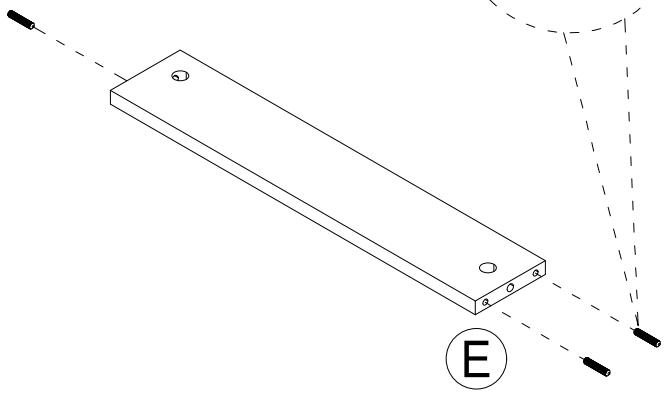


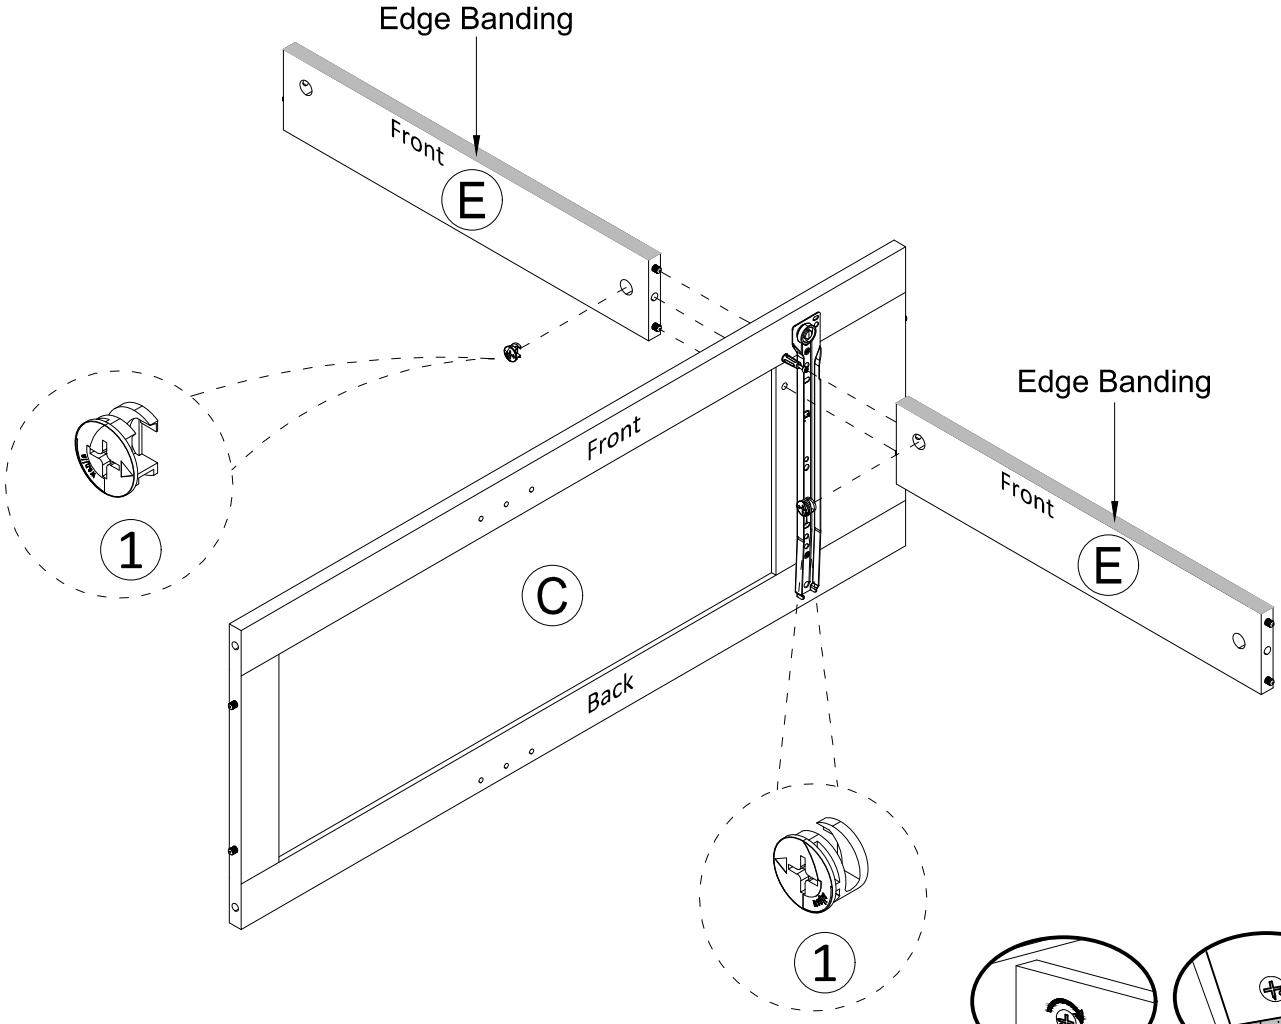



Proper orientation of CAM LOCK

STEP13

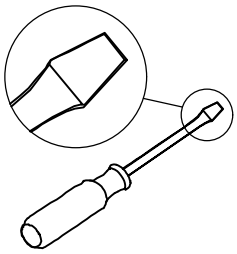

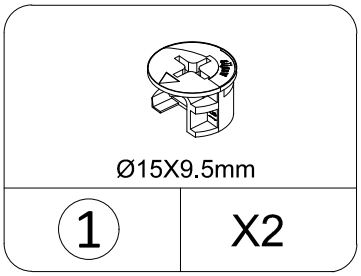


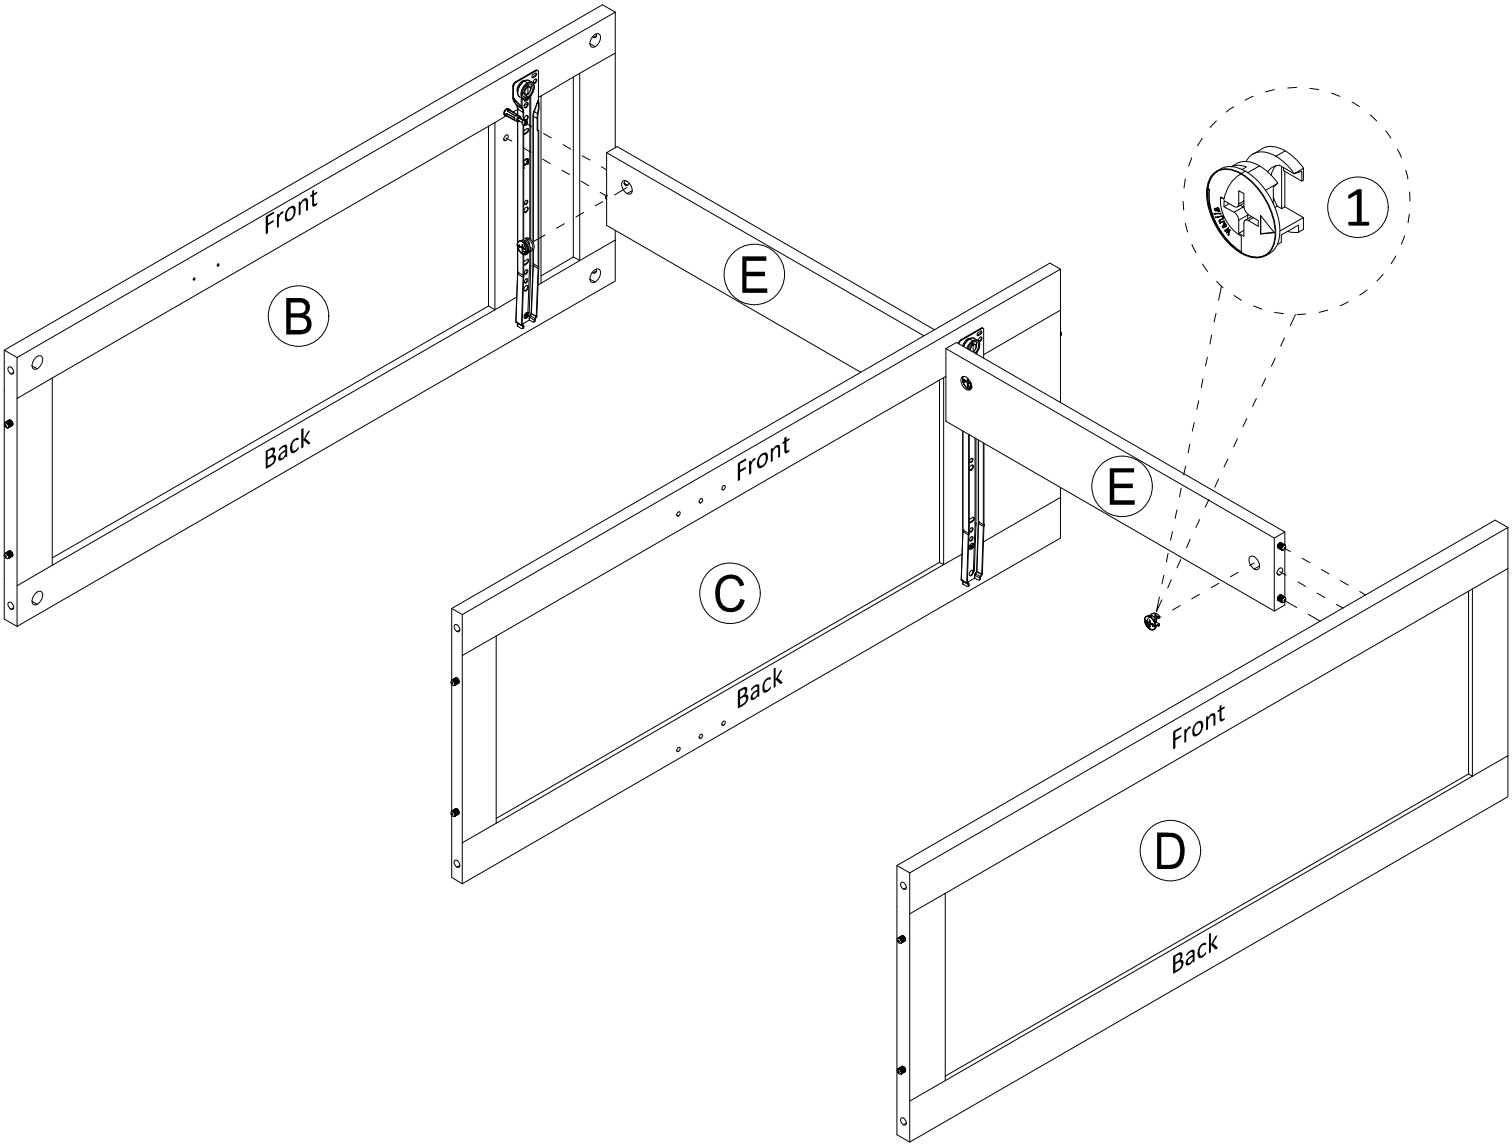


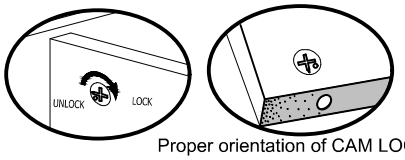



Proper orientation of CAM LOCK

STEP14

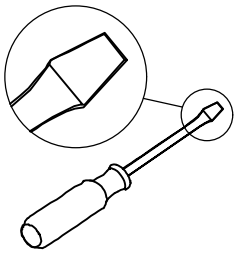

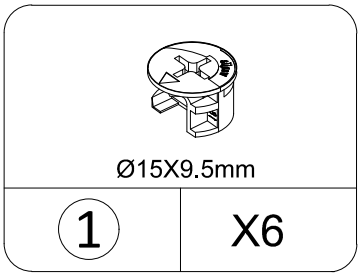


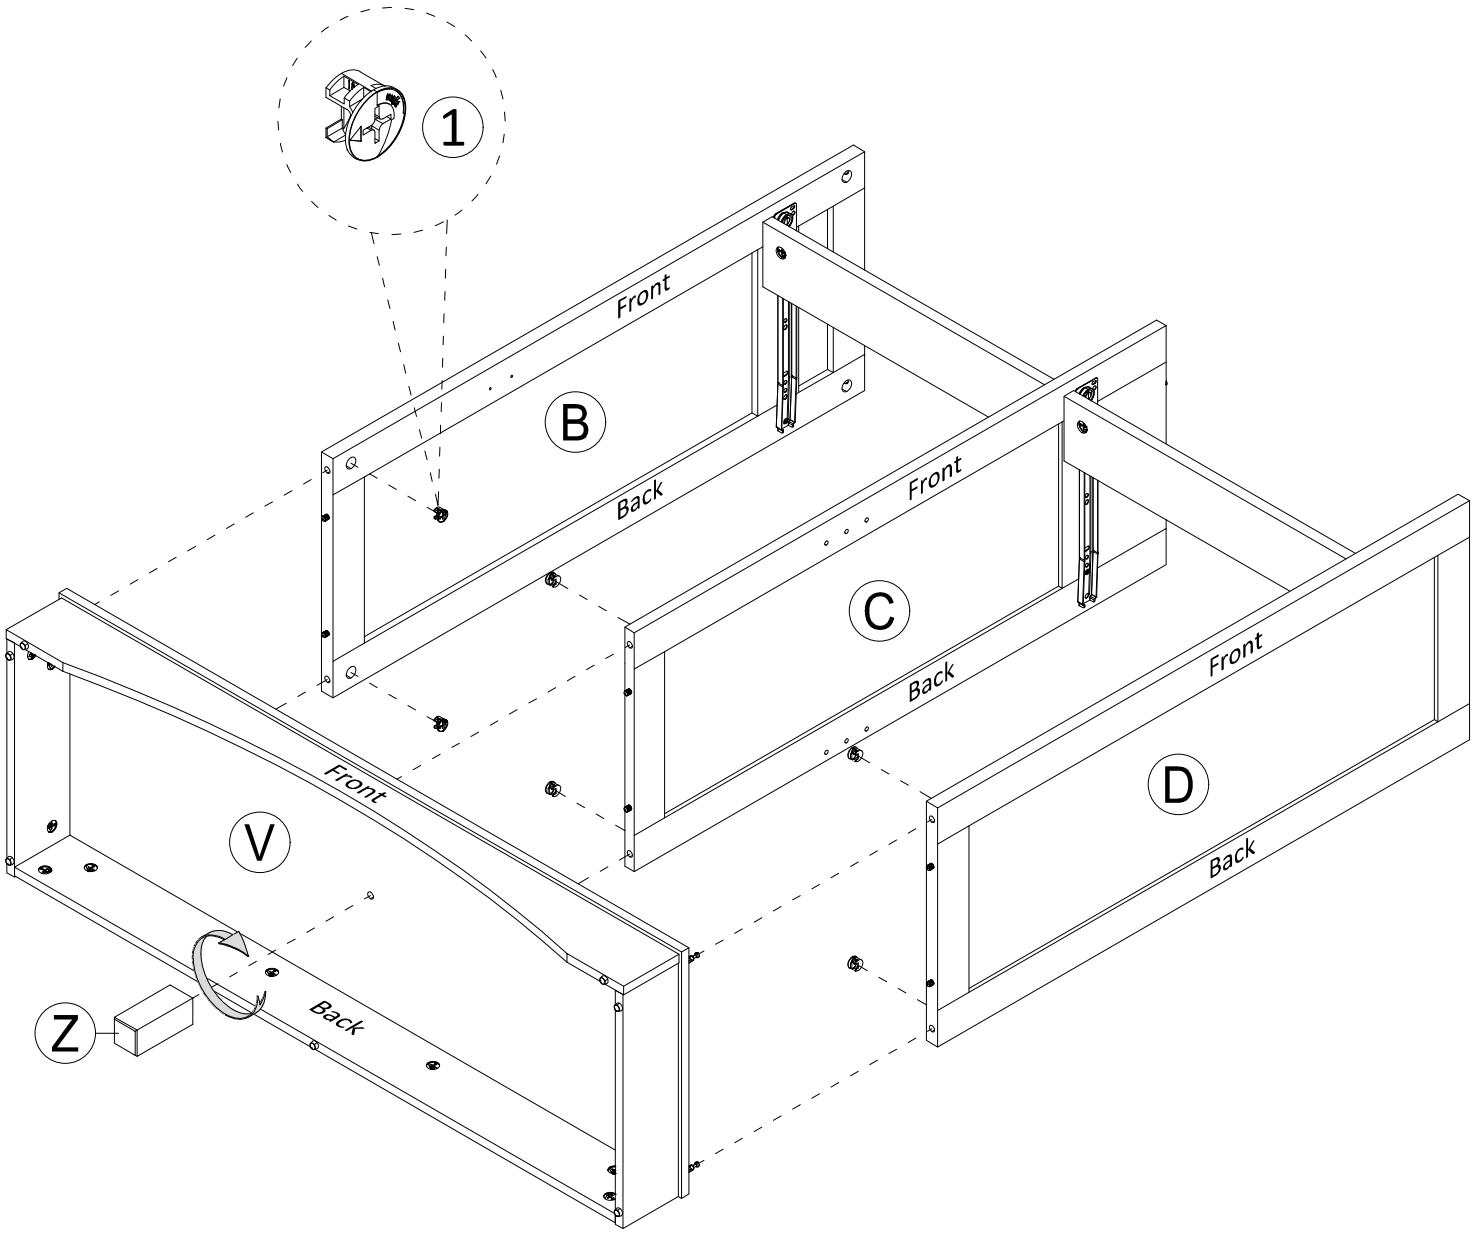


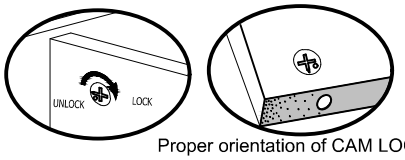



Proper orientation of CAM LOCK

STEP15

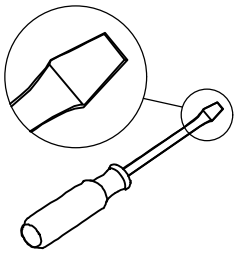

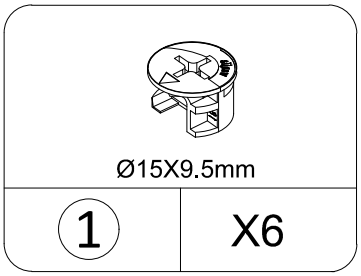


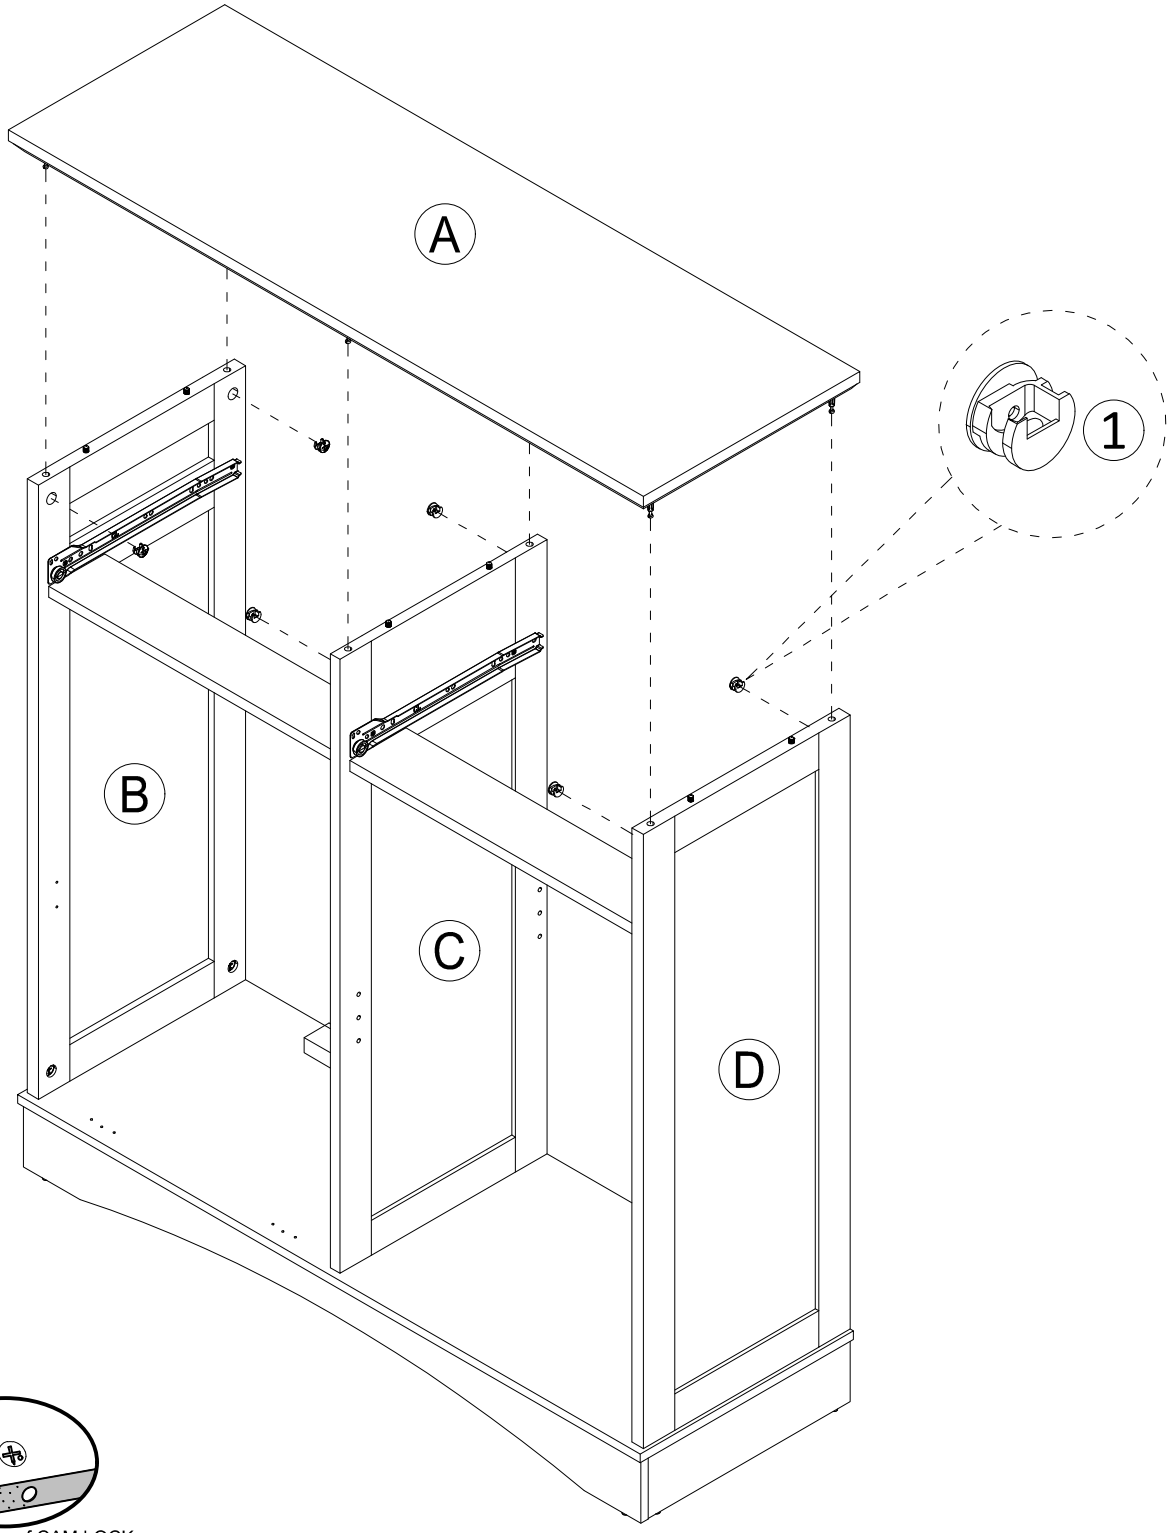


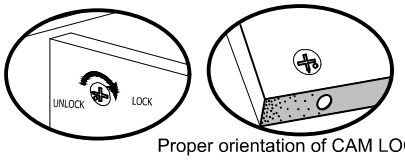



Proper orientation of CAM LOCK

STEP16

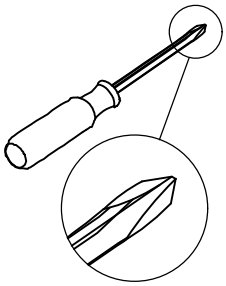


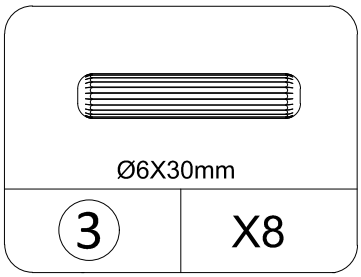


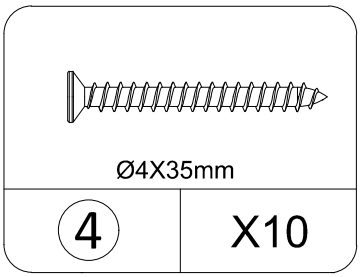

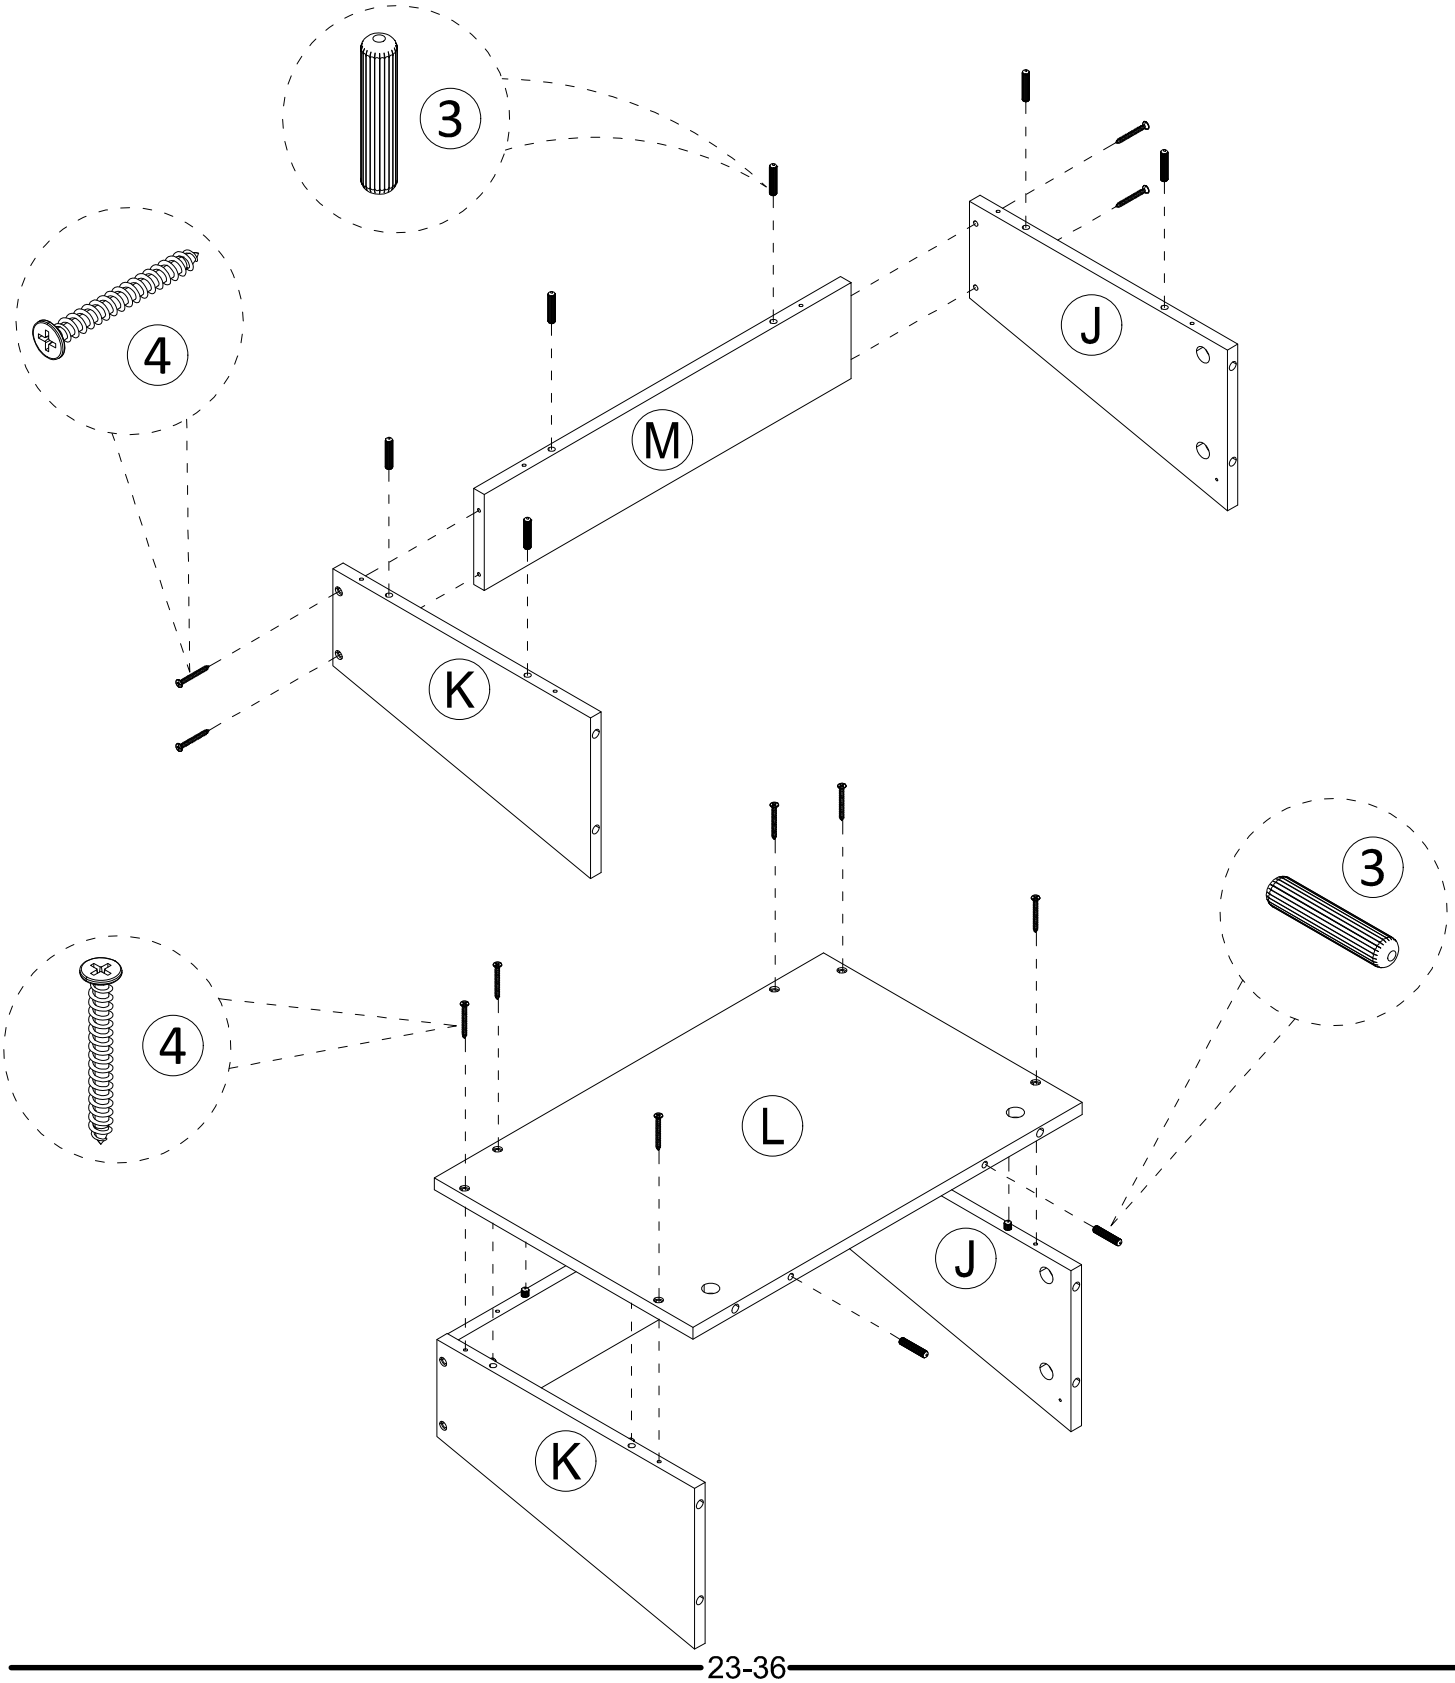


STEP17

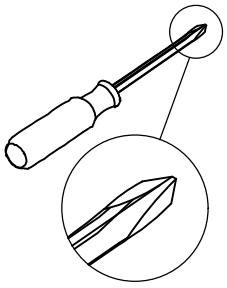



Ø6.5X35mm

2	X6

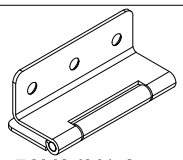


50X24X1.2mm


11	X2




Ø3.5X14mm


5	X6

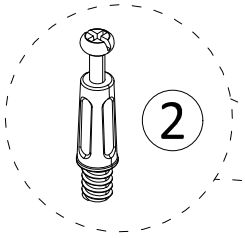

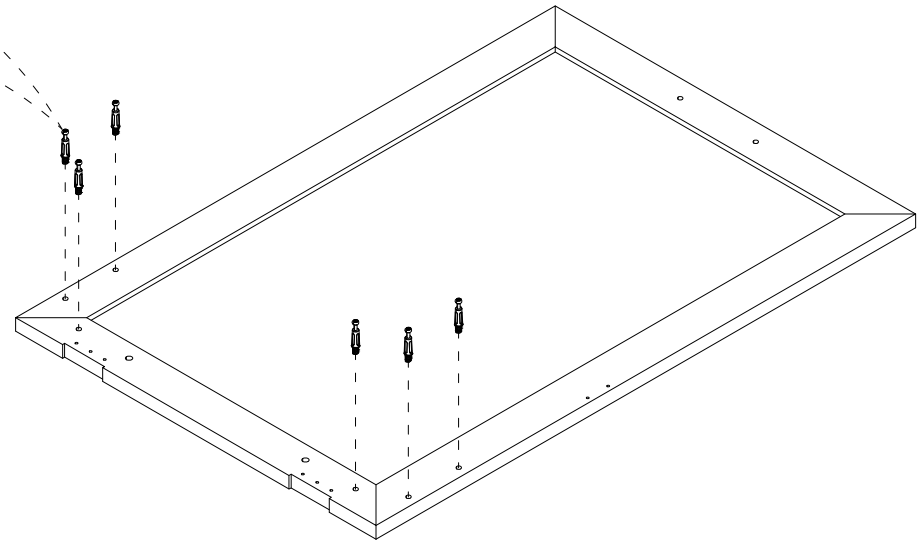


I

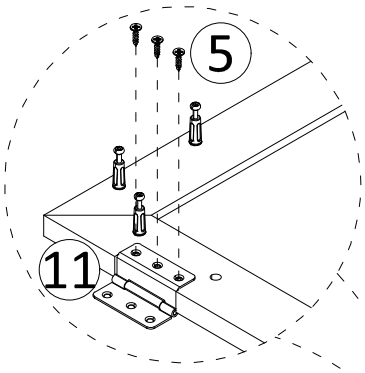


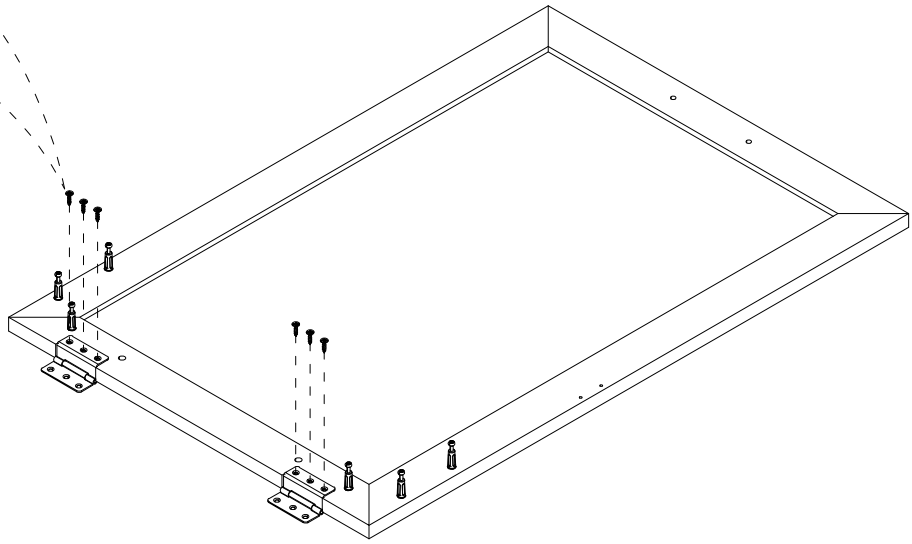



I

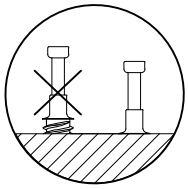


STEP18

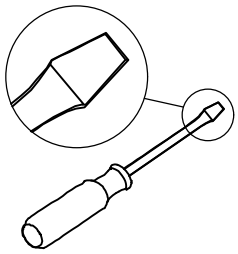

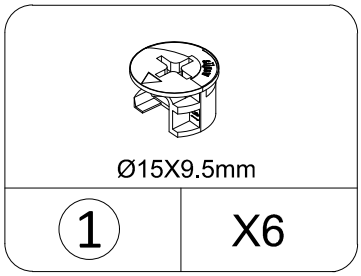

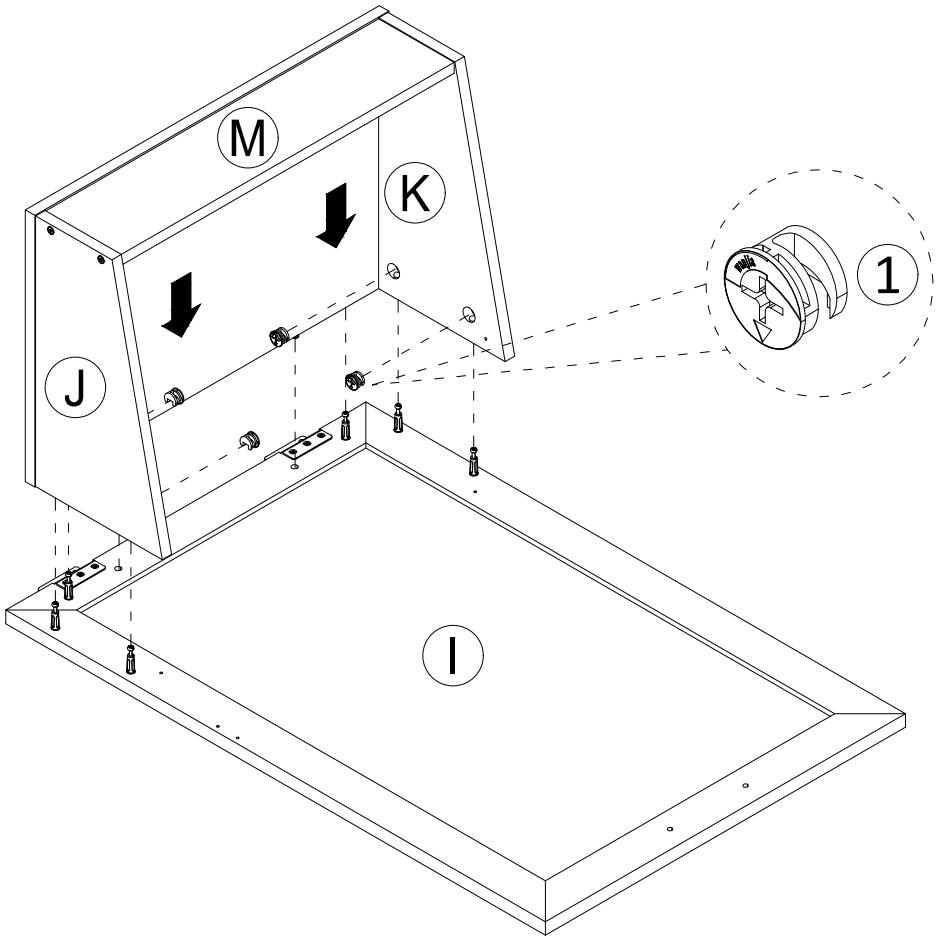



FLIP OVER

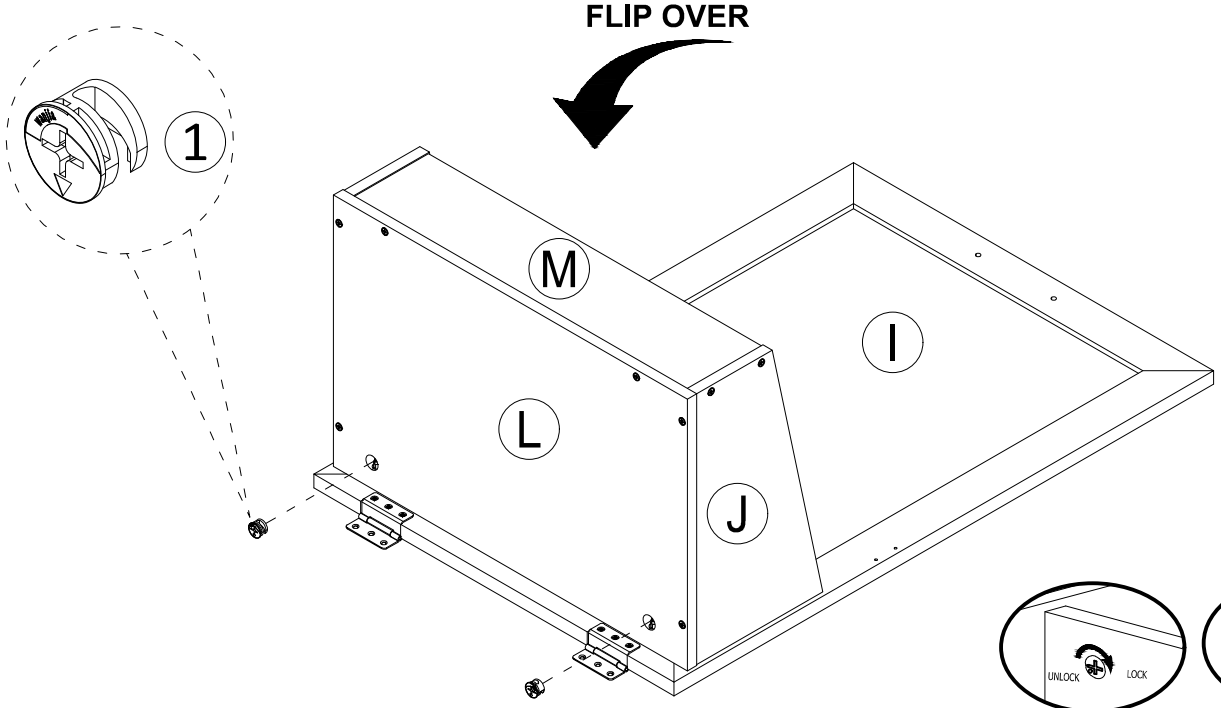


Proper orientation of CAM LOCK

STEP19

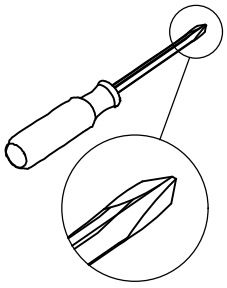


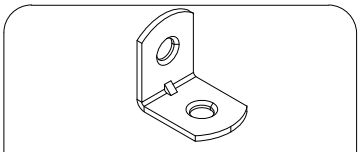


20X20X16mm	
13	X2

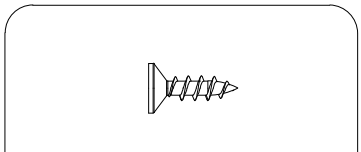



Ø3.5X12mm	
15	X4

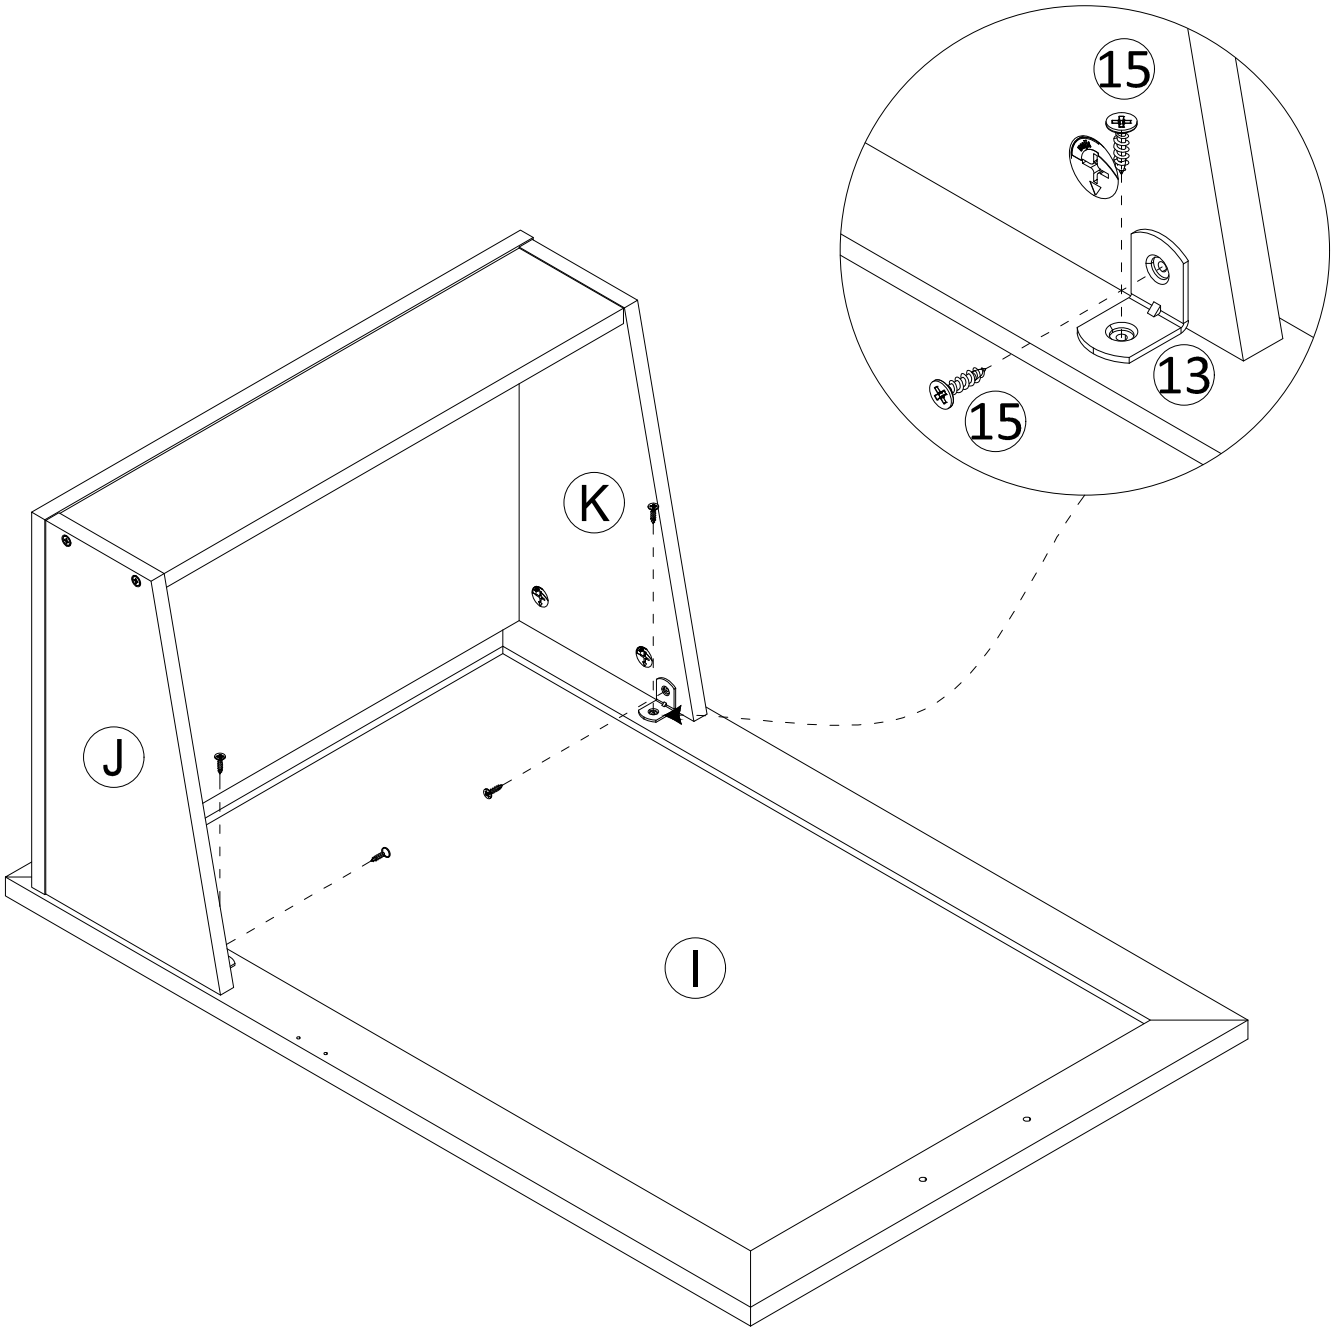


STEP20

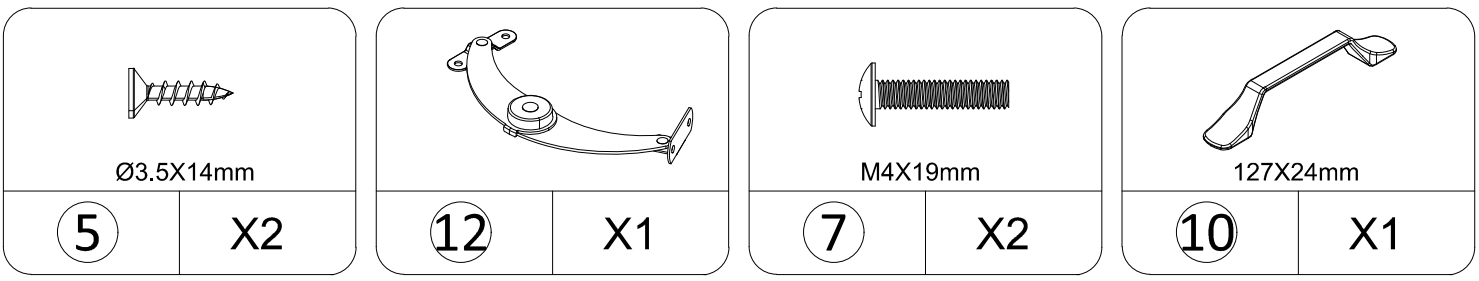


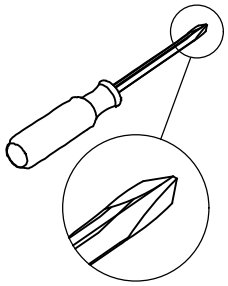

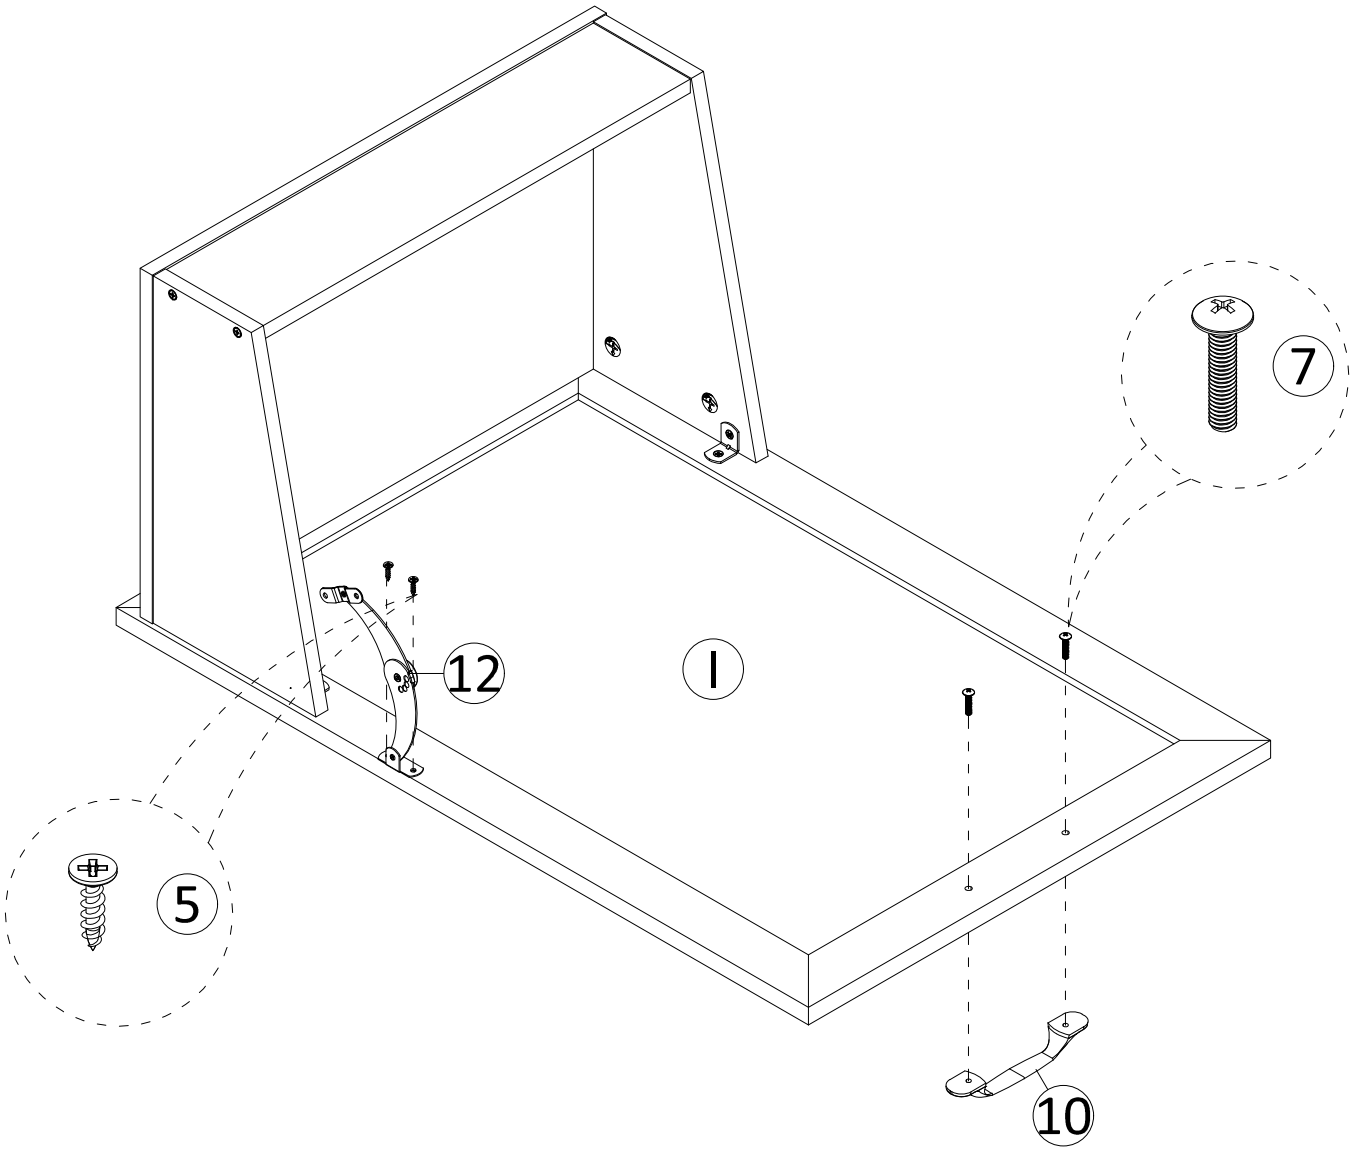


STEP21

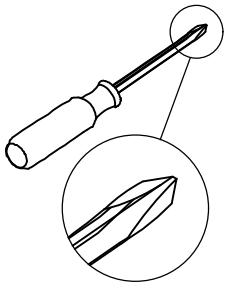


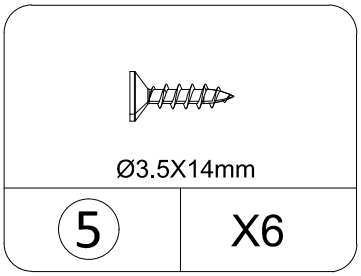


Find an object to pad under the door panel. Keeping the door panel level is more suitable for your installation.

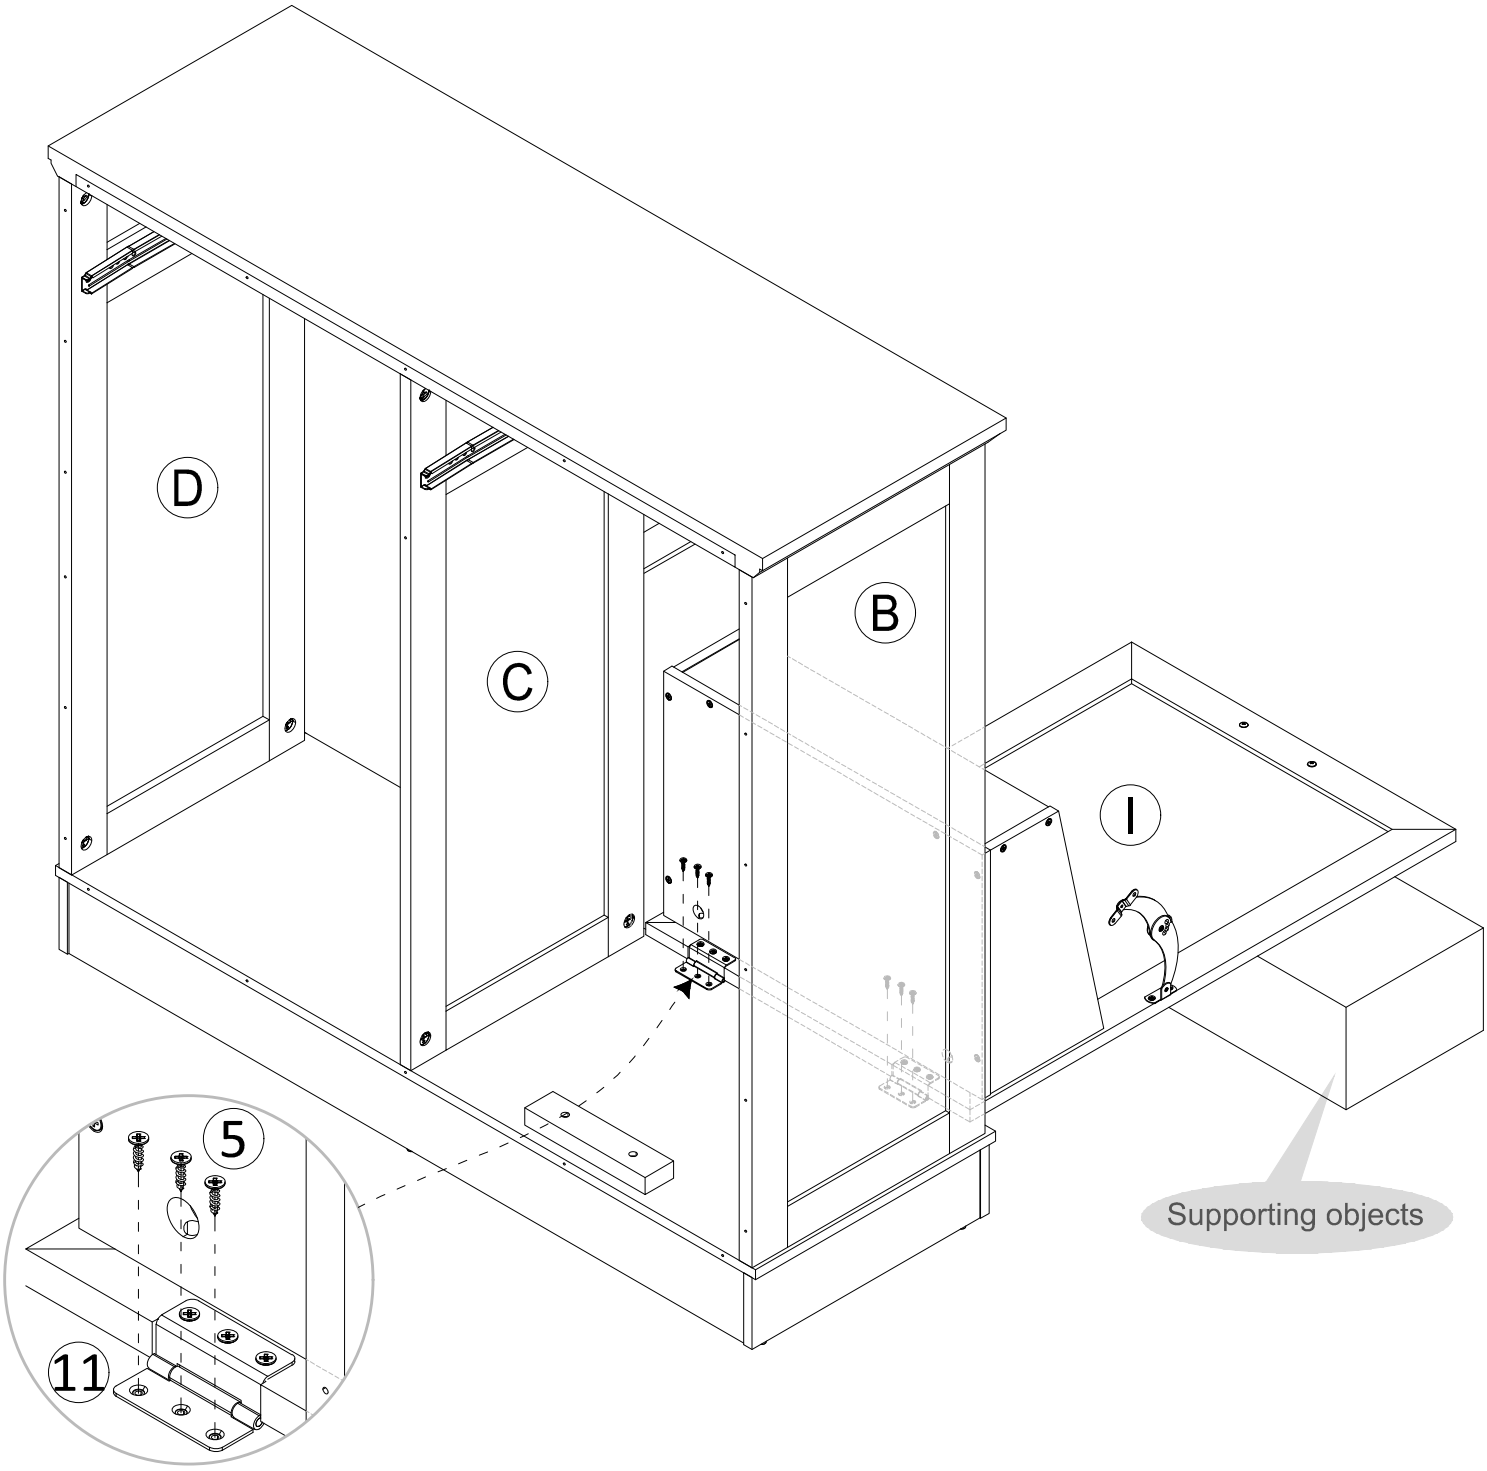


STEP22

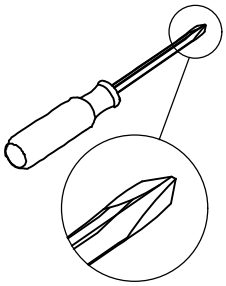

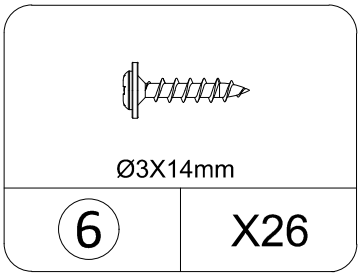


THIS STEP REQUIRES 2 PEOPLE


Note: The slot holes on the backplane (W) are 400mm away from the edge and facing the left side of the back of the cabinet, as shown in the figure.

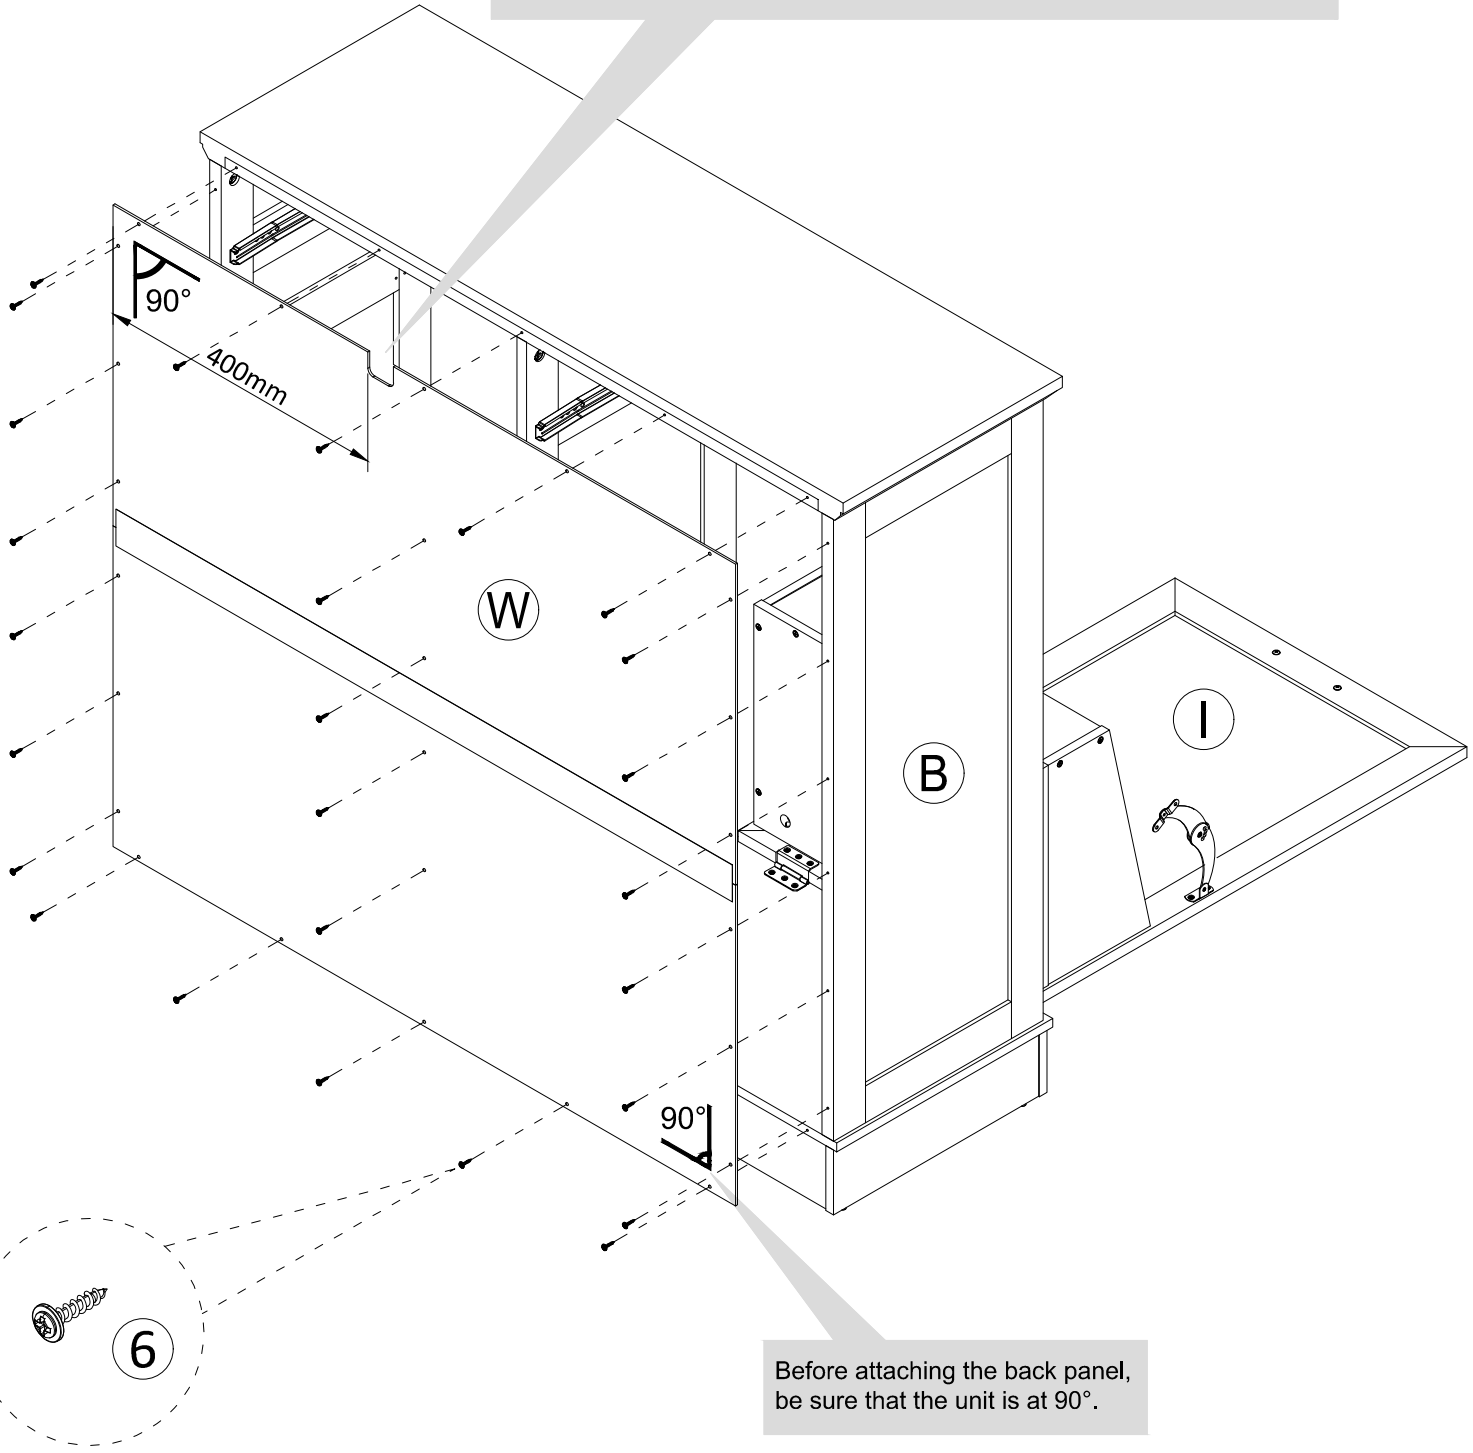


Before attaching the back panel, be sure that the unit is at 90°.

STEP23

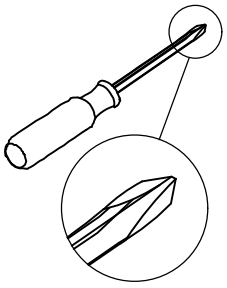

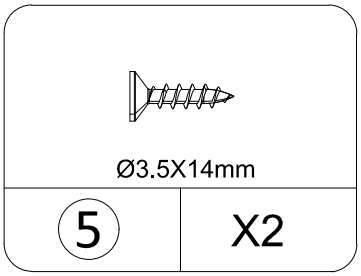



THIS STEP REQUIRES 2 PEOPLE

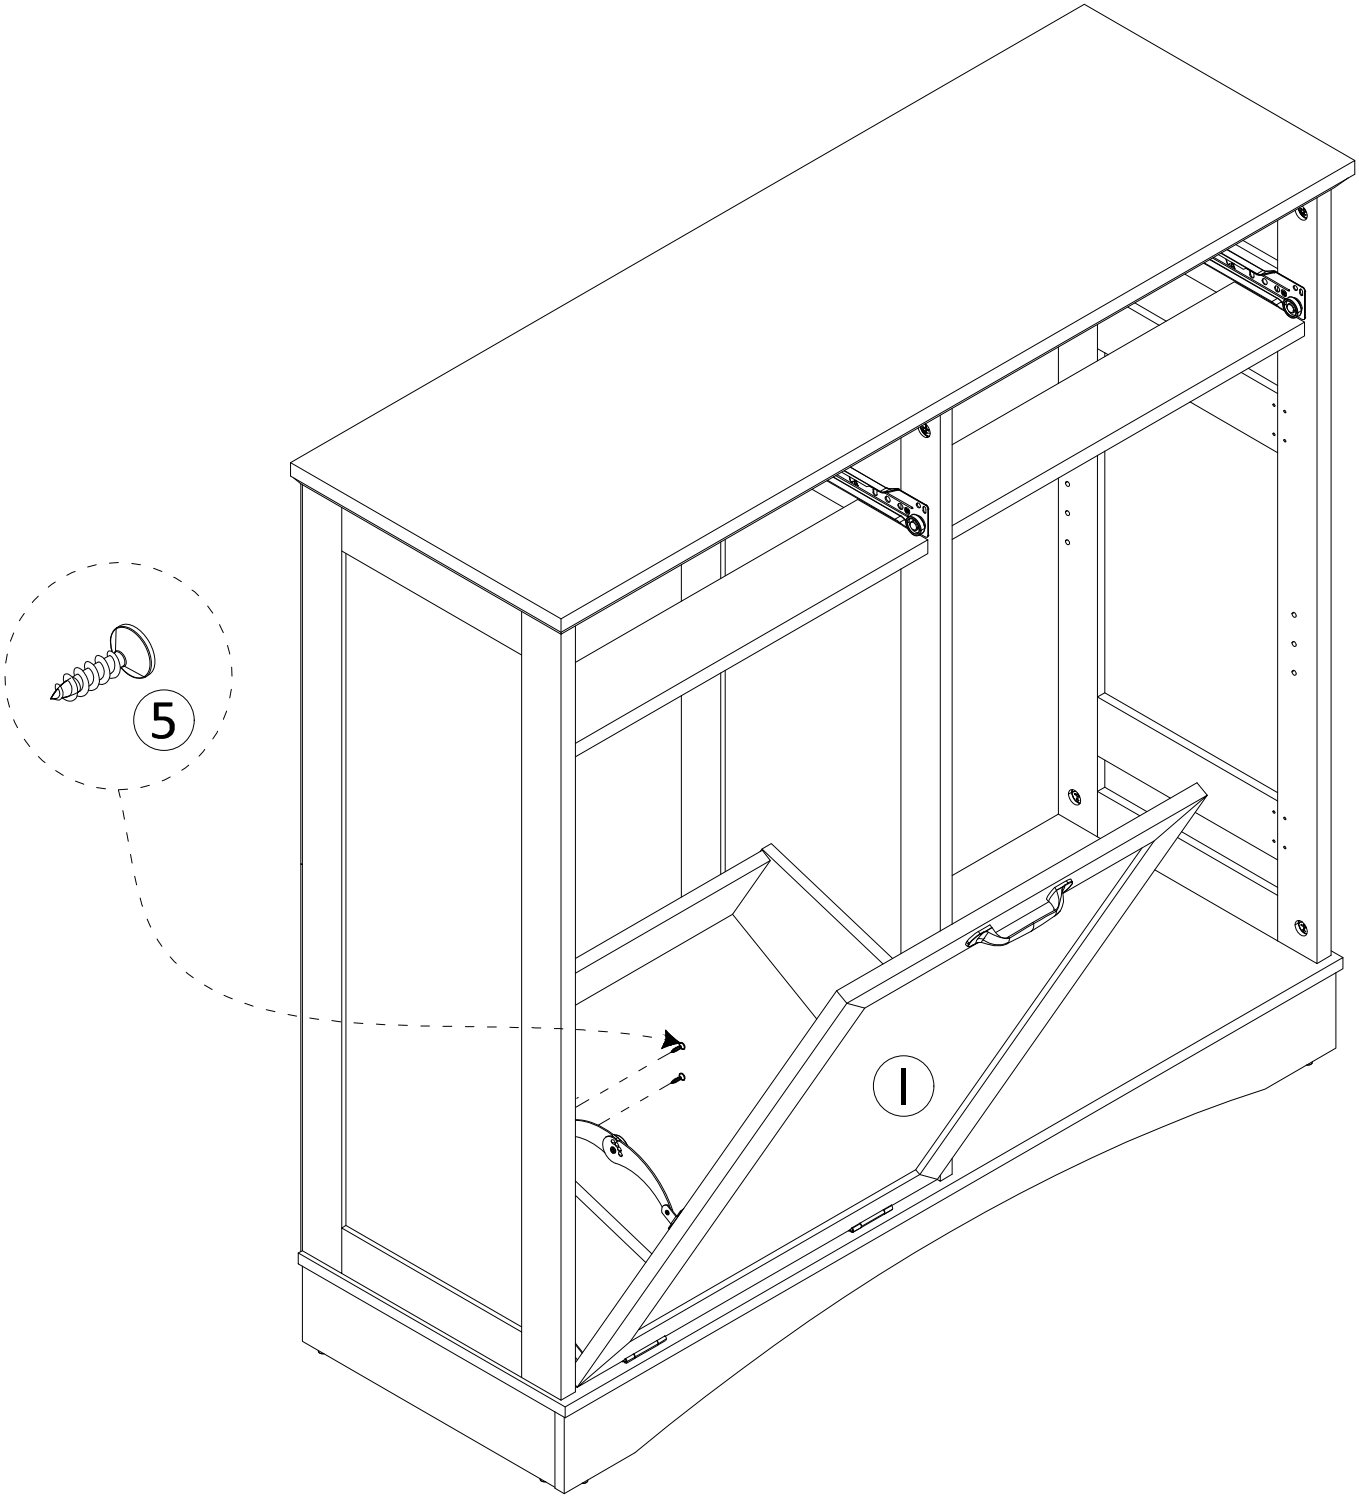


STEP24


Ø3.5X14mm	M4X19mm	127X24mm	Ø25mm
5 X4	7 X2	10 X1	16 X2

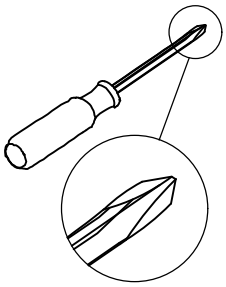


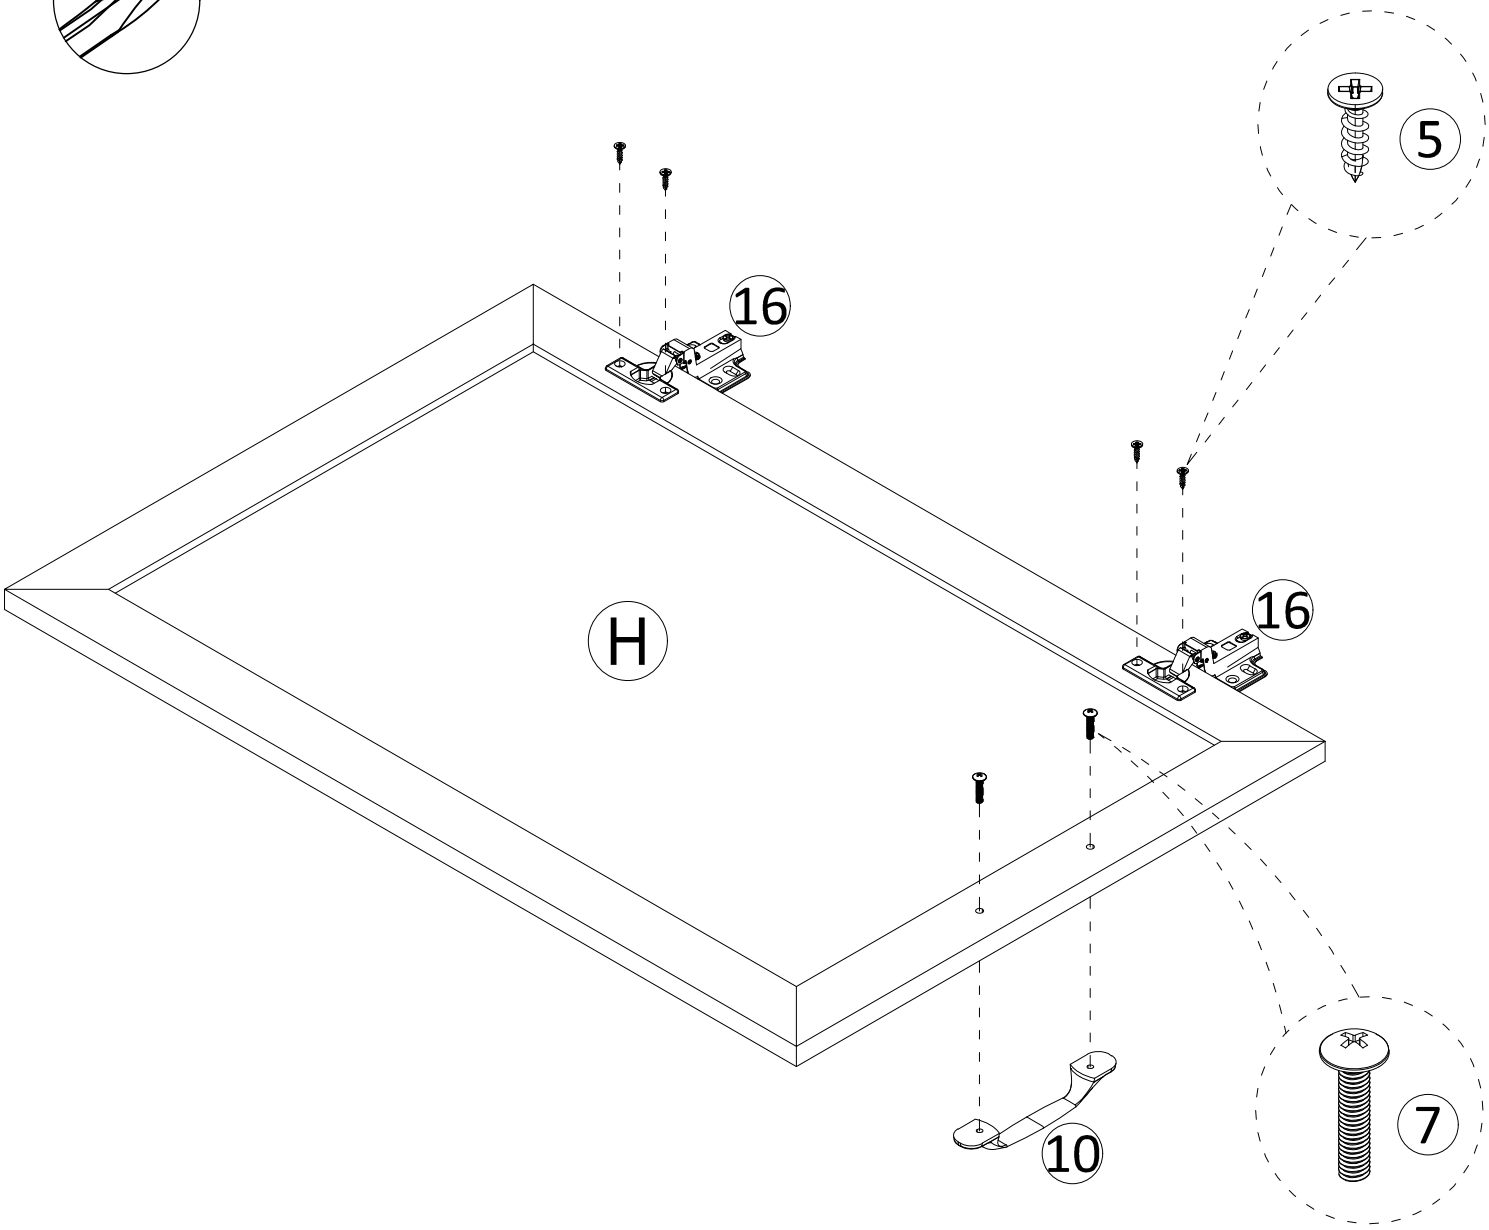


STEP25

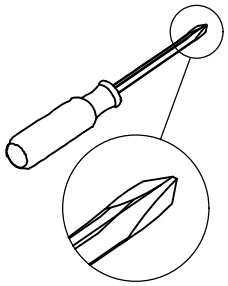


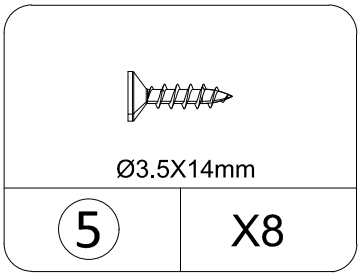

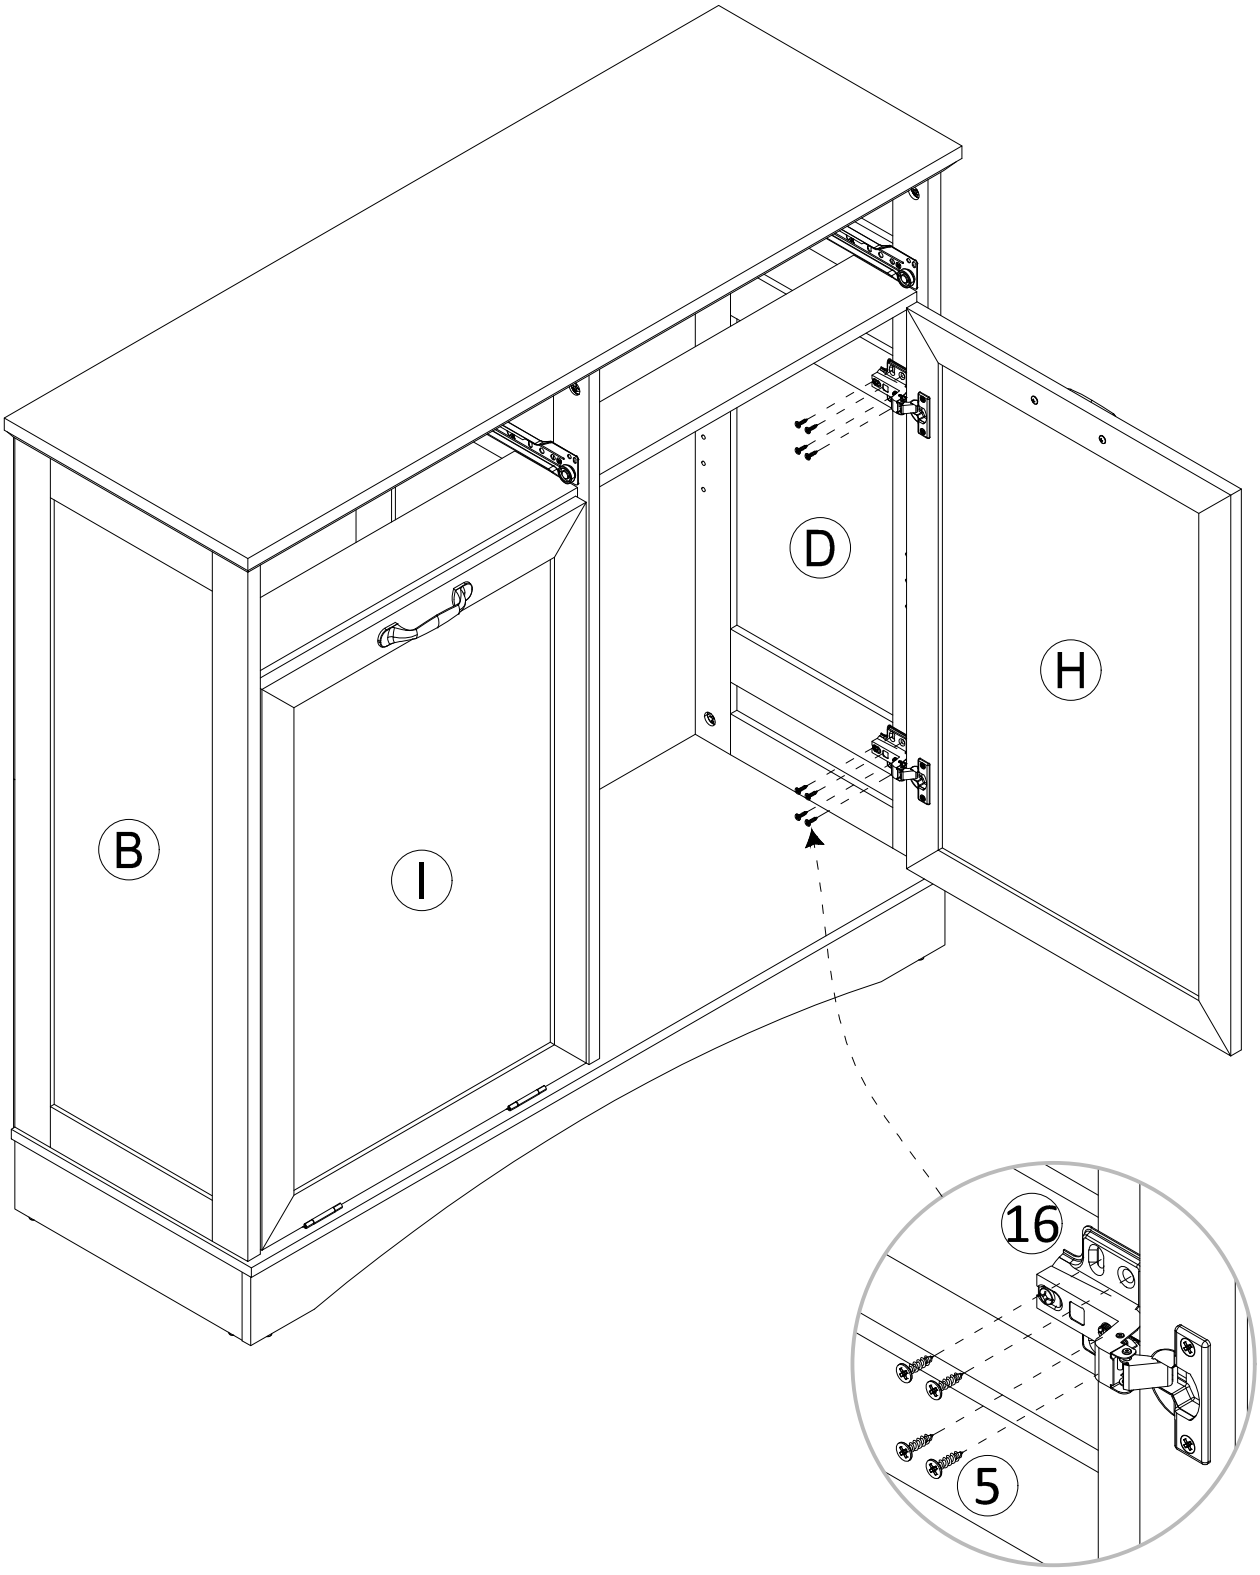


STEP26

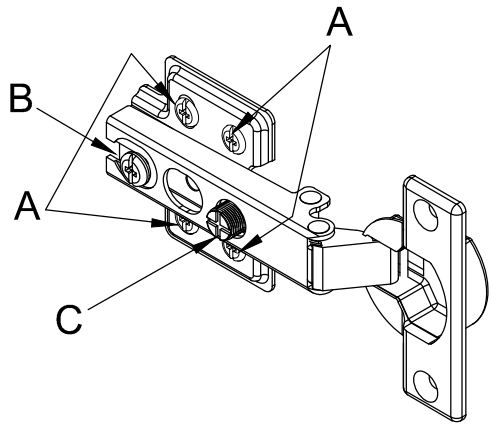


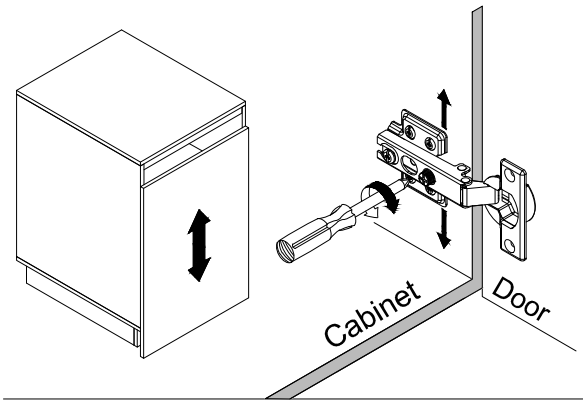

To adjust the vertical height.
Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

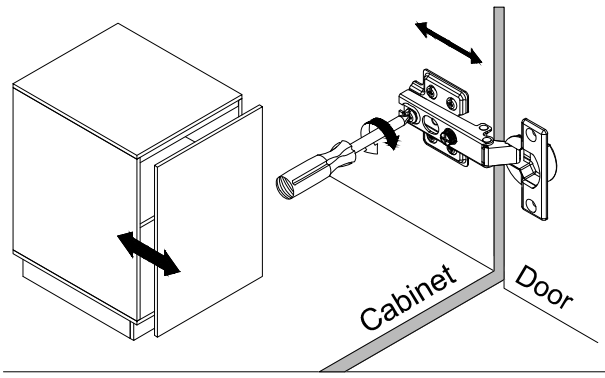



To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

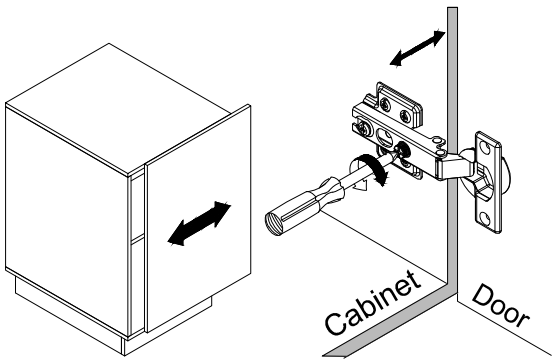


To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.


STEP27

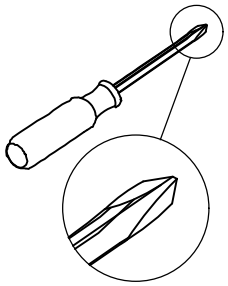


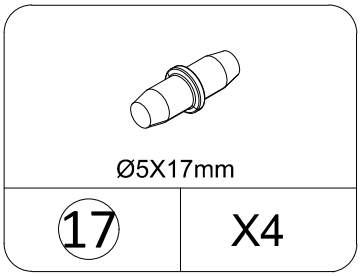


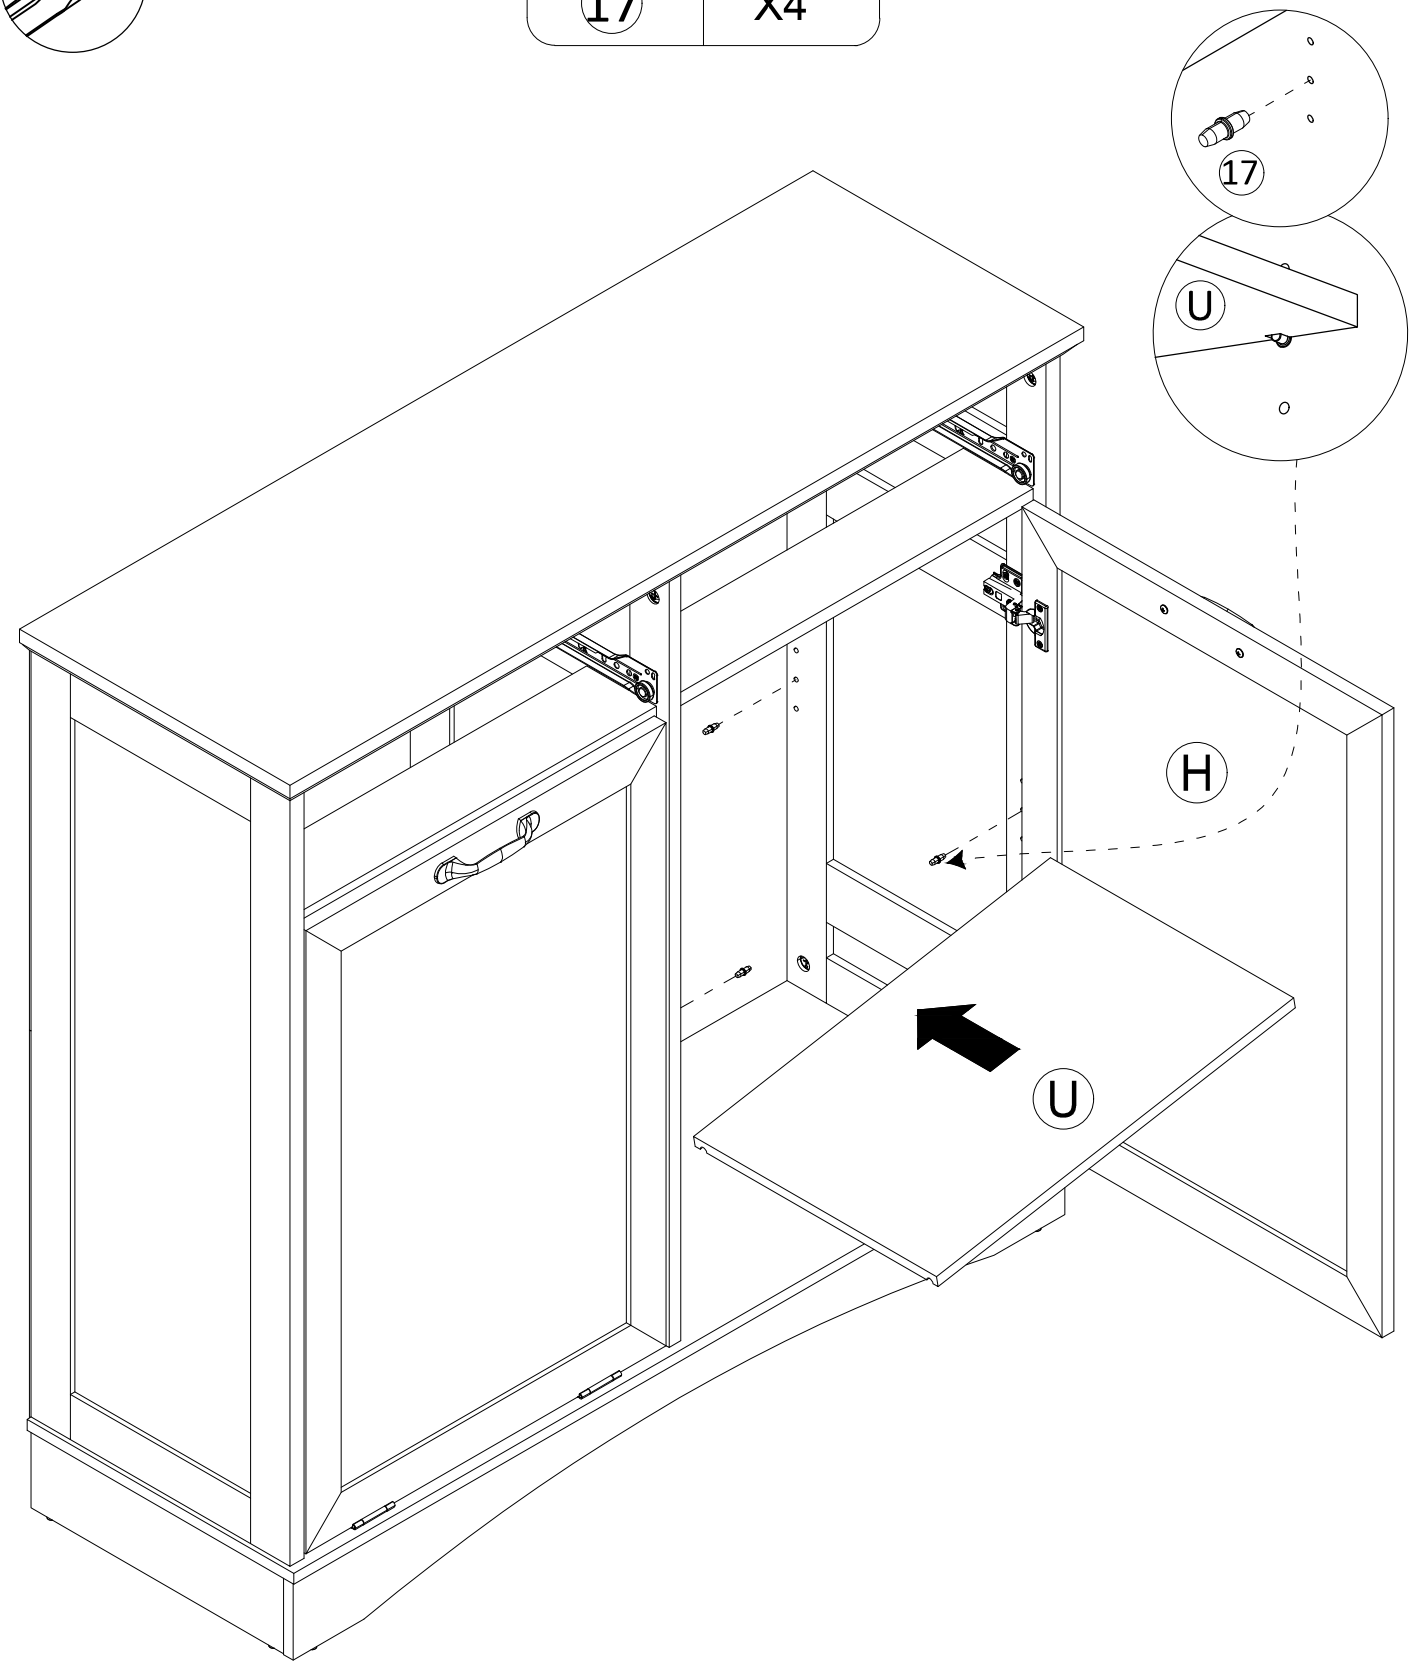



STEP28

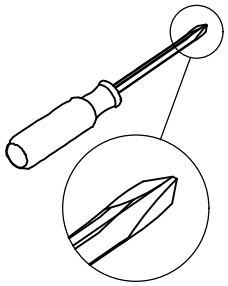

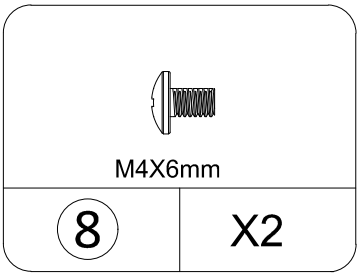


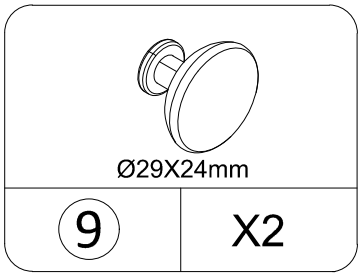

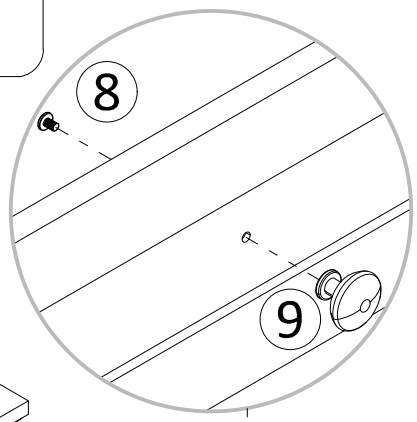

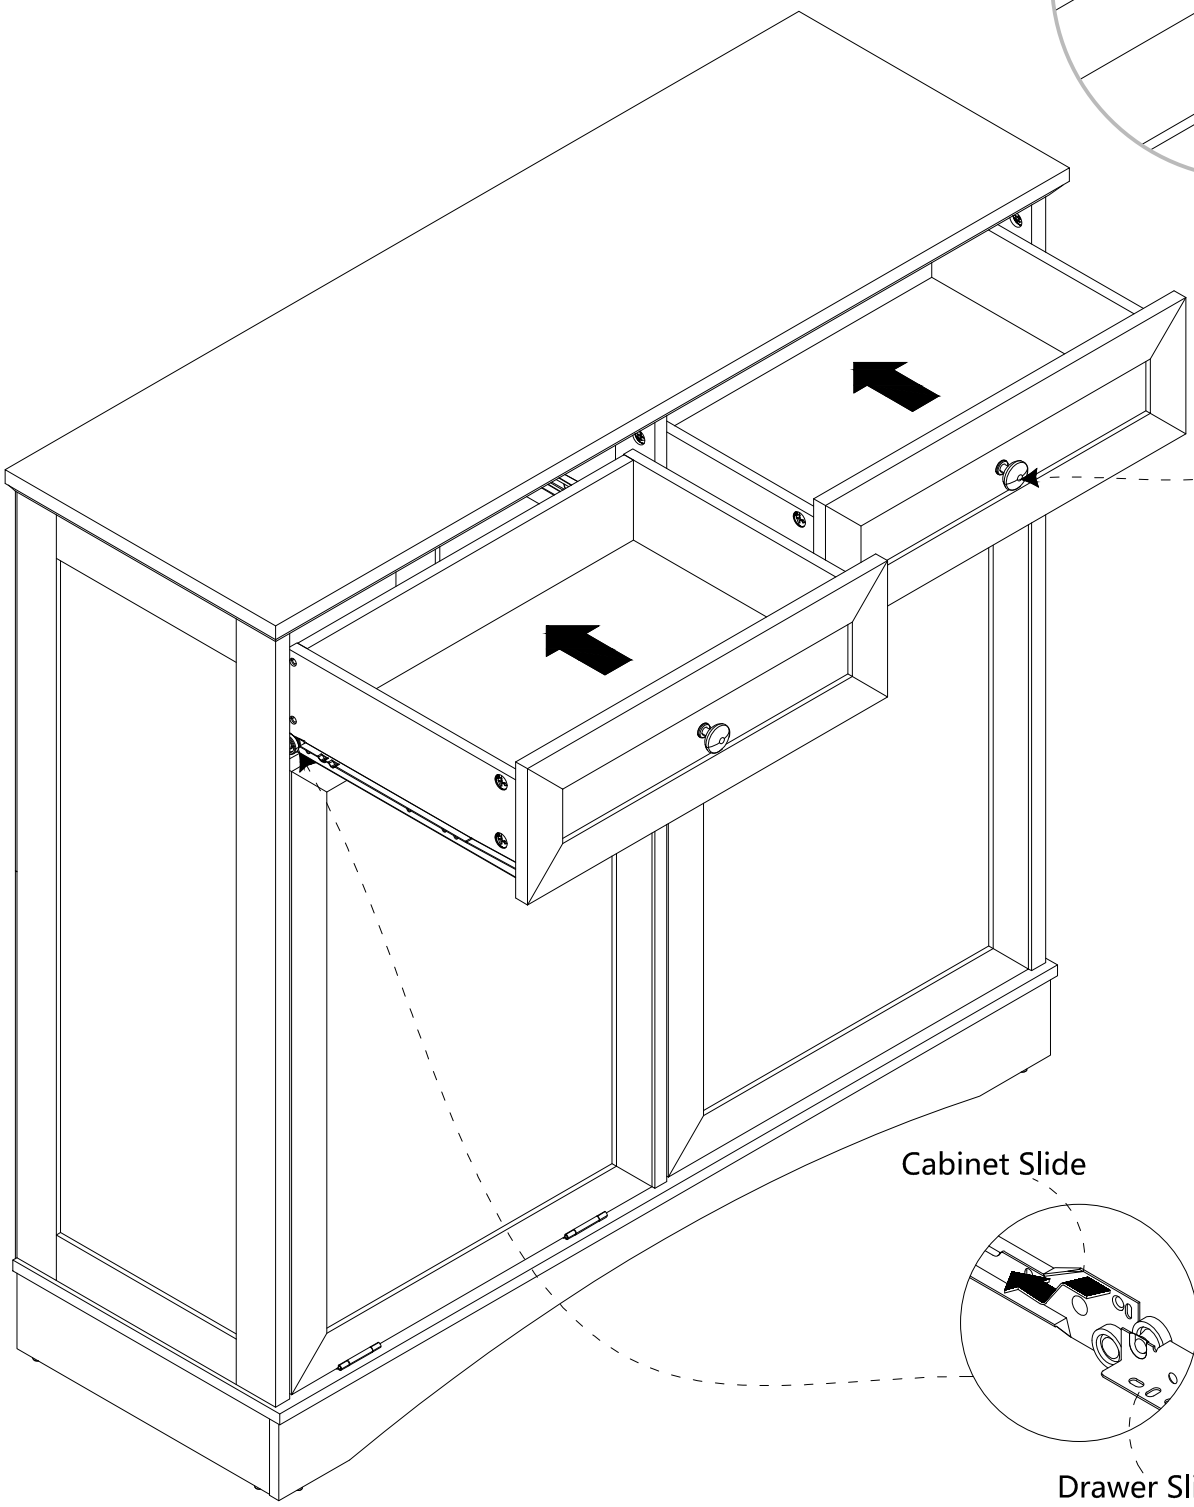

STEP29

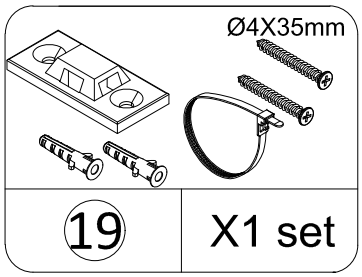


NOTE:The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.


We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to
small tremors, bumps or climbing. We strongly recommend
mounting this hardware to a wall stud and your unit.




Install the tipping restraint hard ware

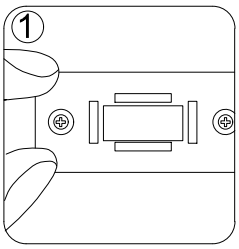


1.make mark on the wall

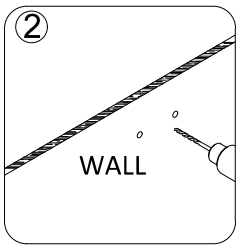


2.drill two Ø6 holes on the wall

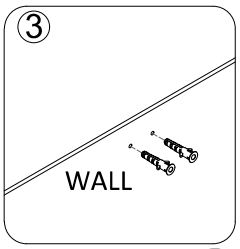

3.put two anchors in the holes

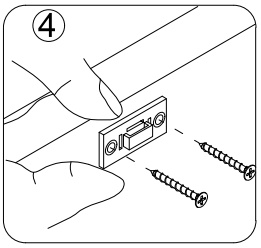

4.fix the device on the wall by the long srews

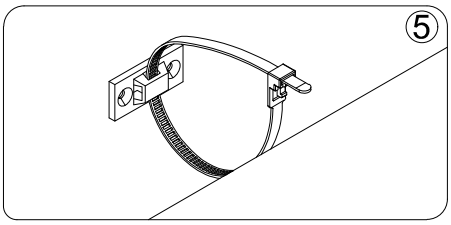

5.Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

