
dog crate

Product ID. QBBGJ

Scan for Support
support@garvee.com

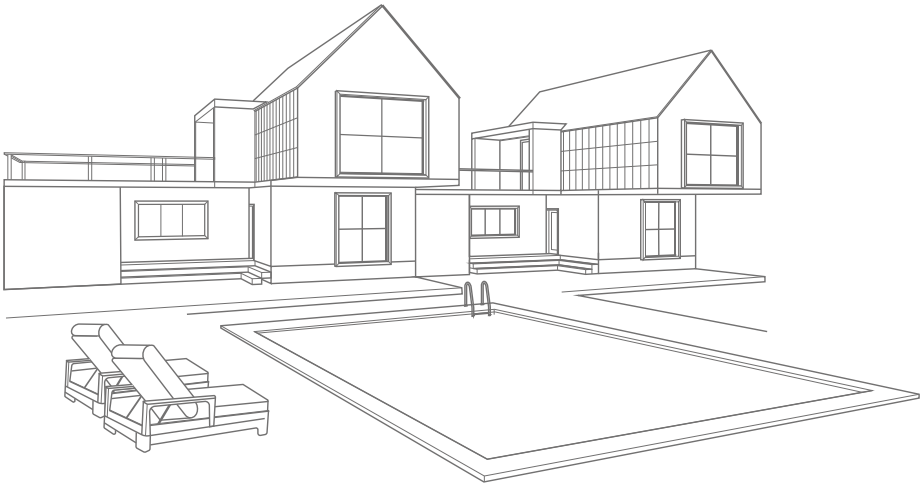


Distributed by

GARVEE.com

V251213E7GH

SKU: LC-089-11-4(240X74CM)

USER'S MANUAL

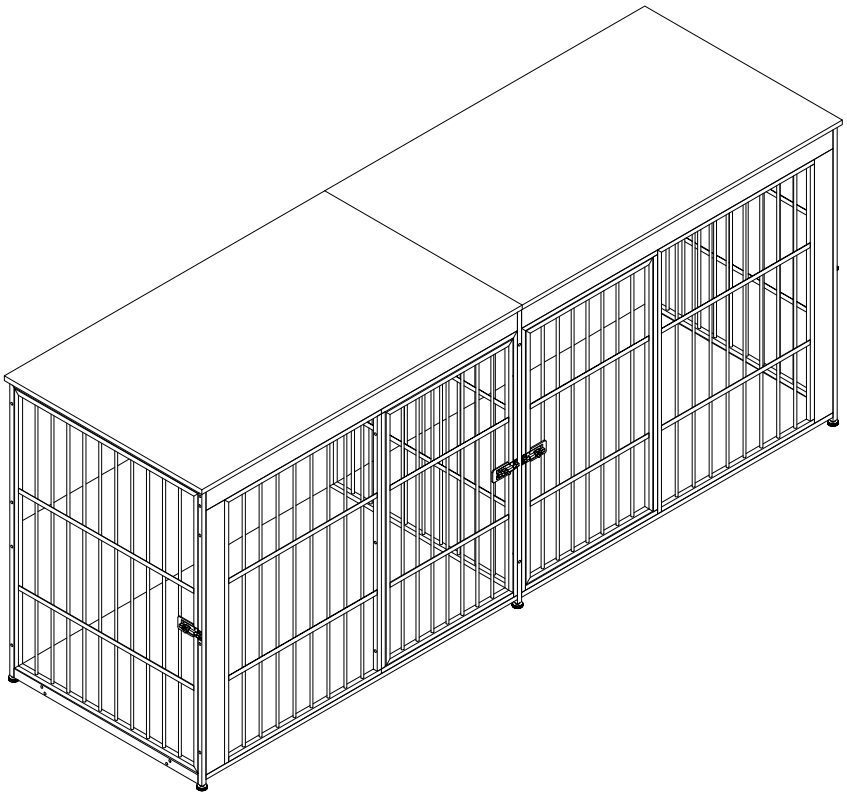

Team
Assembly
Recommended

Before You Start



1. Read each step carefully and follow the correct order.
2. Separate and count all parts and hardware.
3. Leave enough space for the assembly process.



4. Prepare the following tools: Flat Head Screwdriver, Cross Head Screwdriver and Hammer.



5. Note: If you use an electric drill or electric screwdriver to tighten the screws, please be careful to slow down and stop when tightening the screws. Otherwise, the screws may fall off.
(Using an electric screwdriver can increase assembly speed).

Useful Tips

Assembly Personnel Required: 1-2 People



- Unpack the item in the area where you plan to store it to avoid excessive lifting.
- Identify, sort, and count the parts before attempting assembly.



- Use a hammer to gently tap in the compression pins.



- The sliders are marked with R (right) and L (left) for proper placement.
- Make sure to always point the tip of the top of the cam lock toward the outer edge.



- If there is a back panel in the package, install it to ensure your unit is complete and sturdy.




- Tighten all the screws provided for the back panel, which can enhance the stability of the product. If it is difficult to tighten, you can use a hammer to secure it and then tighten it.



- Do not use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

Board Identification


Not actual size

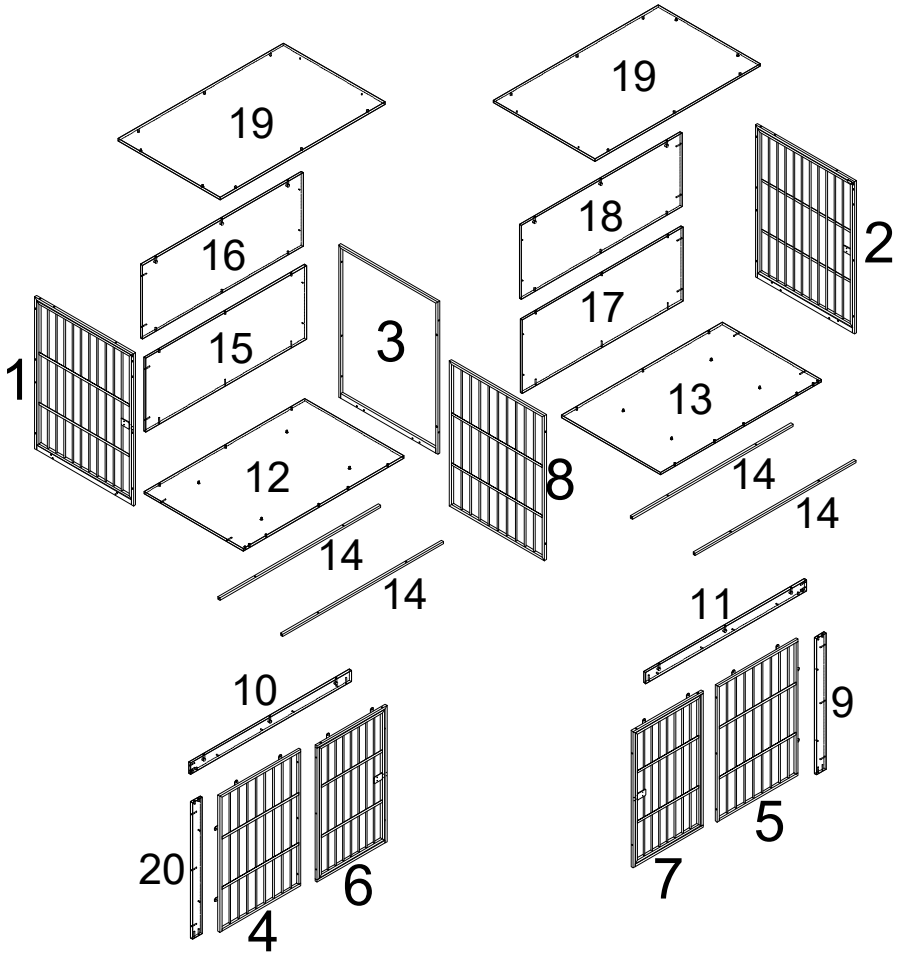

Note:Don't tighten all screws during installation.


Board Identification

Not actual size

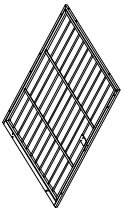


1

Qty:1

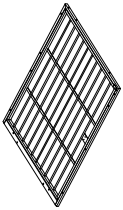

2

Qty:1

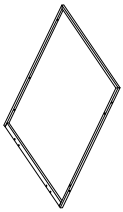

3

Qty:1



4

Qty:1



5

Qty:1




6

Qty:1




7

Qty:1



8

Qty:1

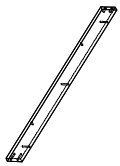


9

Qty:1


Board Identification

Not actual size

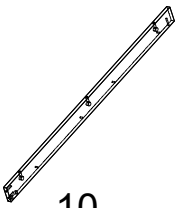


10

Qty:1

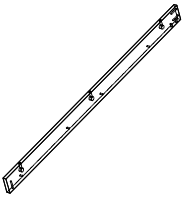


11

Qty:1

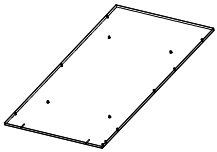

12

Qty:1

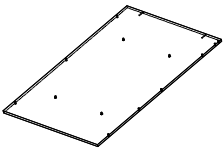


13

Qty:1




14

Qty:4

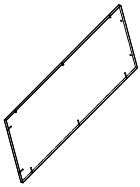


15

Qty:1

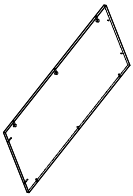


16

Qty:1

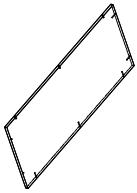


17

Qty:1

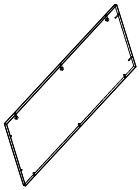


18

Qty:1

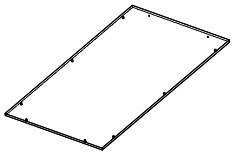

19

Qty:2

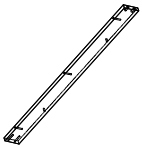

20

Qty:1

Parts List



Ⓐ	X6

CONNECTOR



Ⓑ	X4

SLIDE BOLT LATCH



M6

Ⓒ	X6

ADJUST FOOT



M6*25mm

Ⓓ	X30

BOLT
spare:2



M6*40mm

Ⓔ	X34

SCREW
spare:2



M6*30mm

Ⓕ	X8

BOLT
spare:1



M6*40mm

Ⓖ	X12

CAM BOLT
spare:1



Ø15mm

Ⓗ	X12

CAM LOCK
spare:1



M6*10mm

Ⓙ	X4

BOLT
spare:1



M3.9*12mm

Ⓚ	X16

SCREW
spare:2



M4*14mm

Ⓛ	X24

SCREW
spare:2



M3*10mm

Ⓜ	X8

BOLT
spare:1



M3

Ⓝ	X8

NUT
spare:1



Ø8*30mm


Ⓟ	X10

DOWEL
spare:1



M4

	X1




	X1


Parts List

Cam Lock Fastening System


insert the cam bolt into the hole first, then insert the cam lock and lock it.

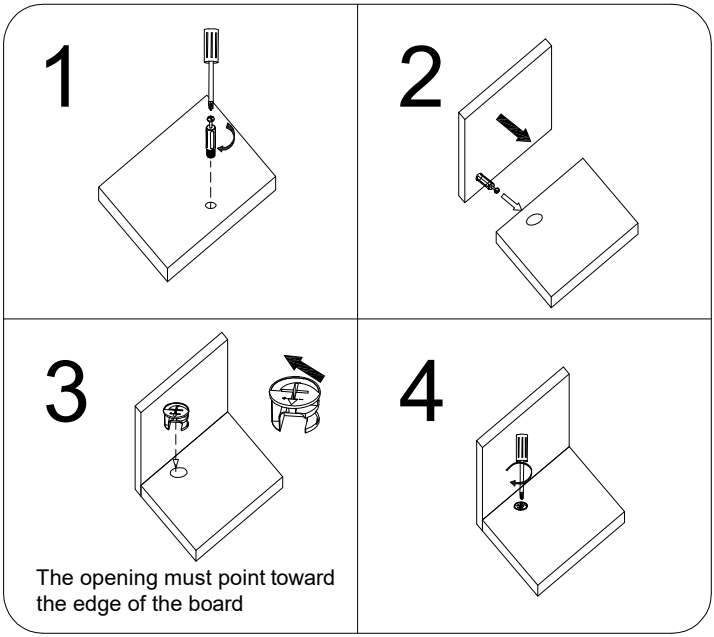

Step 1

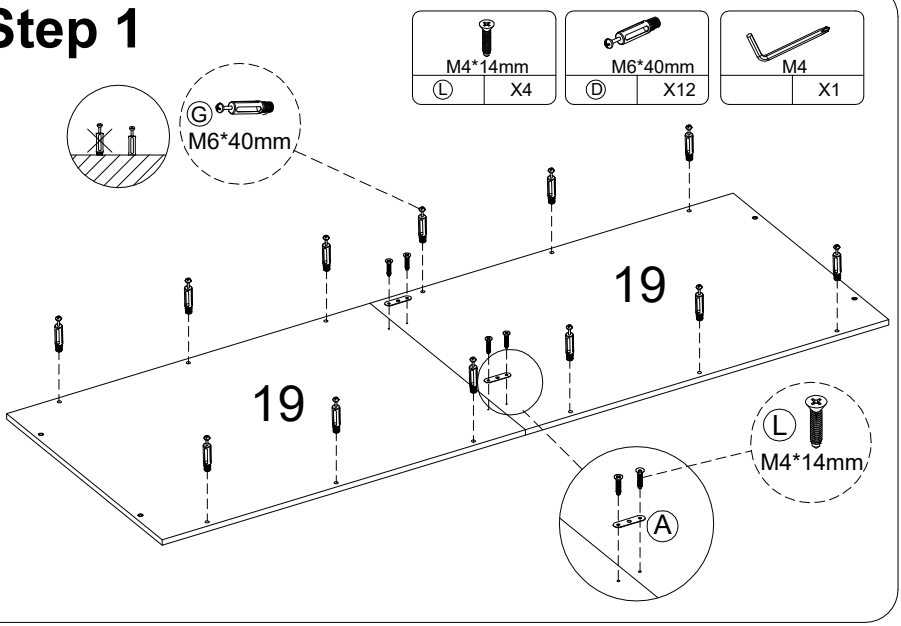

M4*14mm
Ⓛ X4
M6*40mm
Ⓓ X12
M4
X1
Ⓖ
M6*40mm
19
19
Ⓛ
M4*14mm
Ⓐ

Step 2

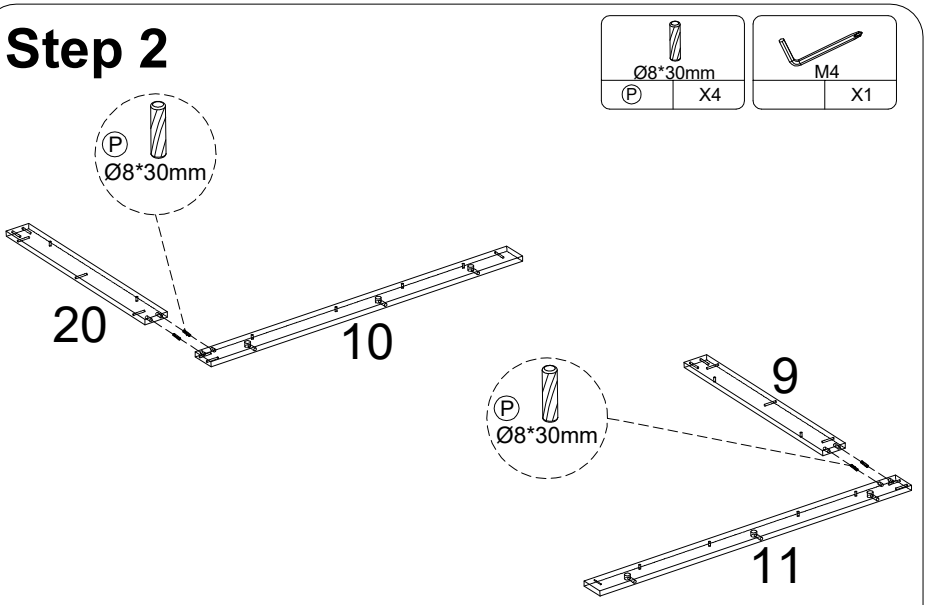
Ø8*30mm
Ⓟ X4
M4
X1
Ⓟ
Ø8*30mm
20
10
Ⓟ
Ø8*30mm
9
11


Step 3

M6*25mm	M4*14mm	M4
Ⓓ X6	Ⓛ X12	X1

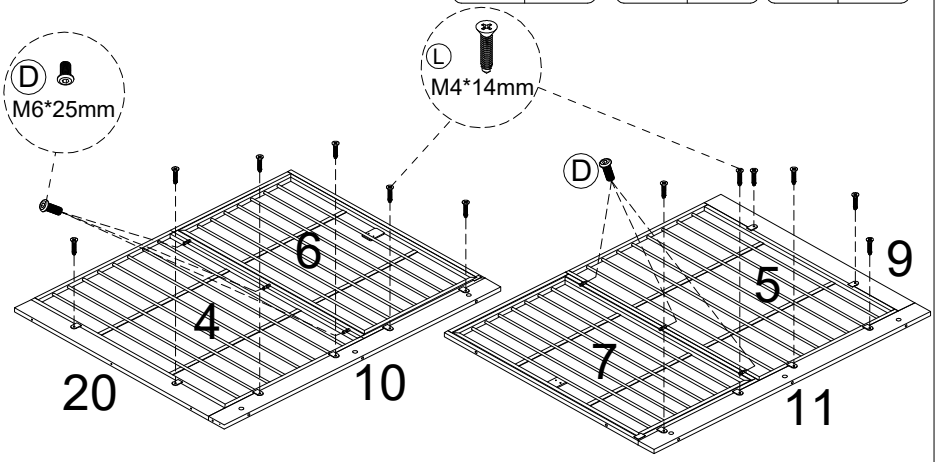


Step 4

M6*25mm	M4
Ⓓ X2	X1

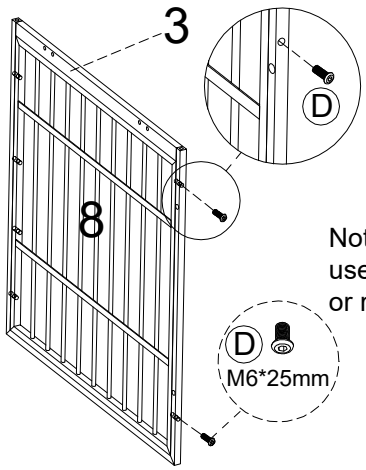


OR

Note: #8 is optional –
use it to create two small cages,
or remove it for one large cage.

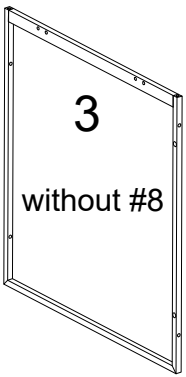


Step 5

Ø15mm	M4
Ⓗ X6	X1

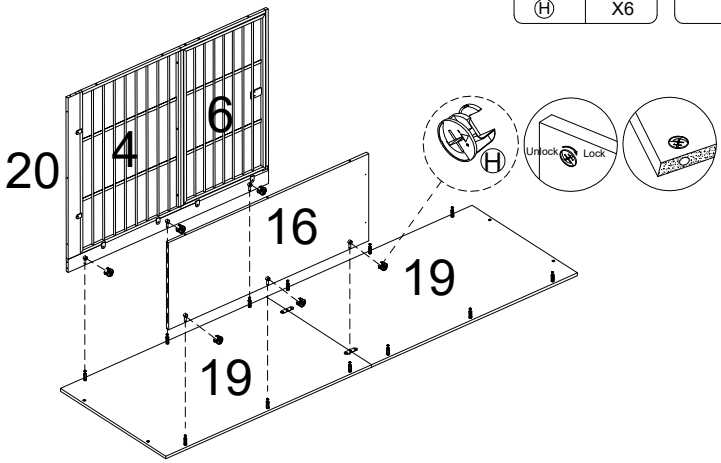


Step 6


M6*40mm	M6*10mm	M4
Ⓔ X7	Ⓙ X2	X1

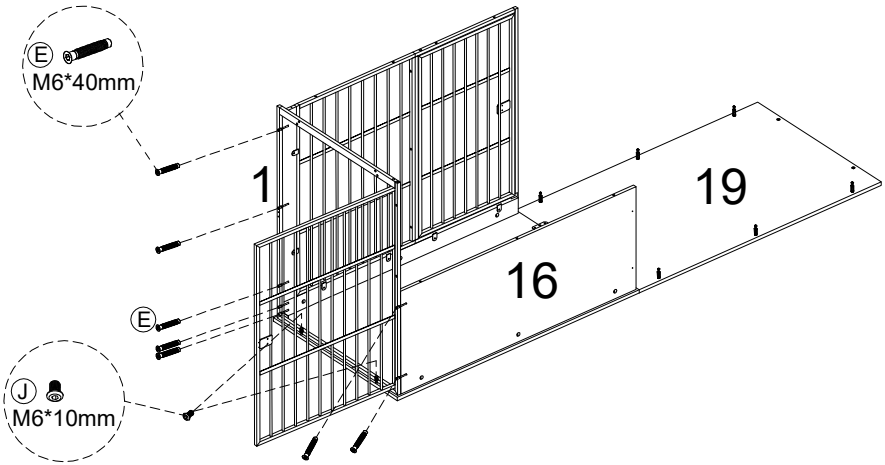


Step 7

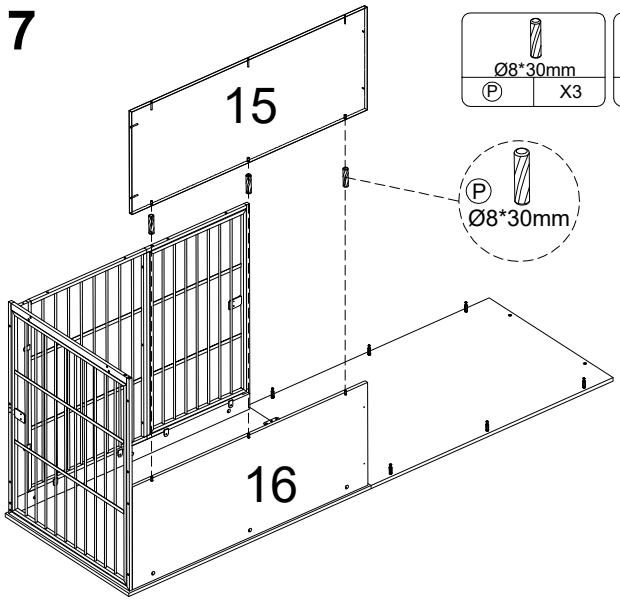


Step 8

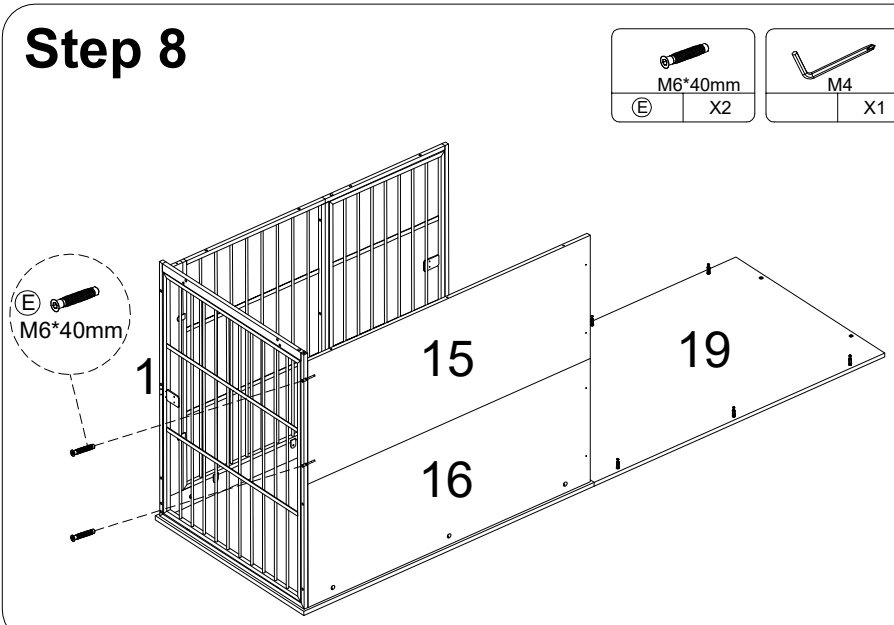


Step 9

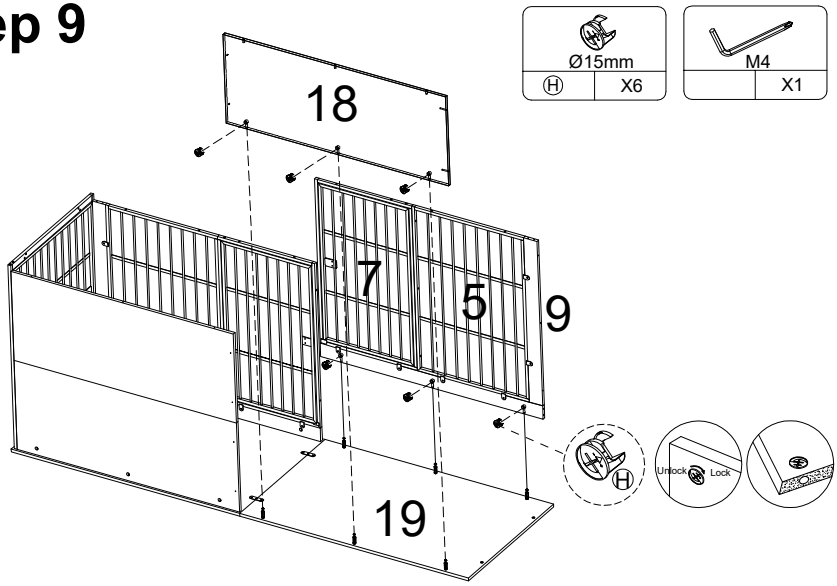


Step 10

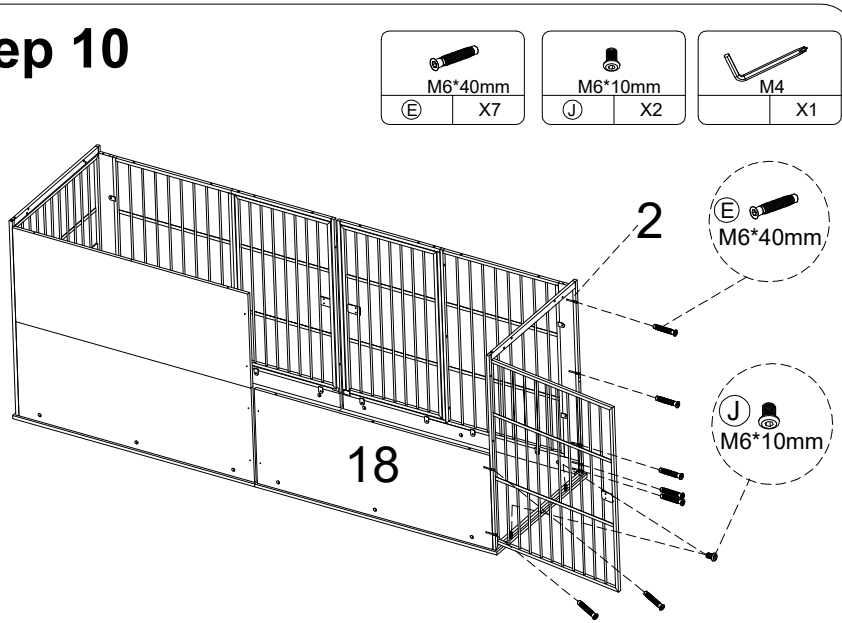

Step 11

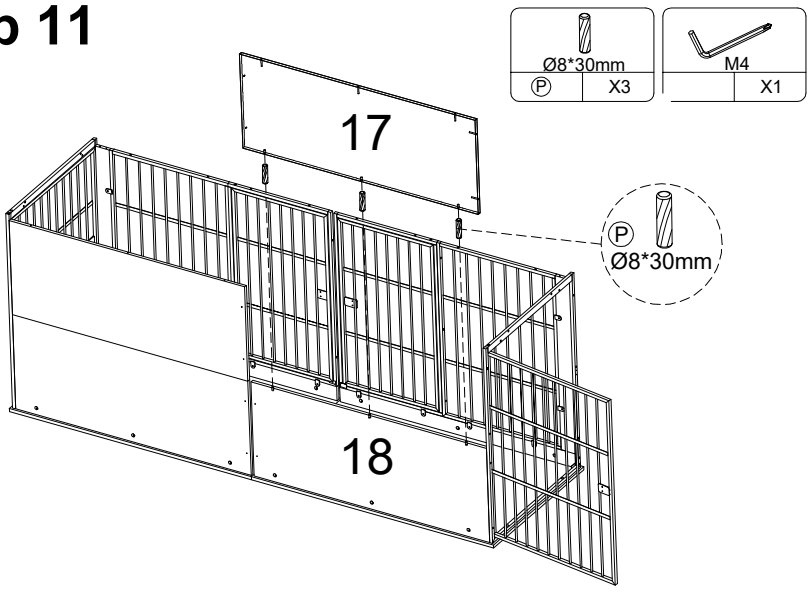


Step 12

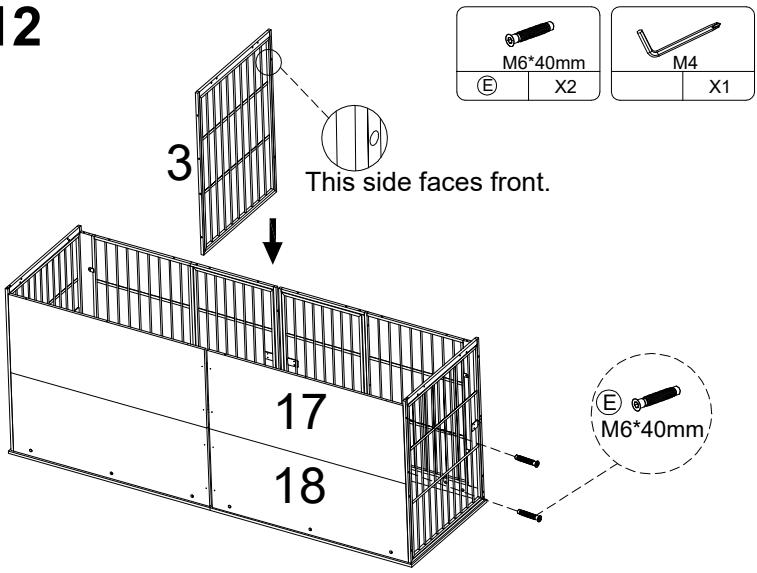

Step 13


M6*25mm	M6*40mm	M6*30mm	M4*14mm	M4
Ⓓ X12	Ⓔ X7	Ⓕ X4	Ⓛ X8	X1

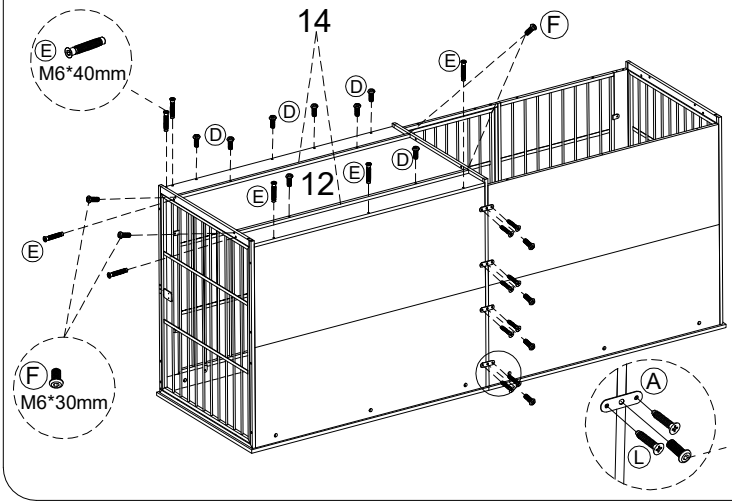

If #8 is not installed, bolt D is not needed.

Step 14

M6*25mm	M6*40mm	M6*30mm	M4
Ⓓ X8	Ⓔ X7	Ⓕ X4	X1

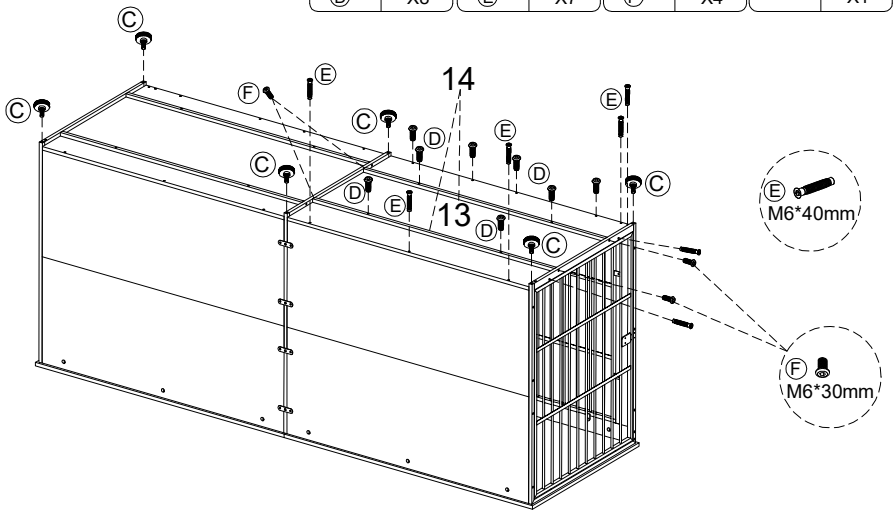


Step 15

Flip over to the front side

M6*25mm	
Ⓓ	X2

M4	
	X1

M6*40mm	
Ⓔ	X2

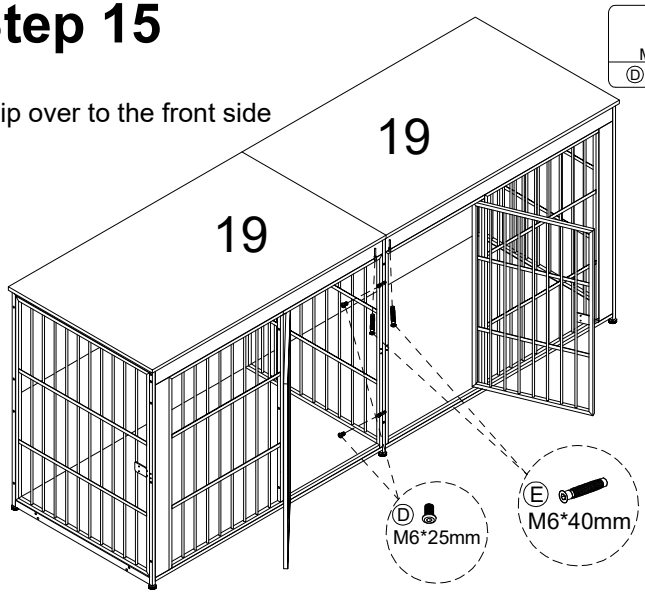


Step 16

M3.9*12mm	
Ⓚ	X16


M3*10mm	
Ⓜ	X8

M3	
Ⓝ	X8

M4	
	X1

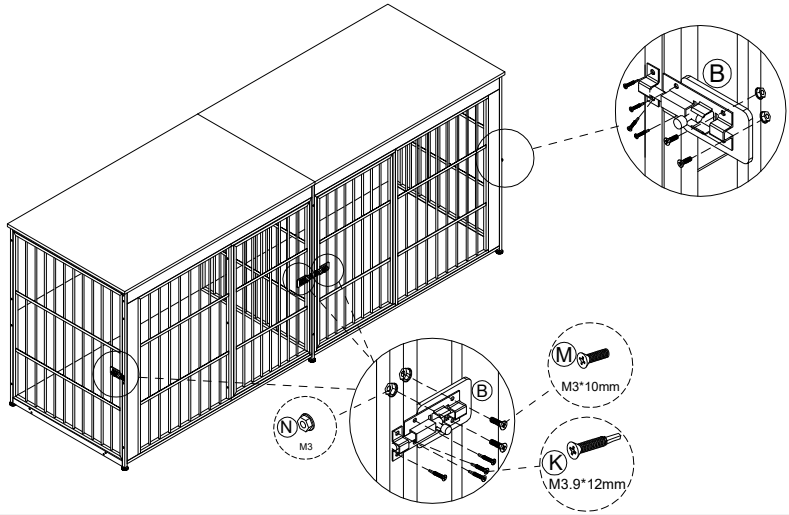

Step 17

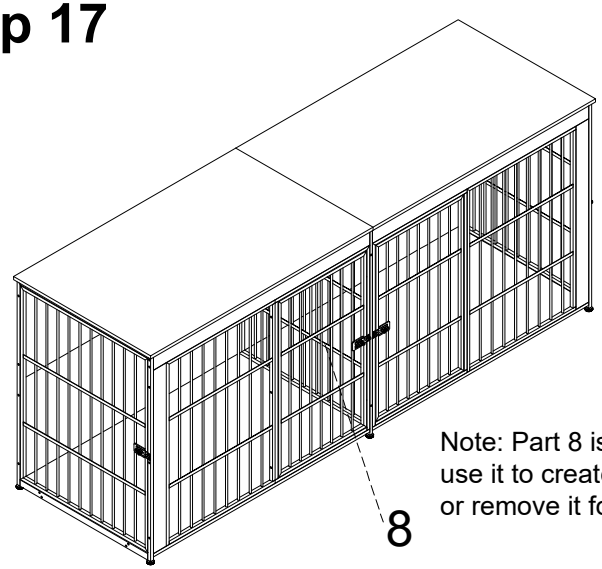

Note: Part 8 is optional –
use it to create two small cages,
or remove it for one large cage.