


Corner Bar Cabinet

ASSEMBLY INSTRUCTION

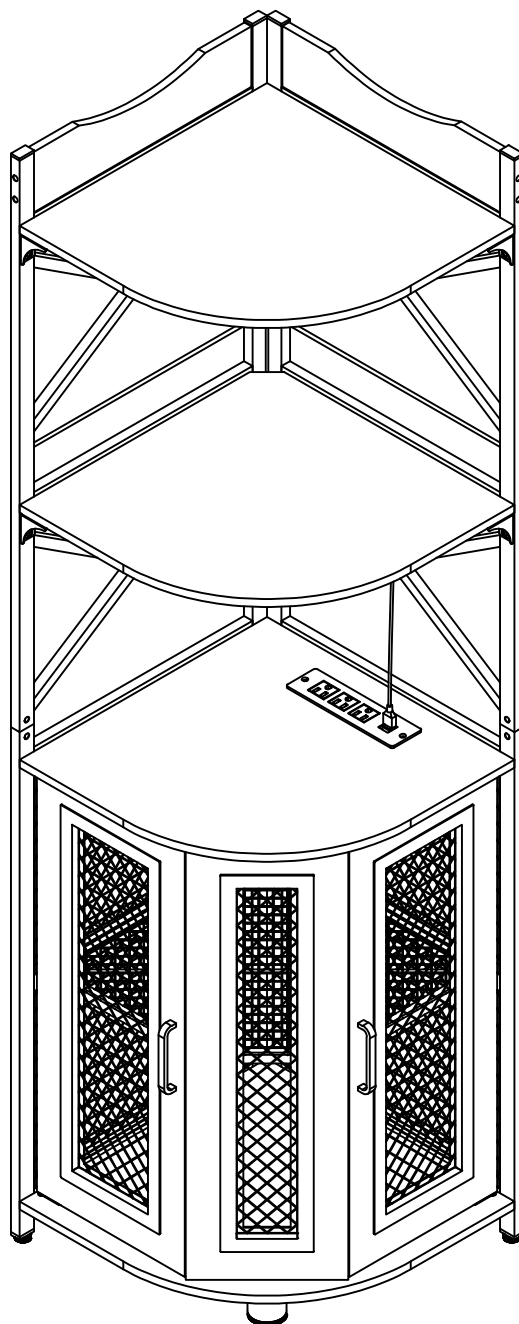

(Note:Two people are recommended to install, which will greatly improve your installation efficiency.)

✉ toptohome@hotmail.com

Thank you for purchasing our products.

As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please feel free to contact us the first time, We will provide you with a 100% satisfactory solution.

Thanks again for your order. And please feel free to contact us from Amazon or toptohome@hotmail.com in case of any problem regarding assembling or the product itself. We will do everything we can to resolve it.


TIPS:

1. Please read this instruction manual carefully, follow it step by step and pay attention to the notes, you will assemble it quickly, safely and correctly.
2. Two people are recommended to install, which will greatly improve your installation efficiency.
3. Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing

Using Camlocks


Connect the male camlock as directed in the assembly instructions using a screwdriver.

1 DO NOT OVER TIGHTEN

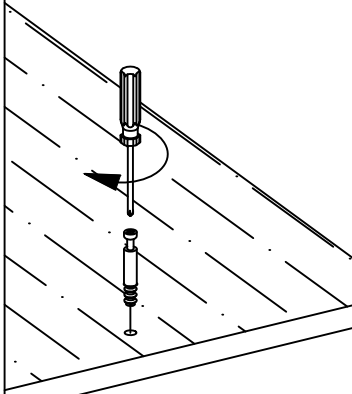

Push the male camlock into the entry hole.


2

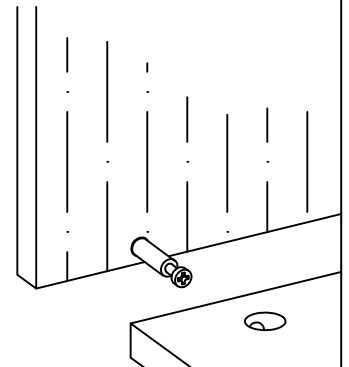

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

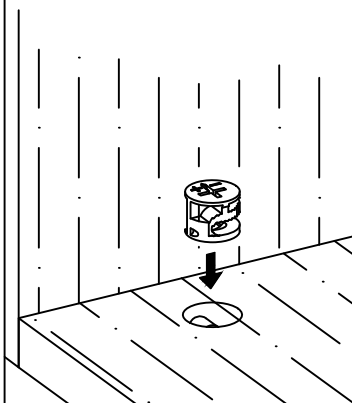



Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.


4

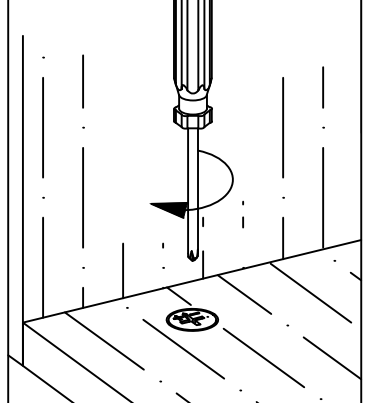

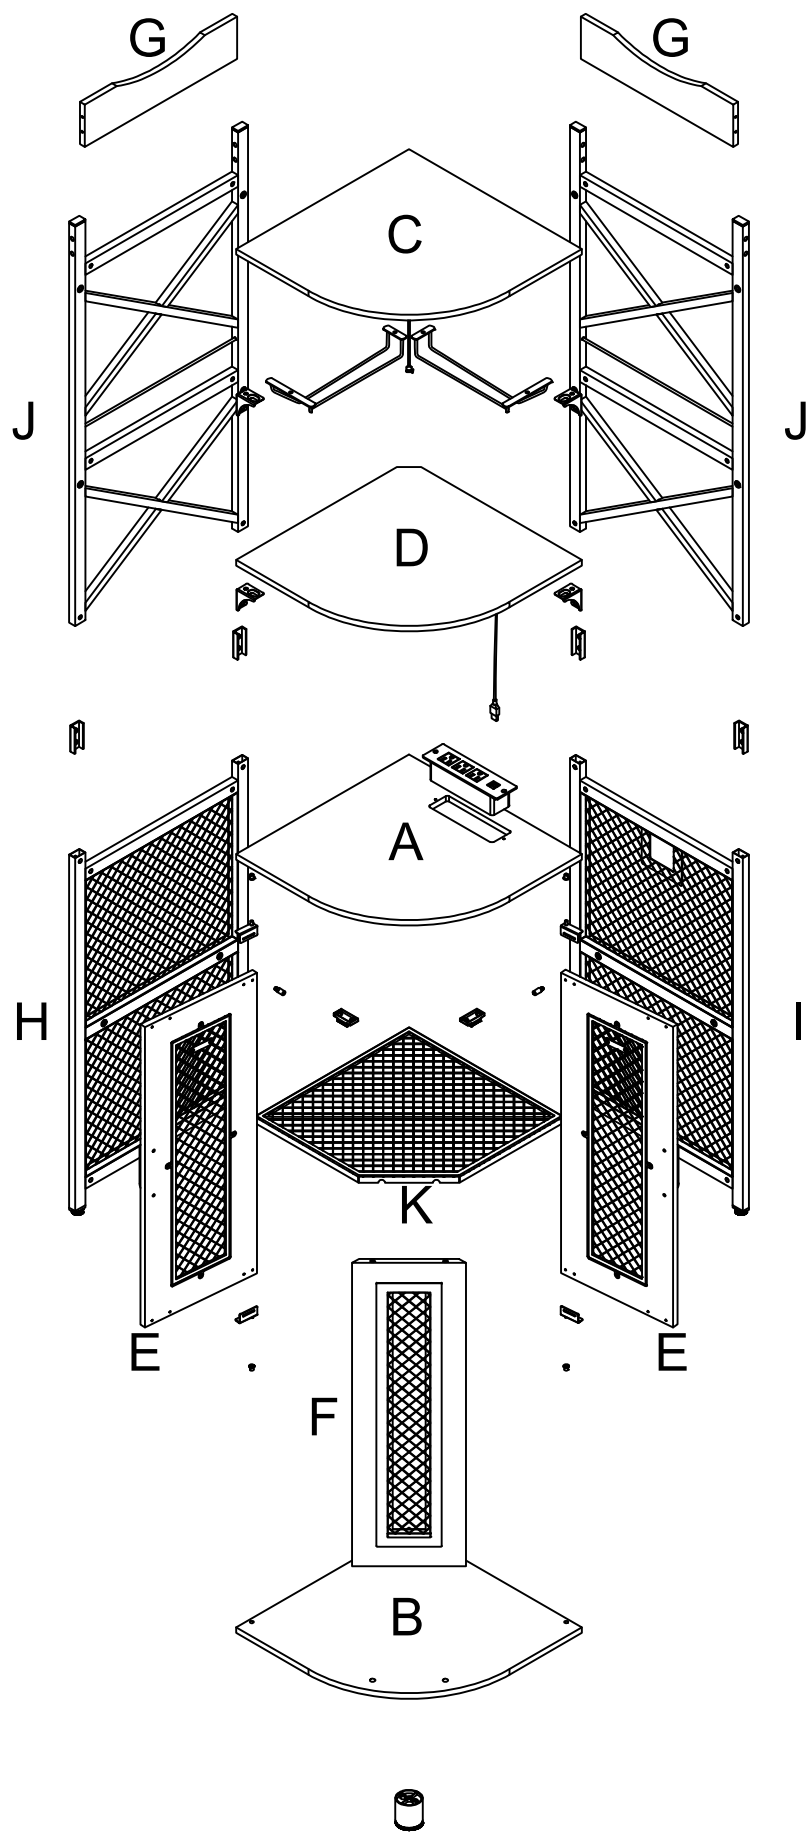


PART LIST


A x 1pc

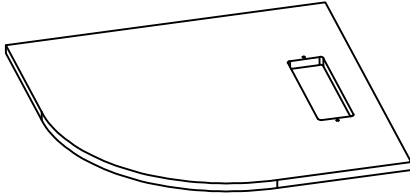


B x 1pc

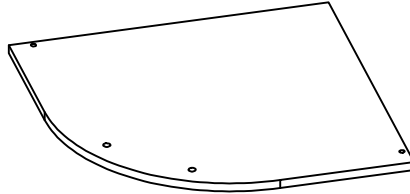


C x 1pc

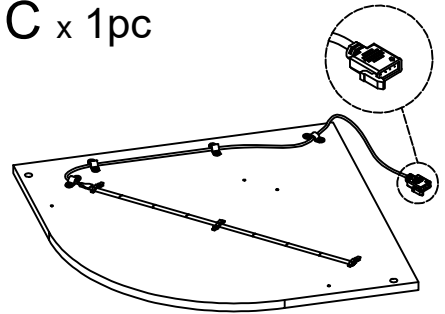


D x 1pc

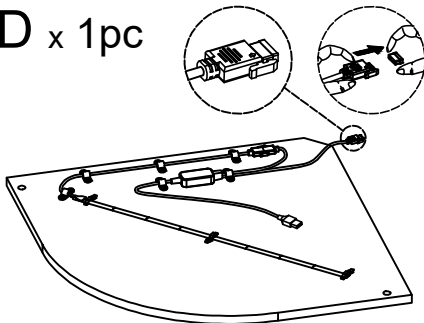


E x 2pcs

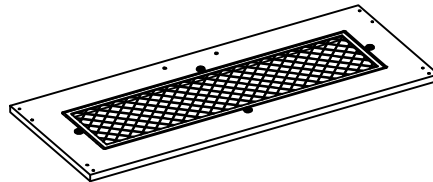


F x 1pc

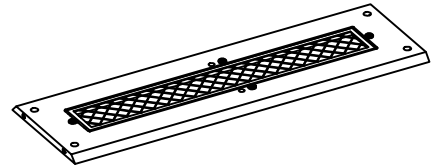


G x 2pcs

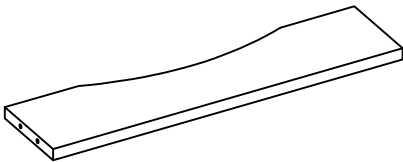


H x 1pc

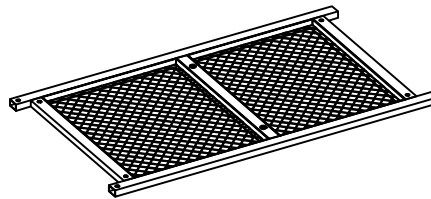


I x 1pc

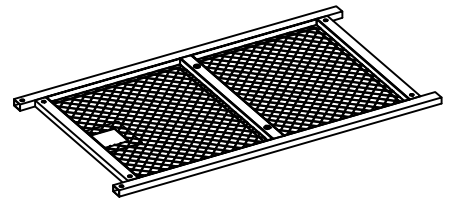


















J x 2pcs

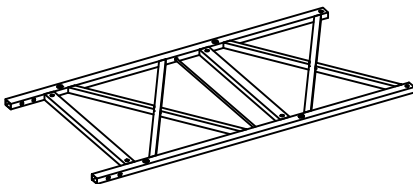

K x 1pc

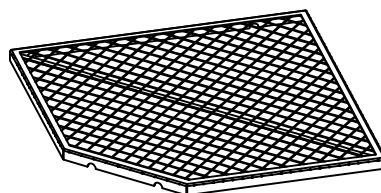


HARDWARE LIST

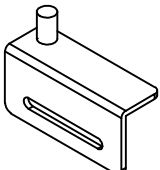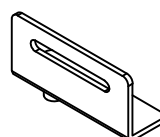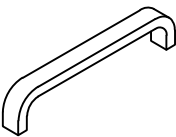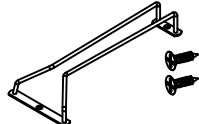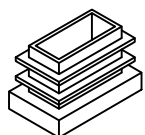①  M5x40 16 pcs	②  M6x12 16 pcs	③  M6x16 1 pc	④  M4x16 4 pcs
⑤  M3x16 2 pcs	⑥  M3x12 6 pcs	⑦  M3.5x12 8 pcs	⑧  M3x16 2 pcs
⑨  M4x40 2 pcs	⑩  M6 6 pcs	⑪  M6x28 4 pcs	⑫  Ø12 4 pcs
⑬  2 pcs	⑭  2 pcs	⑮  4 pcs	⑯  2 pcs
⑰  2 pcs	⑱  4 pcs	⑲  M4x12 2 pcs	⑳  25x15 4 pcs
㉑  15x25 4 pcs	㉒  15x25xM6 4 pcs	㉓  Ø50x53 1 pc	㉔  1 pc
㉕  M5x50 8 pcs	㉖  1 pc	㉗  M4 1 pc	㉘  RF Remote Control 1 pc
㉙  2 pcs			

STEP 1


Please use a hammer or solid tools (not included) to knock the plastic pad into the frame.

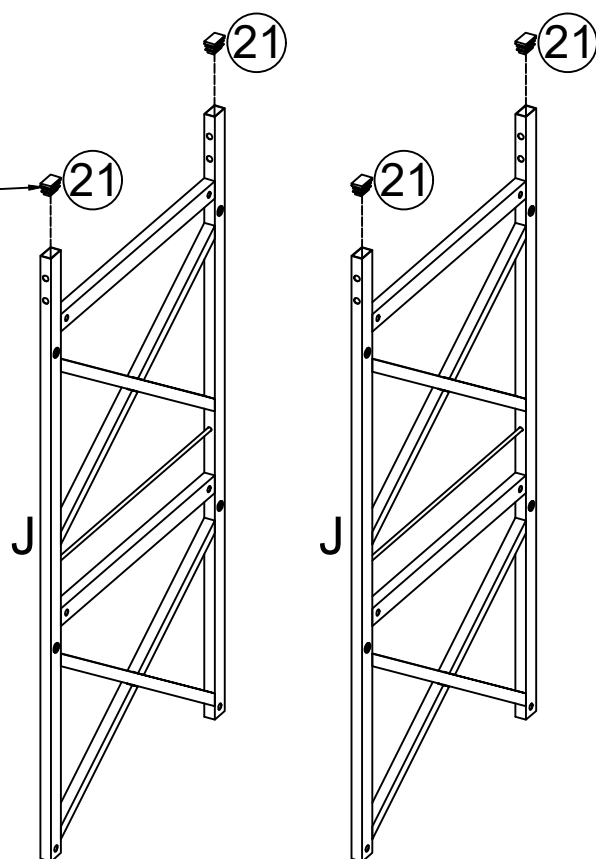

(21)  x4

STEP 2



Please use a hammer or solid tools (not included) to knock the footpads into the frame.

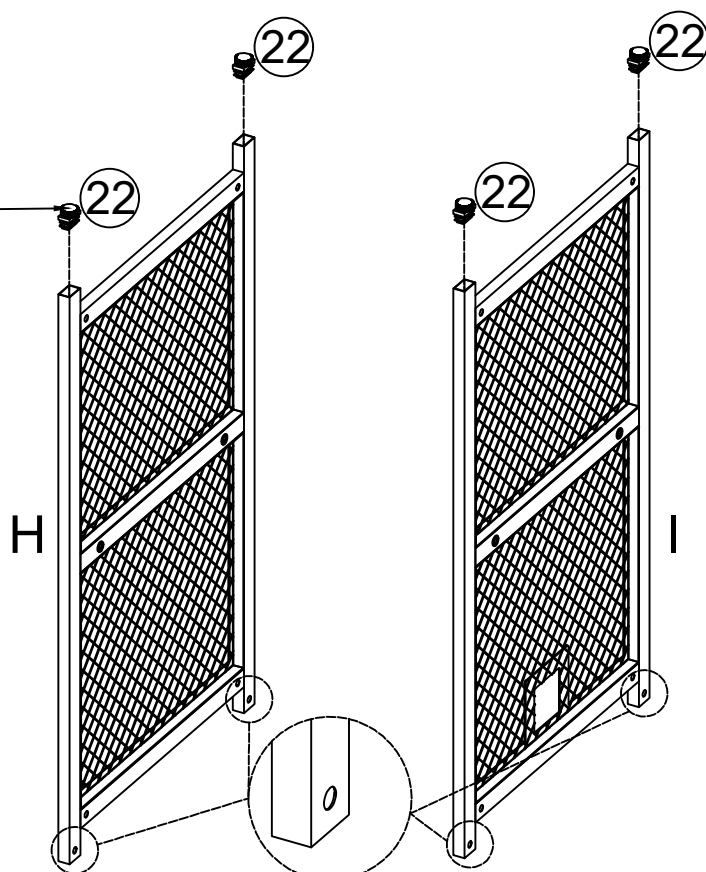



(22)  x4

Keep the holes as shown.

STEP 3



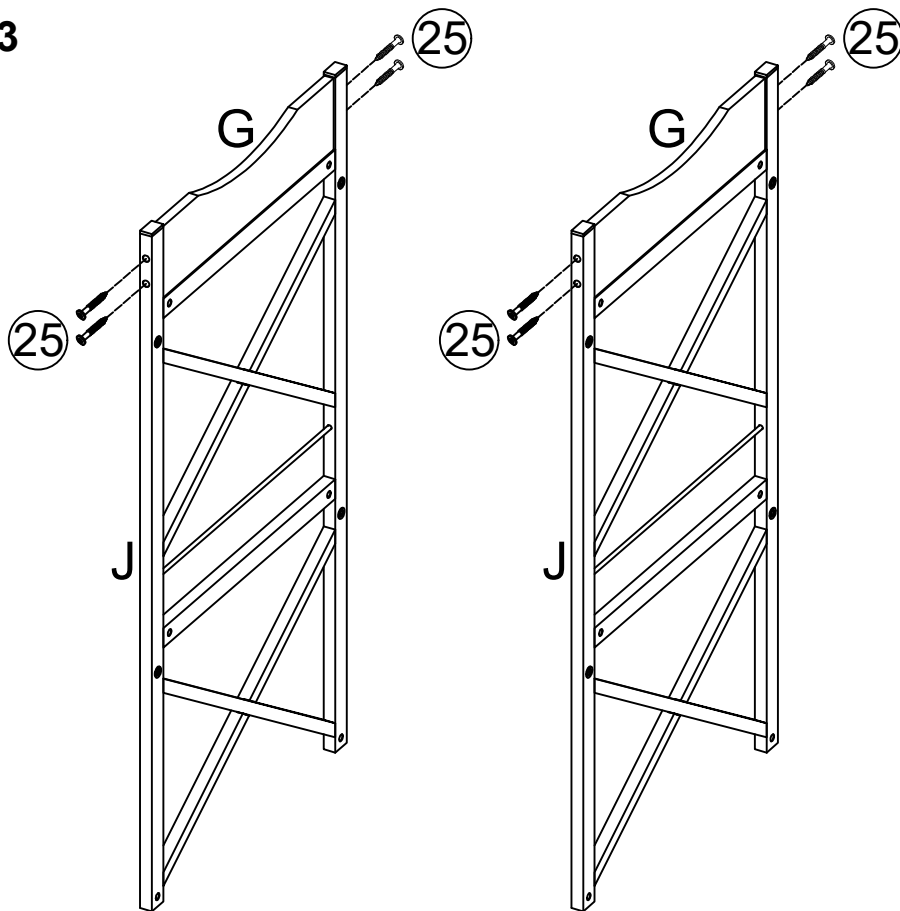


STEP 4

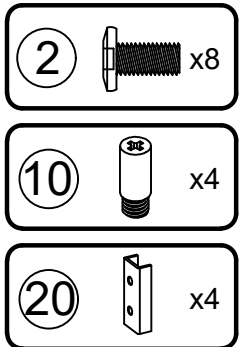
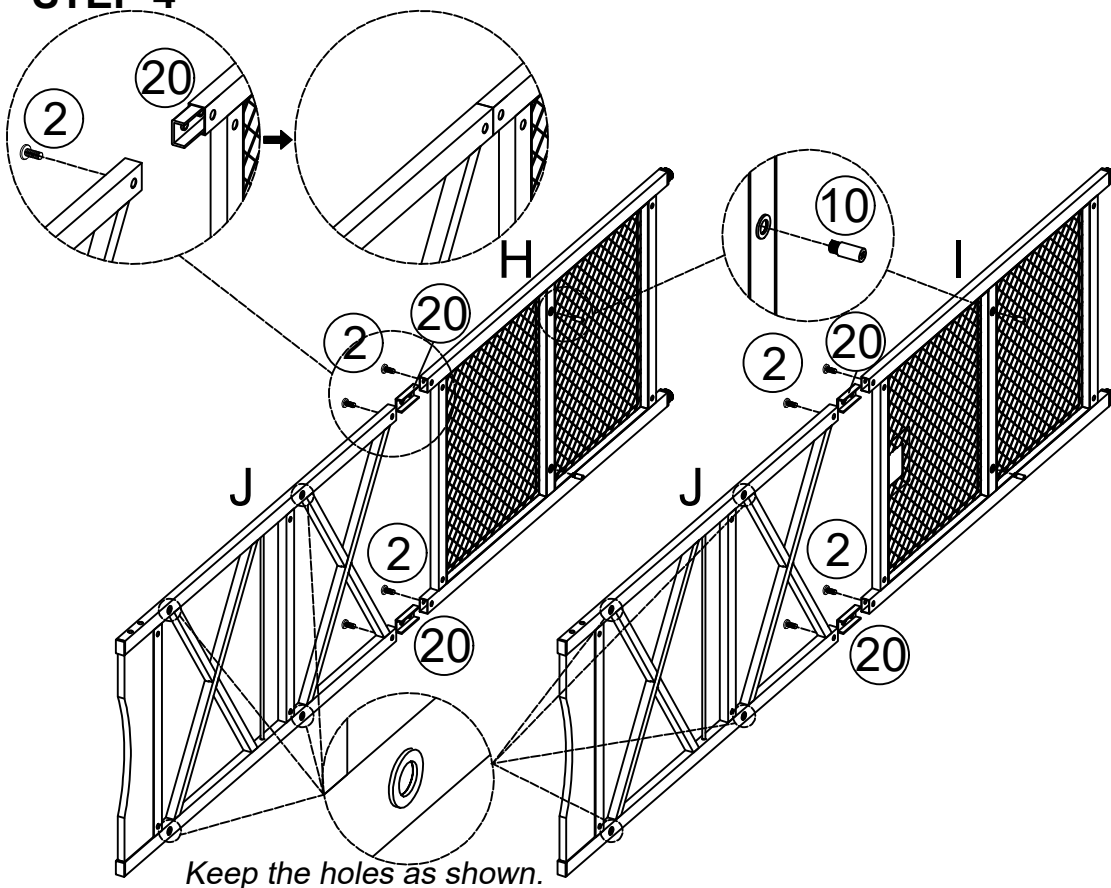


Keep the holes as shown.



STEP 5

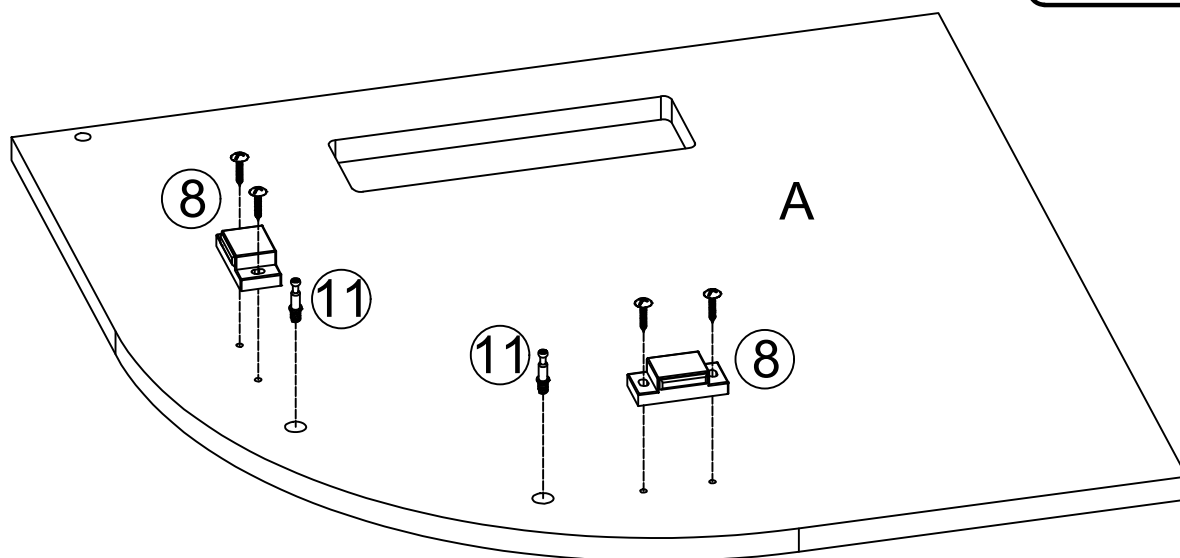



STEP 6

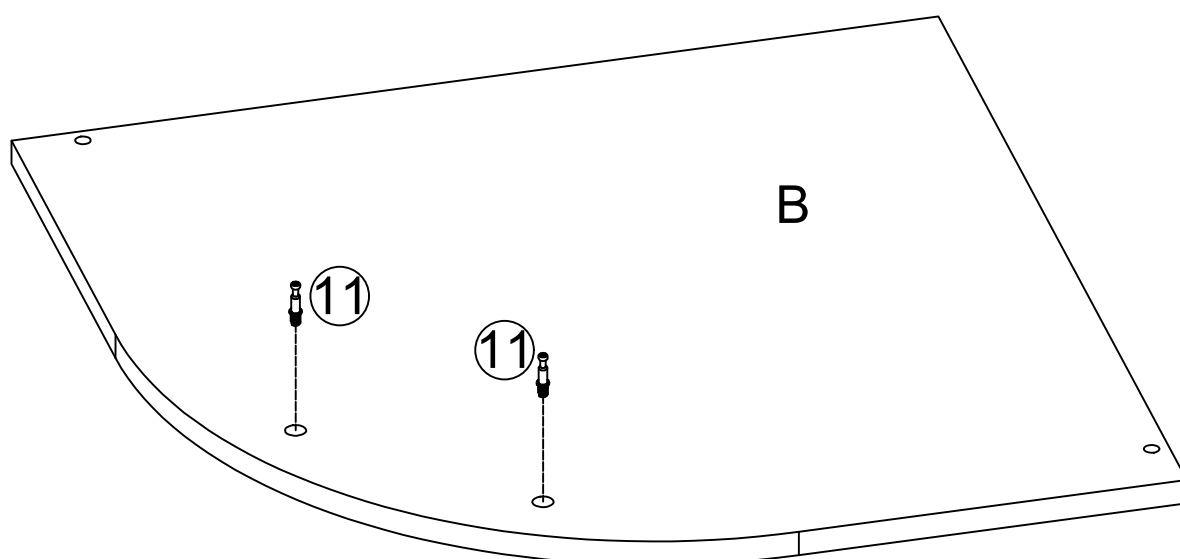

STEP 7

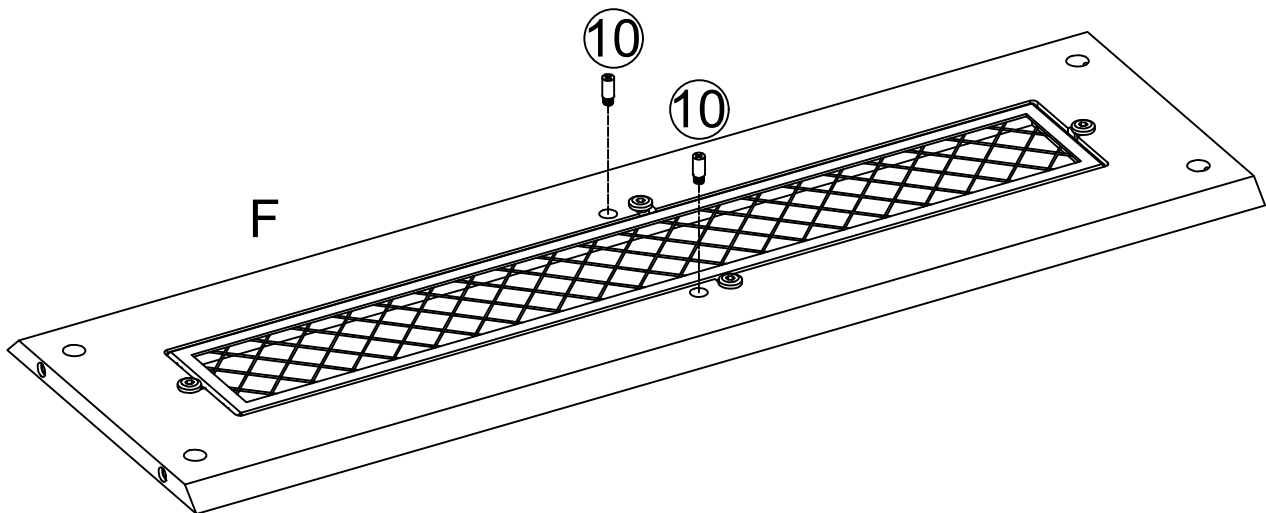


STEP 8

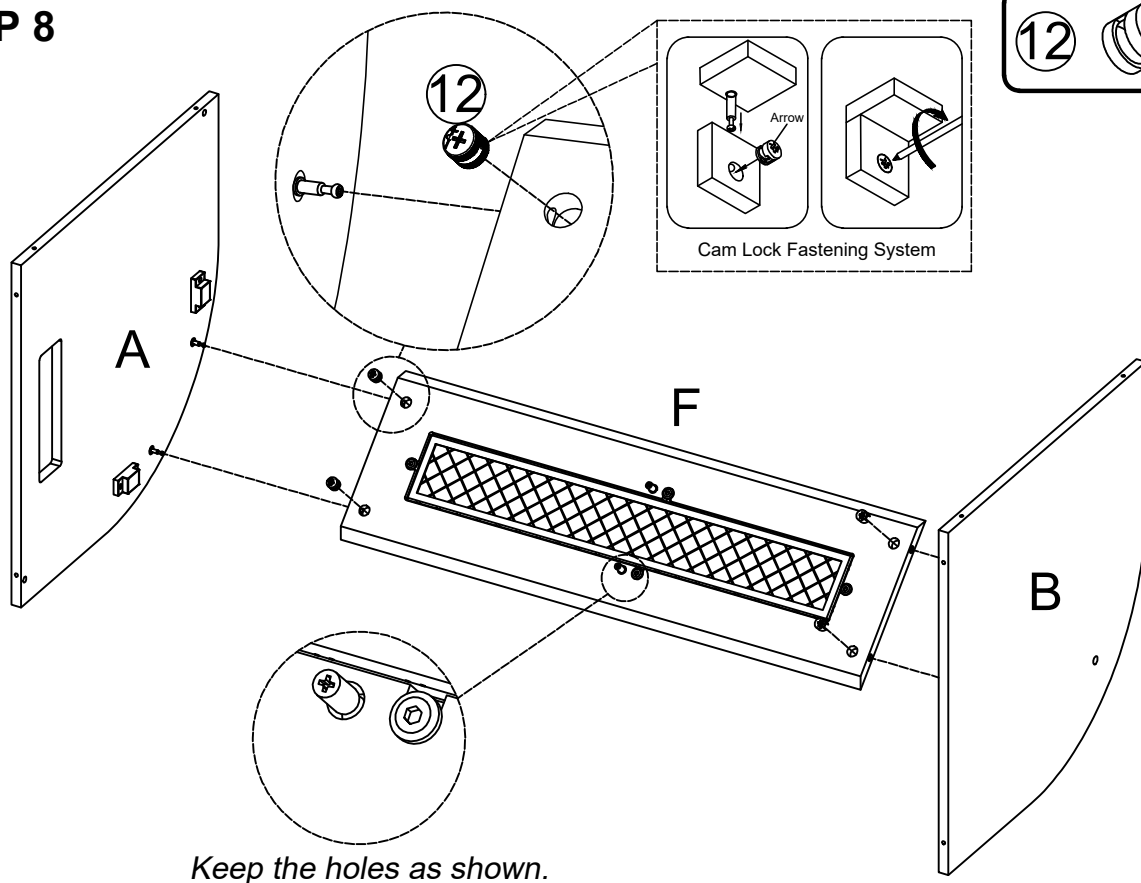


STEP 9

①  x4

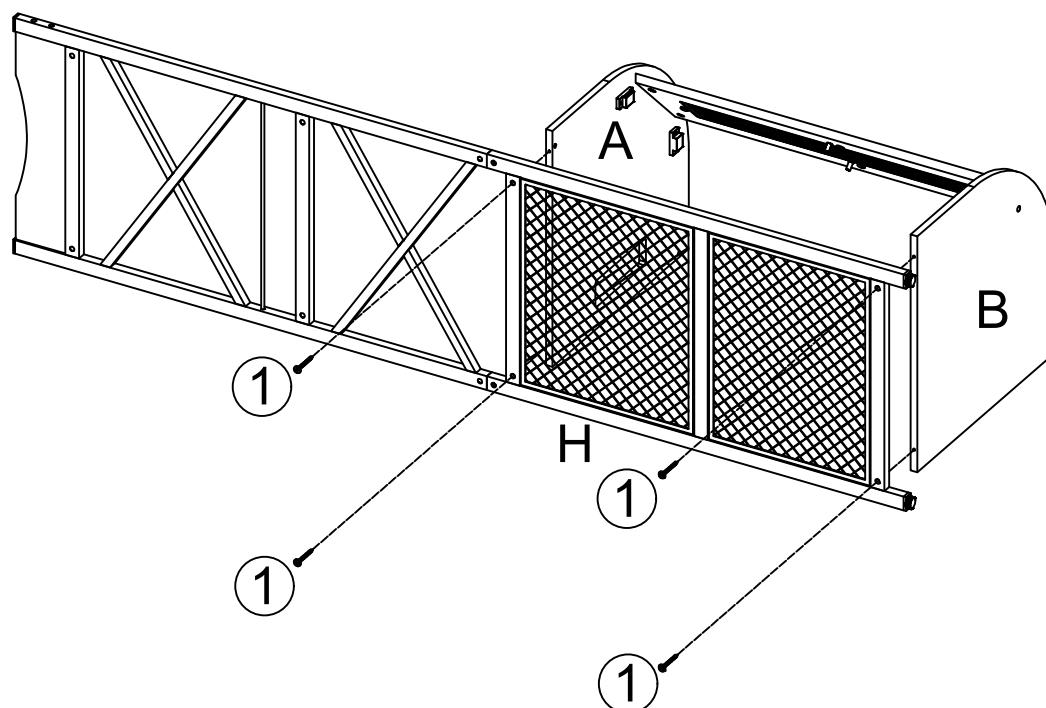


STEP 10

①  x4

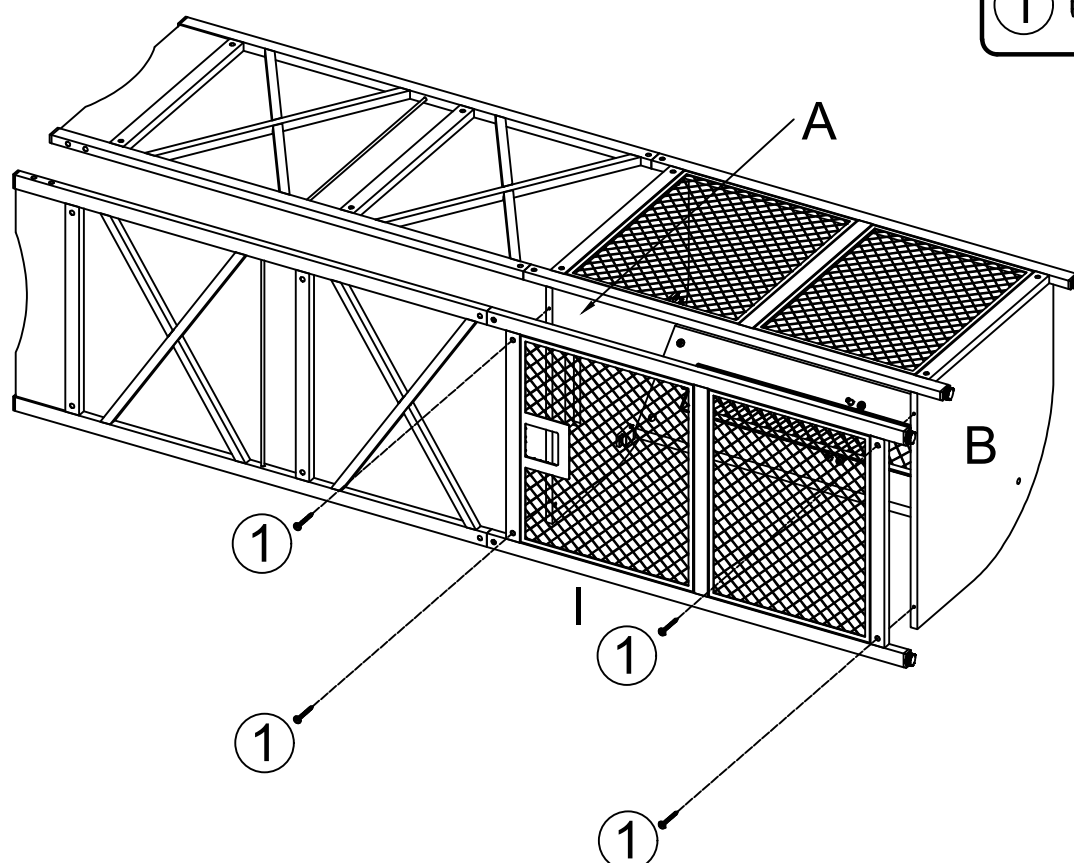


STEP 11

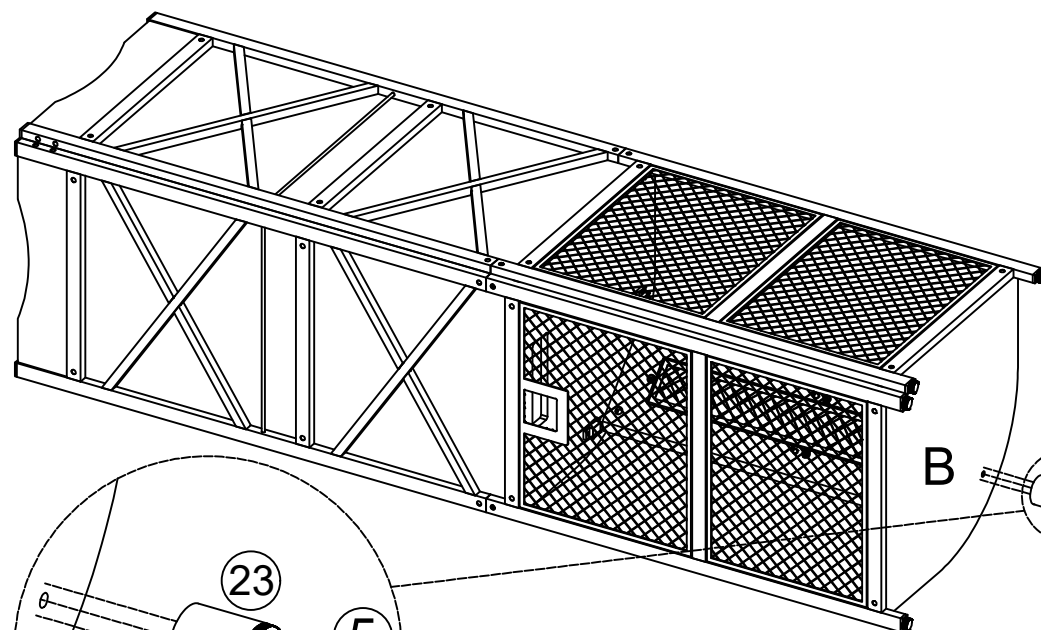

- ③  x1
- ⑤  x2
- ②③  x1

1. Use Part ③

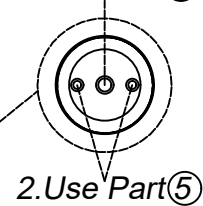


2. Use Part ⑤



There are no reserved holes on both sides , please use tools to screw directly.



STEP 12

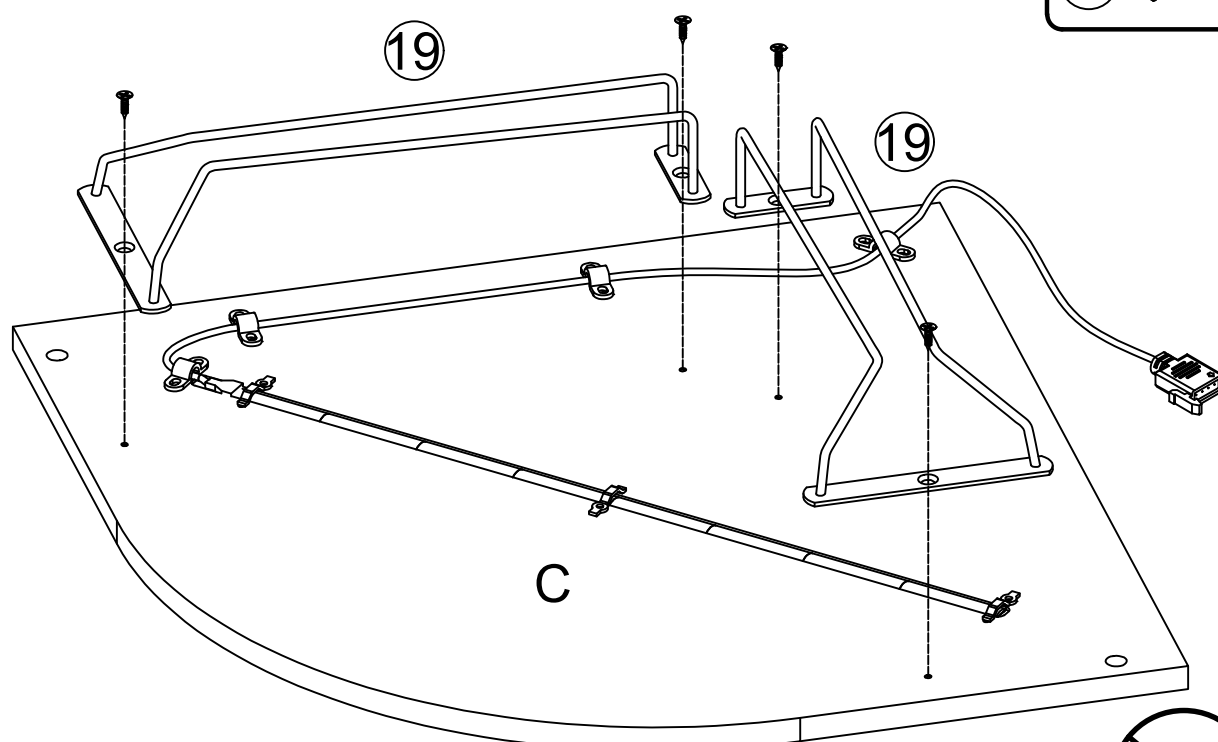




- ①⑨  x2




STEP 13

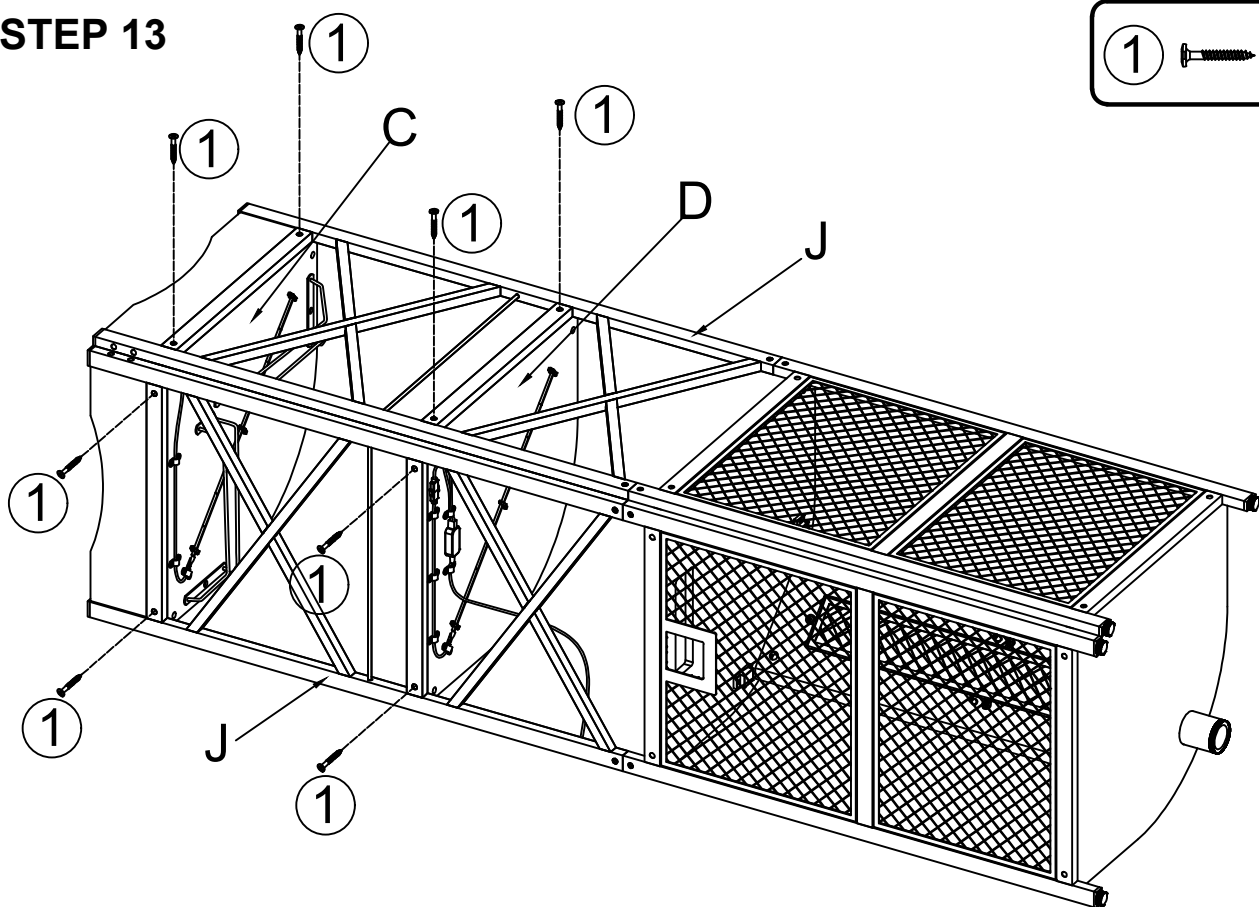


STEP 14

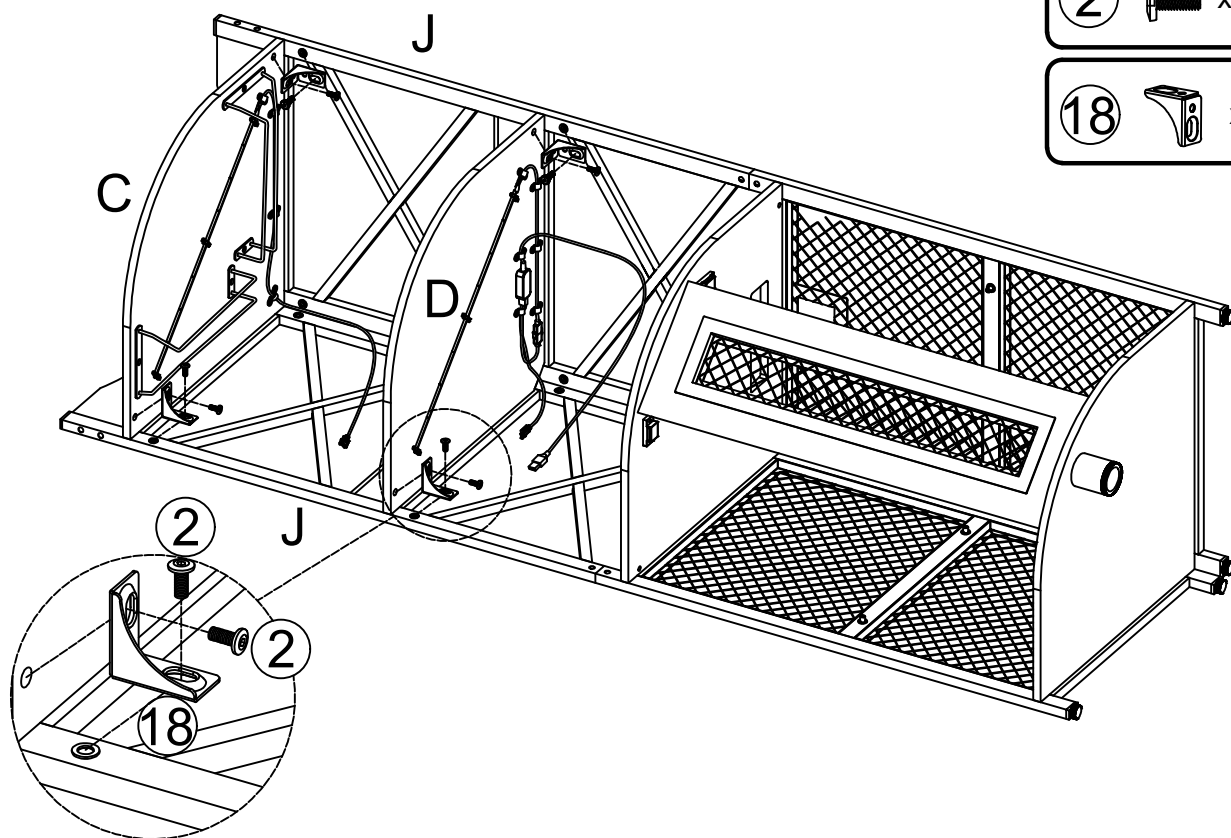


STEP 15

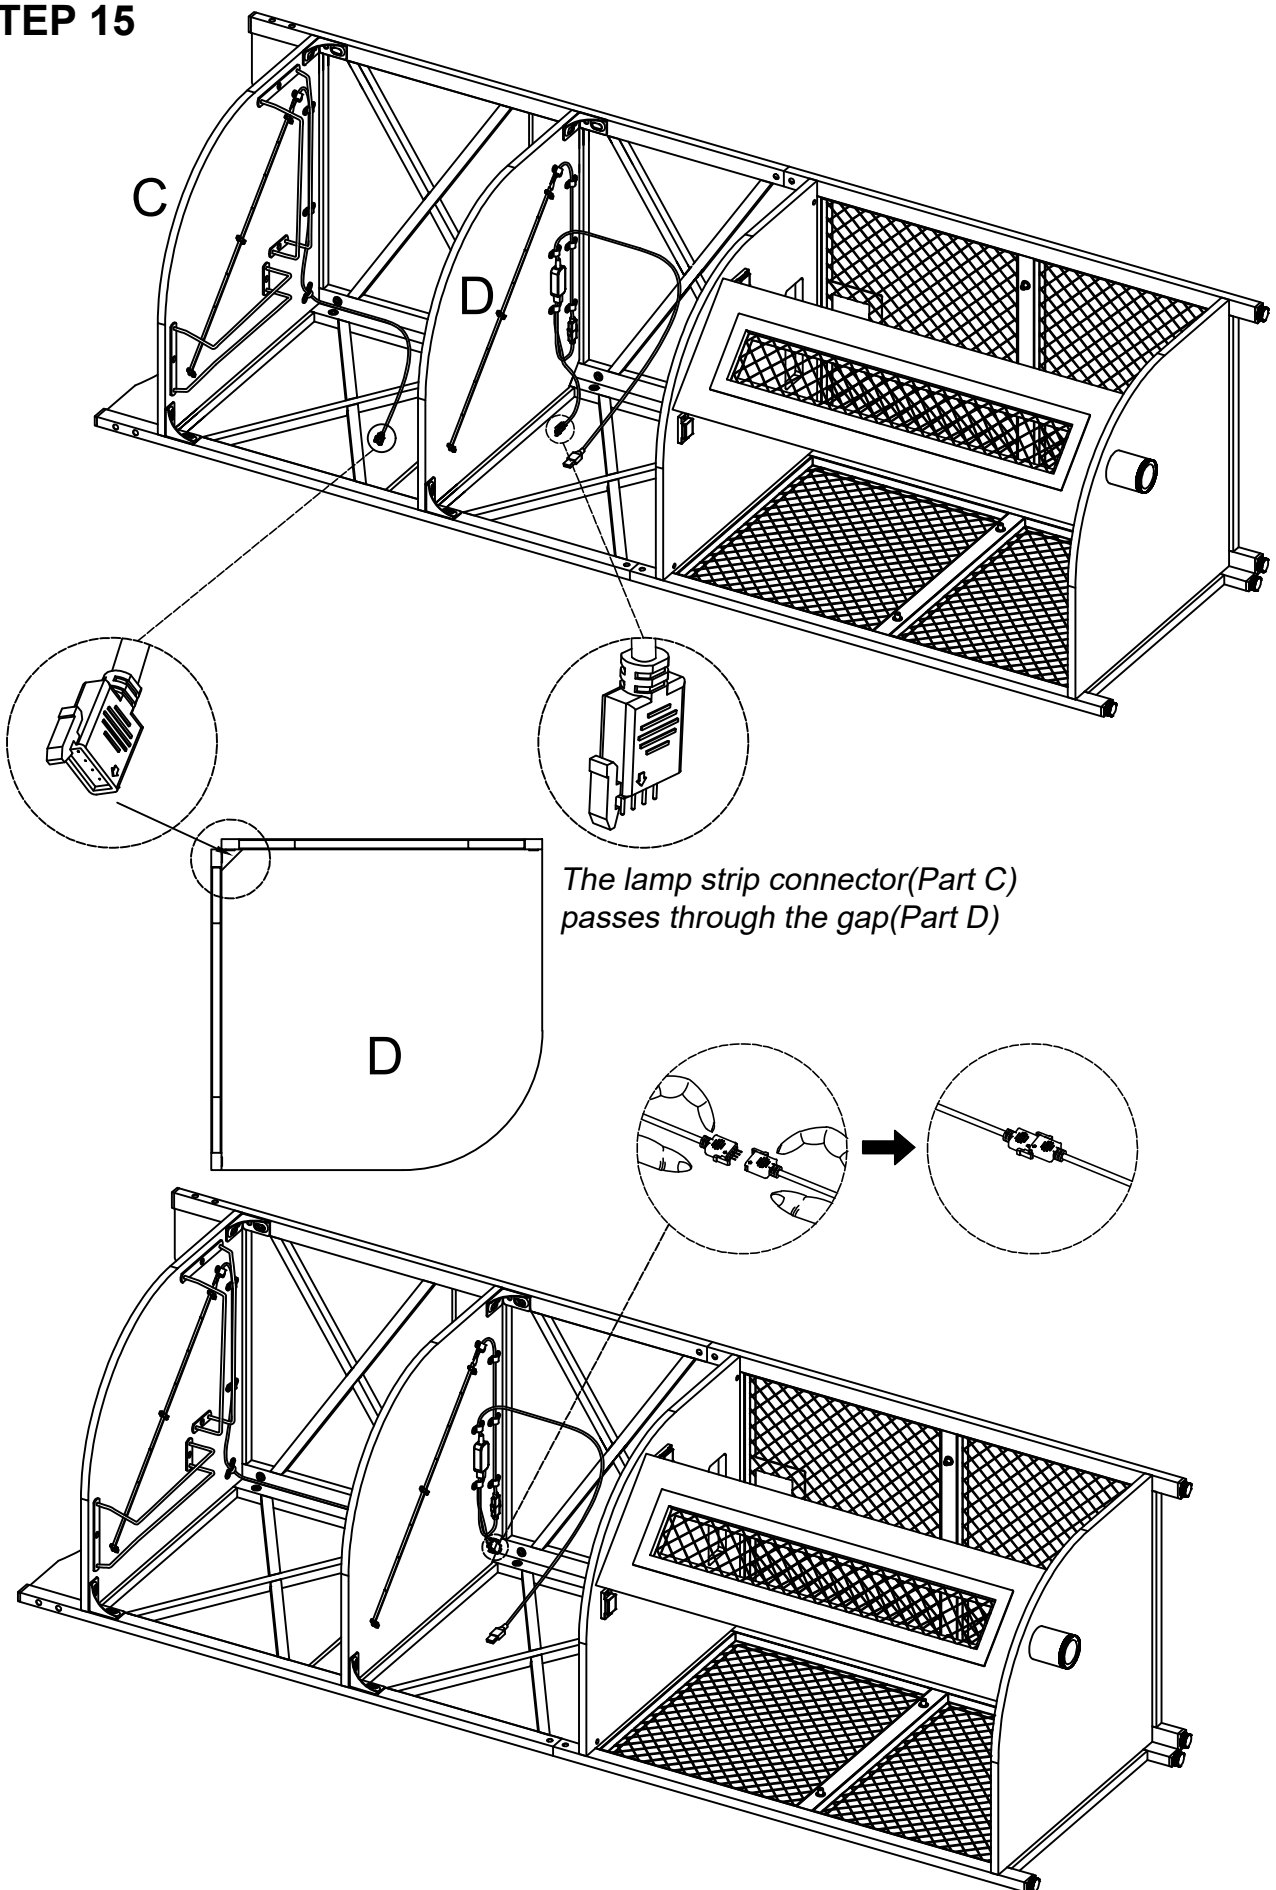




STEP 16

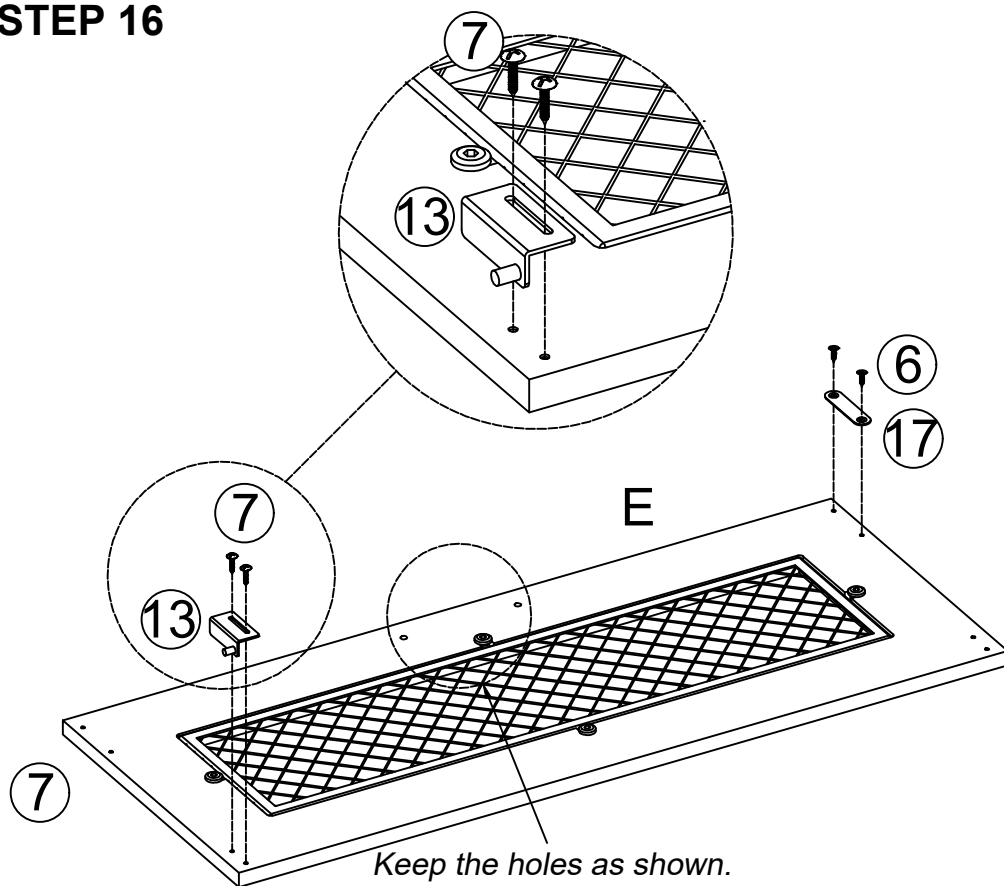

- 6  x4
- 7  x4
- 13  x1
- 14  x1
- 17  x2

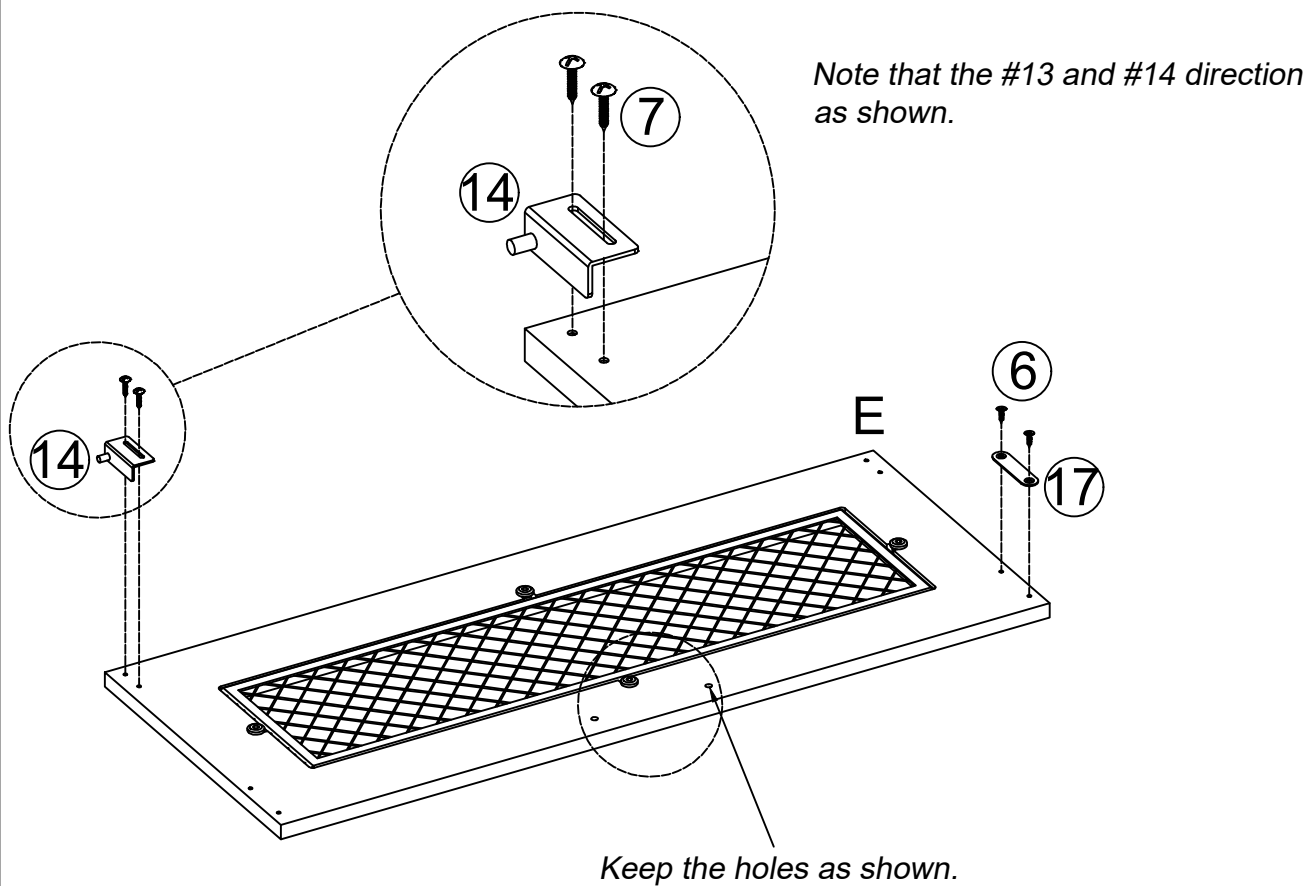





STEP 17

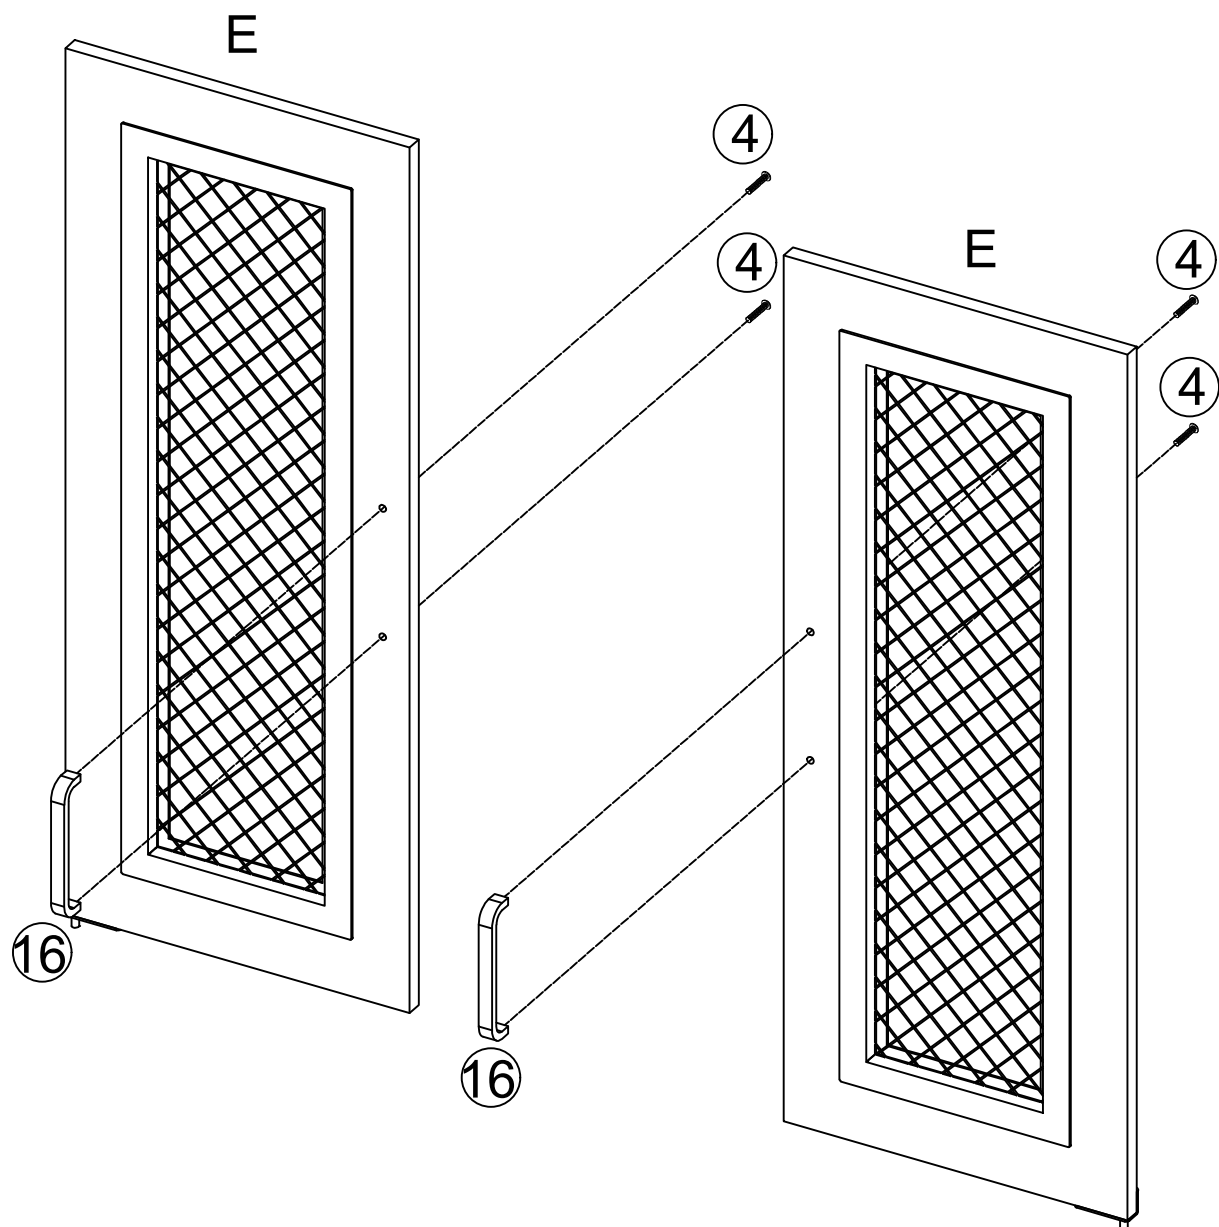


STEP 18

Step2




Note that the #7 screw is perfectly aligned with the hole in Part E.

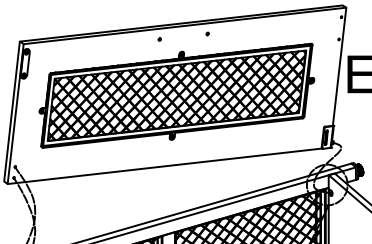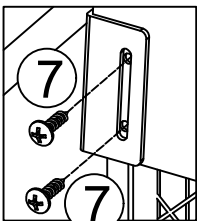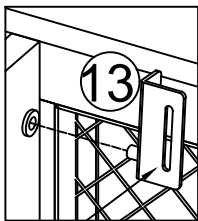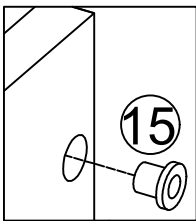


Note that the #13 direction as shown.

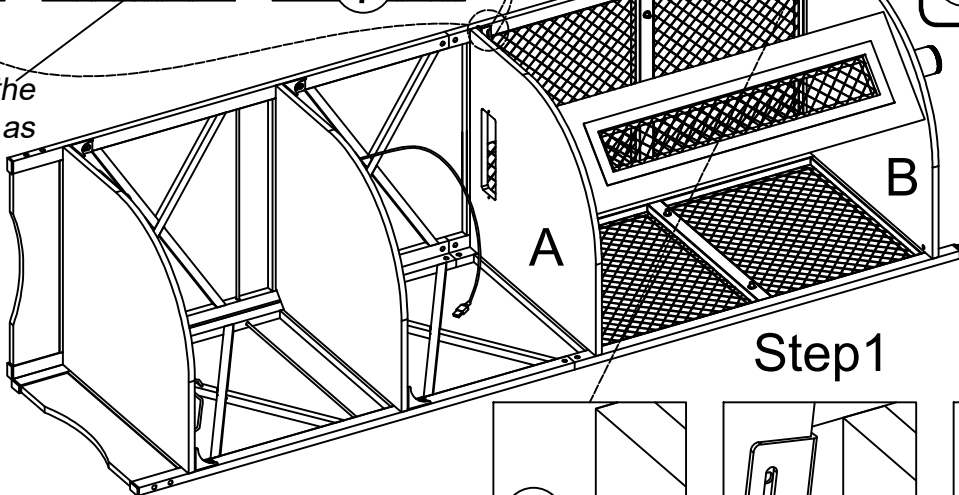




Step 1

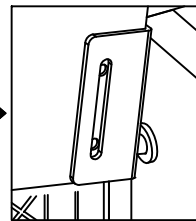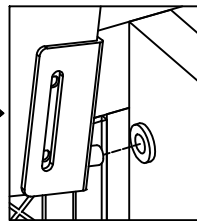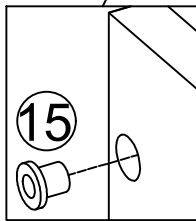




STEP 19

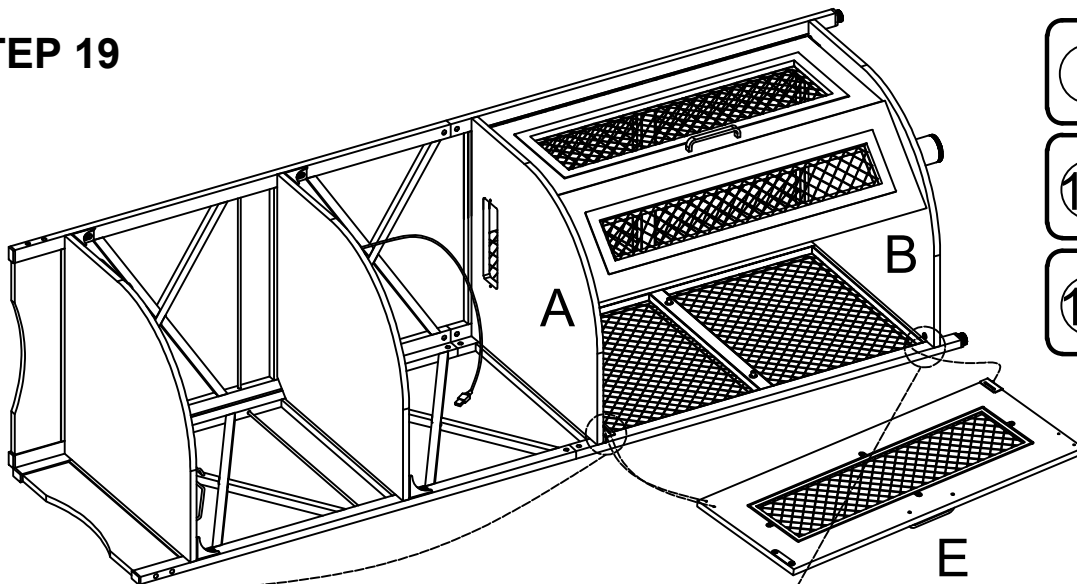

Step2

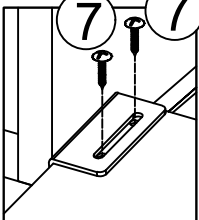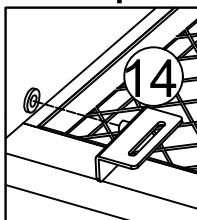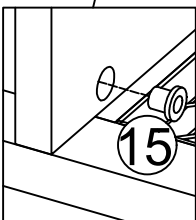


Note that the #7 screw is perfectly aligned with the hole in Part E.


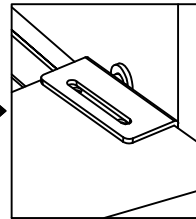
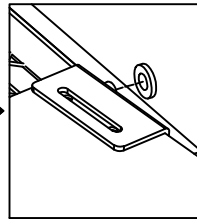
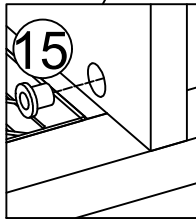


STEP 20


Put the wire shelf (K) into cabinet.

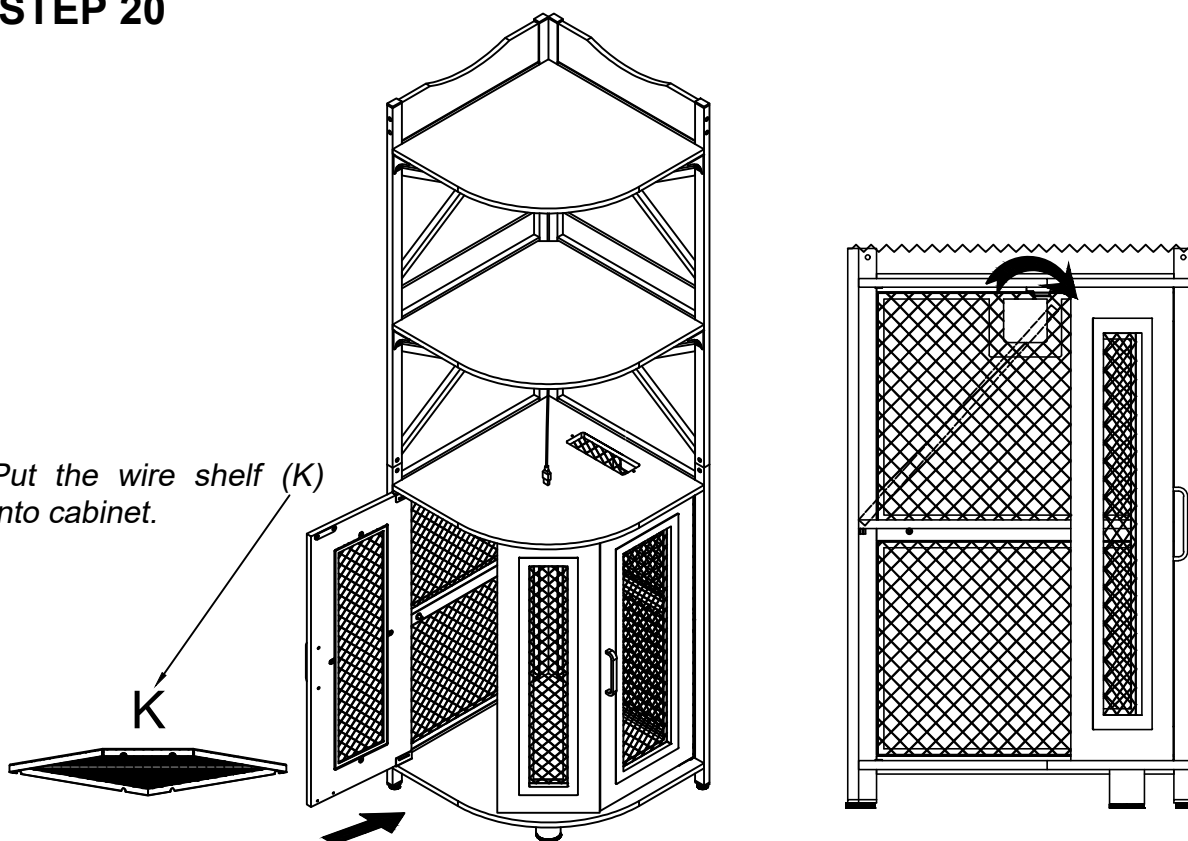

STEP 21

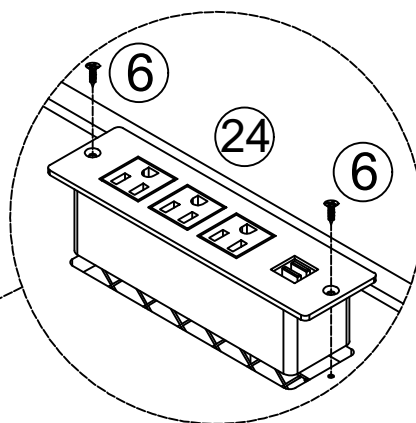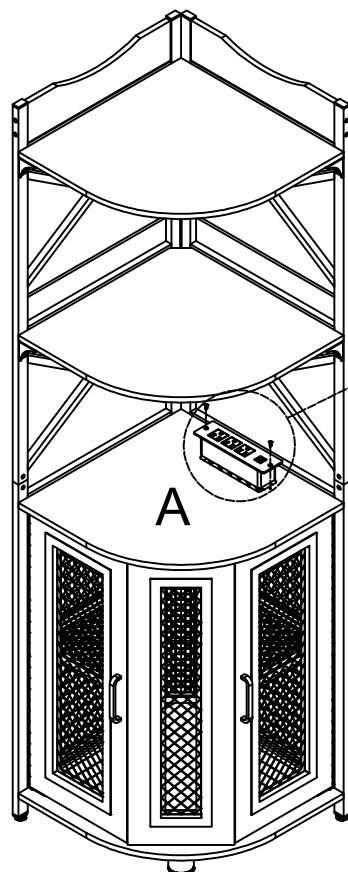


STEP 22



TIPPING RESTRAINT HARDWARE


Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

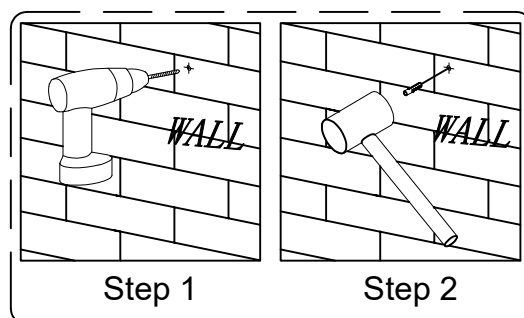

Step 1

Step 2

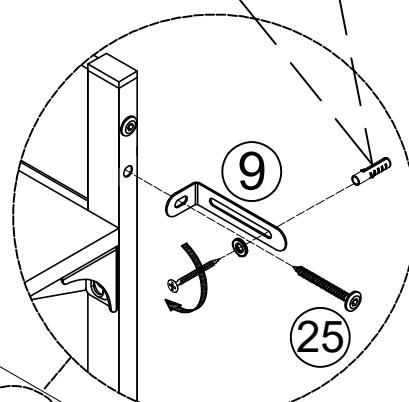

Please unscrew one Part 25 screw first, then install Part 9

