


Tel: 828-728-3261
www.americandrew.com

501-637

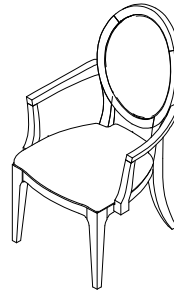

TOOLS REQUIRED:

Allen Key (supplied, part # J)
Spanner wrench (supplied, part # L)

BEFORE YOU START:


1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Place the Chair Back facing upward on a soft and flat surface. Attach chair seat to the chair back, using Flat Washer (G), Lock Washer (F), Bolt (C) for center the insert and Bolts (B). Tighten with Allen Wrench (J). (See Figure 1 & 2).

2. Attach the front leg to the front corner block of the chair seat, using Flat Washer (G), Lock Washer (F), Nuts (A) and tighten all nuts with Spanner Wrench (L). (See Figure 3).

3. Repeat the process for the other front leg.

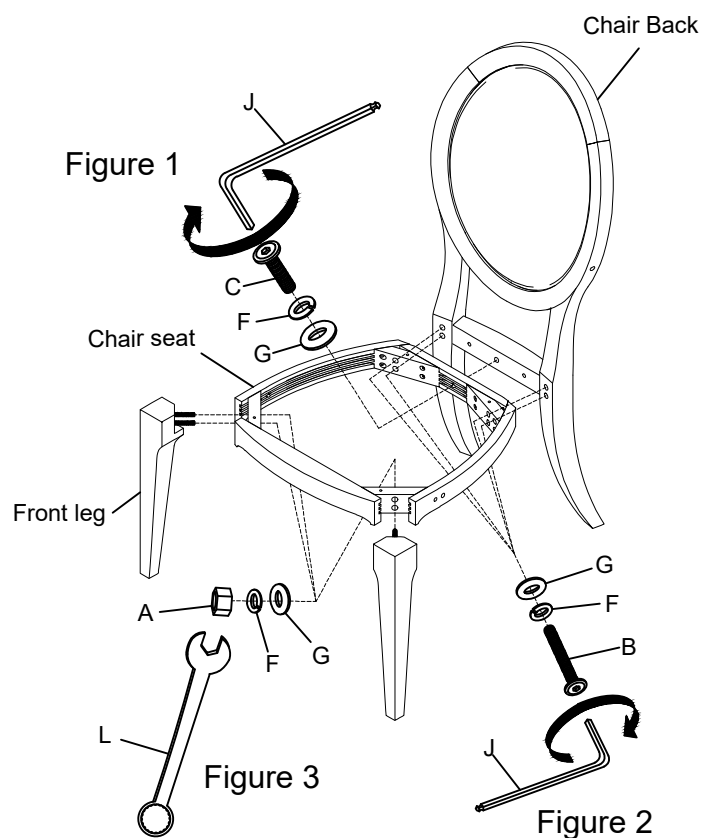


No.	Hardware List		Q'ty
A		Hex Nut Ø5/16" xD12xH6mm	4
B		Bolt Ø5/16"xL3"(Ø14)	4
C		Bolt Ø1/4"xL1-3/4"	1
D		Bolt Ø1/4"xL1-1/2"	2
E		Bolt Ø1/4"xL1-1/4"	2
F		Lock Washer Ø5/16"	11
G		Flat Washer Ø5/16"	11
H		Lock Washer Ø1/4"	2
I		Flat Washer Ø1/4"	2
J		Allen Wrench 4mm	1
L		Spanner Wrench 12mm	1

Thank you for purchasing furniture
from american drew!

Tel: 828-728-3261
www.americandrew.com

501-637

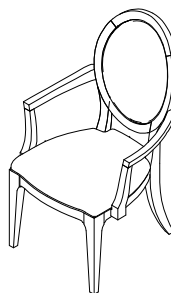

TOOLS REQUIRED:

Allen Key (supplied, part # J)
Spanner wrench (supplied, part # L)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

4. Use Bolt (D), Lock Washer (F) and Flat Washer (G) to attach the arm assembly to arm chair frame. Tighten bolt with Allen key (J). (See Figure 4)

5. Use Bolt (E), Lock Washer (H) and Flat Washer (I) to attach the arm assembly to back frame. Tighten bolt with Allen key (J). (See Figure 5)

6. Tighten all bolts and nuts before using.

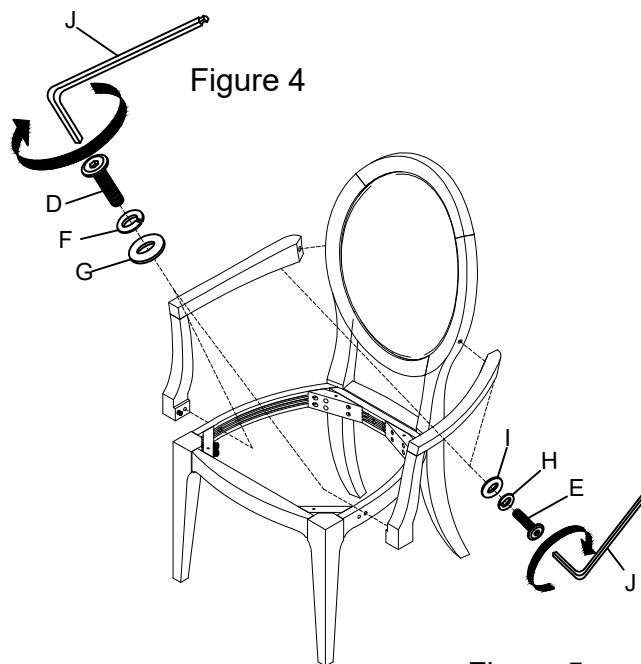


Figure 5

No.	Hardware List		Q'ty
A		Hex Nut Ø5/16" xD12xH6mm	4
B		Bolt Ø5/16"xL3"(Ø14)	4
C		Bolt Ø1/4"xL1-3/4"	1
D		Bolt Ø1/4"xL1-1/2"	2
E		Bolt Ø1/4"xL1-1/4"	2
F		Lock Washer Ø5/16"	11
G		Flat Washer Ø5/16"	11
H		Lock Washer Ø1/4"	2
I		Flat Washer Ø1/4"	2
J		Allen Wrench 4mm	1
L		Spanner Wrench 12mm	1

Thank you for purchasing furniture
from american drew!