



ASSEMBLY INSTRUCTION









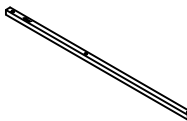


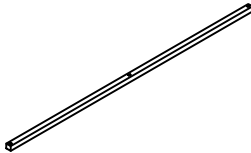
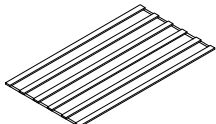
SKU:WF532069

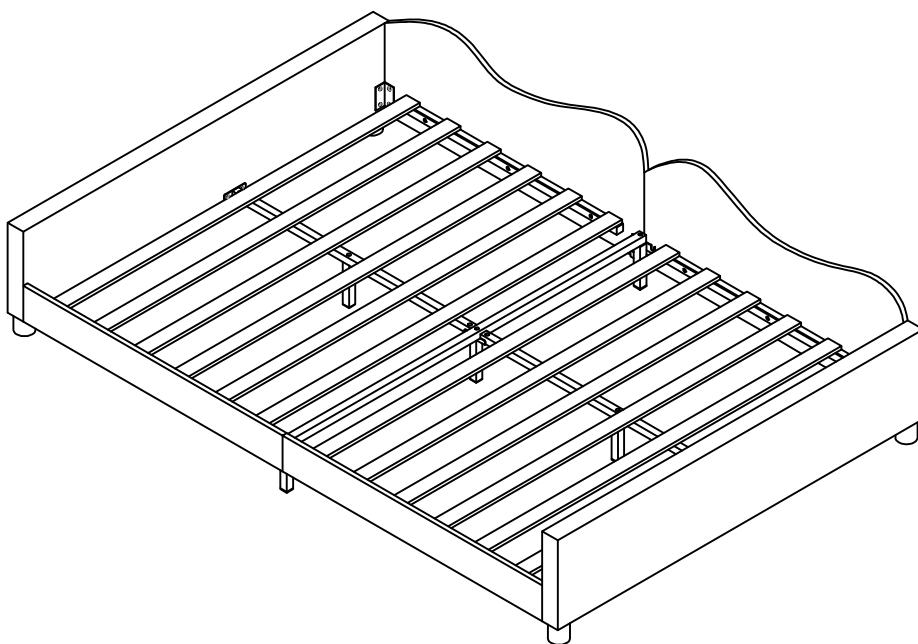

Detail View

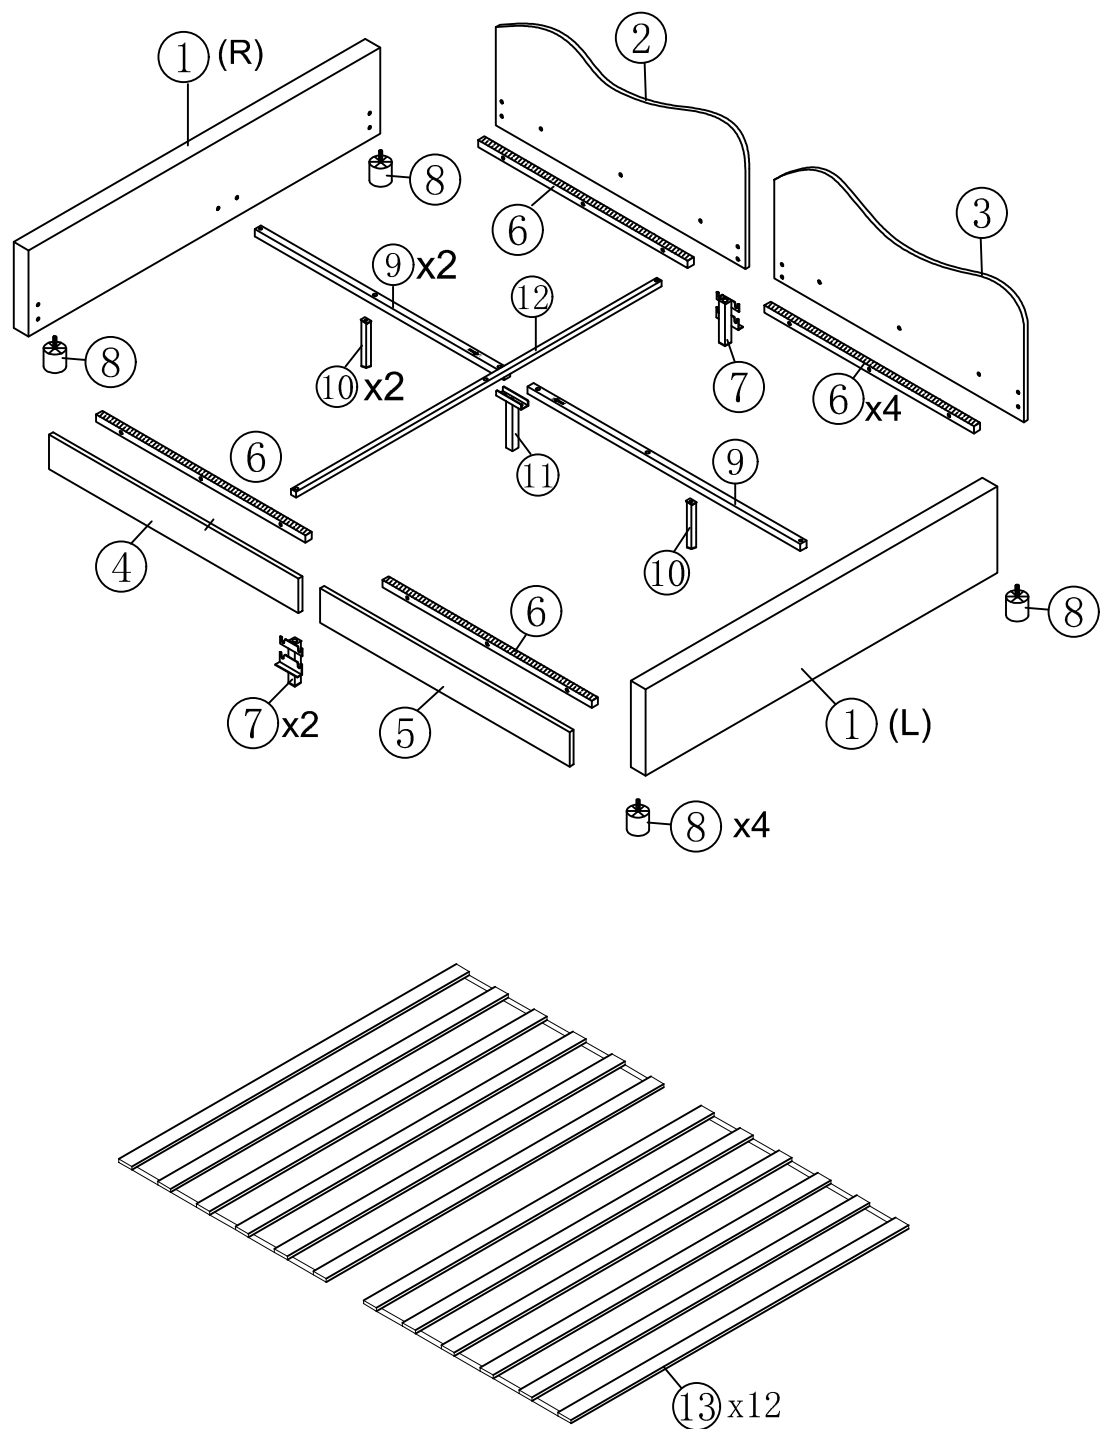







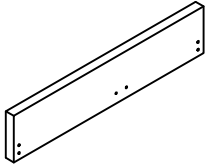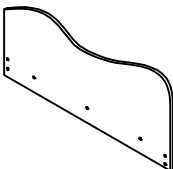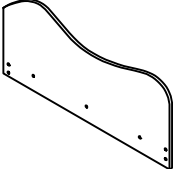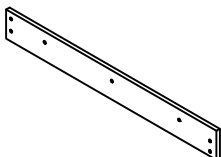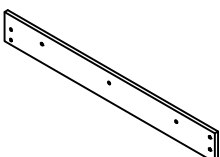PART LIST : WF532069

| | | |
|--|---|--|
| 1  Armrest-2pcs | 2  Back rest-1pc | 3  Back rest-1pc |
| 4  Side rail-1pc | 5  Side rail-1pc | 6  Side rails support bar-4pcs |
| 7  Side rails support legs-2pcs | 8  Bed legs-4pcs | 9  Center support bar-2pcs |
| 10  Middle support leg-2pcs | 11  Connected support leg-1pc | 12  Cross bar-1pc |
| 13  Slats-12pcs | | |

PART LIST : WF532069


Hardware List

| | | |
|---|--|--|
| A  20*70mm | B  Ø8*40mm | C  |
| Allen Key(1pc) | Bolts(21pcs) | Two hole iron (3pcs) |
| D  Ø8*18mm | E  75*33*33mm | F  2*28*32*86mm |
| Bolts(34pcs) | "7" Connector(4pcs) | Center support bar fittings(2pcs) |

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.


Step 1 x2

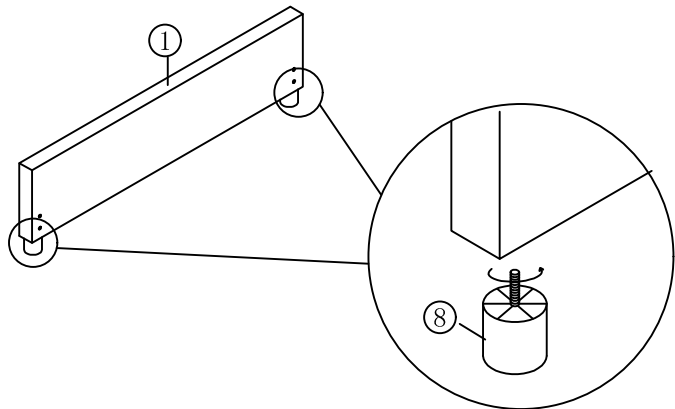

Fix the legs⑧to the Armrest① .



Step 2

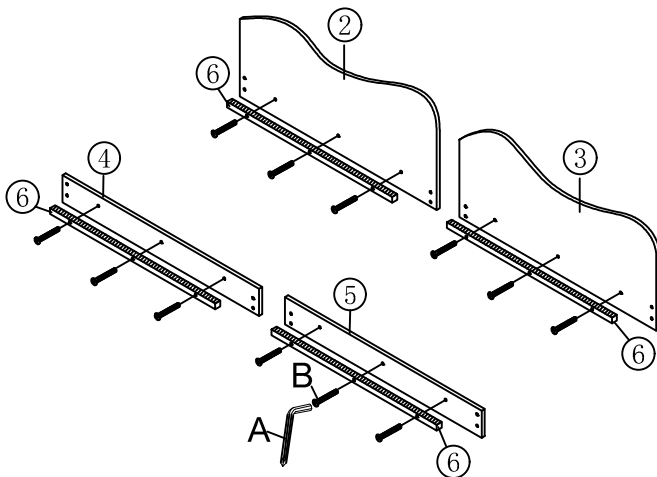
Connect Siderail support bar⑥to the Back rest ② , ③and Siderails④, ⑤ with Bolts B by using Allen key A.





| | |
|---|--|
| A Allen Key | B Bolts x 12 |
|  |  M8X40mm |

Step 3

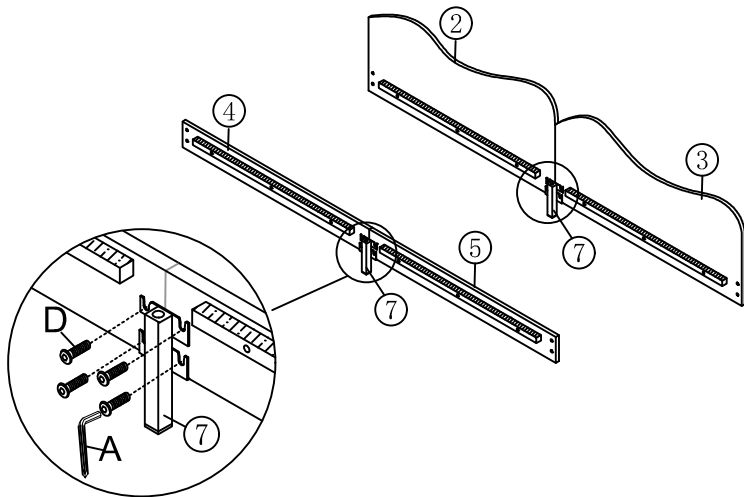
Fix the side rails support leg⑦to the Back rest ② , ③and Siderails④, ⑤ with Bolts D by using Allen key A.



| | |
|---|--|
| Allen Key | D Bolts x 8 |
|  |  M8X18mm |

Step 4

Fix the assembled side rail and Backrest ① with Bolts D and "7" Connector E by using Allen key A.

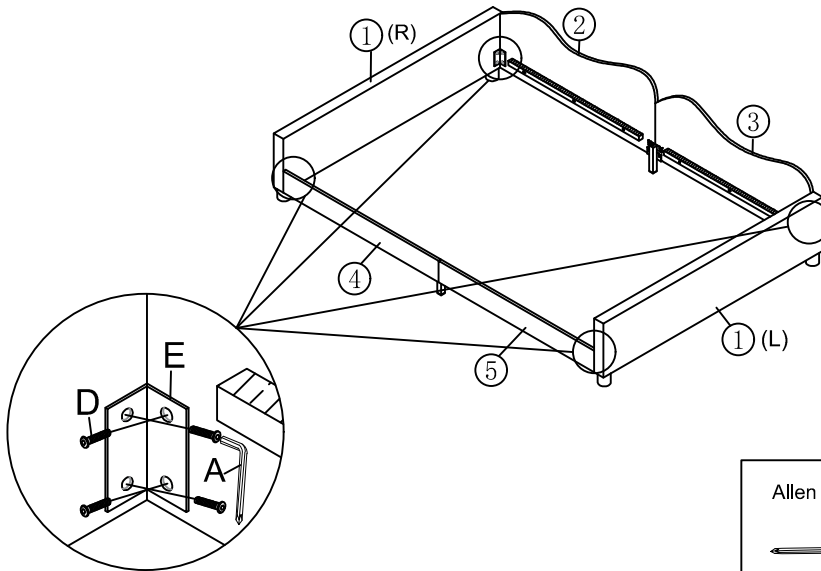


| | | |
|-----------|-------------------------|---------------------|
| Allen Key | D Bolts x 16 M8X18mm | E "7" Connector x 4 |
| | | |

Step 5

Fix the Backrest ② and ③ together with Bolts D and Two hole iron C by using Allen key A.


Fix the Backrest ② and ③ to the Armrest ① with Bolts D and Two hole C iron by using Allen key A.

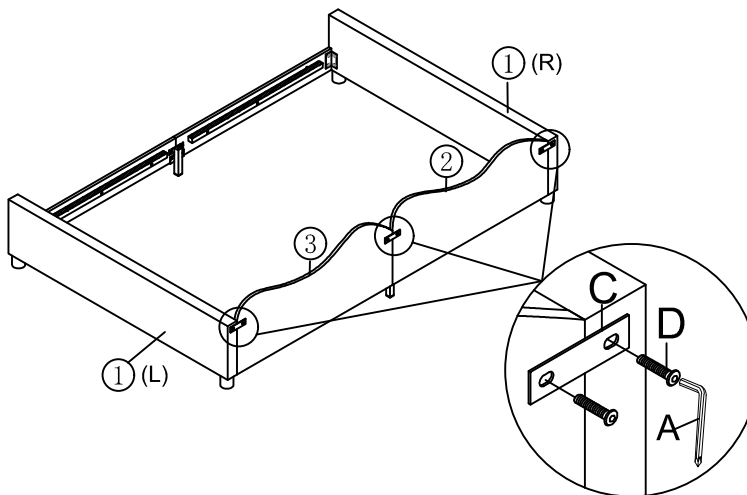

| | | |
|-----------|---------------------|------------------------|
| Allen Key | C Two hole iron x 3 | D Bolts x 6 M8X18mm |
| | | |

Step 6


Fix the Middle support leg ⑩ to the Center support bar ⑨ with Bolt B by using Allen key A. Fix connected support leg ⑪ to the Center support bar ⑨ with Bolt B by using Allen key A.

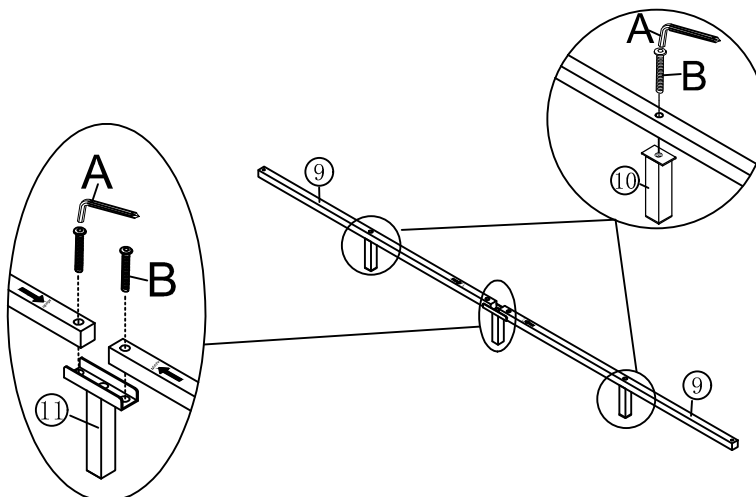

| | |
|-----------|------------------------|
| Allen Key | B Bolts x 4 M8X40mm |
| | |

Step 7


Fix the Center support bar fittings F to the Armrest ① with Bolts D by using Allen key A.

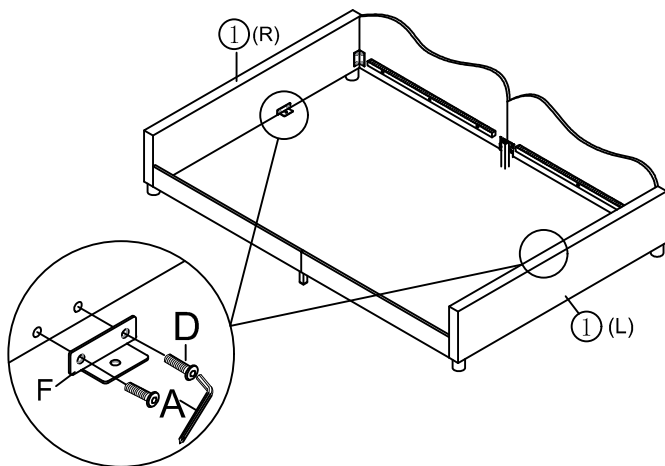

| | | |
|-----------|-------------|----------------------------------|
| Allen Key | D Bolts x 4 | F Center support bar fittings x2 |
| | M8X18mm | |

Step 8


Fix the Center support bar ⑨ to the Center support bar fittings F with Bolt B by using Allen key A.

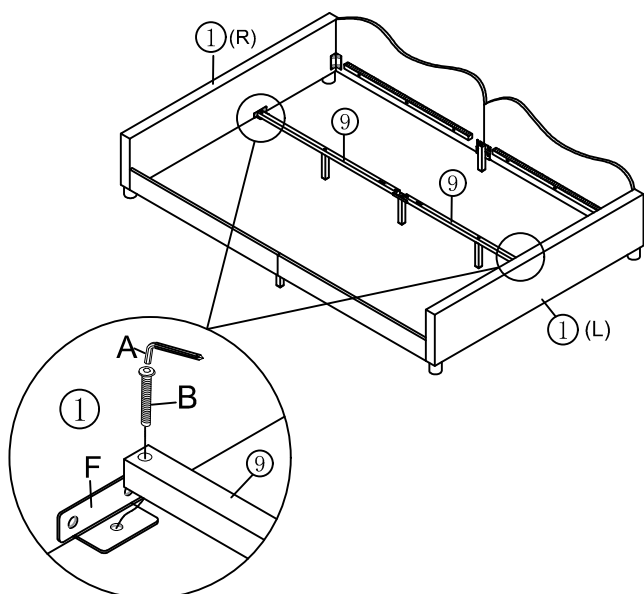

| | |
|-----------|-------------|
| Allen Key | B Bolts x 2 |
| | M8X40mm |

Step 9

Fix the cross bar ⑫ to the side rails support legs ⑦ and Connected support legs ⑪ with Bolts B by using Allen key A.

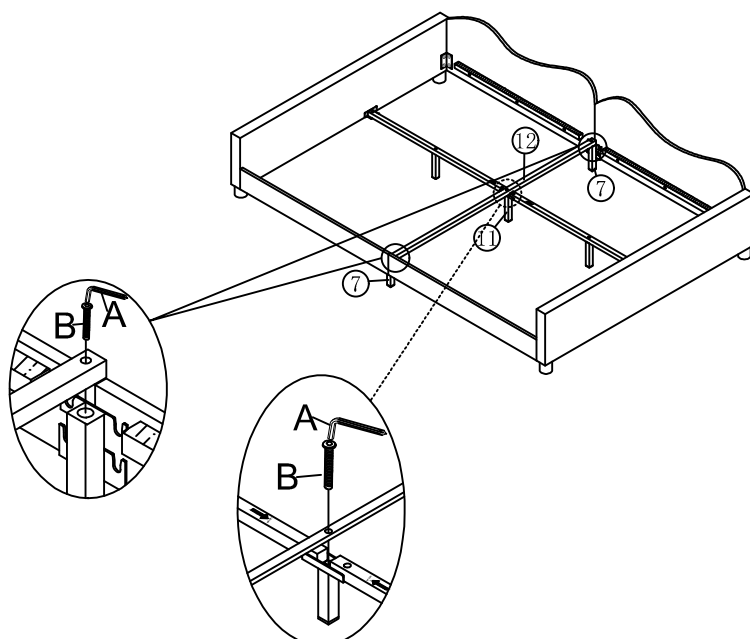

| | |
|-----------|-------------|
| Allen Key | B Bolts x 3 |
| | M8X40mm |

Step 10

Fix the slats ⑬ to the side support bar ⑥, then assembly is finished. Please enjoy your bed.

