


Assembly Instructions

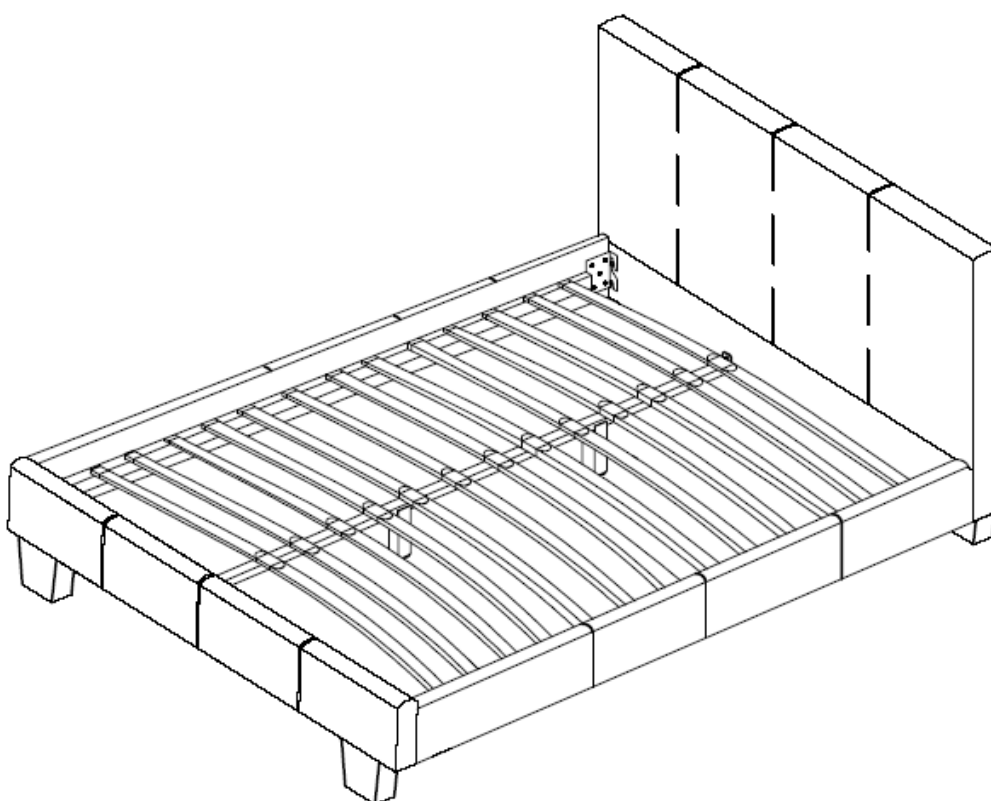


ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required for Assembly:

Allen Wrench



(Included)



2 PERSONS RECOMMENDED

Thank you for your purchase!


We hope you will enjoy your new product for many years to come. Our commitment to providing quality products does not simply end when a purchase is made. We stand behind our products and will provide any support needed in order for you to fully enjoy your purchase. Your satisfaction is the greatest recognition we could have.

Because we value your trust in our company, we will do our best to meet your service expectations. Should you have any assembly related questions, parts replacement requests, comments or suggestions, please feel free to contact us any time. To help expedite the service, please have the assembly instructions available, along with your order receipt.


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

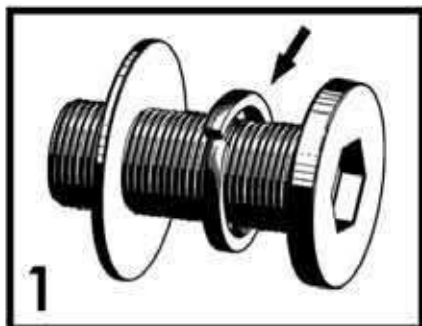


1 When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

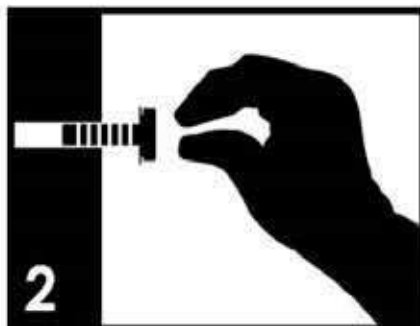

2 Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

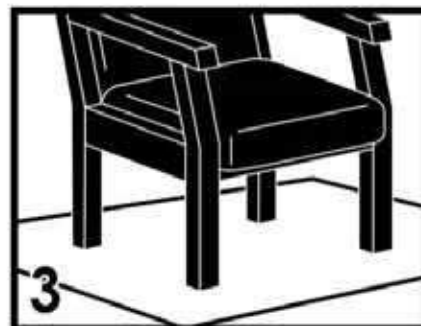


3 Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

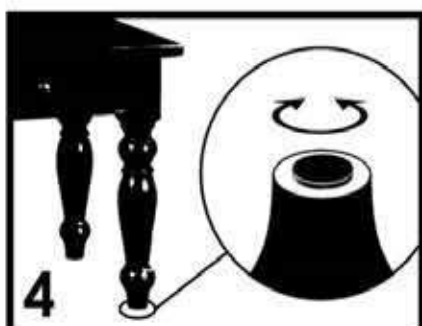

4 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.



5 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

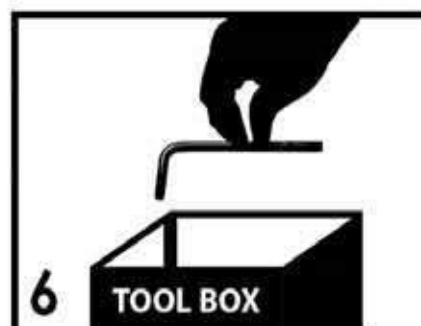

6 Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 3 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

MD

Parts List

Hardware List

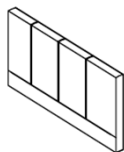


#1 x 1 pc
Headboard




#A x 8 pcs
Bolt 5/16"x1"



#2 x 2 pcs
Side Rail



#B x 6 pcs
Bolt 5/16"x1-5/8"

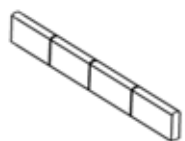

#3 x 1 pc
Footboard



#C x 8 pcs
Bolt 5/16"x3-7/8"



#4 x 1 pc
Support Rail



#D x 22 pcs
Flat Washer



#5 x 4 pcs
Foot




#E x 22 pcs
Lock Washer




#6 x 26 pcs
Slat



#F x 13 pcs
Center Connector



#7 x 2 pcs
Slat Support Leg



#G x 26 pcs
End Cap



#H x 1 pc
Allen Wrench




Due to the size and/or weight of this product, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling the product to avoid any potential injury and/or damage.



- I. Align the two feet (#5) onto the pre-drilled holes on the bottom corners of the headboard (#1).
- II. Prepare 4 bolt assemblies by inserting FIRST the lock washer (#E) onto the bolt (#C) and then the flat washer (#D) onto the SAME bolt (#C), in that order.
- III. Insert the bolt assemblies through the holes of the feet (#5) and secure those bolts using the Allen wrench (#H) to lock them with the headboard (#1).
- IV. Repeat the process above to assemble the remaining two feet (#5) onto the footboard (#3).


#C x 8 pcs
#D x 8 pcs
#E x 8 pcs

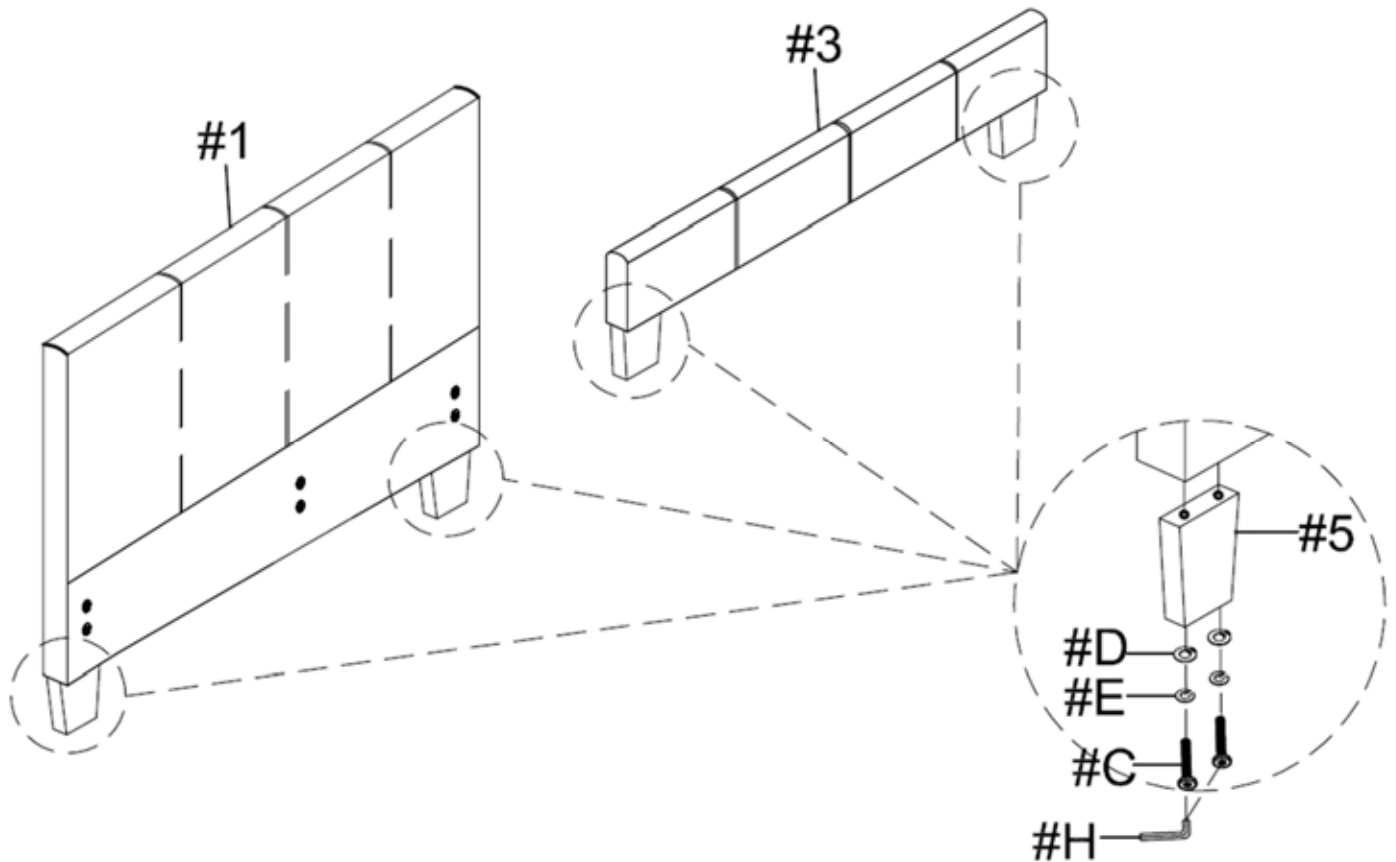

Turn right (clockwise) to tighten



#A x 8 pcs
#D x 8 pcs
#E x 8 pcs

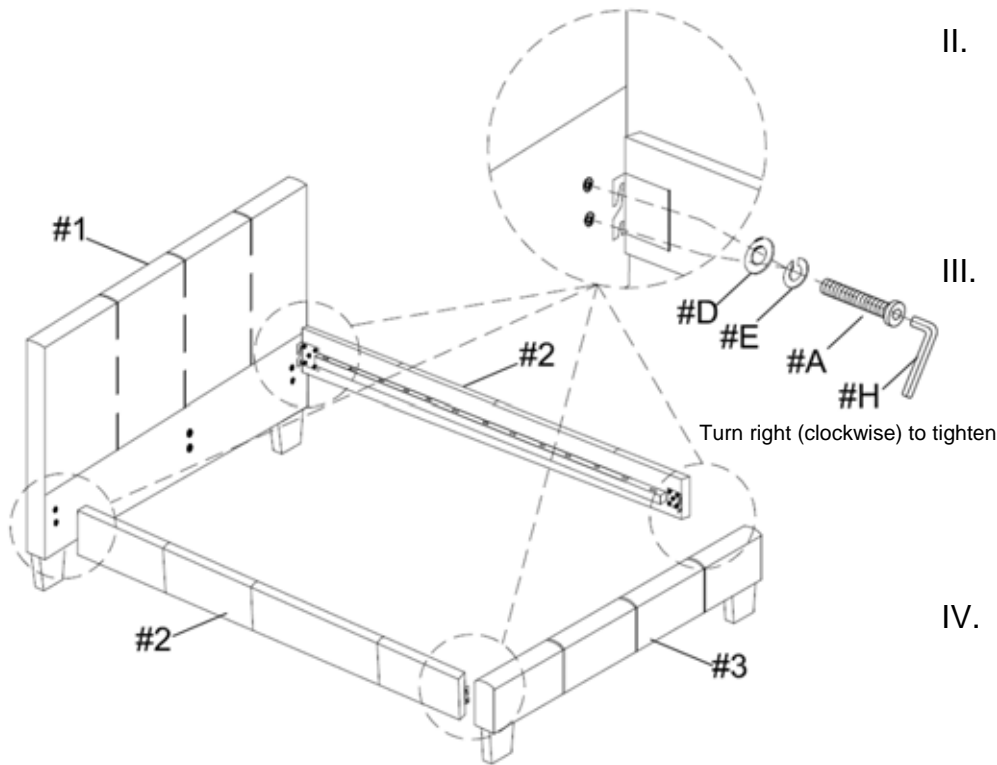


- I. Prepare 4 bolt assemblies by inserting FIRST the lock washer (#E) onto the bolt (#A) and then the flat washer (#D) onto the SAME bolt (#A), in that order.
- II. Insert the bolt assemblies through the right and left side of the pre-drilled holes of the headboard (#1) using the Allen wrench (#H) but expose about 1/2" of the bolts' threads.
- III. Mount the brackets on the side rails (#2) onto the bolts (#A) on each side of the headboard (#1). Make sure all the washers are in the FRONT of the brackets. Use the Allen wrench (#H) to further tighten the bolts to secure the two parts together.
- IV. Repeat the process above to assemble the other ends of the two side rails (#2) onto the footboard (#3).



#B x 2 pcs
#D x 2 pcs
#E x 2 pcs


- I. Align the two slat support legs (#7) with the pre-drilled holes of the support rail (#4).
- II. Prepare 2 bolt assemblies by inserting FIRST the lock washer (#E) onto the bolt (#B) and then the flat washer (#D) onto the SAME bolt (#B), in that order.
- III. Insert the two bolt assemblies through the pre-drilled holes of the support rail (#4) using the Allen wrench (#H) to lock them with the slat support legs (#7).

Adjust the leveler on the slat support legs (#7) according to the ground level on Step 4.

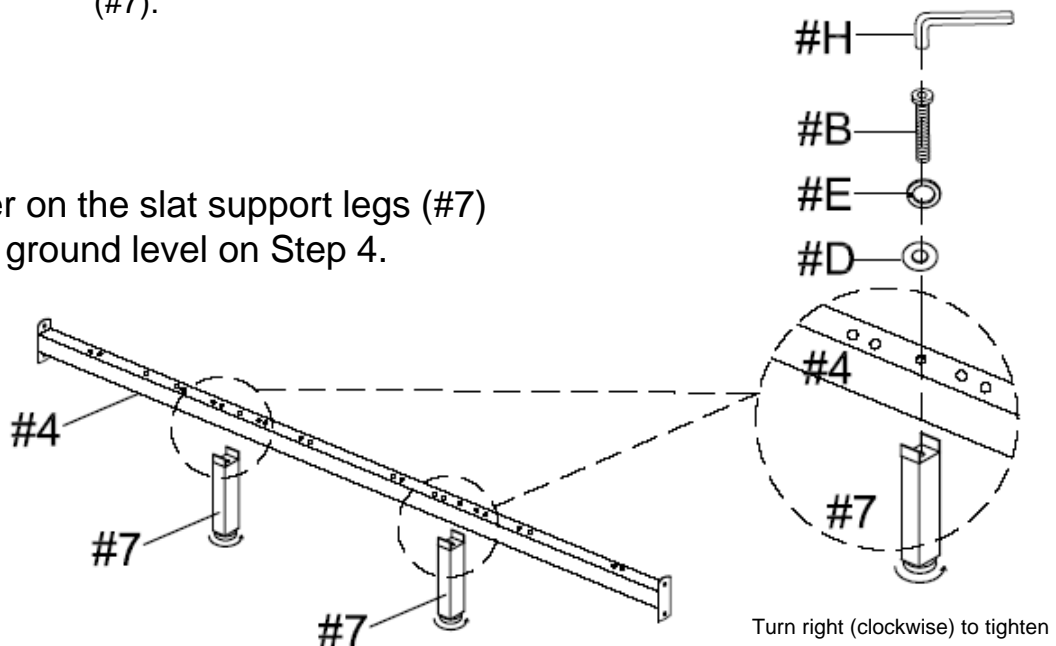



#B x 4 pcs
#D x 4 pcs
#E x 4 pcs

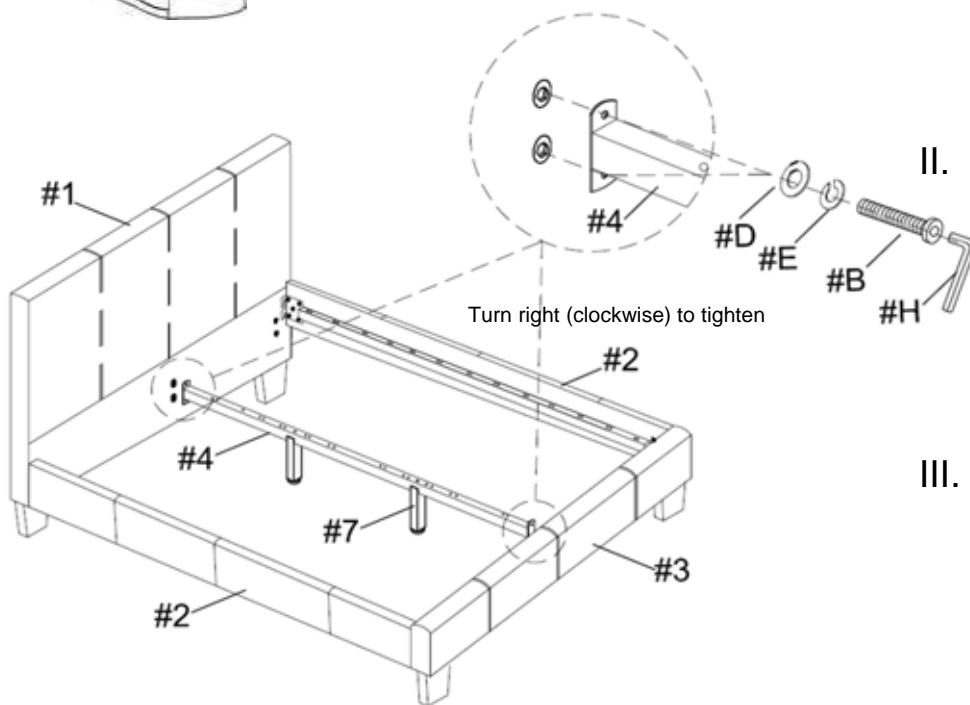

- I. Align the assembled support rail (#4) with the pre-drilled holes on the center of the headboard (#1) and the footboard (#3).
- II. Prepare 4 bolt assemblies by inserting FIRST the lock washer (#E) onto the bolt (#B) and then the flat washer (#D) onto the SAME bolt (#B), in that order.
- III. Insert the 4 bolt assemblies through the brackets of the support rail (#4) using the Allen wrench (#H) to lock them with the headboard (#1) and the footboard (#3).



Adjust the leveler according to the ground level. To lower or to raise the slat support leg, turn the leveler clockwise or counterclockwise, respectively.



Note: The correct position of the bed slats should be arcing UPWARD when placing on the rails.


#F x 13 pcs
#G x 26 pcs

- I. Prepare a complete bed slat by inserting one center plastic connector (#F) onto the two slats (#6). Then insert two end caps (#G) onto the opposite ends of the same slats (#6).
- II. Align the end caps (#G) on a completed bed slat with the pre-drilled holes on each side of the side rails (#2) and snap down both end caps (#G) into place. Then snap down the center plastic connector (#F) into the support rail (#4).
- III. Repeat the above process to assemble the remaining bed slats.

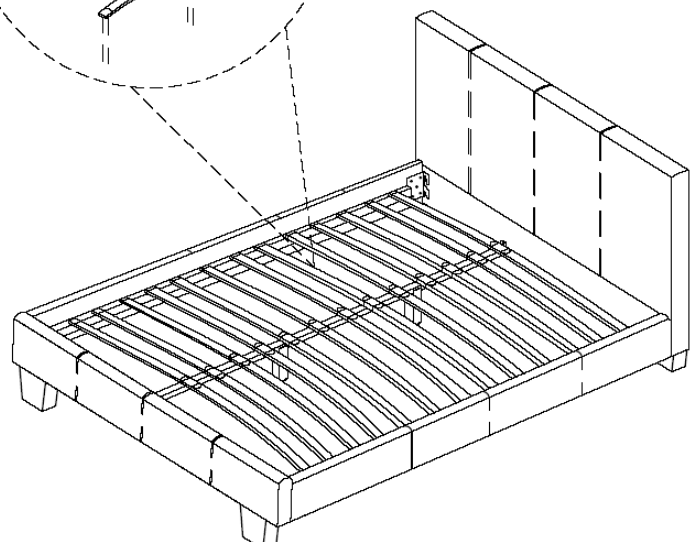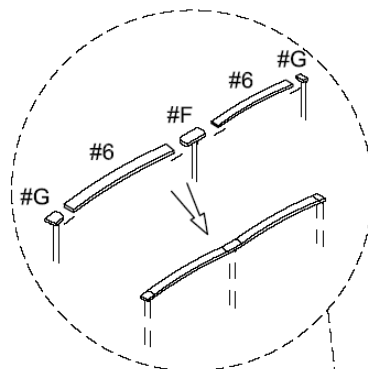

ASSEMBLY IS COMPLETED

Assembly Instructions

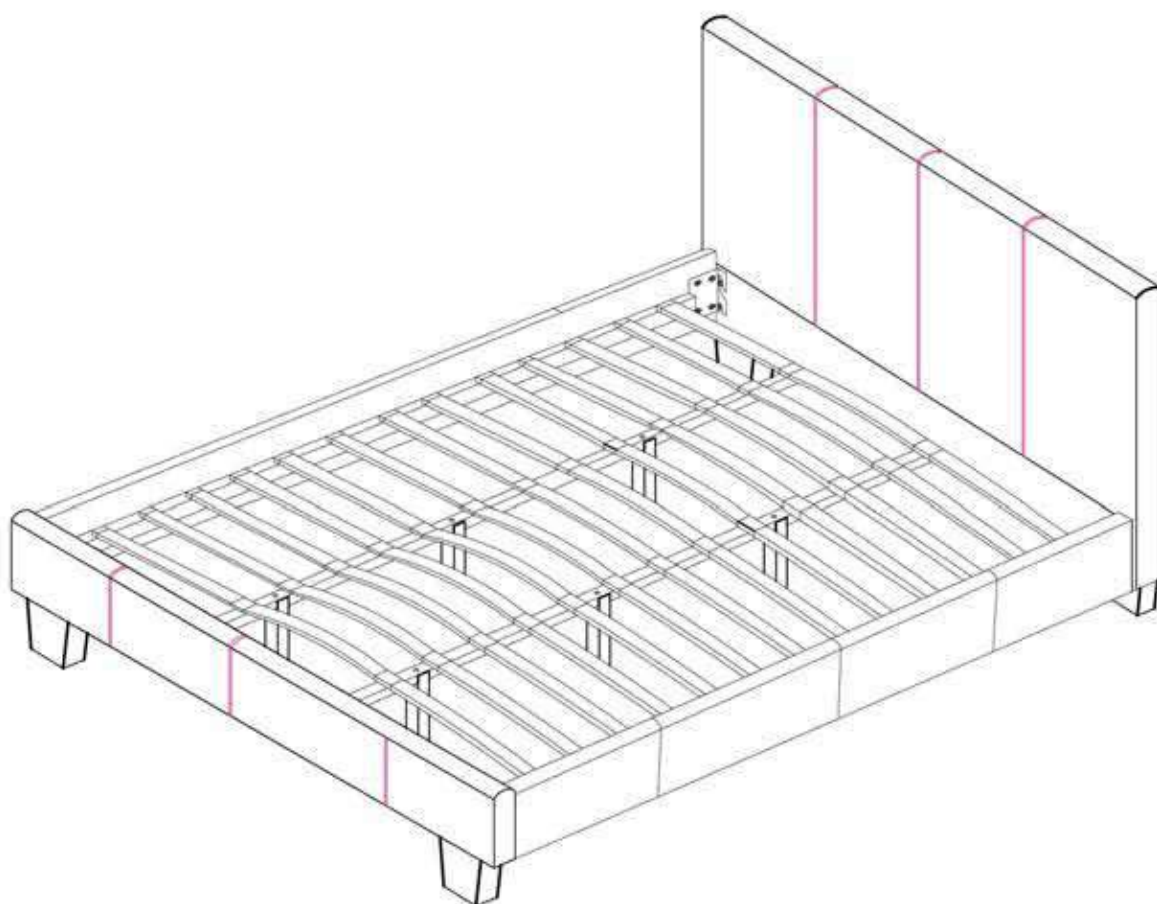

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench




2 PERSONS RECOMMENDED

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

BASIC ASSEMBLY TECHNIQUES

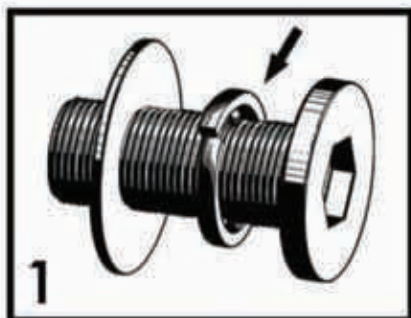


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.



Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

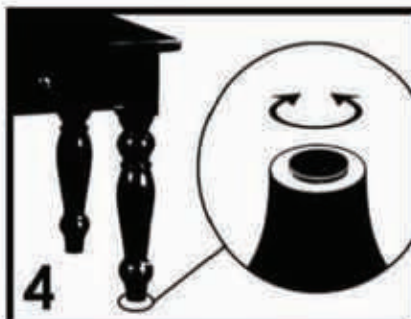

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

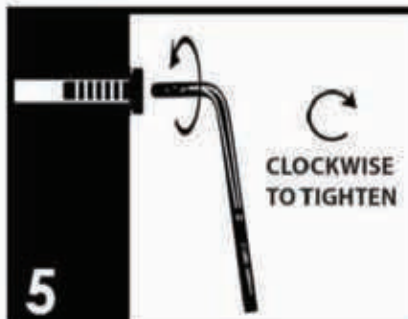

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.



Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



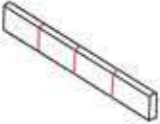




ALL RIGHTS RESERVED.











Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Parts List

	#1 x 1pc Headboard
	#2 x 2pcs Side Rail
	#3 x 1pc Footboard
	#4 x 2pcs Support Rail
	#5 x 4pcs HB/FB Leg
	#6 x39pcs Slat
	#7x6pcs $\Phi 1/4"$ Support Leg-250x30x20mm


Hardware List

	#A x 8pcs BOLT 5/16"X1"
	#B x 14pcs BOLT 5/16"X1-5/8"
	#Cx 8pcs BOLT 5/16"X 3-7/8"
	#D x 30pcs Lock Washer
	#E x 30pcs Flat Washer
	#F x 26pcs Center Connector
	#Gx 26pcs End Cap
	#Hx 1pc Allen Wrench M5




- I. Align the HB/FB legs to the pre-drilled holes located under the headboard (#1) and footboard (#3).
- II. Prepare 8 bolt assemblies by FIRST inserting the lock washer (#D) onto the bolt (#C) then the flat washer (#E) onto that SAME bolt (#C). Secure using the Allen wrench (#H).

#Cx 8pcs
#Dx 8pcs
#Ex 8pcs

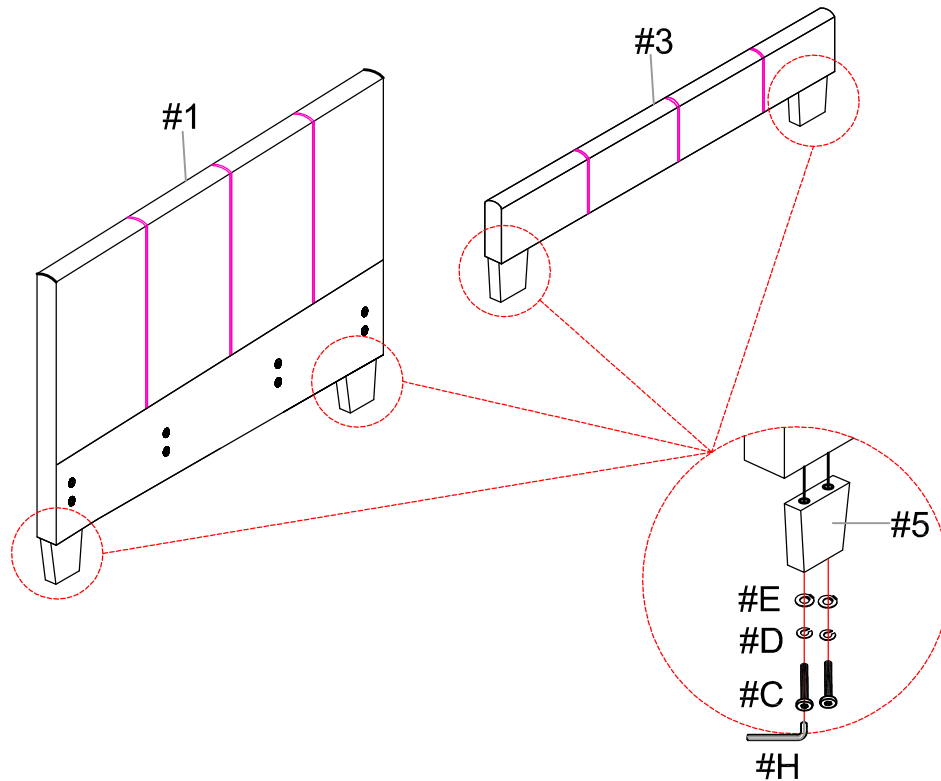

- I. Align the hooks on the side rails (#2) to the pre-drilled holes on the headboard (#1) and footboard (#3).
- II. Prepare 8 bolt assemblies by FIRST inserting the lock washer (#D) onto the bolt (#A) then the flat washer (#E) onto that SAME bolt (#A). Secure using the Allen wrench (#H).



#Ax 8pcs
#Dx 8pcs
#Ex 8pcs

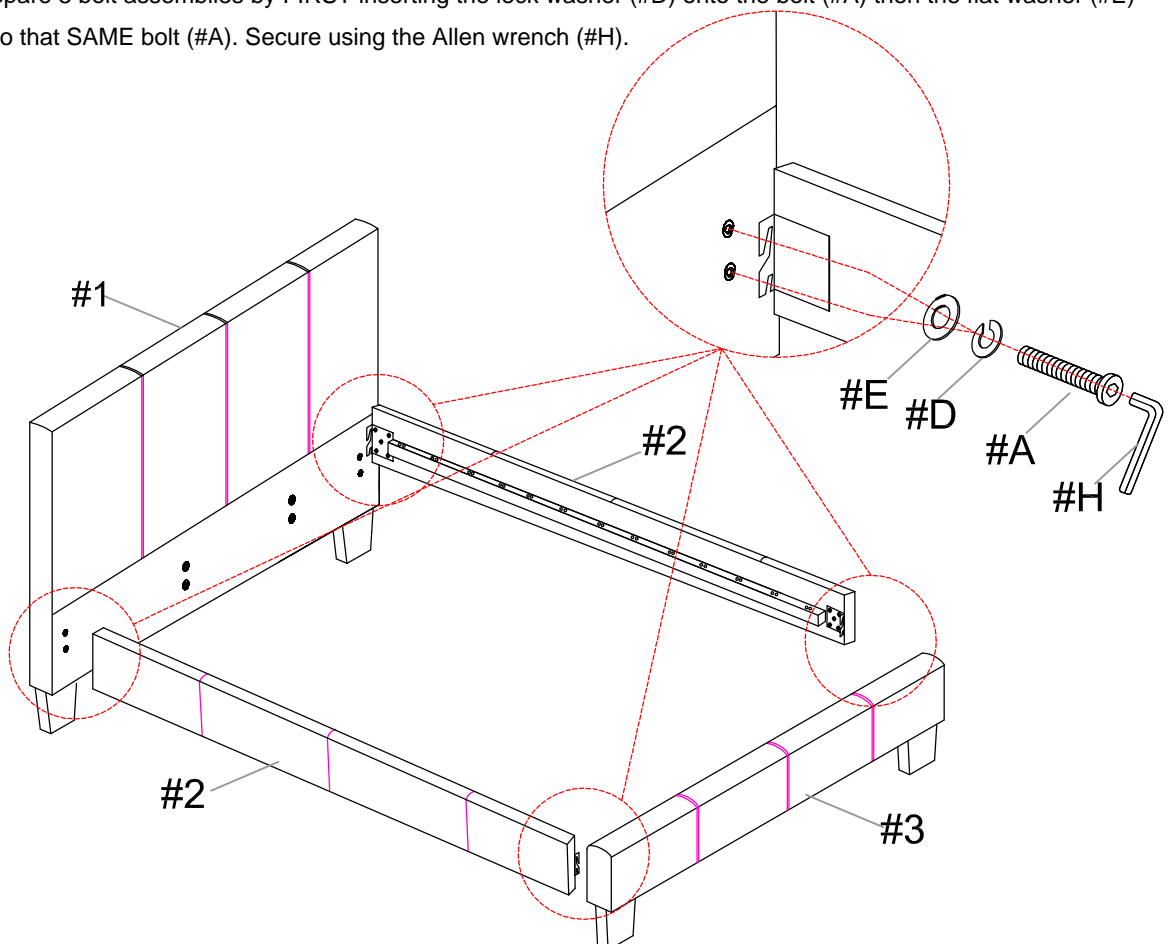




#B x 6pcs
#D x 6pcs
#E x 6pcs

- I. Align the support rail legs (#7) to the single pre-drilled holes on the support rail (#4).
- II. Prepare 3 bolt assemblies by FIRST inserting the lock washer (#D) onto the bolt (#B) then the flat washer (#E) onto that SAME bolt (#B). Secure using the Allen wrench (#H). Repeat process on the second support rail.

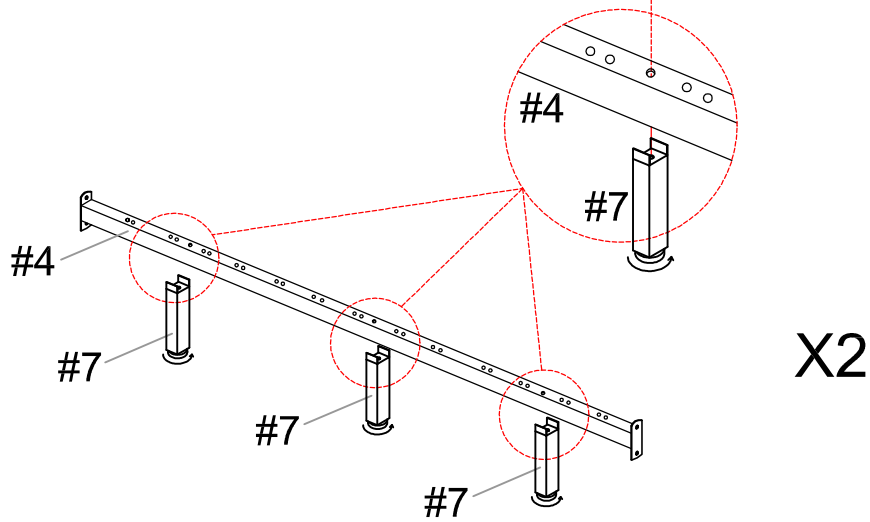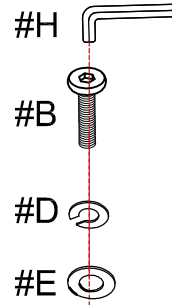

#B x 8pcs
#D x 8pcs
#E x 8pcs

- I. Align the support rails (#4) to the pre-drilled holes located on the center of the headboard (#1) and footboard (#3).
- II. Prepare 4 bolt assemblies by FIRST inserting the lock washer (#D) onto the bolt (#B) then the flat washer (#E) onto that SAME bolt (#B). Secure using the Allen wrench (#H). Repeat process on the second support rail.


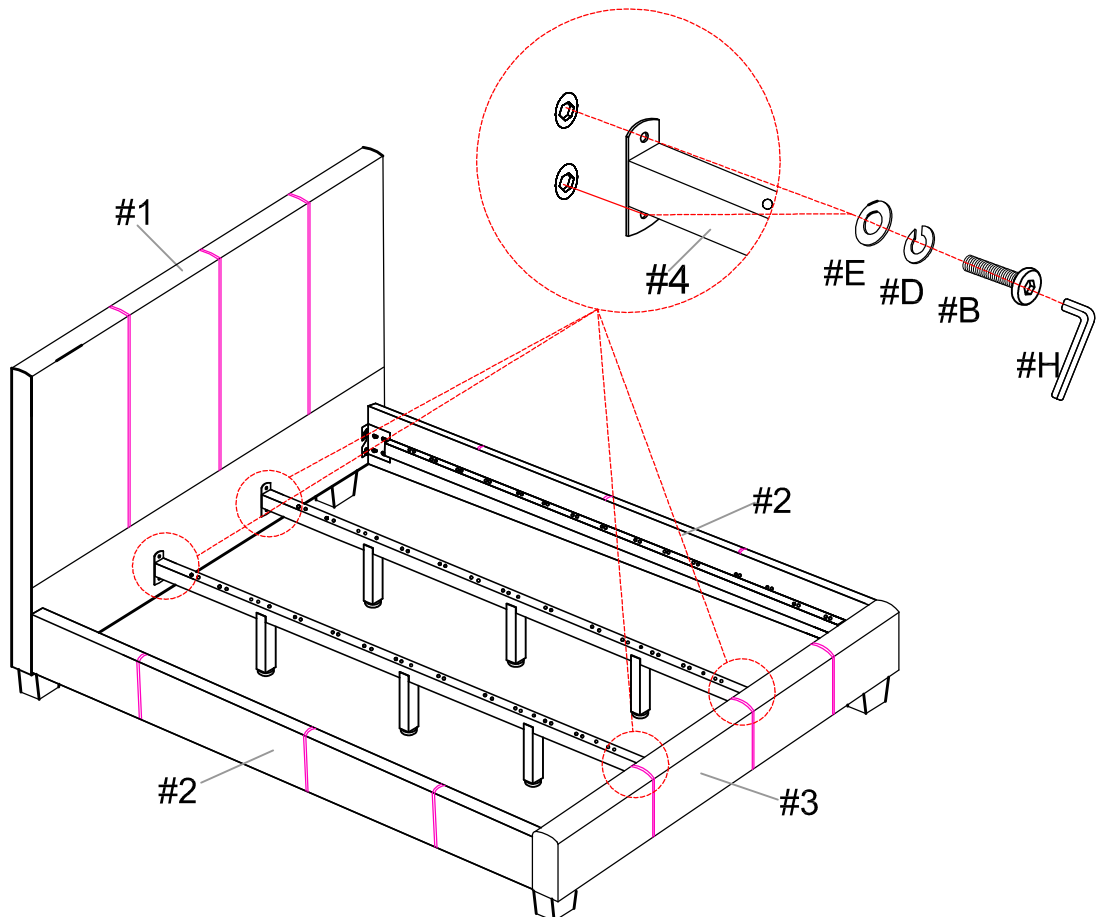




#F x 26pcs
#G x 26pcs


Assemble slats by connecting an end cap (#G) to a slat (#6) followed by a center connector (#F) then slat (#6) another center connector (#F) then slat (#6) and finally another end cap (#G). Repeat the process for a total of 13 complete slats.

Note: make sure the curved side is facing up when assembled.

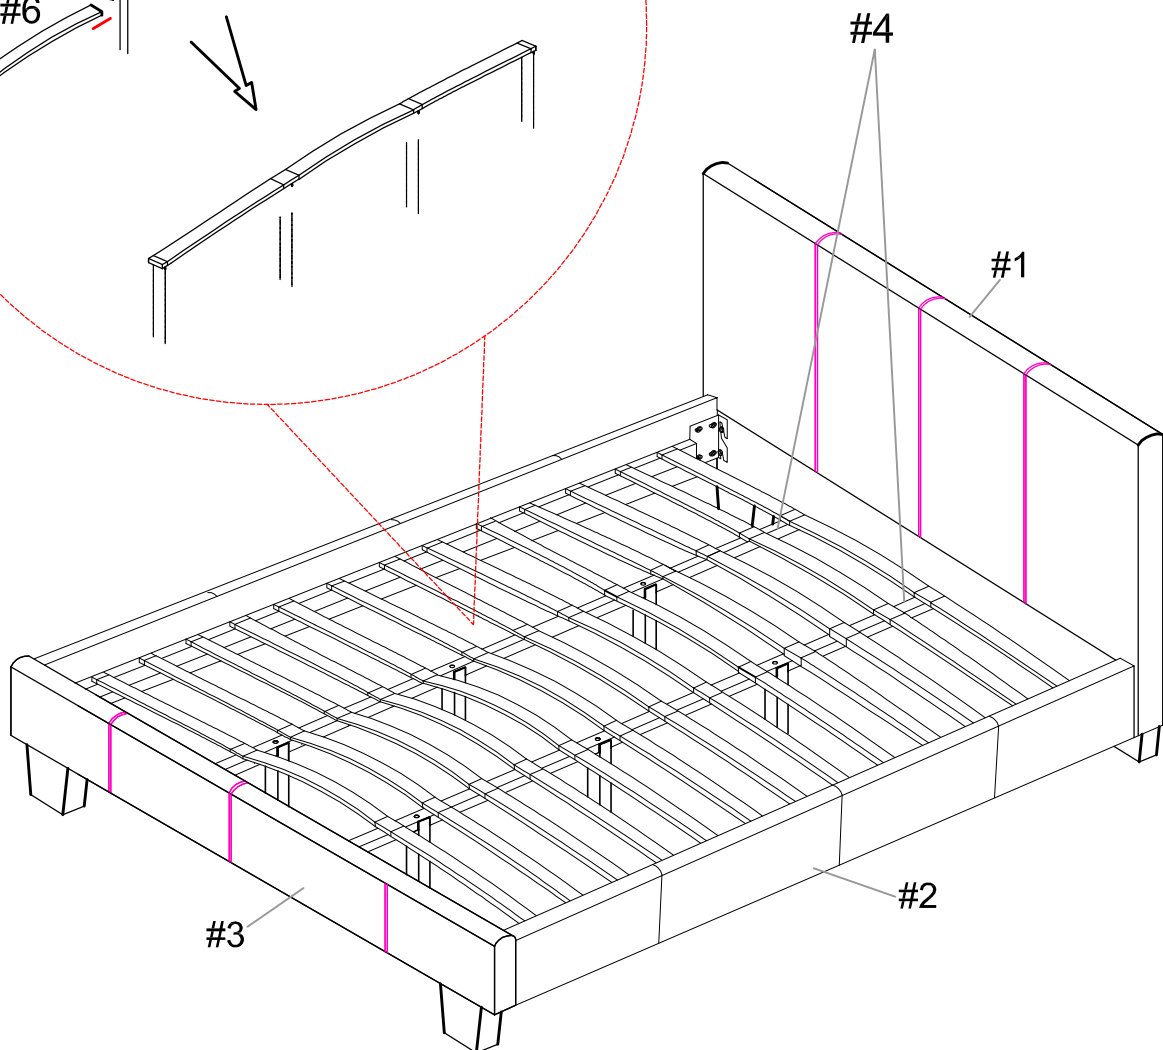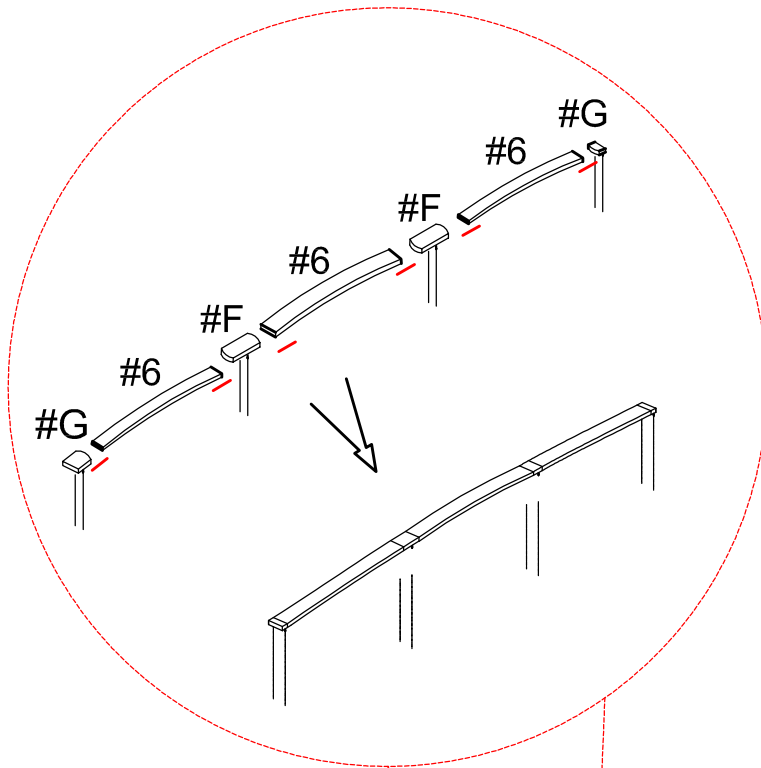

ASSEMBLY IS COMPLETED

Assembly Instructions

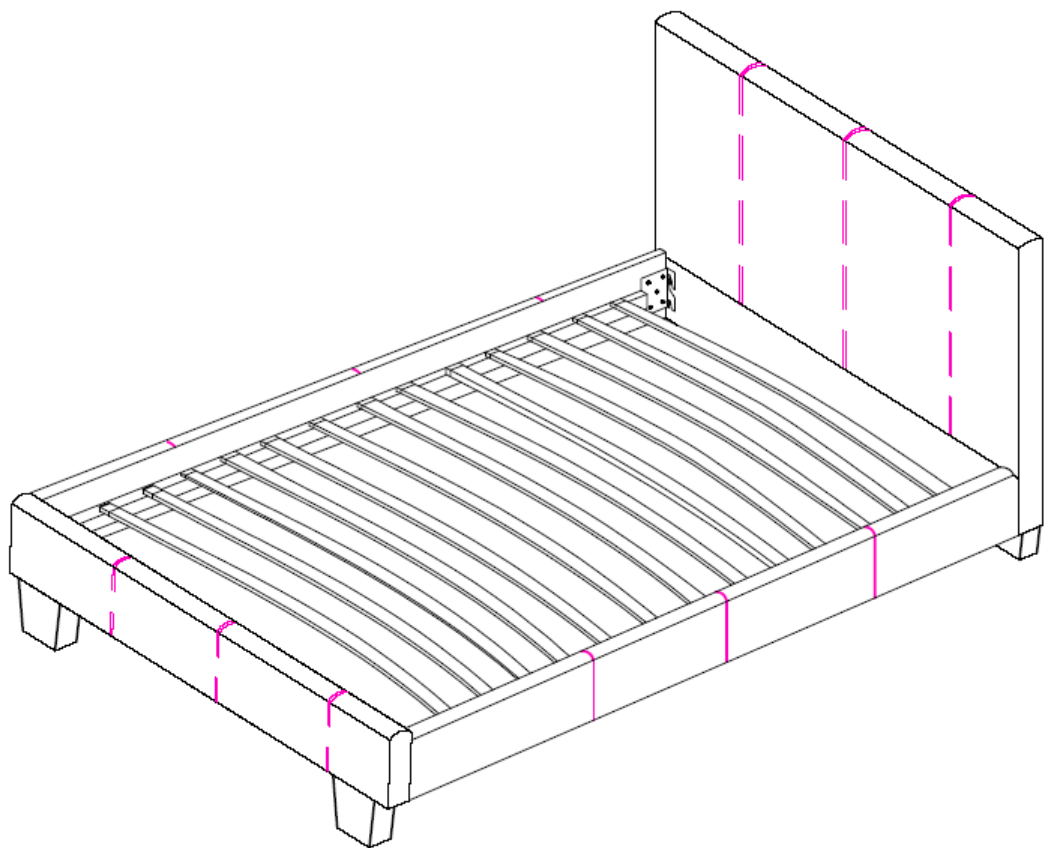


ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

Tools Required for Assembly:

Allen Wrench



(Included)




2 PERSONS RECOMMENDED

EASY  DIFFICULT


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

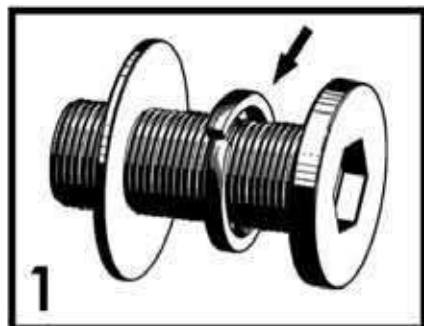


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

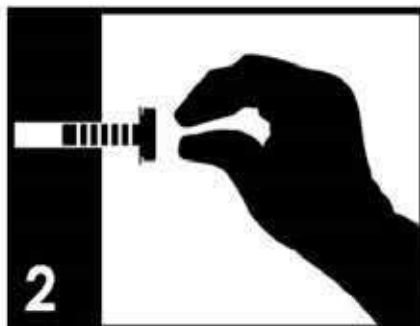


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

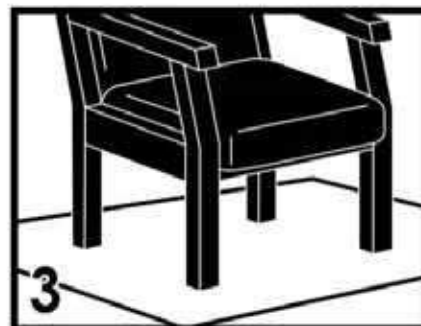


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

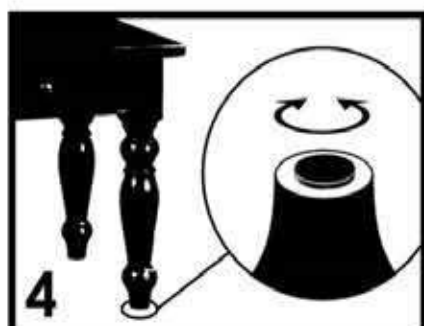

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

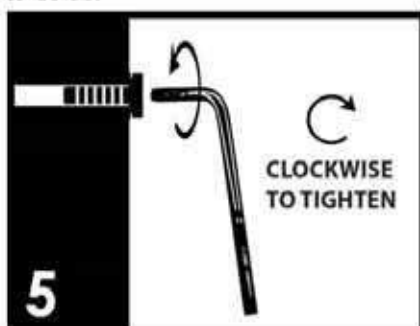

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

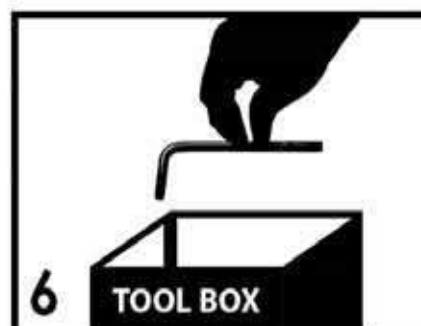

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



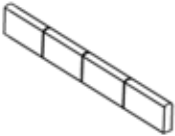




Before you begin, please read Page 2 of "Assembly and Care Advice".







And remember, do not tighten until each step is completed or instructed.

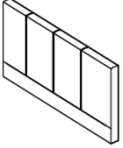MD

Parts List

	#1 x 1 pc Headboard
	#2 x 2 pcs Side Rail
	#3 x 1 pc Footboard
	#4 x 13 pcs Slat
	#5 x 4 pcs HB/FB Leg

Hardware List

	#A x 8 pcs Bolt 5/16"x1"
	#B x 8 pcs Bolt 5/16"x4"
	#C x 16 pcs Flat Washer
	#D x 16 pcs Lock Washer
	#E x 26 pcs End Cap
	#F x 1 pc Allen Wrench




Due to the size and/or weight of this product, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling the product to avoid any potential injury and/or damage.



- I. Align the two HB/FB legs (#5) with the pre-drilled holes underneath the headboard (#1).
- II. Prepare 4 bolt assemblies by inserting FIRST the lock washer (#D) onto the bolt (#B) and then the flat washer (#C) onto the SAME bolt (#B), in that order.
- III. Insert the bolt assemblies through the holes of the two HB/FB legs (#5) and secure those bolts using the Allen wrench (#F) to lock them with the headboard (#1).
- IV. Repeat the process above to assemble the remaining two HB/FB legs (#5) onto the footboard (#3).


#B x 8 pcs
#C x 8 pcs
#D x 8 pcs

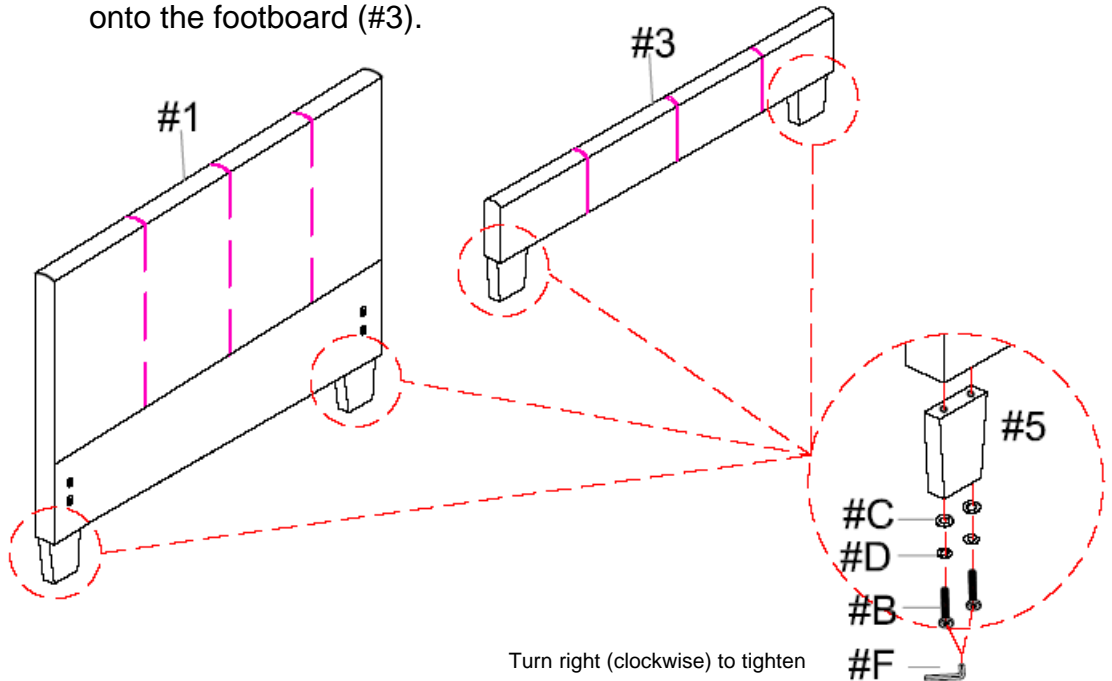

Turn right (clockwise) to tighten



#A x 8 pcs
#C x 8 pcs
#D x 8 pcs

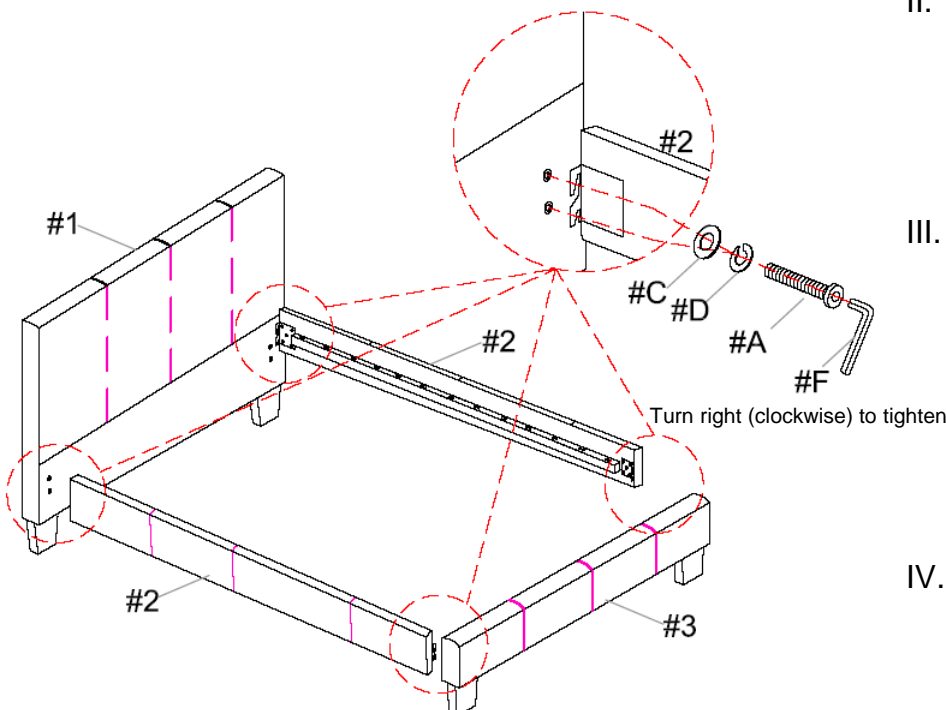


Turn right (clockwise) to tighten

- I. Prepare 4 bolt assemblies by inserting FIRST the lock washer (#D) onto the bolt (#A) and then the flat washer (#C) onto the SAME bolt (#A), in that order.
- II. Insert the bolt assemblies through the right and left side of the pre-drilled holes of the headboard (#1) using the Allen wrench (#F) but expose about 1/2" of the bolts' threads.
- III. Mount the brackets on the side rails (#2) onto the bolts (#A) on each side of the headboard (#1). Make sure all the washers are in the FRONT of the brackets. Use the Allen wrench (#F) to further tighten the bolts to secure the two parts together.
- IV. Repeat the process above to assemble the other ends of the two side rails (#2) onto the footboard (#3).




- I. Prepare a complete bed slat by connecting two end caps (#E) onto the ends of the slat (#4).
- II. Align the two end caps (#E) with the pre-drilled holes on each side of the side rails (#2) and press firmly down on both end caps (#G) to lock with the side rails (#2).
- III. Repeat the process above to assemble the remaining bed slats onto the side rails (#2).
- IV. Make sure the bed is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.

#E x 26 pcs

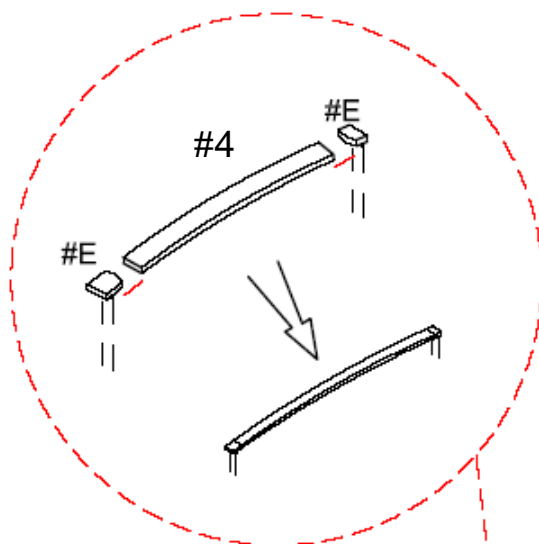

Note: The correct position of the slats should be arcing UPWARD when placing on the rails.

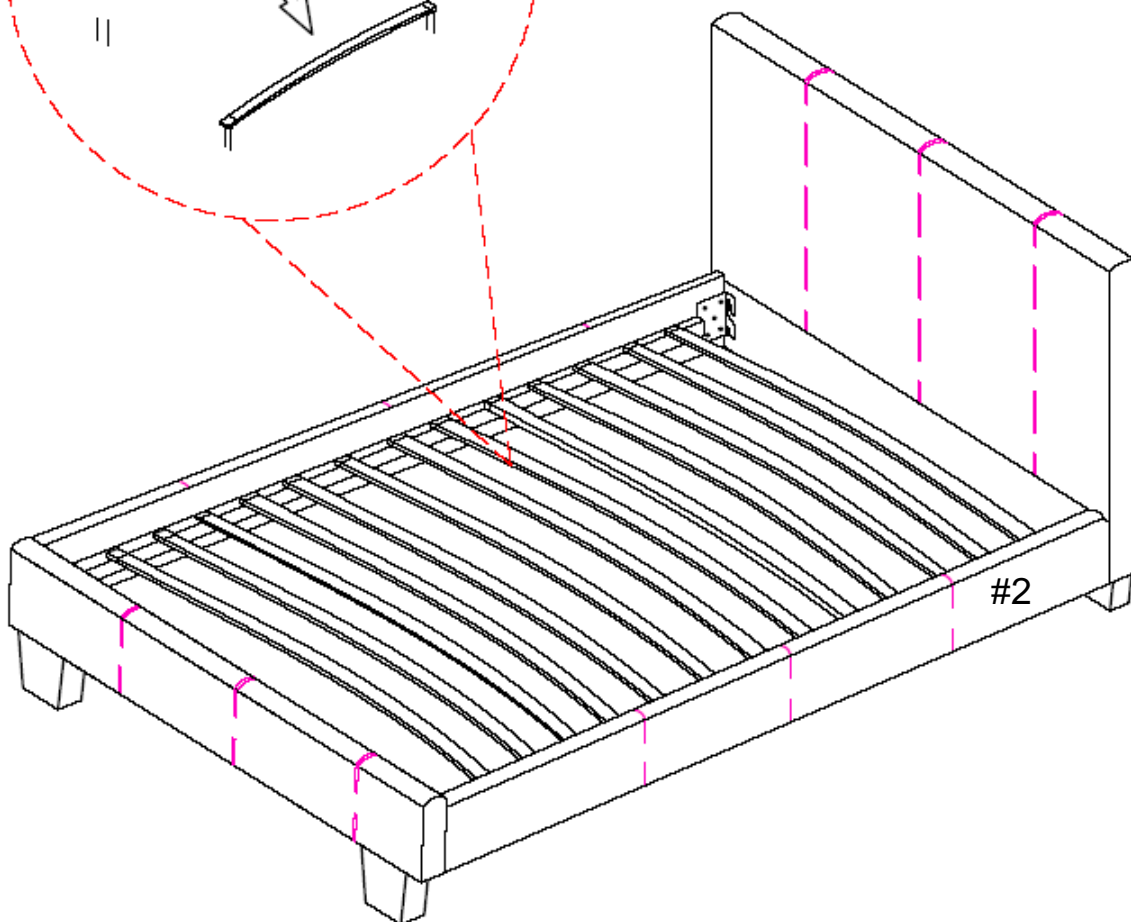

ASSEMBLY IS COMPLETED