

# Assembly Instructions

Caution: You must read this before you proceed

## Care & Maintenance

|                                                                                    |                                                                              |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
|    | • Not for commercial use. For residential use only.                          |
|    | • Do not put hot items directly on furniture surface.                        |
|    | • Do not clean furniture with harsh cleansers or polish.                     |
|    | • Do not place furniture under direct sunlight.                              |
|    | • Do not place furniture near heating or cooling vents.                      |
|   | • Do not write on furniture without a padded barrier to protect the surface. |
|  | • Do not place furniture outside . For indoor use only.                      |
|  | • Stains may be removed with mild soap solution and damp cloth.              |
|  | • Children should not climb or jump on the furniture.                        |
|  | • Dust and pick-up spills using a clean, non-colored, lint-free cloth.       |


Please look in Corners of carton for hardware packs and Legs.

# Assembly Instructions

Please look in the Table for Hardware packs and Legs

## Coffee Table





Item No: N735P464679

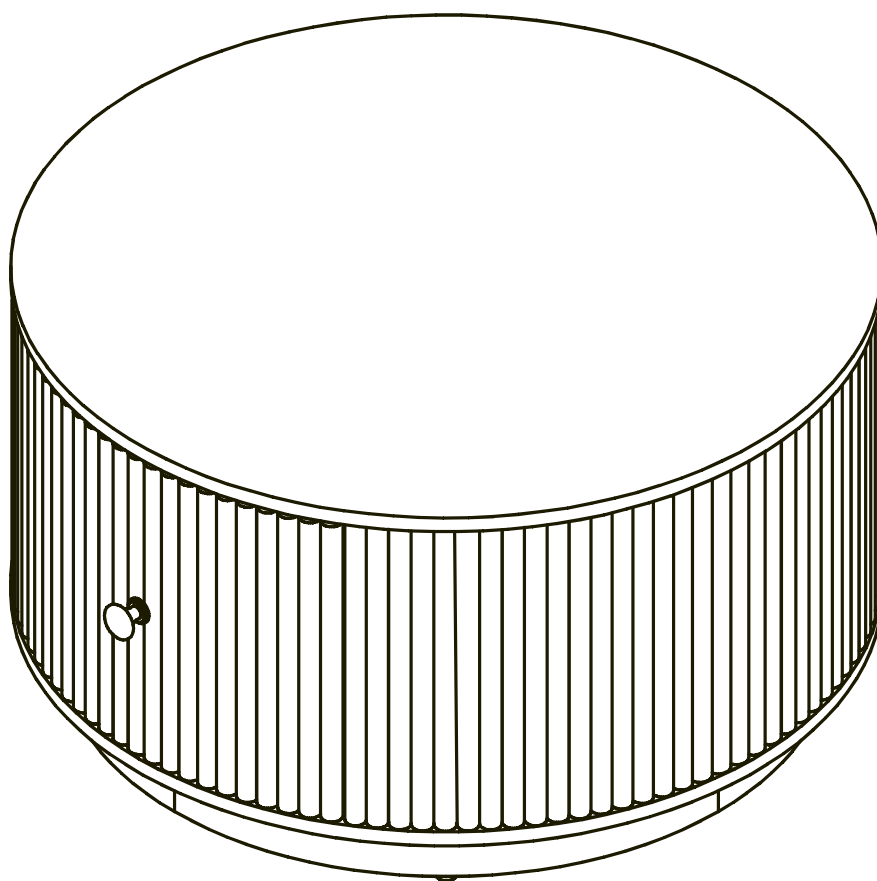

**Caution:** This Coffee Table is NOT a TOY. Keep your child / children at bay during the assembly process. Whenever lifting or moving the Table and to prevent damage to the Table, two adults may be needed to execute these actions.

# ASSEMBLY INSTRUCTION

## ITEM NO. N735P464679

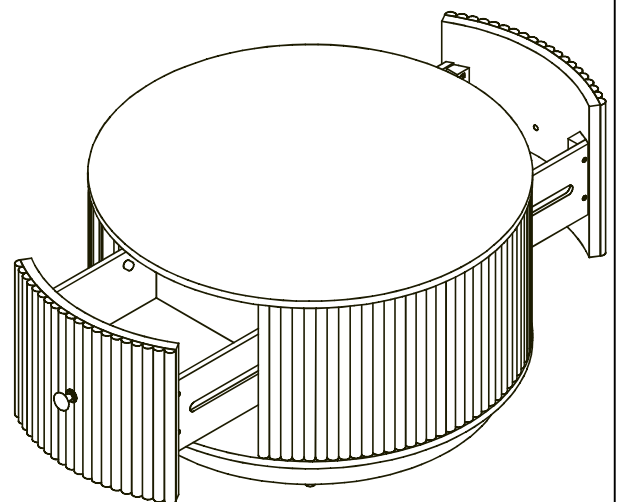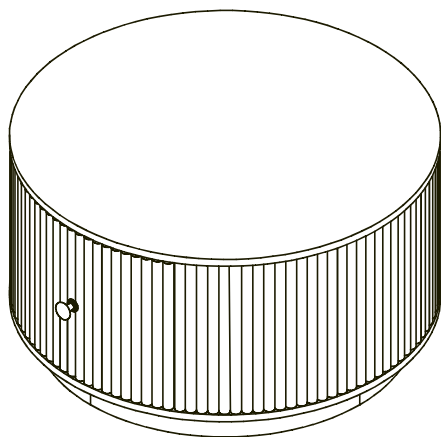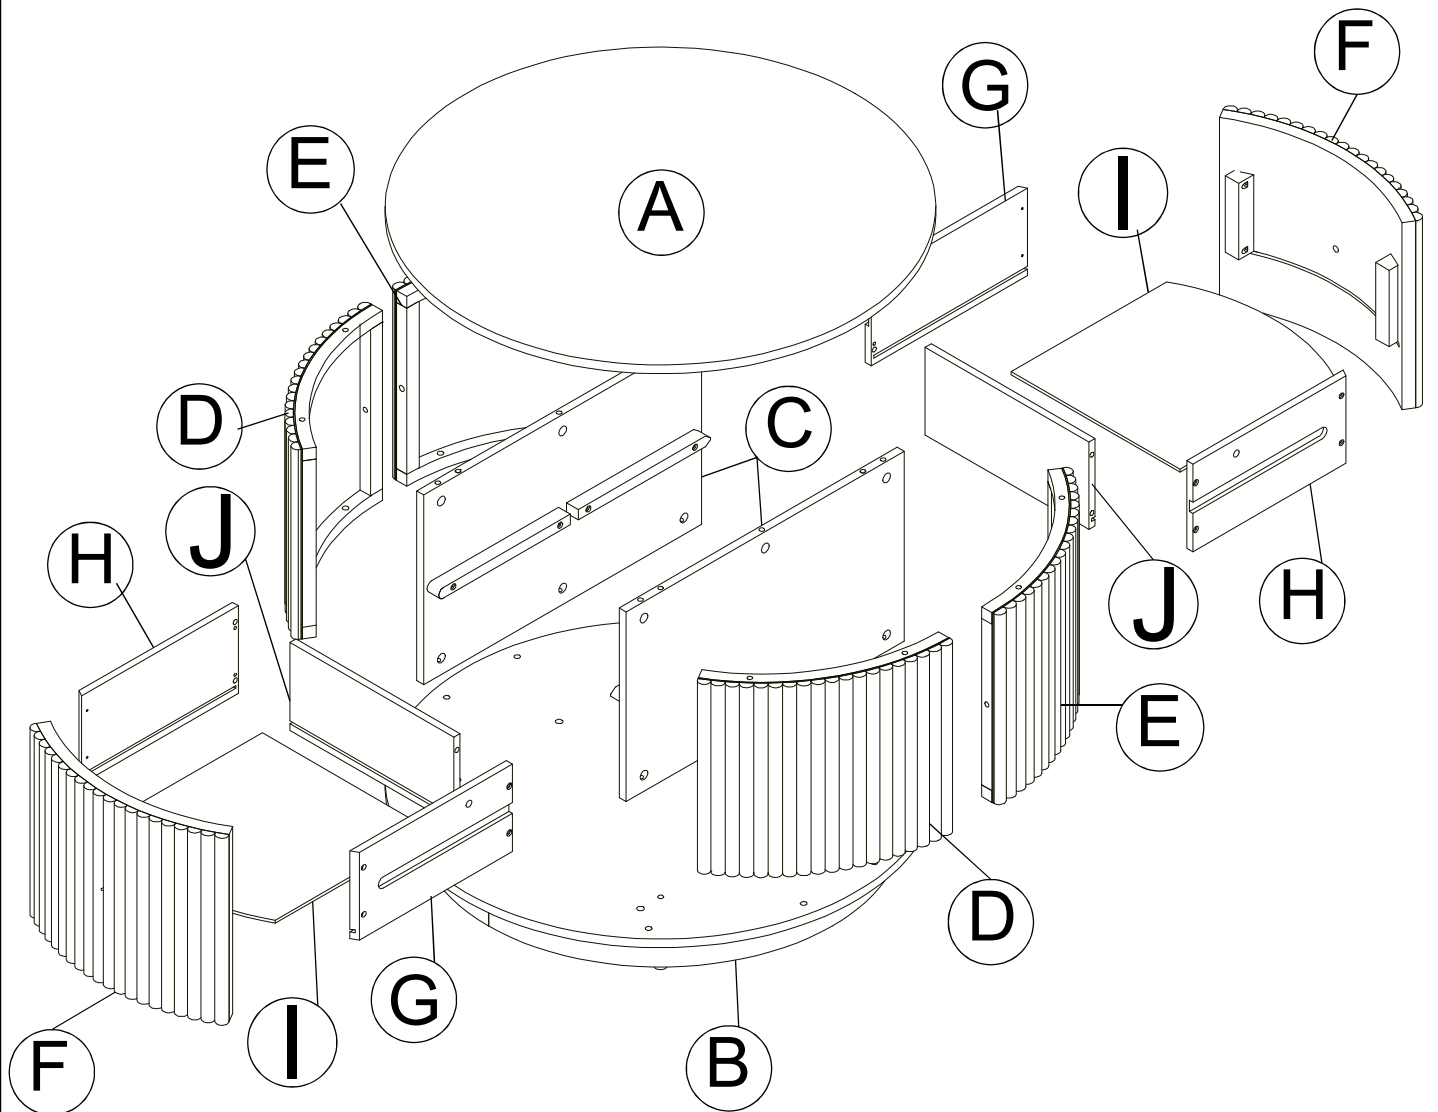


# ASSEMBLY INSTRUCTION

## ITEM NO. N735P464679


### Part List

Ⓐ

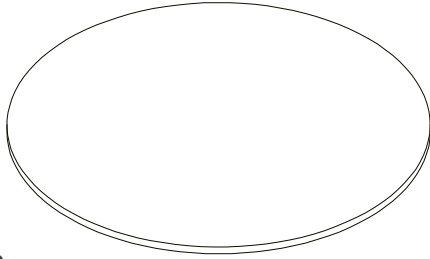


Top = 1pc

Ⓑ

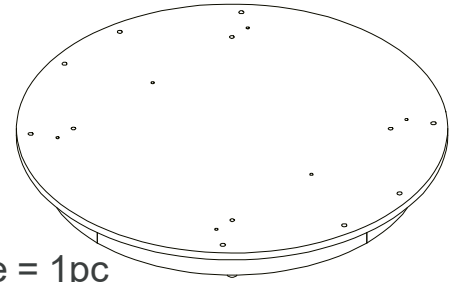


Bottom Frame = 1pc

Ⓒ

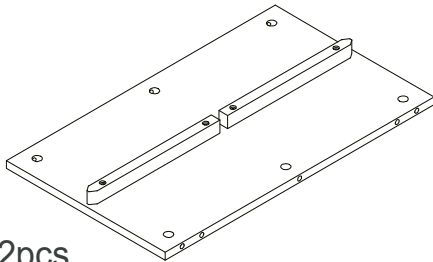


Middle Panel = 2pcs

Ⓓ

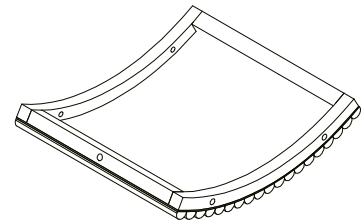


Side Frame (Without Nut) = 2pcs

Ⓔ

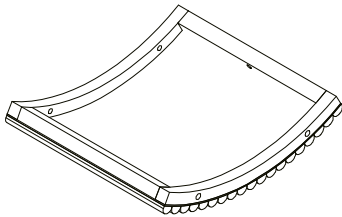


Side Frame (With Nut) = 2pcs

Ⓕ

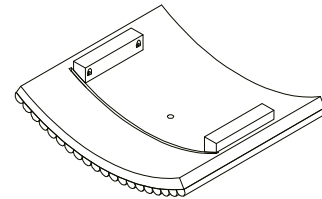


Front of drawer = 2pcs

Ⓖ

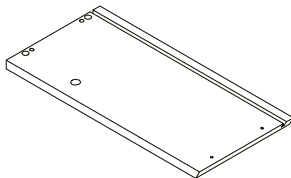


Right side drawer = 2pcs

Ⓖ

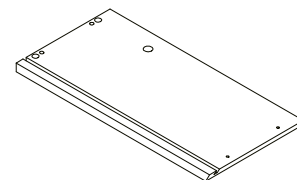


Left side drawer = 2pcs

Ⓘ

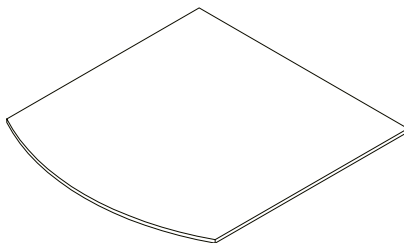

Bottom of drawer = 2pcs

Ⓙ

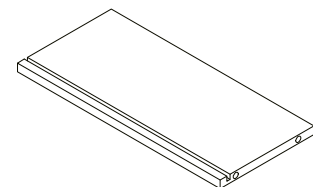


Back of drawer = 2pcs


# ASSEMBLY INSTRUCTION

## ITEM NO. N735P464679

### Hardware List

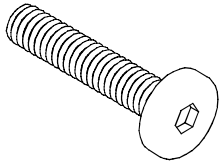


(1) Bolts 1/4" x 30 = 16pcs

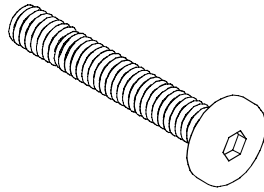

(2) Bolts 1/4" x 38 = 2pcs




(3) Wooden dowel 8 x 30 = 16 pcs




(4) Cam Bolts 6 x 28 = 12 pcs




(5) Cam lock 15 x 11 = 12 pcs

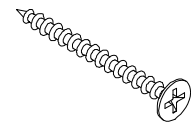


(6) Flat head screw 4 x 25 = 16 pcs

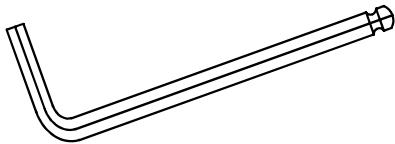

(7) Allen Key K4 = 1 pc



(8) Drawer catch = 4 pcs

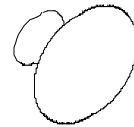

(9) Handle = 2pcs







(10) Bolt of Handle M4 x 40=2pcs





Screwdriver (Not included)

# Assembly Preparation Before Beginning Assembly:

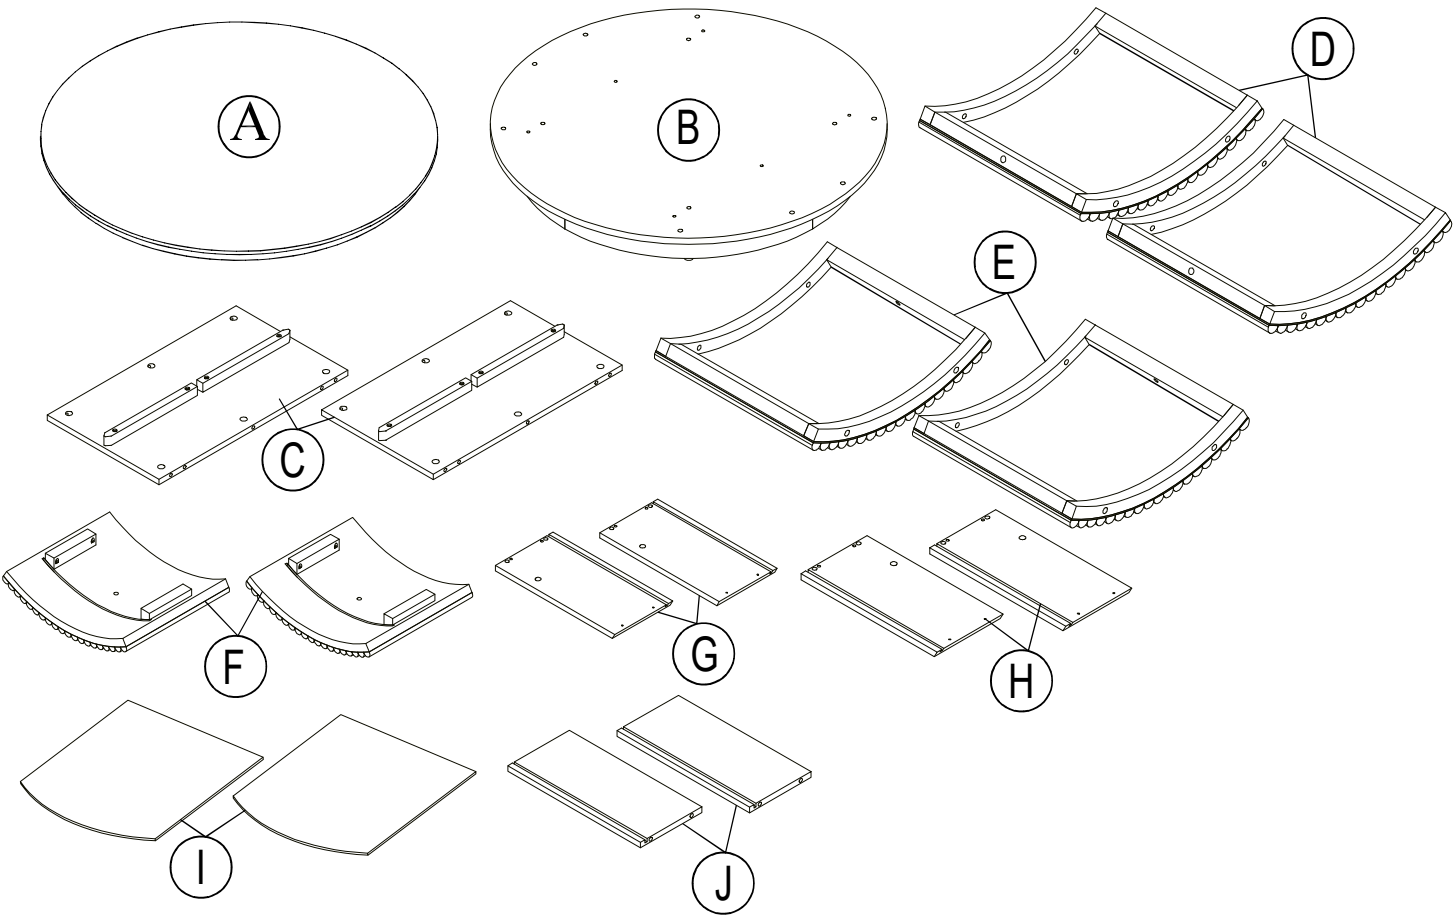

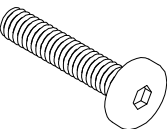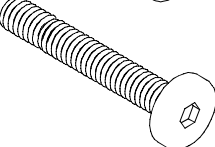- (1) x 16 
- (2) x 2 
- (3) x 16 
- (4) x 12 
- (5) x 12 
- (6) x 16 

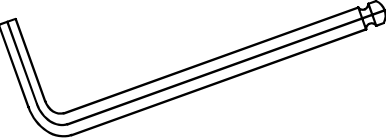- (7) x 1 
- (8) x 4 
- (9) x 2 
- (10) x 2 
- 

Screwdriver (Not included)

## Assembly Preparation

### Before Beginning Assembly:



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

## Assembly Steps

### Overview

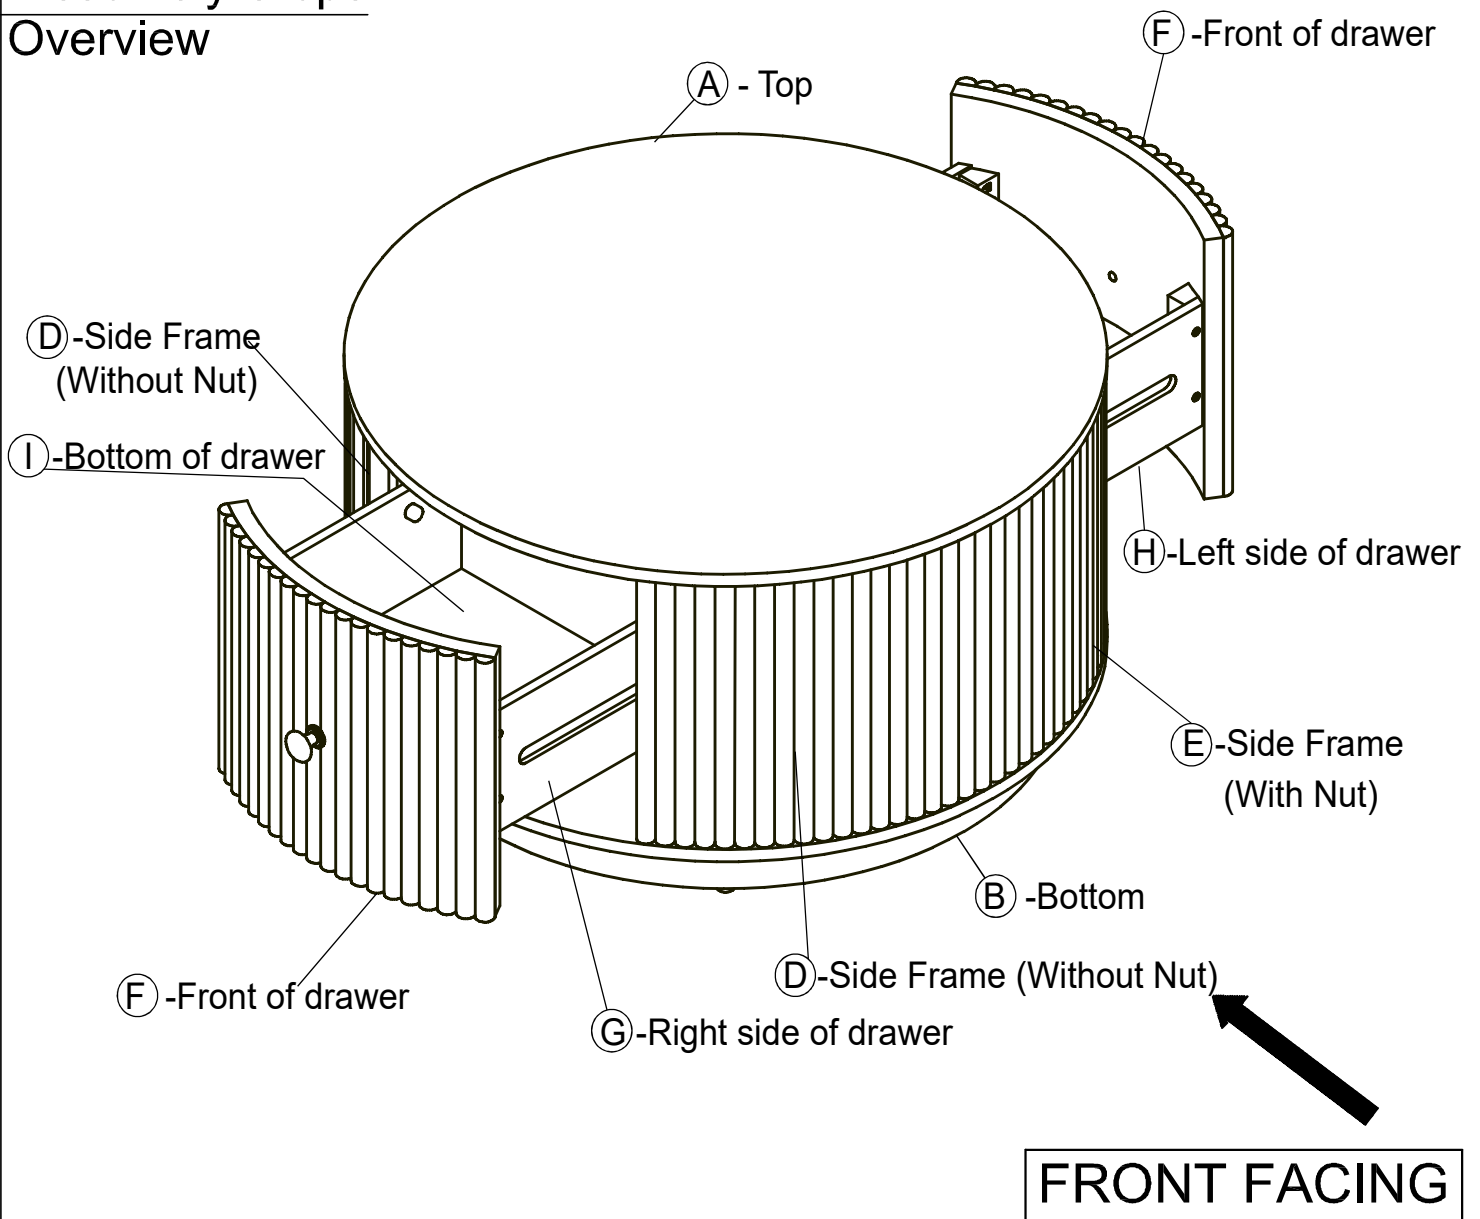


This Coffee Table has multiple parts and may require up to 40 minutes to assemble. To give you an overview of the Table parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

# BEFORE INSTALLATION


Caution: Please read the instructions thoroughly before assembly.

1. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


## Cam Lock Assembly Instructions

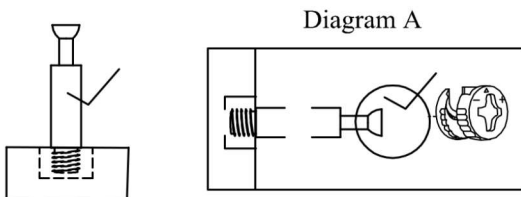


Insert Cam Bolt into hole as shown in diagram A.

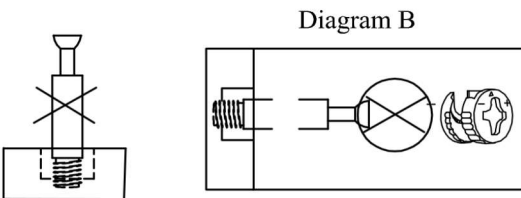


Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.

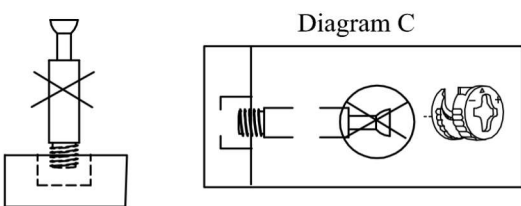


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.

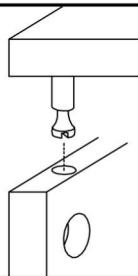

Connect the panels together.

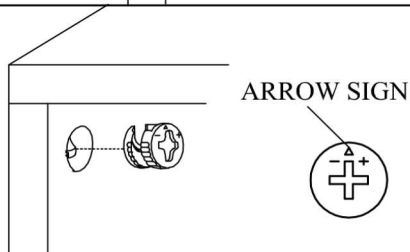

Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.


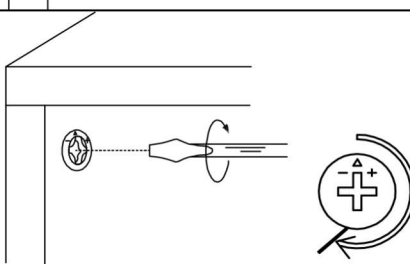


To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.  
*\*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

# ASSEMBLY INSTRUCTION

## ITEM NO. N735P464679




**Step 1** Unpack and place the all parts face up on a clean, flat surface to avoid scratches.  
Attach the Cam Bolts (4) into the Top (A) and Bottom (B), Using the Screwdriver ( Not included)  
to tighten securely.

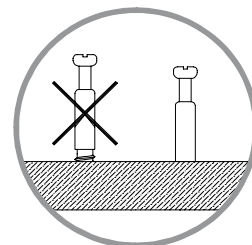


### TOOLS REQUIRED



Screwdriver  
(Not included)

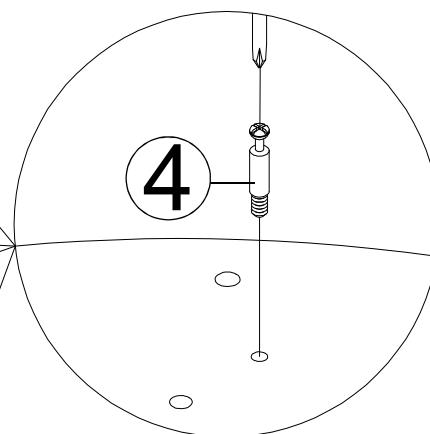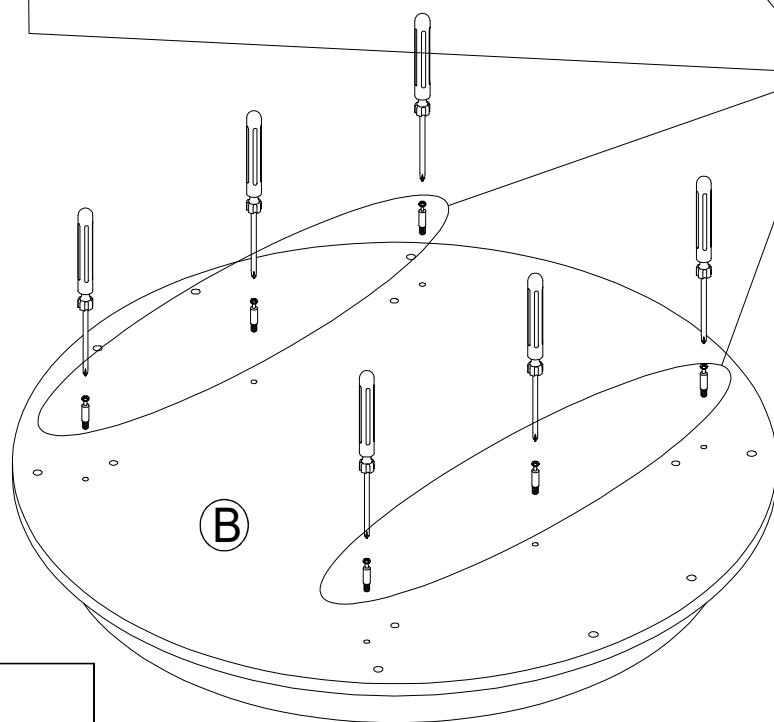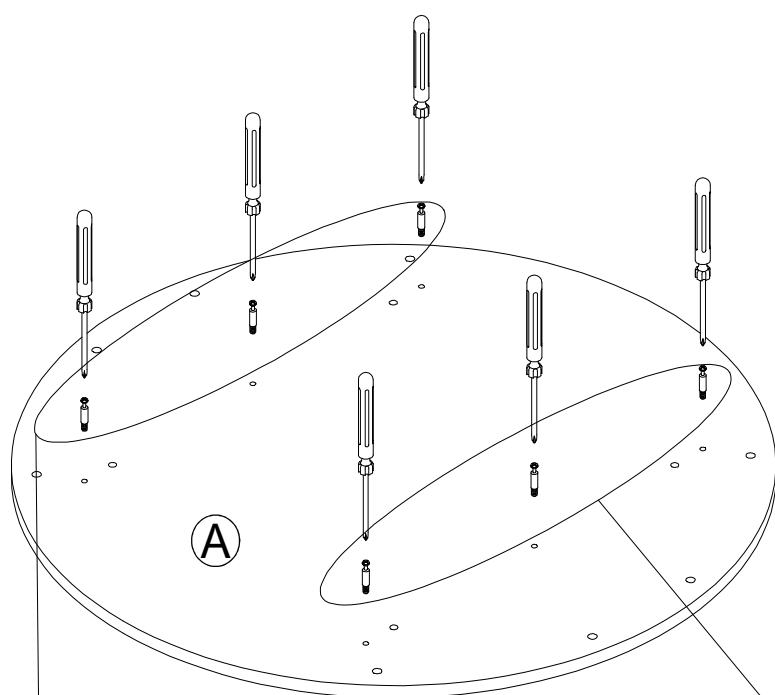

x12




(4) x 12

# ASSEMBLY INSTRUCTION

## ITEM NO. N735P464679


**Step 2** Attach the Side frame (D) and Side frame (E) onto the Table Top (A) Using the Bolts (1) and Allen Key (7) to tighten securely.

Ensure the Side frame have Nut holes face upward and Side Frame (D) and (E) are installed on the same side.

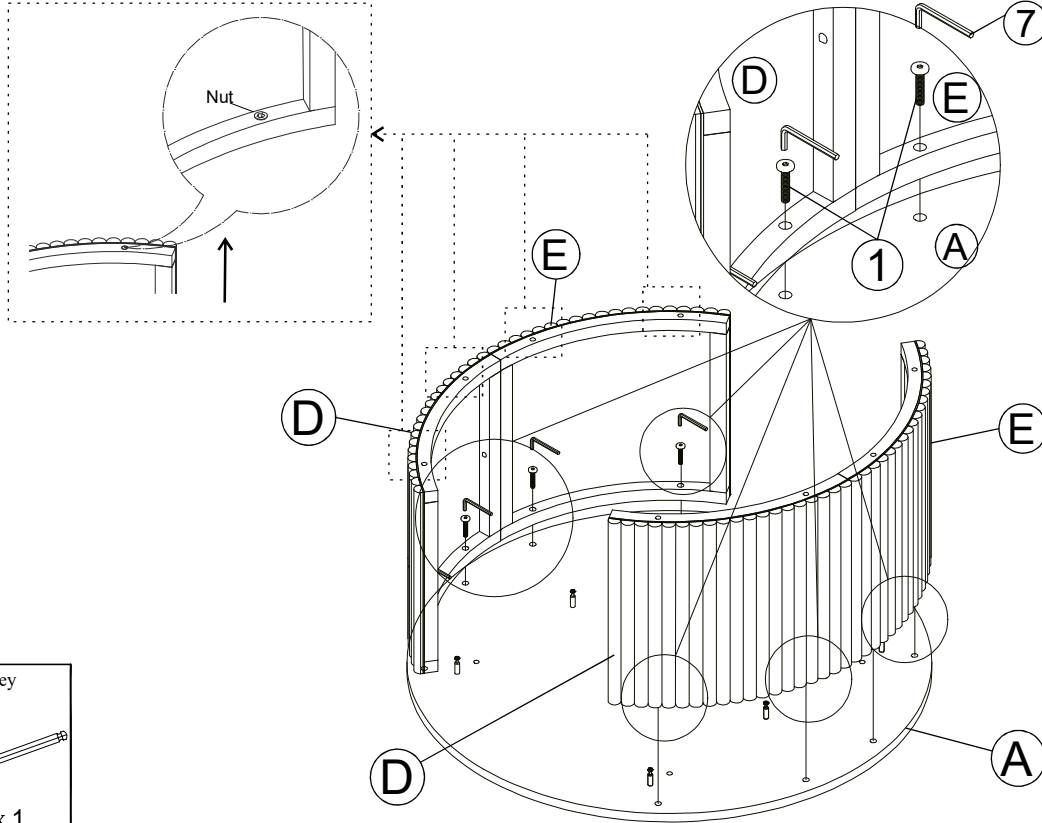

| Bolts<br>1/4" x 30                                                                  | Allen Key<br>K4                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |
| ① x 8                                                                               | ⑦ x 1                                                                               |

**Step 3** Secure the side frames (D) and (E) together using bolts (2) and the Allen key (7) to tighten securely.

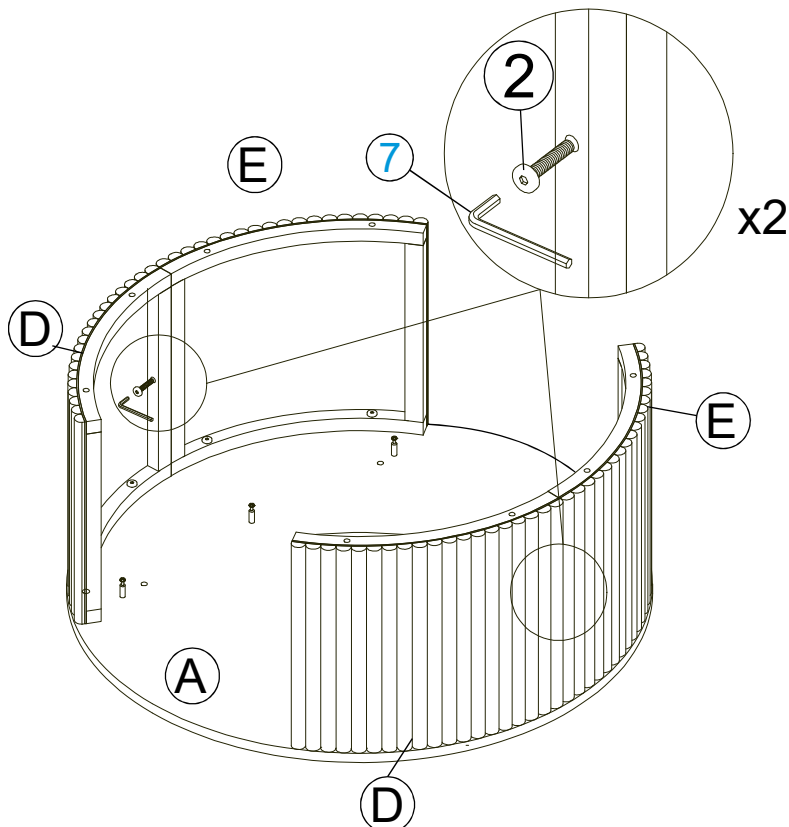


| Bolts<br>1/4" x 38                                                                  | Allen Key<br>K4                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |
| ② x 2                                                                               | ⑦ x 1                                                                               |

# ASSEMBLY INSTRUCTION


## ITEM NO. N735P464679

**Step 4** Attach the Middle Panel (C) onto the Top Panel (A) Aligning them by Wooden Dowel (3), then using the Cam Locks (5) and Allen Key (7) to tighten securely.

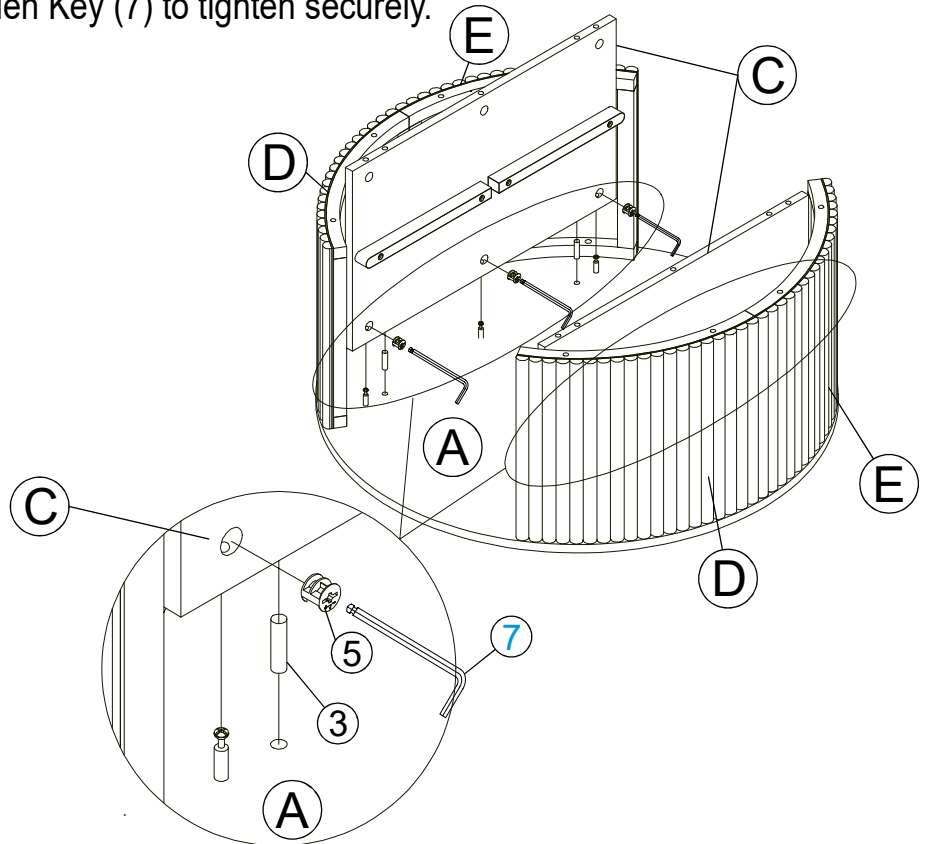

|                                                                                     |                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Wooden dowel<br>8 x 30                                                              | Camlock<br>15 x 12                                                                  | Allen Key<br>K4                                                                     |
|  |  |  |
| ③ x 4                                                                               | ⑤ x 6                                                                               | ⑦ x 1                                                                               |

**Step 5** Attach the Bottom Panel (B) onto the Middle Panel (C) and Side Panel (D&E). Aligning Part (B) with part (C) by Wooden Dowel (3), Using the Camlock (5) and Allen Key (7) to secure the Part B and Part (C). Using the Bolts (1) and Allen Key (7) to secure the Part B with Part (D) and (E).

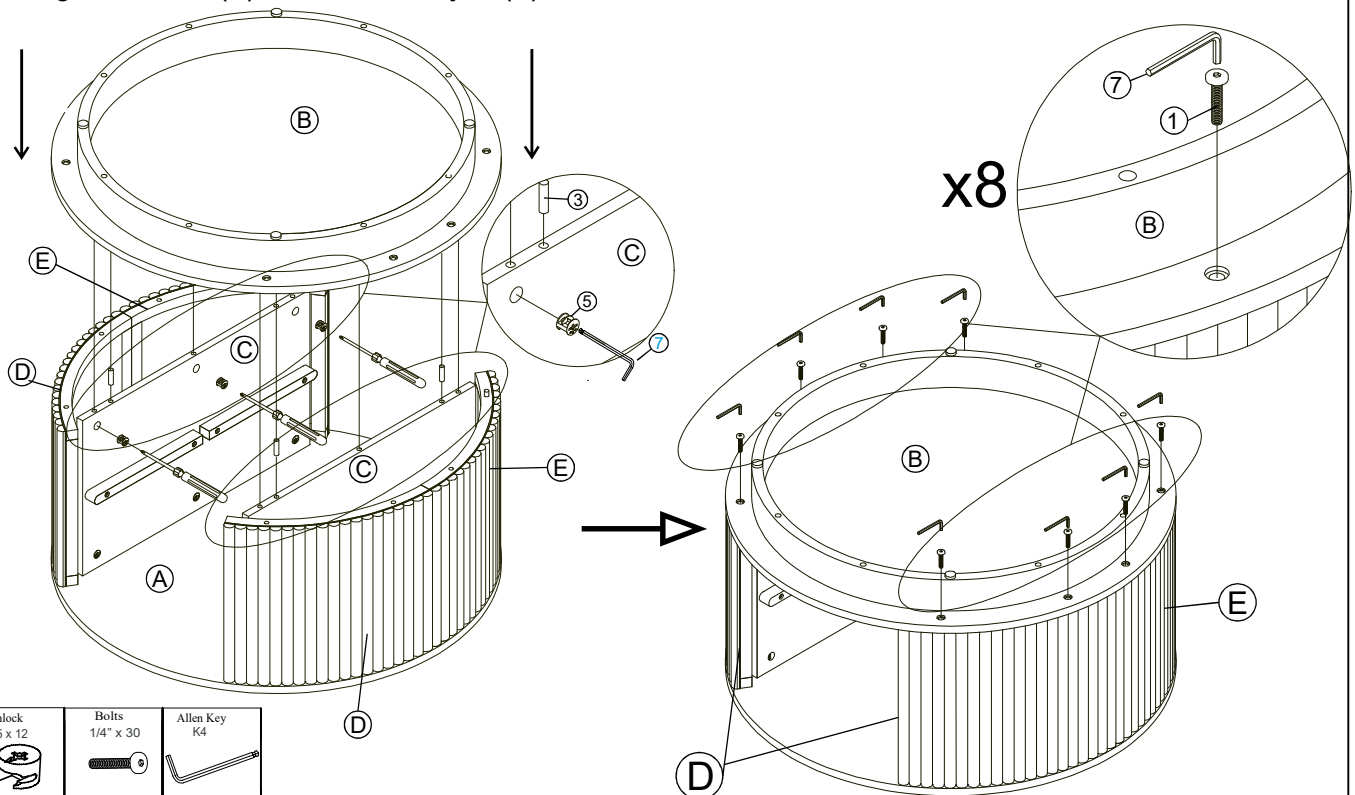


|                                                                                    |                                                                                     |                                                                                     |                                                                                     |
|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Wooden dowel<br>8 x 30                                                             | Camlock<br>15 x 12                                                                  | Bolts<br>1/4" x 30                                                                  | Allen Key<br>K4                                                                     |
|  |  |  |  |
| ③ x 4                                                                              | ⑤ x 6                                                                               | ① x 8                                                                               | ⑦ x 1                                                                               |

# ASSEMBLY INSTRUCTION

## ITEM NO. N735P464679


**Step 6.1** Attach the Left of drawer (H) and Right of Drawer (G) into Back of drawer (J), Align by Wooden dowel (3). then using the Flat head screw (6) and a screwdriver (not included) to tighten securely.

**Step 6.2** Attach the Bottom of drawer (I) into the grooves of Left side drawer (H) and Right side drawer (G), Back of drawer (J) assembled in Step 6.1

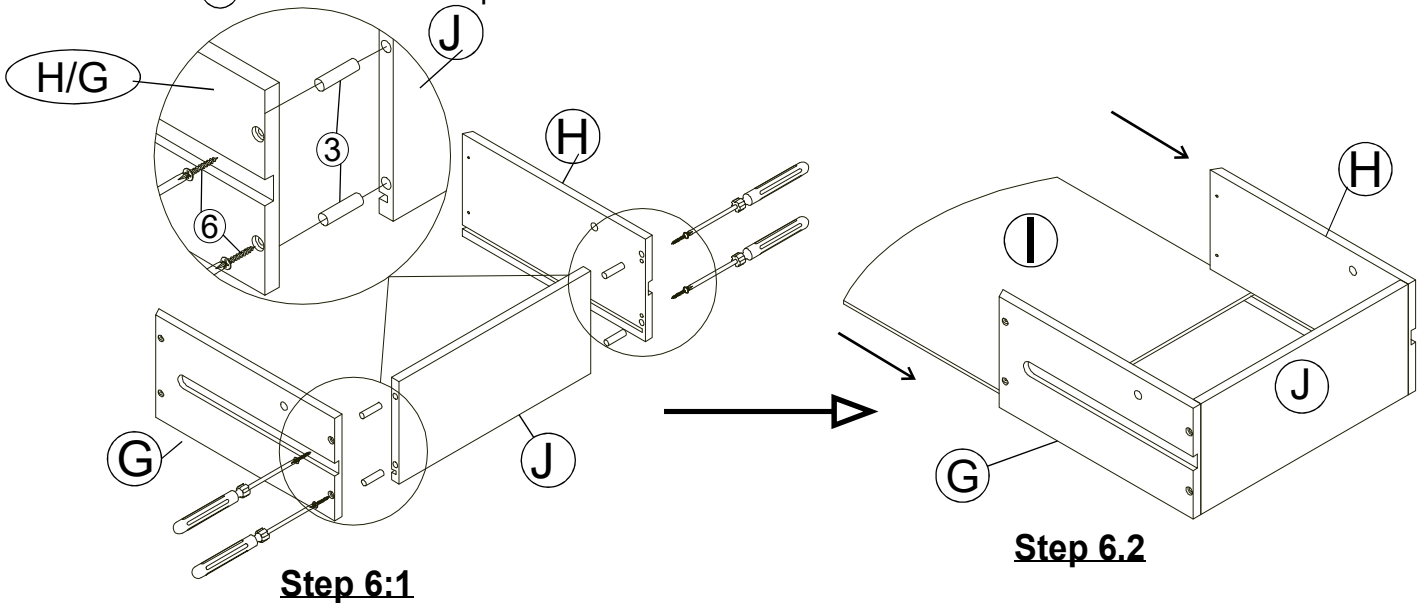


**Step 6.3** Attach the Front of Drawer (F) to the drawer frame assembly completed in Step 6.2. Make sure the groove on the Part (F) fits properly with Bottom of drawer (I). Using the Flat head Screw (6) and Screwdriver (Not included) to tighten securely.

**Step 6.4** Attach the Handle (9) into outside the front of Drawer (F). Using the Bolts of Handle (10) and screwdriver (not included) to tighten securely.

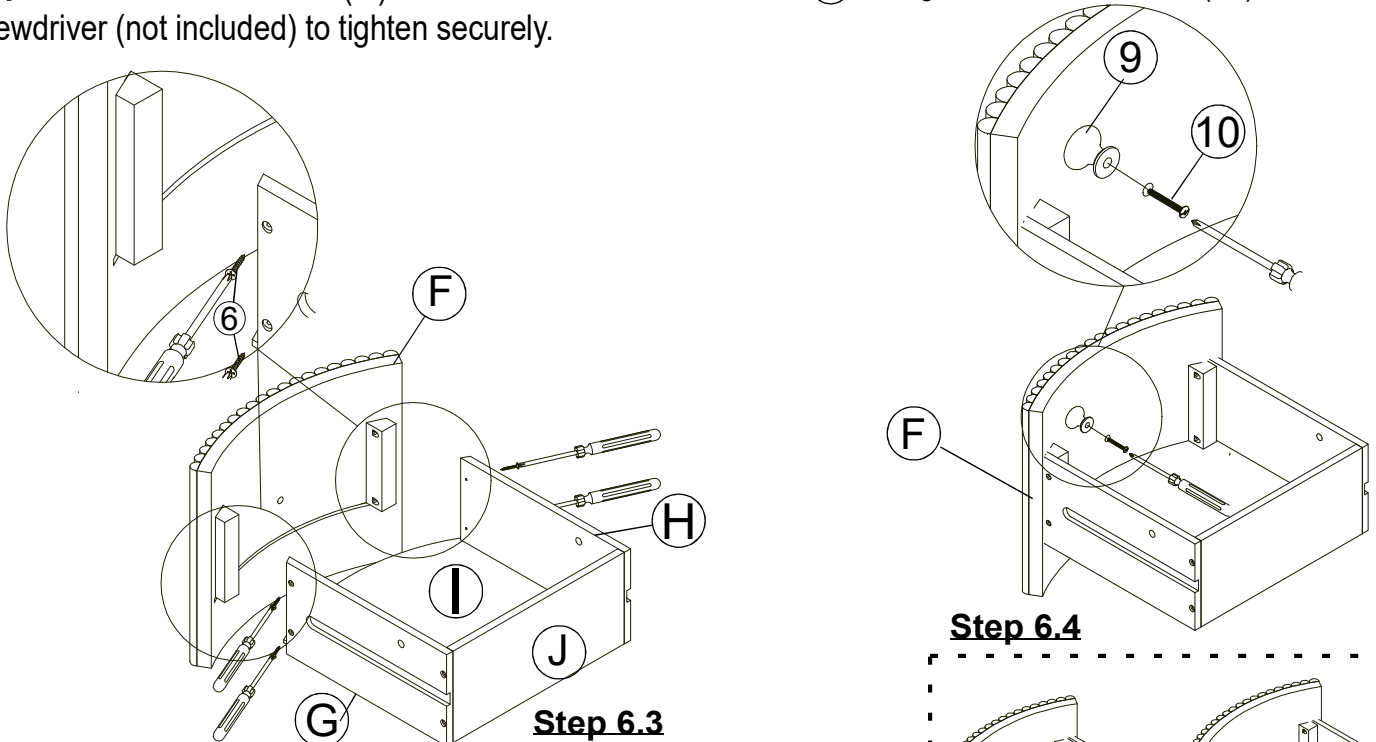

|                                                                                     |                                                                                     |                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Wooden dowel<br>8 x 30                                                              | Flat head screw<br>M4 x 25                                                          | Handle                                                                              | Bolts of Handle<br>M4 x 40                                                          |
|  |  |  |  |
| ③ x 8                                                                               | ⑥ x 16                                                                              | ⑨ x 2                                                                               | ⑩ x 2                                                                               |

Repeat the same steps for the second drawer.


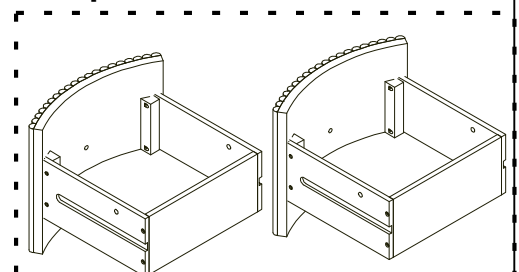


# ASSEMBLY INSTRUCTION

## ITEM NO. N735P464679

**Step 7** Now grab a friend and carefully rotate the unit so that it's facing up.

Attach the 2 drawers full assembly in Step 6 into the Coffee Table. Then manually insert the drawer catch (8) into both side of drawers (H) and (G) to prevent the drawer from being pulled out.

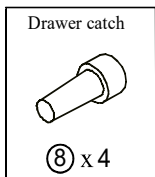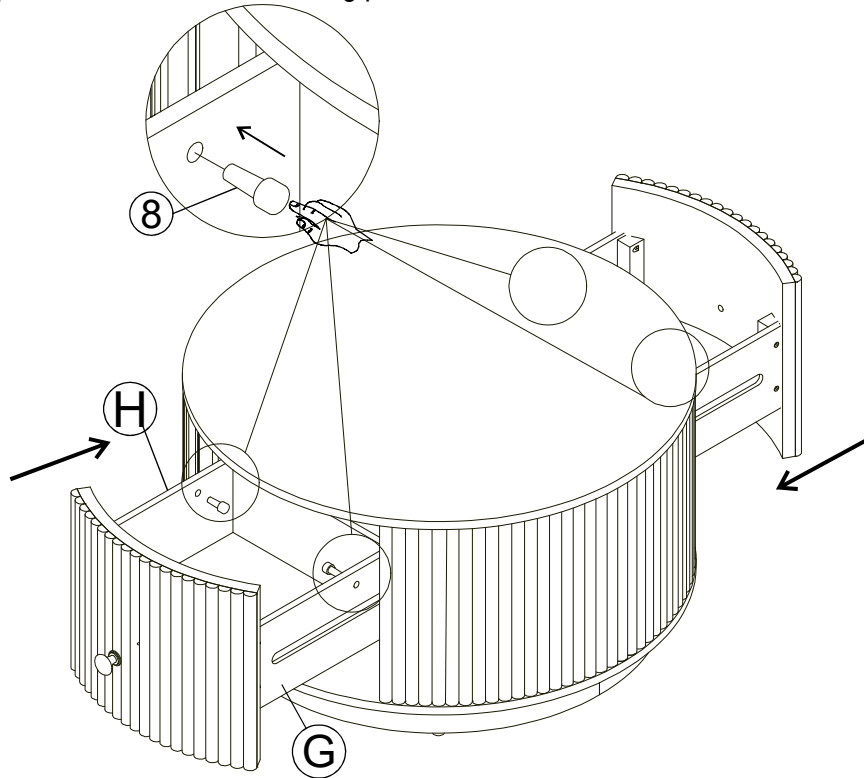

**Step 8** Check for wobbles on a LEVEL surface.

Your Coffee Table is ready for use,

This Coffee Table can only be used on the flat, level surface

