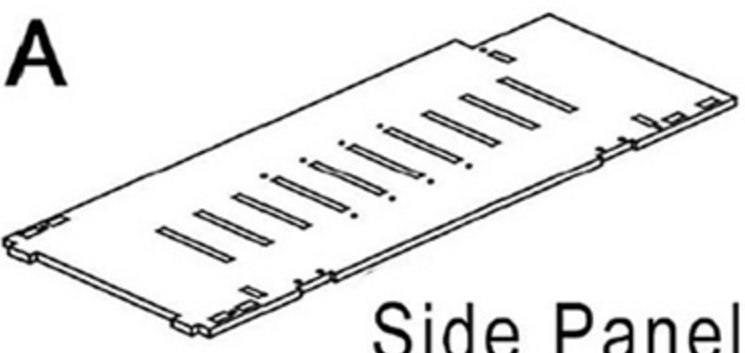
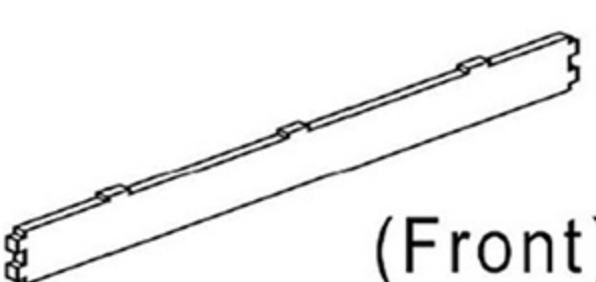
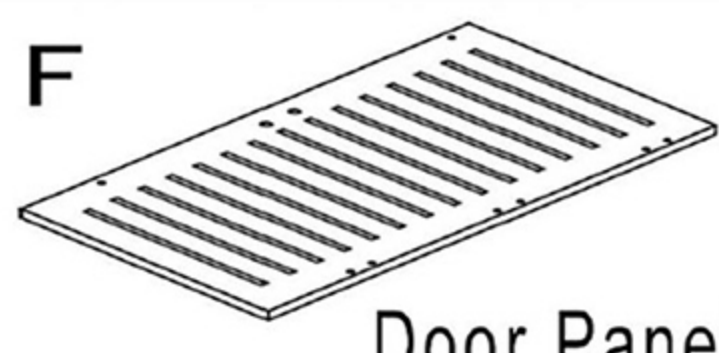
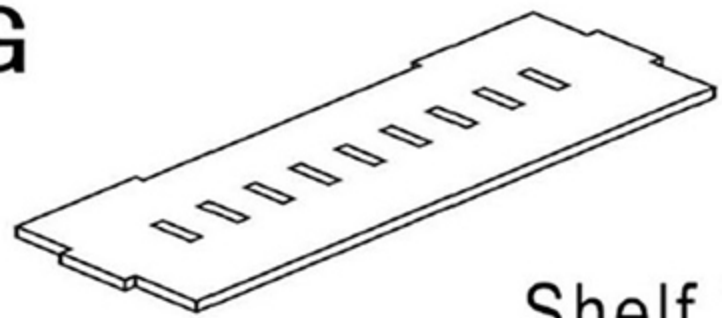
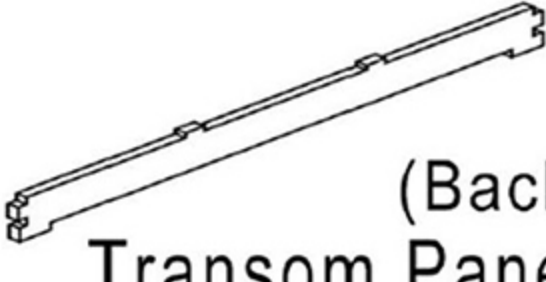
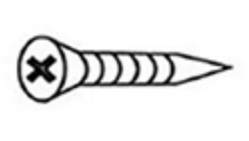
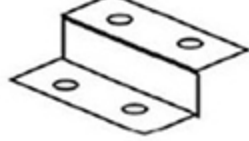
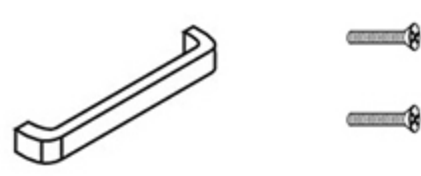
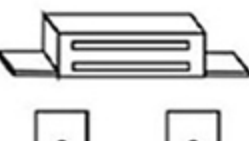
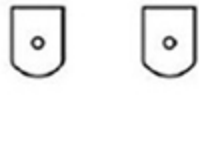
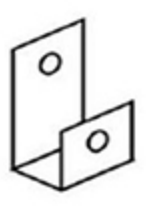
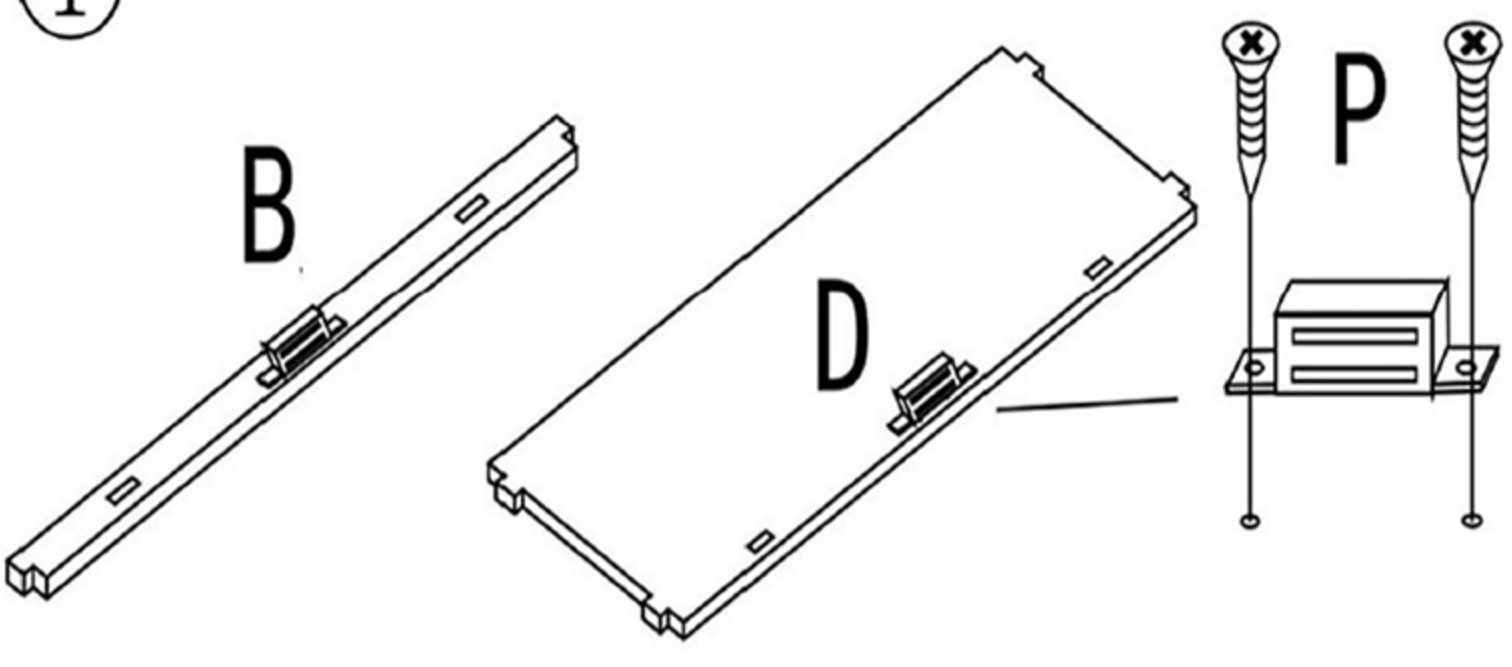
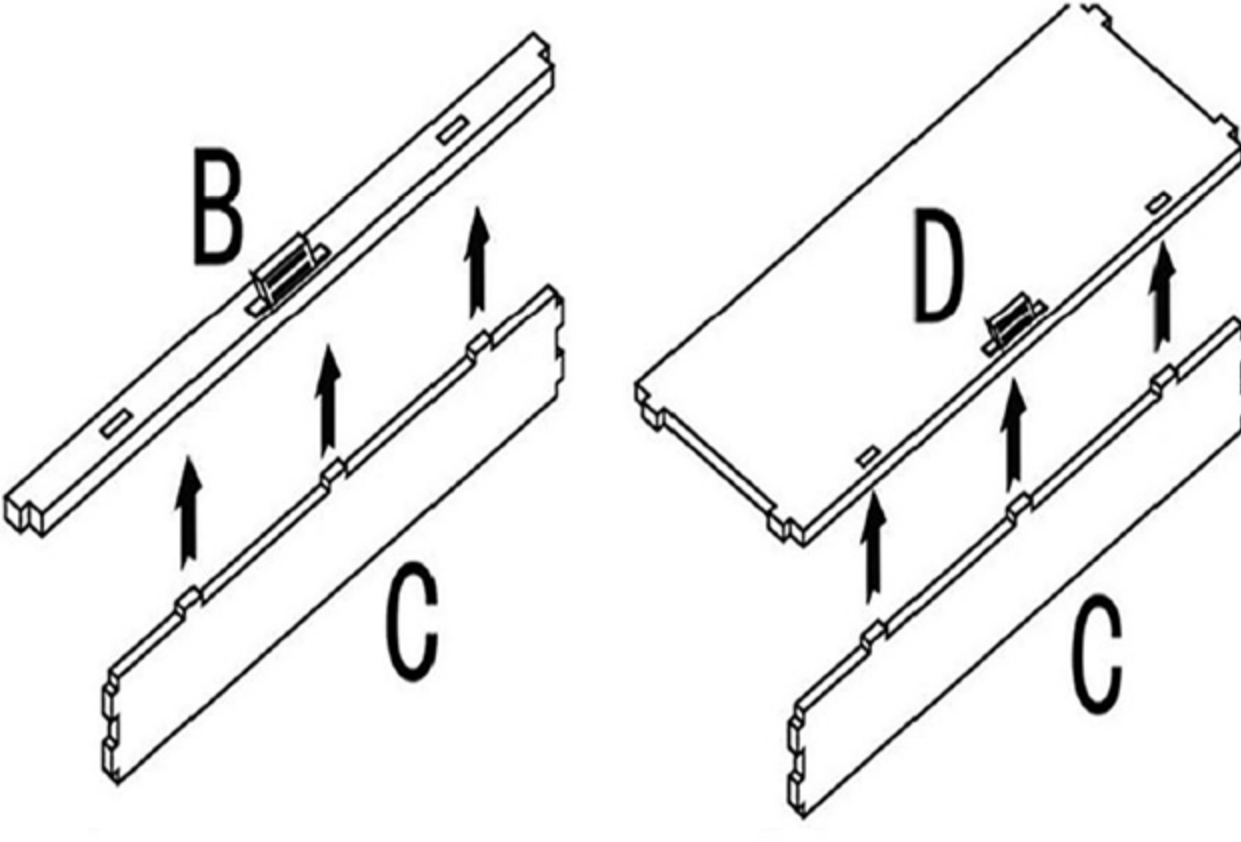
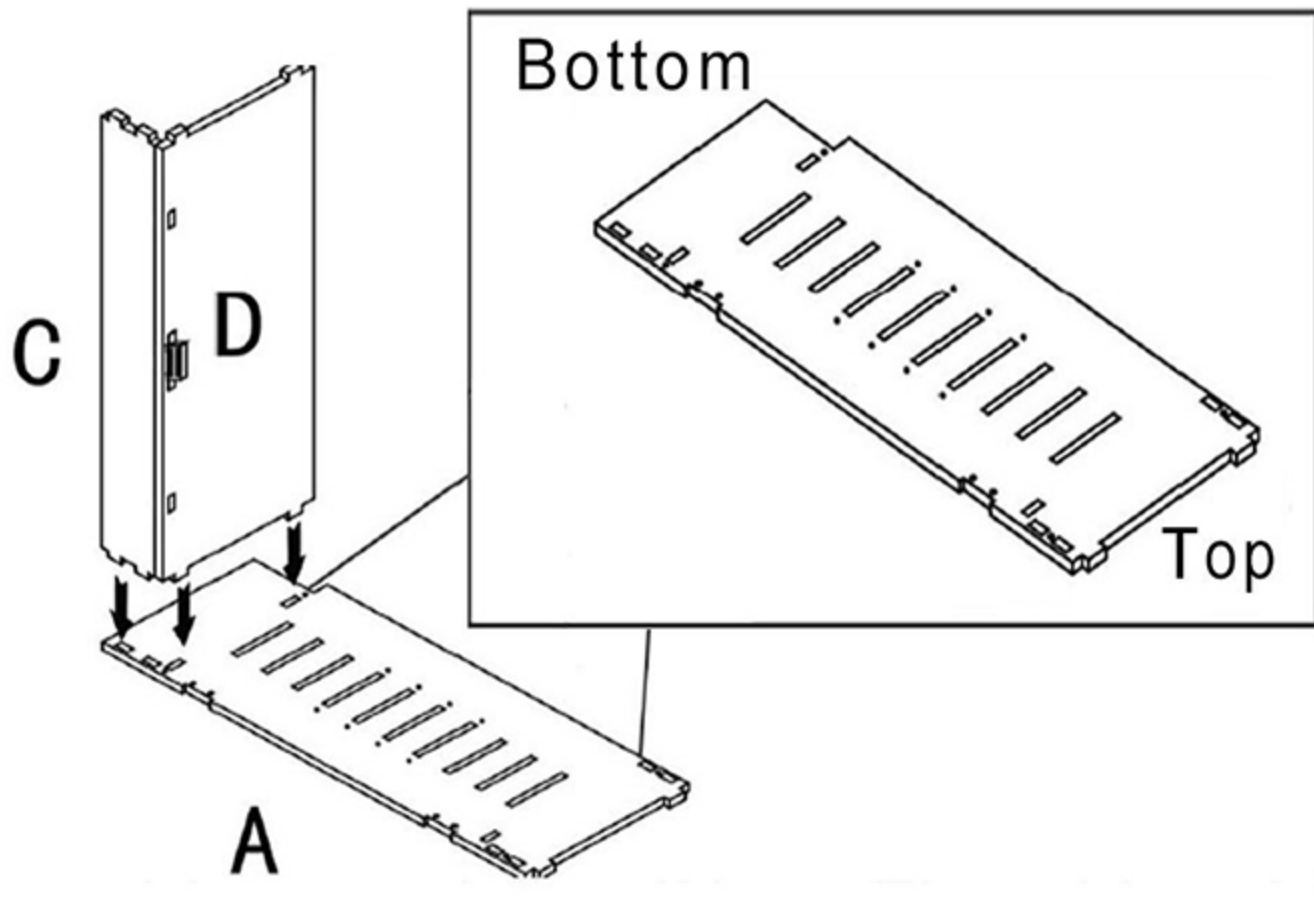
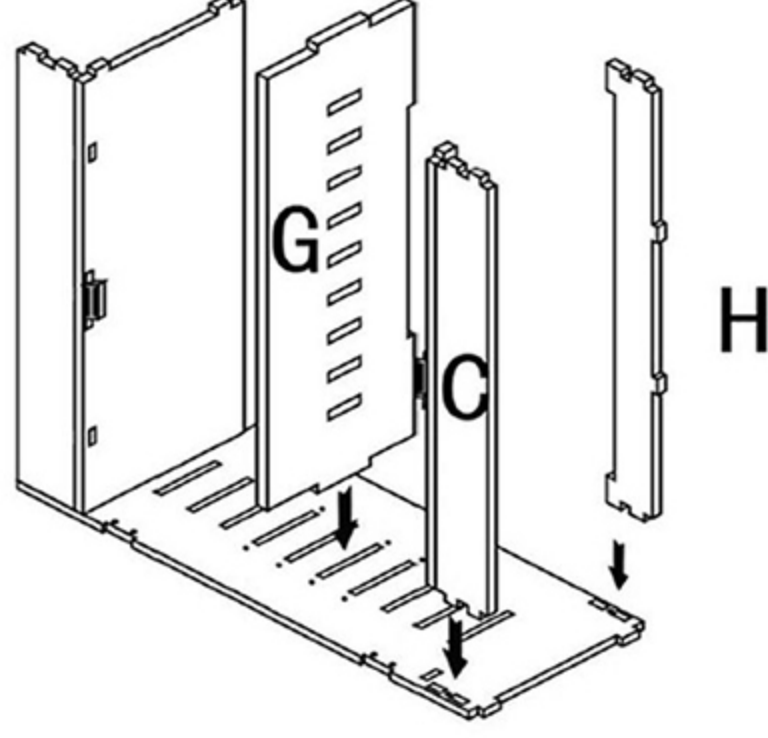
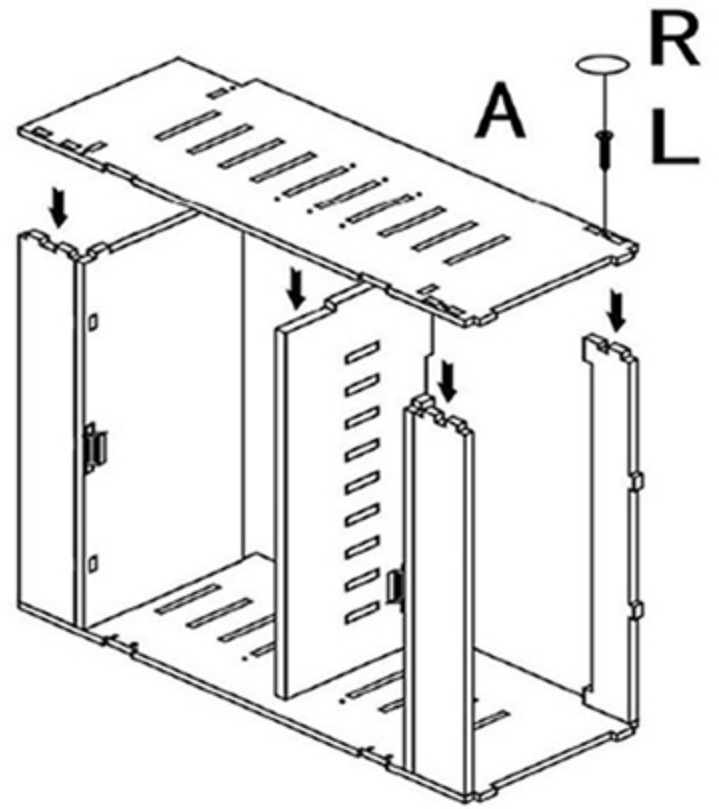
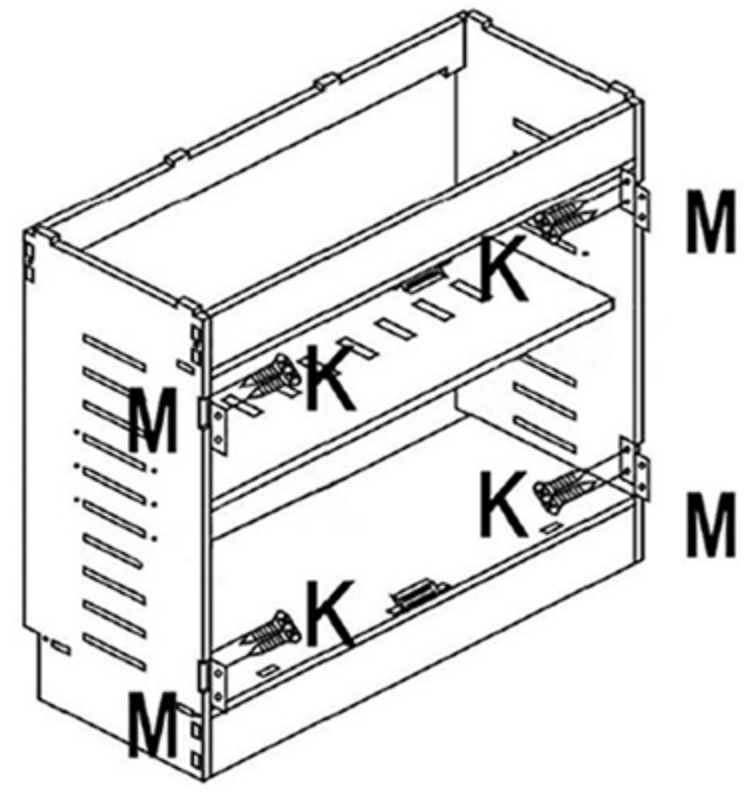
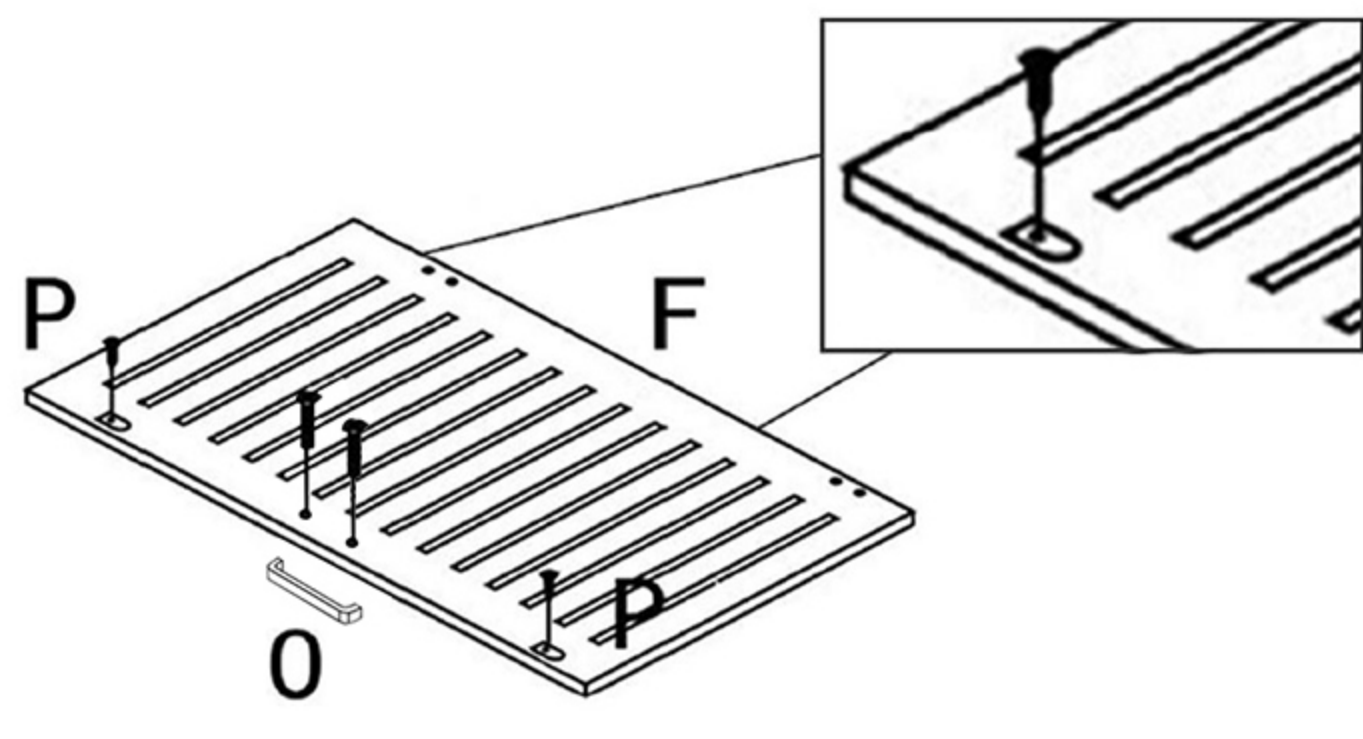
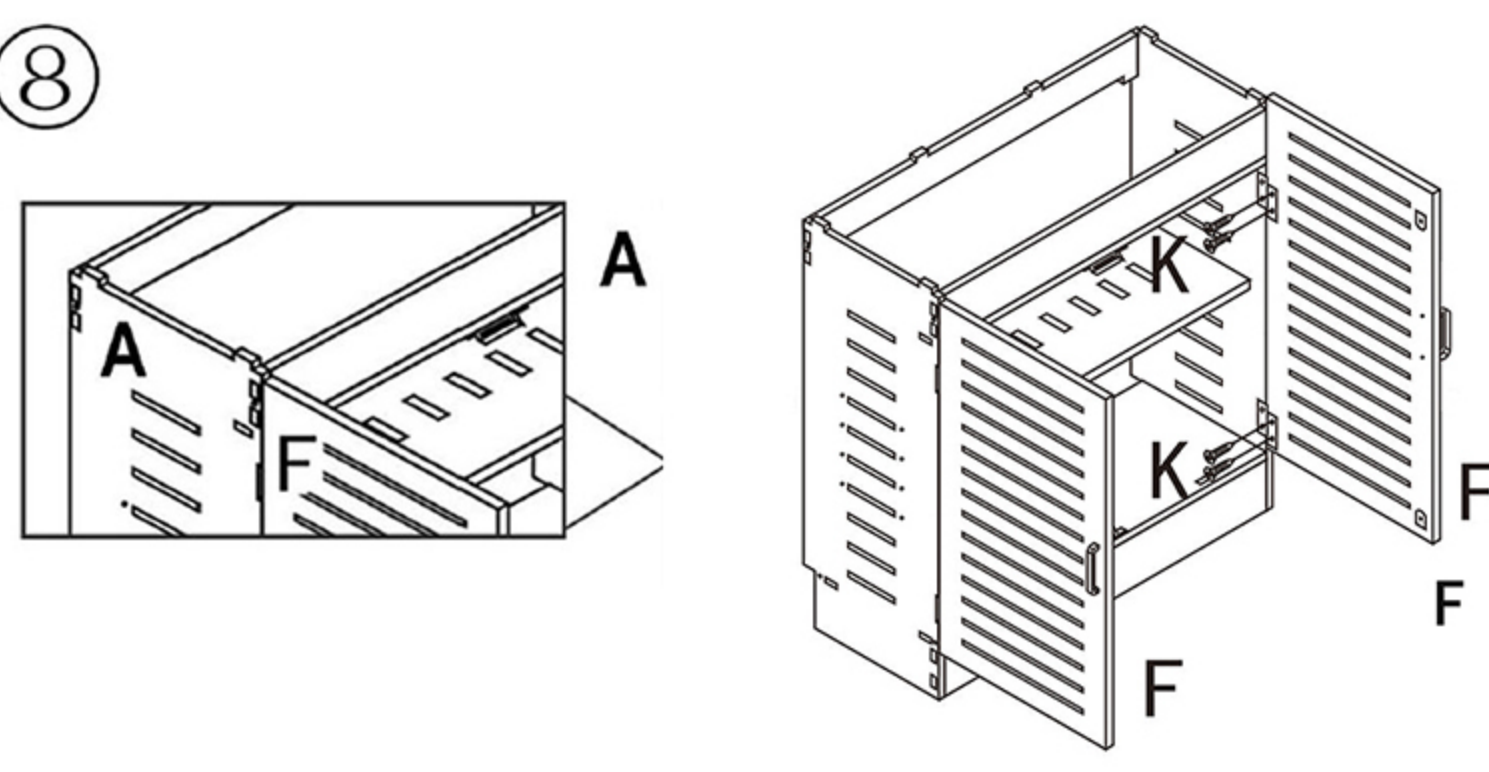
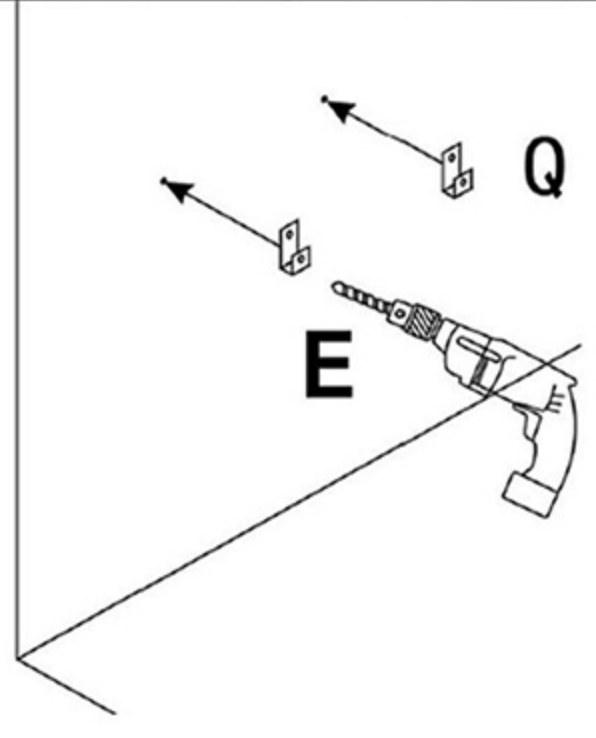





INSTALLATION INSTRUCTION

A  Side Panel X2	B  Fixed Plate X1	C  (Front) Upper and Lower Plate X2	D  Bottom Panel X1	E  Nail X4
F  Door Panel X2	G  Shelf X1	H  (Back) Transom Panel X1	J  Top Panel X1	K  4*12 Screw X26
L  4*25 Screw X12	M  Hinge X4	O  Doorknob X2	P  3*12 Screw X8  Door Magnet X2  Door Magnet Component x4	Q  Fixed Hook X2
R  Screw Cap X12				

①  Install the door magnets on the fixed plate and bottom panel (Fix with 3*12 screws)	②  Connect the upper plate and fixing plate, connect the lower plate and bottom panel	③  Lay the side panel flat (Note: The side with hinge holes facing upwards) Connect the side panel and bottom panel
--	---	--

④  Align the tenon holes and tilt them to fit in (Shelf, Transom Panel, Upper Plate)	⑤  Install the side panels (Fix with 4*25 screws and the screw caps)	⑥  Install the hinges (Fix with 4*12 screws)
--	---	--

⑦  Install the door magnet components and doorknobs	⑧  Install the door panels (Fix with 4*12 screws)	⑨  Determine the location, drill holes in the wall, and fix the hook with nails
---	--	---

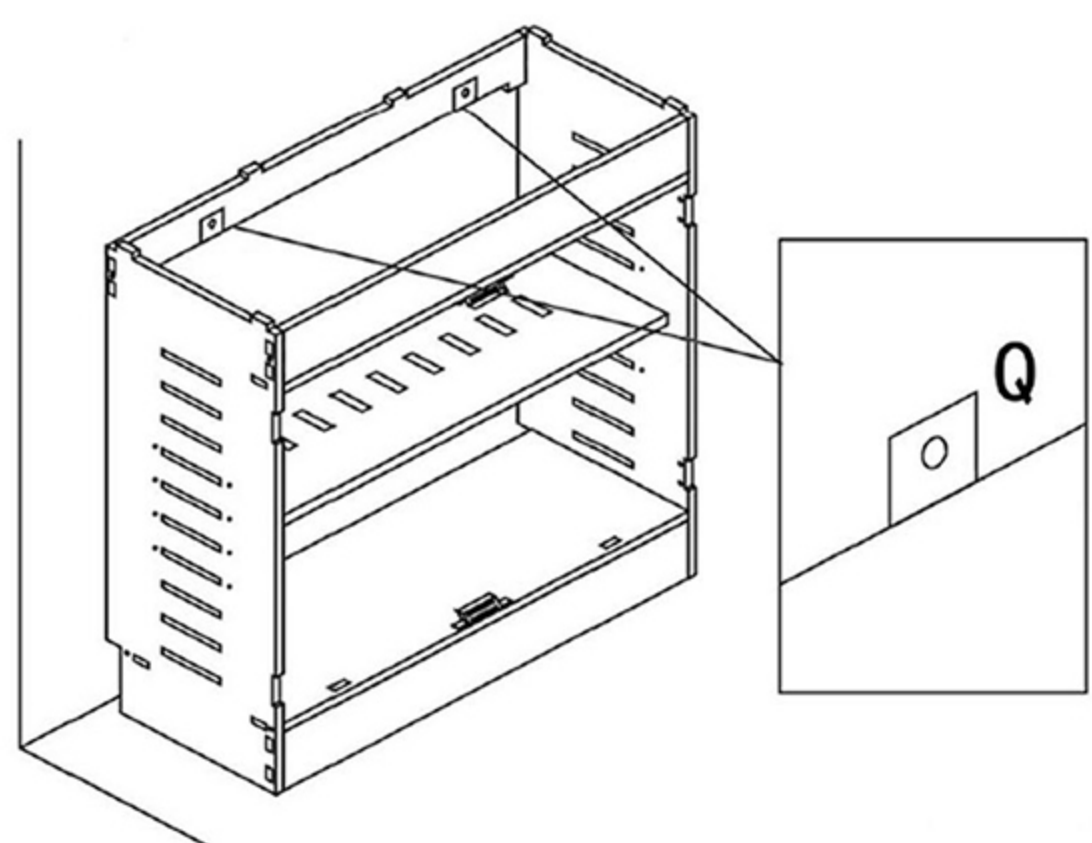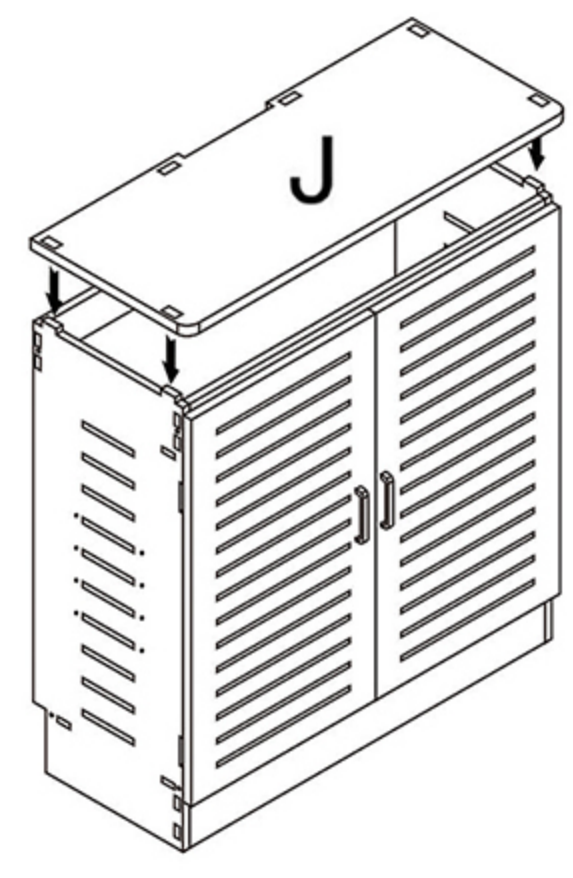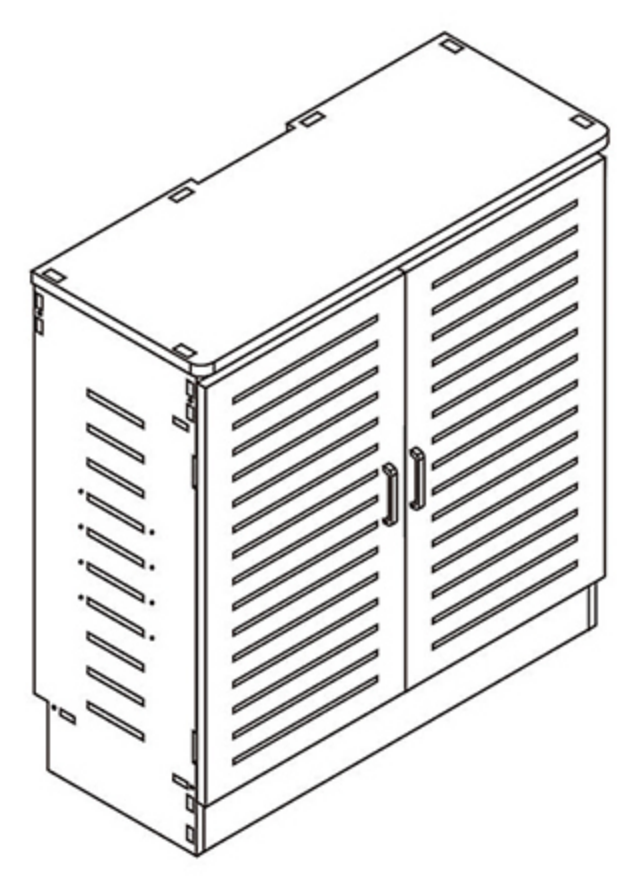⑩  Place it on the hook	⑪  Install the top panel	⑫  Instalation is complete
---	---	--