



ASSEMBLY INSTRUCTIONS

ITEM# N719P300570 N719P300571
N719P300572 N719P300573

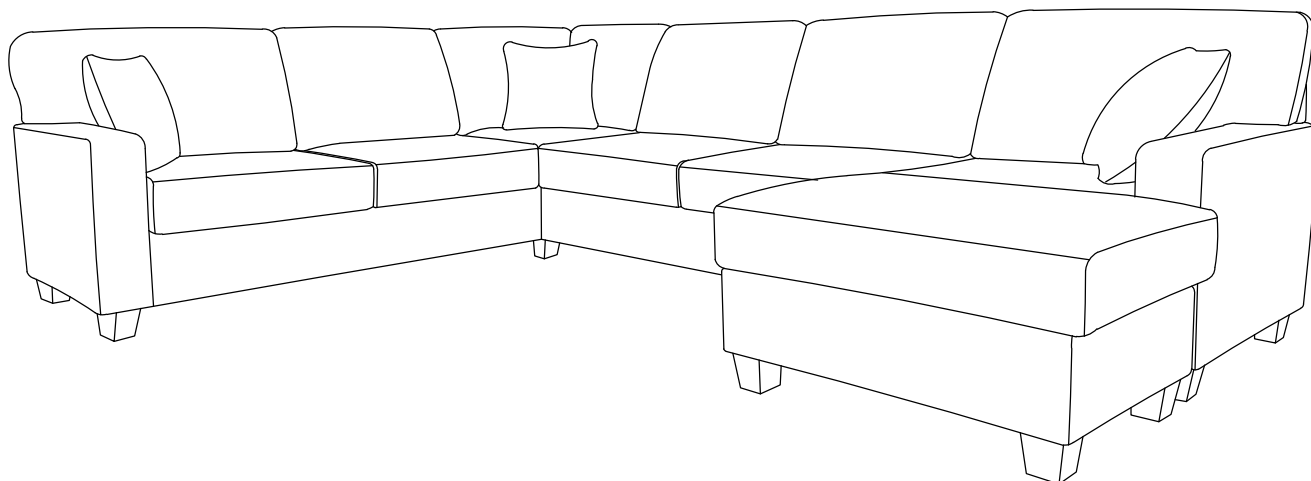







Sectional Sofa

Components:

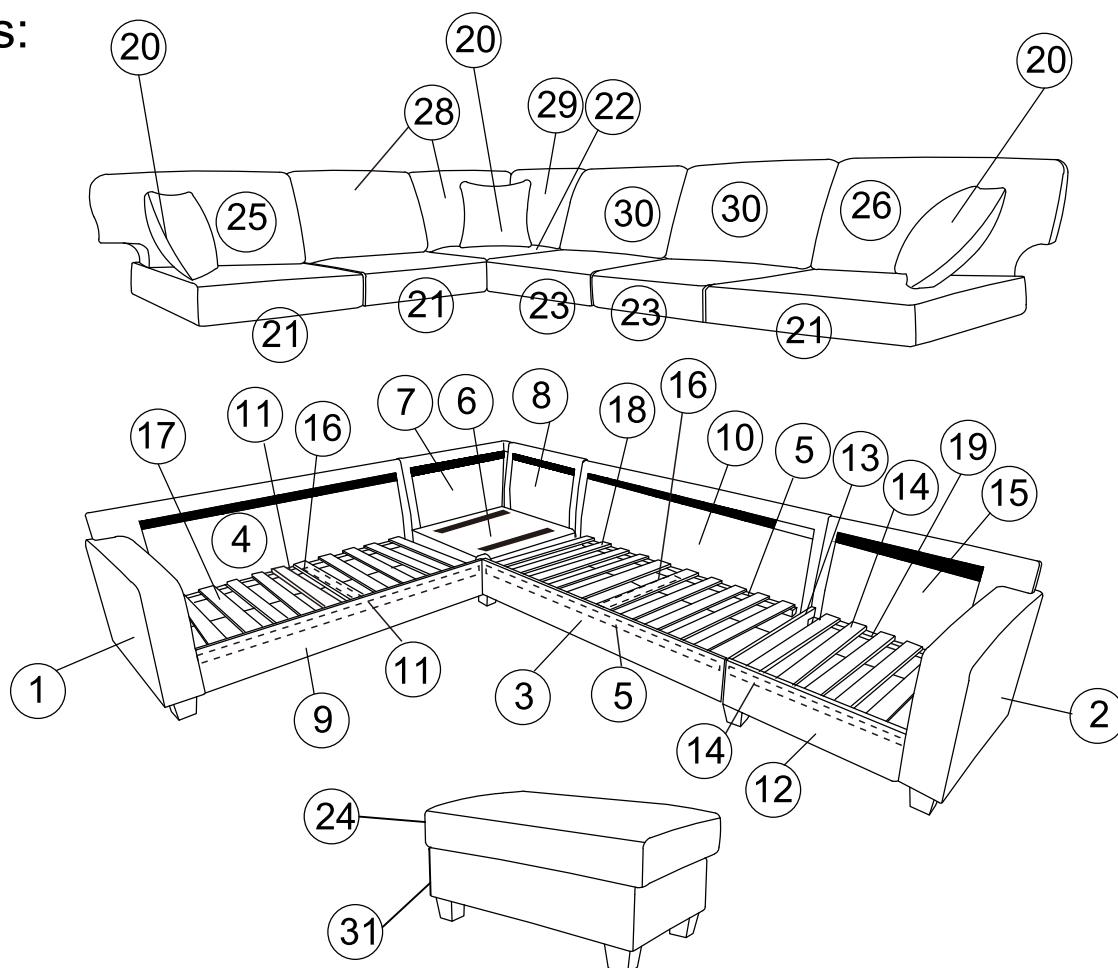


PACK LIST





N719P300570

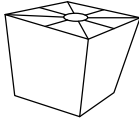9  Left 2S Seat front panel 1PC	4  Left 2S backrest 1PC	11  Left 2S Seat wood brace 2 PC	3  Armless 2S Seat front panel 1PC	10  Armless 2S backrest 1PC	5  Armless 2S Seat wood brace 2 PC
14  Right 1S wood brace 2 PC	A  LEG 4PC	B  M8*70MM 14 PCS	C  M8*35MM 20PCS	D  M8*18MM 48PCS	E  M8x19x2 60PCS
F  Metal bracket 11PCS	G  Metal bracket 1 PC	H  Wrench 1PC	I  Connect Bar 3PCS	12  Right 1S front panel 1PC	16  Connect panel 2PCS
13  Right 1S side panel 1PC					




N719P300571

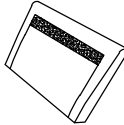1  Left Arm 1 PC	2  Right Arm 1PC	7  corner backrest 1PC	8  corner backrest 1PC	30  Armless 2S Back cushion 2PCS
---	---	---	---	---


N719P300572

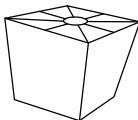15  Right 1S wood brace 1PC	25  Left 2S side Back cushion 1PC	26  Right 1S Back cushion 1PC	28  corner back cushion and left 2S middle Back cushion 2PC	29  Corner Back cushion 1PC
31  Stool base 1PC	20  Pillows 3 PCS	19  Right 1S Seat Slats 1PC	24  Stool Seat cushion 1PC	A  LEG 10 PCS

N719P300573


6  corner base 1PC	17  Left 2S Seat Slats 1PC	18  Armless 2S Seat Slats 1PC	21  Seat cushion 3PCS	22  Corner Seat cushion 1PC	23  Armless 2s Seat cushion 2PCS
--	---	--	---	--	---

Assemble the Corner.

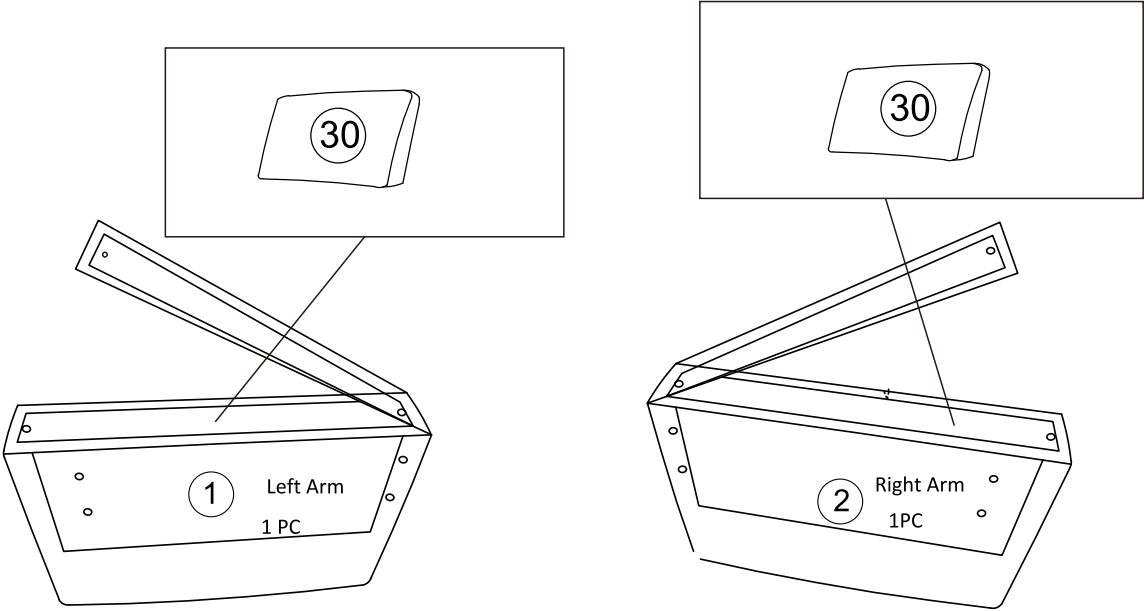


STEP 1:

	A X 4
	B X 4
	E X 4
	H X 1

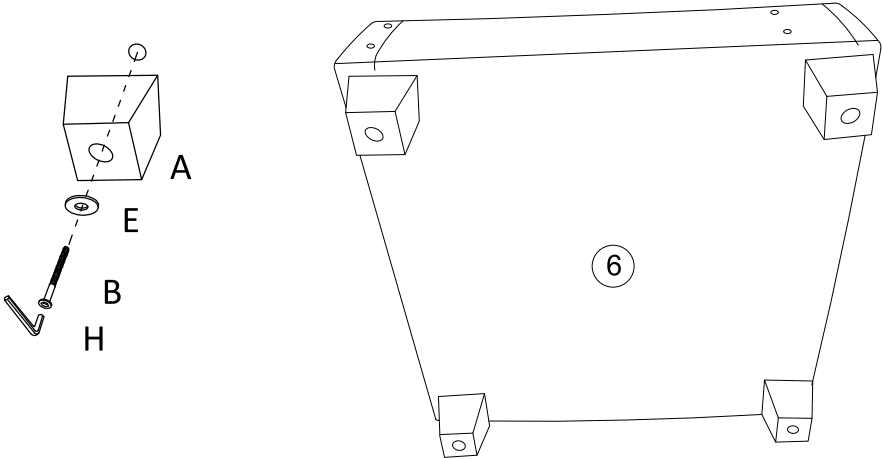


STEP 2:

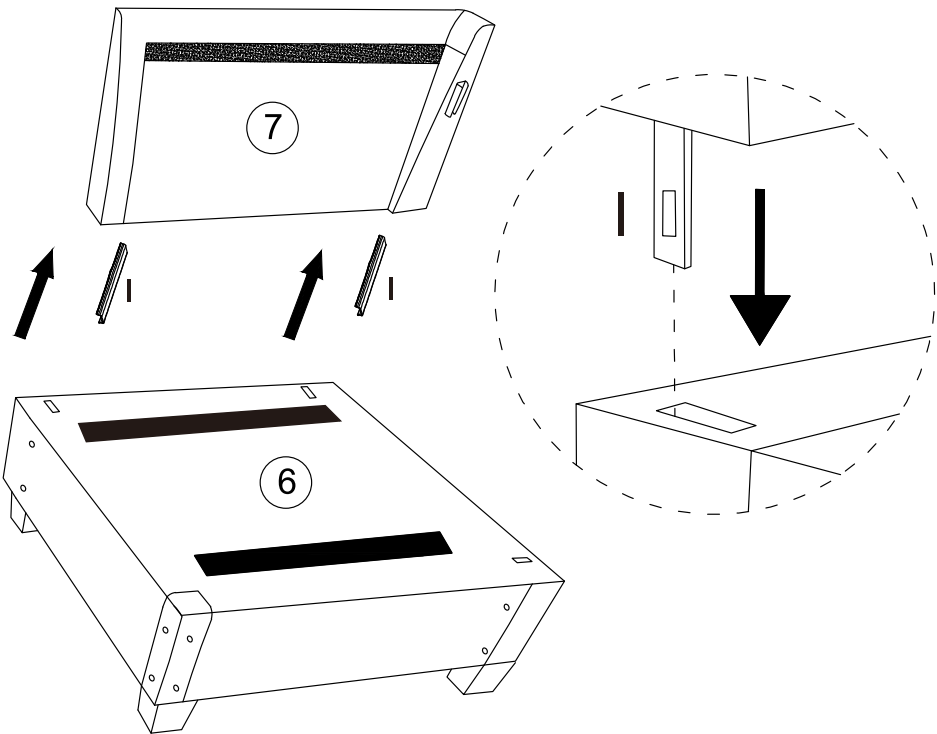



	I X 2
--	-------

STEP 3:

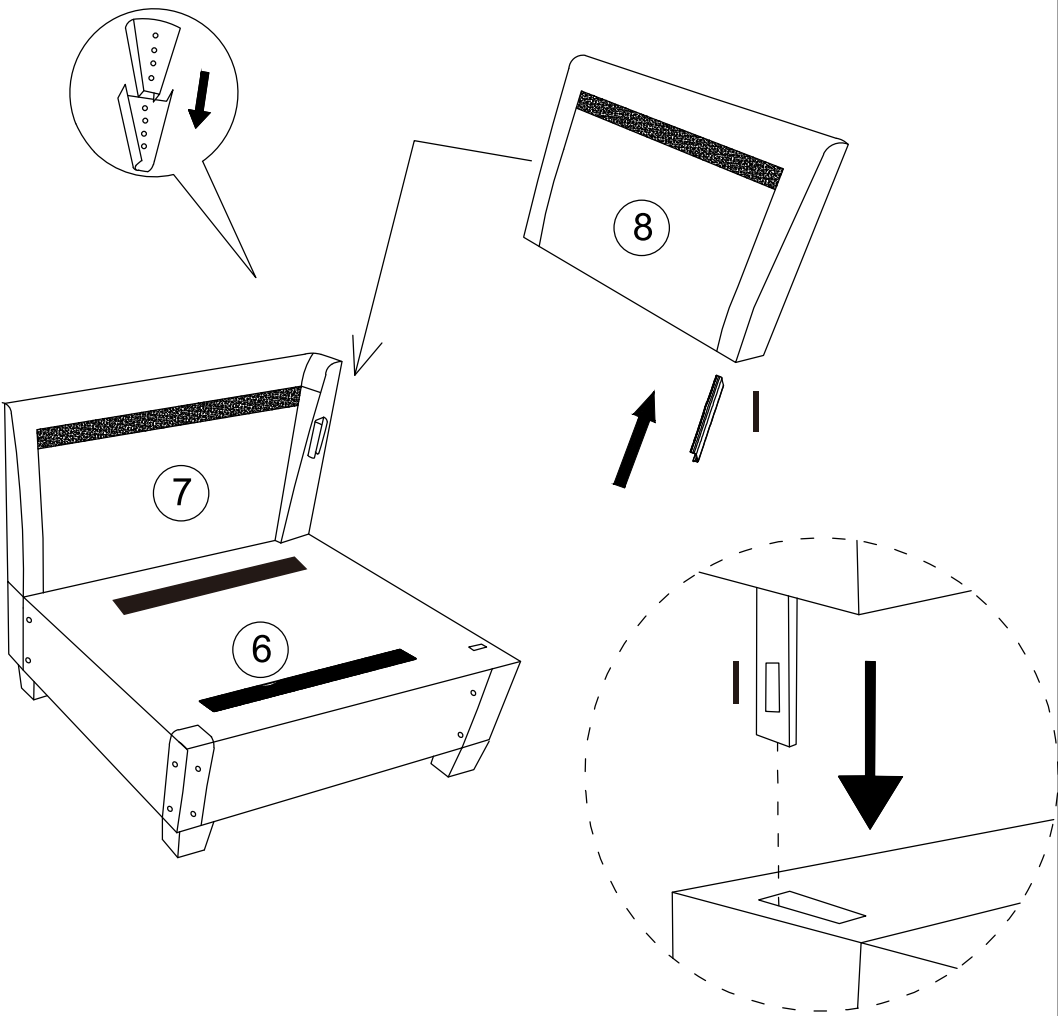

1 X 1


STEP 4: Tighten half.

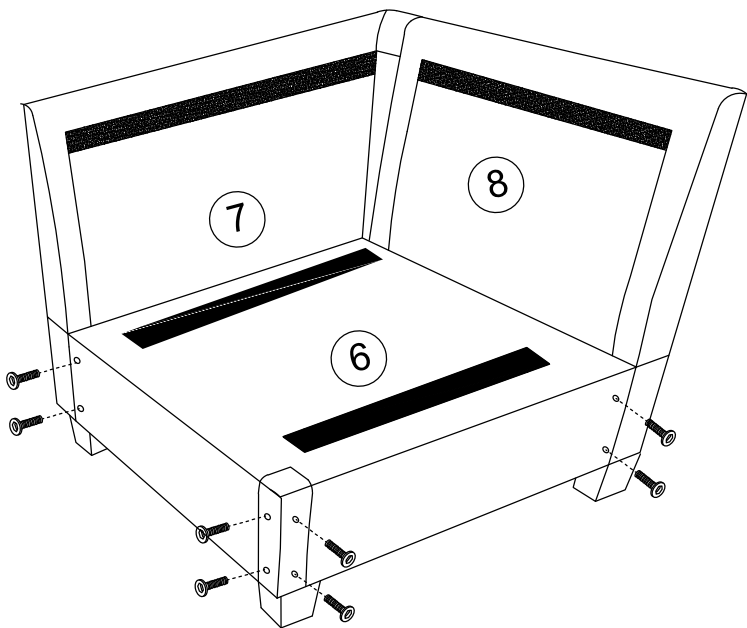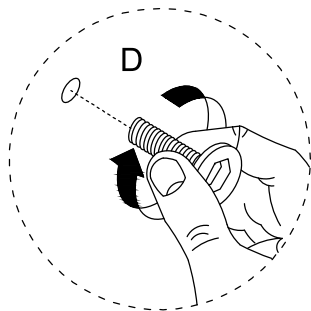

D X 8


Assemble the Left arm 2S.

STEP 5:

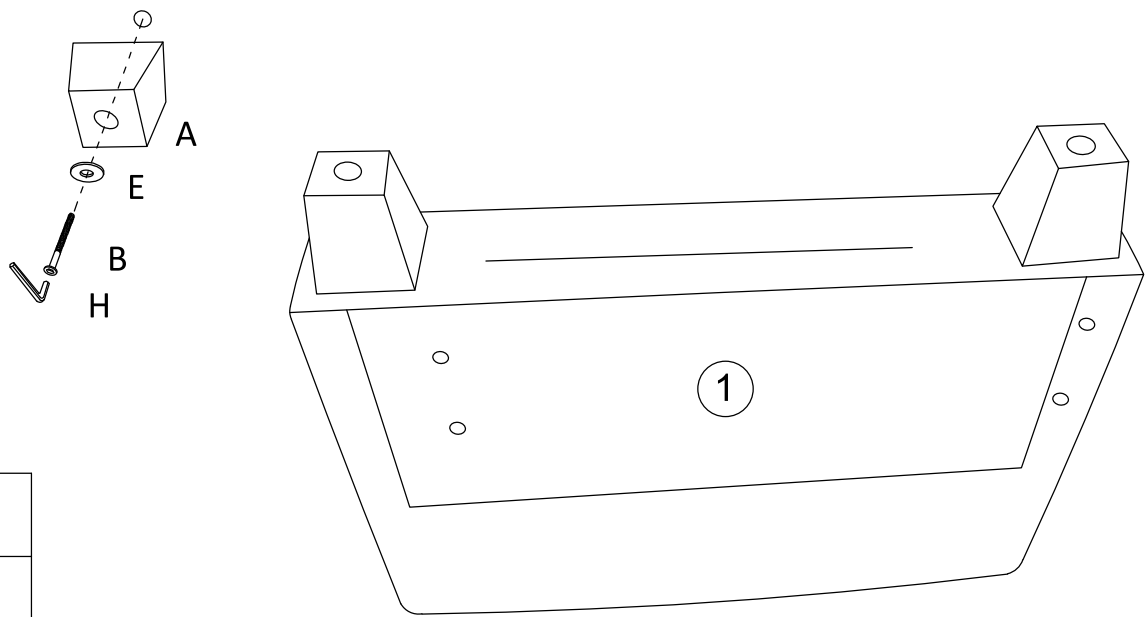



	A X 2
	B X 2
	E X 2
	H X 1

STEP 6:

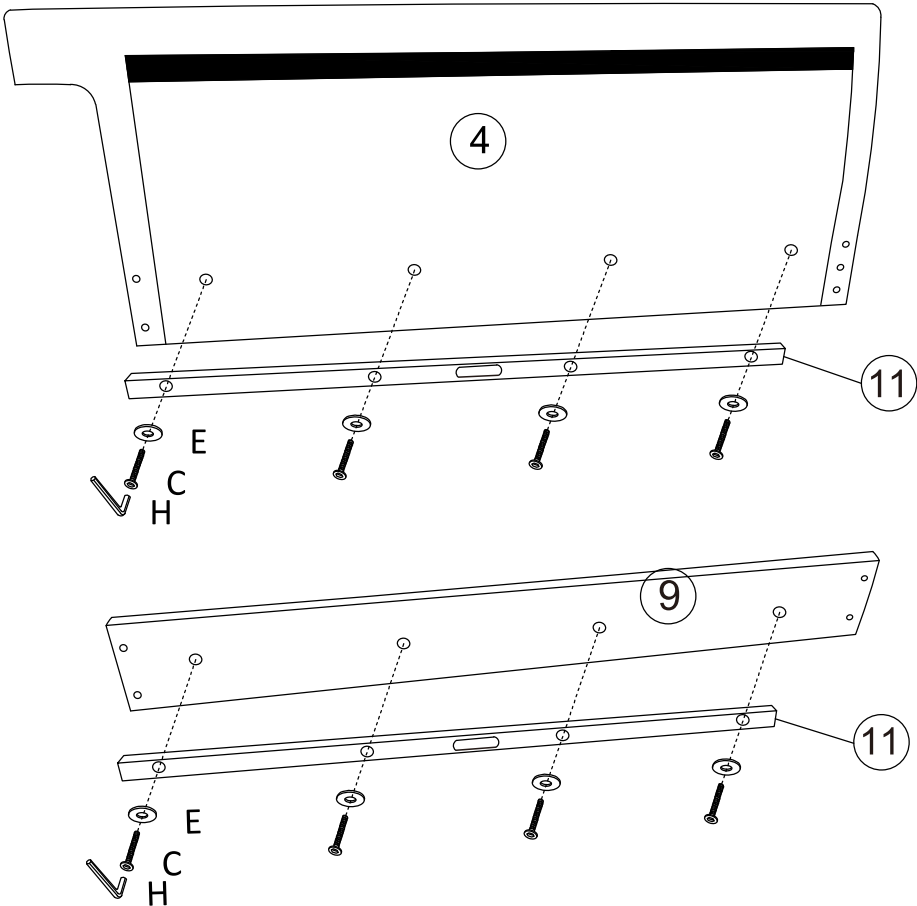



	C X 8
	E X 8
	H X 1

STEP 7:

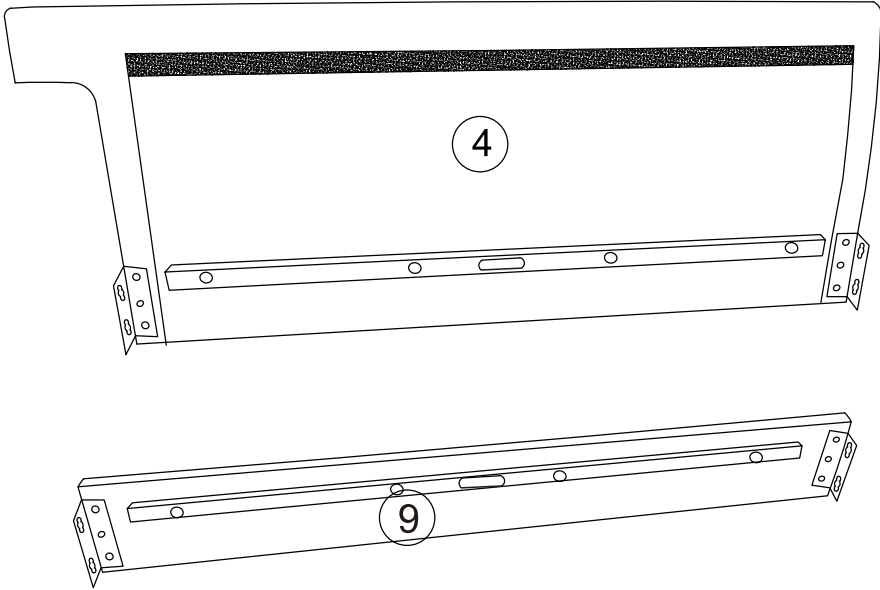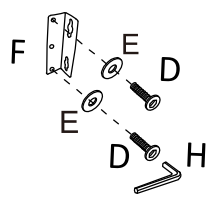


	E X 8
	F X 4
	D X 8
	H X 1

STEP 8:Tighten half.

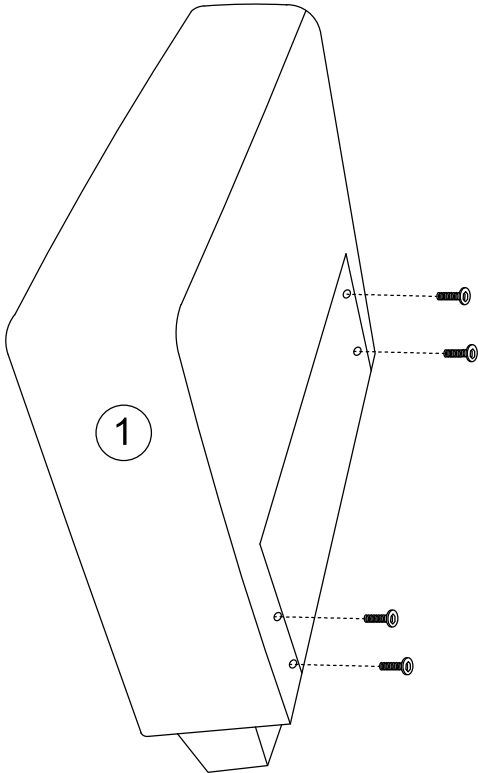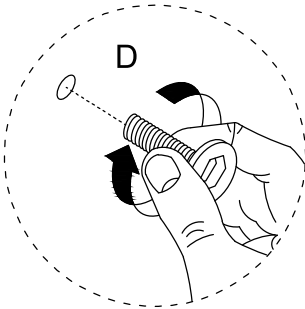

	D X 4
--	-------




STEP 9:

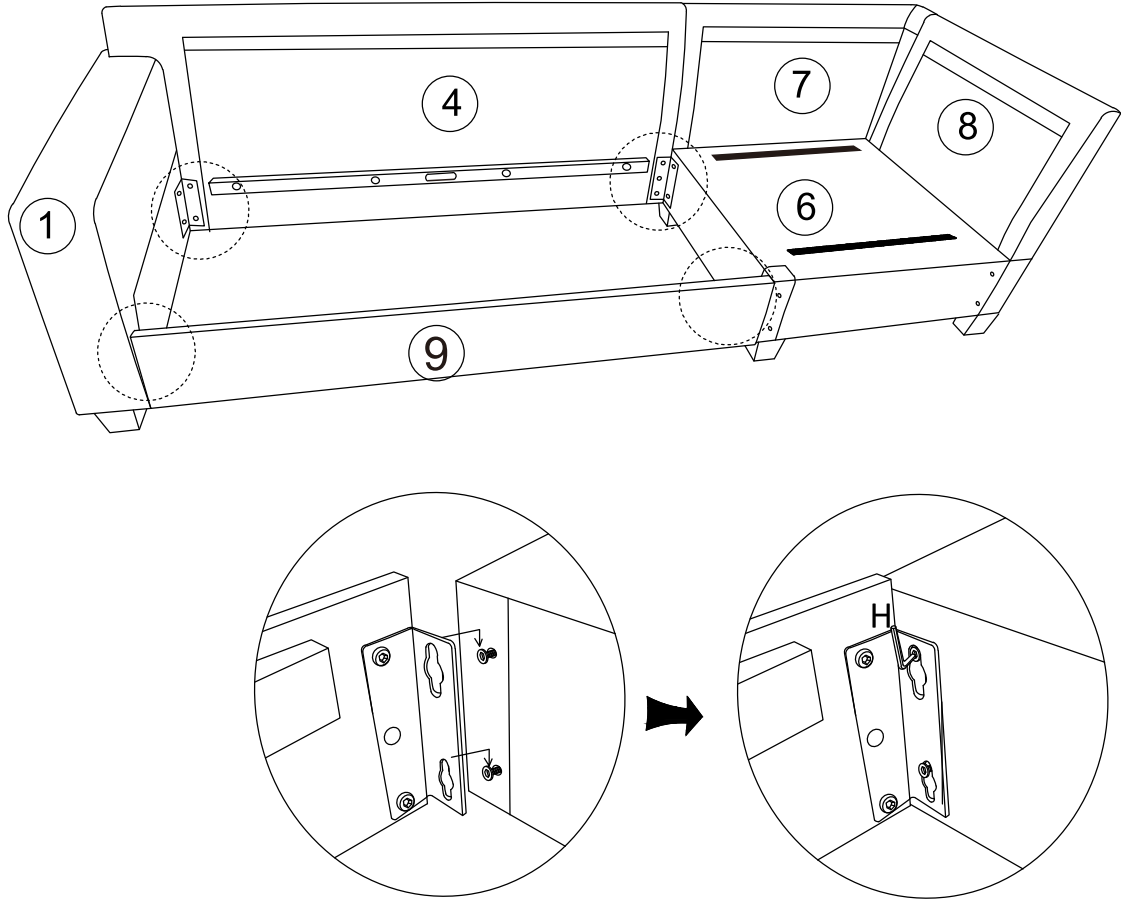

	H X 1
--	-------



Assemble the Right arm 1S.

STEP 10:

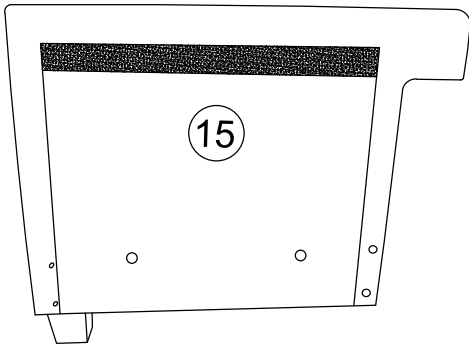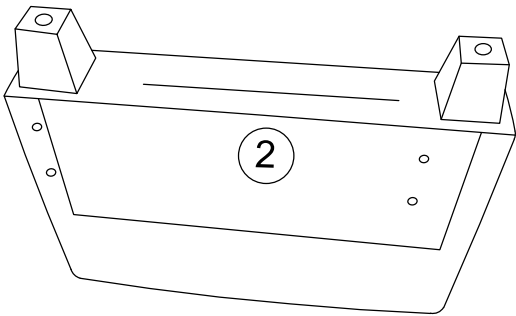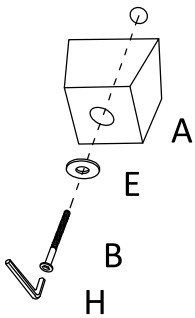




	A X 3
	B X 3
	E X 3
	H X 1

STEP 11:

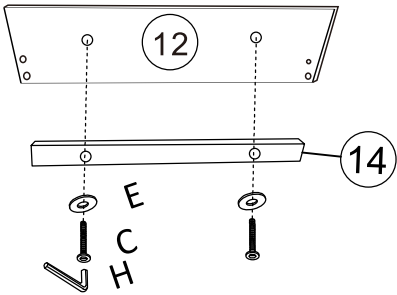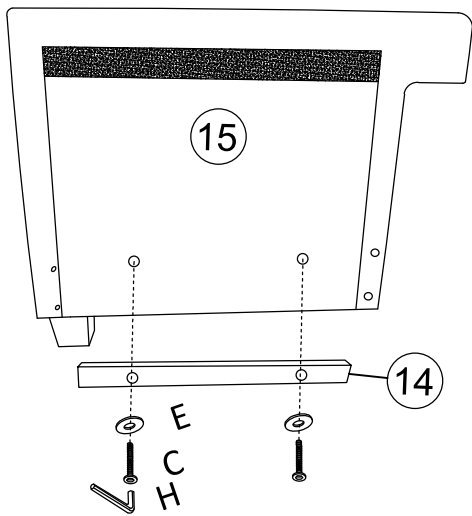





	CX4
	EX4
	HX1

STEP 12: Tighten half.

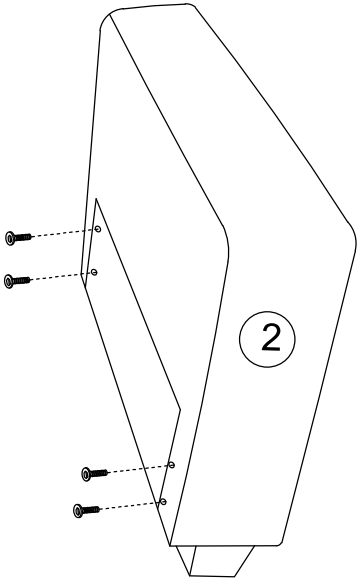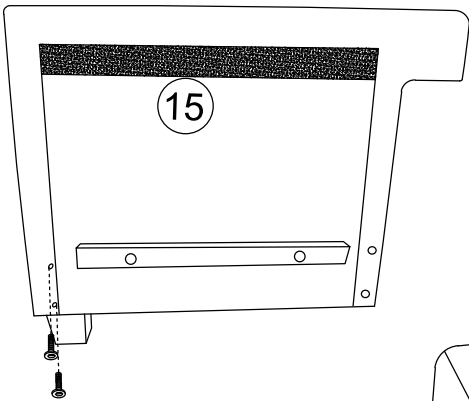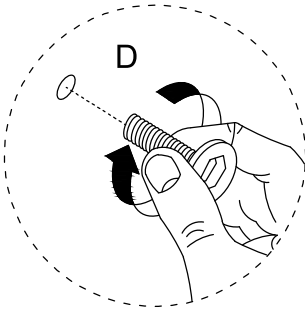



	DX6
--	-----

STEP 13:

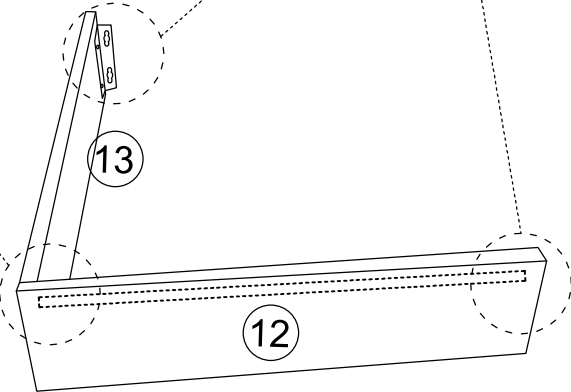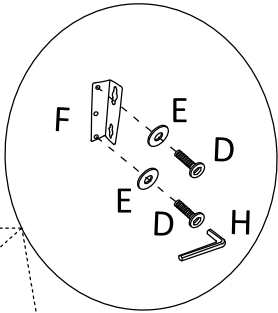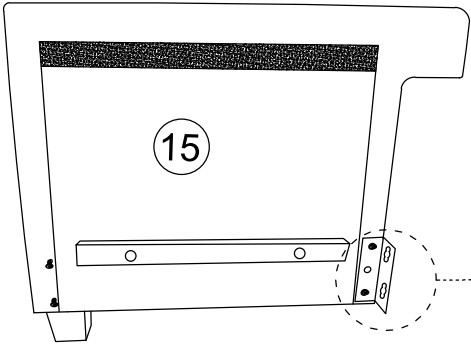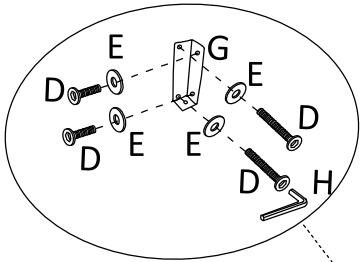


	E X10
	G X1
	F X3
	D X10
	H X1

STEP 14:

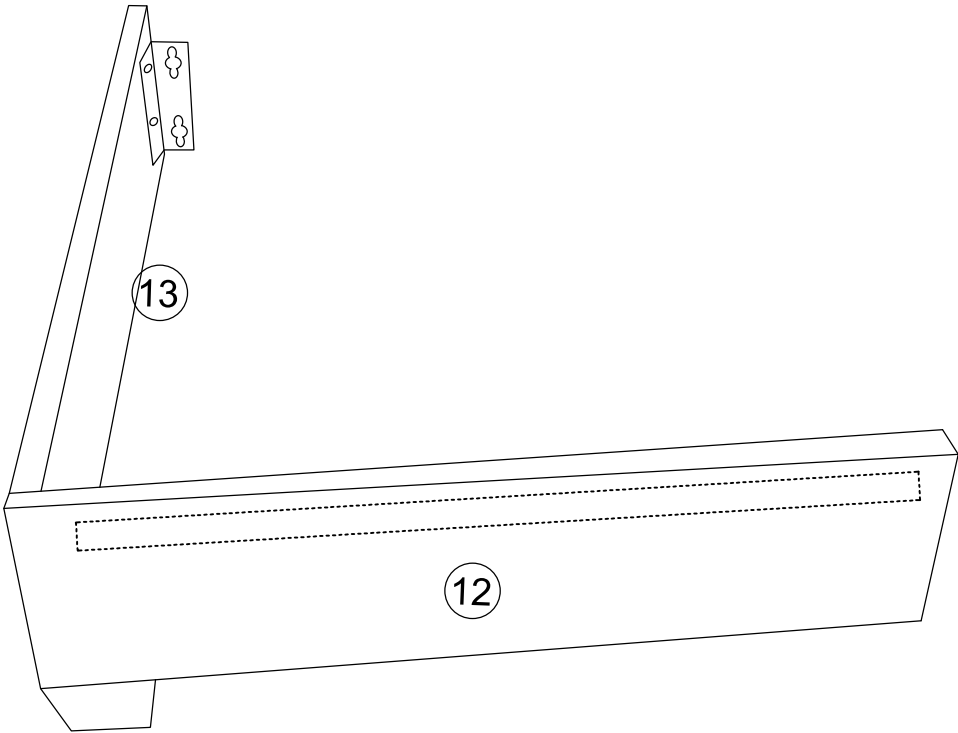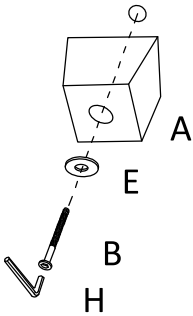

	A X1
	B X1
	E X1
	H X1


STEP 15:

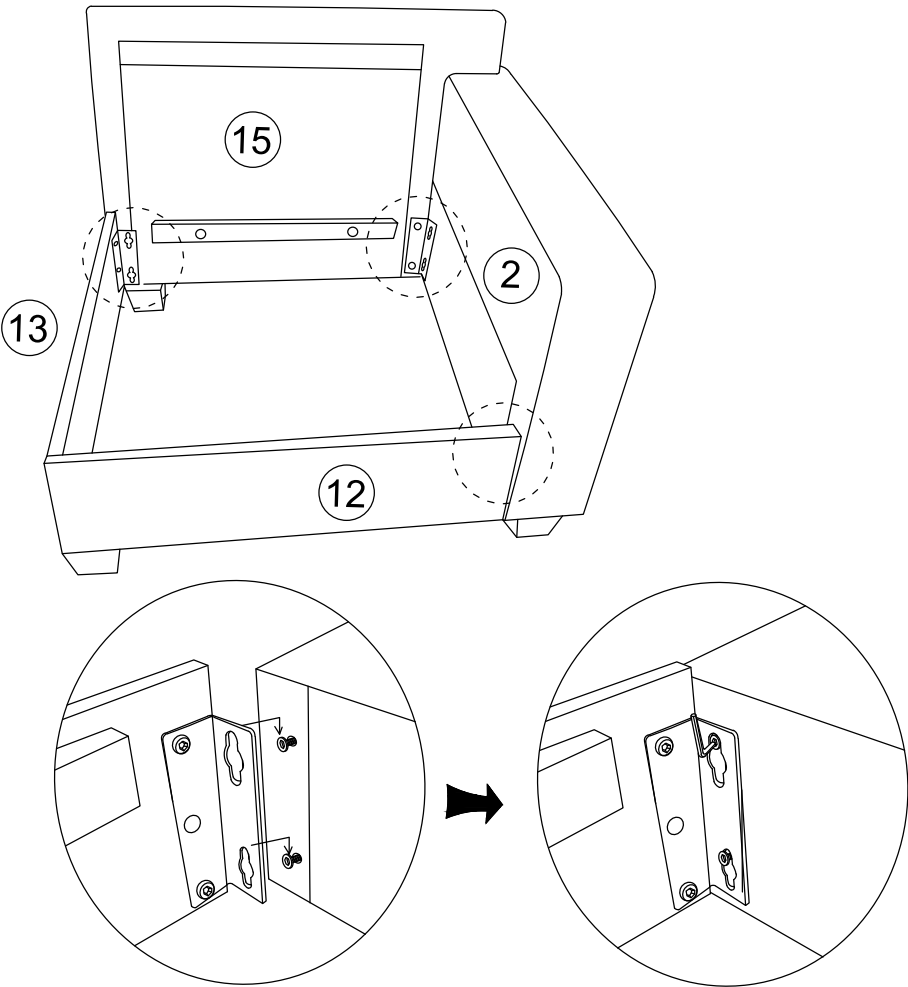

H X 1


Assemble the Armless 2S.

STEP 16: Tighten half.

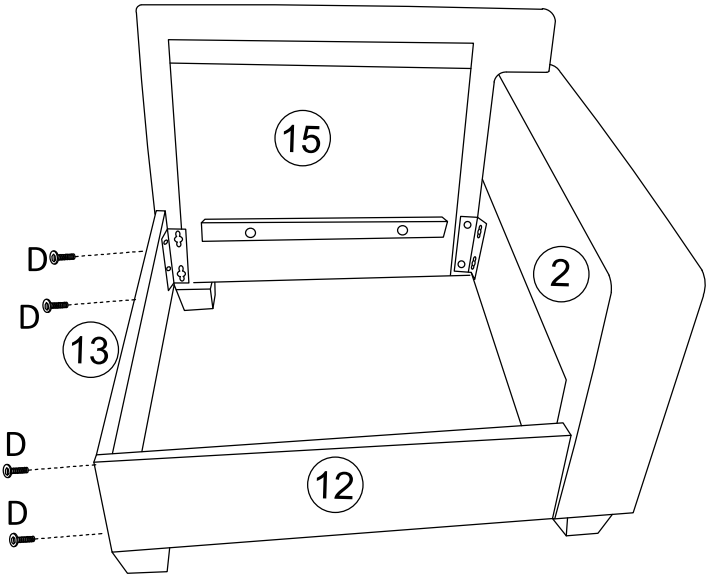



D X 4

STEP 17:

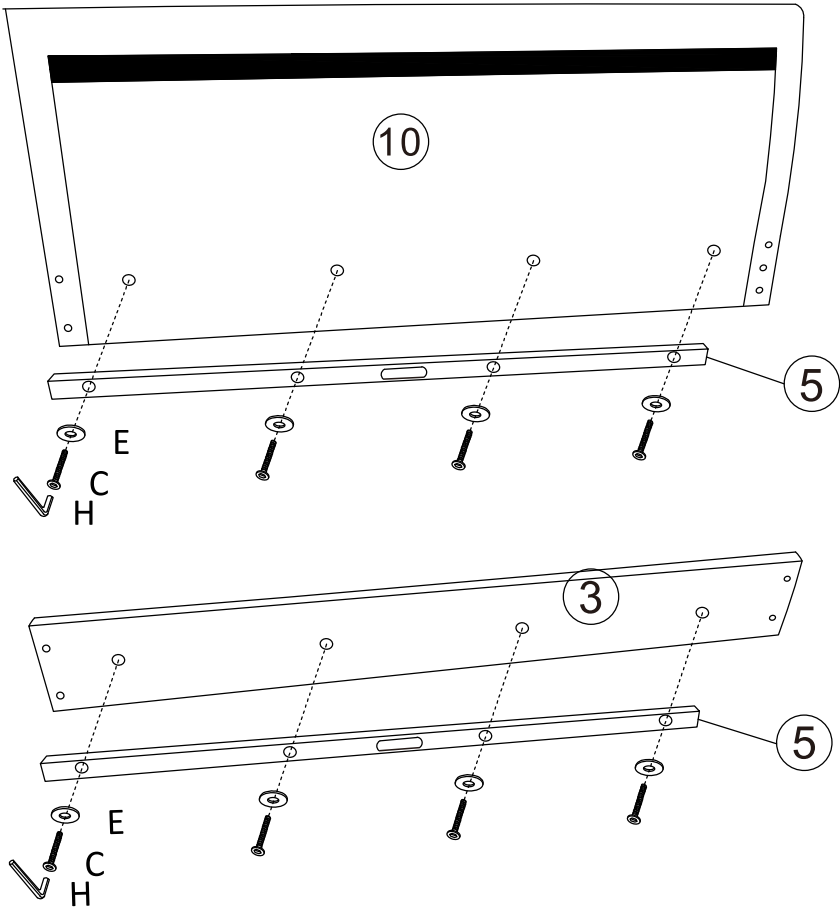


	C X 8
	E X 8
	H X 1

STEP 18:

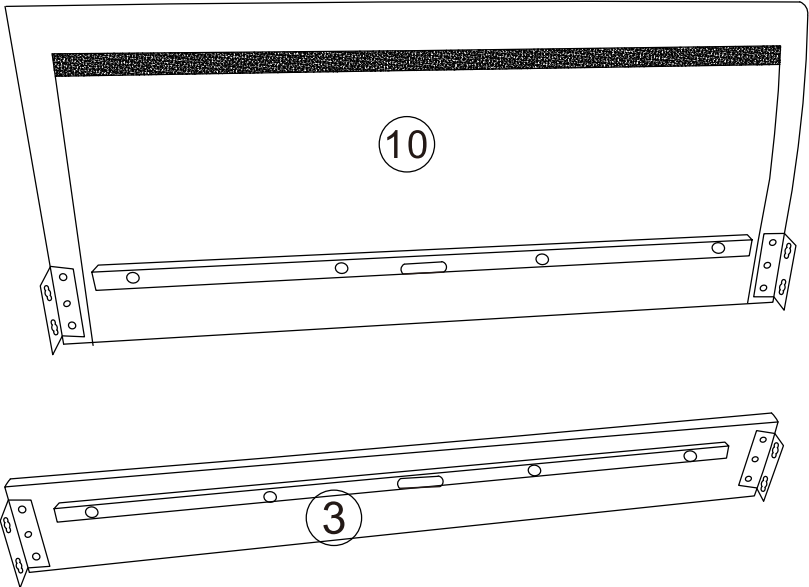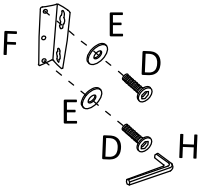


	E X 8
	F X 4
	D X 8
	H X 1

STEP 19:

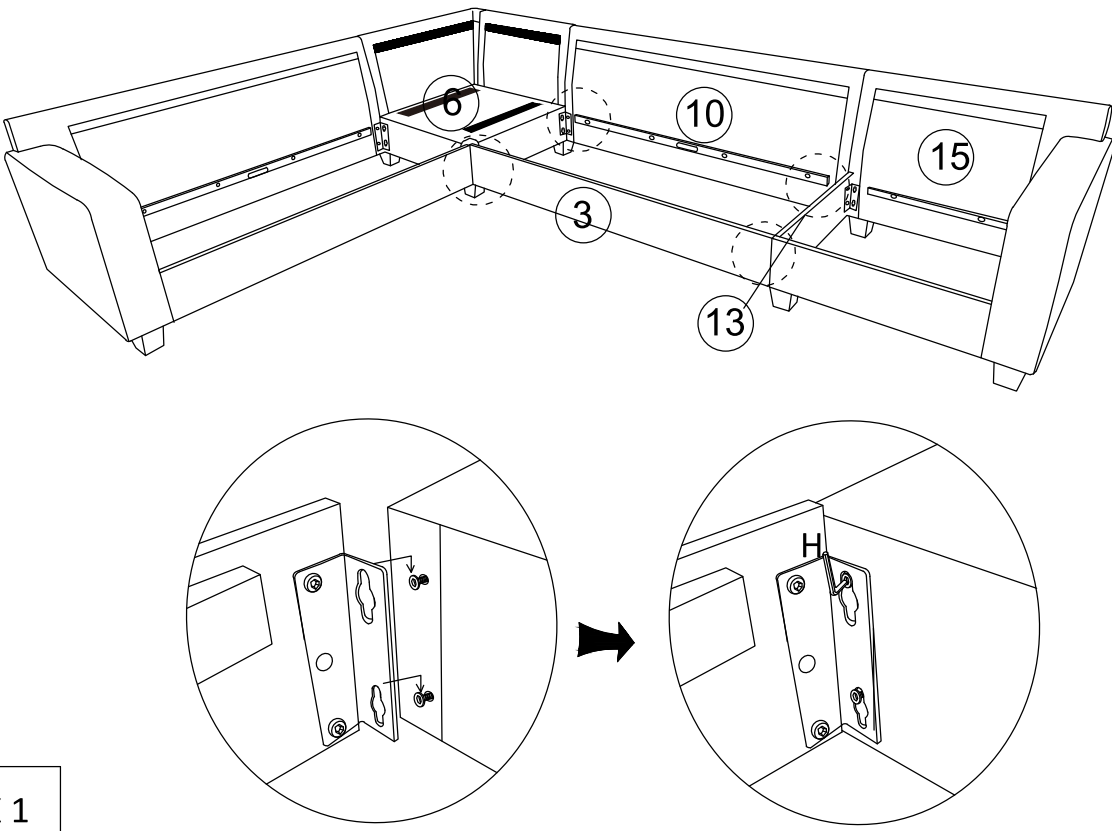


	H X 1
--	-------

STEP 20:

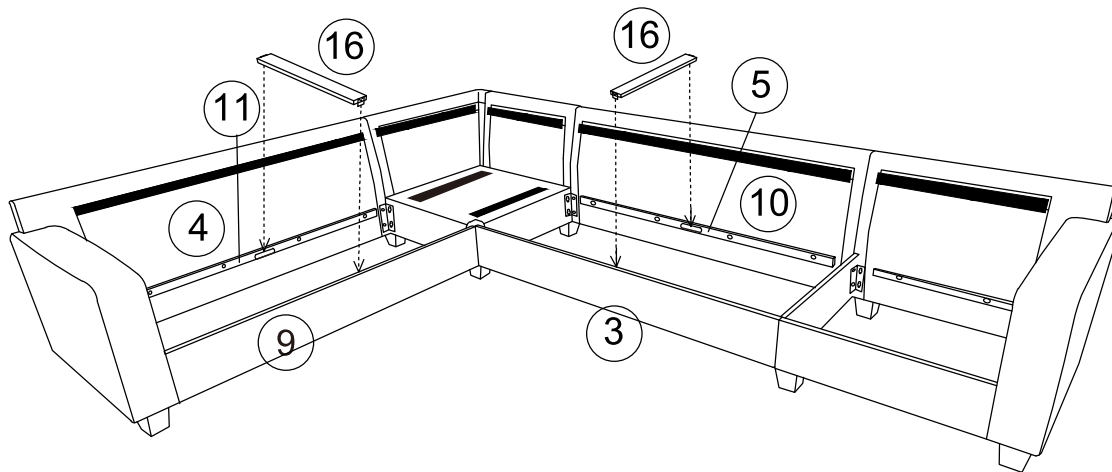

TIPS:

- 1, Please do not open the compress packaging until your sofa frame is completely assembled.
- 2, Compress cushions or pillows need to fully fluffed within 72 hours for your perfect use.
- 3, Please keep children away from plastic bag or any small pieces of stuff.
- 4, After assembly is completed, don't forget to pat the back cushions and seat cushions, make them recovering better. And wait 72 hours for fully rebound.

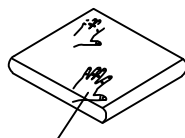


Pat and tidy the cushions

- 5, Cushions should be regularly maintained for perfect use.

STEPS for compressed pack:

(1) open the carton -- (2) take out the compressed pack -- (3) cut from edge and take out the cushion -- (4) Put the cushion on floor -- (5) Pat and tidy the cushion -- (6) Wait to rebound completely after 72 hours.

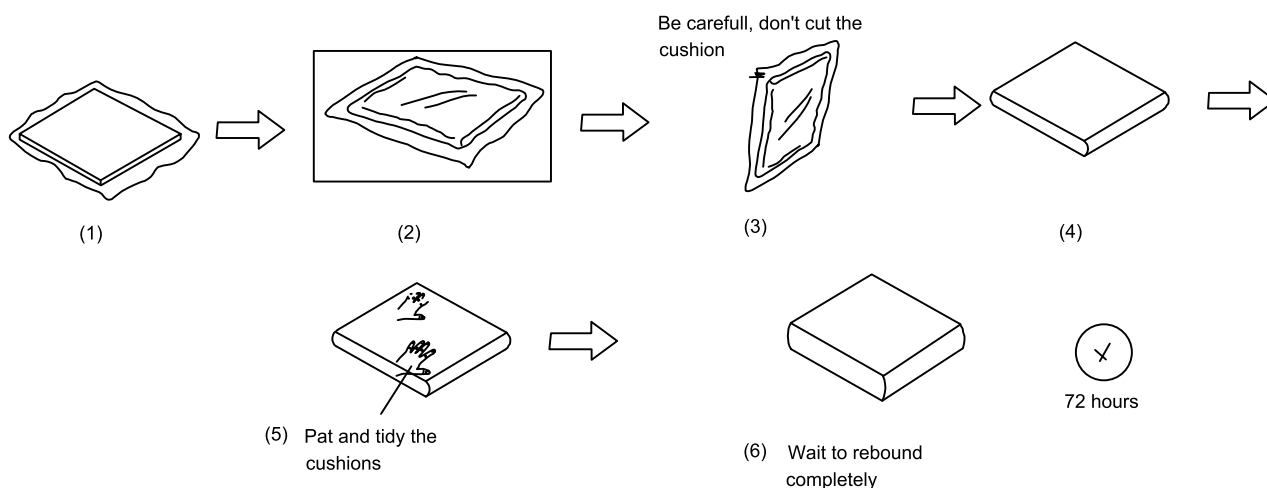


CAUTION


:

PLEASE DO NOT OPEN COMPRESSED PLASTIC CUSHION BACK UNTIL YOUR SOFA FRAME IS COMPLETELY ASSEMBLED, OTHERWISE, IT CAN'T BE REPACKED IN ORIGINAL PACKING WAY TO RETURN.


STEP 21:

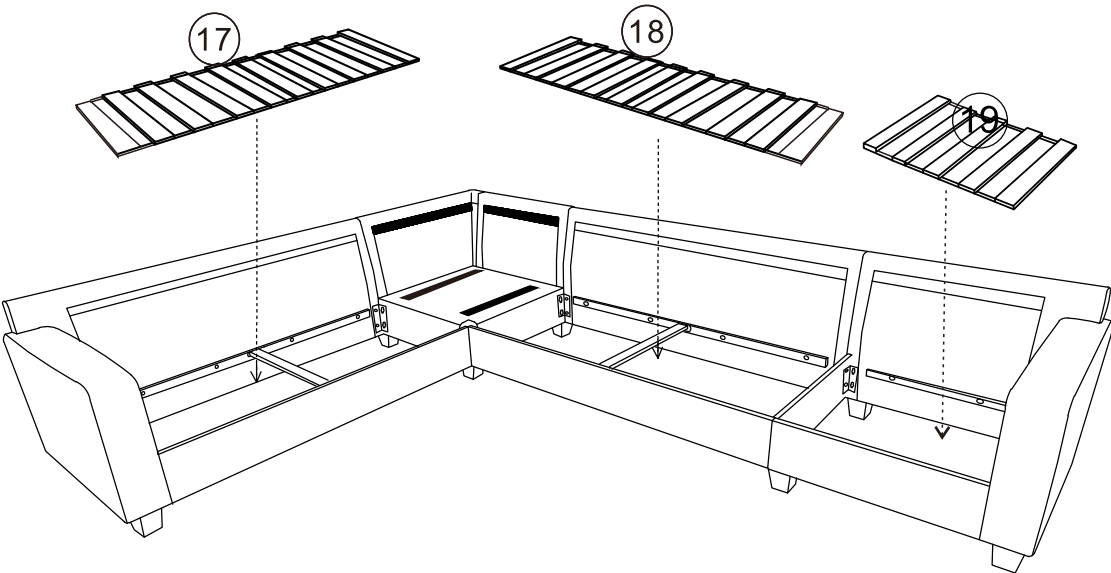

STEP 22:

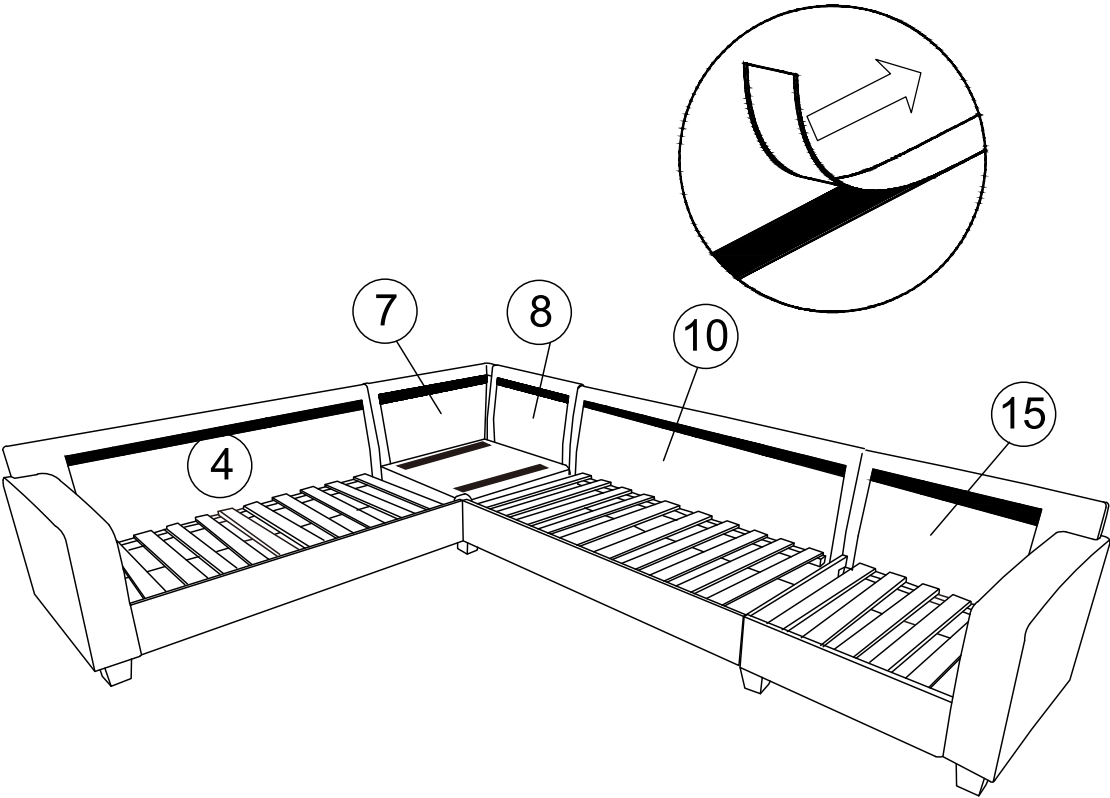


STEP 23:

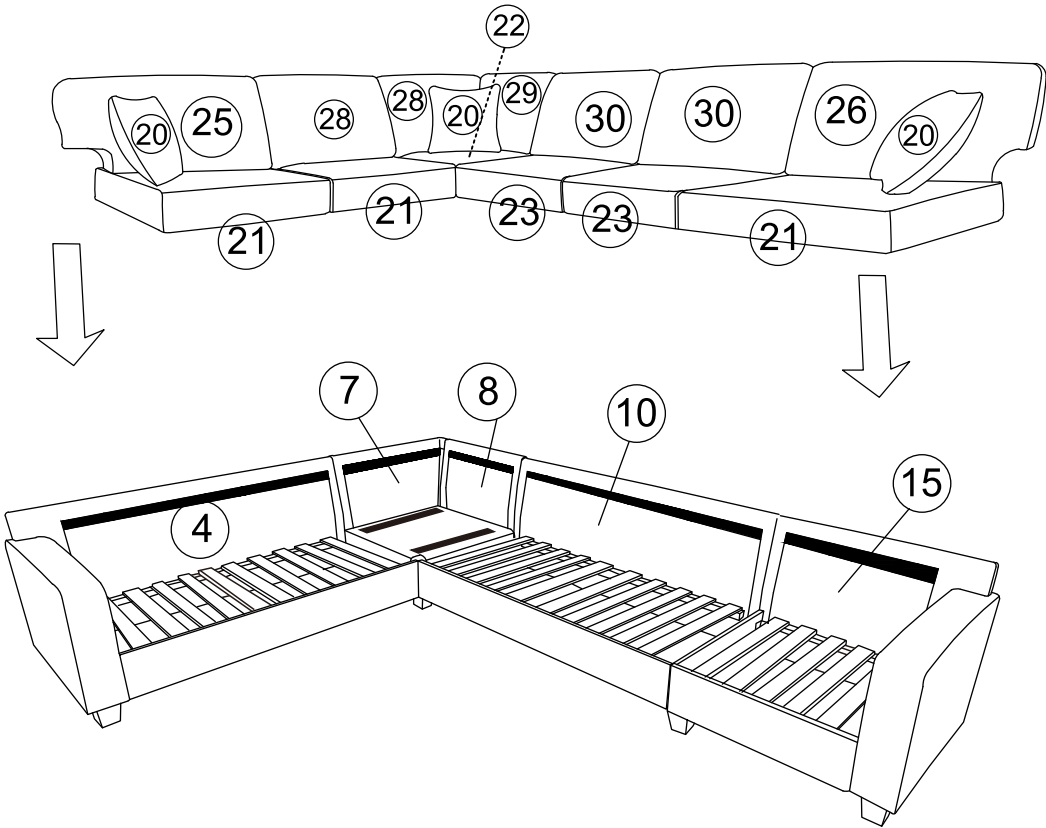


Assemble the Stool.

STEP 24:

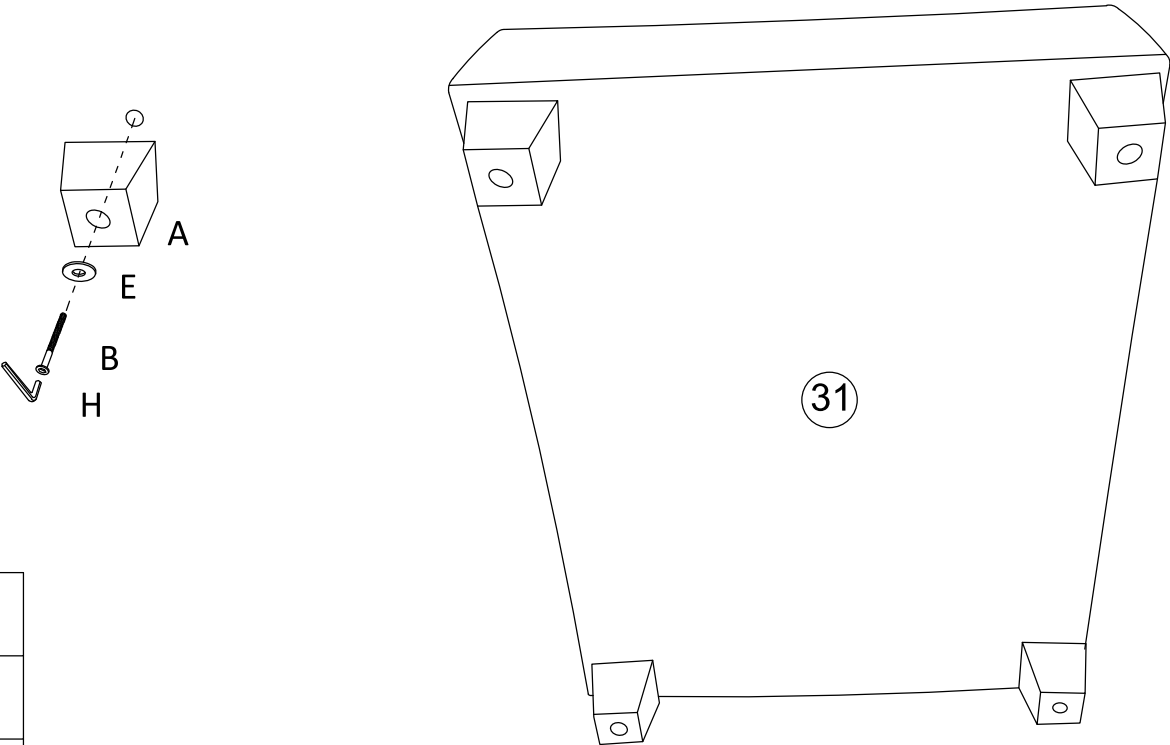

	A X 4
	B X 4
	E X 4
	H X 1

STEP 25:

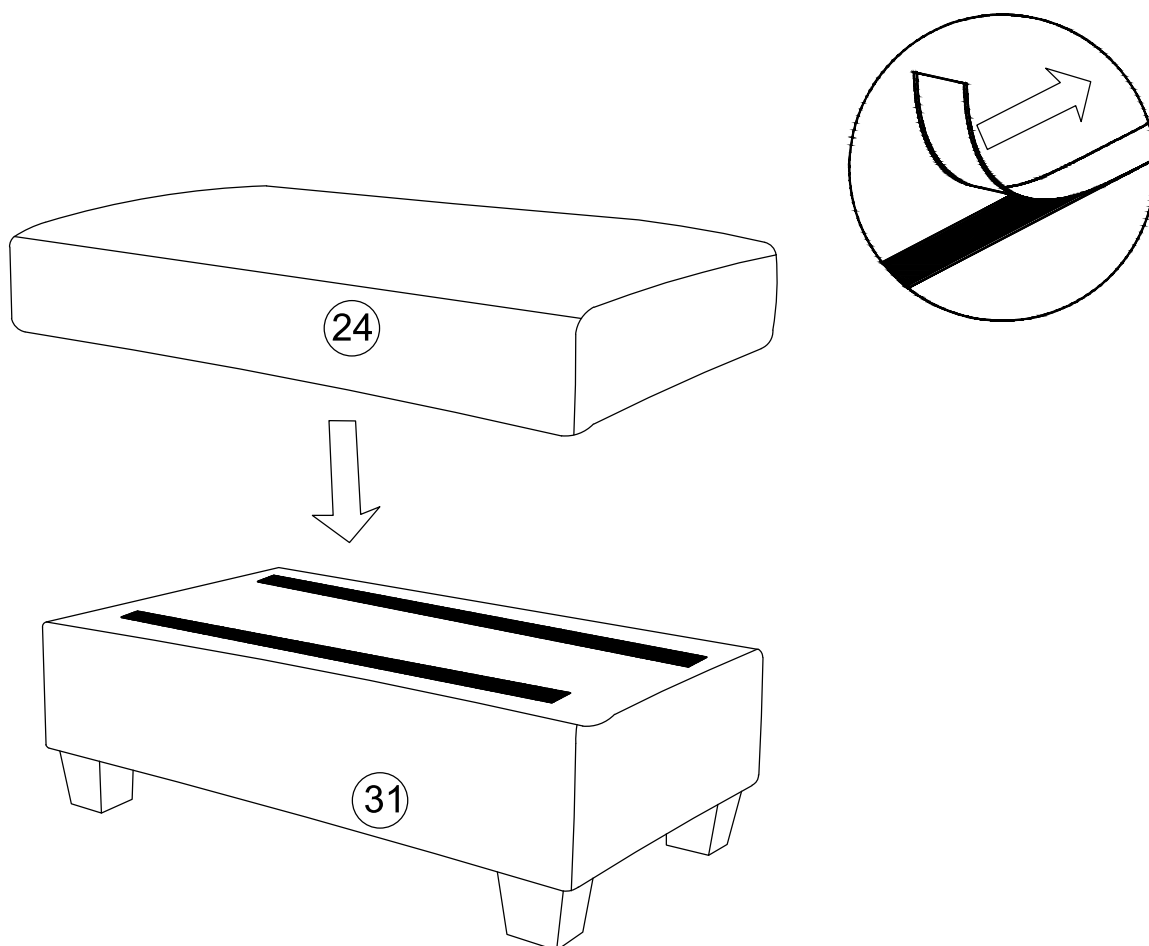

Complete

