


Pendant Light Instruction

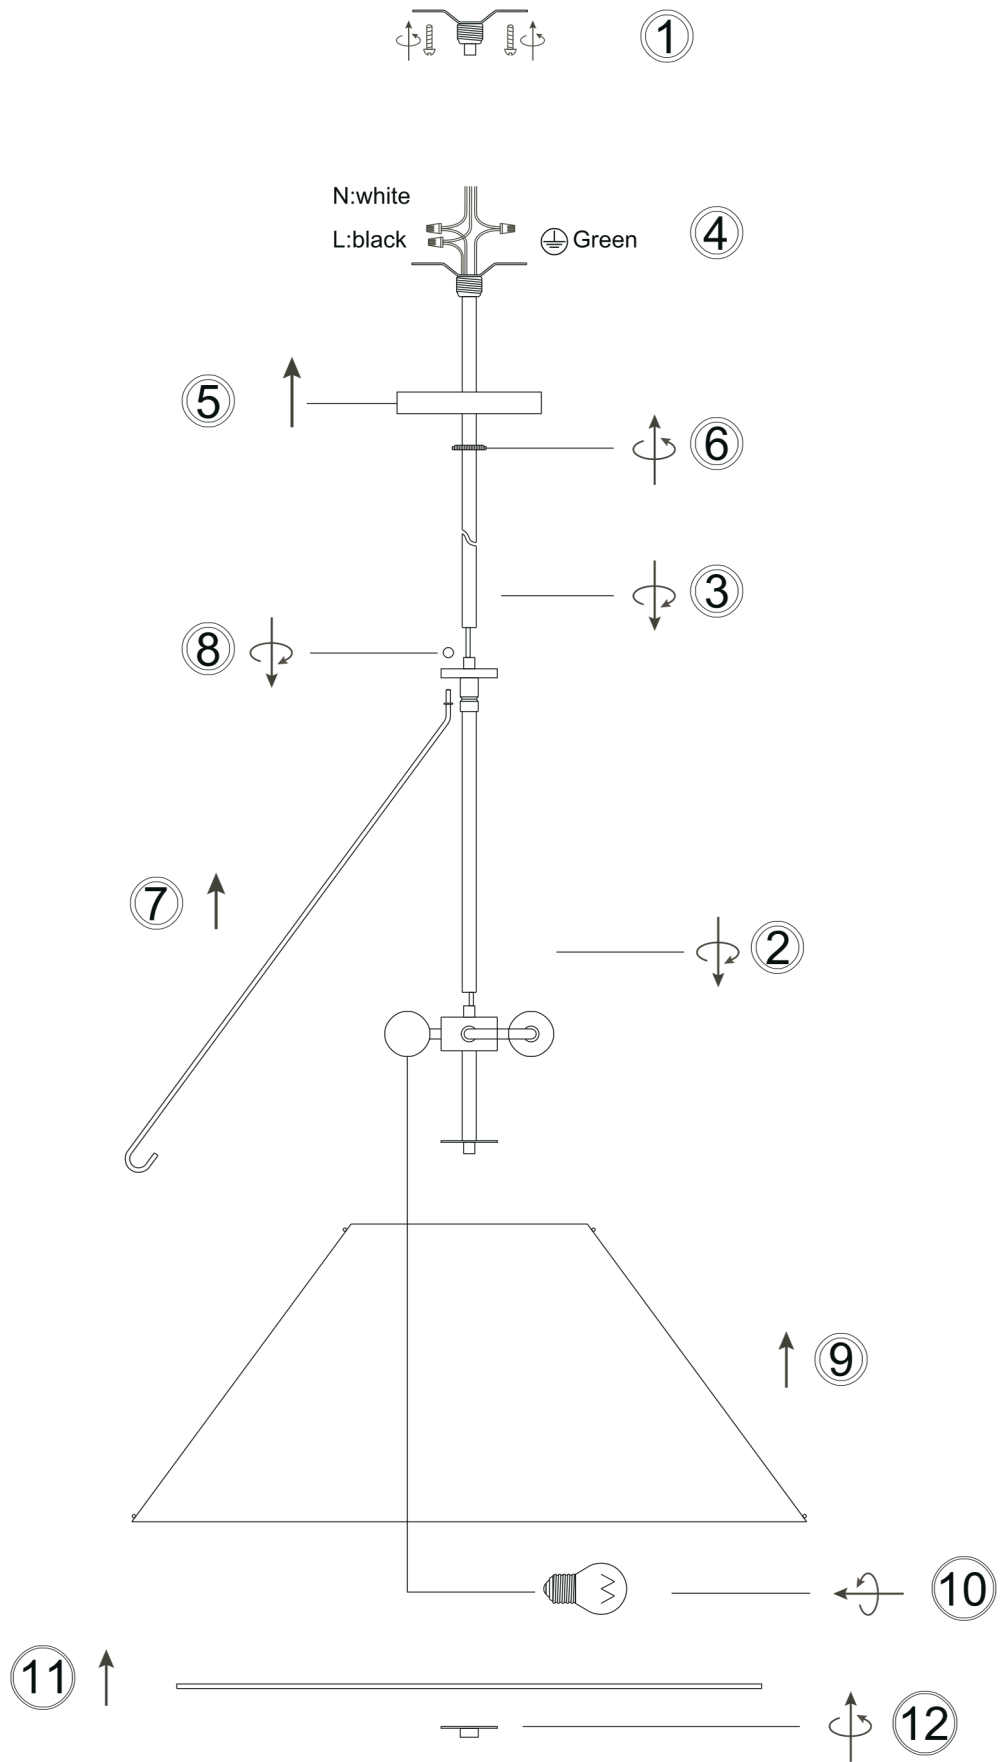

E26 LED only
2*E26 Max 25W
Not included

Safety Warning

- Shut off power at the circuit breaker ****before**** installation.
 - Use a non-contact voltage tester to be sure the ceiling wires are not live.
-

Installation Steps

• Step 1: Mount the Hanging Plate

1. Remove the round hanging plate and decorative cap nuts from the canopy, if shipped assembled.
2. Center the plate over the ceiling-mounted junction box with the two slotted holes running front-to-back.
3. Fasten the plate to the box with the supplied screws. Tighten until the plate is flat and level.

• Step 2: Attach the Main Rod

Thread the threaded main connecting rod (factory-installed with a hex nut) into the center of the hanging plate. Snug the hex nut against the plate to lock the stem vertically.

• Step 3: Adjust Overall Drop

Add or remove the straight downrod sections until the fixture hangs at the desired height. Hand-tighten each joint, then use two wrenches to give each connection an extra ¼-turn so the rod is rigid.

• Step 4: Make Wire Connections

1. Pull the fixture wires and ground wire down through the stem and into the junction box.
2. Hot (black) fixture lead → hot (black) supply lead; cap with a wire connector.
3. Neutral (white) fixture lead → neutral (white) supply lead; cap with a wire connector.
4. Ground (green/bare) fixture lead → building ground or to the green screw on the hanging plate.
5. Carefully tuck all splices up into the box.

• Step 5: Install the Canopy

Slide the decorative ceiling canopy up the stem until it meets the ceiling, covering the junction box. Align the canopy's keyhole slots with the protruding studs on the hanging plate.

• Step 6: Secure the Canopy Ring

Thread the decorative ring onto the exposed studs and hand-tighten until the canopy is held snug against the ceiling. Do not overtighten—finger-tight plus a slight twist is sufficient.

• Step 7: Feed the Support Cable

Insert the steel support cable (shown as “iron wire” in the diagram) through the central hole in the shade holder until several inches extend below.

• Step 8: Lock the Cable Gripper

Slide the small ball-style cable gripper onto the free end of the cable and push it up to the desired height. Tug gently to verify the gripper has locked onto the cable.

• Step 9: Hang the Fabric Shade

Lift the fabric shade upward; hook its top brackets over the tensioned support cable so the shade rests level all around.

• Step 10: Install the Bulb

Screw one medium-base bulb (60 W max) into the socket. Turn clockwise just until snug—overtightening can damage the socket.

• Step 11: Insert the Diffuser

Raise the acrylic (or glass) diffuser panel inside the shade until it seats on the internal ledges.

• Step 12: Attach the Bottom Disc

Press the decorative bottom disc against the diffuser and thread on the retaining finial/nut from below. Hand-tighten to secure both parts.

Final Check

Restore power at the breaker panel and test the pendant light. The bulb should illuminate properly and the fixture should hang straight without wobbling.

Please contact us if you have any problems installing the lampshade. We will work you through the process.