



















Tips:box 1 of 2

Dear customer Thank you for your purchase.There are 2 boxes in total.(A/B)
If you receive one box,please be patient and wait for another box to arrive.

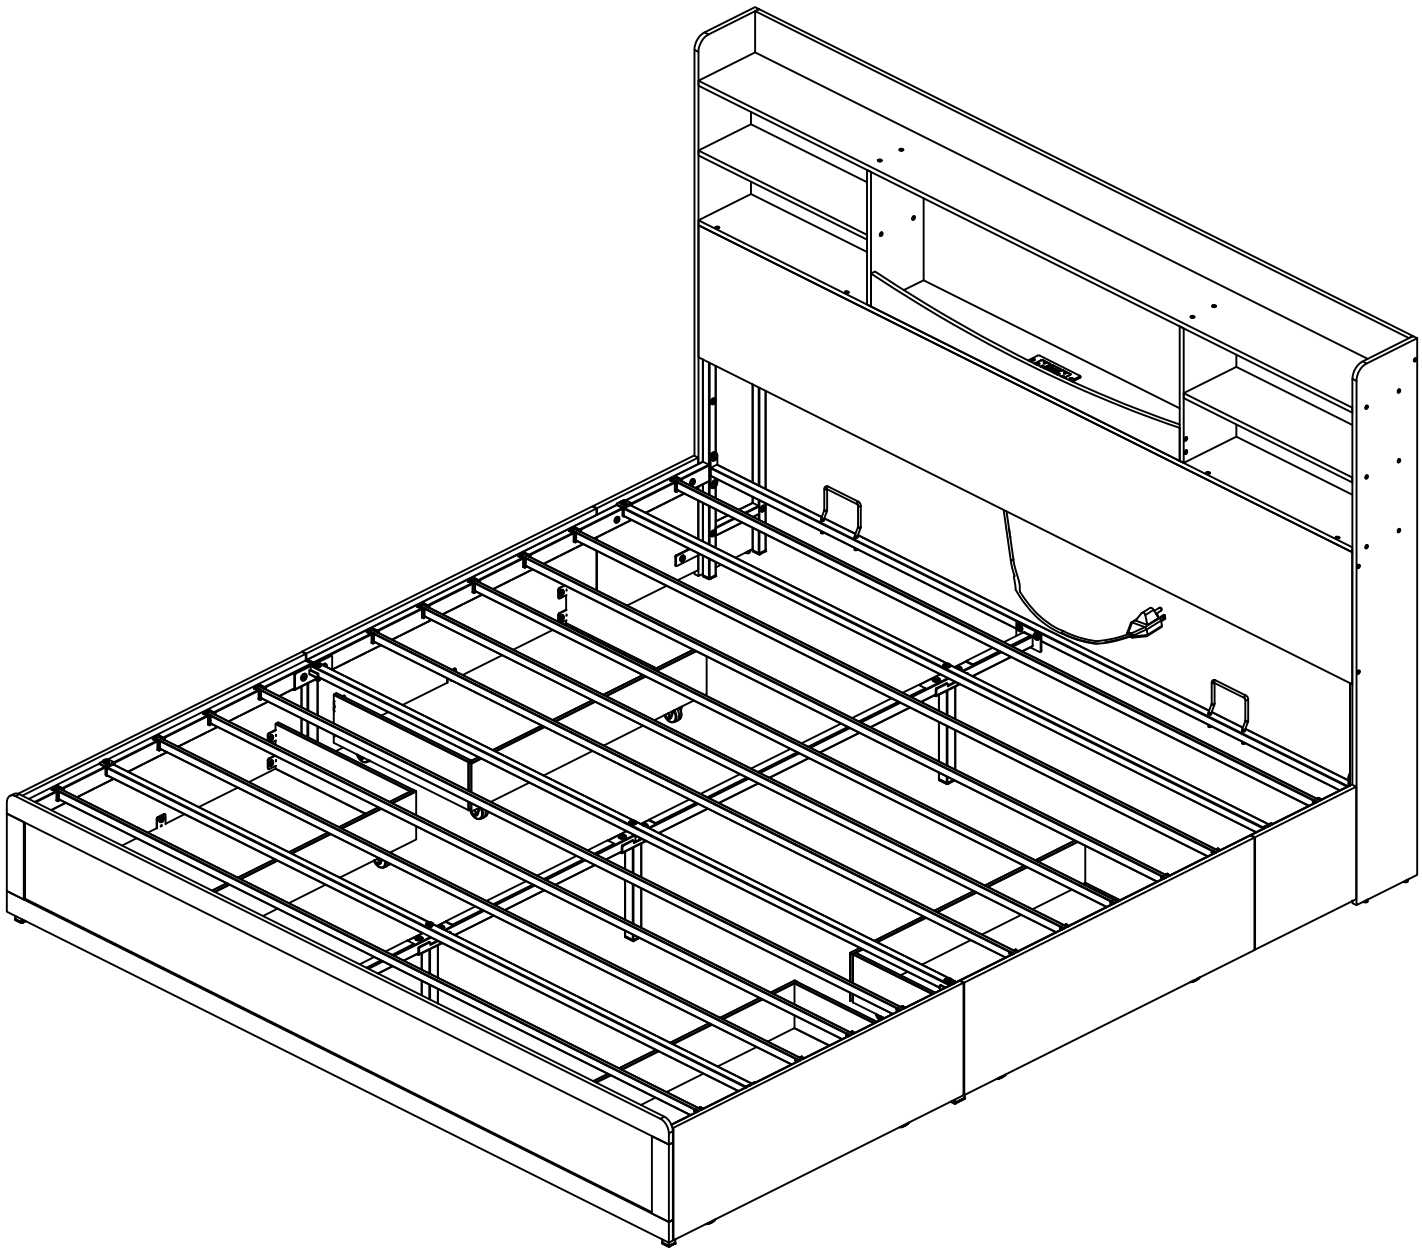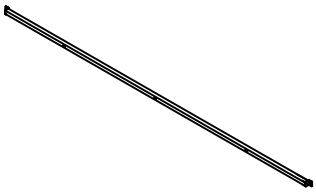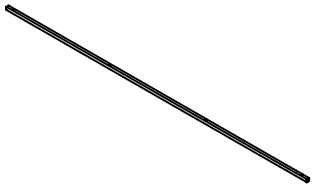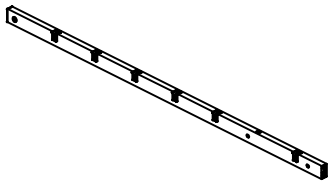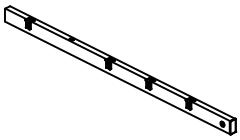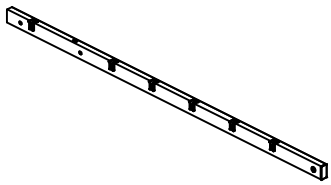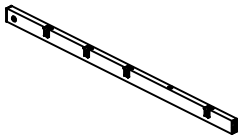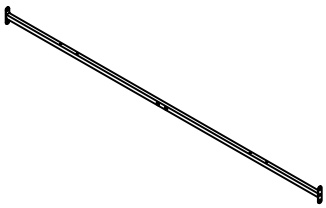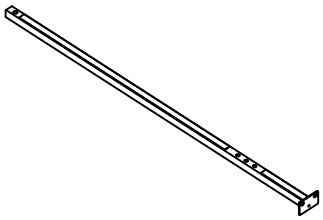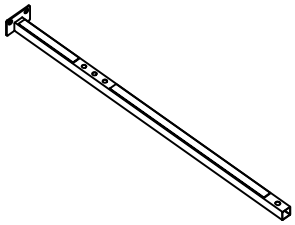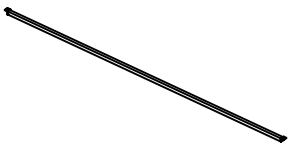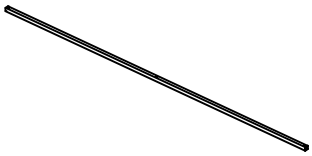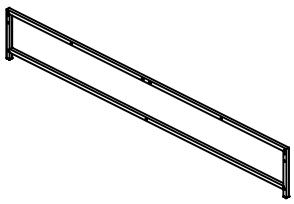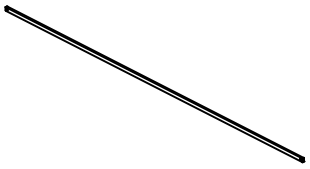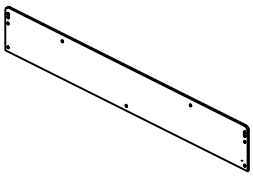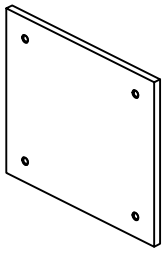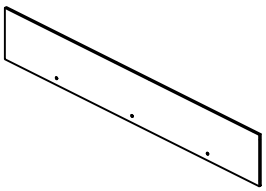
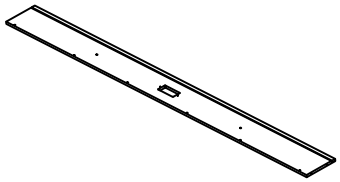
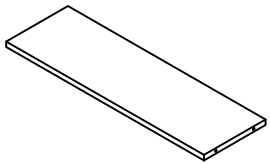



DJ505907_1
DJ505907_2
DJ505907_3



















PART LIST A Assembly Instruction

3  1pc	4  2pcs	5  1pc
6  1pc	7  1pc	8  1pc
10  1pc	11  1pc	12  1pc
13  2pcs	14  1pc	16  1pc
17  10pcs	20  1pc	22  2pcs
23  1pc	24  1pc	25  1pc
26  1pc	27  2pcs	28  2pcs











PART LIST A Assembly Instruction

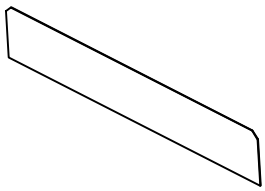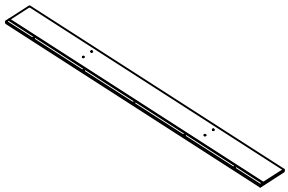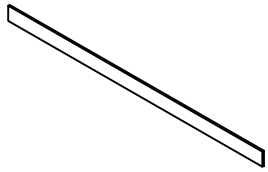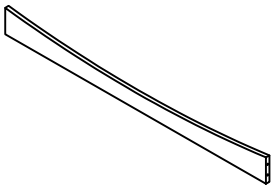29  1pc	30  1pc	31  1pc
32  1pc		

PART LIST B Assembly Instruction

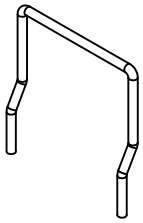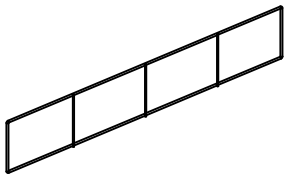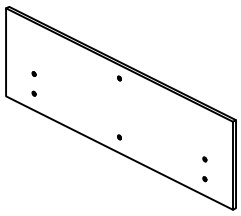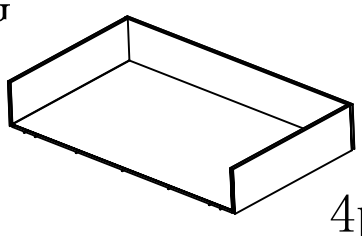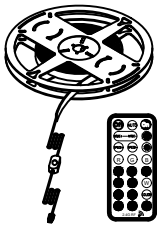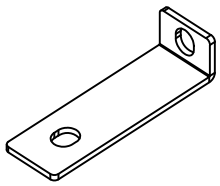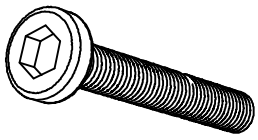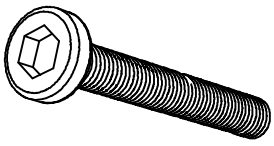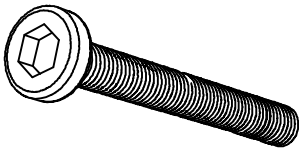
1  1pc	2  1pc	9  2pcs
15  3pcs	18  2pcs	19  4pcs
21  4pcs	GG  4pcs	AA  1pc
BB  1pc	33  2pcs	
A  M6*10mm 30+2PCS	B  M6*15mm 4PCS	C  M6*24mm 8+1PCS
D  M6*28mm 26+2PCS	E  M8*12mm 16+2PCS	F  M8*35mm 8+1PCS
G  M8*40mm 8+1PCS	H  M8*55mm 3PCS	I  ST3*12mm 2+1PCS

PART LIST B Assembly Instruction

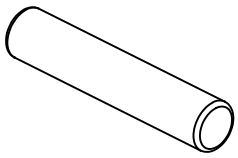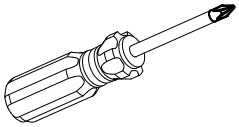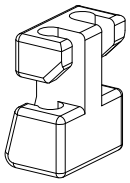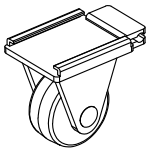
J  ST5*35mm 43+3PCS	K  M6*40mm 4PCS	L  Φ6*30mm 2PCS
M  4PCS	N  1PC	O  S3 1PC
P  S5 1PC	PP  20PCS	QQ  4PCS
NN  16PCS		

Assembly Instruction


Note:
1,Should be assembled on flat ground to keep balance.
2.Before completing the installation,do not tighten the screws.

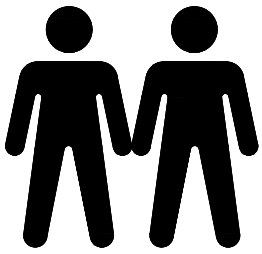

It needs at least
two people to install

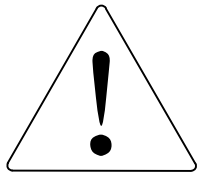


Before starting the assembly ,
you must read the whole manual
and follow the instructions .

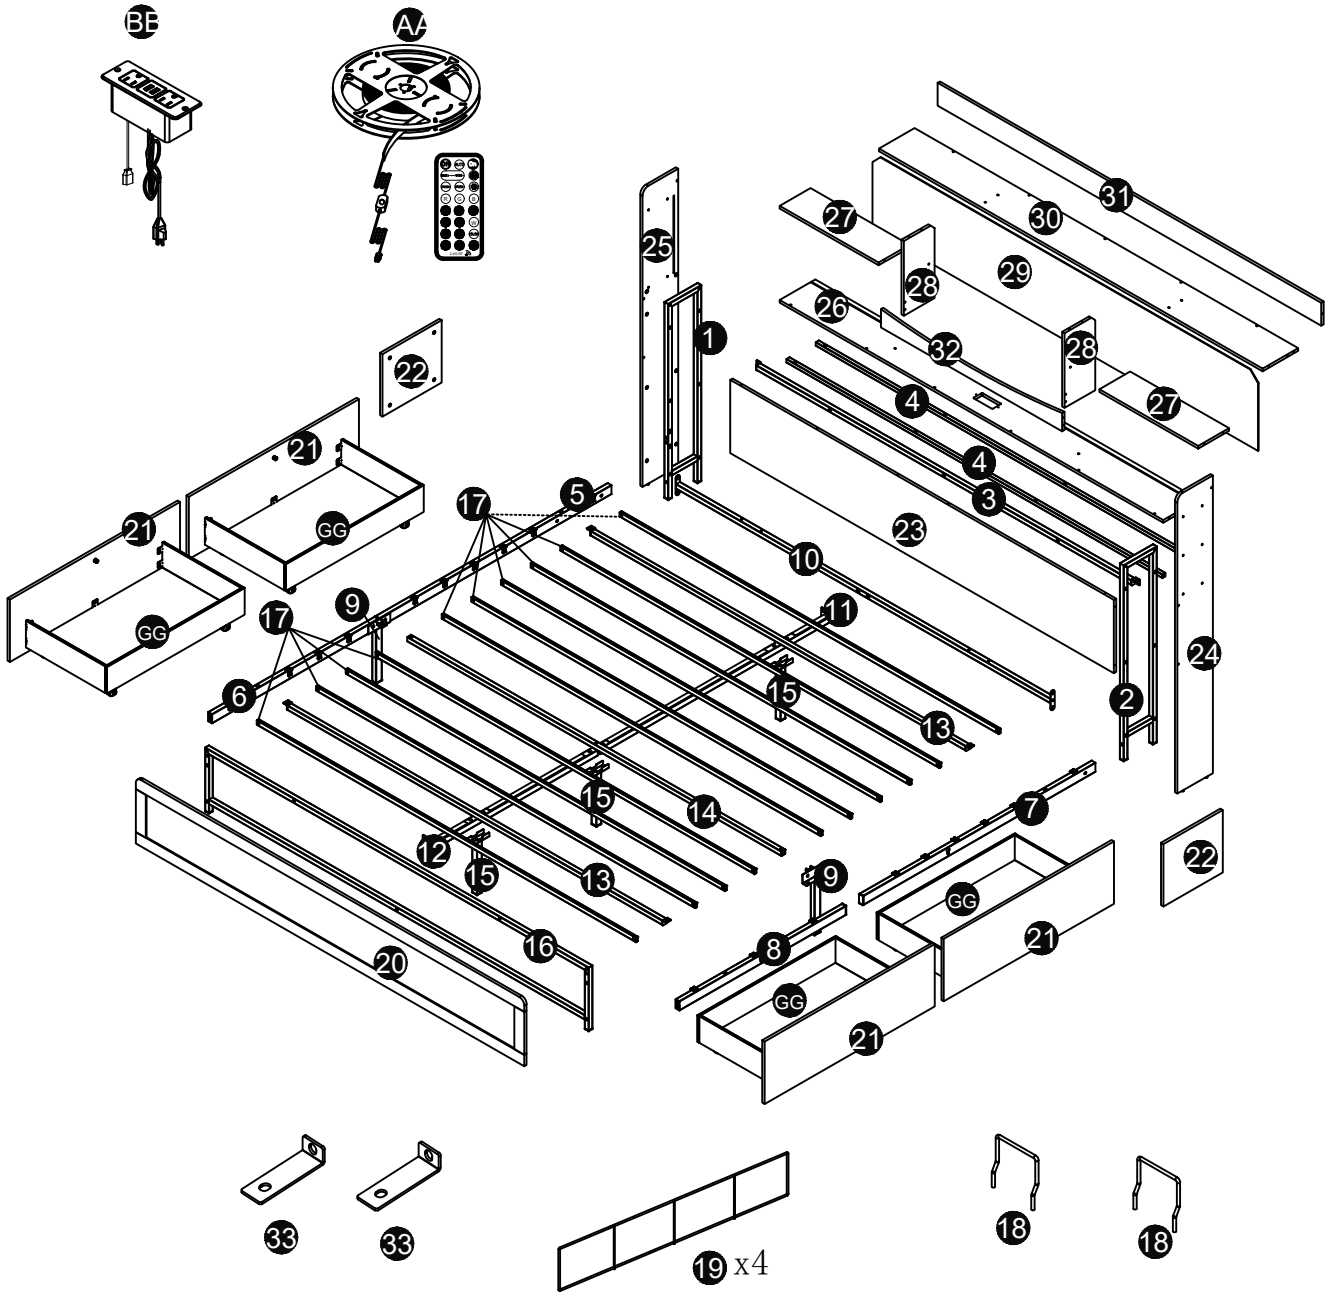


1

J	ST5*35mm	4pcs
0	S3	1pc

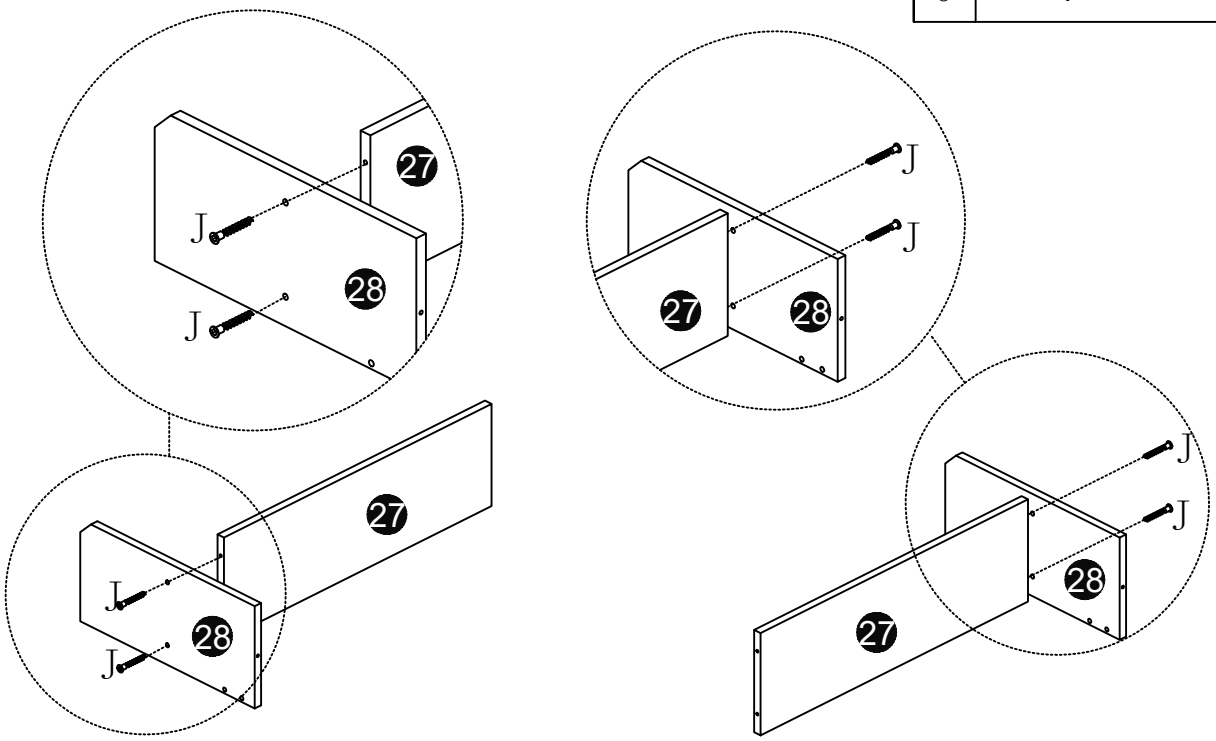


2

J	ST5*35mm	4pcs
0	S3	1pc

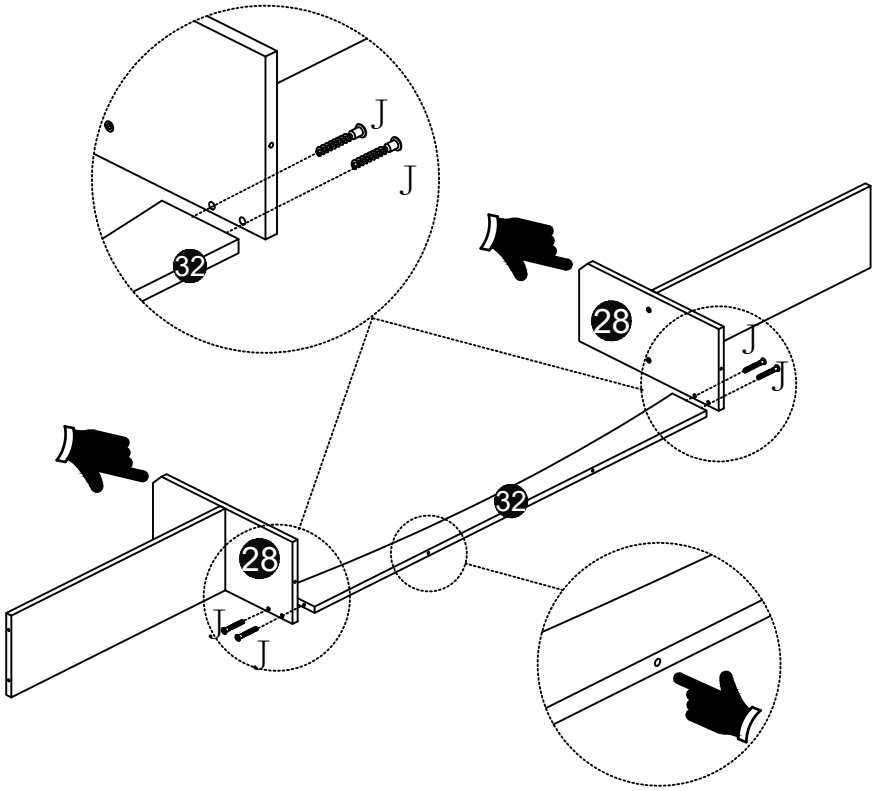


3

J	ST5*35mm	4pcs
0	S3	1pc

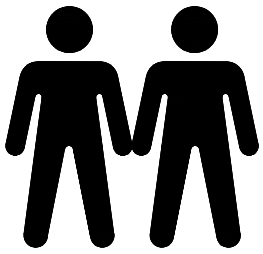


It needs at least
two people to install

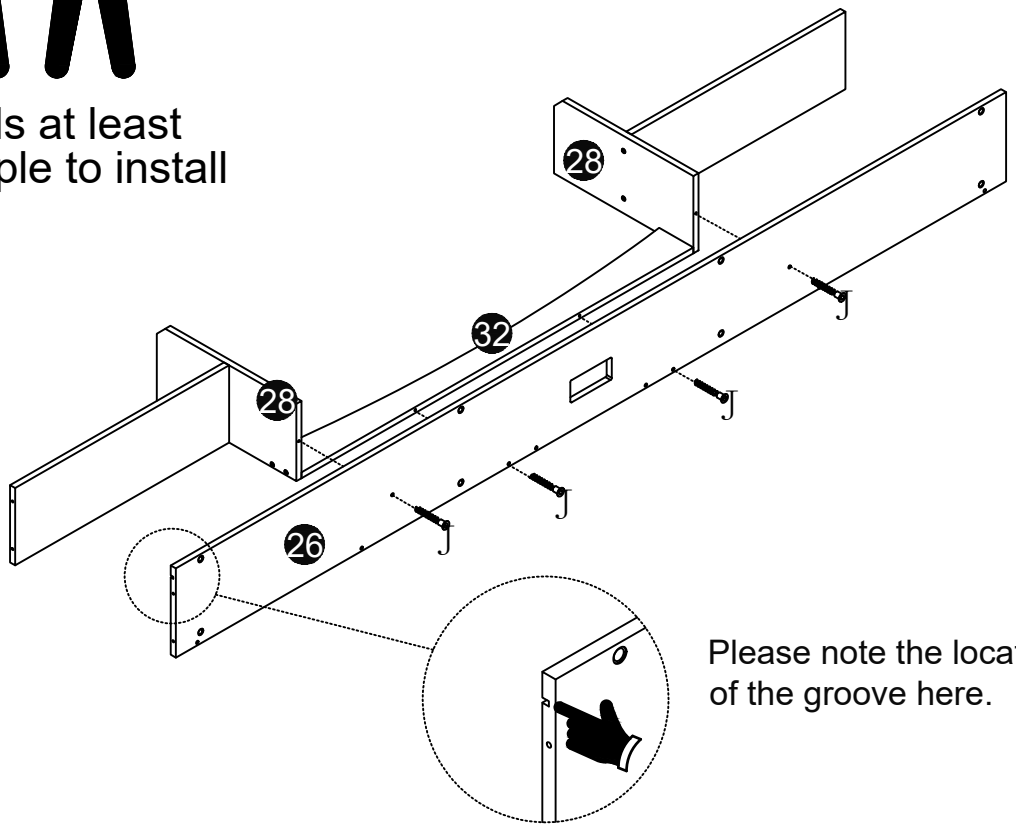


Please note the location
of the groove here.

4

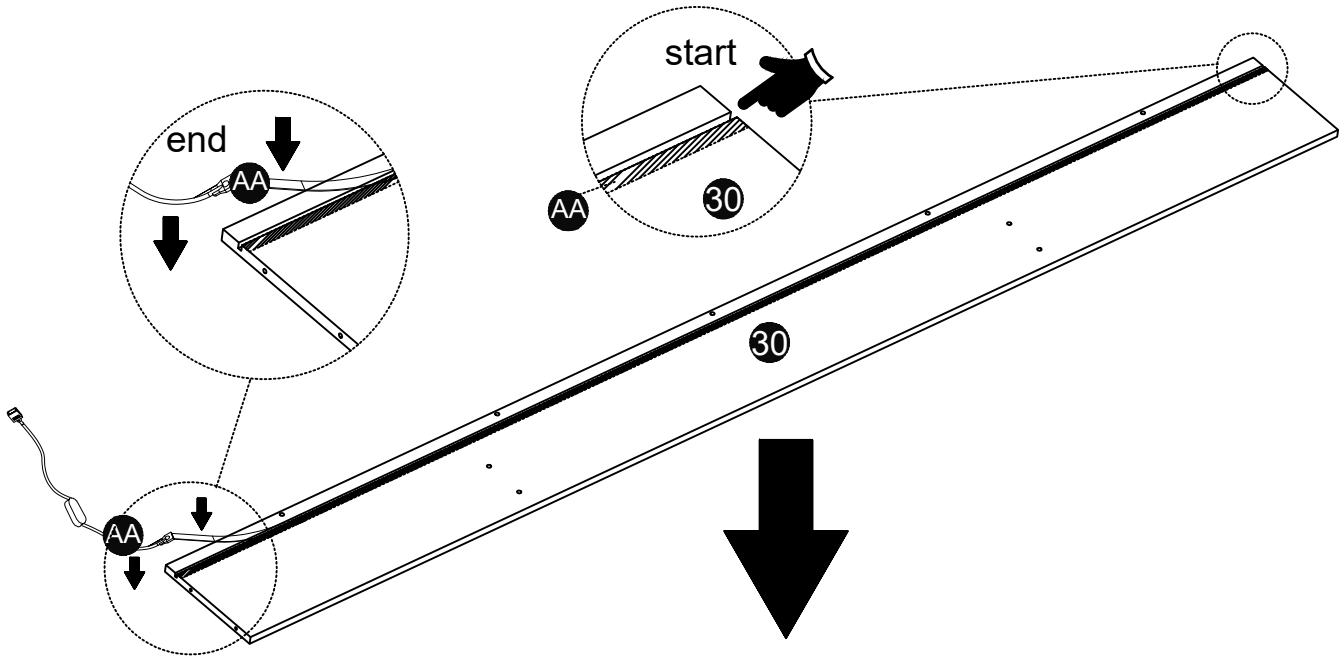


5

J	ST5*35mm	5pcs
0	S3	1pc

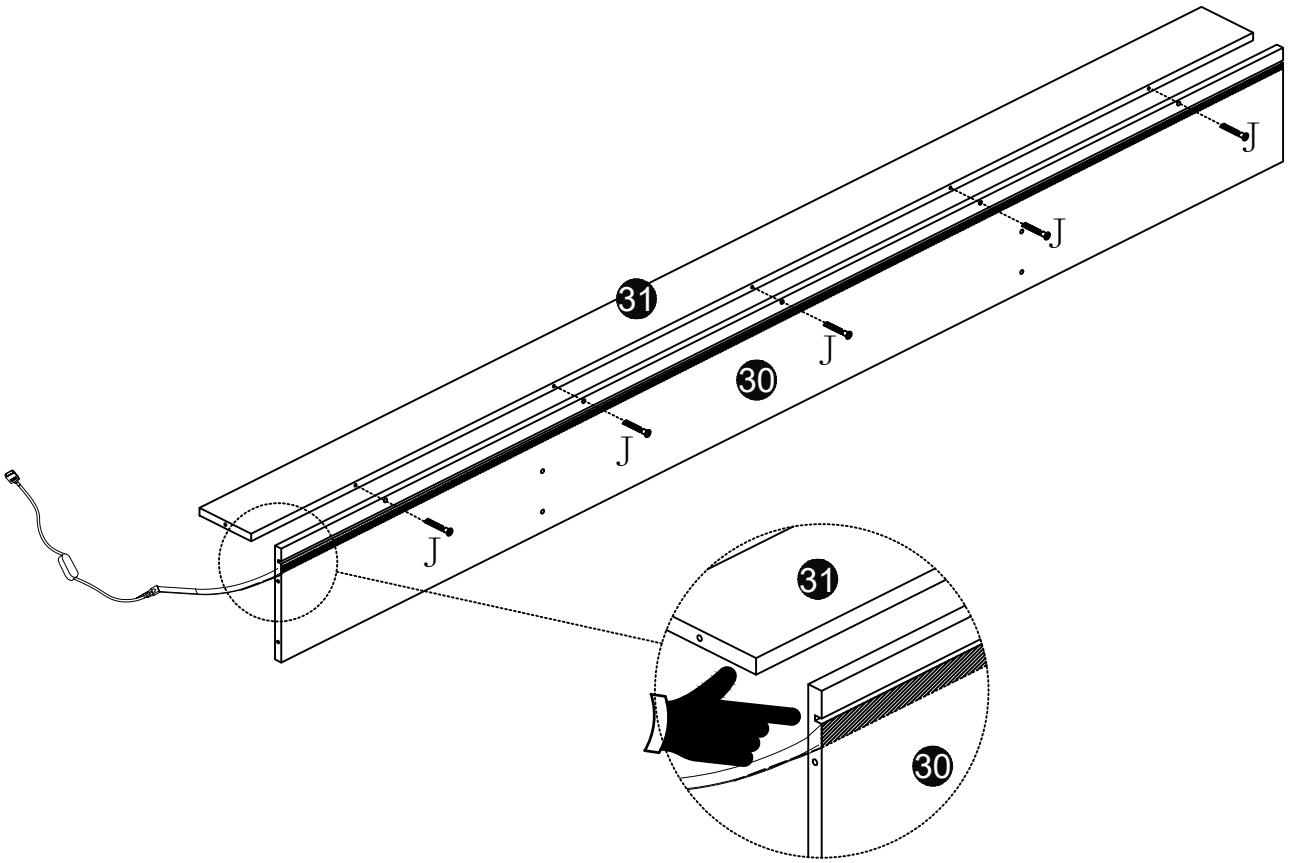


6

J	ST5*35mm	4pcs
0	S3	1pc

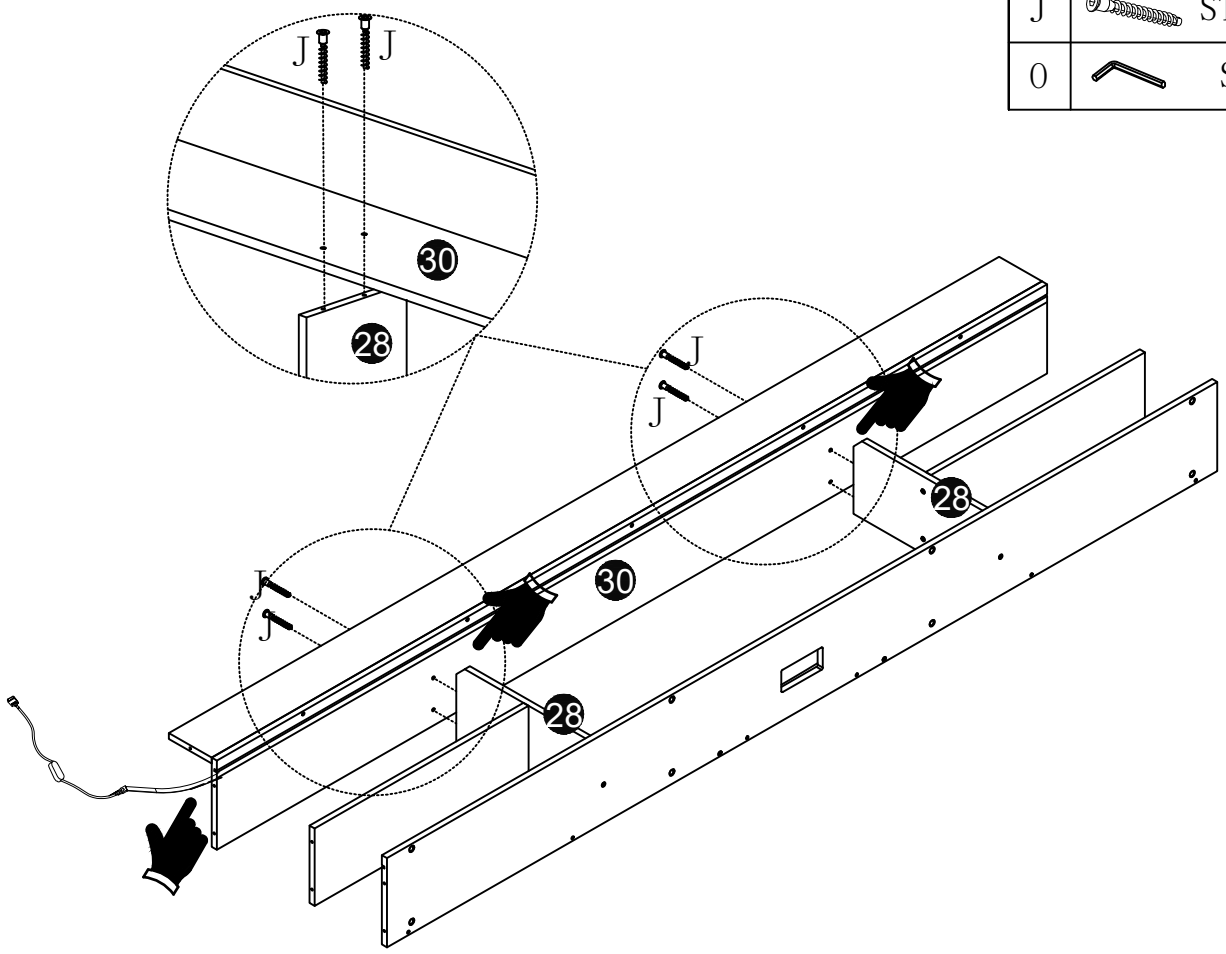


7

J	ST5*35mm	7pcs
0	S3	1pc

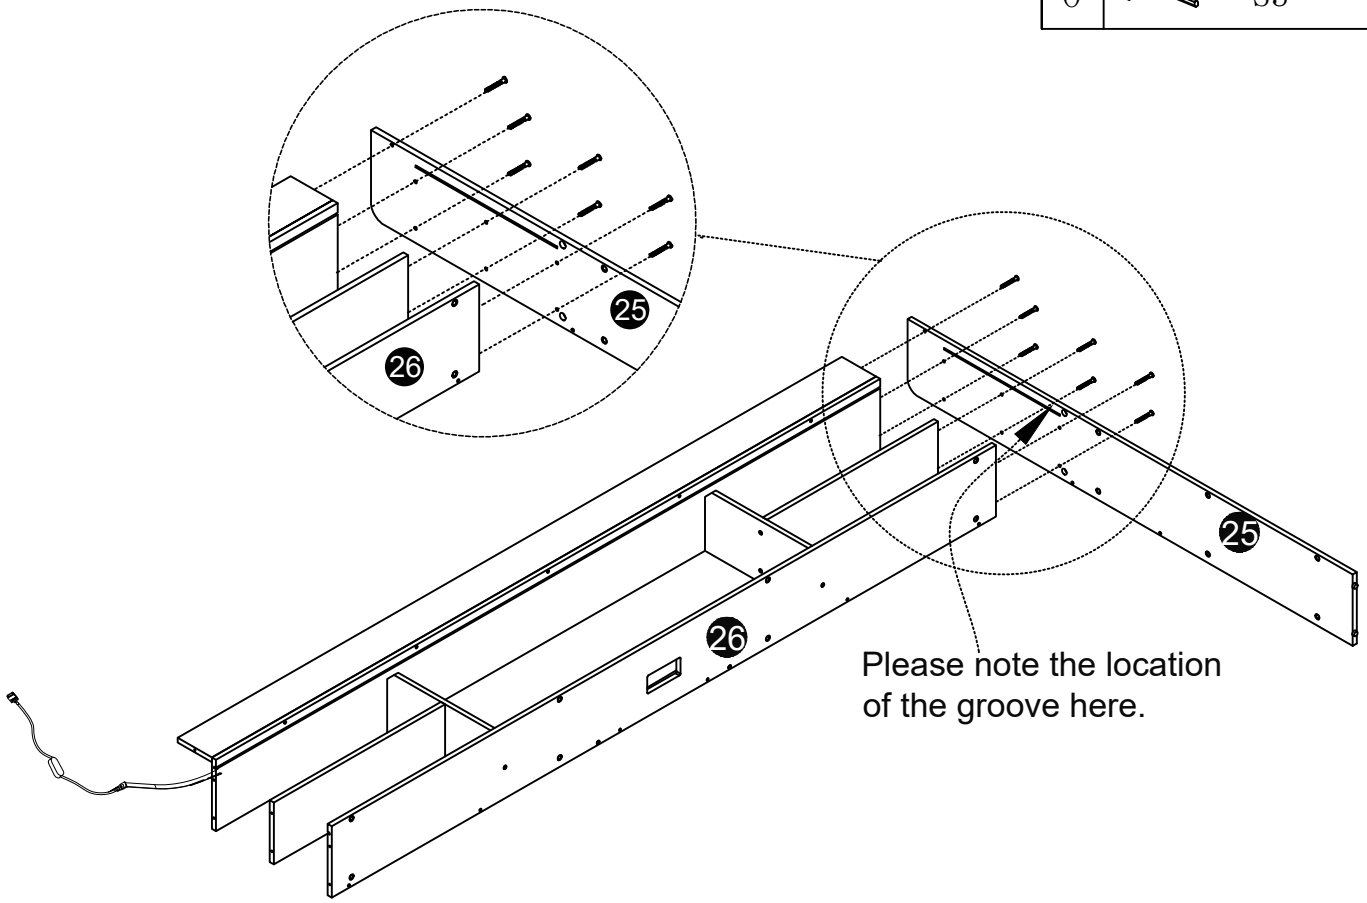


8

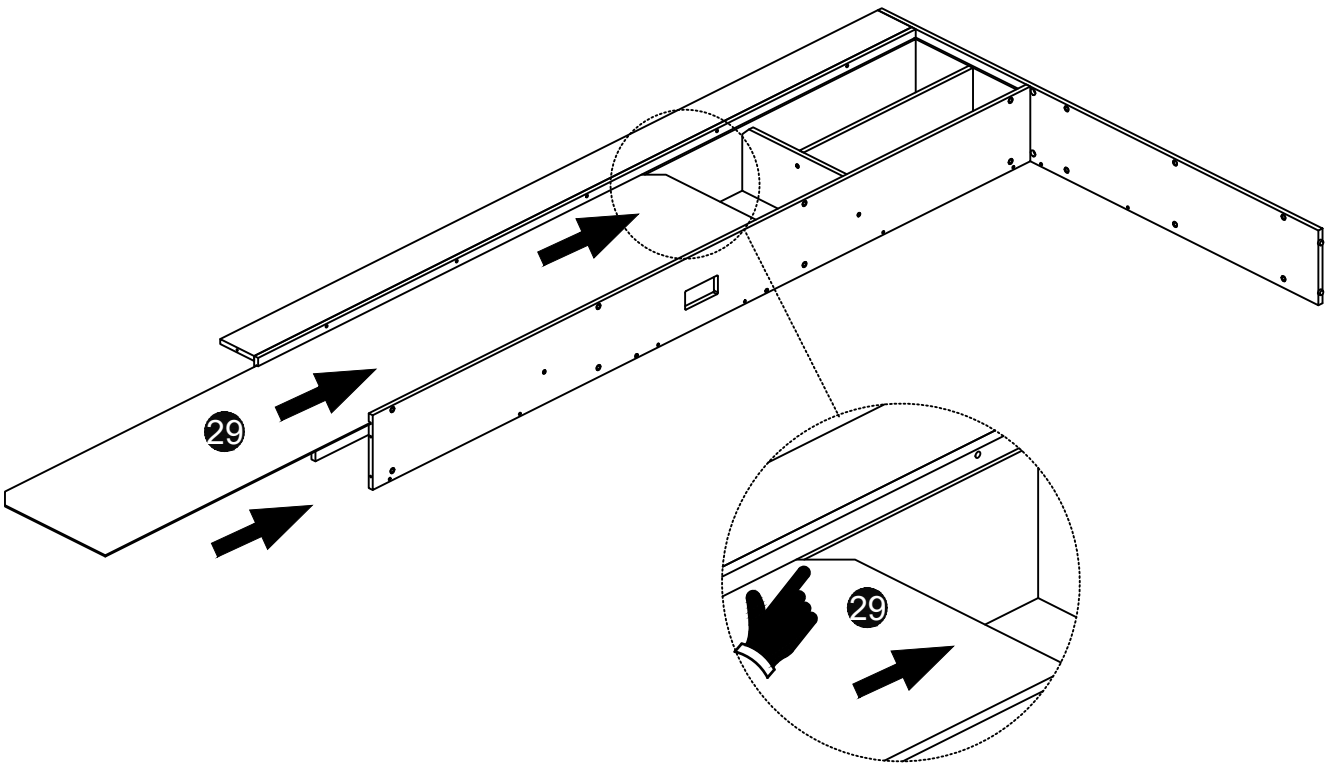


9

K	M6*40mm	4pcs
P	S5	1pc

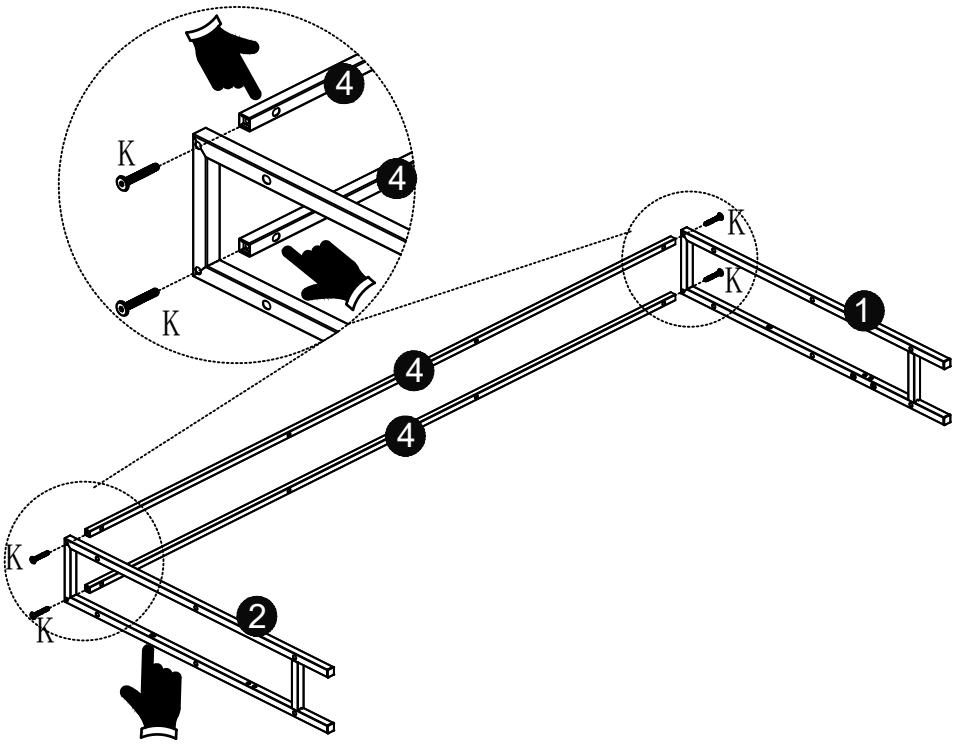


10

E	M8*12mm	4pcs
P	S5	1pc

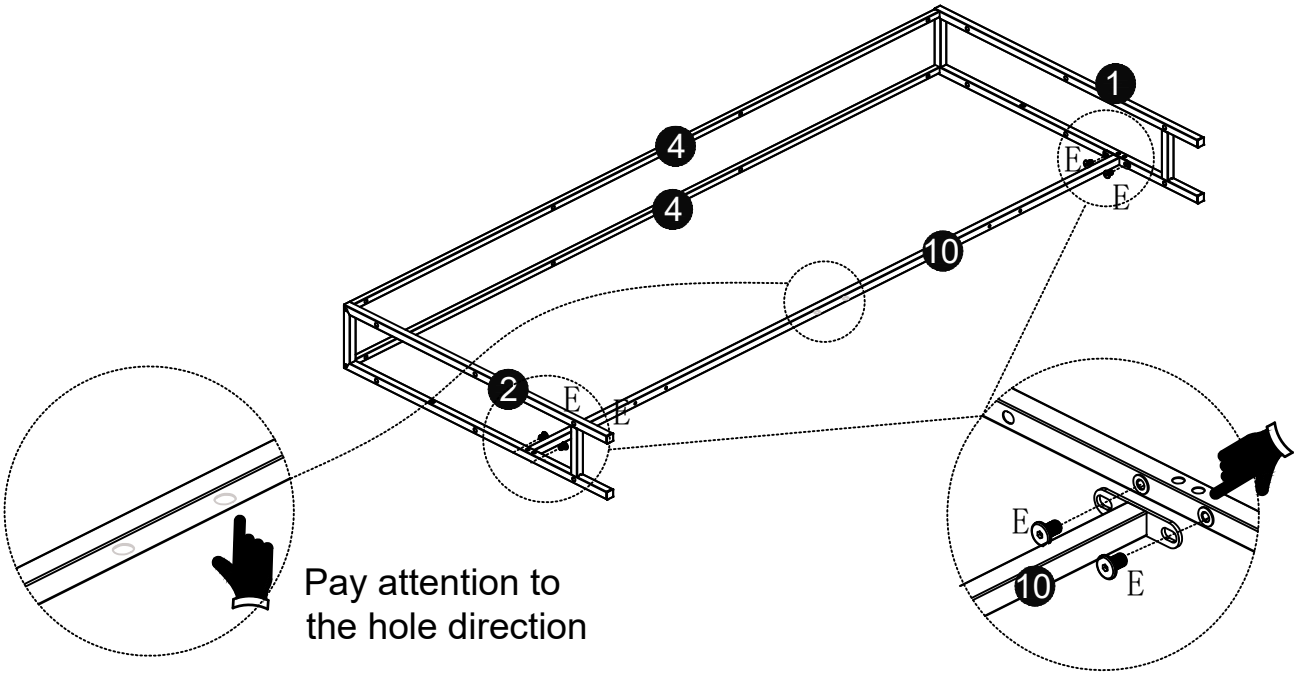


11

A	M6*10mm	2pcs
P	S5	1pc

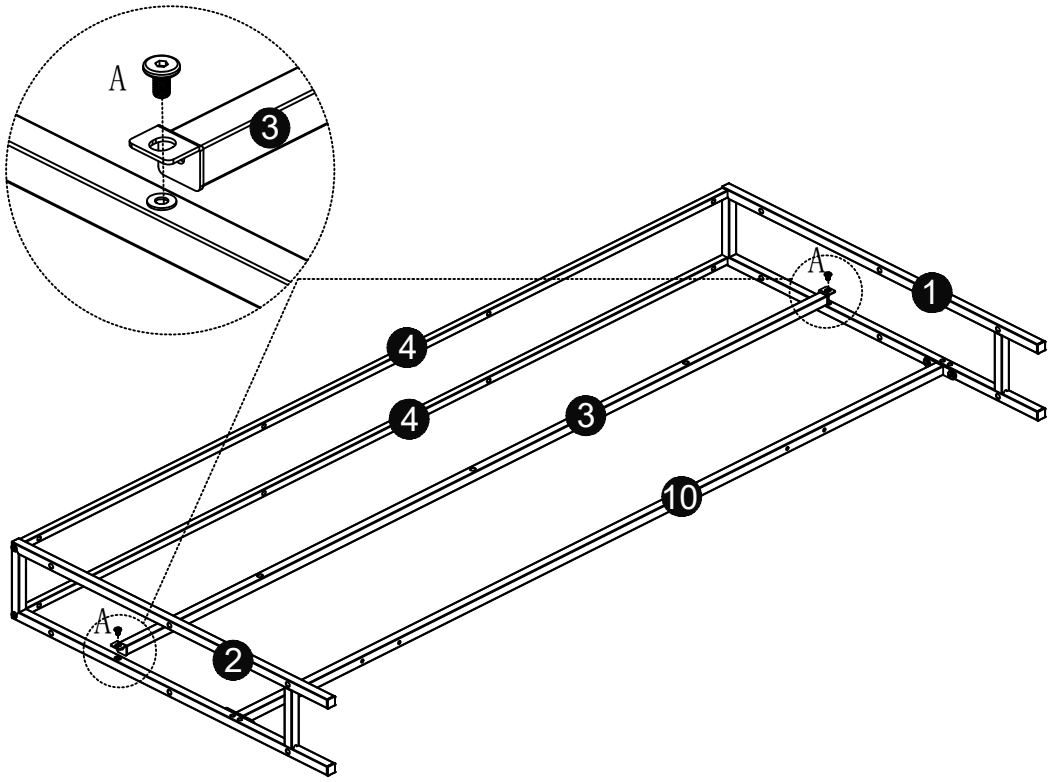


12

D	M6*28mm	3pcs
P	S5	1pc

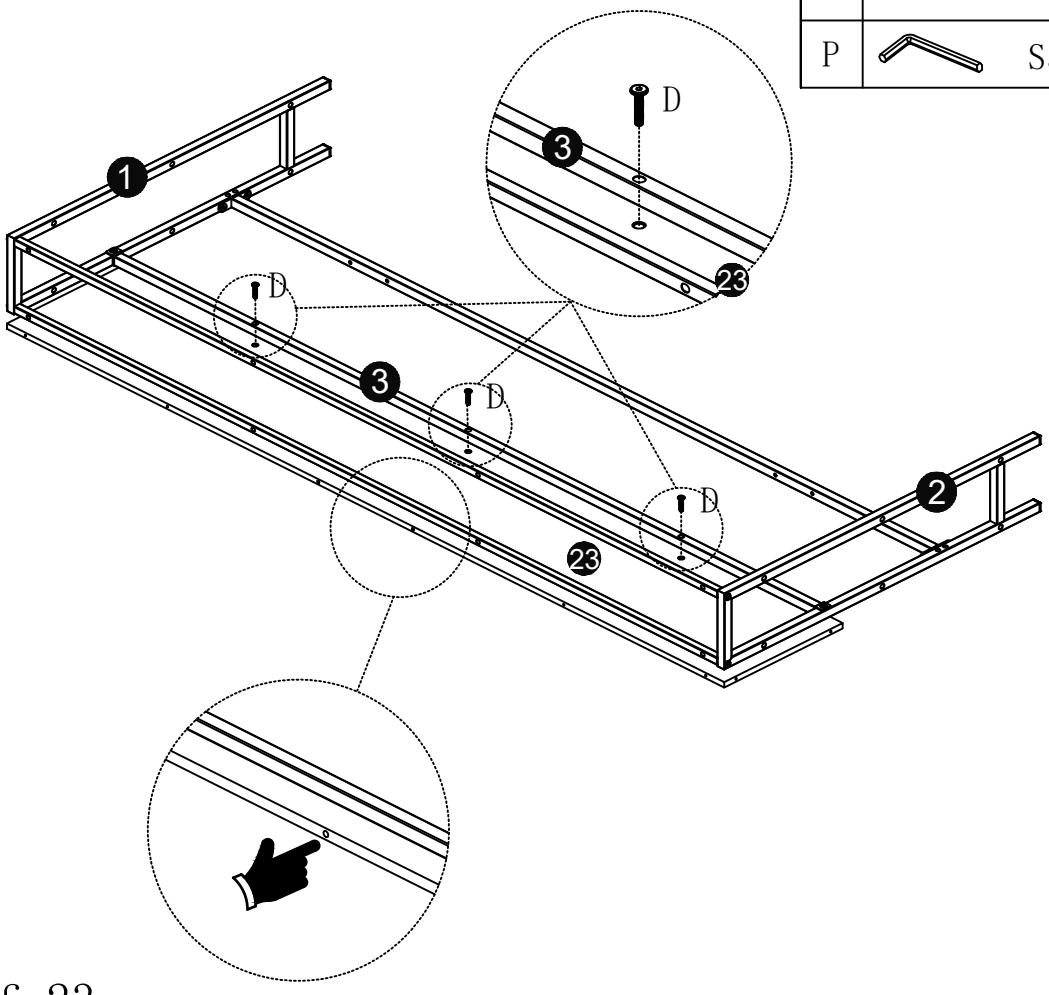


13

L	φ6*30mm	2pcs

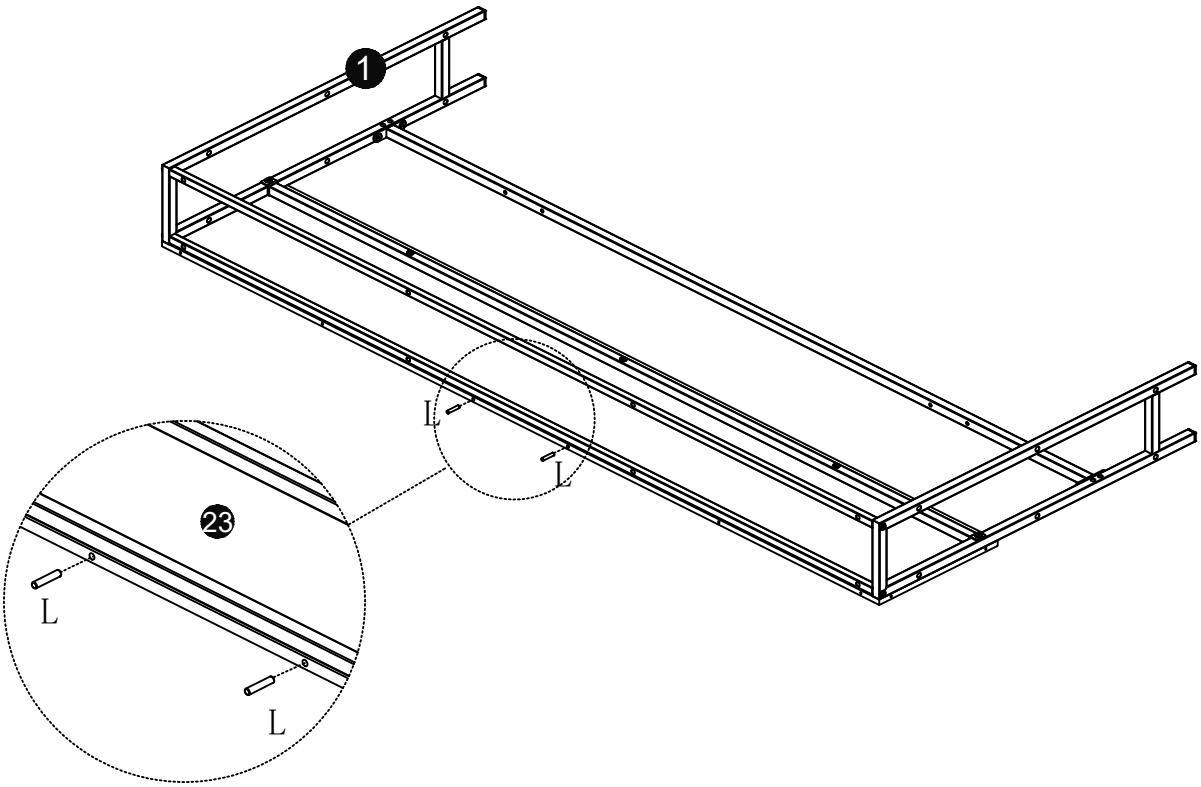


14

C	M6*24mm	8pcs
P	S5	1pc

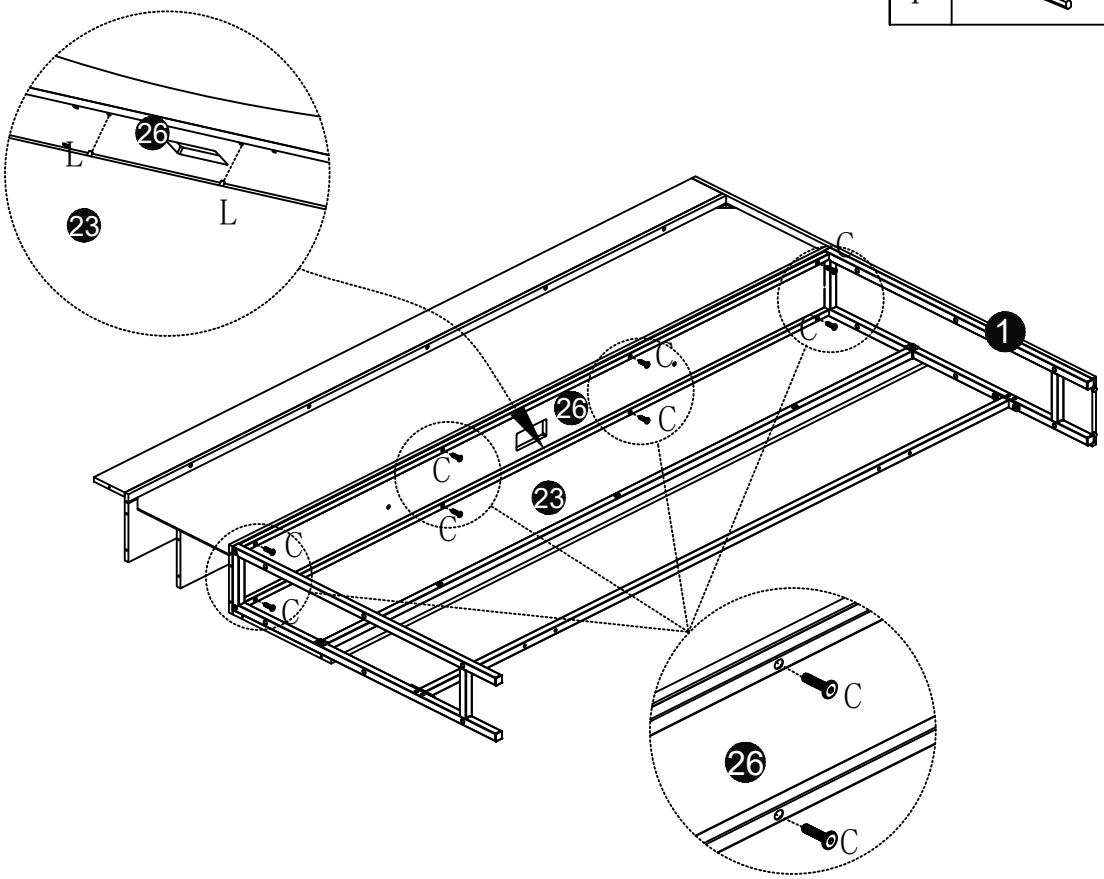


15

D	M6*28mm	6pcs
P	S5	1pc

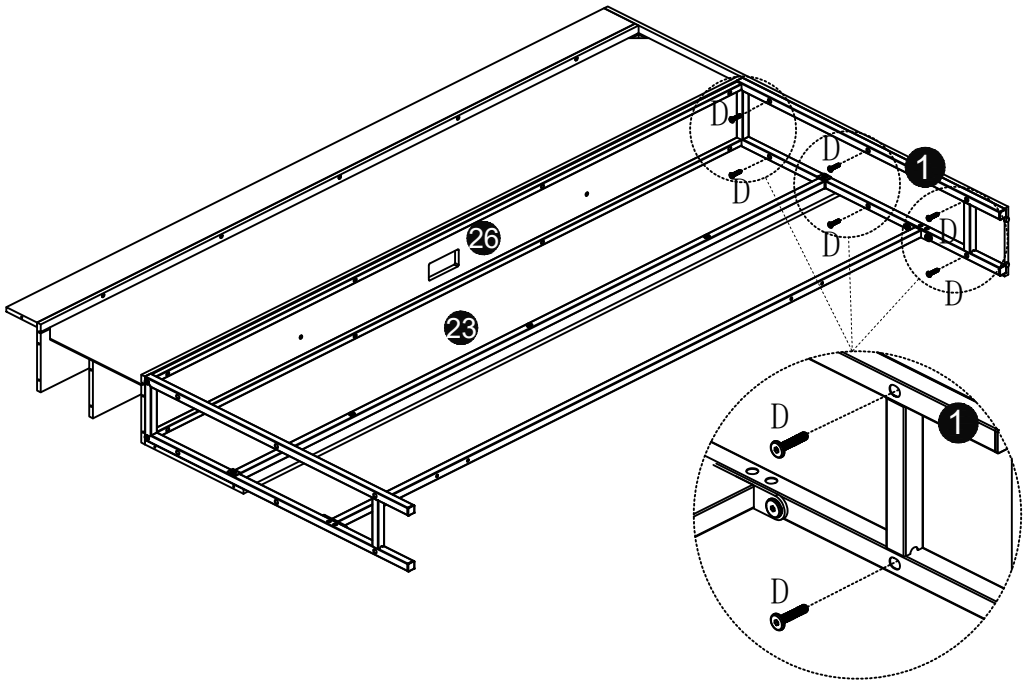


16

J	ST5*35mm	7pcs
D	M6*28mm	6pcs
O	S3	1pc

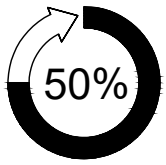


Pre-tighten the screw by 50%

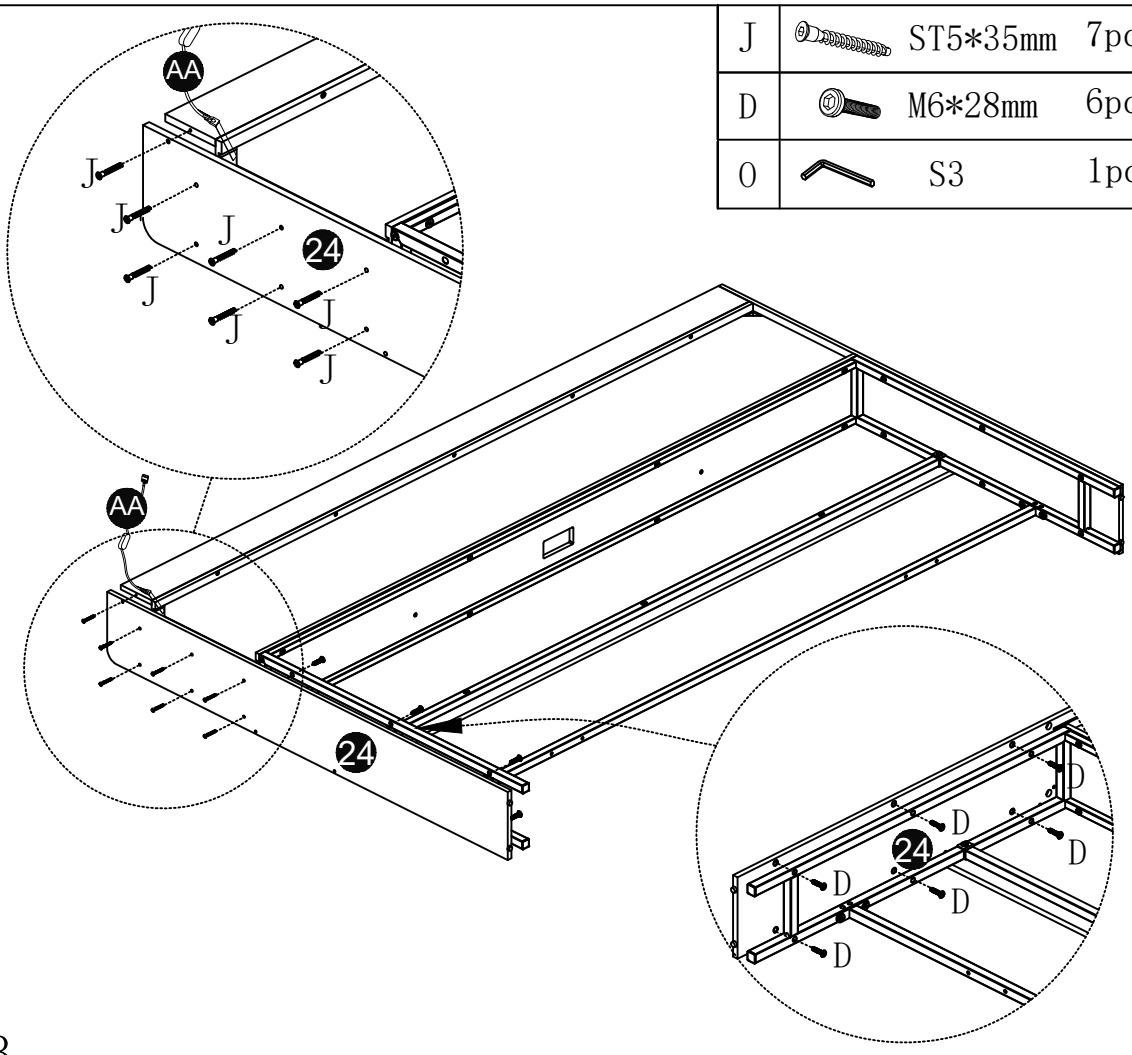


17

E	M8*12mm	4pcs
P	S5	1pc

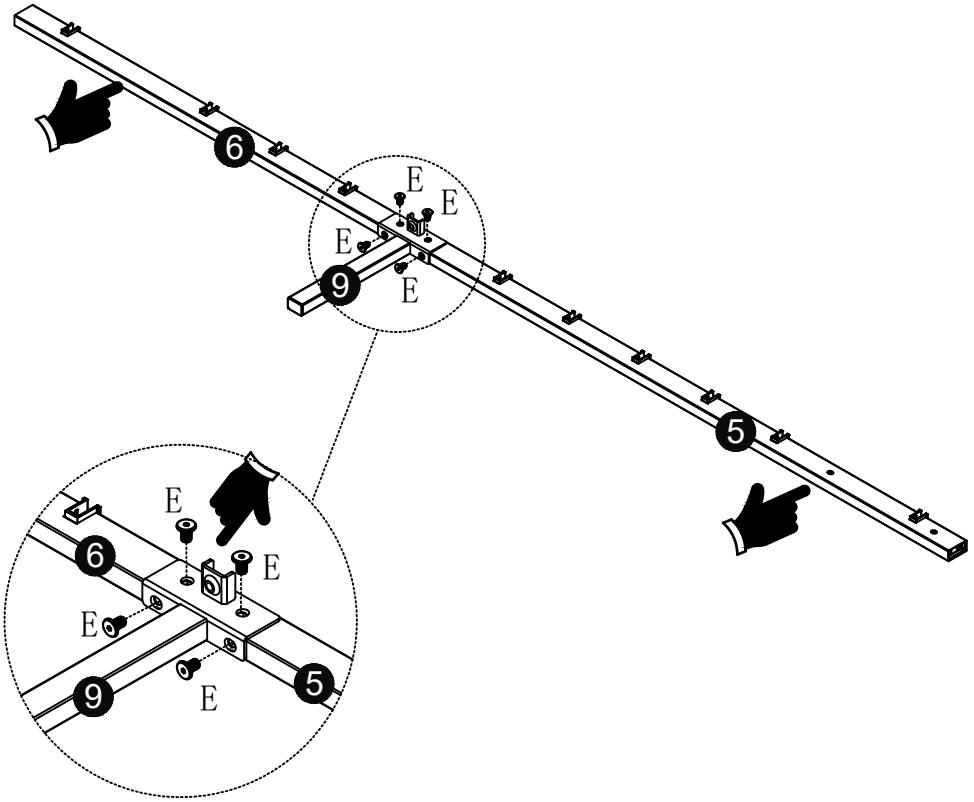


18

E	M8*12mm	4pcs
P	S5	1pc

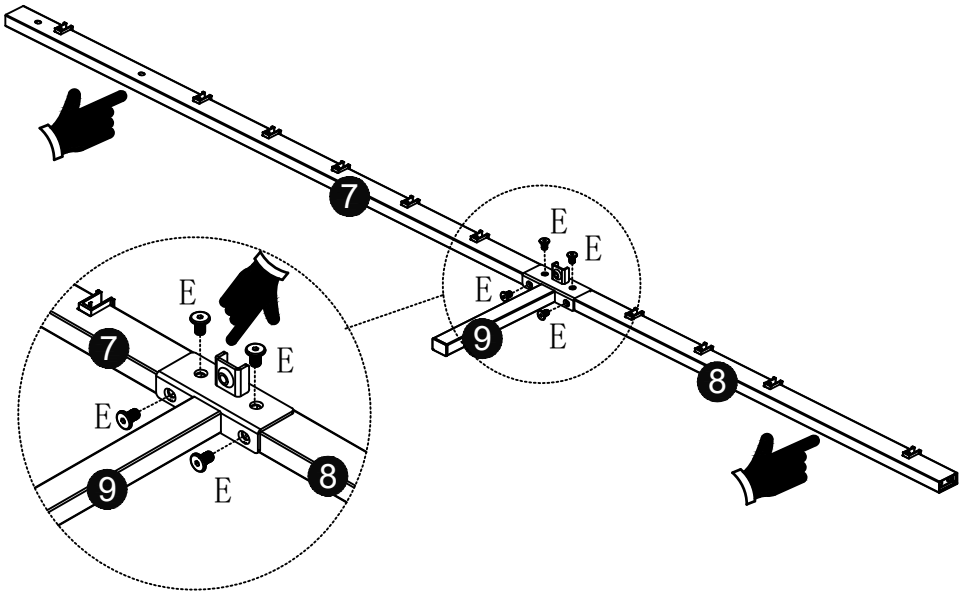


19

G	M8*40mm	4pcs
P	S5	1pc

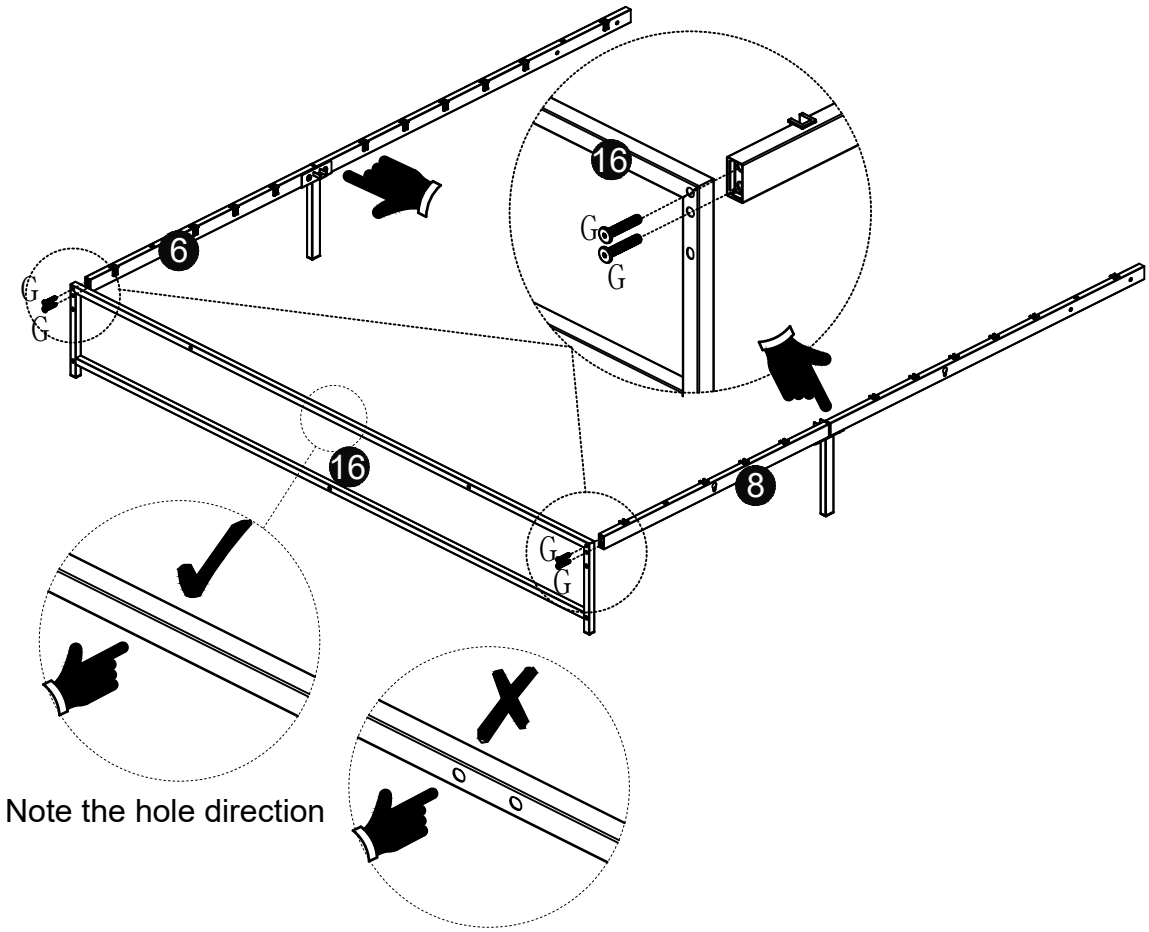


20

D	M6*28mm	7pcs
P	S5	1pc

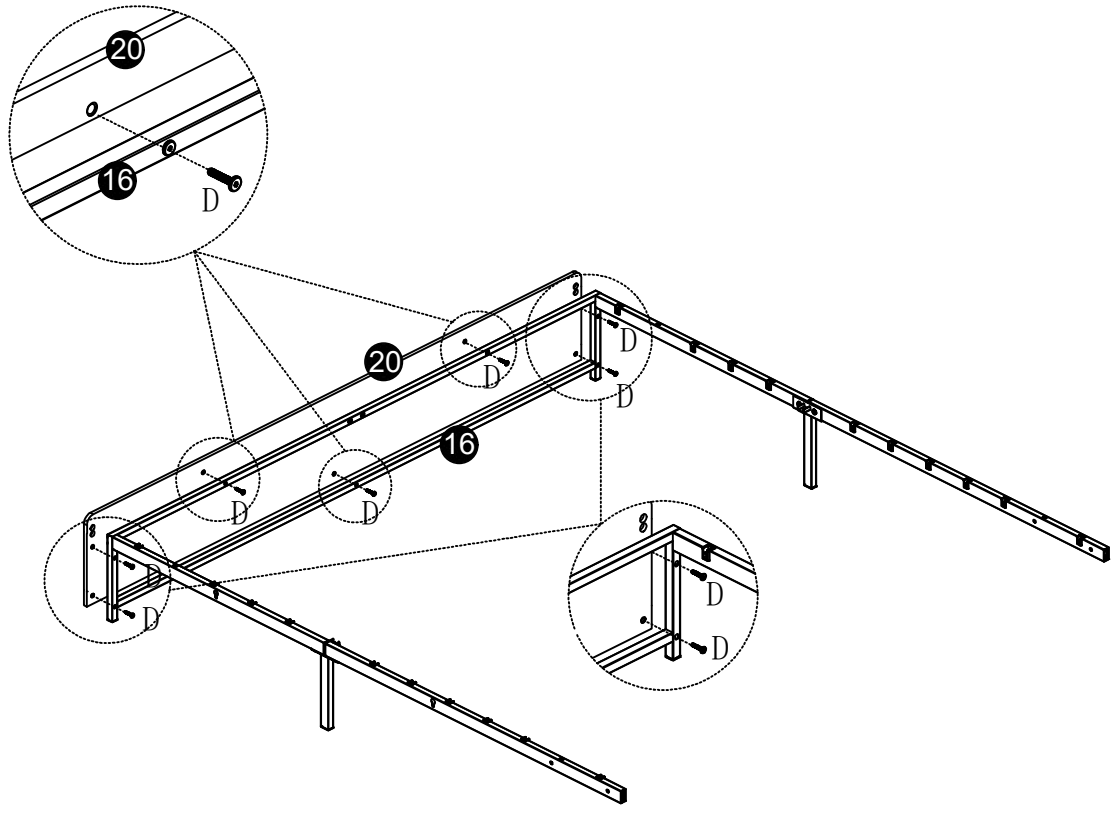

21


F	M8*35mm	6pcs
P	S5	1pc

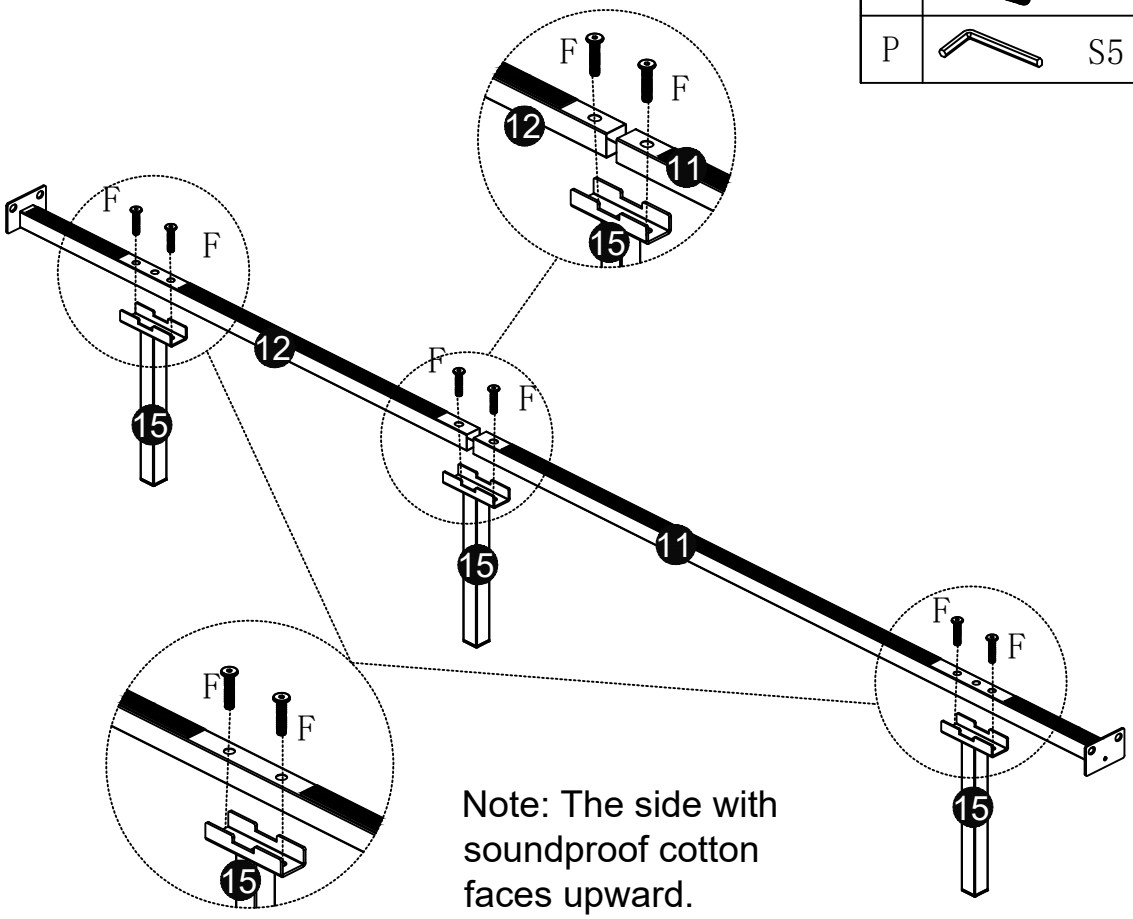

Note: The side with soundproof cotton faces upward.


22


E	M8*12mm	2pcs
P	S5	1pc

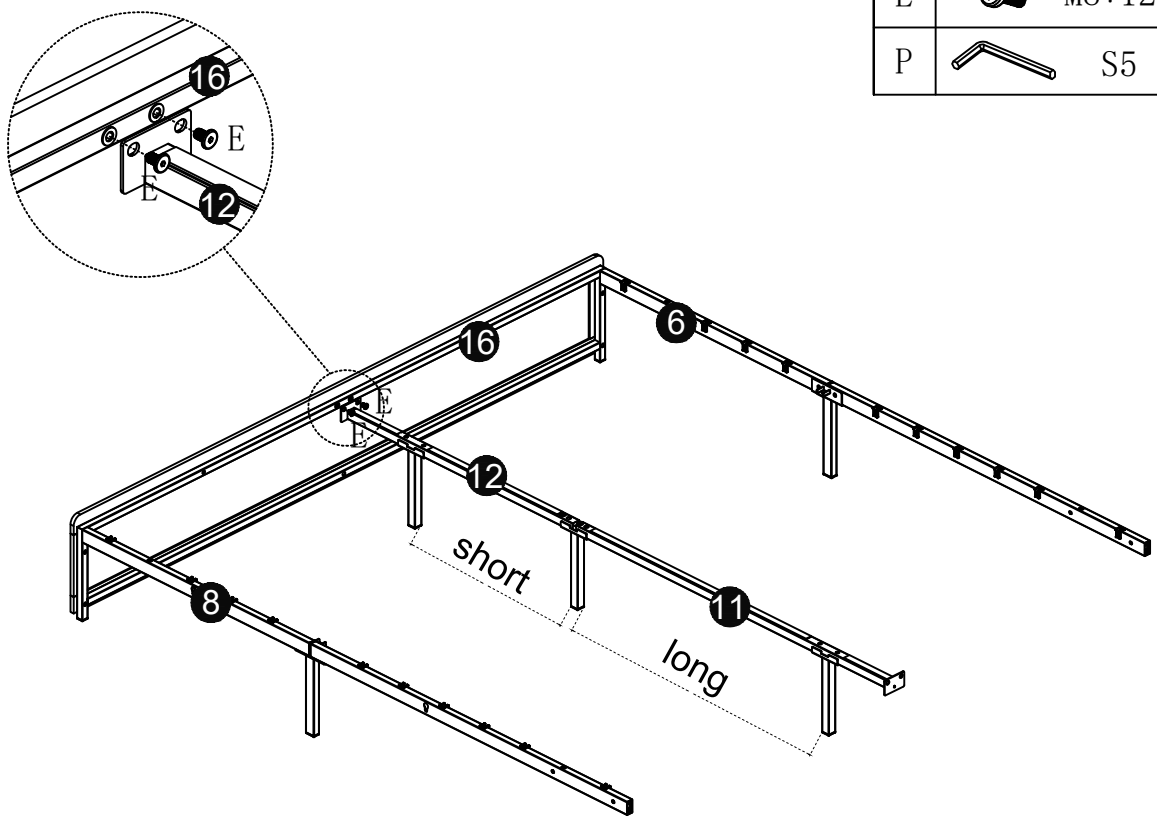

23

E	M8*12mm	2pcs
G	M8*40mm	4pcs
P	S5	1pc

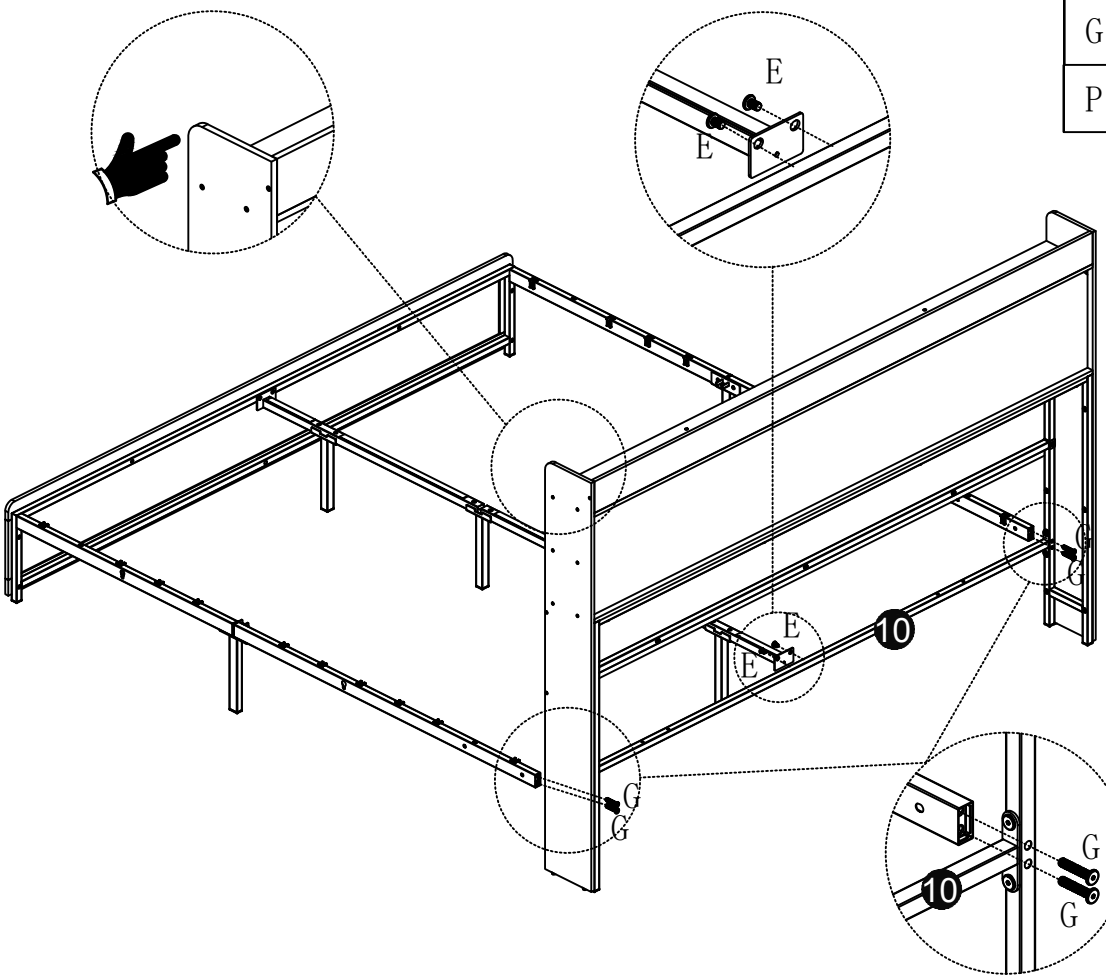


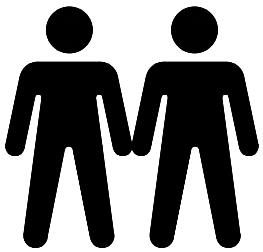

It needs at least two people to install


24

J	ST5*35mm	4pcs
O	S3	1pc

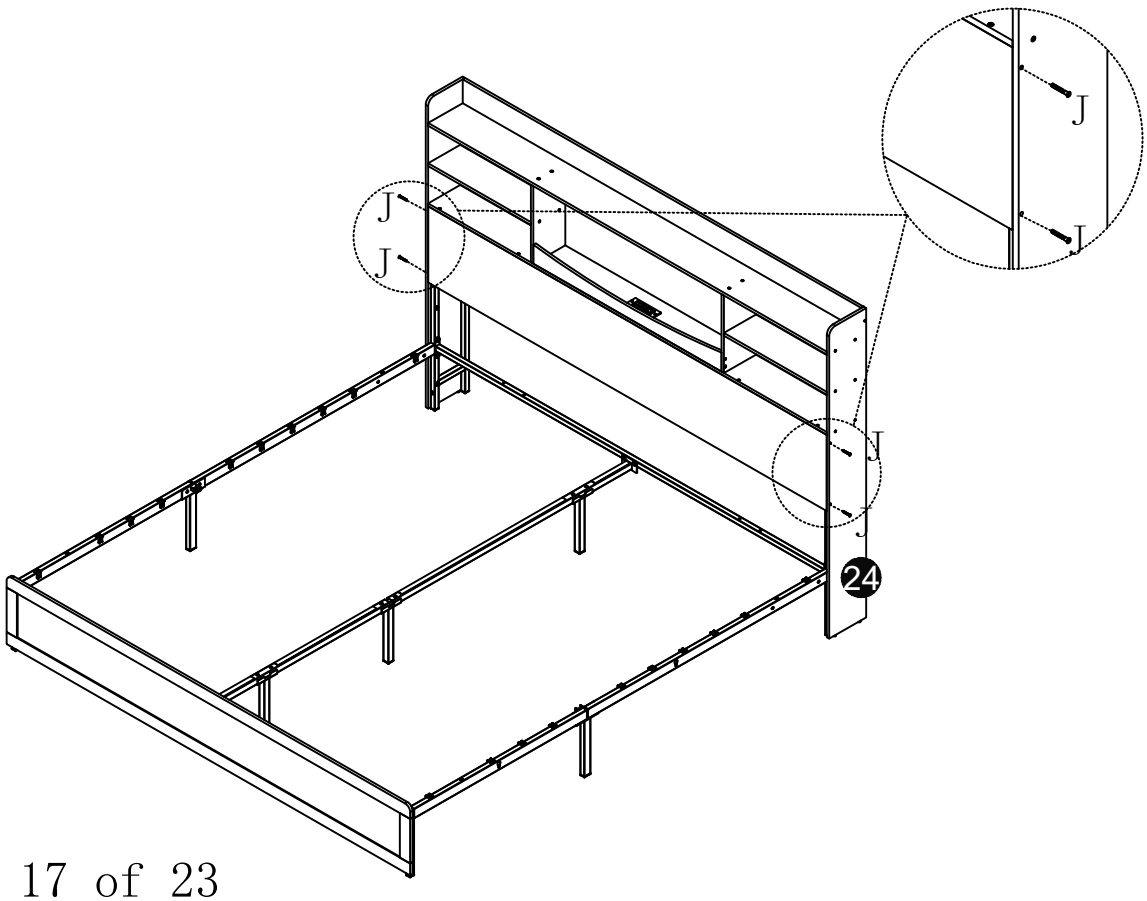

25

I	ST3*12mm	2pcs
J	ST5*35mm	4pcs
N		1pc
O	S3	1pc

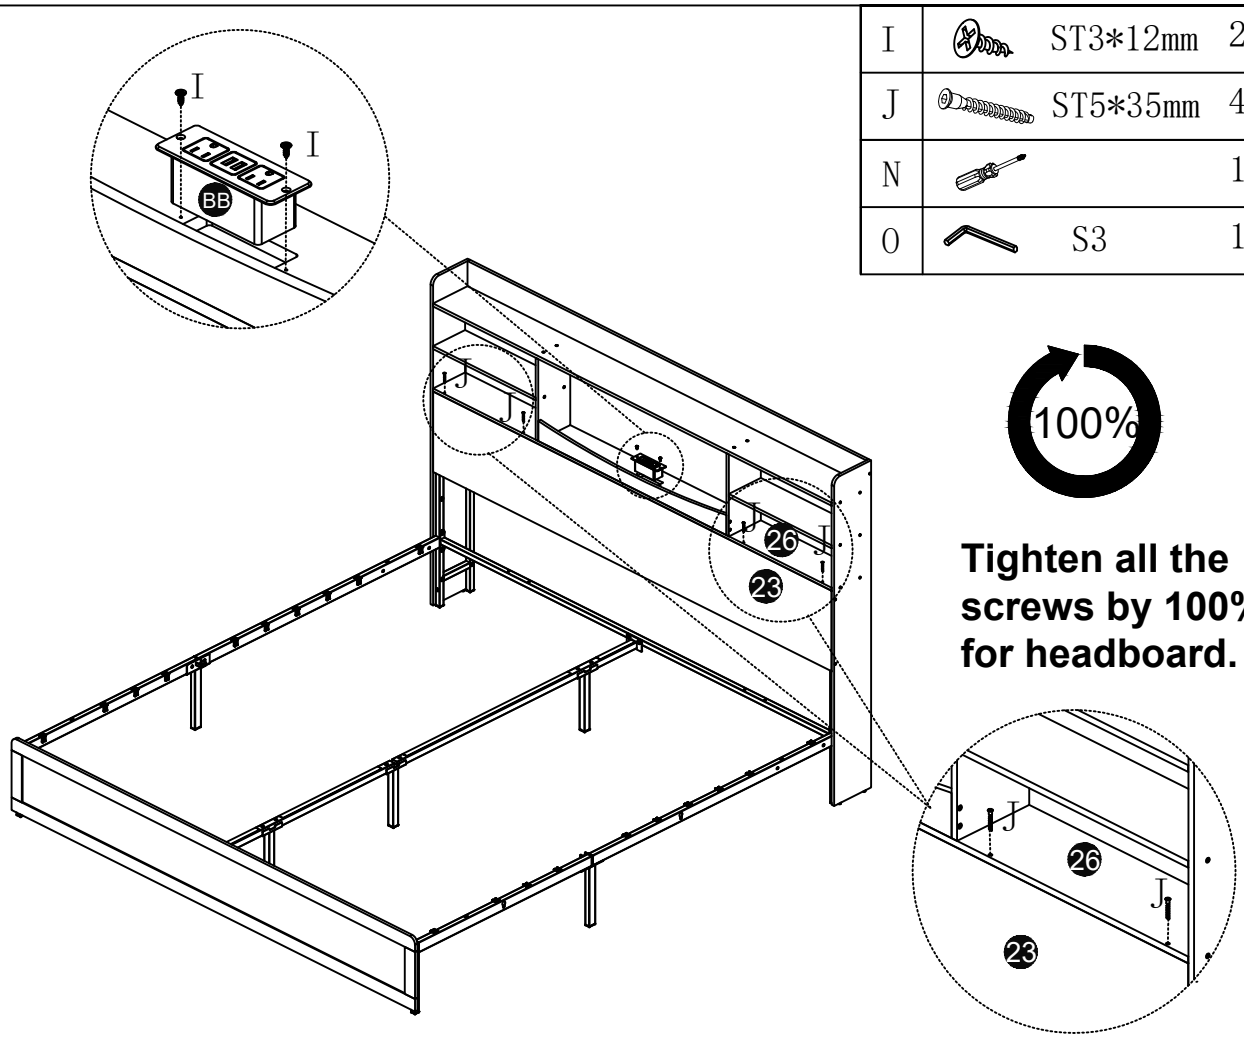


100%

Tighten all the screws by 100% for headboard.

26

H	M8*55mm	1pc
F	M8*35mm	2pcs
P	S5	1pc

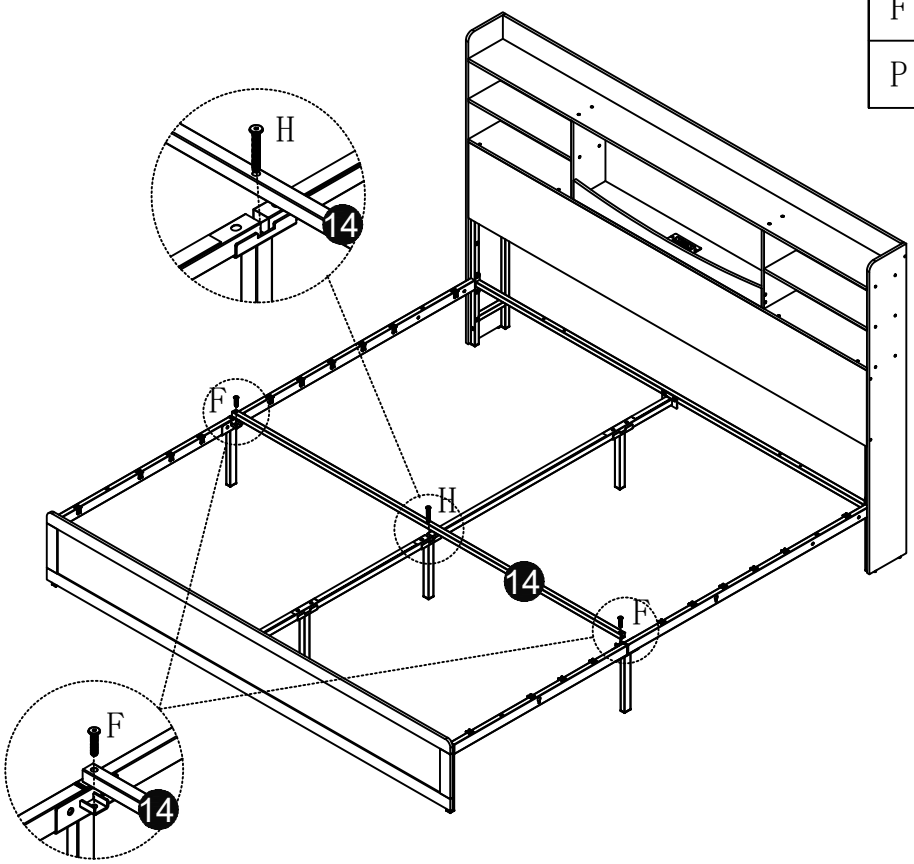


50%

Pre-tighten the screw by 50%


27

D	M6*28mm	4pcs
P	S5	1pc

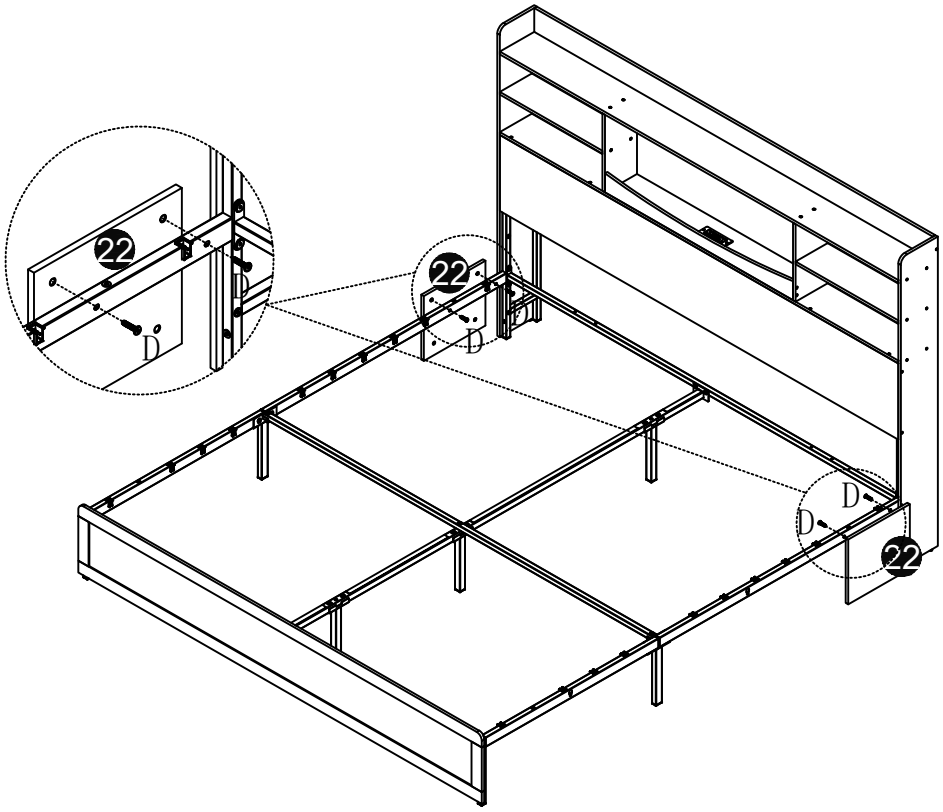


28

A	M6*10mm	4pcs
33		2pc
P	S5	1pc

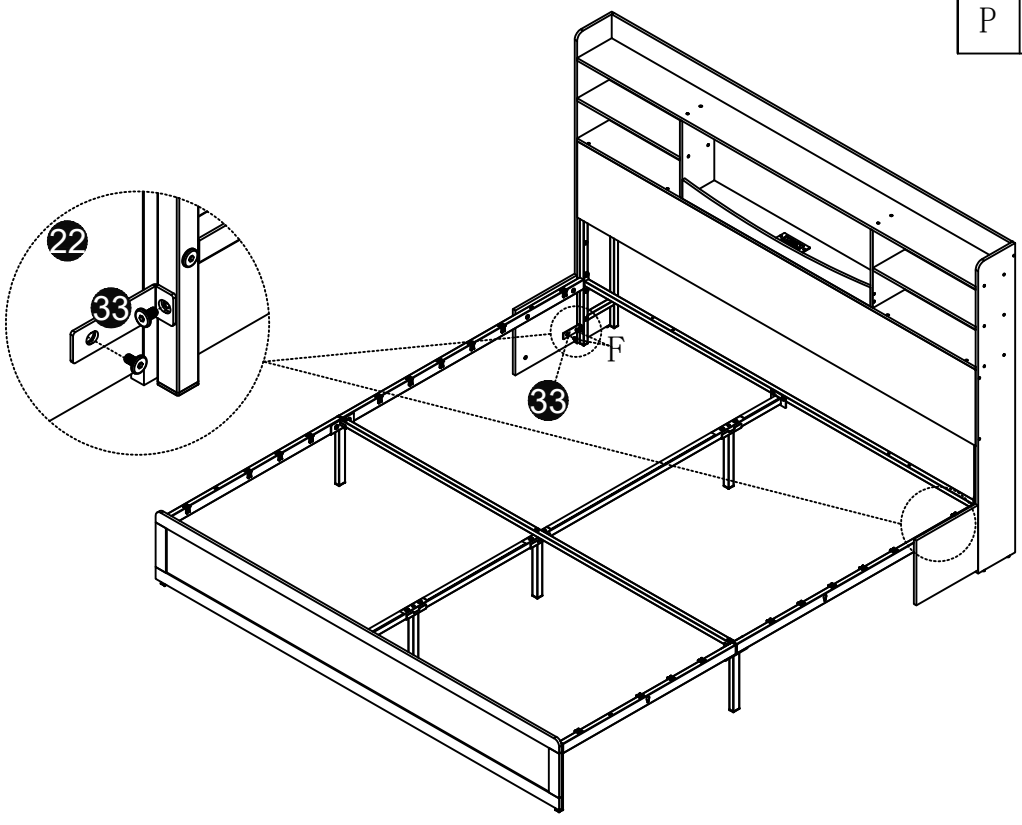


29


A	M6*10mm	4pcs
H	M8*55mm	2pc
P	S5	1pc

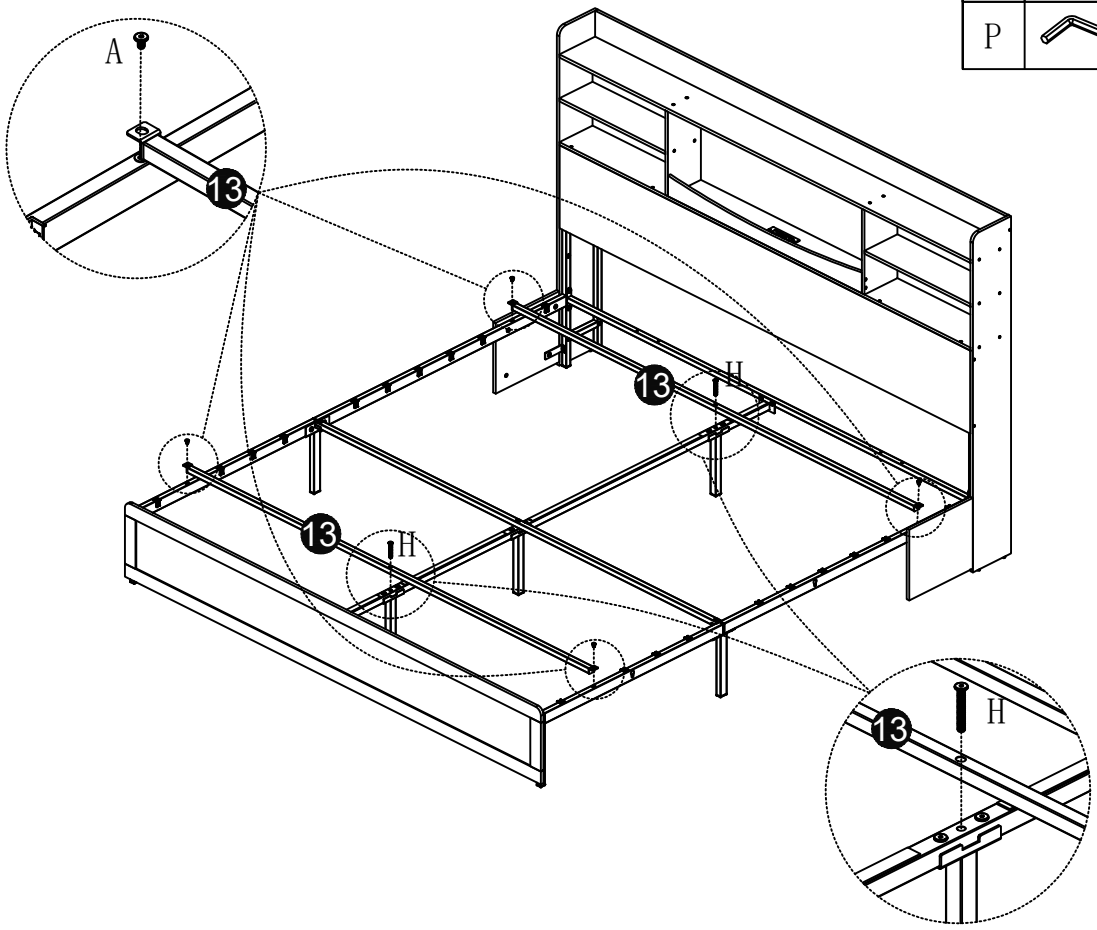


30

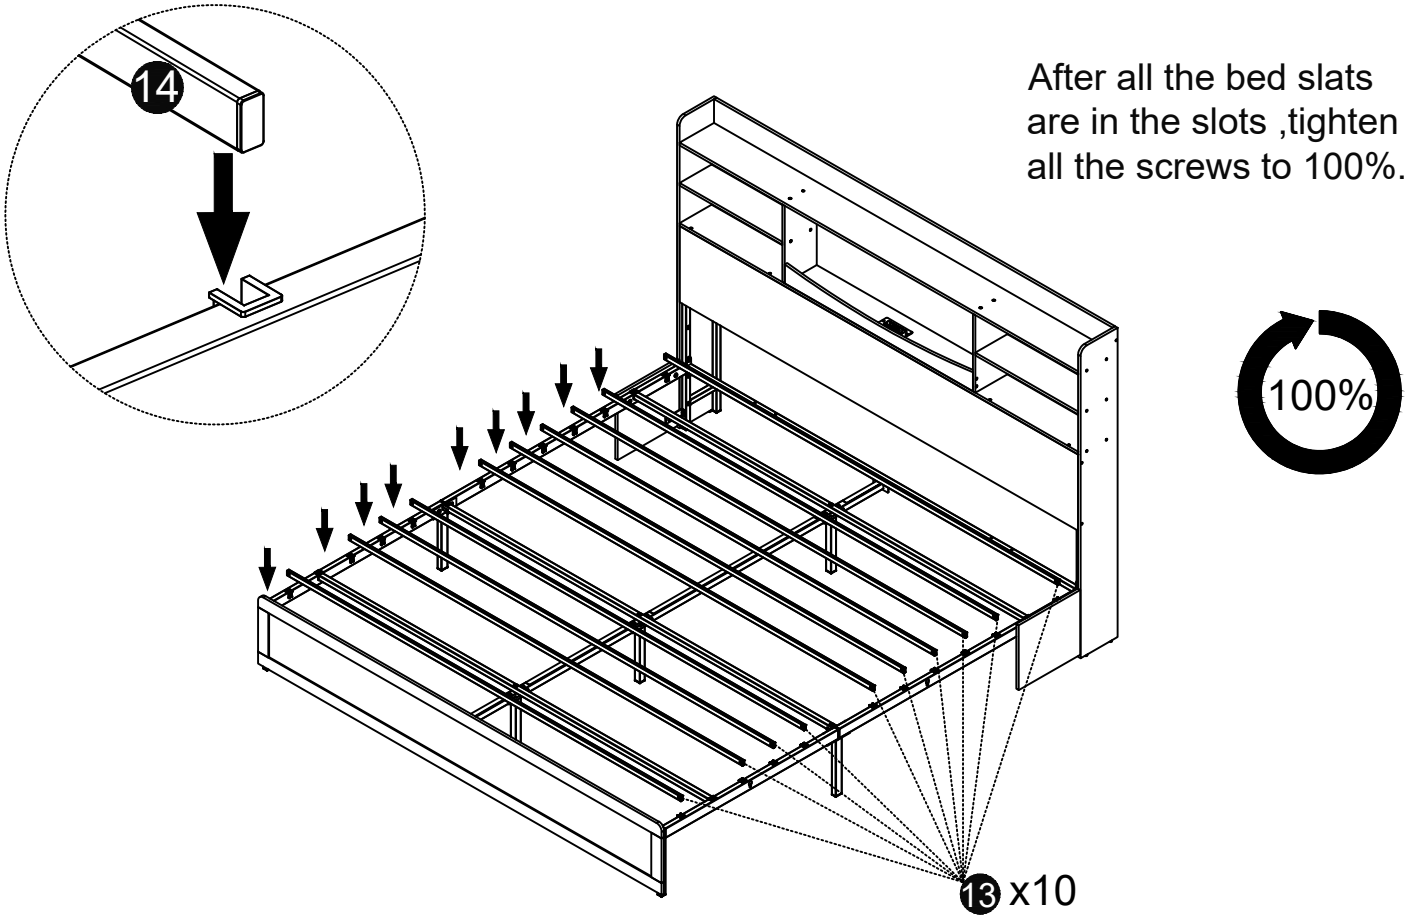

31

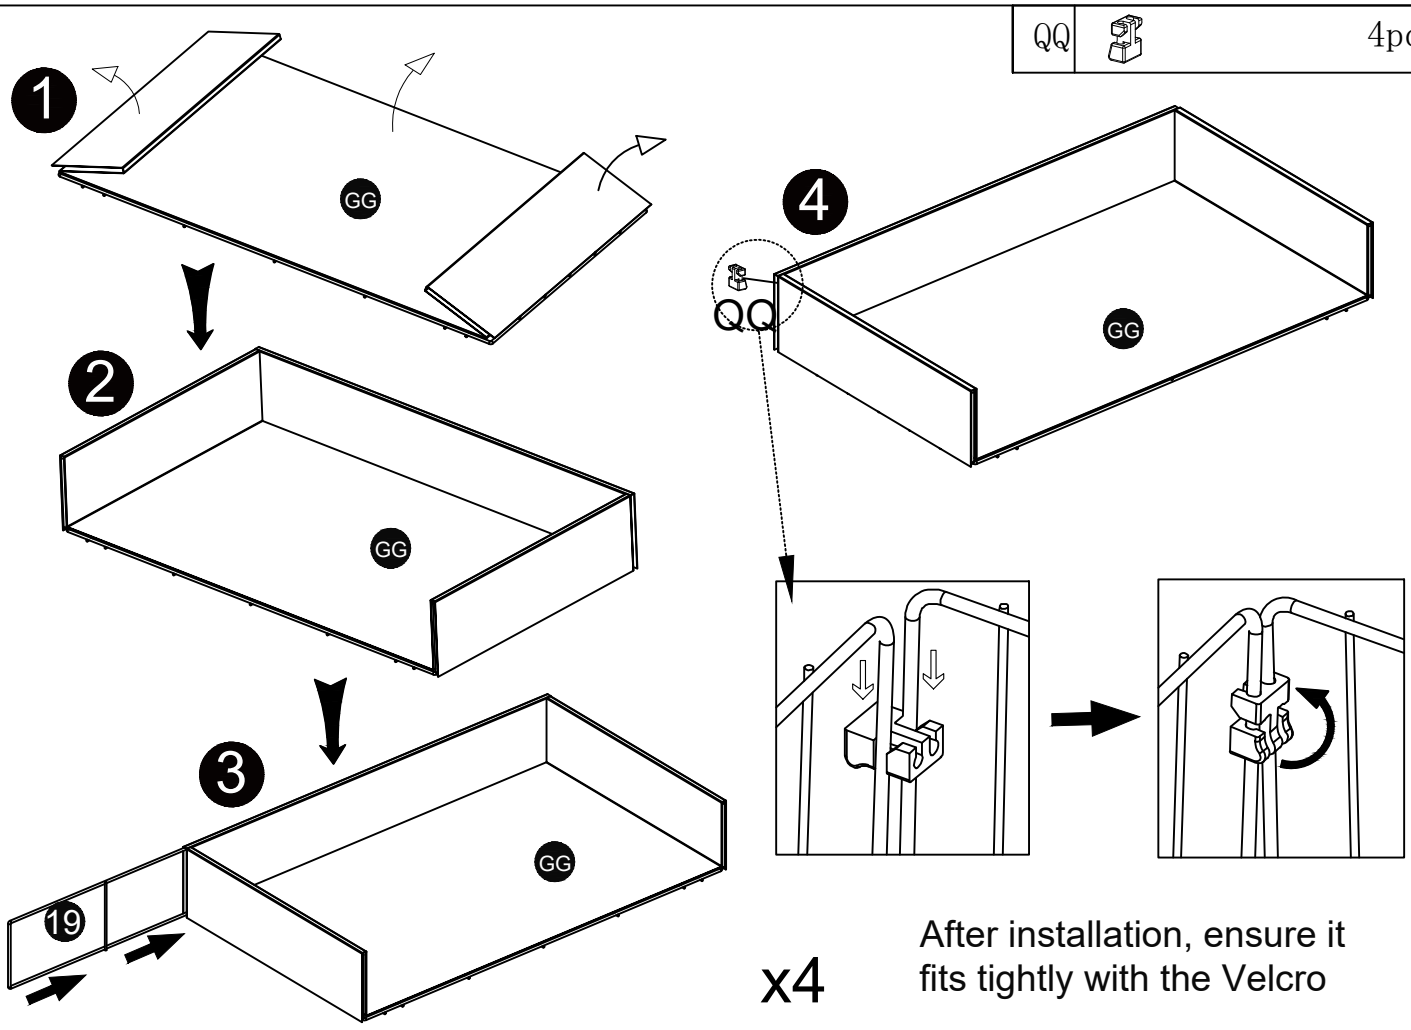

QQ
4pcs
1
GG
2
GG
3
GG
19
4
QQ
GG
x4
After installation, ensure it fits tightly with the Velcro

32

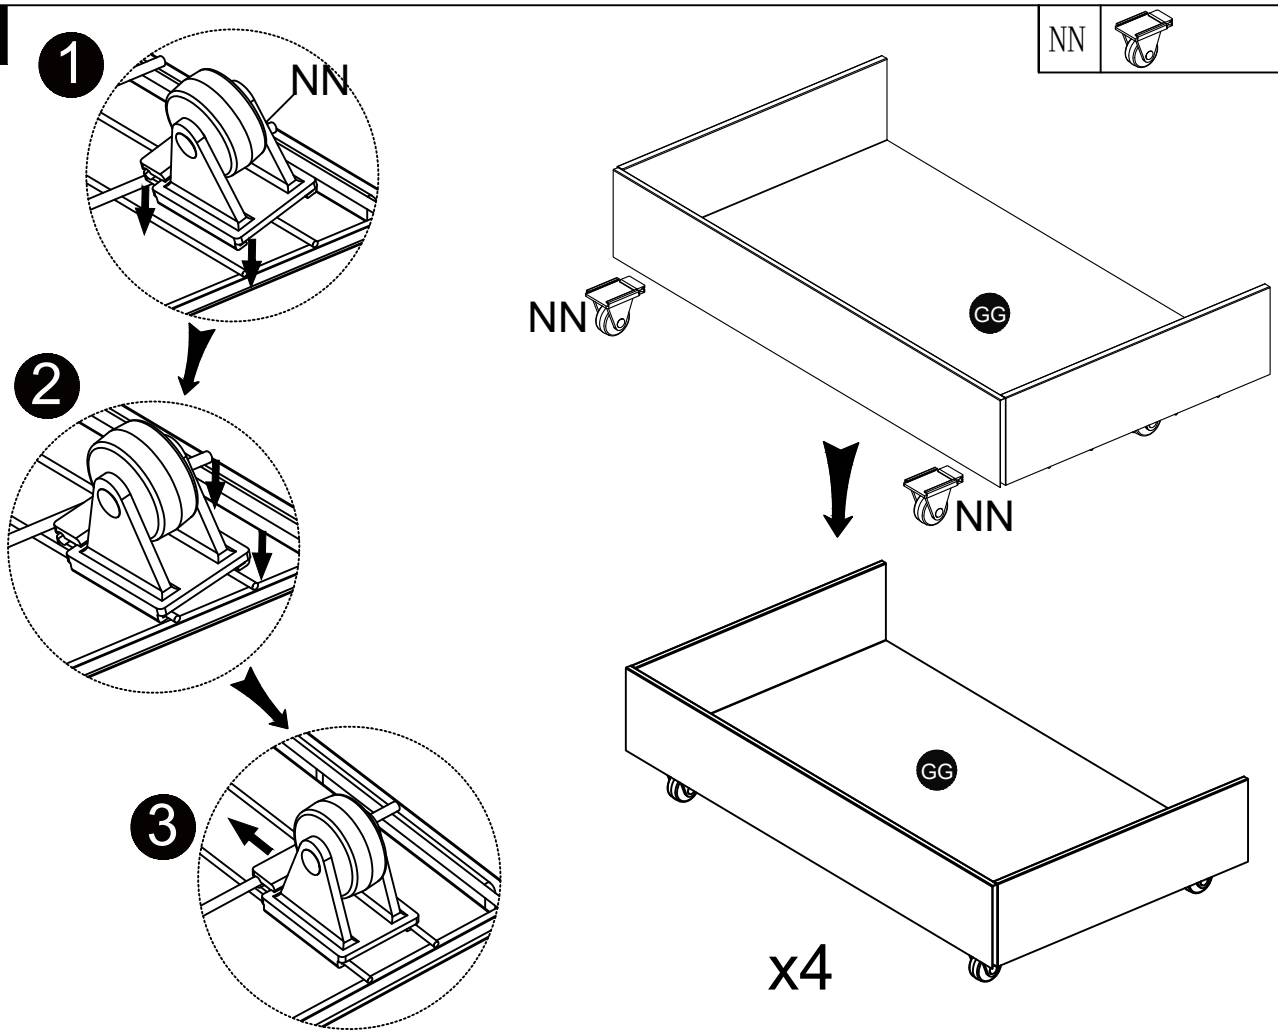

NN
16pcs
1
NN
2
3
NN
GG
NN
GG
x4

33

A		M6*10mm	20pcs
B		M6*15mm	4pcs
Q			4pcs
PP			20pcs
P		S5	1pc

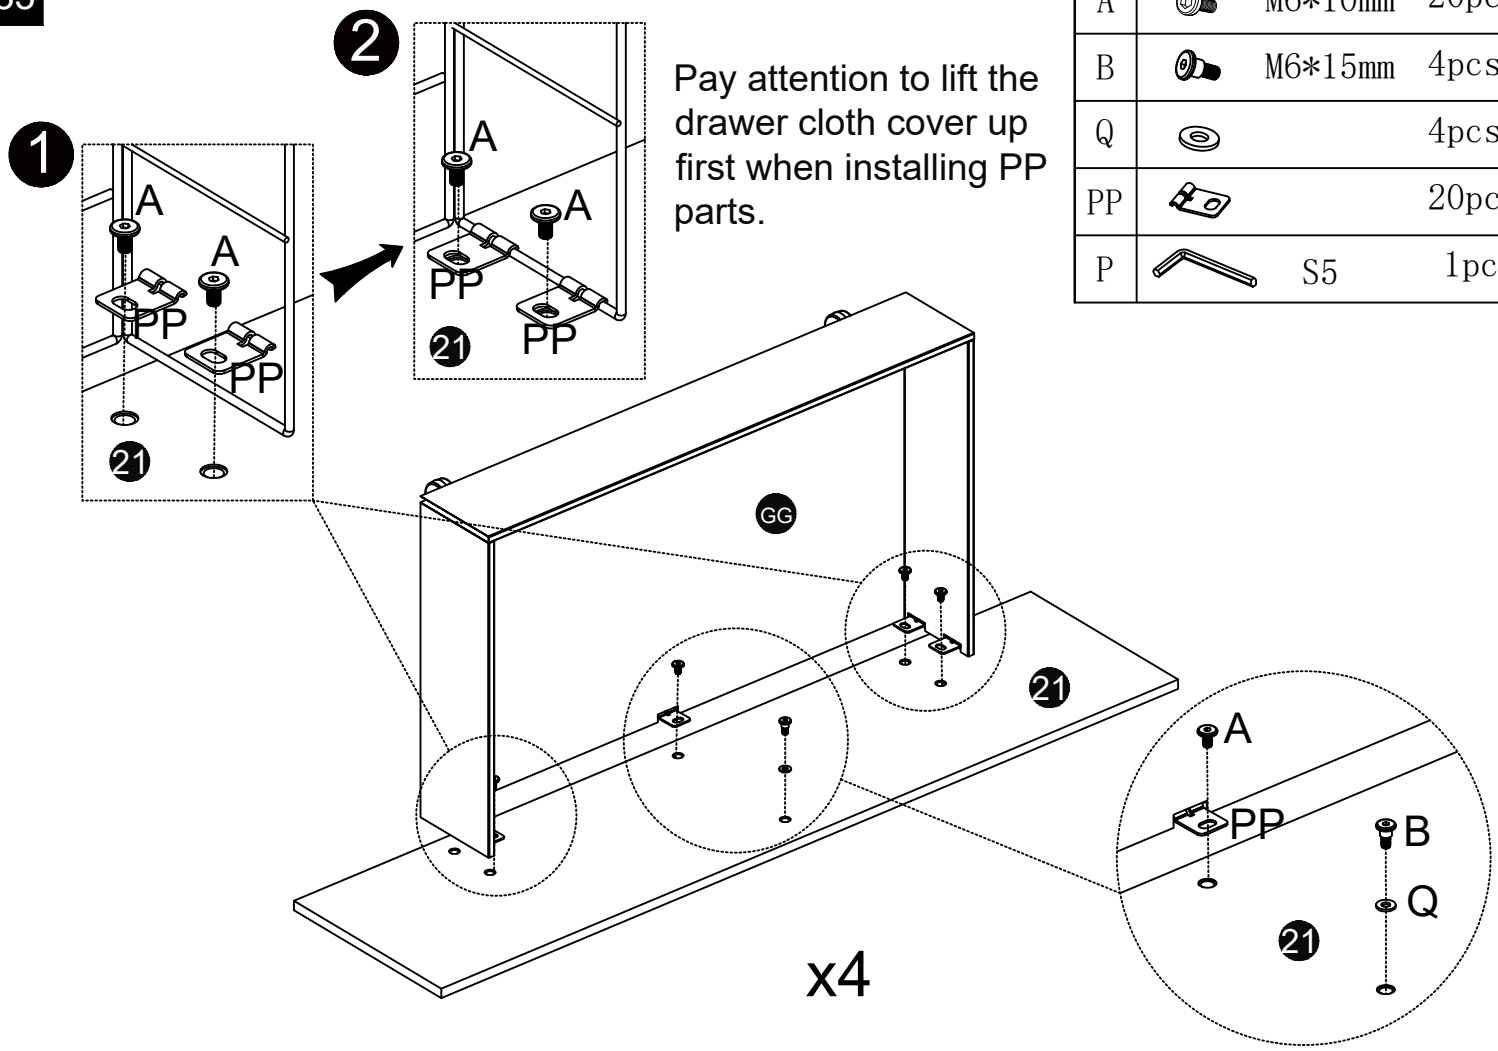


34

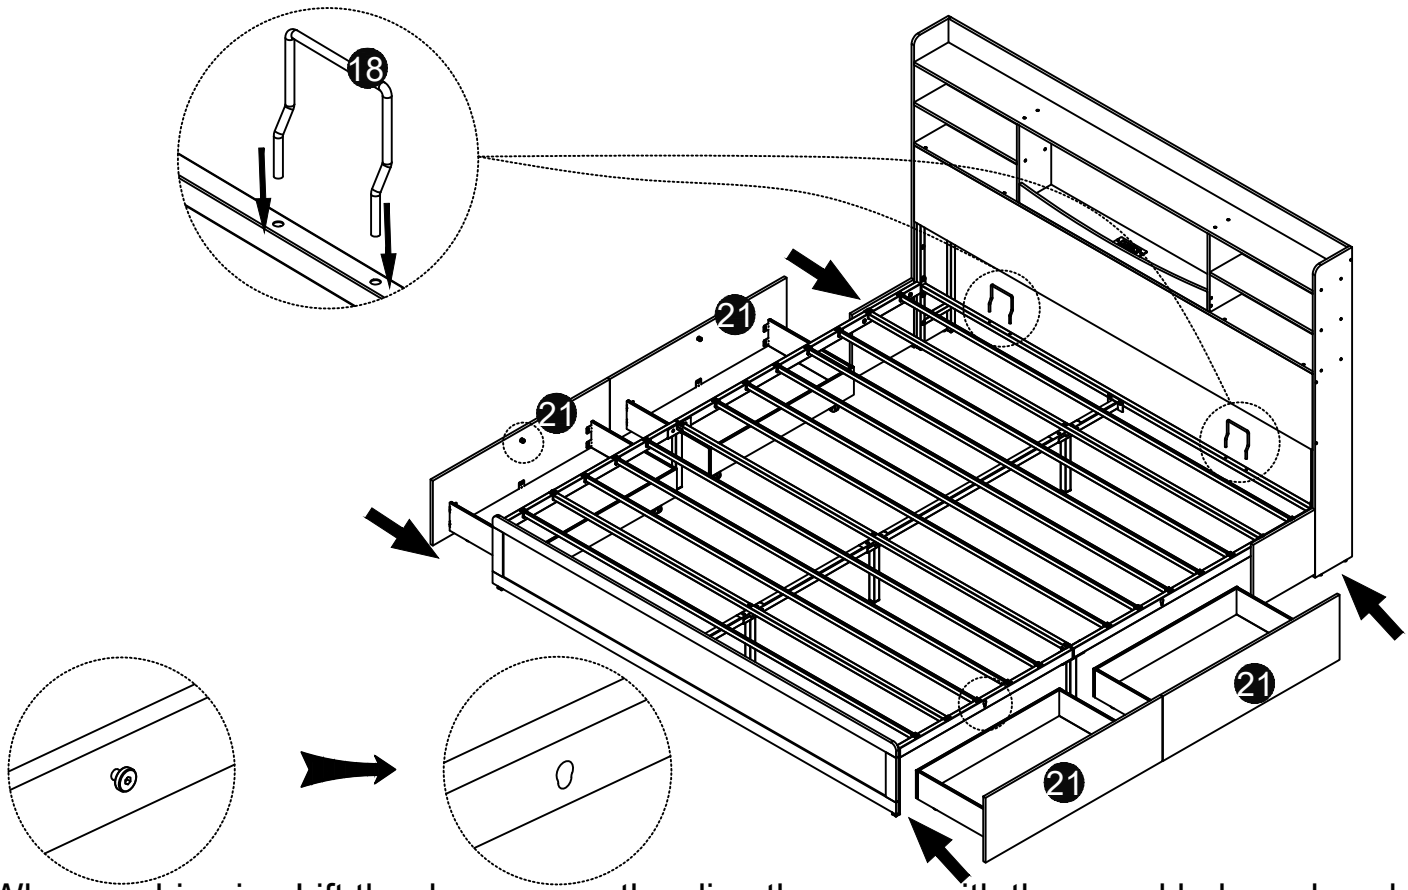

When pushing in, Lift the drawers gently, align the screw with the gourd hole and push in. when pulling out, Lift the drawers gently, align the screw with the gourd hole, and then pull it out.

35

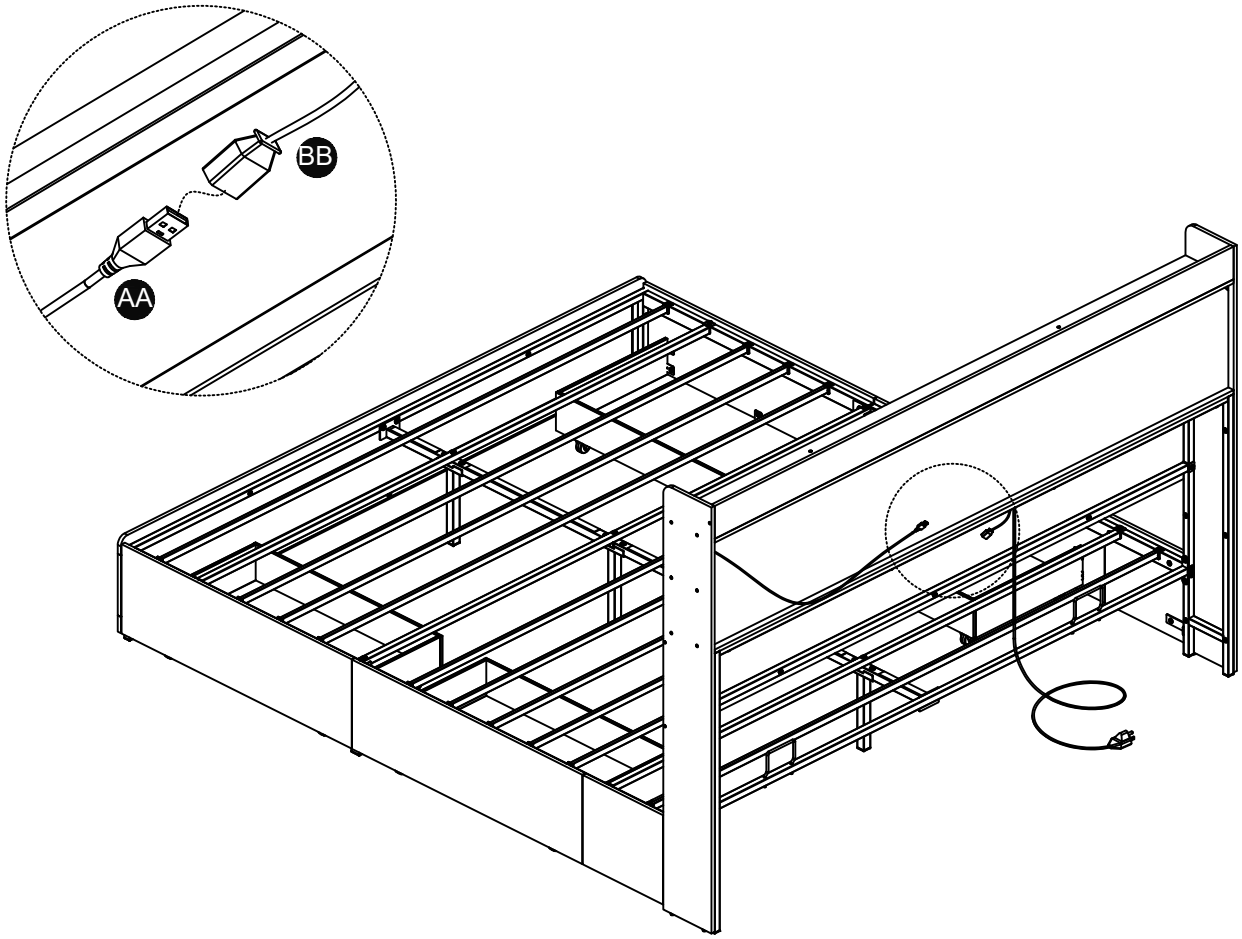

36

FINISH

