



ASSEMBLY INSTRUCTIONS




STEP 7 : Fix the Bed Slat Support (G) to the Bed Slat (F) as shown.

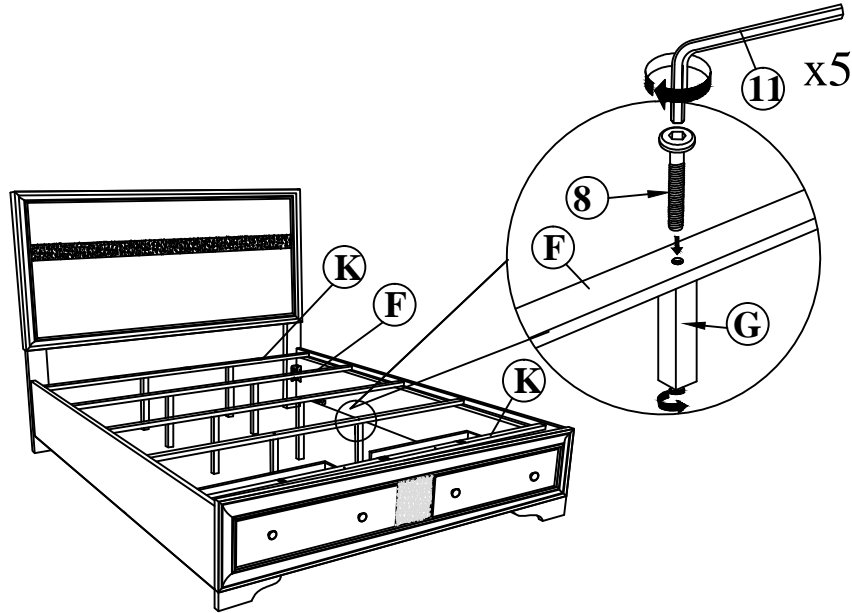

STEP 8 : Fix the Bed Slat (F) & (K) by push closely to the Side Rail (D) by using SCK Screw (5) as shown.

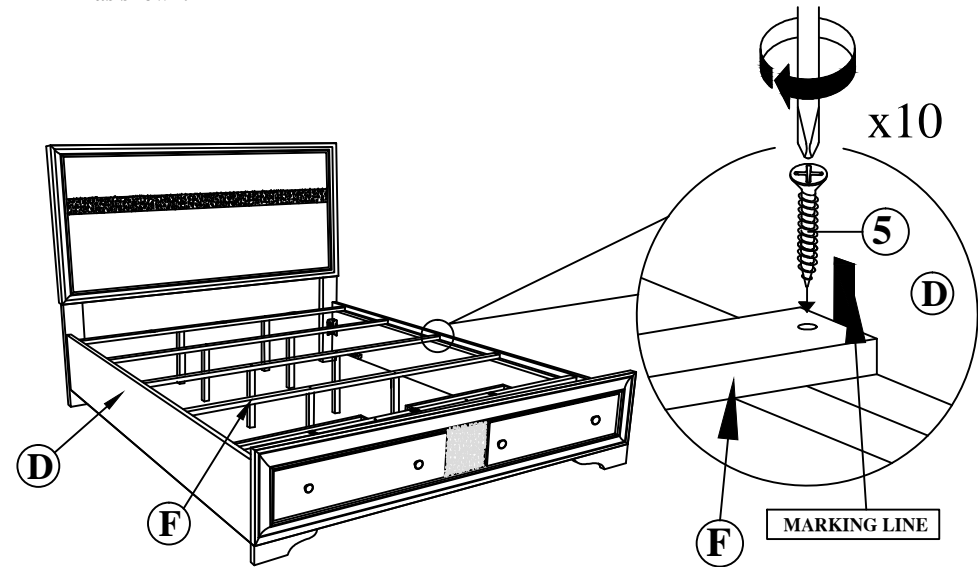

STEP 9: Attach Concealed Panel (I) at the upper Bed Slat (F) using Panhead Screw (6) and tighten with Screw Driver.(not Included)

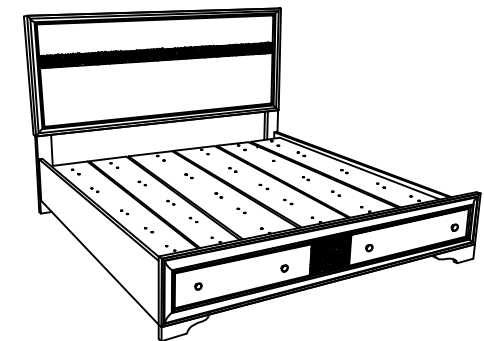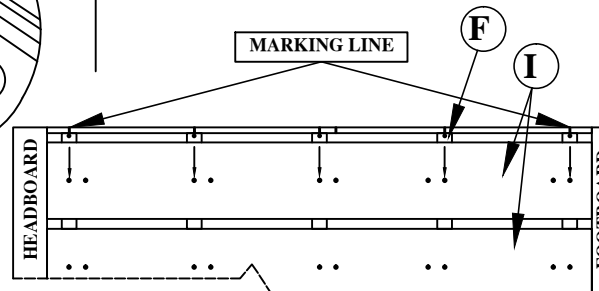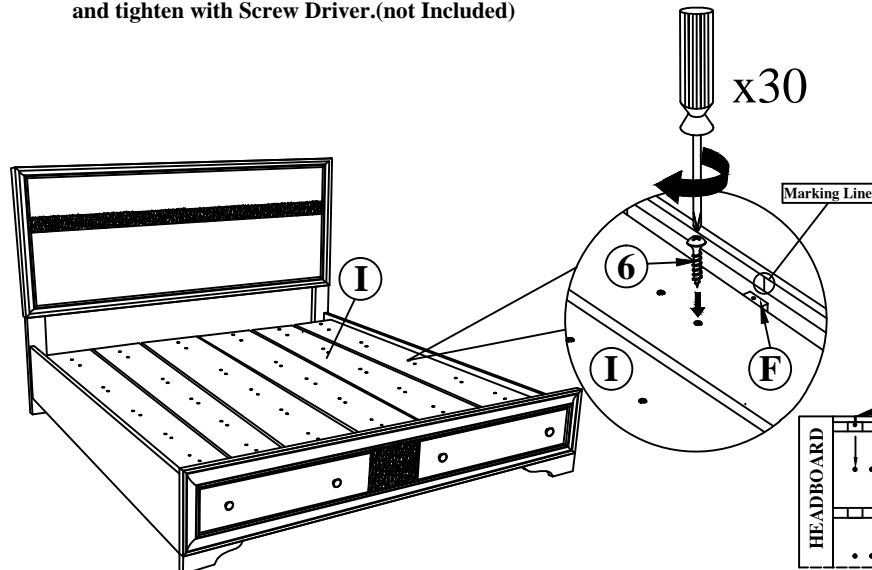

COMPLETED ASSEMBLY

TIGHTEN THE PANHEAD SCREW (6)
BY FOLLOW THE ARROW AS SHOWN