
ASSEMBLY INSTRUCTIONS

Flat-Top Corner Display Cabinet

MODEL CC-B0010

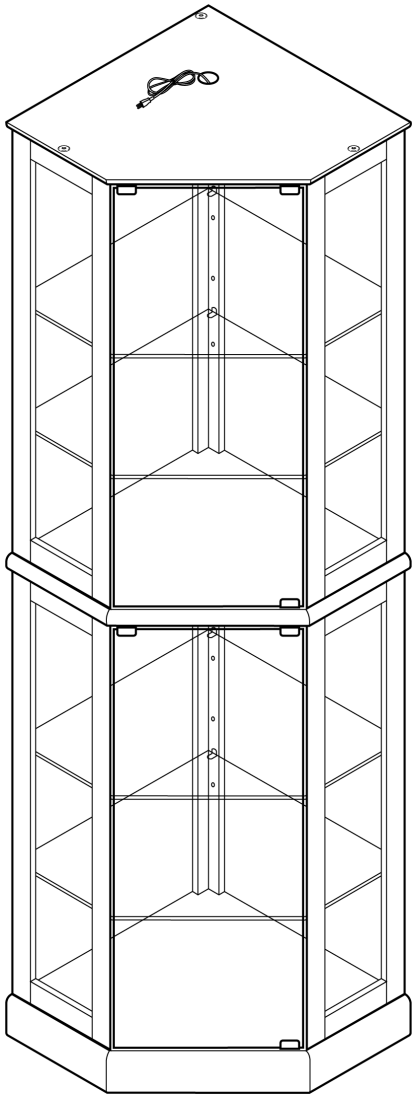

2 ADULTS
Assembly and lifting

15 STEPS
Follow in order

KEEP THIS GUIDE
For future reference

Parts: pages 3-6 | Assembly: pages 7-21 | Care: page 22

BEFORE YOU BEGIN

Before You Begin

01 Two adults are required. Assemble on a clean, soft surface.

02 Check every part and hardware item before starting. Stop if anything is missing or damaged.


03 Keep children, pets, small parts and packaging away from the assembly area. Tighten by hand and do not overtighten.

04 Tools: Phillips screwdriver, pencil, suitable drill and drill bit, and a hammer if required by your wall fixings. Hex key E is included. Use power tools only for wall fixing.

PARTS & HARDWARE

Identify the Cabinet Parts

1. Match the numbered parts to the parts list before assembly.
2. Part 7 is the upper support; part 12 is the lower support.

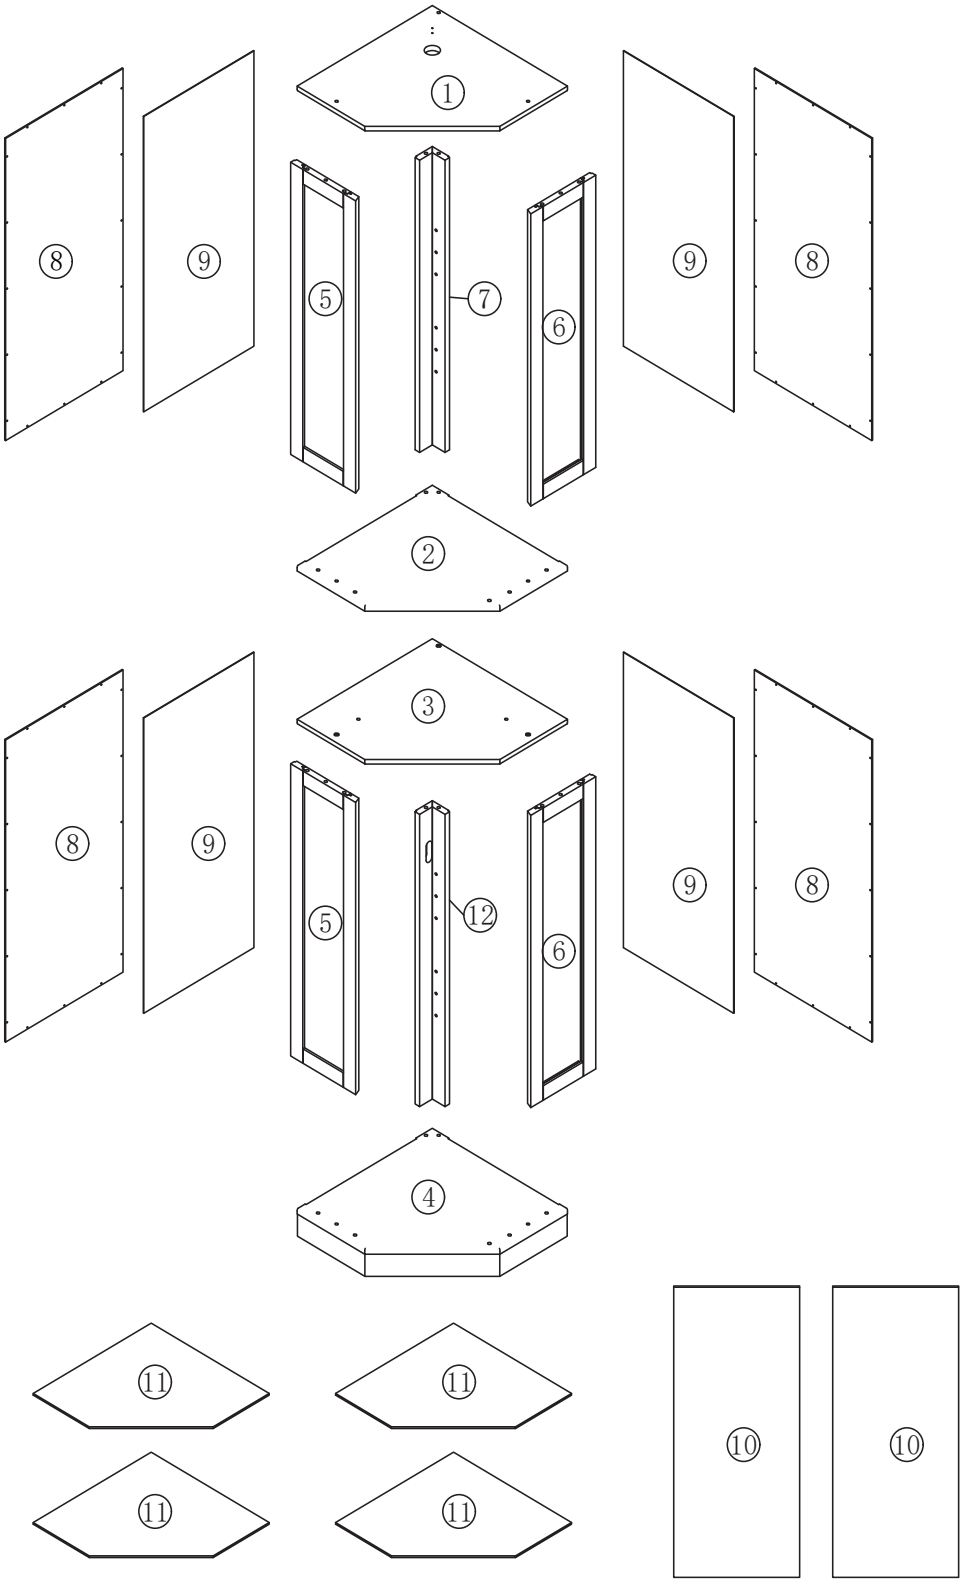

PARTS CHECKLIST

Check the Cabinet Parts

Match the numbers on the parts to this list before assembly.

PART	DESCRIPTION	QTY
1	Upper Cabinet Top	1
2	Upper Cabinet Bottom	1
3	Lower Cabinet Top	1
4	Base	1
5	Left Side Panel	2
6	Right Side Panel	2
7	Upper Vertical Support	1
8	Back Panel	4
9	Mirror Panel	4
10	Glass Door	2
11	Glass Shelf	4
12	Lower Vertical Support	1


KEEP THE SUPPORTS SEPARATE

Part 7 is for the upper cabinet. Part 12 is for the lower cabinet.


PARTS & HARDWARE

Hardware Checklist | A-K

1. Sort hardware by letter and size.
2. Extra pieces are spares; do not use them in place of a different item.

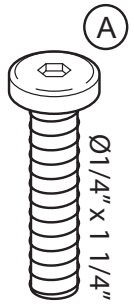


12x + 1x

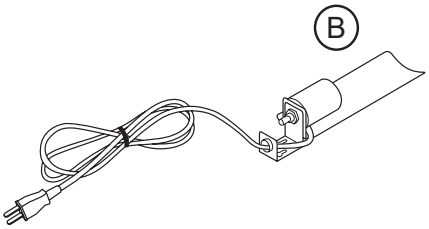

2x




4x

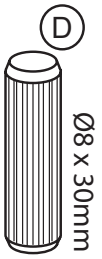

20x + 2x




1x

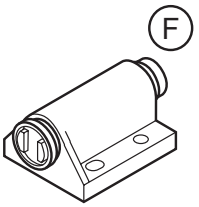


2x




8x

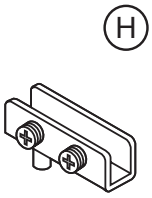


2x

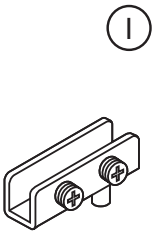

2x

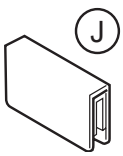

2x

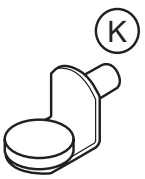

20x + 2x


KEEP IN MIND

A: 12 + 1 spare | D: 20 + 2 spares | K: 20 + 2 spares

PARTS & HARDWARE

Hardware Checklist | L-T


1. Keep the shorter dowels R and bolts S separate for joining the two cabinets.
2. Bulb T: 120 V, 25 W, Type T. Keep the lights unplugged during assembly.

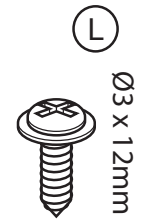

64x + 4x




2x



2x



2x




4x




1x



2x

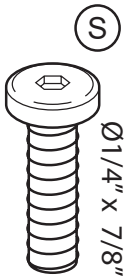

2x

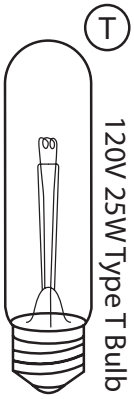

2x

KEEP IN MIND


L: 64 + 4 spares. Match both the letter and size before use.

STEP

01 Attach the Upper Door Catch

On the underside of top panel 1, attach catch F with four screws G. Use the indicated pilot holes and tighten by hand.


F × 1 | G × 4

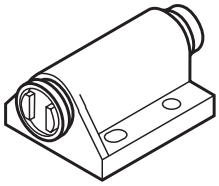

F 1x



G 4x

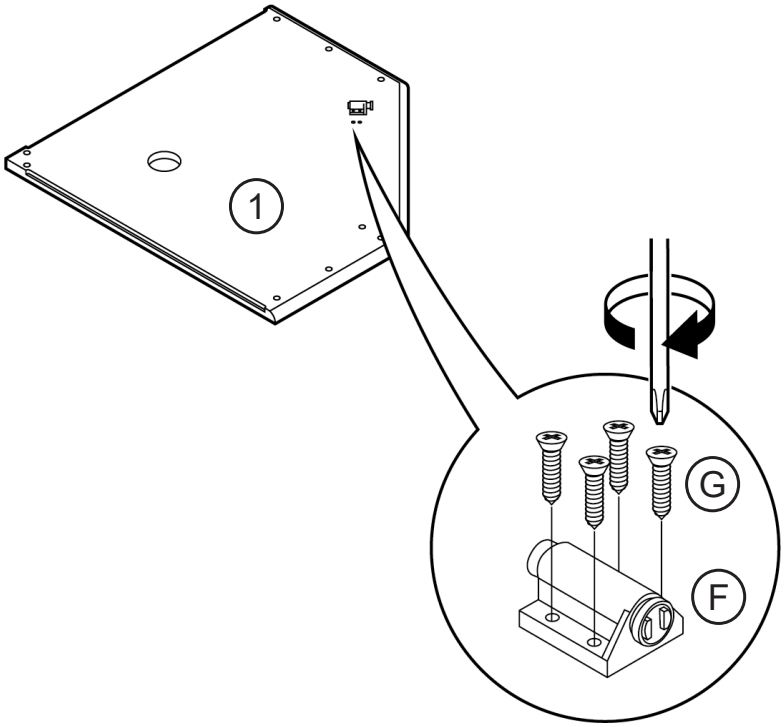


STEP

02 Install the Upper Light

Attach light socket B under panel 1 using two screws C. With the light unplugged, fit bulb T. Keep the cord clear of all joints.

B × 1 | C × 2 | T × 1

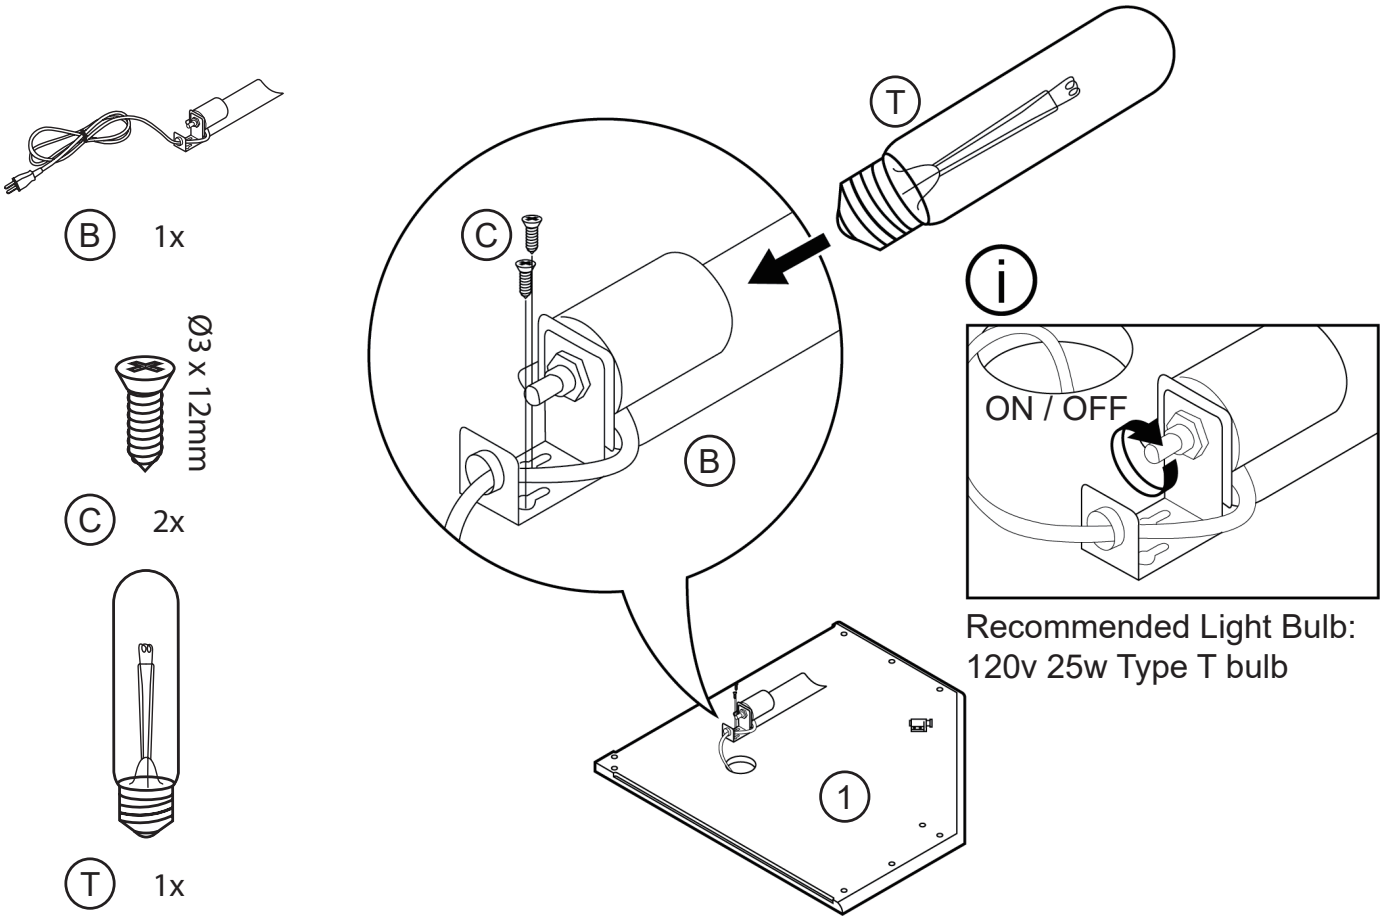

ASSEMBLY CHECK

Keep the light unplugged throughout assembly. Bulb T: 120 V, 25 W, Type T.

STEP


03 Build the Upper Frame

Apply glue Q to the five dowel holes shown and insert five dowels D. Join side panels 5 and 6 and support 7 to bottom panel 2 with three bolts A.

A × 3 | D × 5 | Glue Q | Hex key E

UPPER FRAME


Panels 5, 6 and 7 join bottom panel 2.

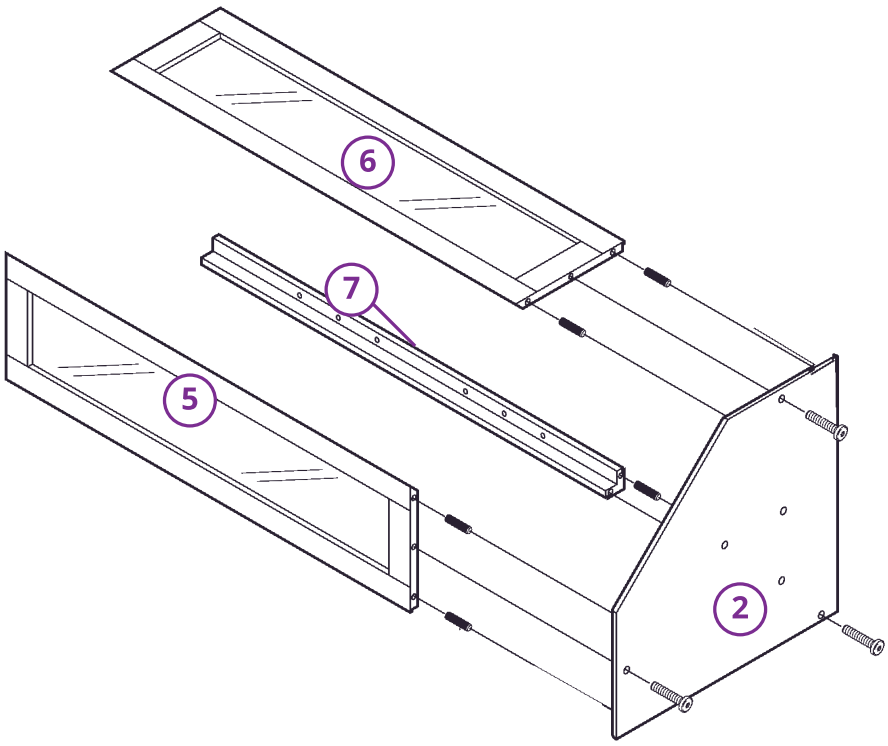

Match the drilled edges before joining.

Keep the panel orientation shown.

01 / APPLY GLUE

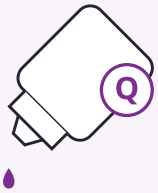

Apply to the 5 dowel holes.

02 / INSERT DOWELS




D × 5

8 × 30 mm

5 + 6: two each; 7: one.

03 / TIGHTEN BOLTS

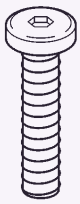

A × 3

1/4 × 1 1/4 in

One bolt per panel / support.

Tighten with Allen key E.

ASSEMBLY CHECK


Use A bolts and D dowels at these joints. Do not overtighten.

STEP

04 Attach the Upper Top

Add five dowels D with glue Q at the locations shown. Fit top panel 1 and secure it with three bolts A. Keep the light cord clear.

A × 3 | D × 5 | Glue Q | Hex key E

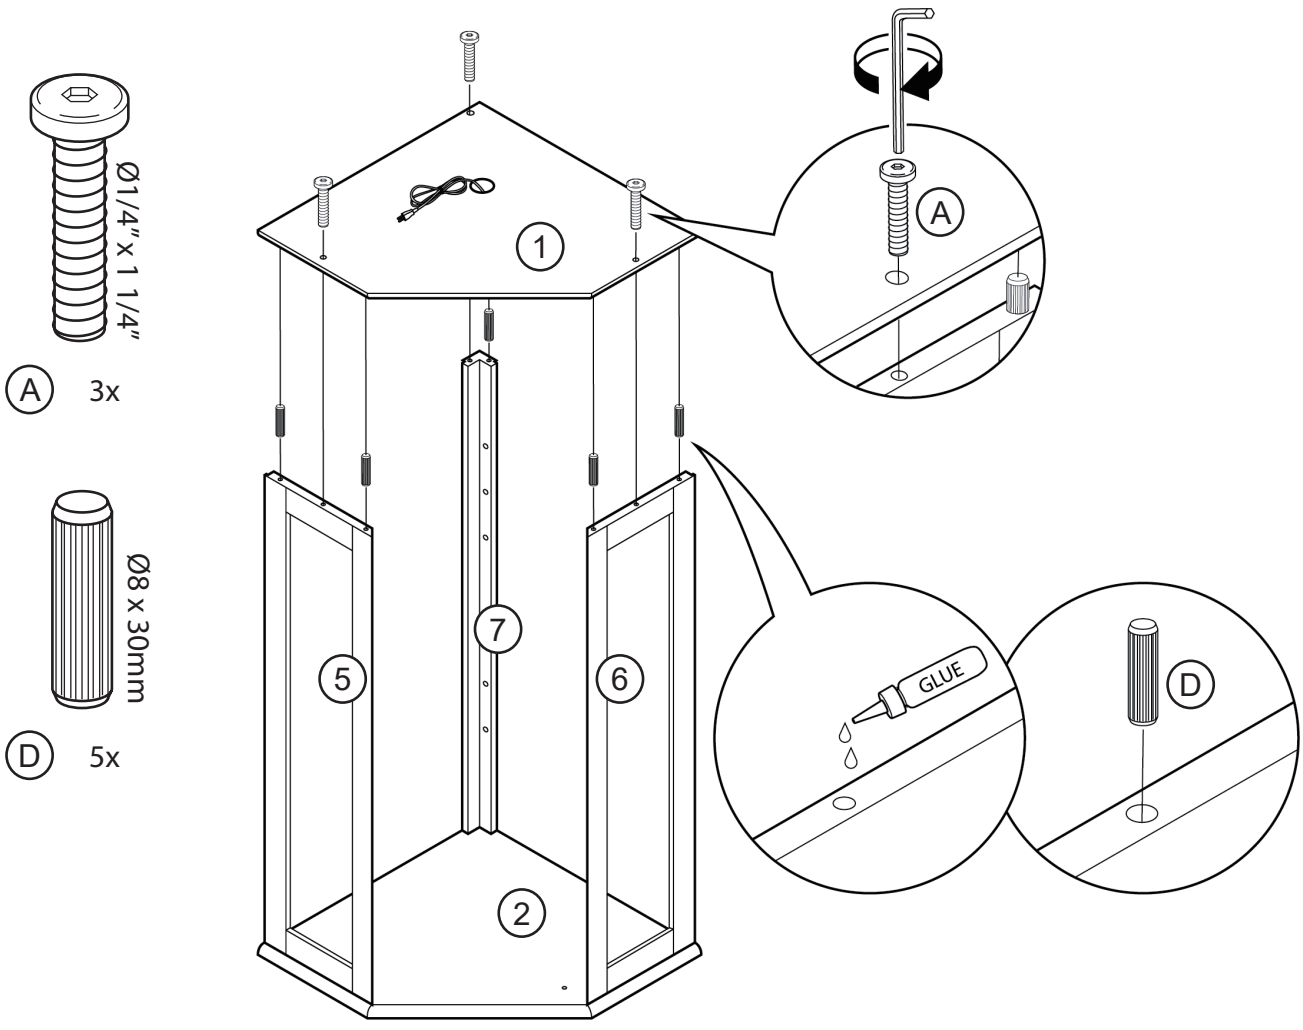

ASSEMBLY CHECK


Use A bolts and D dowels at these joints. Do not overtighten.

STEP

05 Fit the Upper Back Panels

Remove the protective film from two mirror panels 9. Fit the mirrors with the reflective sides facing the cabinet interior, then place two back panels 8 over them. Secure the backs with 32 screws L. At the two strap positions, pass the screws through washers P and straps M as shown.

L × 32 | M × 2 | P × 2

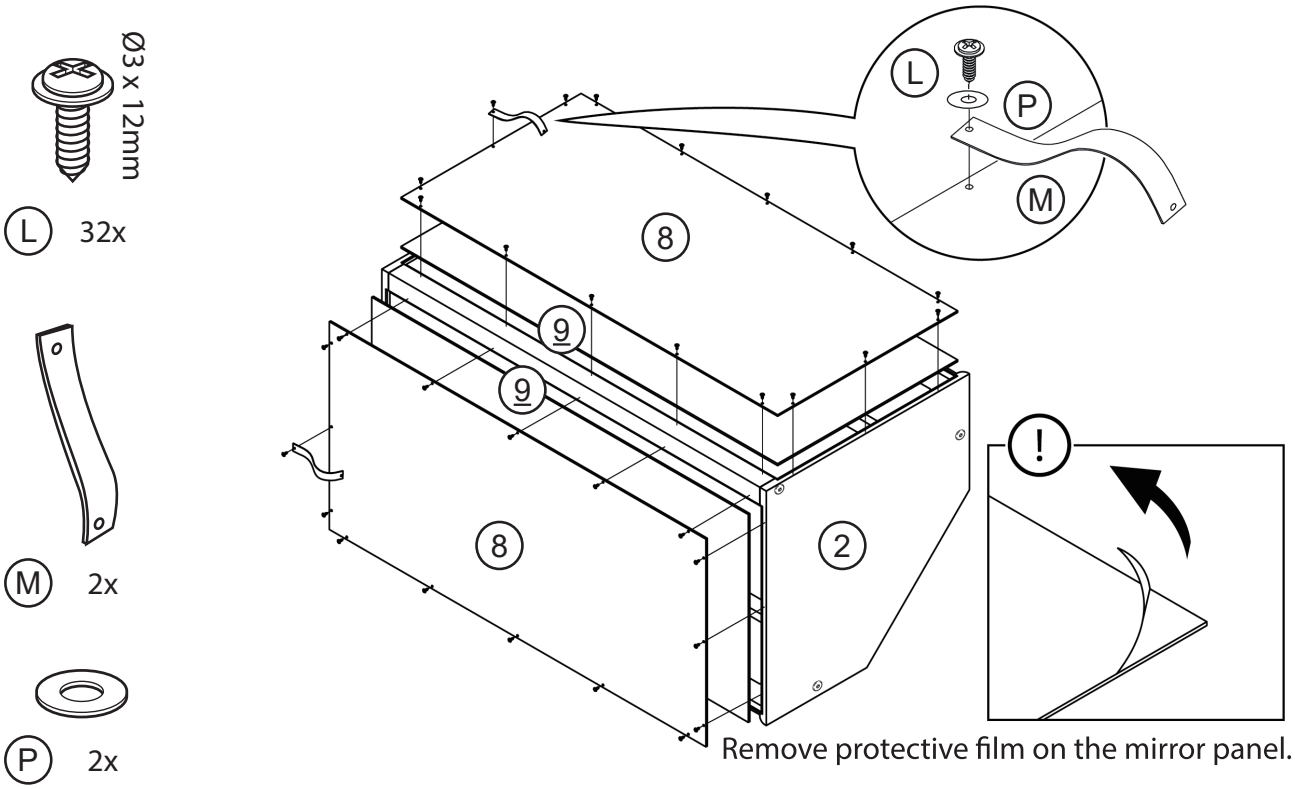

ASSEMBLY CHECK


The 32 screws include the two cabinet-side strap fixing points. Do not add two extra screws.

STEP

06 Build the Lower Frame

Apply glue Q to the five dowel holes shown and insert five dowels D. Join side panels 5 and 6 and lower support 12 to base 4 with three bolts A.


A × 3 | D × 5 | Glue Q | Hex key E

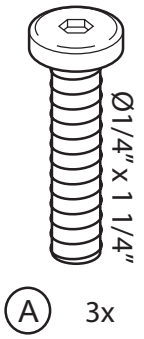

A 3x



D 5x

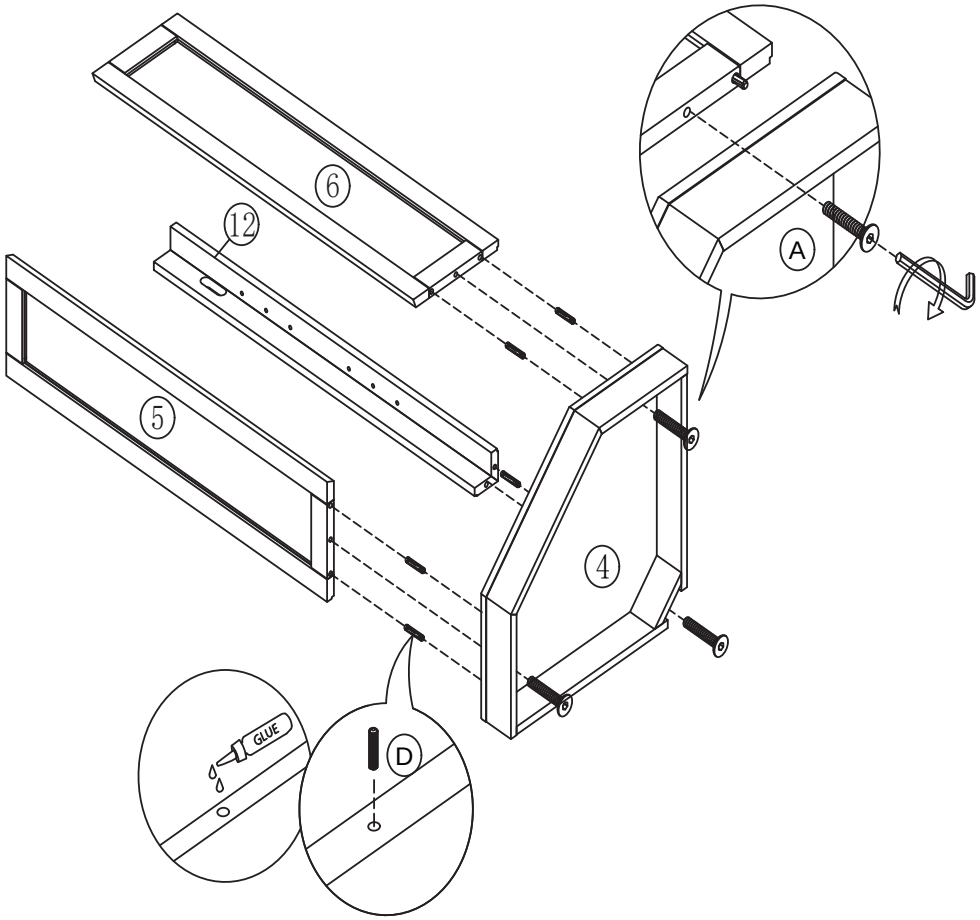

ASSEMBLY CHECK

Use A bolts and D dowels at these joints. Do not overtighten.


STEP

07 Fit the Light and Door Catch

Under panel 3, attach catch F with four screws G and light socket B with two screws C. With the light unplugged, fit bulb T. Keep the cord clear of all joints.

B × 1 | C × 2 | F × 1 | G × 4 | T × 1


PANEL 3 / UNDERSIDE

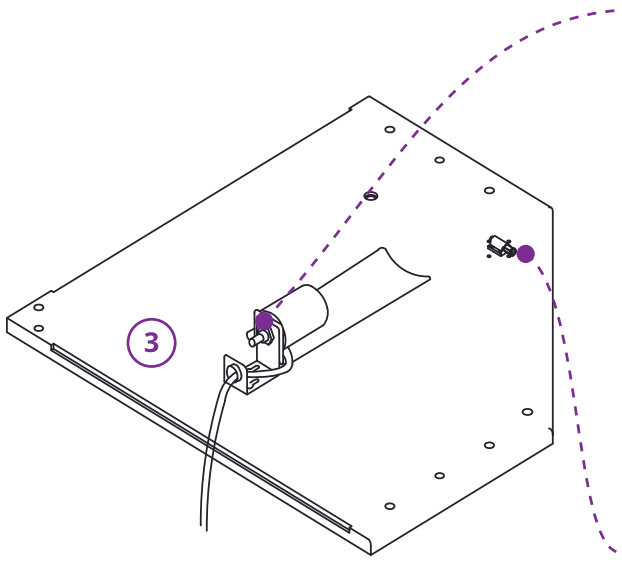

Keep the cord clear of all joints.

Work with the light unplugged.


01 / LIGHT SOCKET

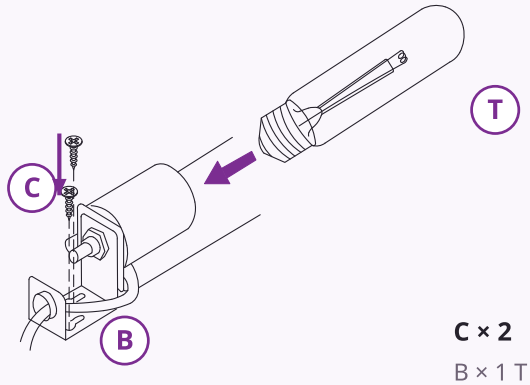

C × 2

B × 1 T × 1

02 / MAGNETIC CATCH

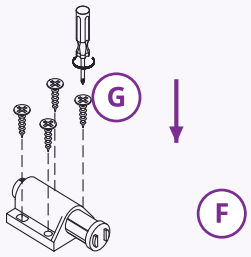

G × 4

F × 1

ASSEMBLY CHECK


Keep the light unplugged throughout assembly; do not trap its cord between panels.

STEP

08 Attach the Lower Top

Add five dowels D with glue Q at the locations shown. Fit panel 3 and secure it with three bolts A. Keep the light cord clear.

A × 3 | D × 5 | Glue Q | Hex key E

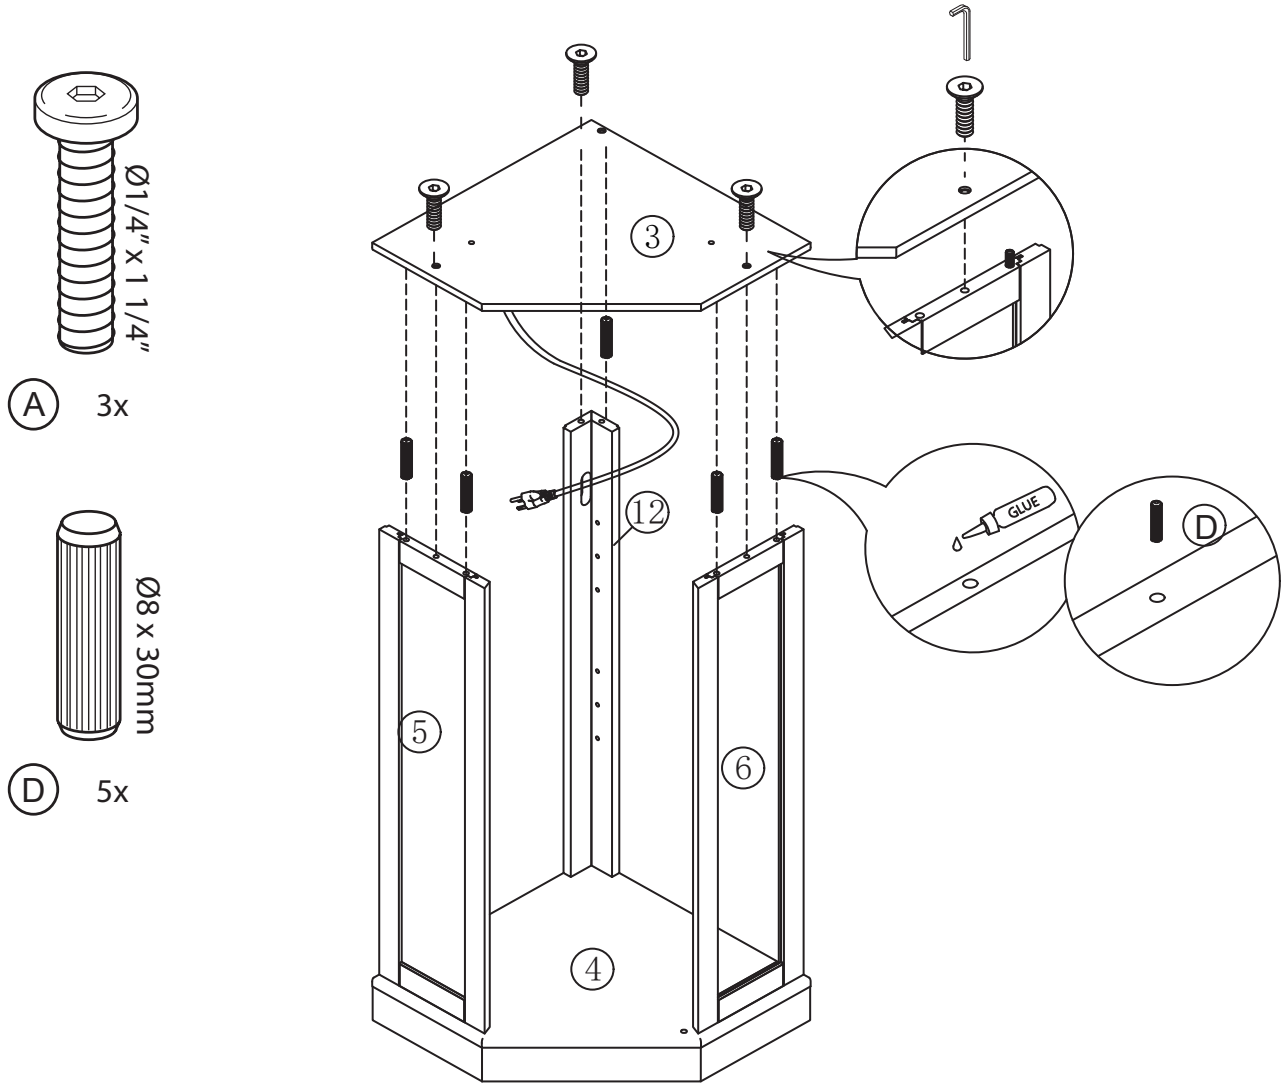

ASSEMBLY CHECK

Use A bolts and D dowels at these joints. Do not overtighten.


STEP

09

Fit the Lower Back Panels

Remove the protective film from the remaining two mirror panels 9. Fit the mirrors with the reflective sides facing the cabinet interior. Place the remaining two back panels 8 over the mirrors and secure them with 32 screws L.

L × 32

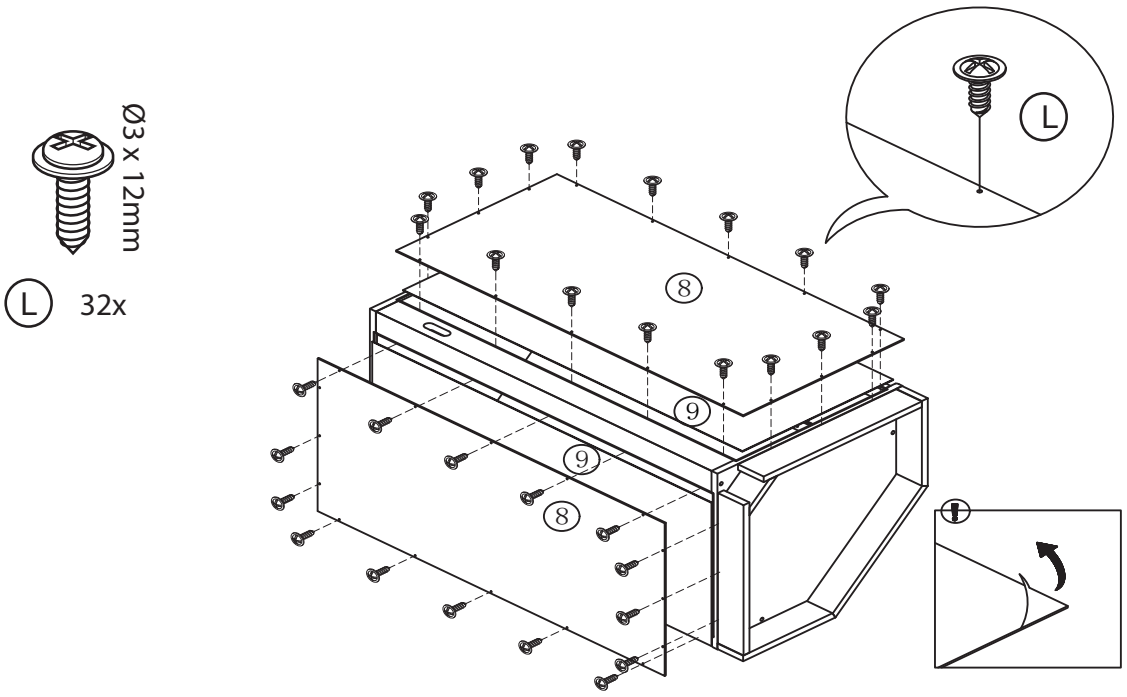


STEP

10 Join the Two Cabinets

With two adults, align the upper cabinet over the lower cabinet using two SHORT dowels R. Secure the cabinets with two SHORT bolts S through panel 3, as shown. Use R (8 x 20 mm) and S (1/4 x 7/8 in) at this joint. Do not use the longer D dowels or A bolts.

R × 2: short dowel | S × 2: short bolt | Hex key E

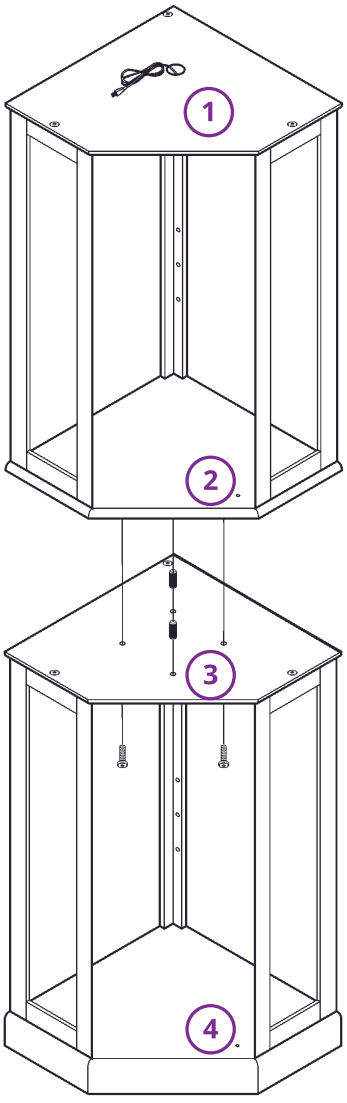


ALIGN

Two adults: support and lower the upper cabinet together.

R × 2

SHORT DOWEL

8 × 20 mm

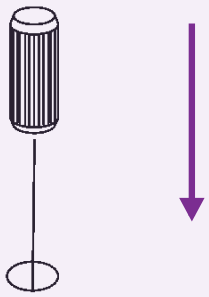


Use both locating holes shown in the main view.

S × 2

SHORT BOLT

1/4 × 7/8 in

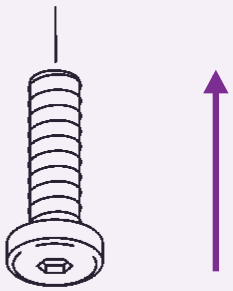

Tighten upward through panel 3.

ASSEMBLY CHECK

IMPORTANT: R = short dowel; S = short bolt. D and A are the longer items used earlier.

STEP


11 Install the Shelf Supports

Insert all 20 supports K at the illustrated positions. For each shelf, the supports must be at the same height and fully inserted.

K × 20: shelf supports



K 20x

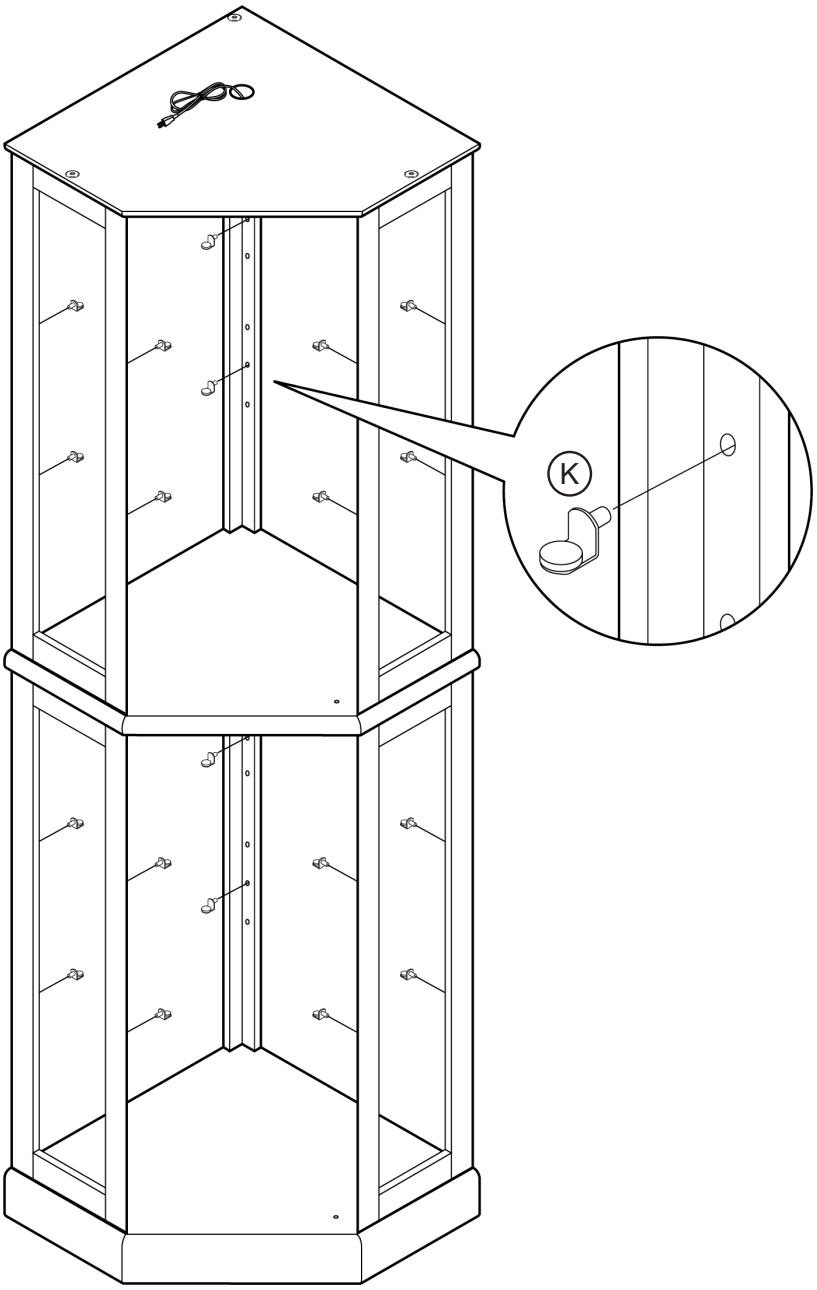


STEP

12 Place the Glass Shelves

With two adults handling the glass carefully, place all four shelves 11 onto their supports. Check that each shelf rests securely on all five supports. Do not use chipped or cracked glass.

Part 11 × 4: glass shelves

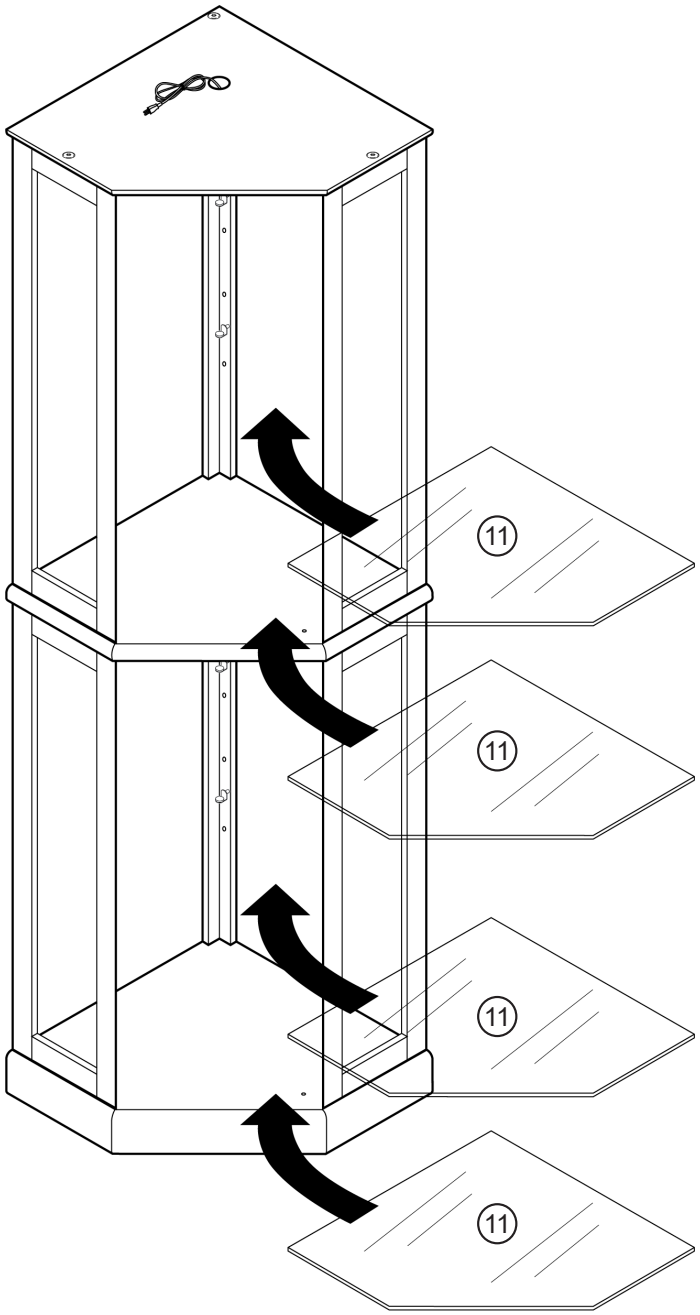

ASSEMBLY CHECK


Handle glass carefully. Do not use chipped or cracked glass.

STEP

13 Install the Glass Doors

Fit one plate J to the closing corner of each glass door 10. Fit lower hinges H and upper hinges I in the positions shown, then carefully slide the doors into the hinges. Support the glass while tightening the hinge screws by hand. Do not overtighten.

H × 2 | I × 2 | J × 2 | Part 10 × 2

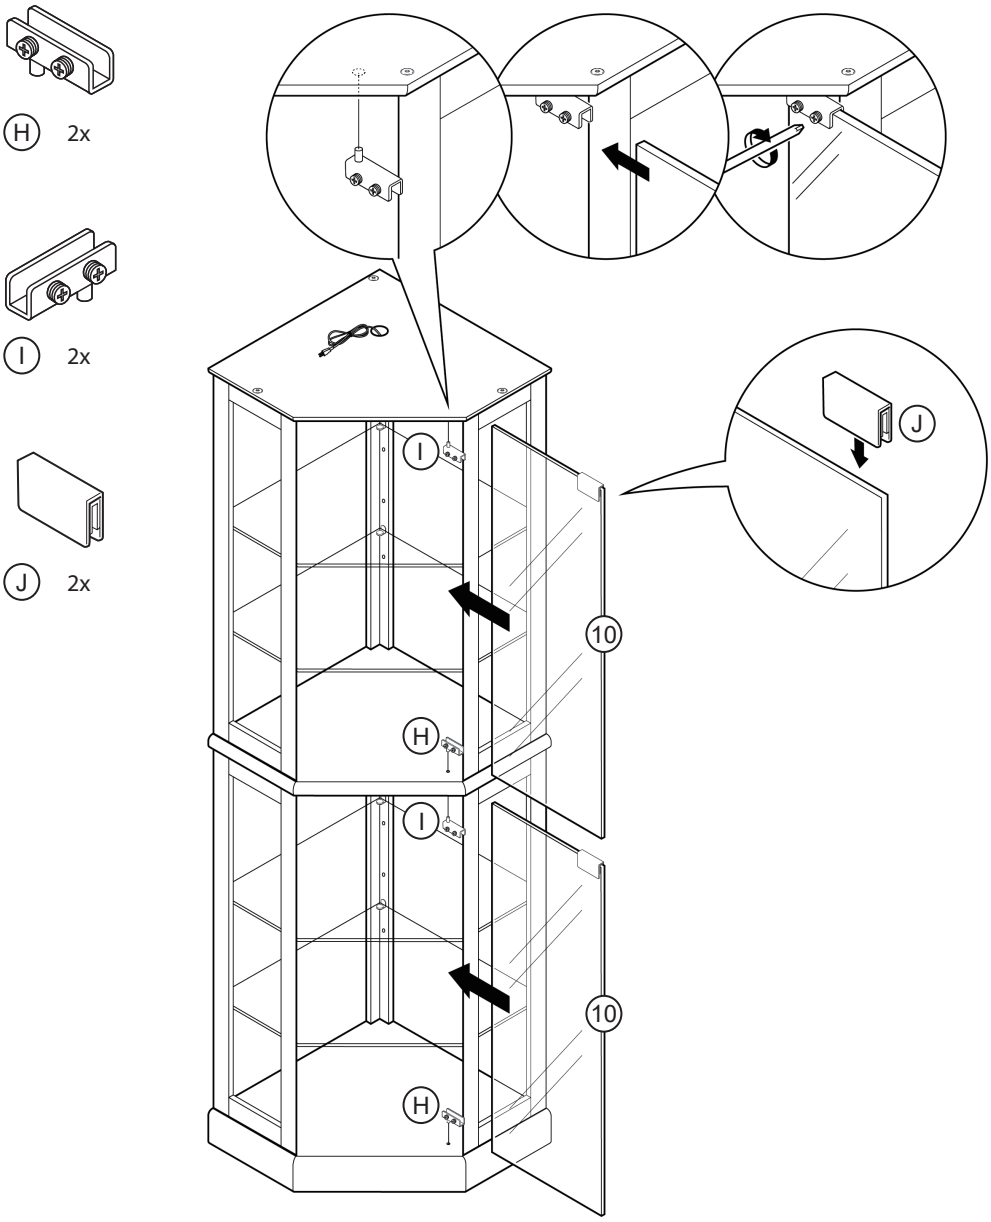

ASSEMBLY CHECK


Handle glass carefully. Do not use chipped or cracked glass.

STEP

14 Align the Glass Doors

Support each door while adjusting its position in the hinges. Align the doors so they open and close freely without contacting the cabinet or shelves. Tighten the hinge screws carefully, then recheck the door movement.

Adjust the installed hinges; no additional hardware.

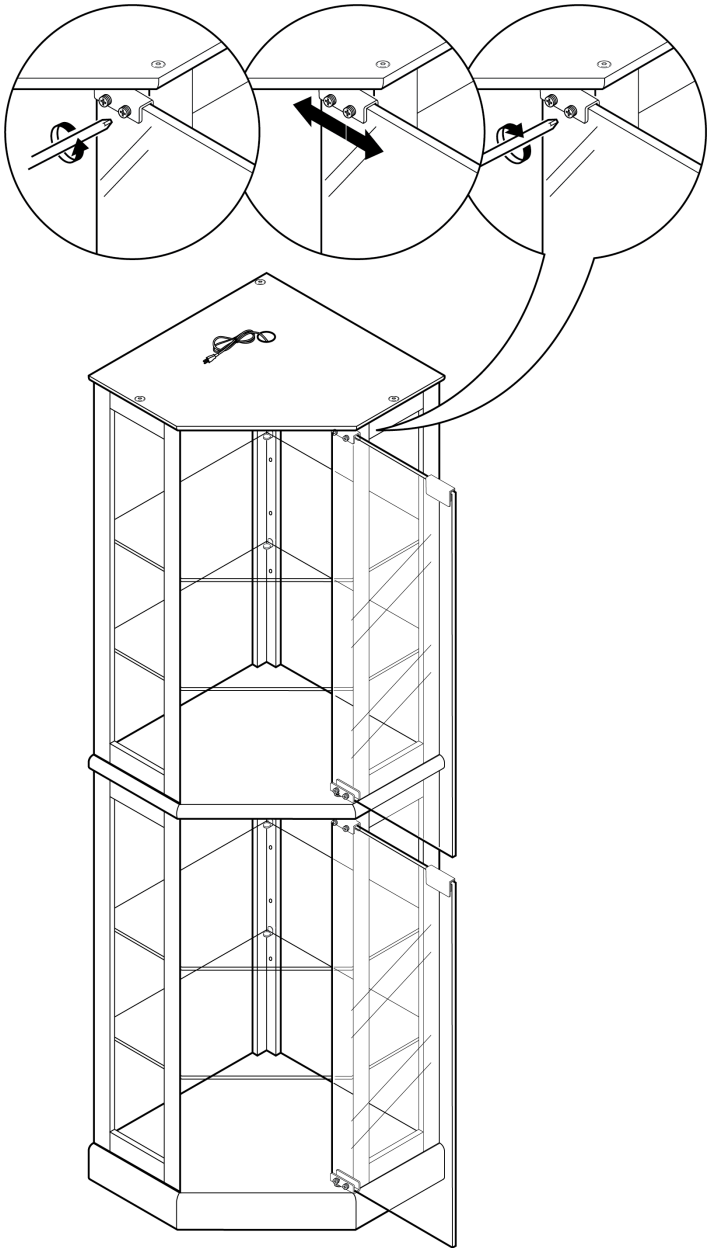

ASSEMBLY CHECK


Handle glass carefully. Do not use chipped or cracked glass.

STEP

15 Secure the Cabinet to the Wall

Before loading the cabinet, secure both anti-tip straps M to a suitable wall structure. Use wall fixings suitable for your wall type. The supplied anchors N and screws O are not suitable for every wall. Use washers P as shown. If you are unsure which fixings to use, ask a qualified installer.

M: straps already fitted | P × 2 | Suitable wall fixings

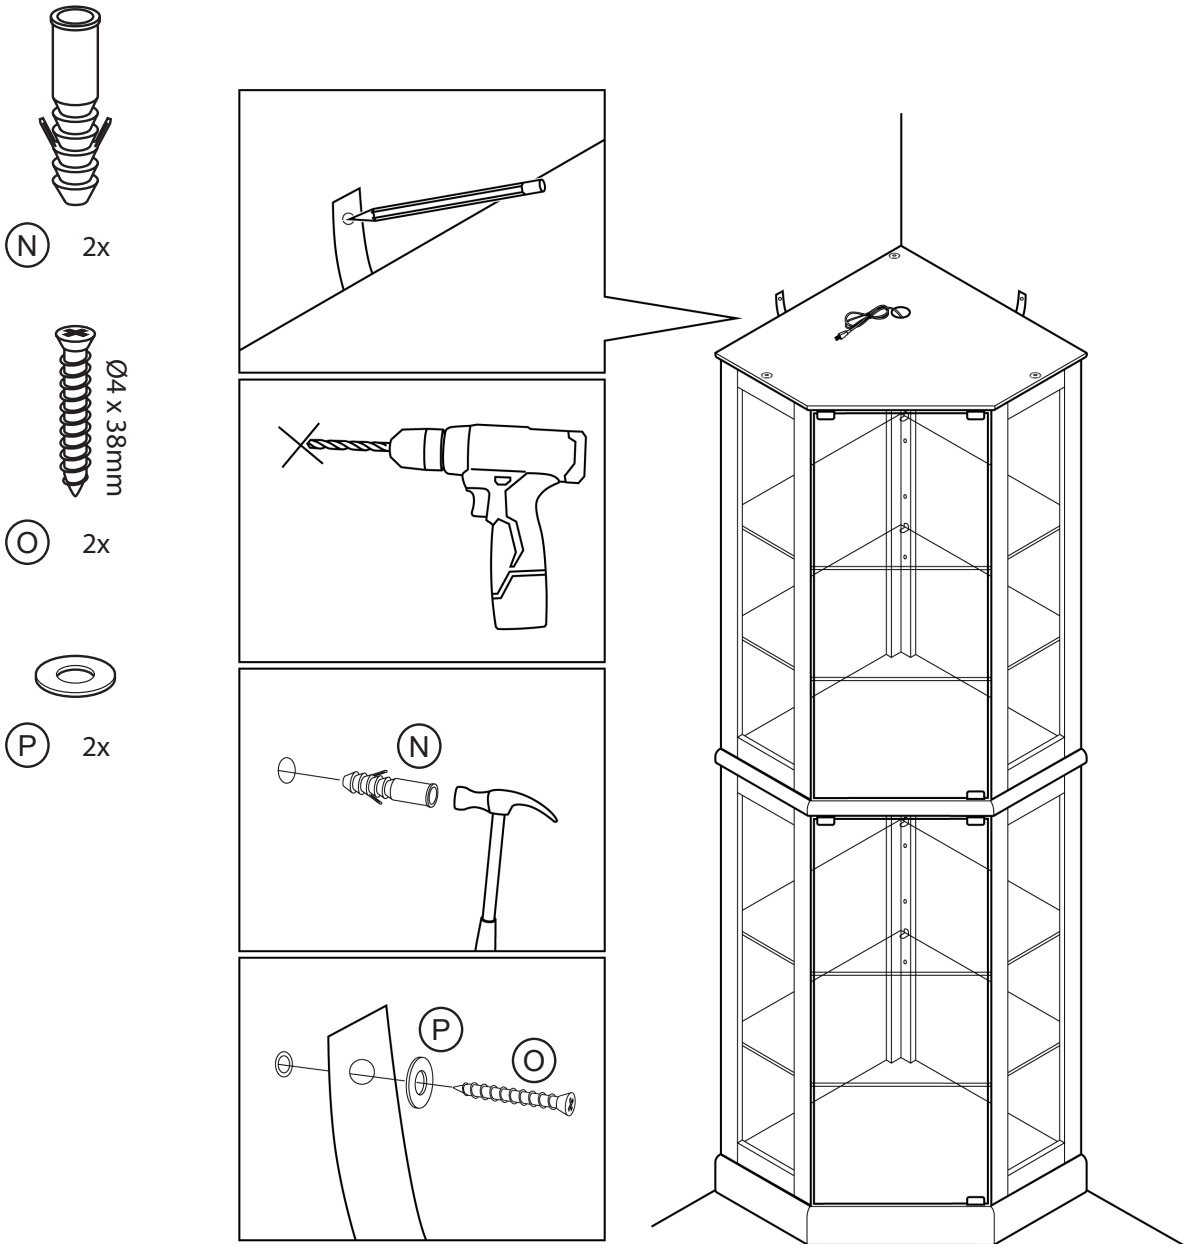

ASSEMBLY CHECK

WARNING: The anti-tip restraints must be secured before the cabinet is used or loaded.

CARE & SAFETY

Care, Safety & Final Checks

01 WARNING: Tip-over can cause serious or fatal crushing injuries. Secure the cabinet to the wall with both anti-tip restraints before use.

02 Confirm the cabinet is level, all joints are secure, the doors move freely and both anti-tip restraints are secured.

03 Never climb, stand or hang on the cabinet. Keep heavier items on lower shelves and keep items within shelf edges.

04 Unplug the lights and allow bulbs to cool before changing bulbs or cleaning. Wipe with a soft cloth; avoid abrasive cleaners.

KEEP IN MIND

Need help? Email loojanehome@163.com. Include model CC-B0010, the part code and your order details.