



Open the package, sort the accessories according to the accessory list, and then start the installation




① 4 brackets




② 2 brackets




③ 1 piece of mirror

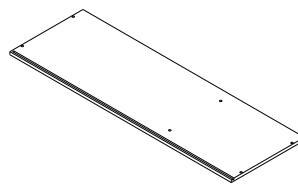


④ 1 base plate

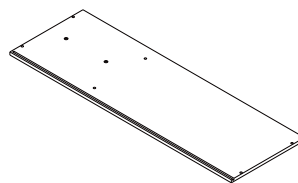


⑤ 1 panel

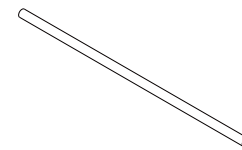


⑥ 1 round bar




⑧ 1 stopper

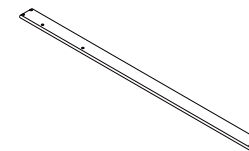


⑦ 1 rail

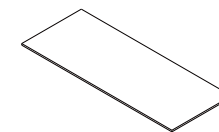


⑨ 1 back plate




⑩ 1 left panel




⑪ 1 middle side plate




⑫ 1 board on the right



⑬ 1 back plate



⑭ 2 drawer panels



⑮ 2 drawer back panels



B 2-in-1 screw




A 2-in-1 eccentric wheel




⑲ 4 hanging ears panels



⑱ 4 wooden pins



⑰ 4 drawer side

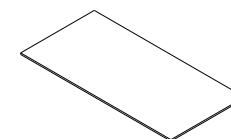

⑯ 2 drawer bottoms



C. Flat head screw



D. Long hex socket screw



E. Short hexagon socket screws




F. Phillips screw



Wrench (installation tool)


Open the package, sort the accessories according to the accessory list, and then start the installation

1

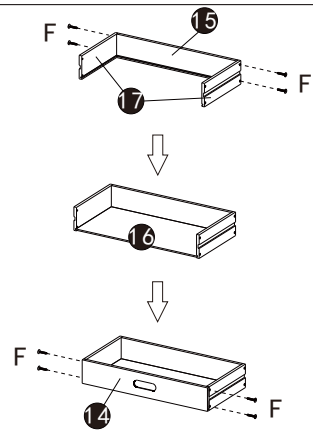


Use screws F to assemble the drawers together

2

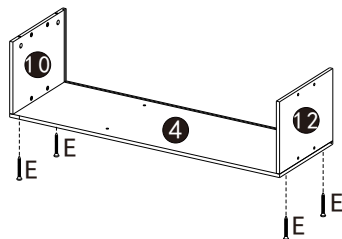


Install the bottom plate 4 on the side plate 10 and the side plate 12 with screws E

3

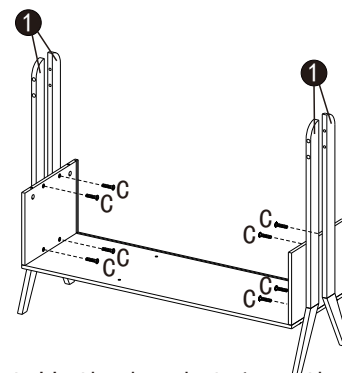


Install the bracket 1 on the side plate 10 and the side plate 12 with screws C

4

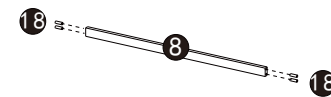


Insert 4 wooden pins 18 on the stop bar 8

5

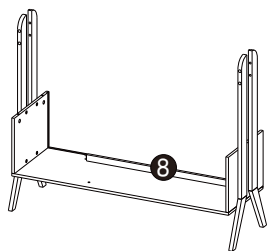


Insert the wooden pin on the stop bar 8 on the side plate 12

6

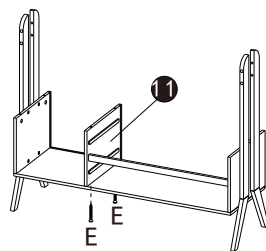


Use the screw E to insert the side plate 11 on the wooden pin of the stop bar 8, and then use the screw E to fix it to the bottom plate 4.

7

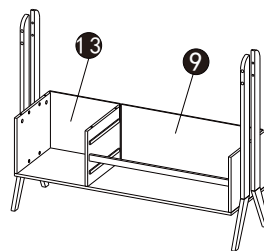


Insert backplane 9 and backplane 13

8

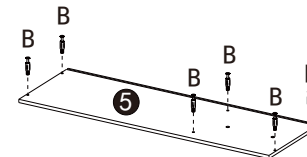


Screw the 2-in-1 screw B on the panel 5.

9

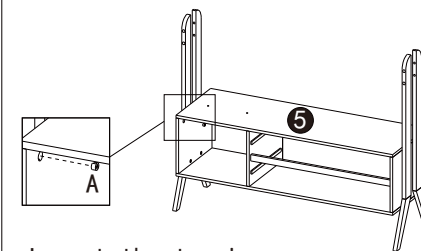


Insert the two-in-one screw on the panel into the three side plates, and then use the two-in-one eccentric wheel A to clamp the two-in-one screw B

10

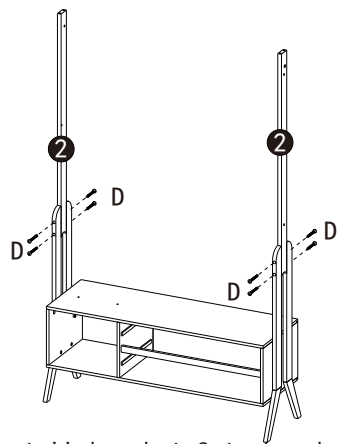


Install bracket 2 to bracket 1 with screw D

11

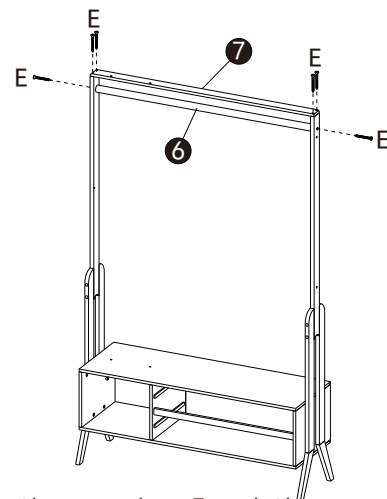


Fix the crossbar 7 and the round bar 6 on the bracket 2 with screws E

12

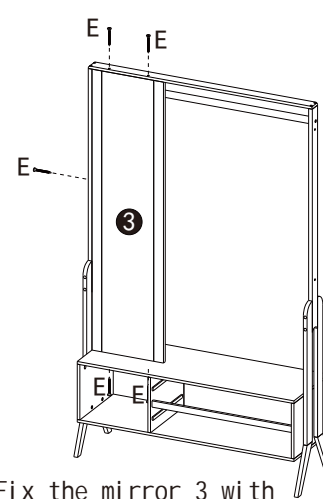

Fix the mirror 3 with the screw E. Be careful to handle it gently.

13

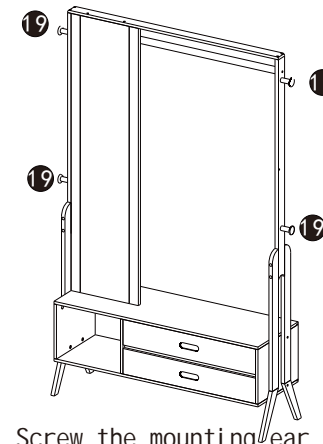

Screw the mounting ear 19 to the bracket 2 and put it in the drawer to complete the installation.