




# Installation Instructions

## Bathroom cabinet

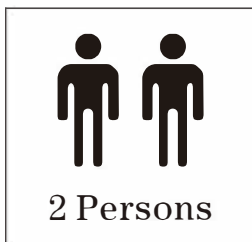


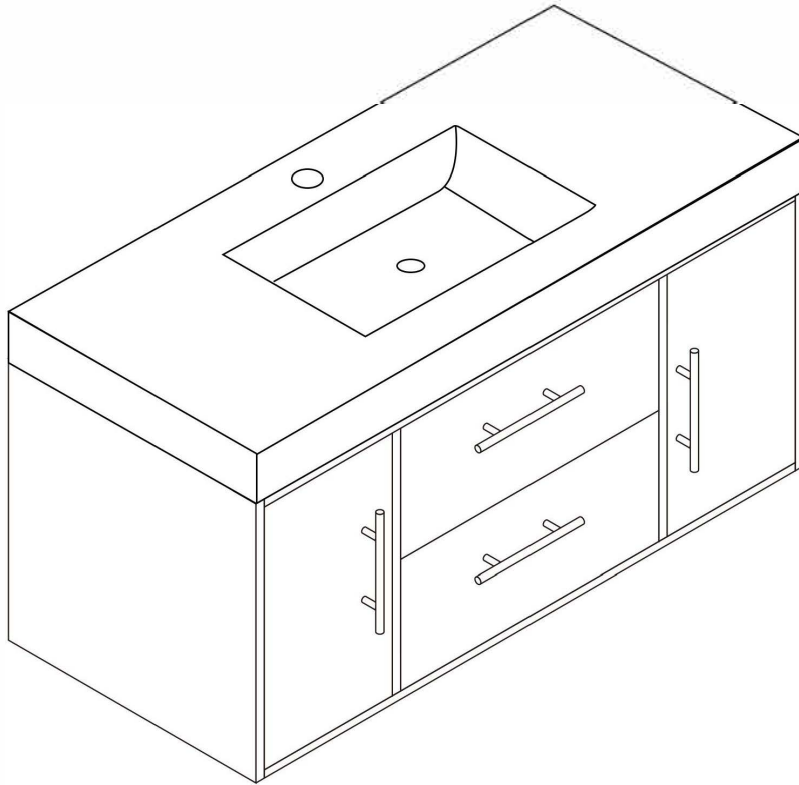



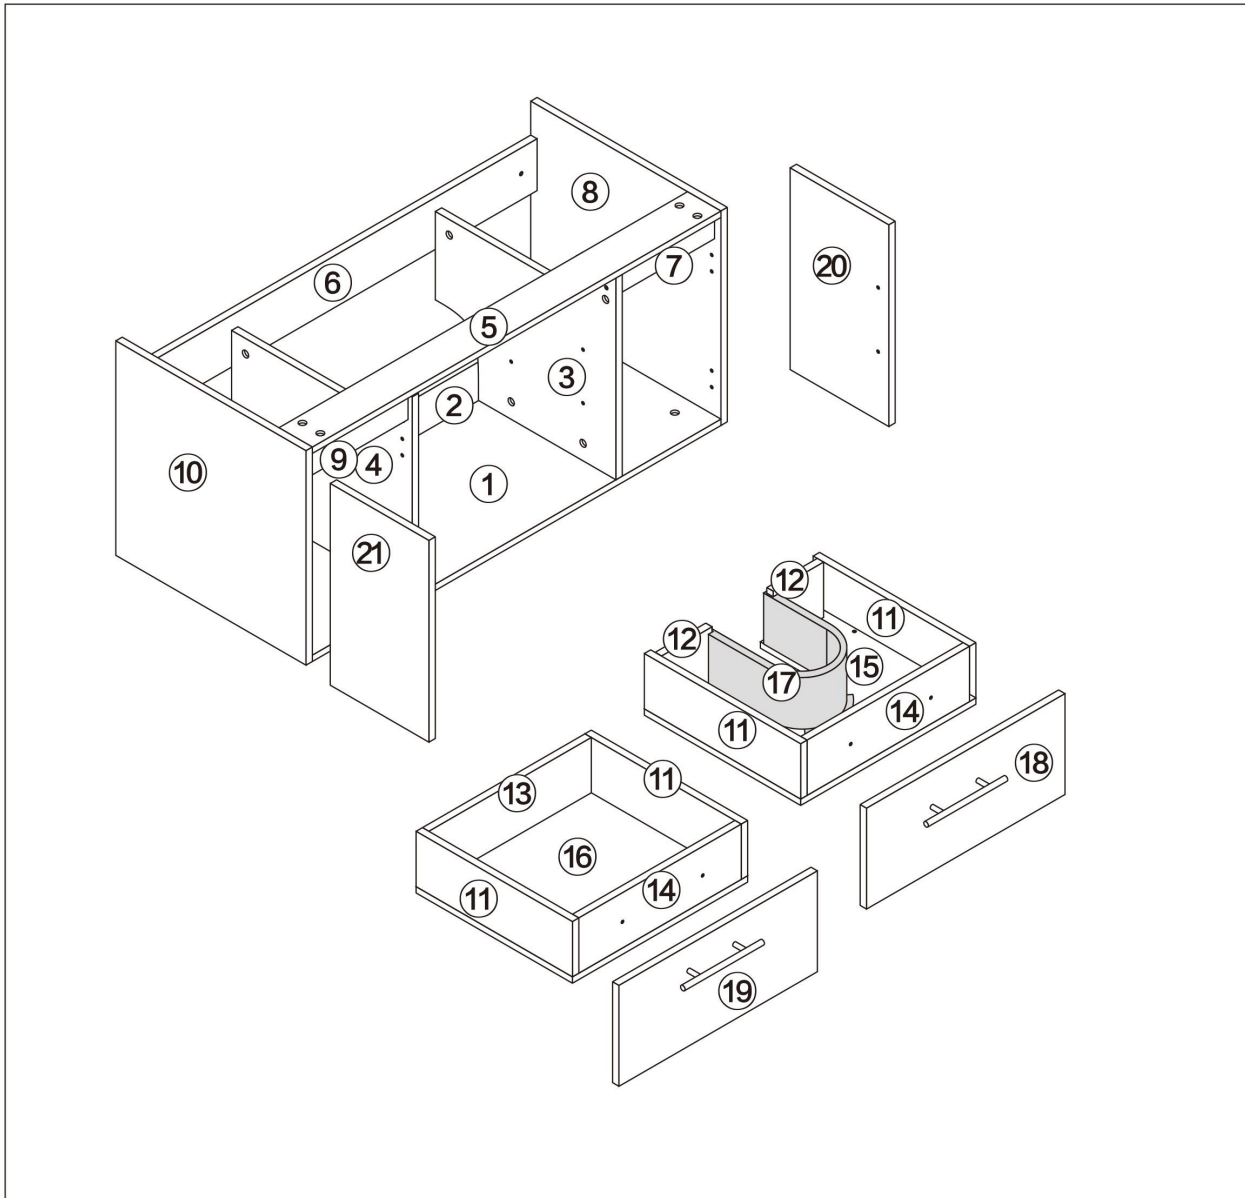



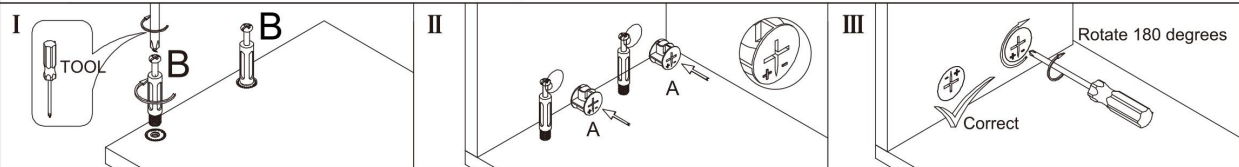






L1000\*W500\*H550mm

Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.




Disassembly and installation of accessories




<b>A</b> 34PCS  15*10mm	<b>B</b> 34PCS  6*28mm	<b>C</b> 75PCS  3.5*14mm	<b>D</b> 34PCS  3.5*35mm	<b>E</b> 4PCS  Three-section Rail	<b>F</b> 4PCS  6*20mm	<b>G</b> 2PCS 	<b>H</b> 2PCS 
<b>I</b> 4PCS  6*60mm	<b>J</b> 4PCS 	<b>K</b> 8PCS  4*18mm	<b>L</b> 4PCS 	<b>M</b> 4PCS 	<b>O</b> 72PCS 	 Tools Recommended	

1

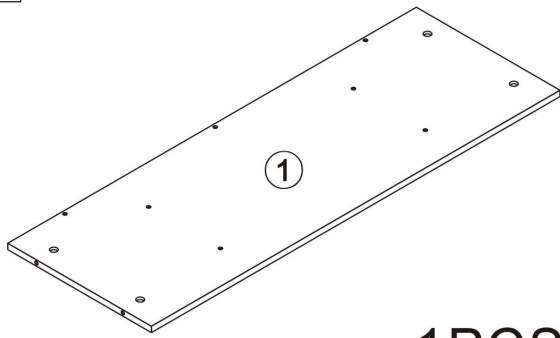


1PCS

2

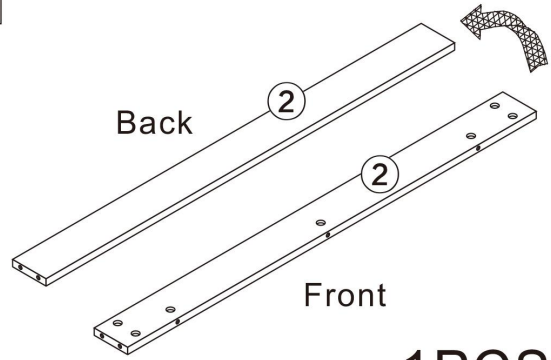


1PCS

3

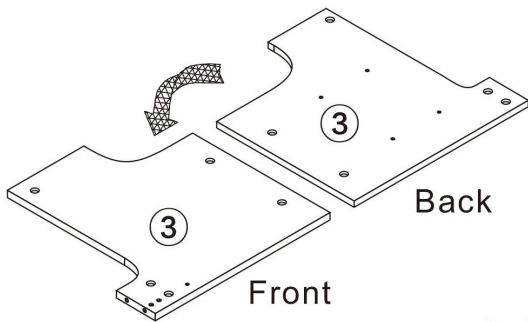


1PCS

4

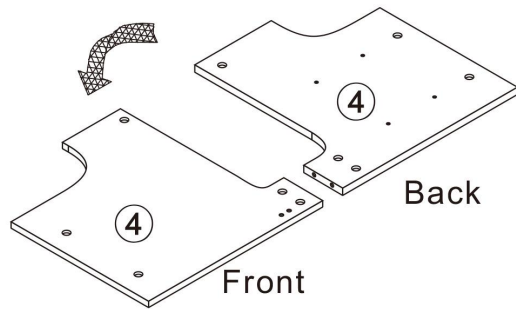


1PCS

5

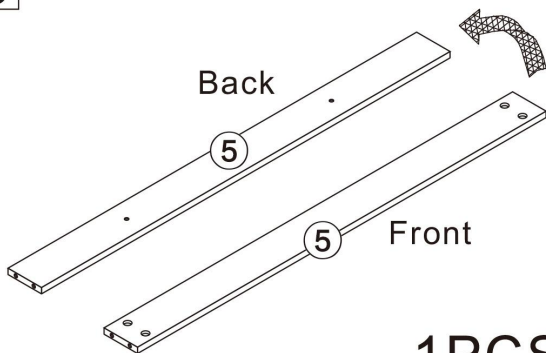


1PCS

6

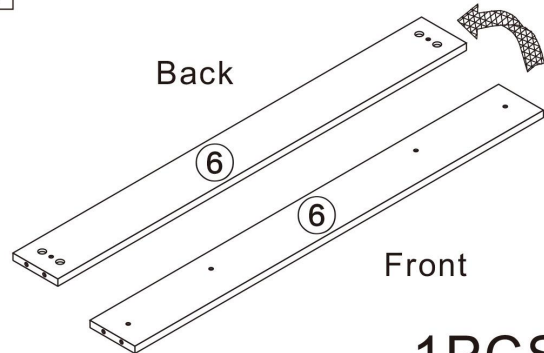


1PCS

7

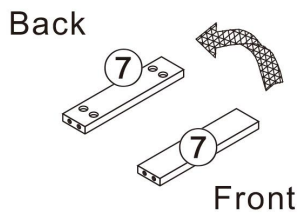


1PCS

8

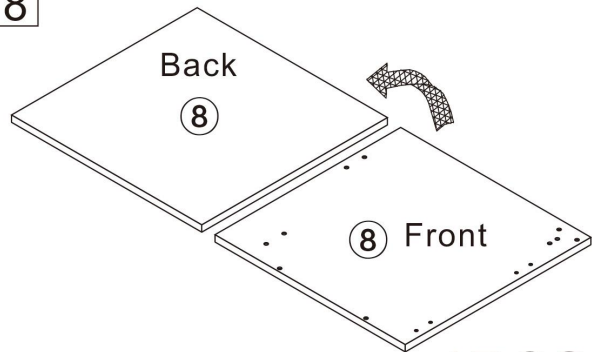


1PCS

9

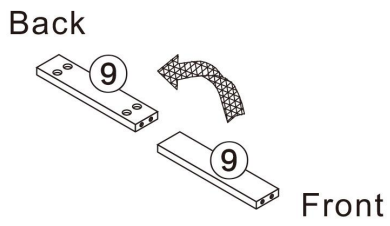


1PCS

10

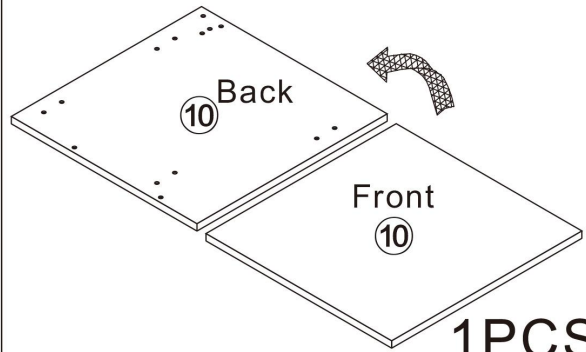


1PCS

11

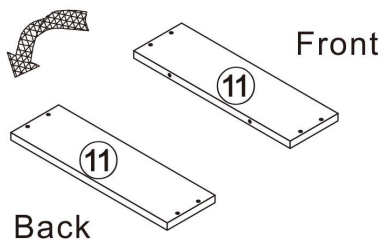


4PCS

12

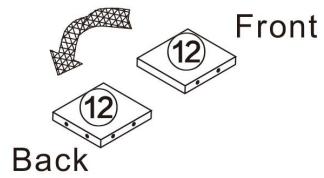


2PCS

13

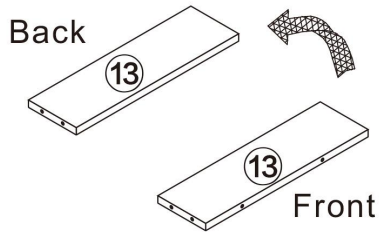


1PCS

14

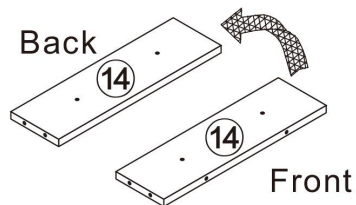


2PCS

15

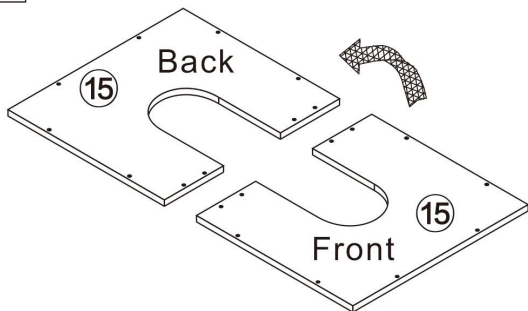


1PCS

16

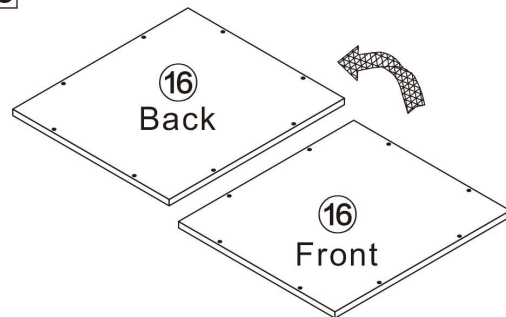


1PCS

17

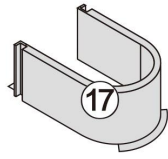


1PCS

18

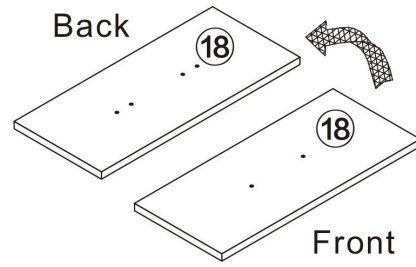


1PCS

19

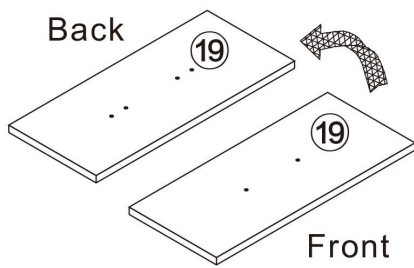


1PCS

20

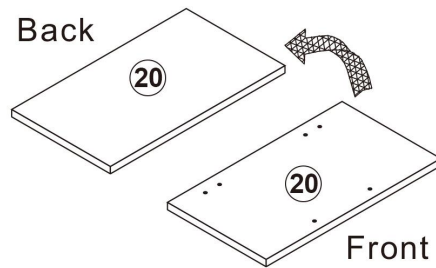








1PCS


21

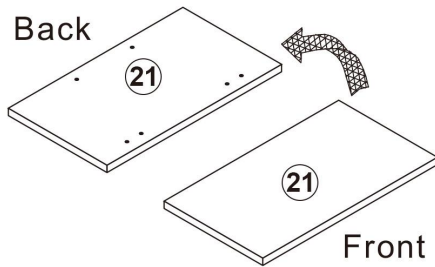

1PCS


1

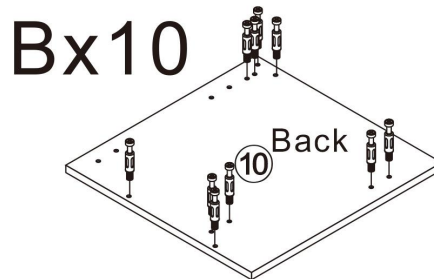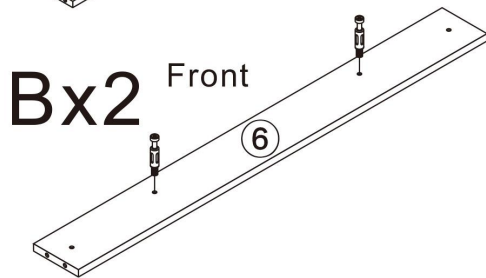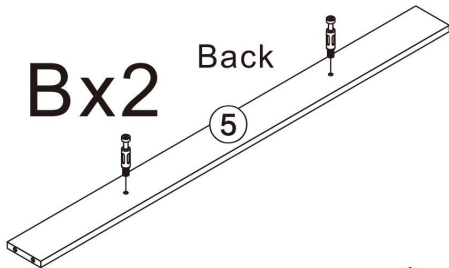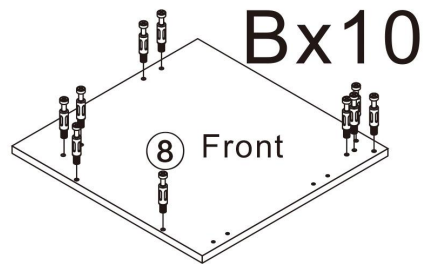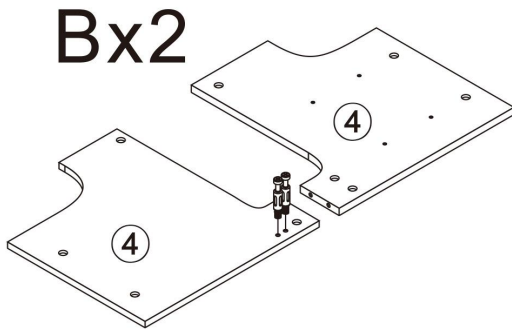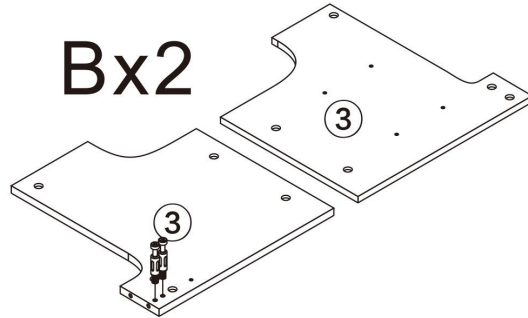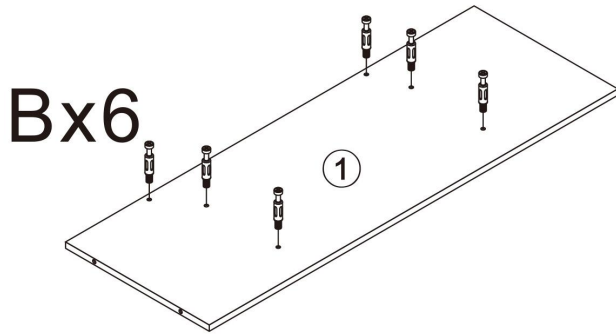

<b>B</b>	34PCS
	
6*28mm	

2

Ex4

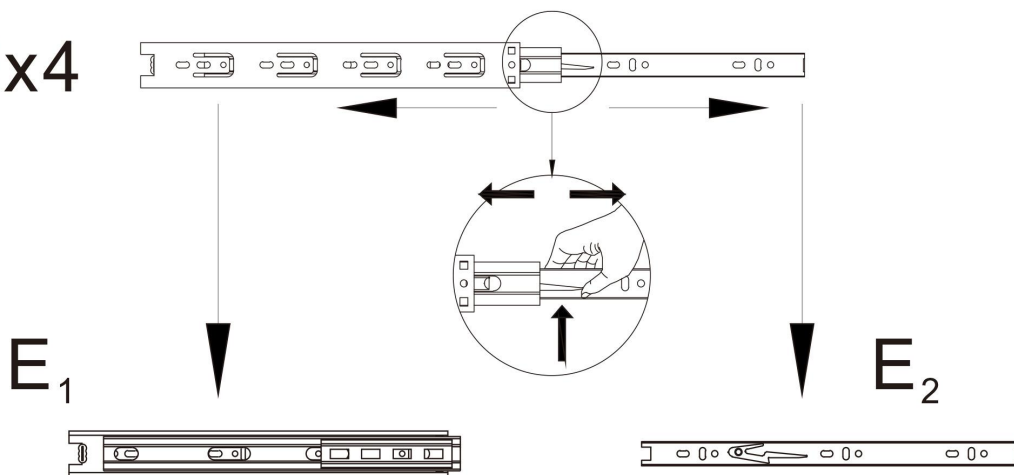


E<sub>1</sub> 4PCS



Three-section Rail

3

E<sub>1</sub>x4

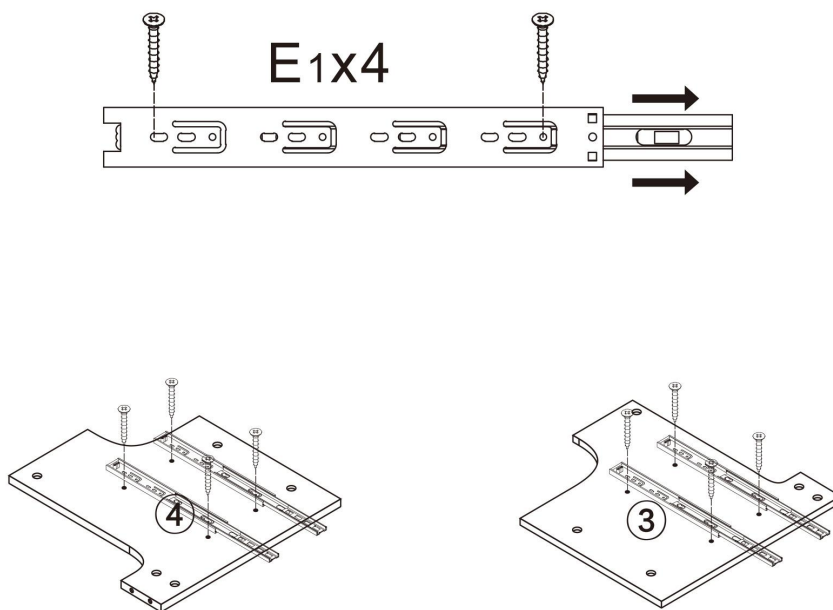

C 8PCS




3.5\*14mm



E<sub>1</sub> 4PCS




Three-section Rail

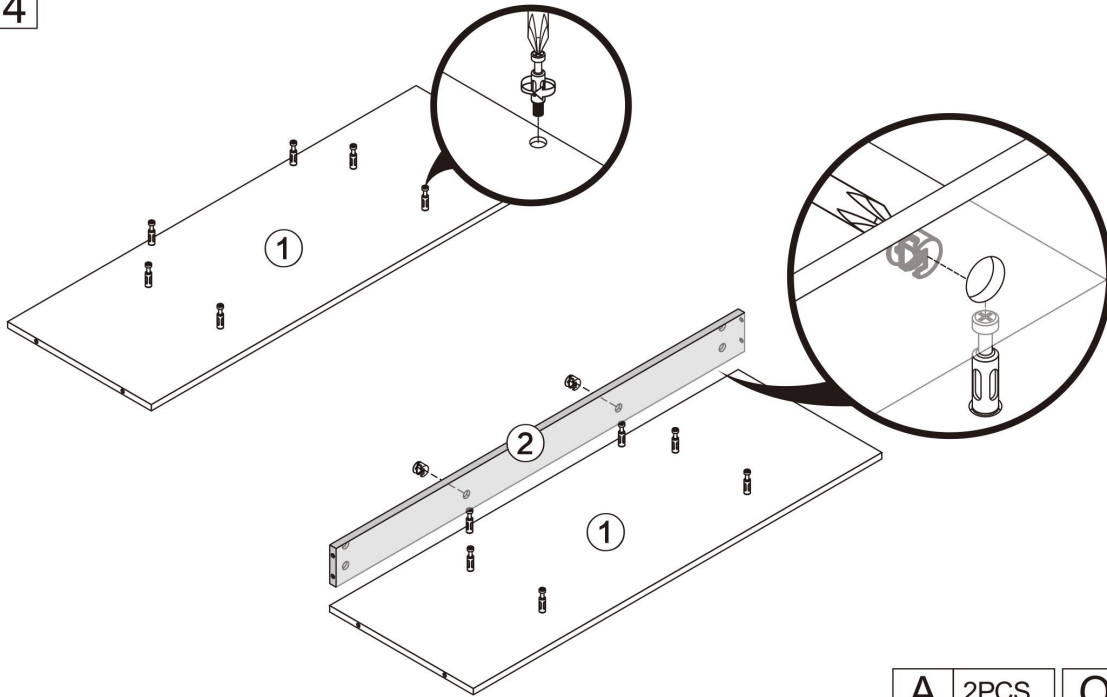

4




A	2PCS	O	2PCS
			
15*10mm			

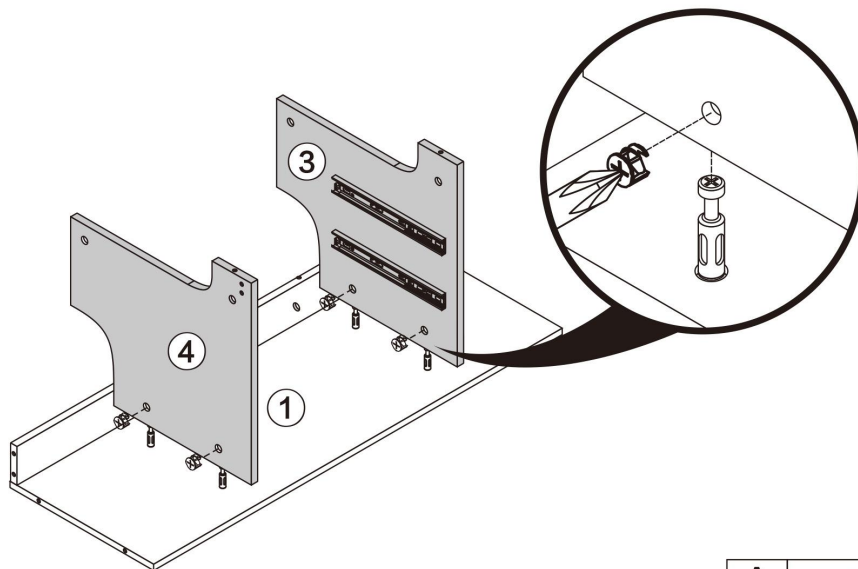

5




A	4PCS	O	4PCS
			
15*10mm			

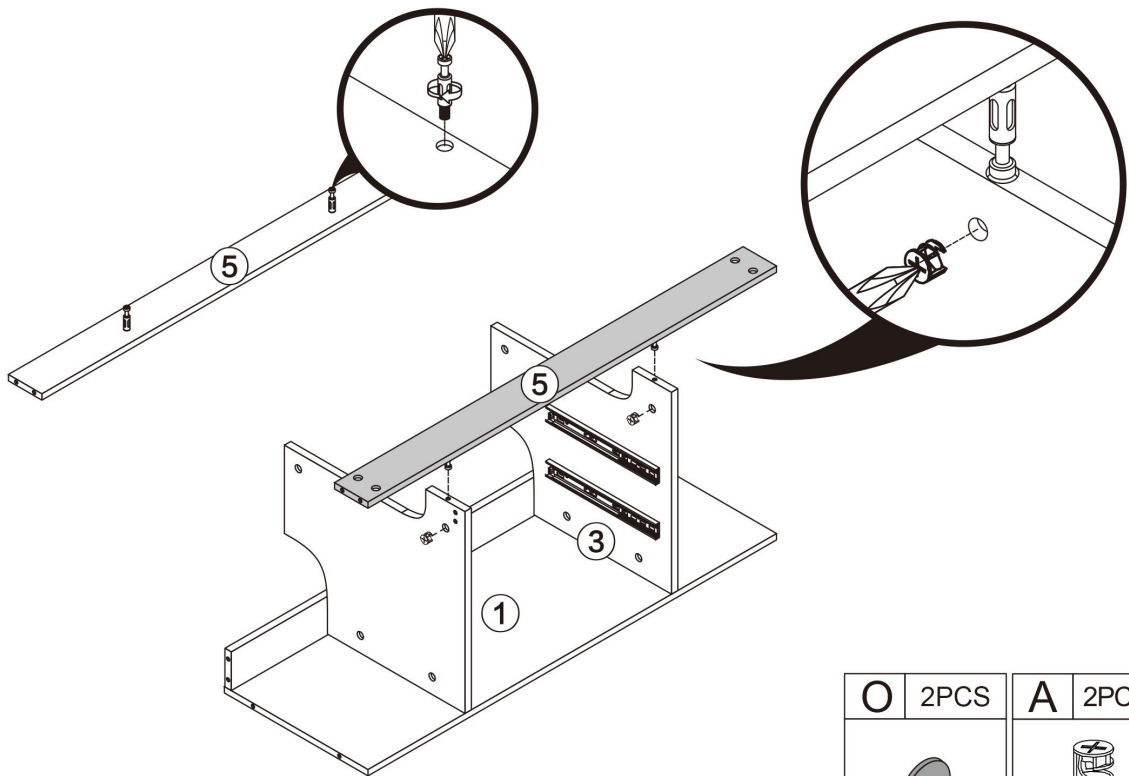

6




O	2PCS	A	2PCS
			
		15*10mm	

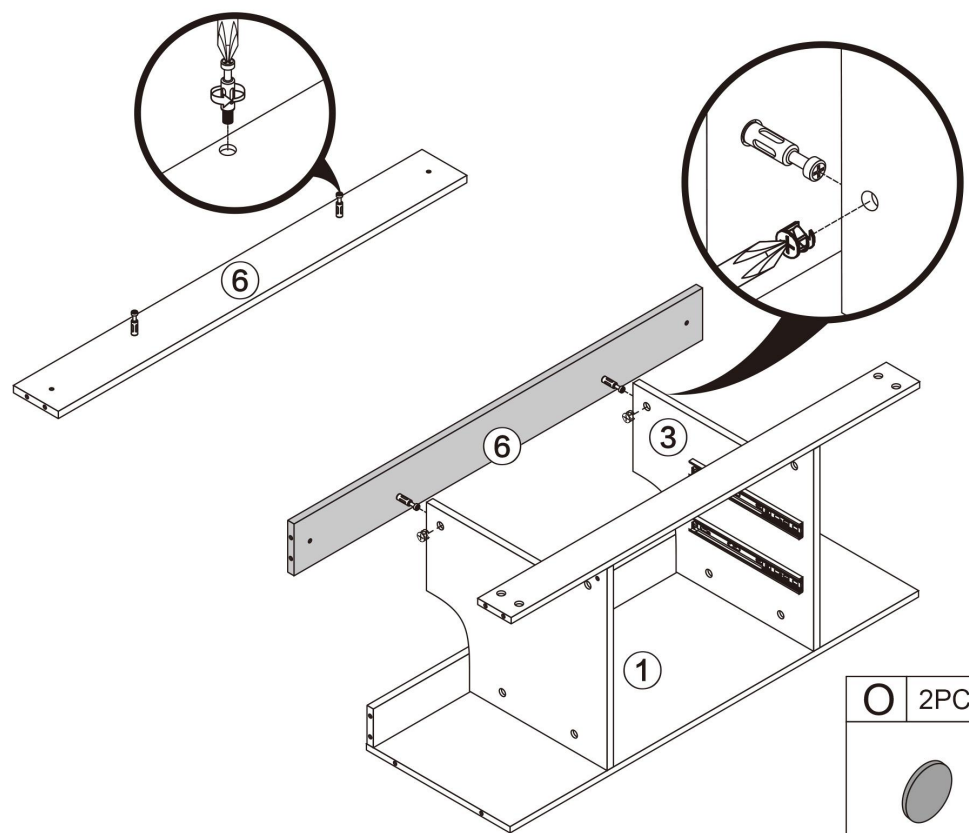

7




O	2PCS	A	2PCS
			
		15*10mm	

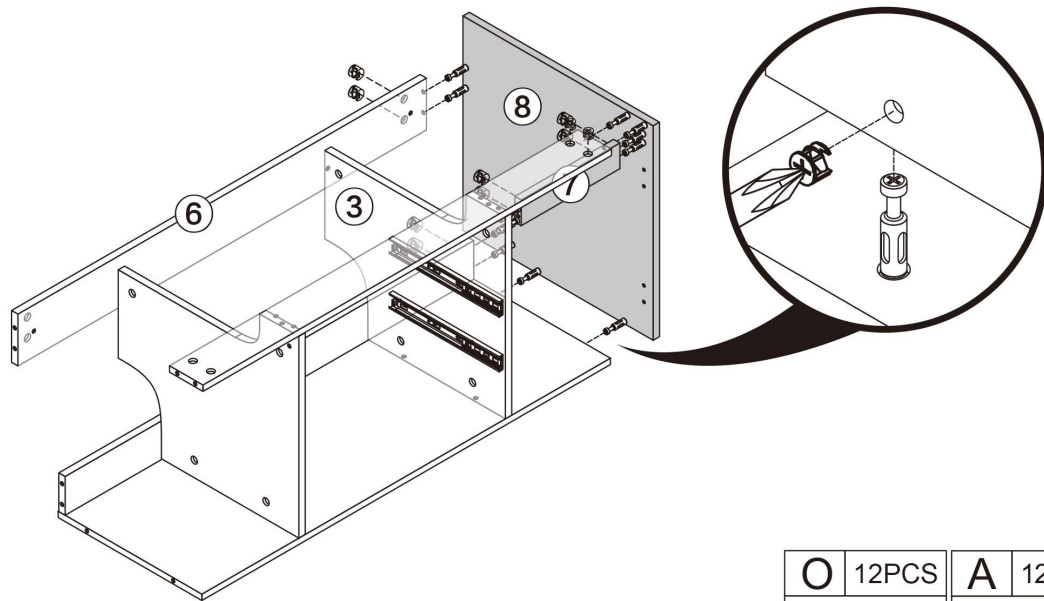

8





O	12PCS	A	12PCS
			
			15*10mm

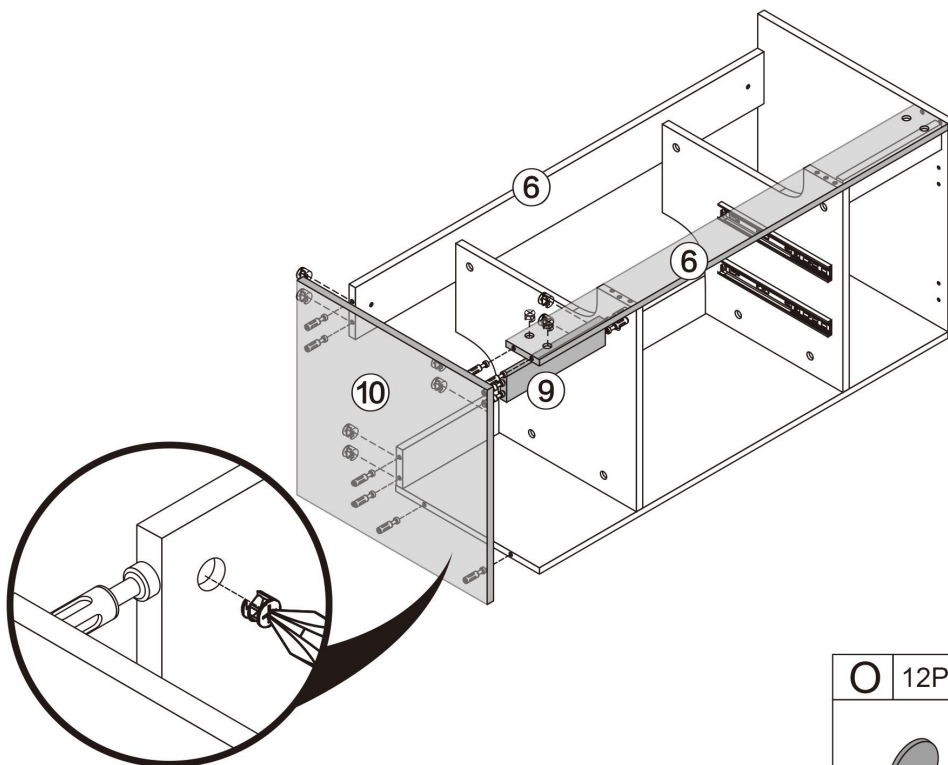


9





O	12PCS	A	12PCS
			
			15*10mm

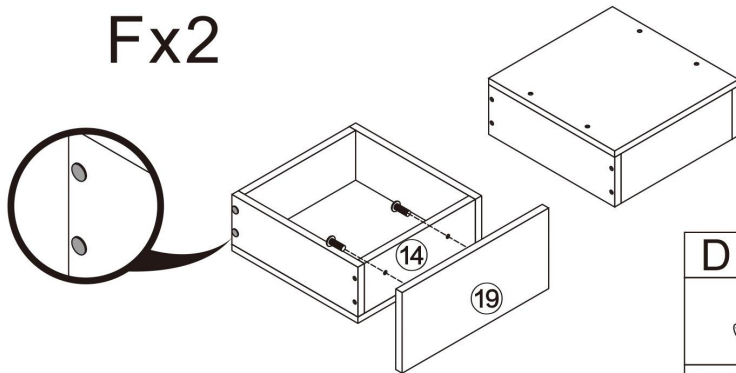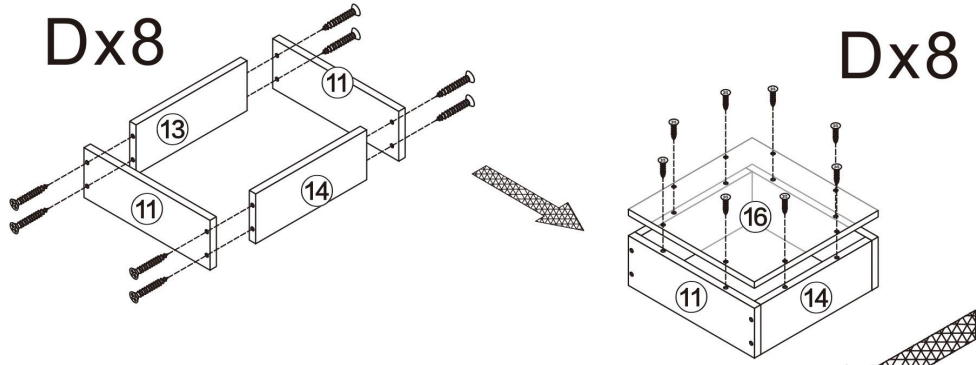



10

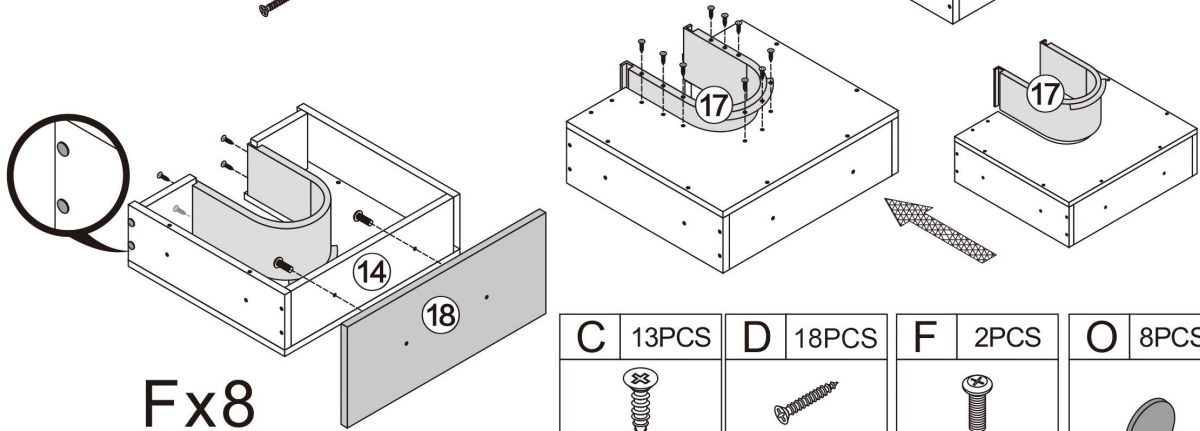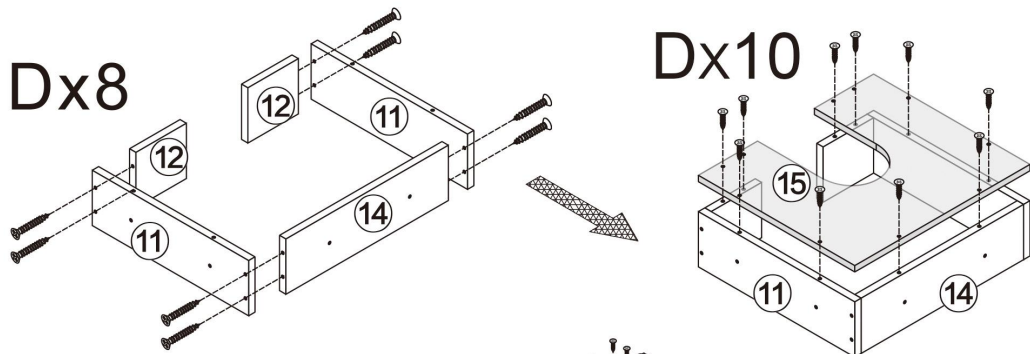


<b>D</b> 16PCS	<b>F</b> 2PCS	<b>O</b> 8PCS
		
3.5*35mm	6*20mm	





11

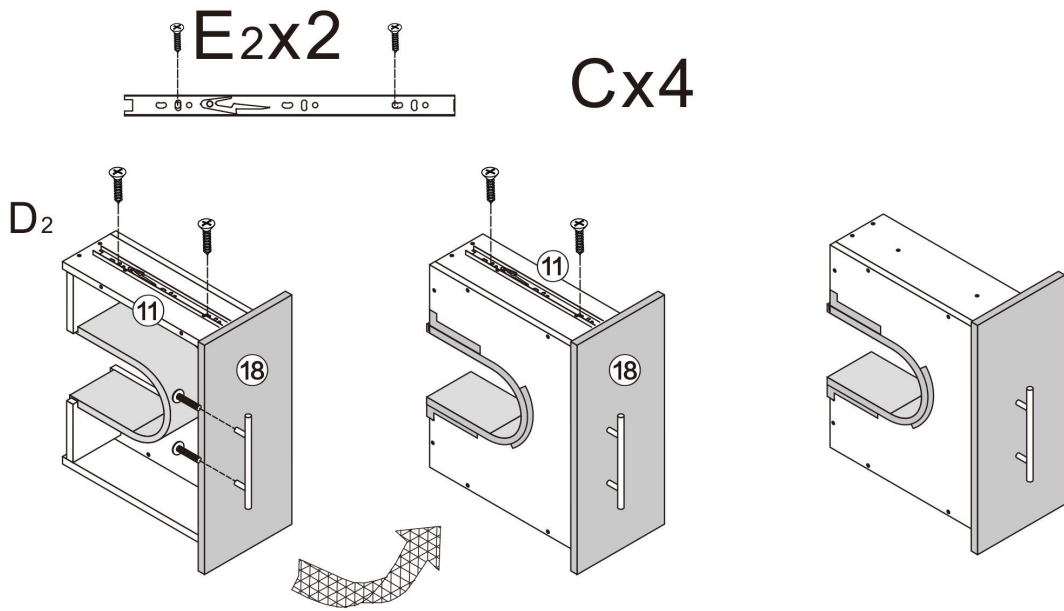


<b>C</b> 13PCS	<b>D</b> 18PCS	<b>F</b> 2PCS	<b>O</b> 8PCS
			
3.5*14mm	3.5*35mm	6*20mm	





12

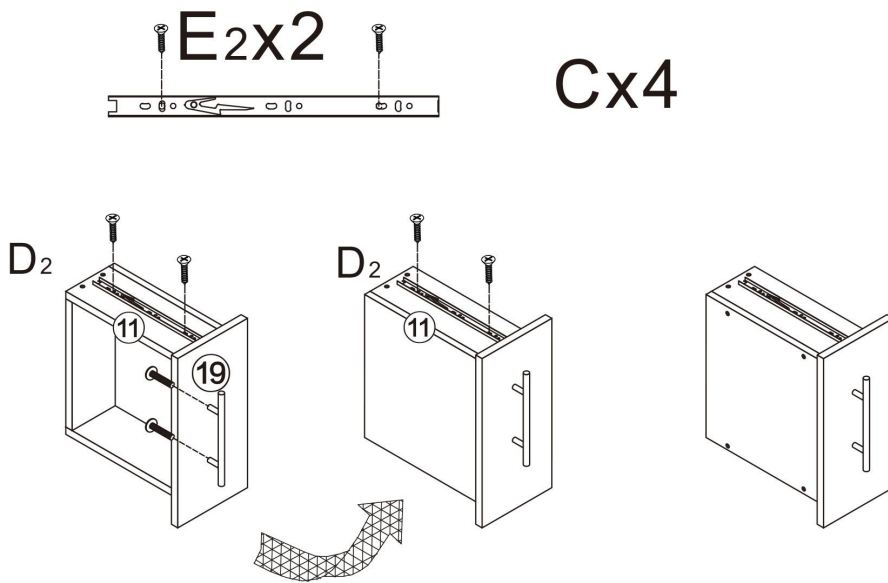



<b>C</b> 4PCS	<b>E<sub>2</sub></b> 2PCS	<b>J</b> 1PCS	<b>K</b> 2PCS
			
3.5*14mm	Three-section Rail		4*18mm

13









<b>C</b> 4PCS	<b>E<sub>2</sub></b> 2PCS	<b>J</b> 1PCS	<b>K</b> 2PCS
			
3.5*14mm	Three-section Rail		4*18mm

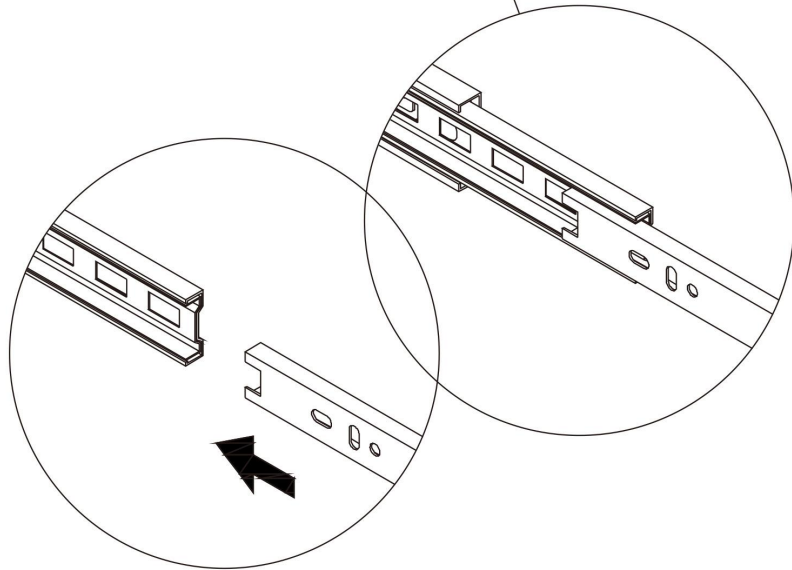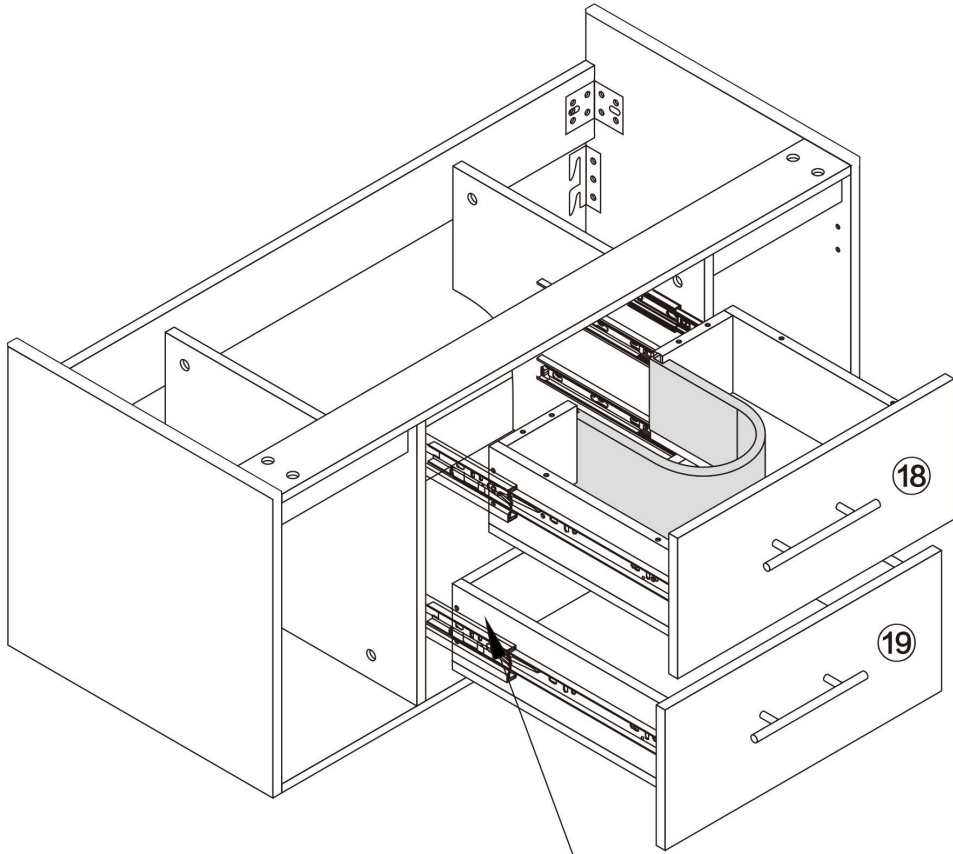
14

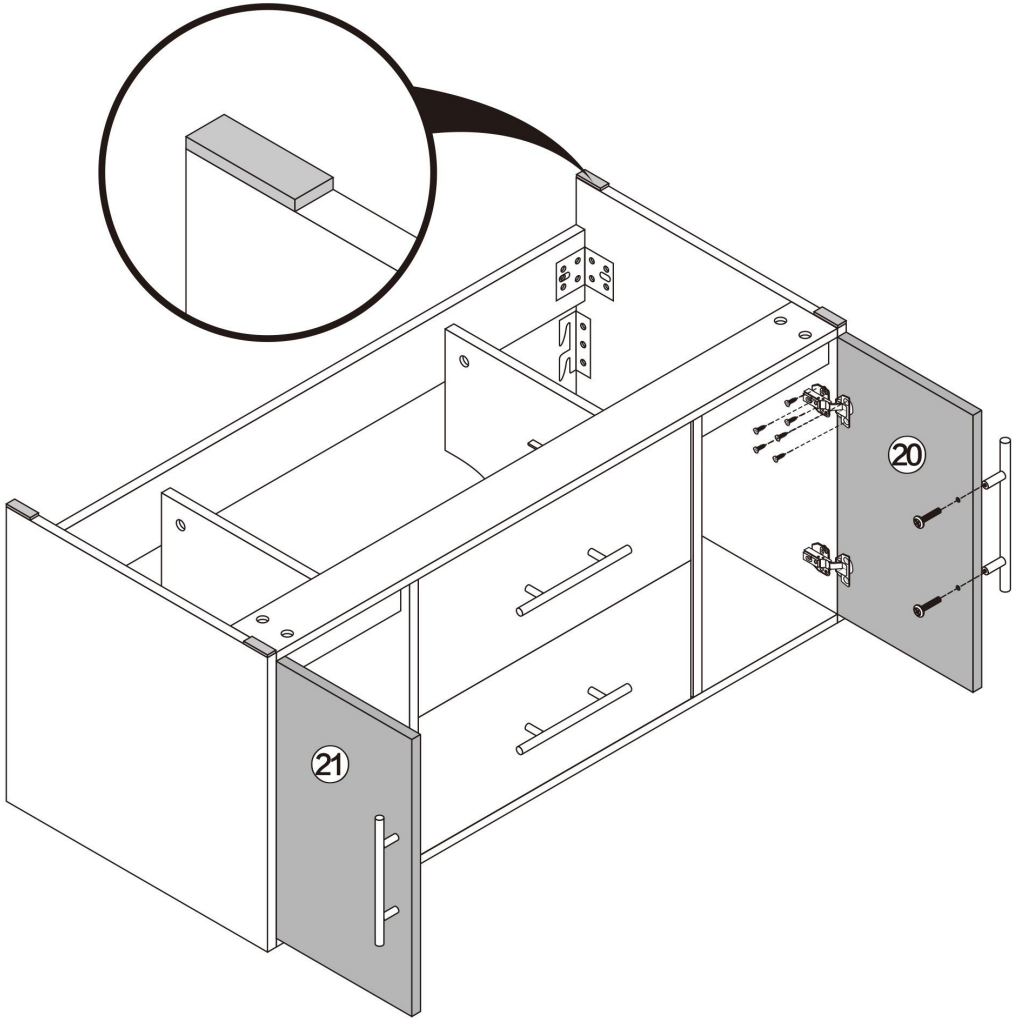


15



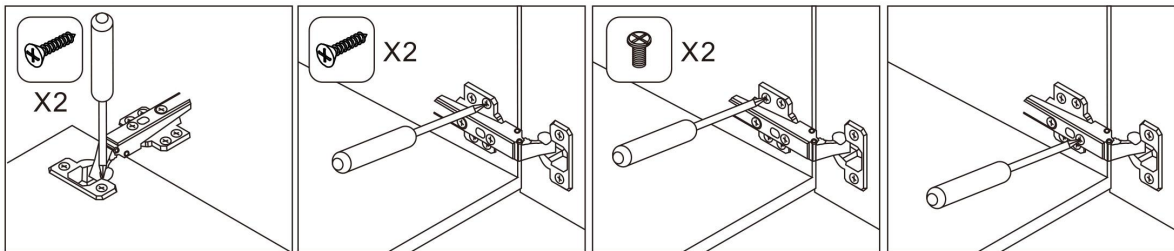

<b>M</b> 4PCS	<b>C</b> 24PCS	<b>J</b> 2PCS	<b>K</b> 4PCS	<b>L</b> 4PCS
	 3.5*14mm		 4*18mm	

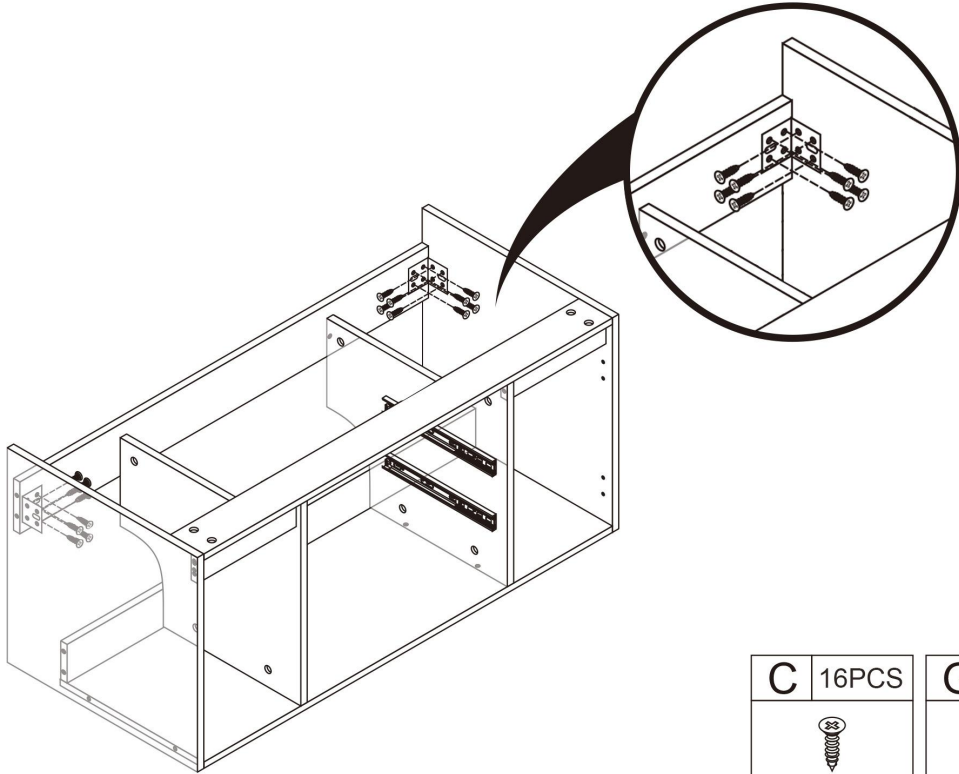




16




<b>C</b>	16PCS	<b>G</b>	2PCS
			
3.5*14mm			


17

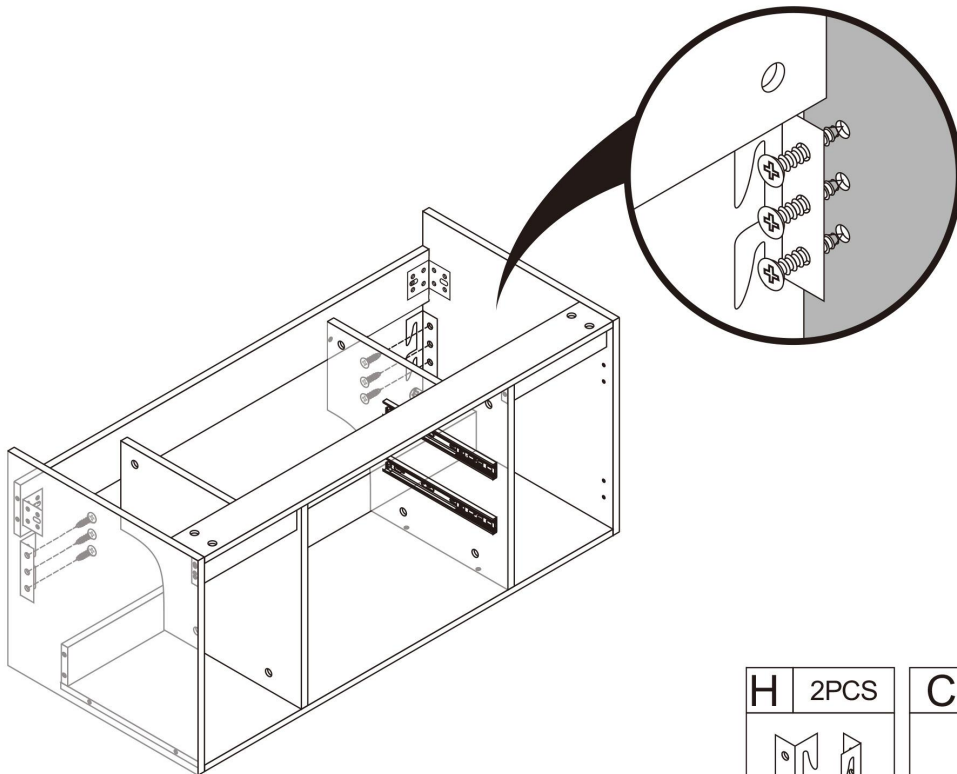


<b>H</b>	2PCS	<b>C</b>	6PCS
			
		3.5*14mm	

18

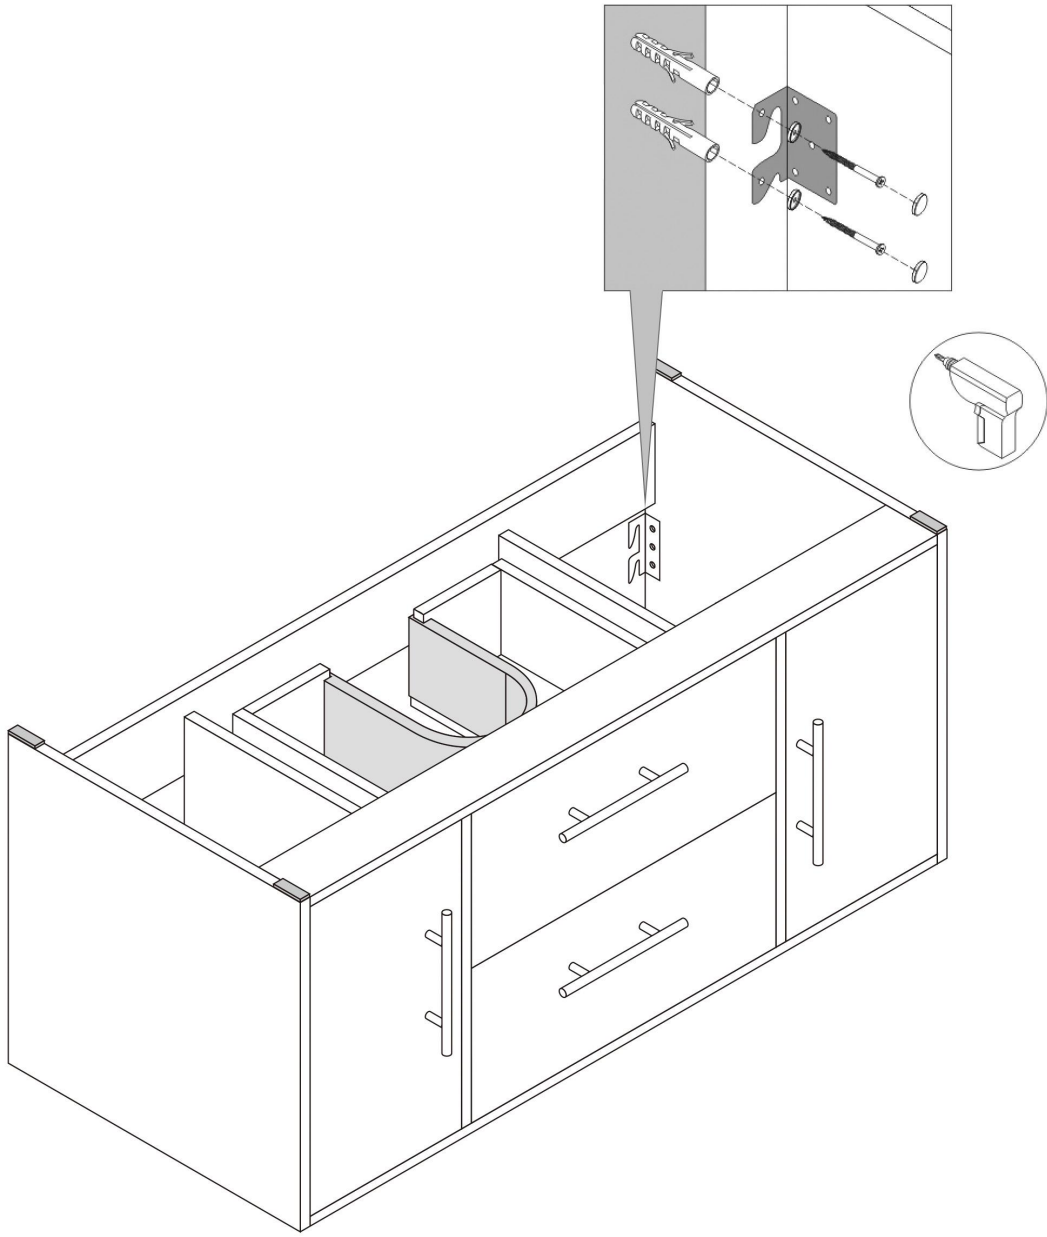

	4PCS
	
6*60mm	

19

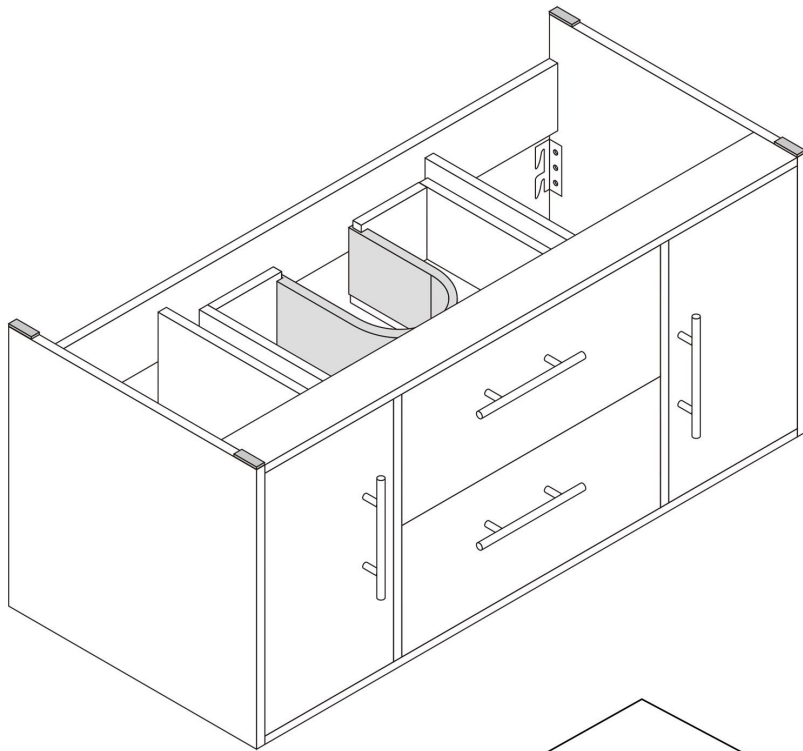

**ok!**