
ASSEMBLY INSTRUCTIONS SS16437

10'X12' freestanding gazebo

Thanks for choosing our product. Please kindly check parts listed below and read this manual carefully, then assemble them step by step. Please feel free to contact us for any questions.

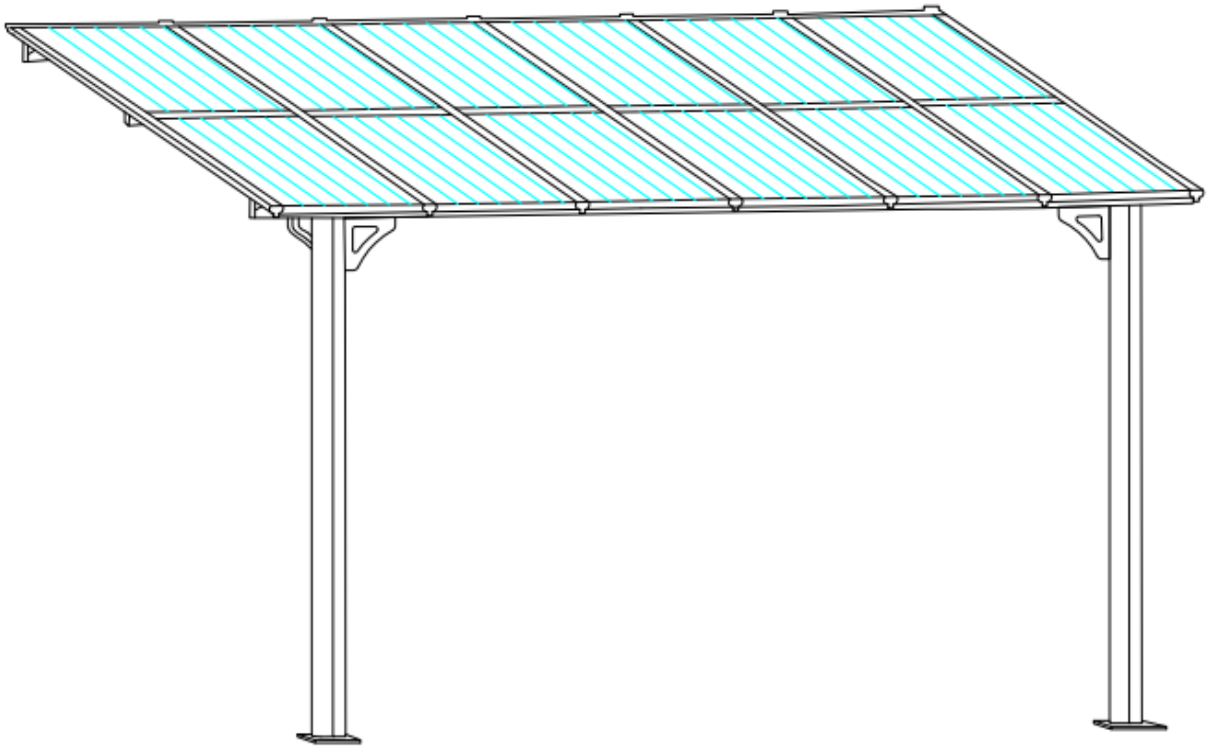


Attention

1. We care about every customer's using experience, please feel free to chat us if has anything missing or damaged or any advice, efficient solution would be offered soon.
2. Recommend 3-4 persons to assemble together.
3. Please use ladder when you install the top.
4. Please keep your children away when you assembly. This item contatins small parts which can be swallow by chilren.

10X12Parts List BOX A


A x2



F x12




B x2




G x6



B1 x2



N2 x2



C x2



O x1




D5h x2



P x1




D5q x2



Q x14




Tx7

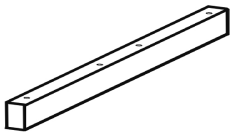


Z5 x12




J x 1




R x14

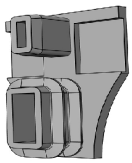

I5 x2



Z1 x7

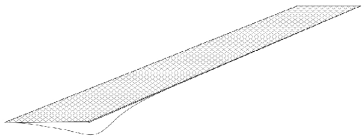

10X12Parts List BOX A

Z x 1



U X4



U1X2



V x 2




W3x4



M8*60

Wx8



M5*13

W1x 86



M6*13

W2 x 2



M6*70

W4 x9




M6*30

Y x8



M6*15

W5 x 32

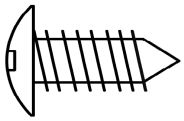


M4 X8

10X12Parts List BOX B

E1 x14





K1 x12

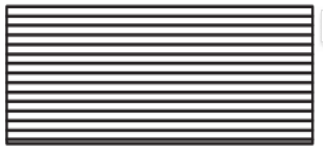



STEP1


Measure the distance between the two legs and fix the legs first for subsequent installation.

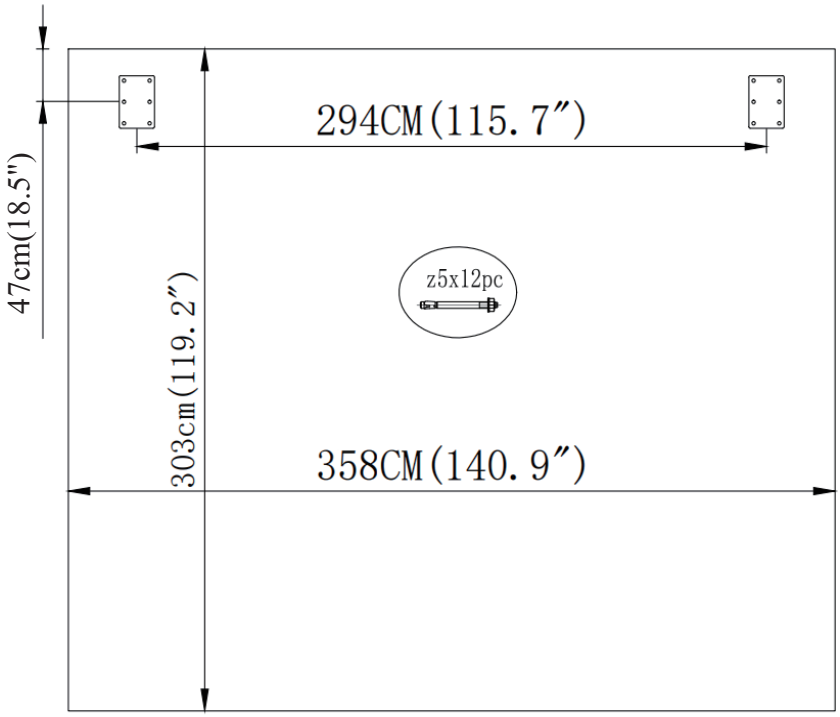

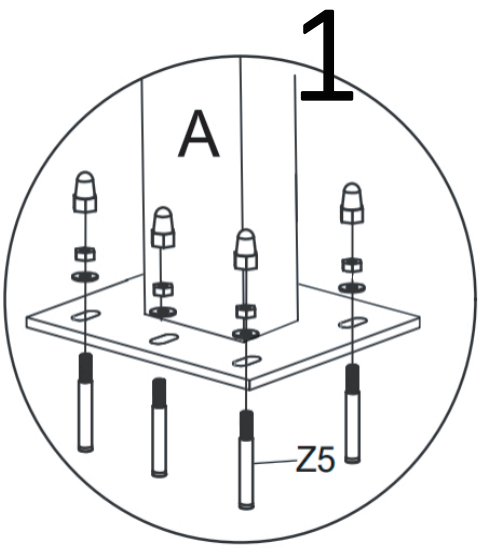


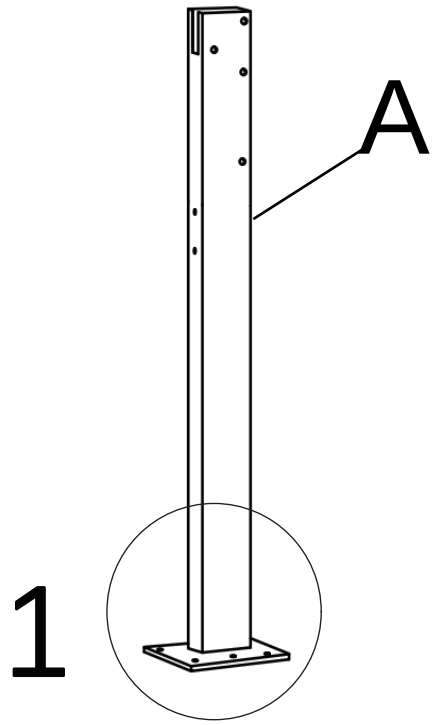

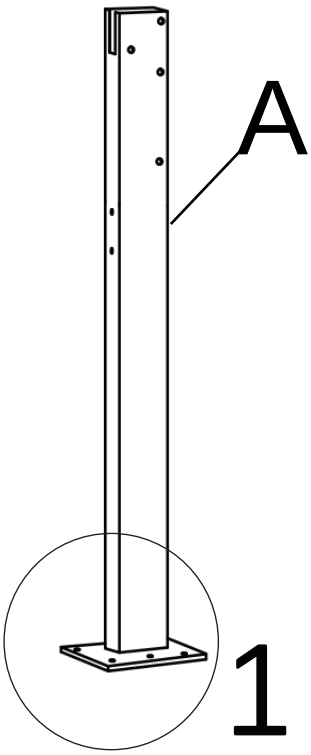

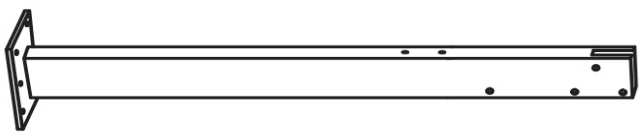


A x2




Z5 x12


STEP2

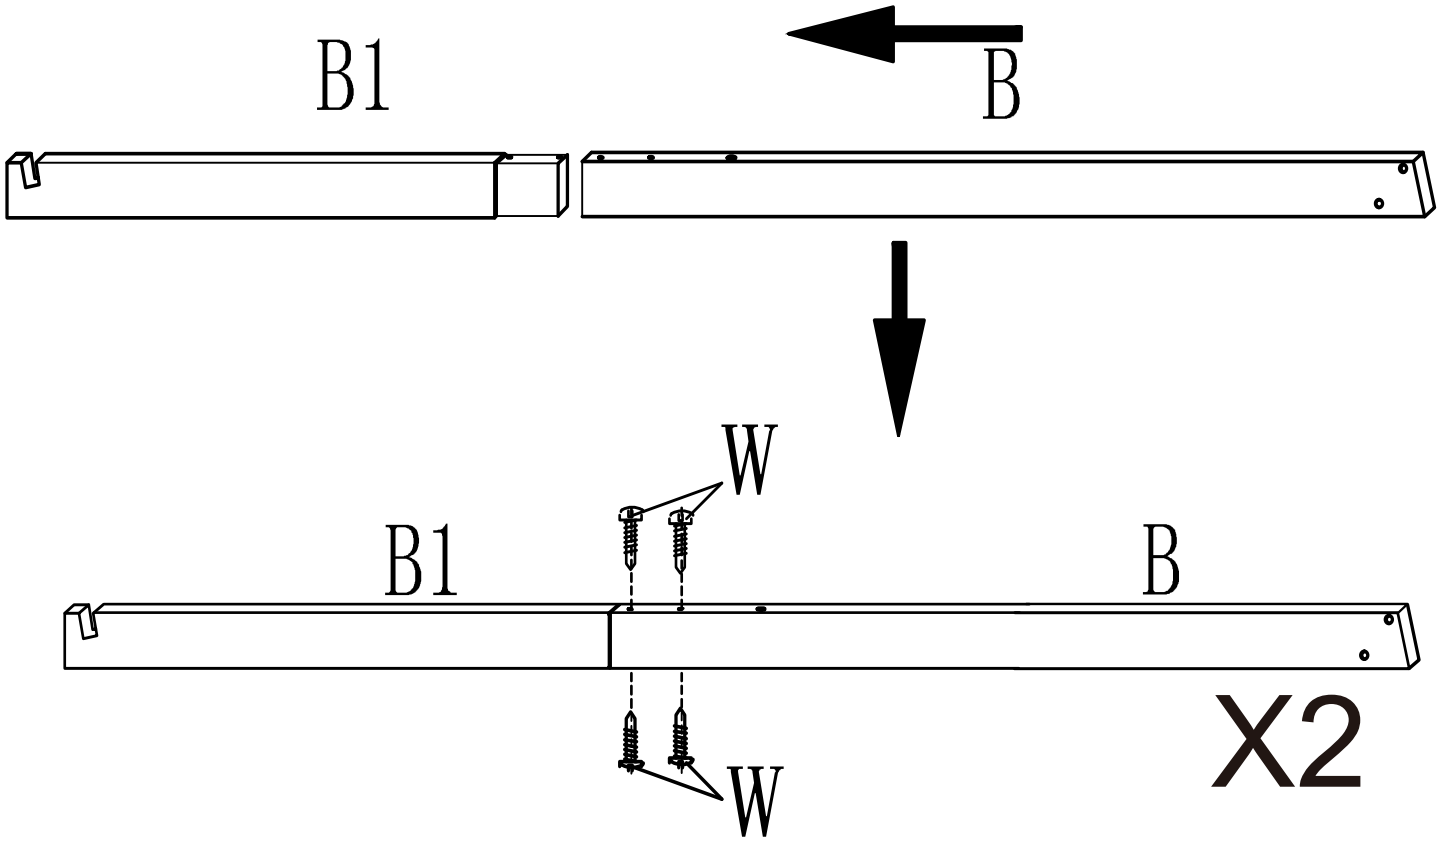

First, insert component "B1" into component "B". Then, align the pre-drilled holes, and finally screw in the securing bolts.

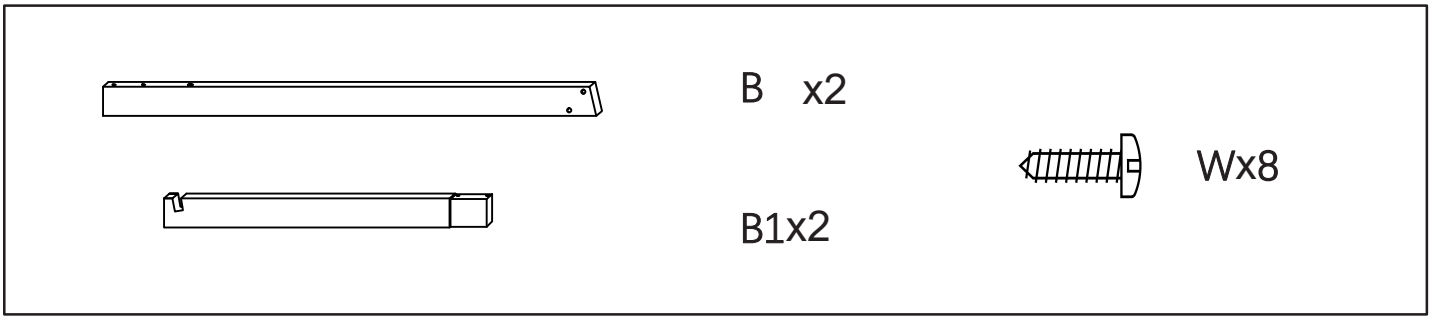

STEP3

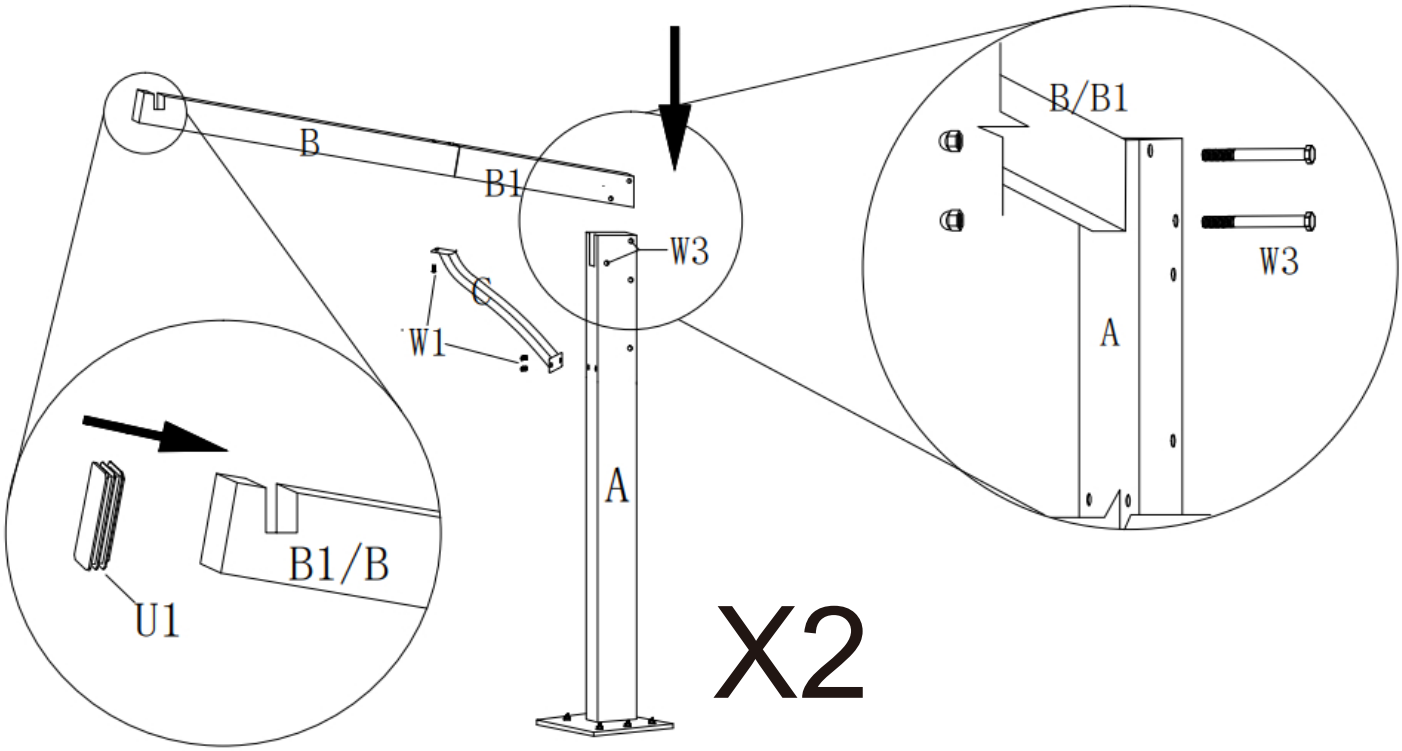



C x2



U 1 x2





W1 X6




W3x4


STEP4

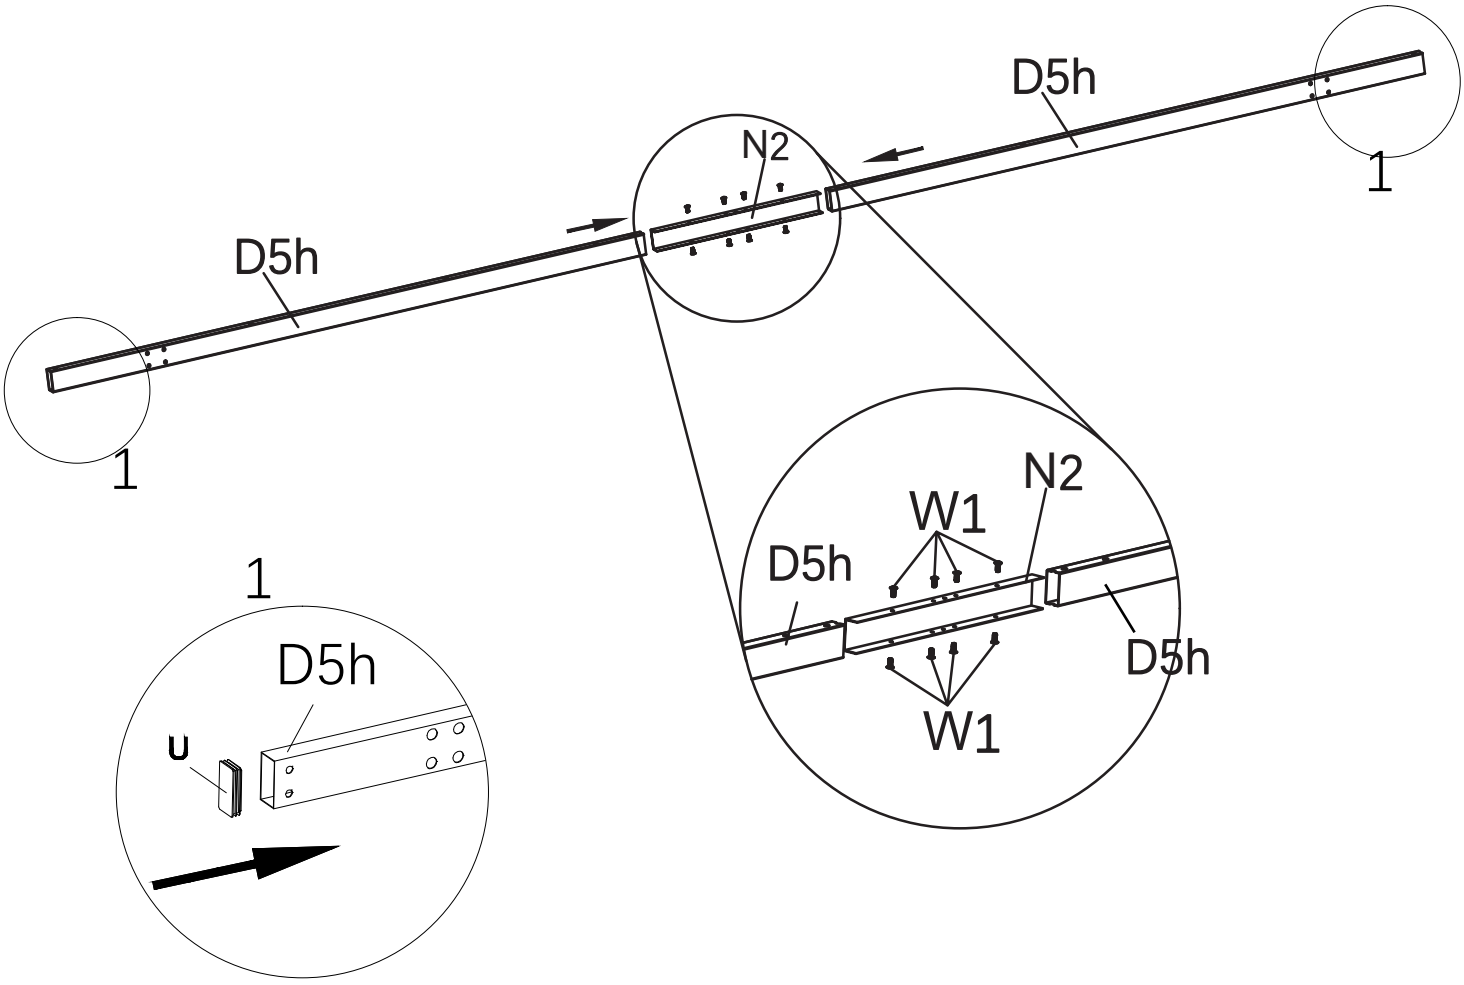

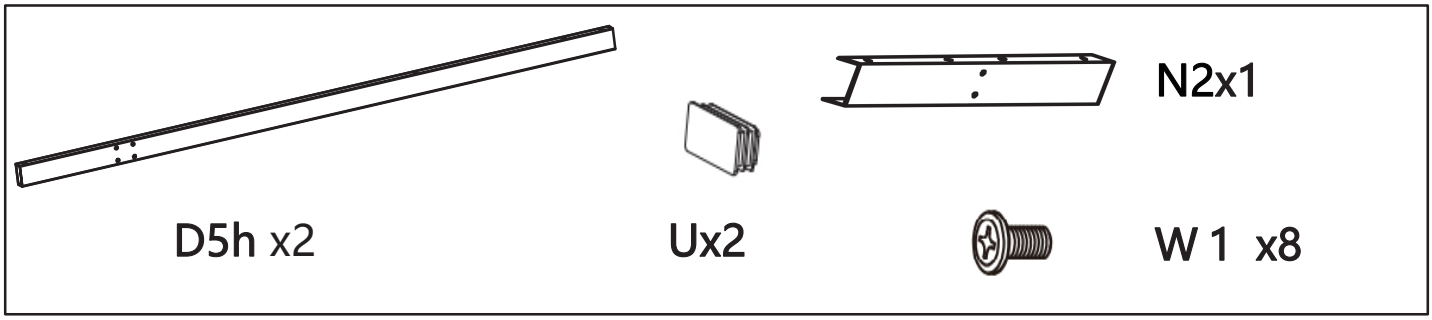


STEP5

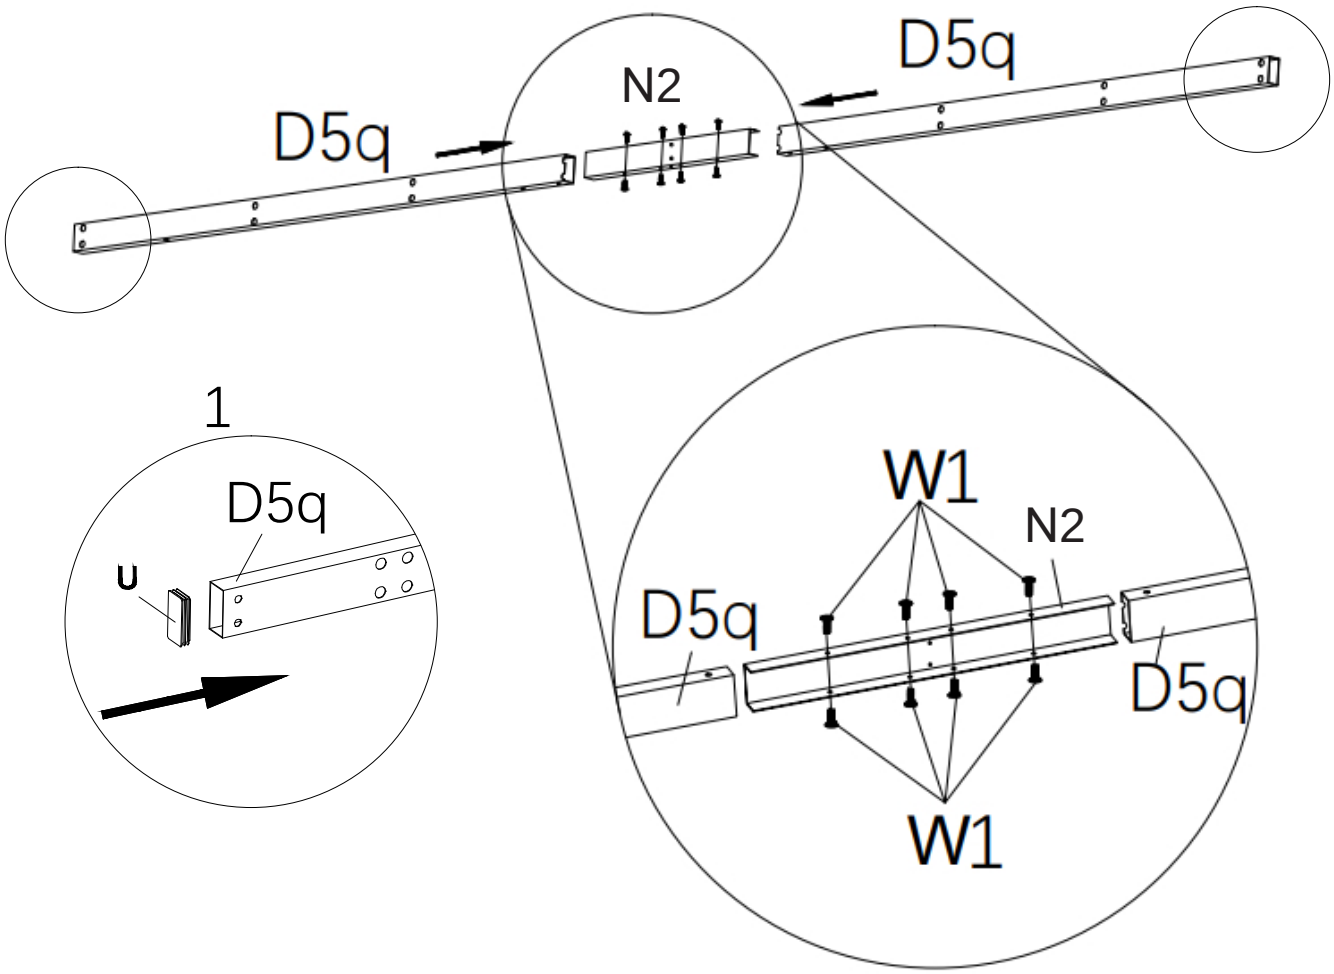

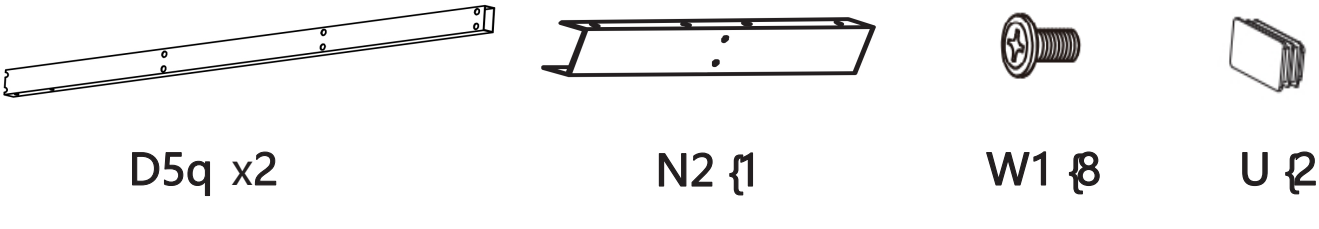


STEP6

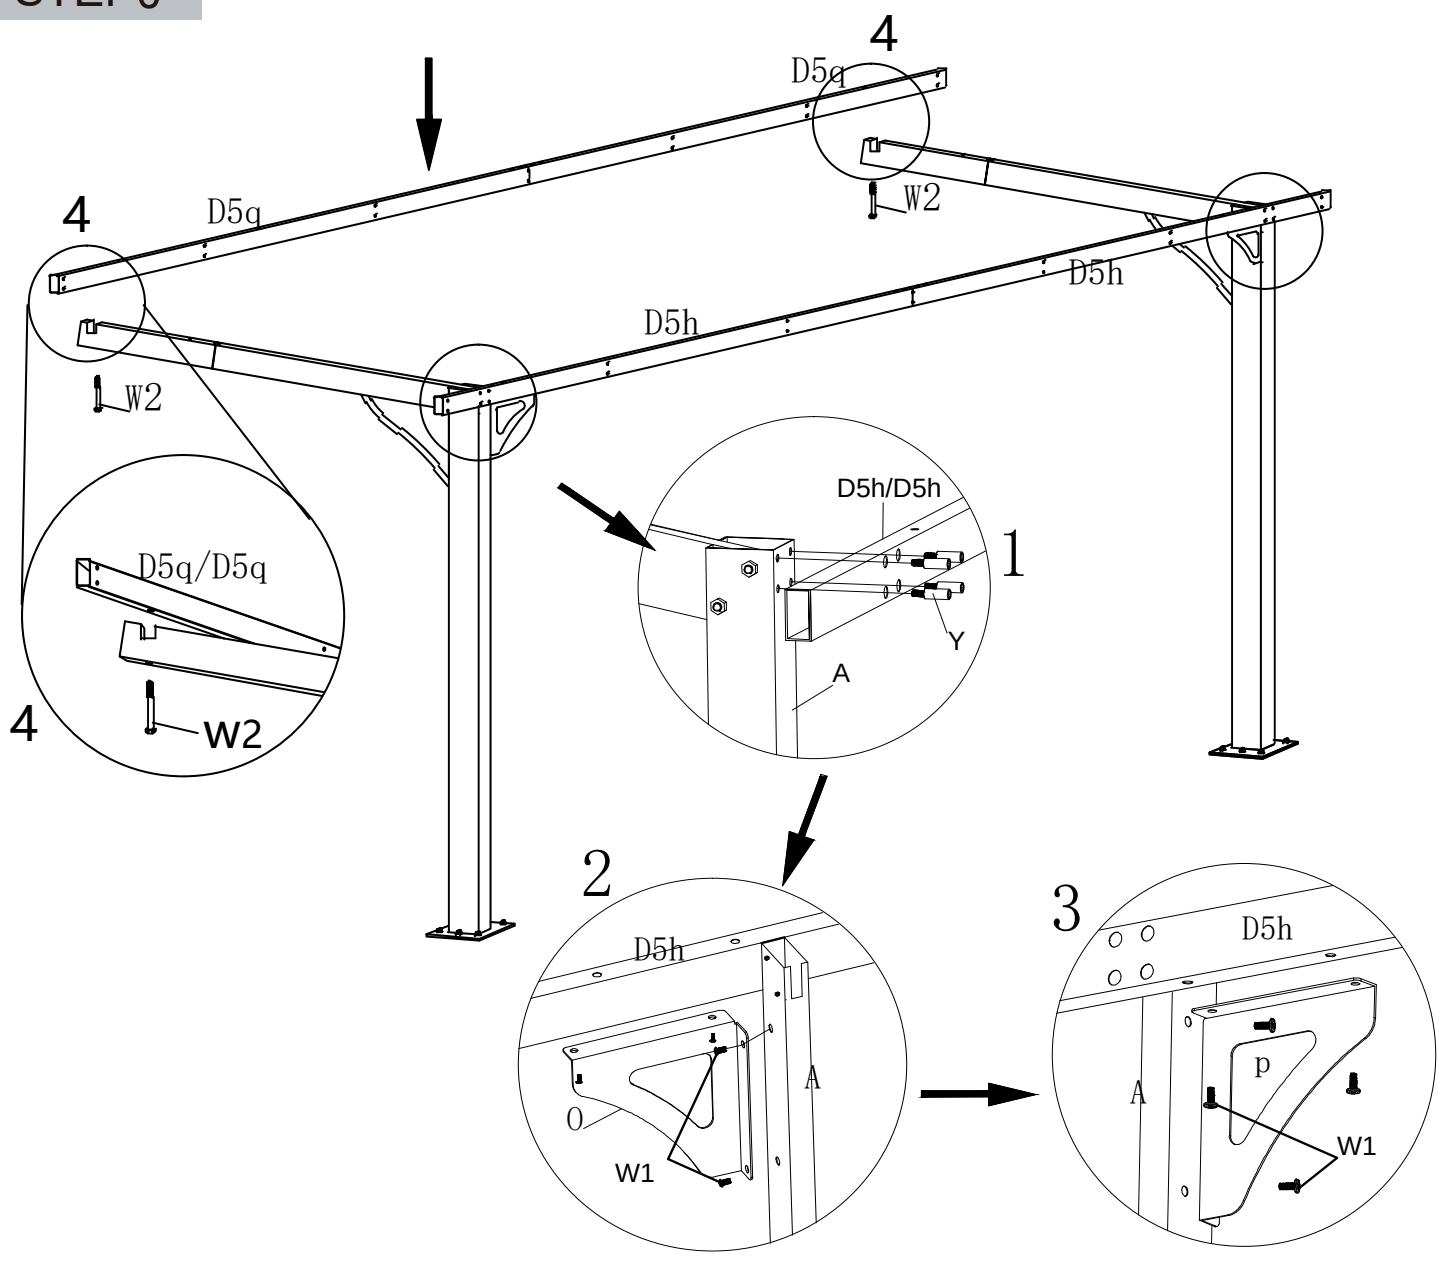


	W2 X2		O X1
			P X I
	W1X8		Y x8

STEP7

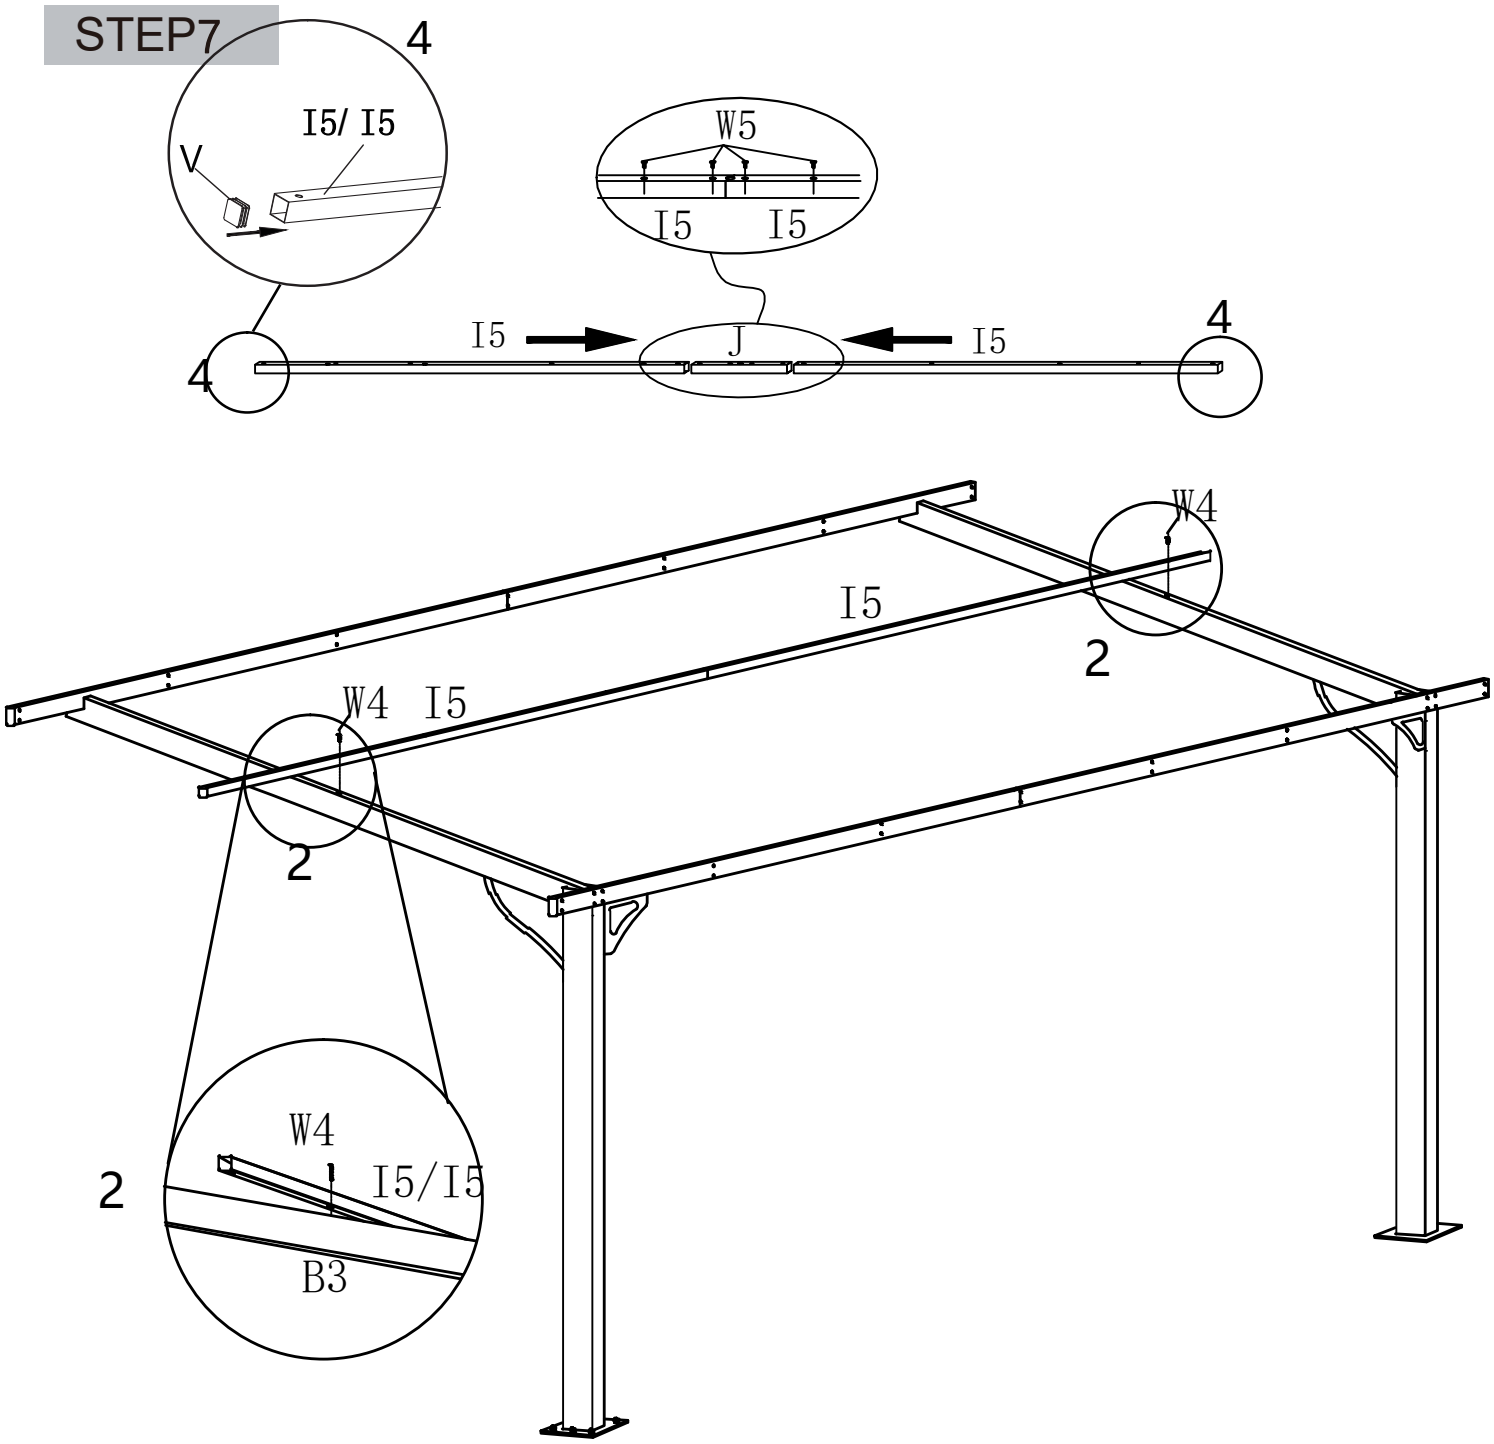

J x1



I5x2


W5x4



Vx



W4 X2


STEP8

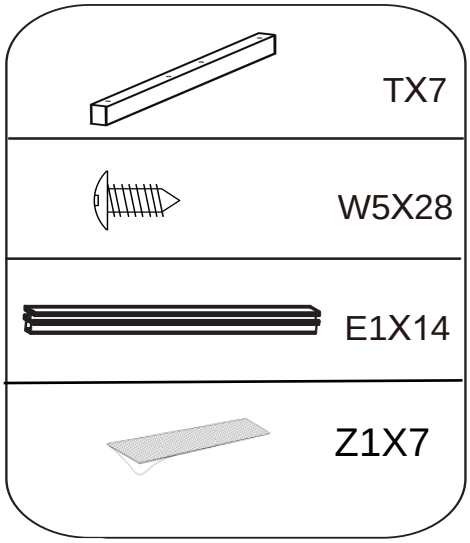

NOTE: (If you're worried about leaks) We have included waterproof adhesive strips. Simply remove the protective film and apply the strip firmly over the center of the seam on top of the beam.

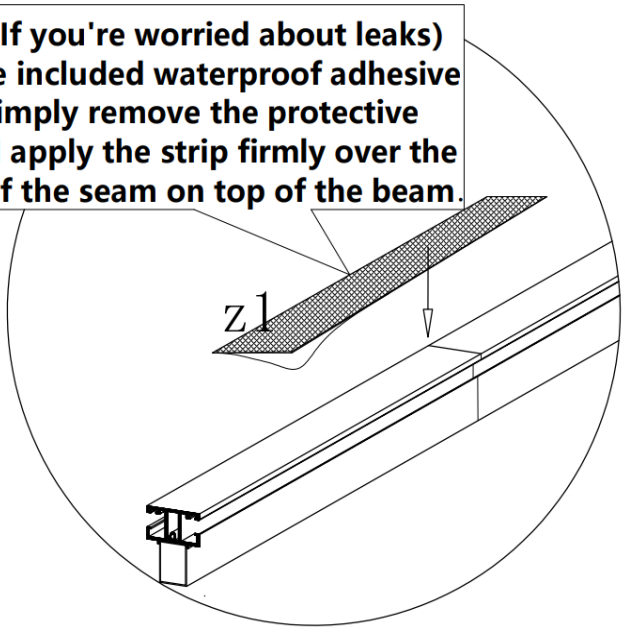


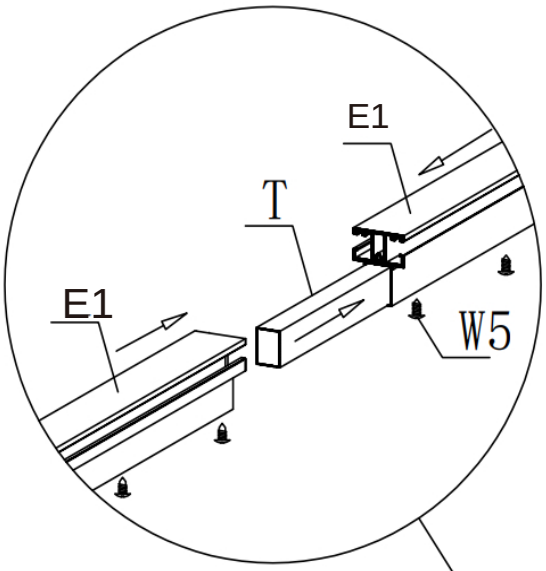


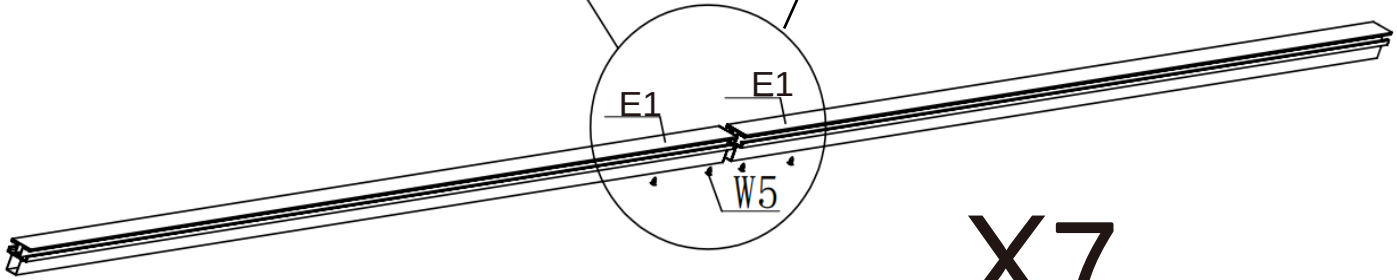

X7

STEP9

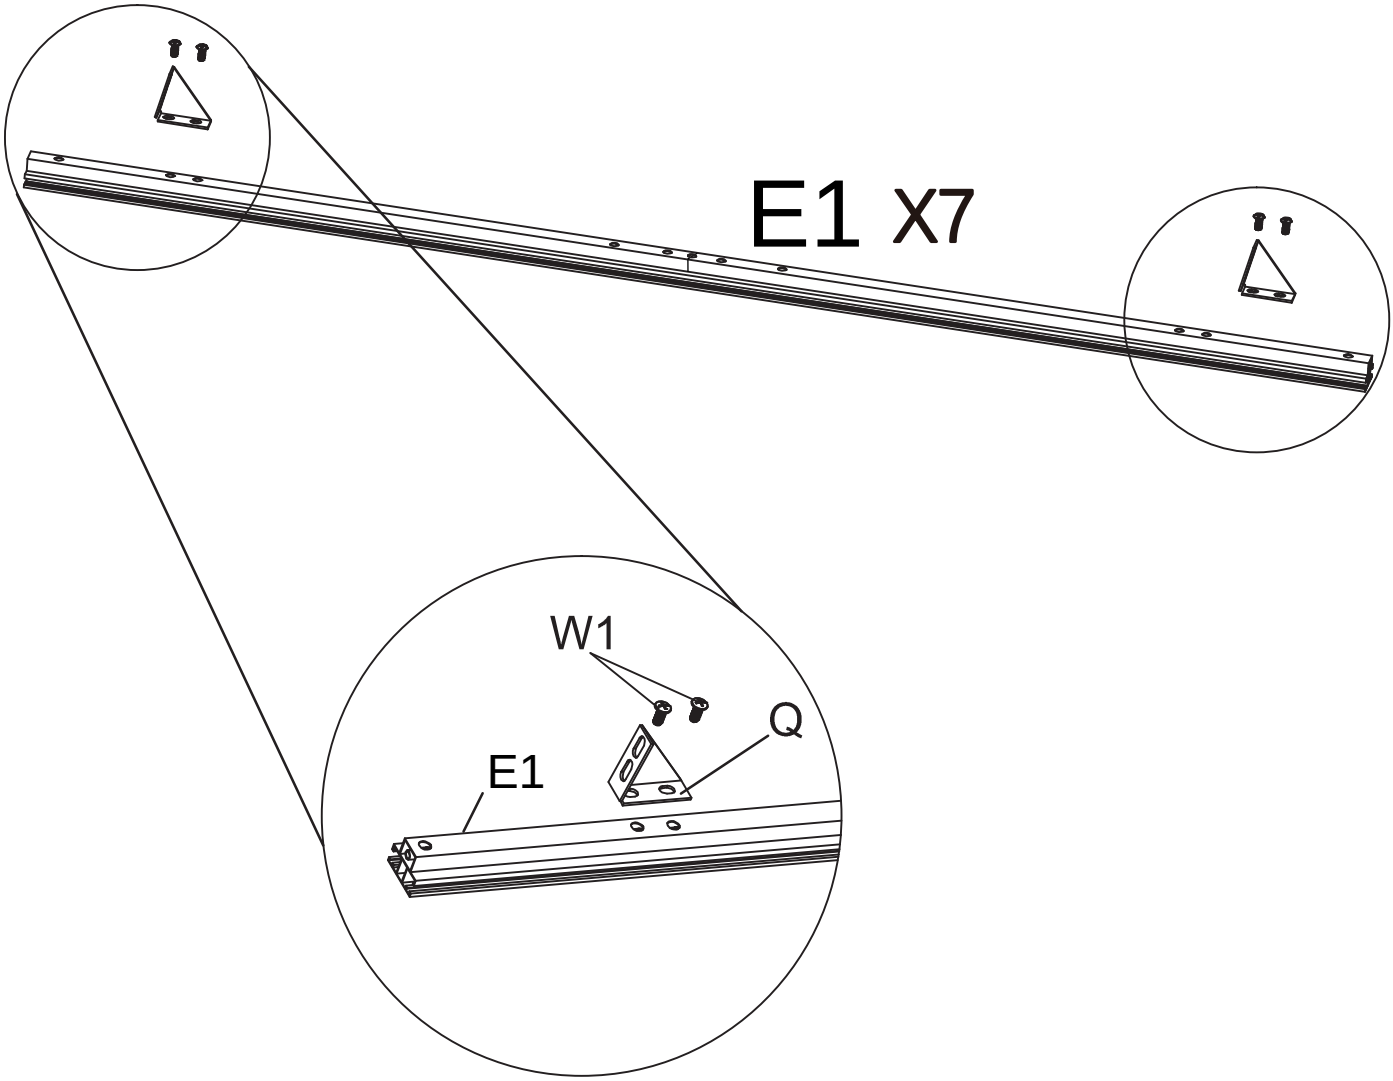




Q x14



W1 x28

STEP10

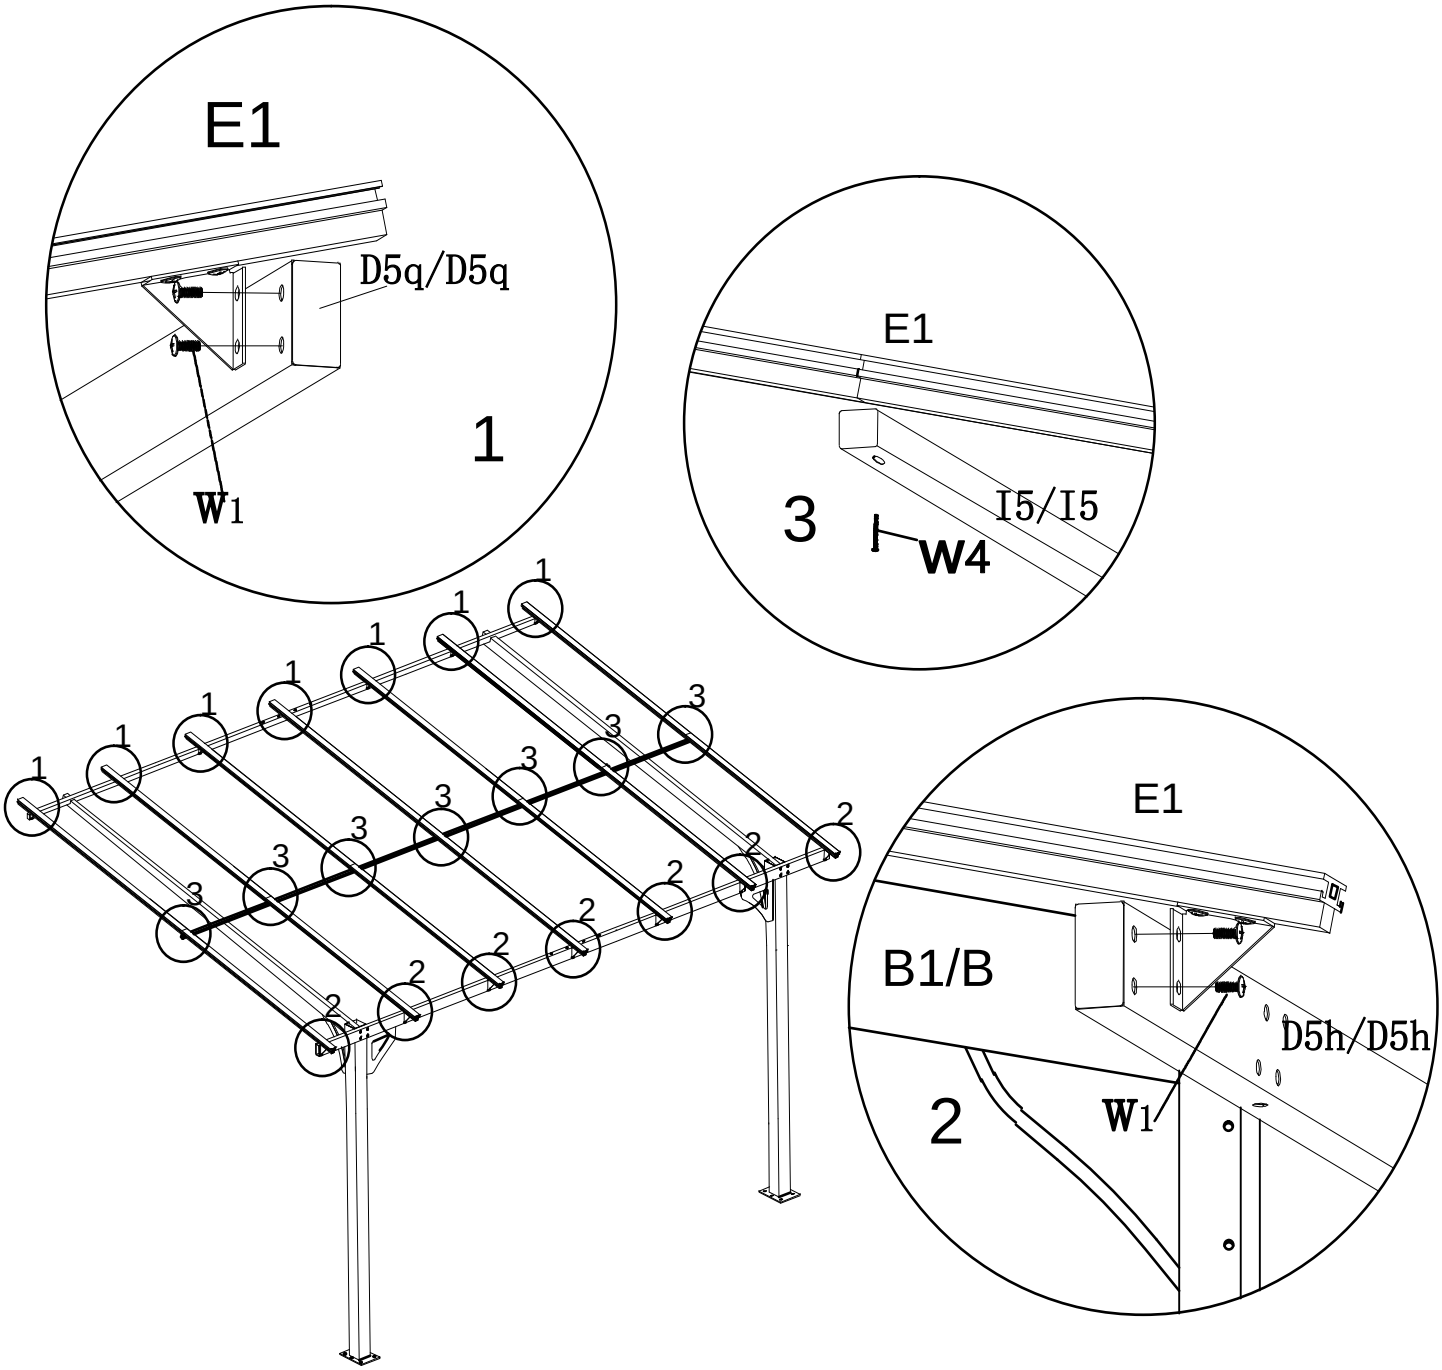




W4 x7




W1 x28


STEP11

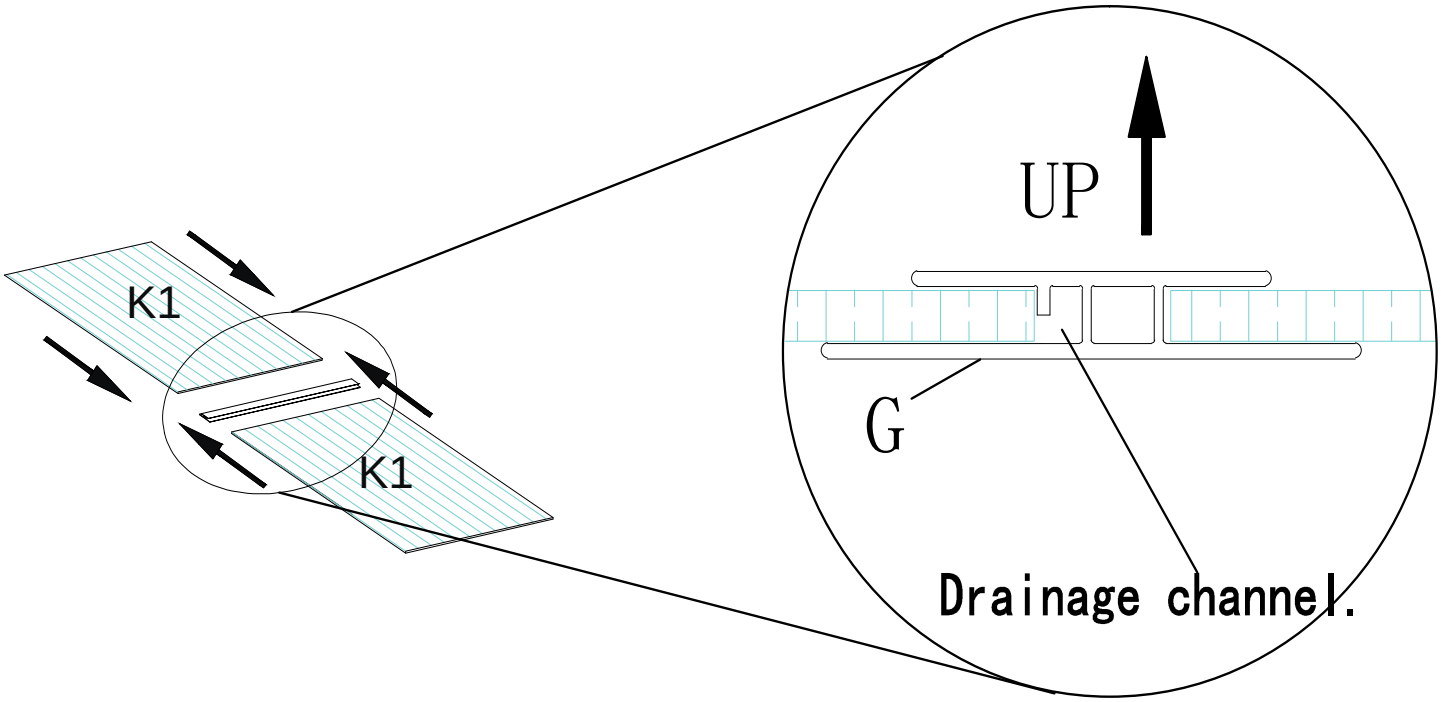


Special note: There is a drainage groove on one side of the letter G. When installing, make sure to orient the side with the drainage groove upwards (the side with the higher canopy) to prevent water leakage.

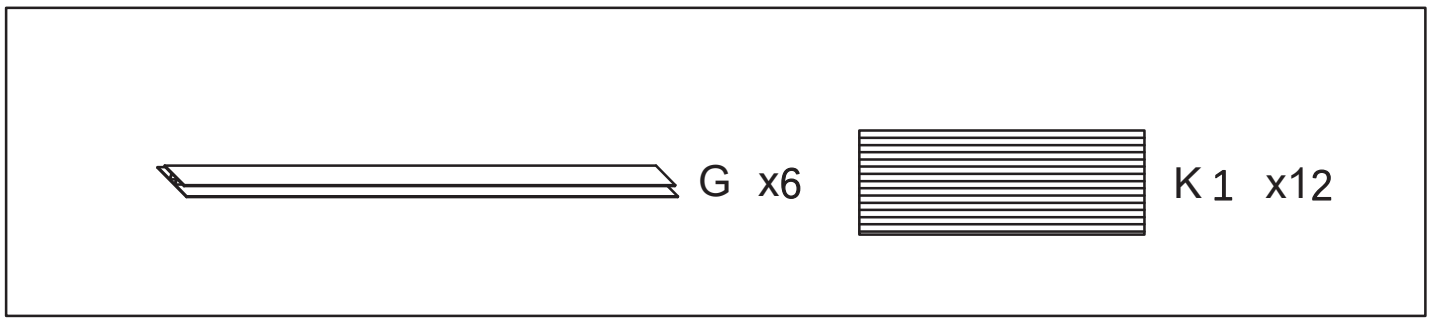


STEP12

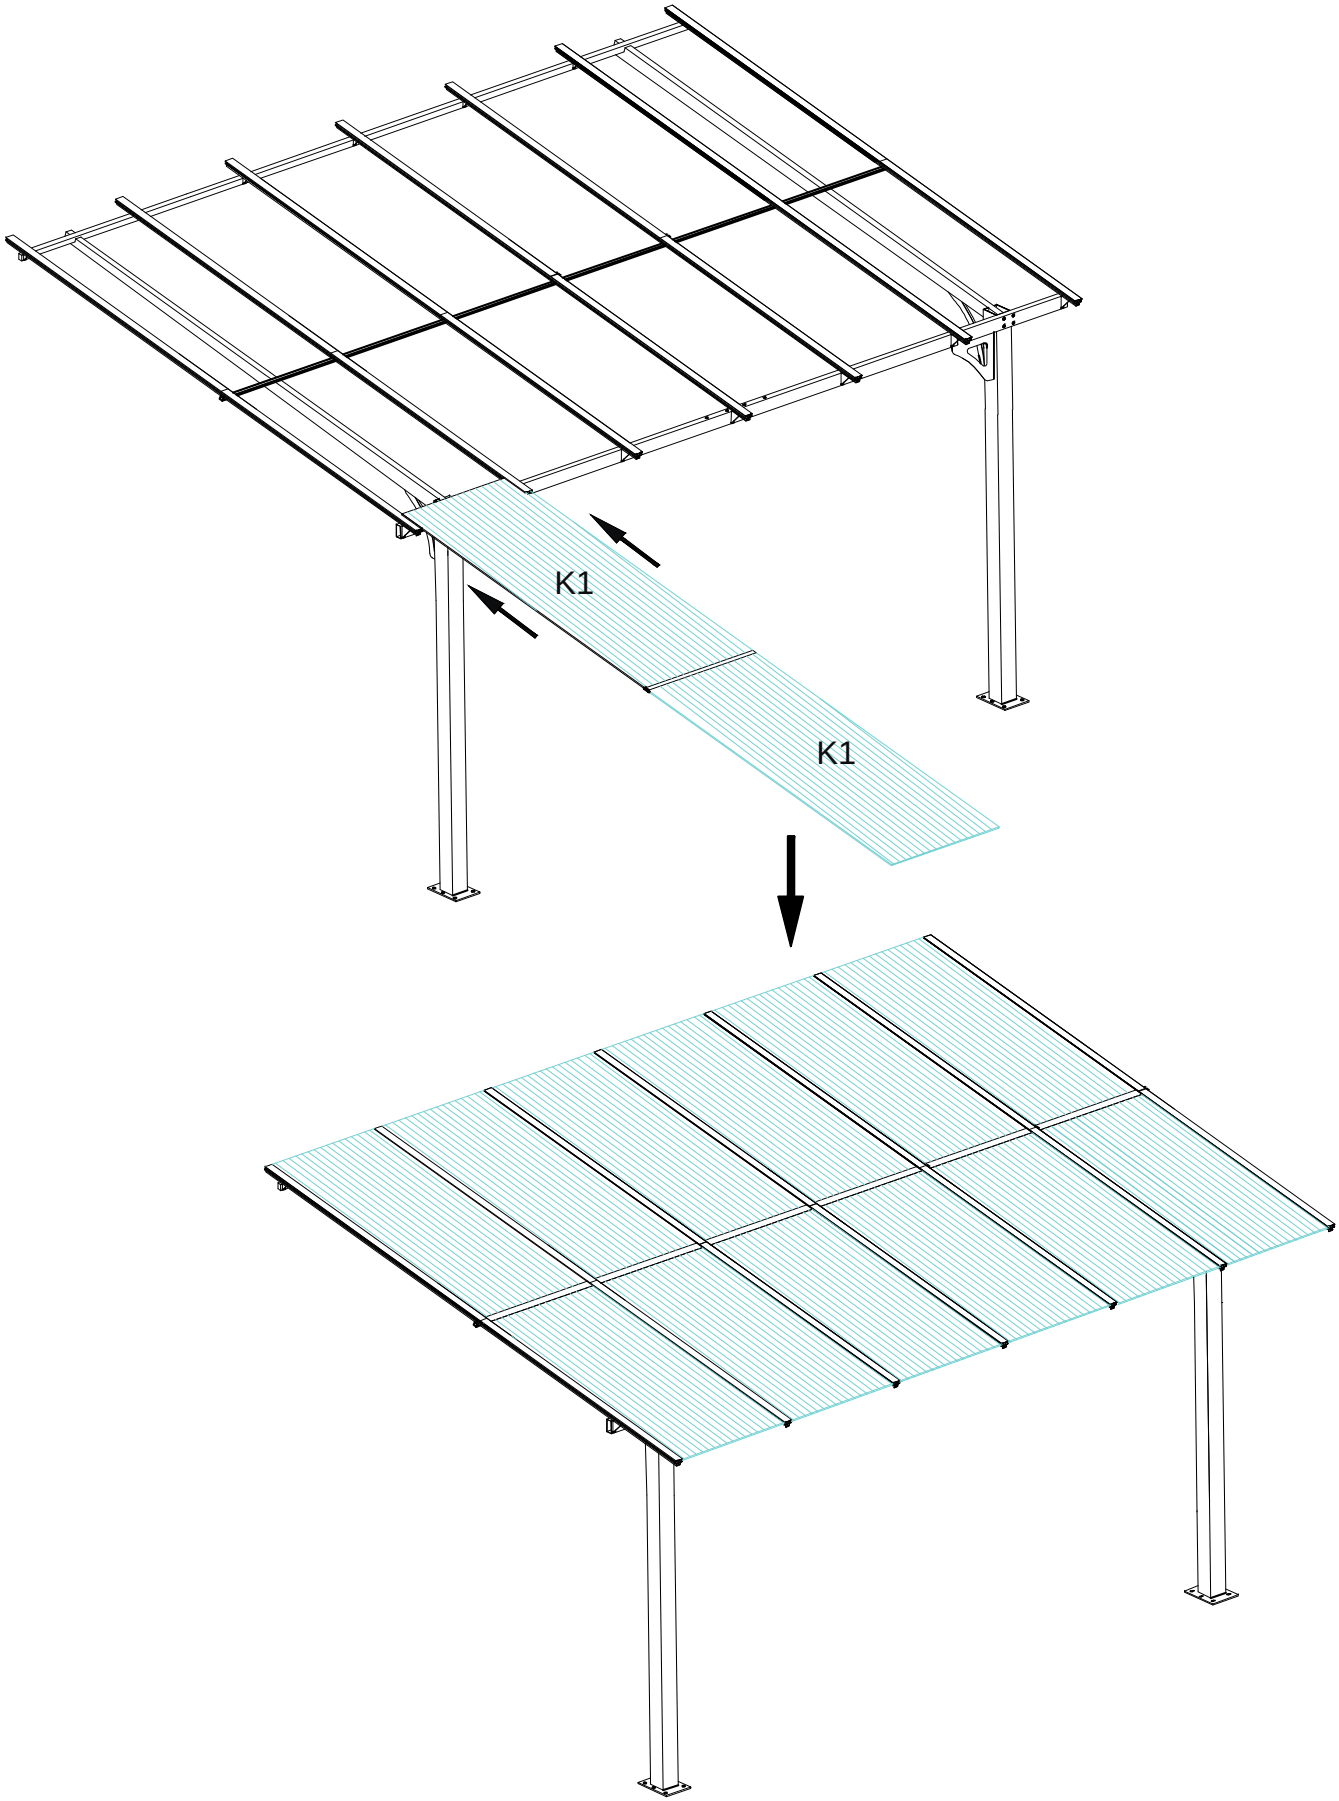


STEP13

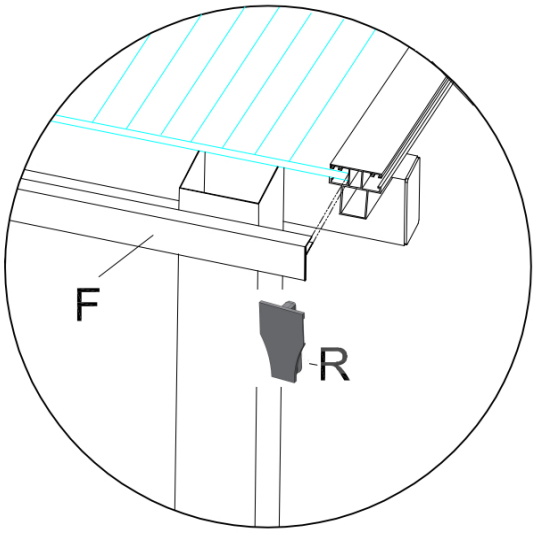

1

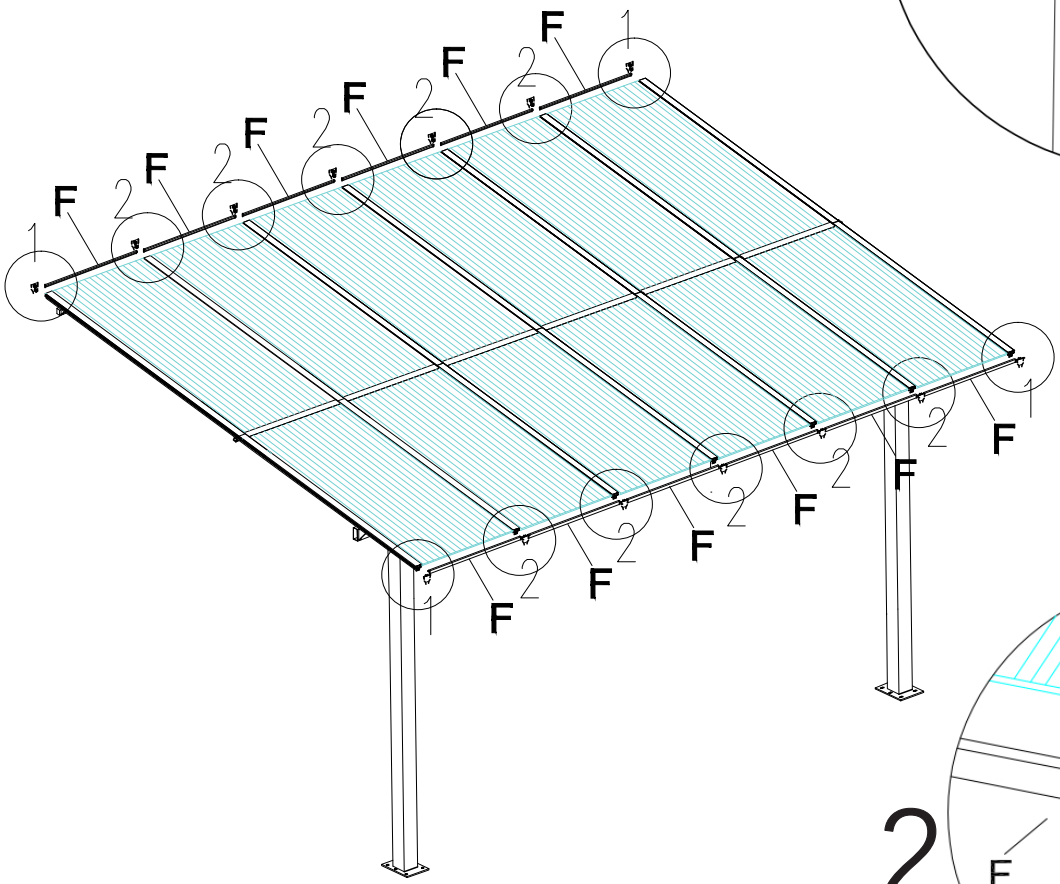


2

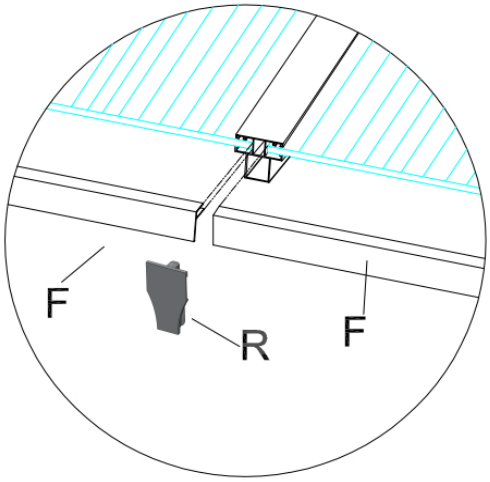




Fx12



Rx14

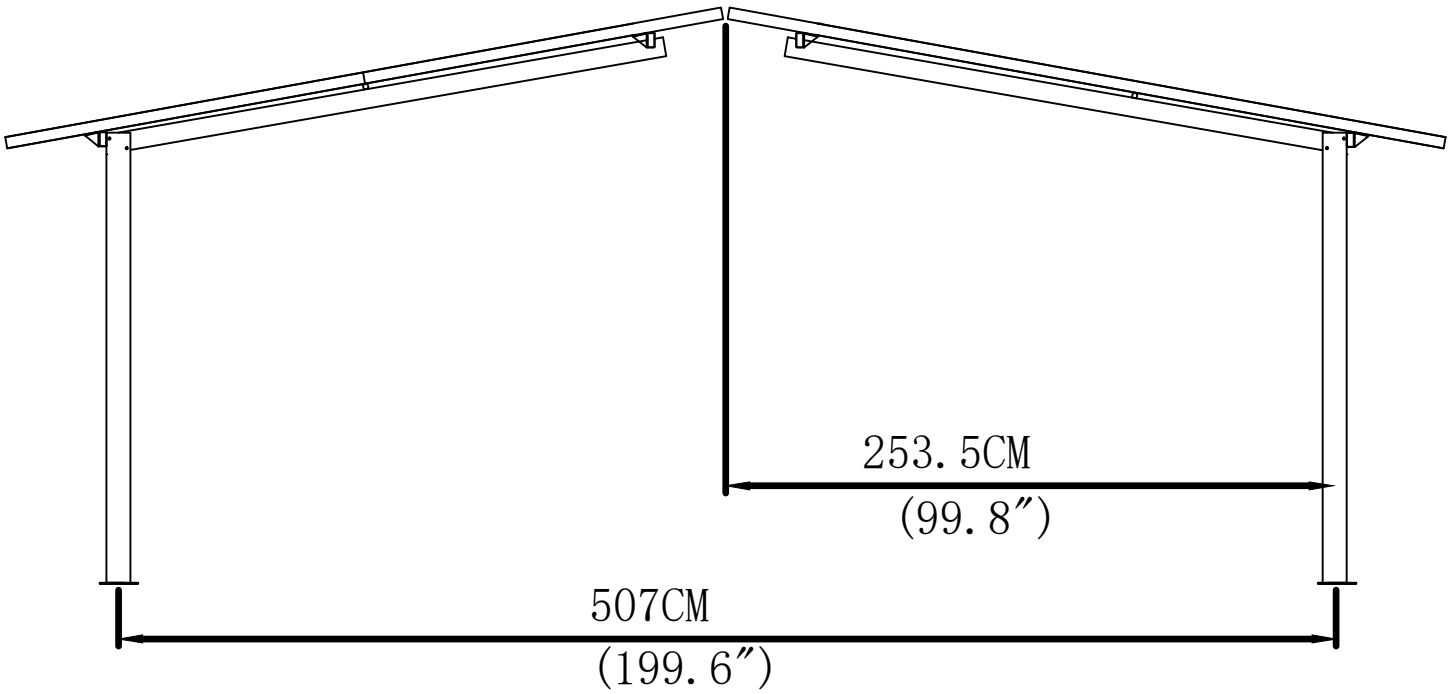

For combining the installation of two sets, please refer to these dimensions.